



User Manual

RSDM-906X series

Stock number: 1919720 RSDM-9061

1919721 RSDM-9060

EN



rspro.com



Table of Contents

SAFETY INSTRUCTIONS.....	6
GETTING STARTED	11
Characteristics	12
Front Panel Overview	14
Rear Panel Overview	20
Status Bar	24
Set Up	27
BASIC MEASUREMENT.....	29
Basic Measurement Overview	30
AC/DC Voltage Measurement	34
AC/DC Current Measurement	42
2W/4W Resistance Measurement.....	47
Continuity Test.....	51
Diode Measurement	54
Frequency/Period Measurement	57
Capacitance Measurement	63
Temperature Measurement	67
DUAL MEASUREMENT	78
Dual Measurement	79
ADVANCED MEASUREMENT.....	90
Advanced Measurement Overview	91
Relative Value Measurement	92
Hold Measurement.....	94
Trigger Setting	98
Filter Setting.....	104
Math Measurement	109



DIGITAL I/O	137
Digital I/O Overview	138
Application: Compare Mode.....	142
Application: 4094 / User Mode	150
Application: External Trigger	158
SYSTEM & FIRMWARE	160
View System Info	161
Firmware Update	162
MENU SETTING	165
Configure System.....	166
Configure Display	189
SCREENHOT & LOG.....	211
Capture.....	212
Save Reading	215
DISPLAY SETTING	219
Digit	220
Display.....	222
REMOTE CONTROL	245
Configure Interface	246
Command Syntax	282
Command Set	286
Status system	370
APPENDIX.....	375
Fuse Replacement	376
Battery Replacement	380
Factory Default Parameters	382
Specifications	387
RSDM-9061	389
RSDM-9060.....	399

Dimensions	409
Declaration of Conformity.....	410



SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating the RSDM-9060/9061 and when keeping it in storage. Read the following before any operation to insure your safety and to keep the RSDM-9060/9061 in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



Warning: Identifies conditions or practices that could result in injury or loss of life.



Caution: Identifies conditions or practices that could result in damage to the RSDM-9060/9061 or to other objects or property.



DANGER High Voltage



Attention: Refer to the Manual



Protective Conductor Terminal



Earth (Ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



- Make sure that the voltage input level does not exceed DC1000V/AC750V.
- Make sure the current input level does not exceed 10A.
- Do not place heavy objects on the instrument.
- Avoid severe impact or rough handling that may damage the instrument.
- Do not discharge static electricity to the instrument.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block or obstruct the cooling fan vent opening.
- Do not perform measurement at the source of a low-voltage installation or at building installations (Note below).
- Do not disassemble the instrument unless you are qualified as service personnel.
- Make sure that the Sense LO terminal to Input LO is limited to 2Vpk, the Sense HI to Sense LO terminals are limited to 200Vpk and the Input LO to earth is limited to 500Vpk.

(Note) EN 61010-1:2010 specifies the measurement categories and their requirements as follows. The RSDM-9060/9061 falls under category II 300V.

Measurement category IV is for measurement performed at the source of a low-voltage installation.

Measurement category III is for measurement performed in a building installation.

Measurement category II is for measurement performed on circuits directly connected to a low voltage installation.



Power Supply	<ul style="list-style-type: none">• AC Input voltage: 100/120/220/240 V AC ±10%, 50Hz / 60Hz / 400Hz ±10%• The power supply voltage should not fluctuate more than 10%.• Connect the protective grounding conductor of the AC power cord to an earth ground to prevent electric shock.
 WARNING (RSDM-9061 only)	<ul style="list-style-type: none">• Due to the fact that the Front/Rear Input Switch on the front panel is not proposed as an active multiplexer, do Not change the input switch when signals are present on either rear or front set of terminals. Instrument damage and risk of electric shock may occur if switching the input switch when high voltage or current is present.
Fuse	<ul style="list-style-type: none">• Fuse type: T0.25A 100/120 VAC T0.125A 220/240 VAC
 WARNING	<ul style="list-style-type: none">• Make sure the correct type of fuse is installed before power up.• To avoid risk of fire, replace the fuse only with the specified type and rating.• Disconnect the power cord before fuse replacement.• Make sure the cause of a fuse blowout is fixed before fuse replacement.
Cleaning the function generator	<ul style="list-style-type: none">• Disconnect the power cord before cleaning.• Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid into the RSDM-9060/9061..• Do not use chemicals containing harsh products such as benzene, toluene, xylene, and acetone.

Operation Environment	<ul style="list-style-type: none">• Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)• Humidity: < 30°C: < 80%RH (non-condensing) 30°C~40°C: <70%RH (non-condensing) >40°C: <50%RH (non-condensing)• Altitude: <2000m <p>(Note) EN 61010-1:2010 specifies pollution degrees and their requirements as follows. The RSDM-9060/9061 falls under degree 2.</p> <p>Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.</p> <p>Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.</p> <p>Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.</p> <p>Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.</p>
Storage environment	<p>Location: Indoor</p> <p>Relative Humidity: -40°C to 70°C</p> <p>Temperature: <90%RH(non-condensing)</p>
Disposal	<p>Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.</p> 



Power cord for the United Kingdom

When using the function generator in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons



WARNING: THIS APPLIANCE MUST BE EARTHD

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow:	Earth
Blue:	Neutral
Brown:	Live (Phase)



As the colours of the wires in main leads may not correspond with the coloured marking identified in your plug/appliance, proceed as follows:

The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with either the letter E, the earth symbol \oplus or coloured Green/Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.


This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, a cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any exposed wiring from a cable, plug or connection that is engaged in a live socket is extremely hazardous. If a cable or plug is deemed hazardous, turn off the mains power and remove the cable, any fuses and fuse assemblies. All hazardous wiring must be immediately destroyed and replaced in accordance to the above standard.

GETTING STARTED

This chapter describes the RSDM-9060/9061 in a nutshell, including an Overview of its main features and front / rear panel introduction. After going through the Overview, follow the Power-up sequence to properly setup the RSDM-9060/9061.

Please note the information in this manual was correct at the time of printing. However as RS PRO continues to improve its products, changes can occur at any time without notice. Please see the RS PRO website for the latest information and content.

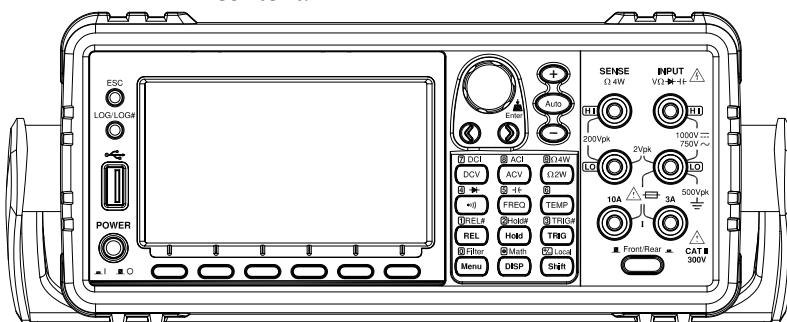

Characteristics	12
Accessories	13
Front Panel Overview	14
Measurement Keys (basic)	17
Measurement Keys (advanced)	18
Rear Panel Overview	20
Status Bar	24
Set Up	27
Horizontal/Tilt/Vertical Applications	27
Power Up	28



Characteristics

The RSDM-9060/9061 is a portable, dual-display digital multimeter suitable for a wide range of applications, such as production testing, research, and field verification.

Performance	<ul style="list-style-type: none">• The highest DCV accuracy: RSDM-9061: 35ppm RSDM-9060: 75ppm• The highest current: RSDM-9061: 10A RSDM-9060: 3A• The highest voltage: 1000V• The highest ACV frequency response: 300 kHz• The fastest sampling rate: 1k Readings/sec (RSDM-9060) 10k Readings/sec (RSDM-9061)• Internal memory: 10k read memory (RSDM-9060) 100k read memory (RSDM-9061)• Data Logging to USB
Features	<ul style="list-style-type: none">• 6 $\frac{1}{2}$ digits• Multi functions: ACV, DCV, ACI, DCI, 2W/4W R, Hz, Temp, Continuity, Diode, Period, Capacitance test, REL, dBm, Hold, MX+B, 1/X, REF%, dB, Compare and Statistics.• Manual or Auto ranging• AC true RMS• Built-in DC Ratio function• Standard SCPI command set in emulation compatible with Agilent 34401A• Up to 3 temperature measurements: RTD, Thermistor and Thermocouples (Cold-Junction Compensation)


	<ul style="list-style-type: none"> • Graph Display: BarMeter, TrendChart, Histogram
Interface	<ul style="list-style-type: none"> • USB device/RS232/GPIB(optional)/LAN for remote control • 9-pin Digital I/O port • USB device port supports USBCDC and USBTMC • USB Host
Software	<ul style="list-style-type: none"> • Excel Addins • DMM-VIEWER2

Accessories


Standard Accessories	Part number	Description
	CD-ROM	UM, Software, Driver
	82DM-90610M01	Safety Instruction Sheet
	GTL-217	Test leads
	GTL-246	USB Cable, USB 2.0, A-B type, 1200mm
Optional Accessories	Part number	Description
	11DM-90610101	RSDM-9060/9061 GPIB Card
	GTL-234	RS-232 Cable , 2000mm
	GTL-205A	Temperature Probe Adapter with Thermal Coupling (K-type)
	GTL-308	4W+Shield Test leads, 1.5M
	RSDM-TL1	<ul style="list-style-type: none"> • Test lead probes with CAT IV 600V sheath x 2 • Fine tip probes x 2 • SMT Grabbers x 2 • Mini Grabber x 1



Front Panel Overview

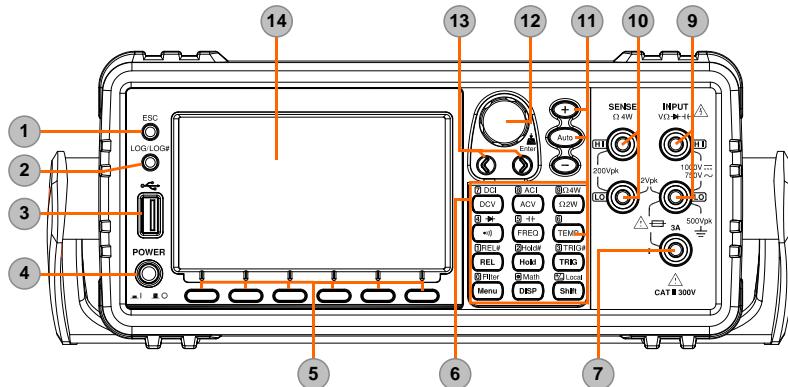

RSDM-9060

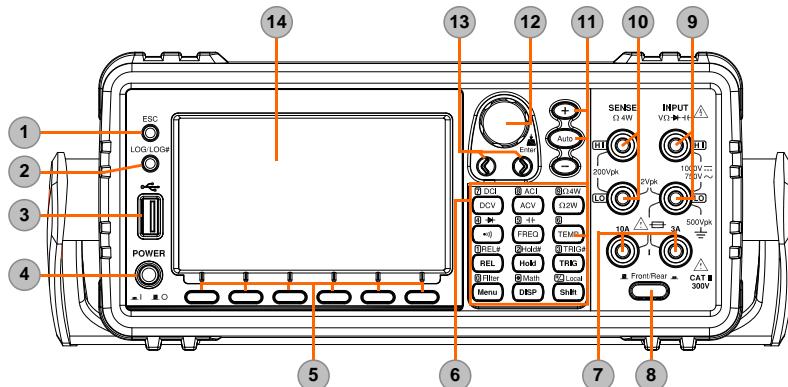

RSDM-9061

Item	Description
1	ESC (Escape) Key
2	Print screen / Data log Key
3	USB Host Port
4	Power Switch

- 5 Function keys (F1 through F6, functions vary per modes)
- 6 Measurement Keys
- 7 AC/DC Current Input Terminals (10 A terminal available on RSDM-9061 only)
- 8 Front/Rear Input Switch (RSDM-9061 only)
- 9 HI and LO Input Terminals
- 10 HI and LO Input Terminals
- 11 Range Selection Keys
- 12 Knob key
- 13 Arrow Keys
- 14 Main Display

ESC (Escape) Key  Single press to escape from current page. Presses and holds the ESC key for 2 seconds to toggle between full display and simple display, which conceals the status bar, math display as well as additional info for lightweight use.

 
Screenshot / Data Log Saving Key  Captures the current screenshot or saves the data log for reading.

USB Host Port  Connects with USB flash drive for data storage.

Power Switch  Turns On  or Off 

Main Display The 4.3" TFT LCD shows measurement results and parameters.




Measurement Keys	There are 4 rows in total of both basic and advanced measurement keys deployed on the front panel.	
Function Keys	The 6 keys have varied functions per different settings.	
Knob Key		Scrolls the knob to select parameters in various setting pages. Press the key until click to confirm setting.
Arrow Keys		Presses the left or right arrow keys to move parameter cursor rightward or leftward per requirement.
Range Selection Keys		Presses the Auto key to activate auto-range mode, whilst clicking "+" or "-" key can increase or decrease range parameter, respectively.
DC/AC 3A Terminal		DC/ AC current input DC: 100µA~3A AC: 100µA~3A
	For the fuse replacement procedure.	
Sense LO Terminal		Accepts LO sense line in 4W resistance measurement.
Sense HI Terminal		Accepts HI sense line in 4W resistance measurement.


Input LO Terminal

Accepts ground (COM) line in all measurements except the sense line in 4W Resistance.

The maximum withstand voltage between this terminal and earth is 500Vpk.

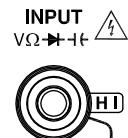Input HI Terminal

 Used as an input port for all measurements except for DC/AC Current measurements.

**DC/AC 10A Terminal
(RSDM-9061 only)**

Accepts DC/AC Current input.
For DCI or ACI details.

Measurement Keys (basic)**Background**

The upper 2 rows of measurement keys are used for basic RSDM-9060/9061 measurements such as voltage, current, resistance, continuity, diode, frequency, period, capacitance and temperature. Each key has a primary and secondary function individually. The secondary function is accessed in conjunction with the Shift key.

Shift

The Shift key is used to select the secondary functions assigned to each front panel key. When pressed, the Shift indicator appears in the display.

Local

For the Local key, it helps release from the remote control and returns the instrument to local panel operation.

ACV

Measures AC Voltage.



Shift → ACV (ACI)	Local Shift	ACV	Measures AC Current
DCV	DCI DCV		Measures DC Voltage.
Shift → DCV (DCI)	Local Shift	DCV	Measures DC Current
Ω2W (Resistance)	Ω2W		Measures 2-wire Resistance.
Shift → Ω2W (Ω4W Resistance)	Local Shift	Ω2W	Measures 4-wire Resistance.
• (Continuity)	•		Tests Continuity.
Shift → • (Diode →)	Local Shift	•	Tests Diode.
FREQ (Frequency)	FREQ		Measures Frequency
Shift + FREQ (Capacitance ↕)	Local Shift	FREQ	Measures Capacitance.
TEMP (Temperature)	TEMP		Measures Temperature.


Measurement Keys (advanced)

Background	The lower 2 rows of measurement keys are used for more advanced functions. Each key has a primary and secondary function. The secondary function is accessed in conjunction with the Shift key.		
REL	REL# REL		Measures the Relative value
Shift → REL (REL#)	Local Shift	REL# REL	Manually sets the reference value for the Relative value measurement.


Hold		Activates the Hold function.
Shift → Hold (Hold#)		Manually sets the parameters for the Hold measurement.
TRIG (Trigger)		Activates the Trigger function.
Shift → TRIG (TRIG#)		Manually sets the parameters for the Trigger function.
Menu		Enters the setting pages in various Menus.
Shift → Menu (Filter)		Manually sets the parameters for the Filter function.
DISP		Display settings.
Shift → DISP (Math)		The Math functions including dB, dBm, Compare, MX+B, 1/X and Percent manually.



Rear Panel Overview

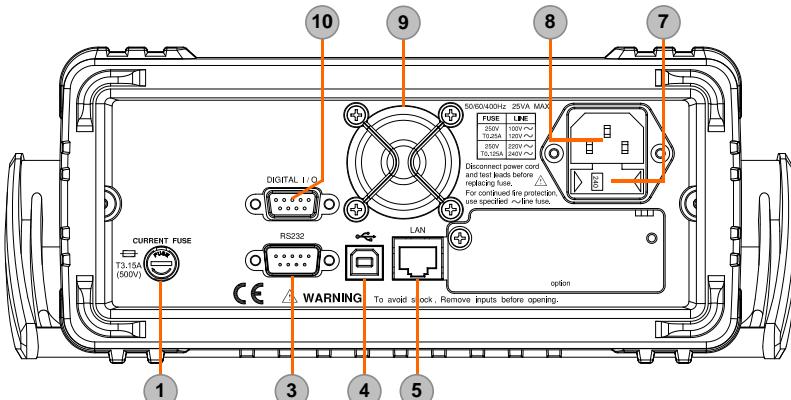

RSDM-9060

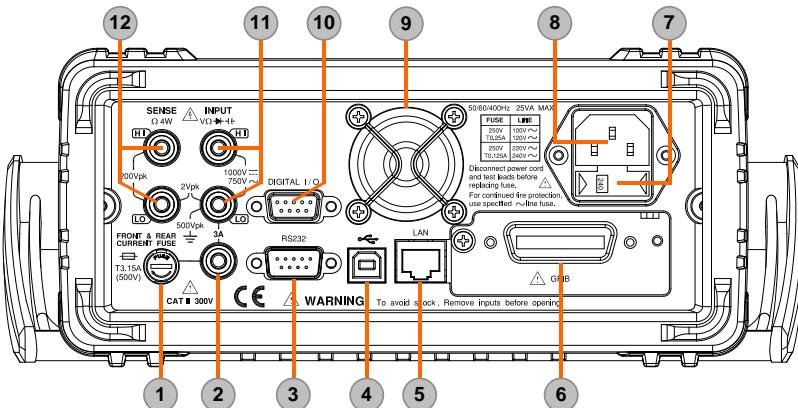


RSDM-9061

Item	Description
1	3A Current Terminal Fuse
2	3A Current Terminal (RSDM-9061 only)
3	RS-232 Interface Connector
4	USB Interface Connector (B Type)

- | | |
|----|--|
| 5 | Ethernet (LAN) Connector |
| 6 | GPIB Connector (optional) |
| 7 | AC Mains Line Voltage Selector and Fuse Socket |
| 8 | AC Mains Input (Power Cord Socket) |
| 9 | Fan Vents |
| 10 | DIGITAL I/O Connector |
| 11 | HI and LO Input Terminals (RSDM-9061 only) |
| 12 | HI and LO Sense Terminals (RSDM-9061 only) |
-


Power Cord Socket

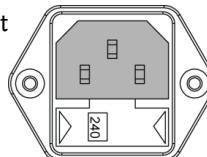

Accepts the power cord. AC 100/120/220/240V ±10%, 50Hz / 60Hz / 400Hz ±10%.

For power on sequence.

Fuse Socket

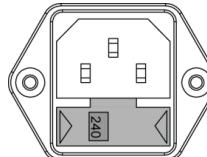


Holds the main fuse:

100/120 VAC: T0.25A

220/240 VAC: T0.125A

For fuse replacement details.

 
RS-232C port



Accepts an RS-232C cable for remote control; DB-9 male connector.

For remote control details.

 USB device port



Accepts a USB device cable for remote control; Type B, female connector.

For remote control details.

LAN port



Accepts a LAN for remote control;

For remote control details.



Digital I/O port		Accepts a digital I/O cable for the Hi/Lo limit tests; DB-9 pin, female connector.
Optional GPIB port		Accepts an optional GPIB card. For GPIB details.
Fan Vents		For heat ventilation when machine is under operation.
Sense LO Terminal (RSDM-9061 only)		Accepts LO sense line in 4W resistance measurement.
Sense HI Terminal (RSDM-9061 only)		Accepts HI sense line in 4W resistance measurement. For details.
Input LO Terminal (RSDM-9061 only)		Accepts ground (COM) line in all measurements except the sense line in 4W Resistance . The maximum withstand voltage between this terminal and earth is 500Vpk.
Input HI Terminal (RSDM-9061 only)		Used as an input port for all measurements except for DC/AC Current measurements.
DC/AC 3A Terminal (RSDM-9061 only)		DC/AC current input DC: 100µA~3A AC: 100µA~3A

DC/AC 3.15A
Input Current
Fuse

FRONT & REAR
CURRENT FUSE

T3.15A
(500V)




Holds the current fuse: T3.15A,
500V , 5*20mm
For fuse replacement details.



Status Bar

Background Identify each icon within the top status bar.

Status Bar Display

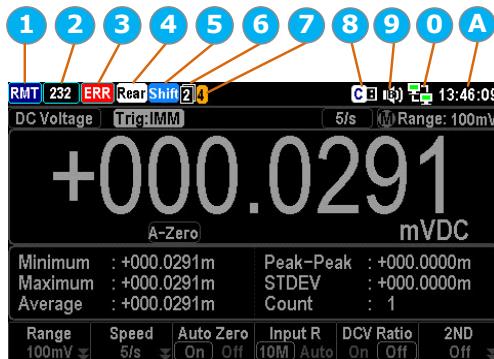

Item	Description
1	Local/Remote control icon
2	RS-232/USB-CDC/USB-TMC/LAN/GPIB interface icon
3	Error icon for commands from remote control
4	Rear panel switch icon
5	Shift key identification icon
6	The first and second function menu switch icon
7	Digital I/O mode icon (User/4094)
8	USB flash drive connection icon
9	Beep/Key Sound setting icon
0	Internet connection status icon
A	Time display
Local Control	LOC It indicates the unit is under local control mode.
Remote Control	RMT It indicates the unit is under remote control.


RS-232	232	It indicates RS-232 interface is activated.
USB - CDC	CDC	It indicates USB - CDC interface is activated.
USB - TMC	TMC	It indicates USB - TMC interface is activated.
LAN	LAN	It indicates LAN interface is activated.
GPIB	GPIB	It indicates GPIB interface is activated.
ERROR	ERR	It indicates error occurs in commands. To erase the error icon, it is required to read or sweep the error by remote control commands or reboot action.
Rear Panel	Rear	It indicates rear panel control. When the icon appears, only rear panel is available; otherwise, use front panel for measurement.
Shift	Shift	It indicates the shift key is being pressed ready for in conjunction with other keys for additional functions.
First function menu	1	It indicates the active bottom menu corresponding to function keys is the first menu. Click the Knob key (Enter) to switch to the second function menu.
Second function menu	2	It indicates the active bottom menu corresponding to functional keys is the second menu. Click the Knob key (Enter) to switch to the first function menu.
Digital I/O – 4094 mode	4	It indicates Digital I/O – 4094 mode is enabled.
Digital I/O – User mode	1	It indicates Digital I/O – User mode is enabled.
Flash Drive – Capture	CE	It indicates the Capture mode is ready for the connected flash drive.



Flash Drive – Save Reading		It indicates the Save Reading mode is ready for the connected flash drive.
Flash Drive – Failure		It indicates something error occurs and thus flash drive fails to connect to unit.
Sound – Beep		It indicates sound of beep is enabled.
Sound - Key		It indicates sound of key is enabled.
Sound – All		It indicates sounds of beep and key are both enabled.
Sound – Off		It indicates sounds of beep and key are both disabled.
Internet On		It indicates internet connection is established.
Internet Off		It indicates internet connection is Not well established.
Time Display		It indicates the time display. For detailed setting.


Set Up

Horizontal/Tilt/Vertical Applications

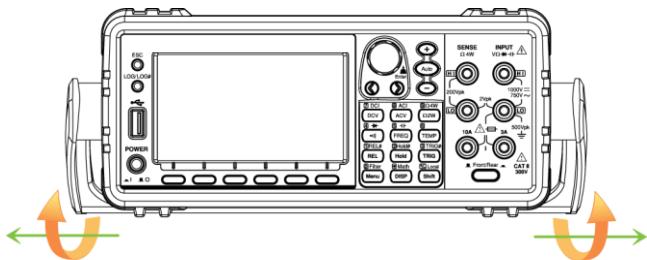


Pull out the handle sideways and rotate it clockwise for the applications below.

Horizontal

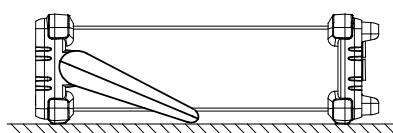


Place the unit horizontally.

Tilt

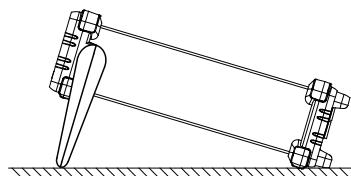

Rotate the handle for tilt stand.

Vertical

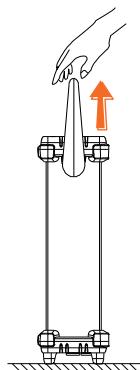



Place the handle vertically for hand carry.



Power Up

Steps


1. Ensure the correct line voltage is clearly shown on the fuse socket (240V in the right figure for example). If not, see page 351 to set the proper line voltage and fuse.
2. Connect the power cord to the AC Voltage input.

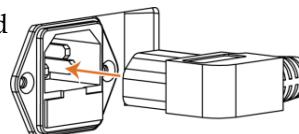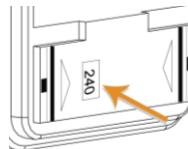

Note

Make sure the ground connector on the power cord is connected to a safety ground. This will affect the measurement accuracy.

3. Push the power button until click to turn on the main power switch on the front panel.
4. The screen firstly shows the logo brand of RS PRO followed by the message “Load the default parameter” indicating default parameter is loaded in the initial startup.

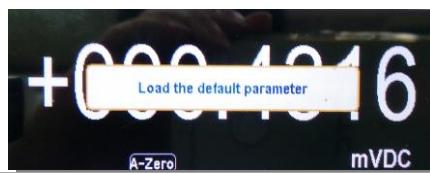

BASIC MEASUREMENT



Basic Measurement Overview	30
Refresh Rate.....	30
Automatic (Internal)/Single Triggering.....	32
AC/DC Voltage Measurement.....	34
Select Voltage Range	35
General Voltage Setting.....	36
Voltage Conversion Table.....	40
Crest Factor Table.....	41
AC/DC Current Measurement	42
Select Current Range	43
General Current Setting.....	45
2W/4W Resistance Measurement	47
Select Resistance Range	48
General Resistance Setting.....	49
Continuity Test	51
Set Continuity Threshold	53
Diode Measurement.....	54
Frequency/Period Measurement	57
Frequency/Period In-Depth Setting.....	60
Capacitance Measurement	63
Cable Open Function.....	64
Select Capacitance Range.....	65
Temperature Measurement	67
General Temperature Setting	68
Thermocouple Sensor Type.....	69
Reference Junction Temperature (SIM Temperature)	70
Thermocouple Setting	70
RTD 2W/4W Setting.....	72
Set User Type of RTD 2W/4W	73
Thermistor 2W/4W Setting.....	75
Set User Type of Thermistor 2W/4W	76



Basic Measurement Overview

Background Basic measurement refers to the several types of measurements assigned to the upper 2 row keys on the front panel.



Measurement type	ACV	AC Voltage
	DCV	DC Voltage
	ACI	AC Current
	DCI	DC Current
	Ω 2W / Ω 4W	2-wire and 4-wire Resistance
	•)) →	Continuity/Diode
	FREQ ↗	Frequency/Capacitance
	TEMP	Temperature

Advanced measurement Advanced measurement mainly refers to the operation using the result obtained from one or more of the basic measurements.

Refresh Rate

Background Refresh rate defines how frequently the RSDM-9060/9061 captures and updates measurement data. A faster refresh rate yields a lower accuracy and resolution. A slower refresh rate yields a higher accuracy and resolution. Consider these tradeoffs when selecting the refresh rate.

Measurement Type	Refresh Rate Available
------------------	------------------------

DCV/DCI/ 2W/4W 5/s, 20/s, 60/s, 100/s, 400/s, 1k/s^{*1}, 1.2k/s^{*2}, 2.4k/s^{*2}, 4.8k/s^{*2}, 7.2k/s^{*2}, 10k/s^{*2}

ACV/ACI 1/s, 5/s, 20/s

Continuity / Diode 60/s, 100/s, 400/s

Frequency & 1s, 100ms, 10ms
Period

Capacitance 2/s

Temperature 5/s, 20/s, 60/s

 Note *¹ is applicable to RSDM-9060, whilst *² is specifically for RSDM-9061.

Selection Press the left or right arrow keys to  
Procedure change the refresh rate.

You can also press the F2 (Speed) key **Speed**
to select a desired rate for
measurement. Press corresponding
function key in accord with the
desired option on screen display.

Also, the F6 (More ½) key shows **More 1/2**
when available options are more than
single page.



The refresh rate will be shown at the upper right corner of the display. See the example below.


Active Refresh Rate



 Note The refresh rate cannot be set for capacitance measurement.



Reading indicator The reading indicator  , which is located in the lower-right corner of display, flashes according to the defined refresh rate setting.

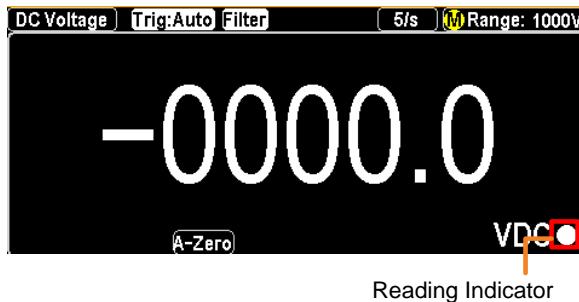

Automatic (Internal)/Single Triggering


Overview

By default, the RSDM-9060/9061 automatically triggers according to the refresh rate. See the previous page for refresh rate setting details. The TRIG key, on the other hand, is used to manually trigger once per click.


Single Trigger

Simply press the TRIG key to Single trigger measurement. Pressing once stands for trigger for single time. See the figure below for example.

③ TRIG#

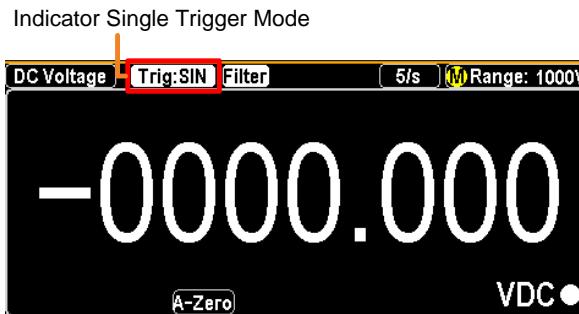
- Automatic (Internal) Trigger Press and hold the TRIG key for 2 seconds to return to the Automatic (Internal) Trigger.
- (Press & hold for 2 seconds)

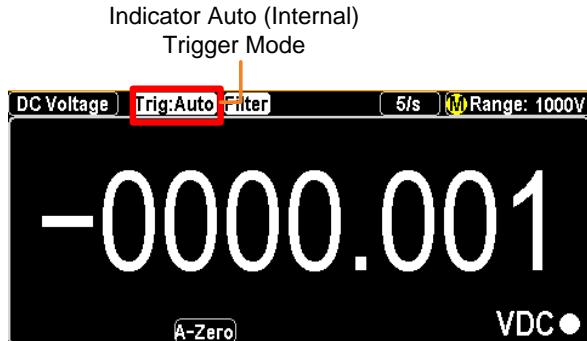


Single triggering is not supported for capacitance measurements.



AC/DC Voltage Measurement

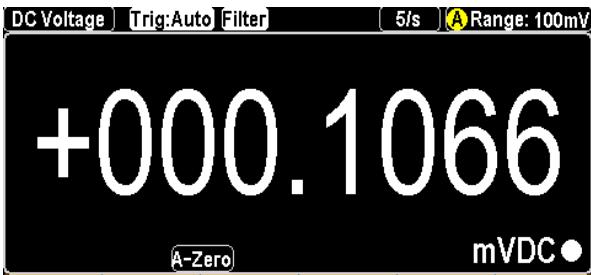Voltage type	AC 0 ~ 750V
	DC 0 ~ 1000V
Activate ACV/ DCV	Press the ACV key or DCV key to measure AC or DC voltage, respectively.
ACV/DCV mode display appears	The mode will switch to ACV, DCV mode immediately. See the figure below for example.
	
	DC or AC Voltage Indicates DC or AC Voltage mode
5/s	Indicates the active refresh rate
A	Indicates Automatic range selection
Range: 100mV	Indicates the available range of Voltage
+000.1066 mVDC	Indicates the exact measured value

Connect the test lead and measure between the Input HI and Input LO terminals. The display updates the reading.

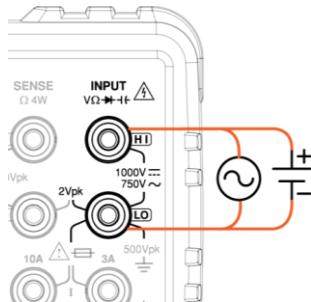

Select Voltage Range

Auto range

To turn the automatic range selection On/Off, press the Auto key.



Manual range

Press the "+" or the "-" key to select the range. The Auto indicator **A** turns to **M** indicating Manual range selection.



If the appropriate range is unknown, select the highest range.

You can also press the F1 (Range) key to **Range** select a range for the measurement.

Press the F1 ~ F6 key to select a desired range for the voltage measurement.

Range						ESC : Return
Auto	100mV	1V	10V	100V	1000V	

Selection list

Range	Resolution	Full scale
100mV	0.1µV	119.9999mV
1V	1 µV	1.199999 V
10V	10 µV	11.99999 V
100V	100 µV	119.9999 V
750V (AC)	1mV	787.500 V
1000V (DC)	1mV	1050.000 V





Note For more detailed parameters, see the specifications on page 353.

General Voltage Setting

F2 (Speed) key to DCV:

select refresh rate

Press the F1 ~ F5 key to select the desired rate.

Speed

Speed						ESC:Return ⌂
5/s	20/s	60/s	100/s	400/s	More 1/2	

Press the F6 (More 1/2) key for next page with more options as the figure shown below.

More 1/2

Speed						ESC:Return ⌂
1.2k/s	2.4k/s	4.8k/s	7.2k/s	10k/s	Page Up	

ACV:

Press the F1 ~ F3 key to select the desired rate

Speed						ESC:Return ⌂
1/s(>3Hz)	5/s(>20Hz)	20/s(>200Hz)				

F3 (Auto Zero) keyBackground to enable Auto Zero (DCV mode only)

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry

Auto Zero
On **Off**


from affecting measurement accuracy. With autozero disabled (Off), the RSDM-9060/9061 measures the offset once and subtracts the offset from all subsequent measurements.

Display	When turning On the Auto Zero, the display shows an icon  indicating the Auto Zero mode is currently being activated.
---------	--

F4 (Input R) key to Background select input resistance	Specify the input impedance to the test leads (Input R). This specifies the measurement terminal input impedance, which is either Auto or 10 MΩ. 
--	---

The Auto mode selects high impedance (Hi-Z) for the 100mV, 1 V and 10 V ranges, and 10 MΩ for the 100 V and 1000 V ranges. In most situations, 10 MΩ is high enough to not load most circuits, but low enough to make readings stable for high impedance circuits. It also leads to readings with less noise than the (Hi-Z) option, which is included for situations where the 10 MΩ load is significant.



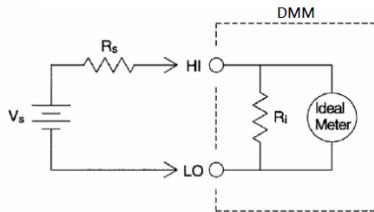

V_s = ideal voltage of DUT


R_s = input impedance of DUT

R_i = input impedance of RSDM-9060/
9061 (either 10M or 10G available
(Hi-Z))

$$\text{Deviation (\%)} = \frac{R_s}{(R_s + R_i)} * 100$$

Display	When "Auto" is selected, the display shows an icon indicating the Auto mode is currently being activated.
---------	--

F5 (DCV Ratio) Background key to enable DCV Ratio	Background key to enable DCV Ratio	The RSDM-9060/9061 is able to calculate DCV ration by measuring input voltage from the Input terminals and the reference voltage from the Sense terminals. Before activating the DCV Ration, it is required to wire test leads as the following illustration.	
--	------------------------------------	---	--

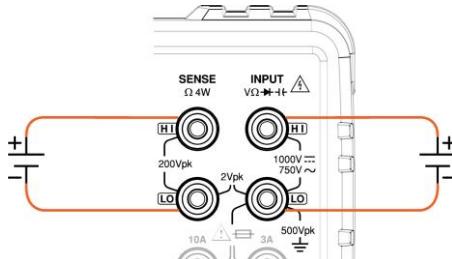


The equation of DCV ratio is like the following mathematical calculation:

$$\text{DCV RATIO} = \frac{\text{DC Input Voltage}}{\text{DC Reference Voltage}}$$

See the above equation from which DC Reference Voltage indicates the measured voltage from the Sense terminals.

Display

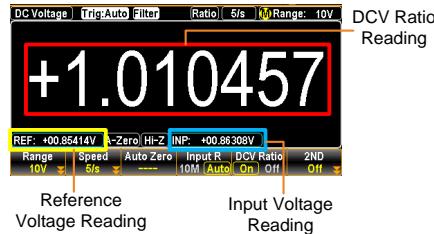

From the screenshot above for example, the INP: +00.86308V (input voltage) is divided by the REF: +00.85414V (reference voltage), and the result turns out the DCV ratio: +1.010457 shown in giant reading clearly.






Voltage Conversion Table

Background This table shows the relationship between AC and DC reading in various waveforms.

Waveform	Peak to Peak	AC (True RMS)	DC
Sine	2.828	1.000	0.000
Rectified Sine (full wave)	1.414	0.435	0.900
Rectified Sine (half wave)	2.000	0.771	0.636
Square	2.000	1.000	0.000
Rectified Square	1.414	0.707	0.707
Rectangular Pulse	2.000	2K	2D
		$K = \sqrt{(D - D^2)}$	$D = X/Y$
Triangle Sawtooth	3.464	1.000	0.000

Crest Factor Table

   Background Crest factor is the ratio of the peak signal amplitude to the RMS value of the signal. It determines the accuracy of AC measurement. If the crest factor is less than 3.0, voltage measurement will not result in error due to dynamic range limitations at full scale. If the crest factor is more than 3.0, it usually indicates an abnormal waveform as seen from the below table.

Waveform	Shape	Crest factor
Square wave		1.0
Sine wave		1.414
Triangle sawtooth		1.732
Mixed frequencies		1.414 ~ 2.0
SCR output 100% ~ 10%		1.414 ~ 3.0
White noise		3.0 ~ 4.0
AC Coupled pulse train		>3.0
Spike		>9.0



AC/DC Current Measurement

Background


The RSDM-9061, with front/rear input terminals, has two input terminals for current measurement: the 3A terminal for current less than 3A and a 10A terminal for measurements up to 10A, which can measure between 3 ~ 10A for both AC and DC current. On the other hand, for the RSDM-9060, which has no rear input terminals, nor 10A terminal, it offers merely a 3A terminal for current measurement less than 3A.

Current type

RSDM-9060	AC/DC 3A
RSDM-9061	AC/DC 3A/10A

Activate ACI/ DCI Measure

Press the Shift → ACV or Shift → DCV key to measure AC or DC current, respectively.

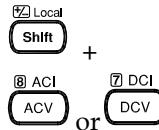

ACI/DCI mode display appears

The measurement will switch to ACI, DCI mode immediately. See the figure below for example.



AC or DC Current Indicates DC or AC Current mode


5/s Indicates the active refresh rate

A Indicates Automatic range selection

Range: 100mA Indicates the available range of Current

	000.03 mAAC Indicates the exact measured value
--	---

Connect the test lead and measure	<p>Connect the test lead between the 3A terminal and the Input LO terminal or DC/AC 10A terminal and the Input LO terminal, depending on the input current.</p> <p>The display updates the reading. For current \leq 3A use the 3.15A terminal.</p> <p>For current up to 12A use the 10A terminal.</p>
-----------------------------------	---

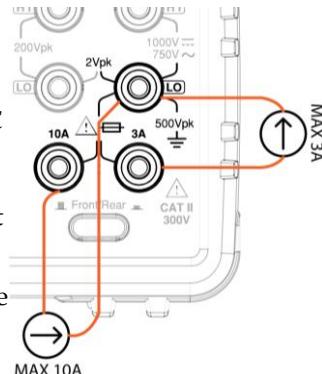

Select Current Range

Auto range	<p>To turn the automatic range selection On/Off, press the AUTO key. The most appropriate range for the currently used input jack will be automatically selected. The RSDM-9060/9061 is able to do this by remembering the last manually selected range and using that information to determine the smallest current range that the auto-range function will switch to. When the current input is switched to another terminal, the range must be manually set.</p>
------------	---



Auto Range not allowed on 10A



- Manual range Press the “+” or the “-” key to select the range. The AUTO indicator **A** turns to **M** indicating Manual range selection.
- If the appropriate range is unknown, select the highest range.
- You can also press F1 (Range) key to select a range for the measurement.


Range

Press the F1 ~ F5 key to select a desired range for the measurement.

Range					ESC :Return ⌂
Auto	100µA	1mA	10mA	100mA	More 1/2

Press the F6 (More 1/2) key for next page with more options as the figure shown below.

Range					ESC :Return ⌂
1A	3A	10A			Page Up

Selectable Current Ranges	Range	Resolution	Full scale	INJACK
	100µA	0.1nA	119.9999 µA	3A
	1mA	1nA	1.199999 mA	3A
	10mA	10nA	11.99999 mA	3A
	100mA	100nA	119.9999mA	3A
	1A	1µA	1.199999 A	3A
	3A	1µA	3.150000 A	3A
	10A	10µA	10.50000 A	10A



Note For further details, see the specifications on page 353.

General Current Setting

F2 (Speed) key to DCI:

select the rate

Speed

Press the F1 ~ F5 key to select the desired rate

Speed						ESC :Return
5/s	20/s	60/s	100/s	400/s	More 1/2	

Press the F6 (More 1/2) key for next page with more options as the figure shown below.

More 1/2

Speed						ESC :Return
1.2k/s	2.4k/s	4.8k/s	7.2k/s	10k/s	Page Up	

ACI:

Press the F1 ~ F3 key to select the desired rate

Speed						ESC :Return
1/s(>3Hz)	5/s(>20Hz)	20/s(>200Hz)				

F3 (Auto Zero) keyBackground to enable Auto Zero (DCI mode only)

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry from affecting measurement accuracy. With autozero disabled (Off), the RSDM-

Auto Zero
On **Off**



9060/9061 measures the offset once and subtracts the offset from all subsequent measurements.

Display	When turning On the Auto Zero, the display shows an icon  indicating the Auto Zero mode is currently being activated.
---------	--


2W/4W Resistance Measurement

Measurement type	2-wire OHM Uses the standard Input HI-LO terminals. Recommended for measuring resistances larger than $1\text{k}\Omega$.
	4-wire OHM Compensates the test lead effect using the 4W compensation terminals (SENSE HI/LO terminals), in addition to the standard Input HI-LO terminals. Recommended for measuring sensitive resistances smaller than $1\text{k}\Omega$.
Activate 2W or 4W	Press the Ω_{2W} key to activate 2W resistance measurement.
Measurement	Press the Shift → Ω_{2W} key to activate 4W resistance measurement.
2W/4W resistance mode display appears	The mode will switch to the selected resistance mode immediately. Press the Shift → Ω_{2W} key on the front panel as figure shown below.
	
2 or 4-Wire OHM	Indicates 2W or 4W Resistance mode
5/s	Indicates the active refresh rate
A	Indicates Automatic range selection
Range: 100 Ω	Indicates the available range of Resistance
000.0651 Ω	Indicates the exact measured value



Connect the test lead and measure between the Input HI terminal and the LO terminal.

For 4W measurement, connect the test leads between the Input HI terminal and the LO terminal, as the way to 2W measurement. Also, connect another sense leads between the SENSE LO and HI terminals.

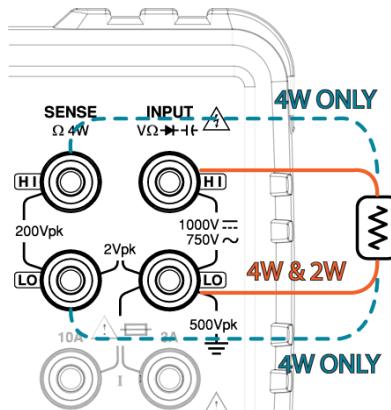

Select Resistance Range

- | | | |
|--------------|---|--|
| Auto range | To turn the automatic range selection On/Off, press the Auto key. | |
| Manual range | Press the "+" or the "-" key to select the range. The Auto indicator A turns to M indicating Manual range selection. If the appropriate range is unknown, select the highest range.

You can also press the F1 (Range) key to select a range for the measurement. | |
| | Press the F1 ~ F5 key to select a desired range for the measurement. | |

Range					ESC :Return
Auto	100Ω	1kΩ	10kΩ	100kΩ	More 1/2

Press the F6 (More 1/2) key for next page with more options as the figure shown below.

More 1/2

Range			ESC :Return	
	1MΩ	10MΩ	100MΩ	Page Up
Selectable Resistance Ranges	Range	Resolution	Full scale	
	100Ω	0.1mΩ	119.9999Ω	
	1kΩ	1mΩ	1.199999kΩ	
	10kΩ	10mΩ	11.99999kΩ	
	100kΩ	100mΩ	119.9999kΩ	
	1MΩ	1Ω	1.199999MΩ	
	10MΩ	10Ω	11.99999MΩ	
	100MΩ	100Ω	119.9999MΩ	



Note For more details, see the specifications on page 353.

General Resistance Setting

F2 (Speed) key to select the rate

Speed

Speed			ESC :Return			
	5/s	20/s	60/s	100/s	400/s	More 1/2

Press the F6 (More 1/2) key for next page with more options as the figure shown below.

More 1/2

F3 (AutoZero) key to enable Auto Zero

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally

Auto Zero On Off

measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry from affecting measurement accuracy. With autozero disabled (Off), the RSDM-9060/9061 measures the offset once and subtracts the offset from all subsequent measurements.

Display	When turning On the Auto Zero, the display shows an icon  indicating the Auto Zero mode is currently being activated.
---------	--

Continuity Test

Background	The continuity test checks that the resistance in the DUT is low enough to be considered continuous (of a conductive nature).
------------	---


Activate continuity test	Press the  key to activate continuity testing.
--------------------------	---

Continuity mode display appears	The mode will switch to continuity testing immediately. Press  on the front panel as figure shown below.
---------------------------------	---



Continuity	Indicates Continuity measurement
60/s	Indicates the active refresh rate
	Indicates Manual range selection
1k\u03a9	Indicates the available range of Continuity
 Note	The range selection is fixed in 1k\u03a9
OPEN\u03a9	Indicates the currently measured result

Connect the test lead and measure between the Input HI terminal and the LO terminal. The display updates the reading.

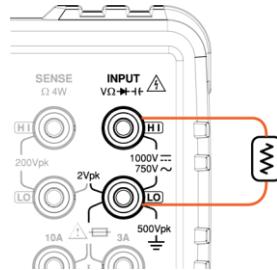

F2 (Speed) key to select the desired rate.

Speed

F3 (Auto Zero) key to enable Auto Zero

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry from affecting measurement accuracy. With autozero disabled (Off), the RSDM-9060/9061 measures the offset once and subtracts the offset from all subsequent measurements.

Auto Zero
On **Off**

Display When turning On the Auto Zero, the display shows an icon  indicating the Auto Zero mode is currently being activated.

F4 (BeepVol) key Press the F2 ~ F4 key to select the volume level or press the F1 key to set Beep volume off 



Set Continuity Threshold

Background The continuity threshold defines the maximum resistance allowed in the DUT when testing the continuity.

 
Threshold Range Threshold 1 to 1000Ω (Default Threshold:10Ω)

Resolution 1Ω

Procedure Press the F5 key to enter the Threshold  of Continuity menu as the figure below shown.



Set the continuity threshold level. 

1. Use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value. 
2. Press the F6 (Enter) key or the Knob  key until click to confirm the threshold settings.



Display



Diode Measurement

Background

The diode test checks the forward bias characteristics of a diode by running a constant forward bias current of approximately 1mA through the DUT.

Activate diode test

Press the Shift+  key to activate diode measurement.




+



Diode mode display appears

The screen will switch to Diode mode immediately as the figure shown below.

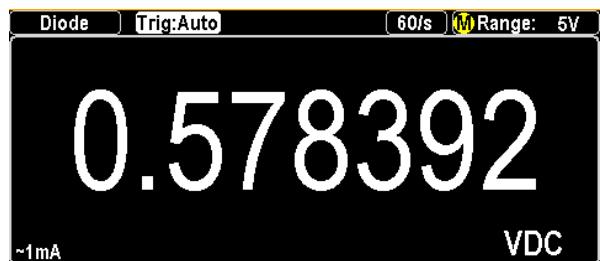

Diode Indicates the Diode measurement

60/s Indicates the active refresh rate


 Indicates Manual range selection

5V Indicates the available range of Diode

 Note The range selection is fixed in 5V

0.449395 VDC Indicates the exact measured value

Connect the test lead and measure between the Input HI terminal and the LO terminal; Anode-V, Cathode-COM. The display updates the reading.

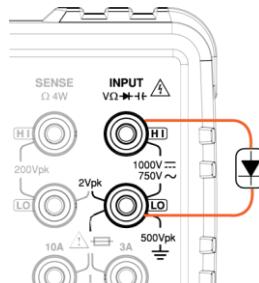

F2 (Speed) key to select the rate.

Speed

Speed			ESC:Return
60/s	100/s	400/s	

F3 (Auto Zero) key to enable Auto Zero

Auto Zero
On **Off**

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry from affecting measurement accuracy. With autozero disabled (Off), the RSDM-9060/9061 measures the offset once and subtracts the offset from all subsequent measurements.



Display

When turning On the Auto Zero, the display shows an icon  indicating the Auto Zero mode is currently being activated.

Frequency/Period Measurement

Description The RSDM-9060/9061 can be used to measure the frequency or period of an input signal.

Range Frequency 3Hz ~1MHz

Period 1.0µs ~333ms


Activate frequency or period test

- To measure Frequency, press the FREQ key followed by clicking the F3 (Measure) key to enter the Measure menu. Click the F1 (Frequency) key and the measured frequency will be displayed on the primary screen with the period value displayed on the sub section beneath.
- To measure Period, press the FREQ key followed by clicking the F3 (Measure) key to enter the Measure menu. Click the F2 (Period) key and the measured period will be displayed on the primary screen with the frequency value displayed on the sub section beneath.

Display

Frequency Mode

Indicator Frequency Mode

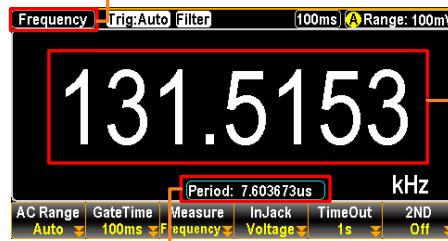


Period Value in Sub Section




Period Mode

Indicator Period Mode

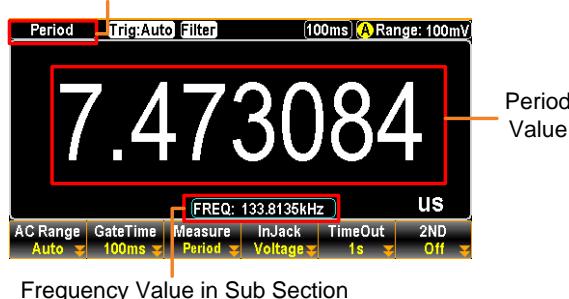

Frequency Value in Sub Section


- | | | |
|--------------------------------|--|--|
| Frequency mode display appears | The mode will switch to the Frequency or Period mode | |
| | immediately. Press on the front panel followed by clicking F3 key to choose Frequency as shown below. | |

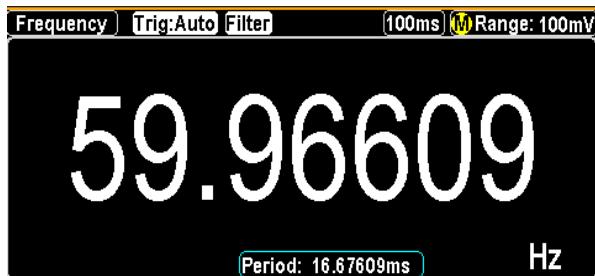


Frequency	Indicates Frequency measurement
100ms	Indicates the active refresh rate
	Indicates Manual range selection
100 mV	Indicates the available range of Voltage
59.96609 Hz	Indicates the exactly measured Frequency value
16.67609ms	Indicates the exactly measured Period value

Connection

Depending on different inputs, connect test lead to varied terminals. In terms of voltage, connect test leads between the Input HI terminal and the LO terminal. The display updates the reading.

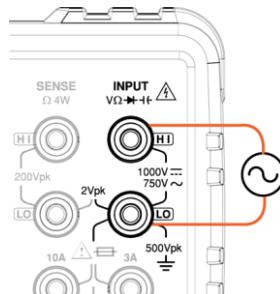

In terms of current, connect test leads between the 3A terminal and the LO terminal or DC/AC 10A terminal (RSDM-9061 only) and the LO terminal. The display updates the reading.

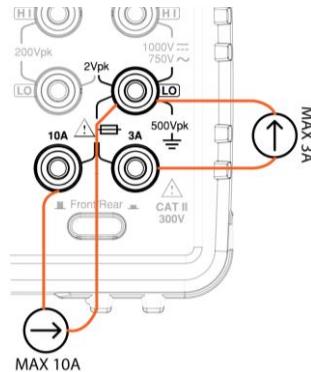

Frequency/Period In-Depth Setting

Background	The input voltage/current range for frequency/period measurements can be set to Auto range or to manual. By default, the voltage/current range is set to Auto for both the period and frequency.
Auto range	Press the Auto/Enter key. Auto  will be displayed on the upper right corner. 
F2 (Gate Time) key to select gate time	Background It is the threshold to recalculate frequency/period. Slower the gate time, e.g., 1s, more accurate the reading value.
	Press the F2 key to enter gate time menu. Click the F1 – F3 key for the desired gate time. See the figure below with available options. 
F4 (InJack) key to select voltage or current	Background In accordance with the target inputs, choose the corresponding selection per condition. E.g., select “3A” when the input current is below 3A amplitude.
	Press the F4 (InJack) key to determine whether the voltage or current 3A or current 10A (RSDM-9061 only) to be measured. Press the F1 – F3 key to select desired option. See the figure shown below with options available. 
F5 (Time Out) key to select timeout	Background It defines the exact value for timeout, which means measurement will be suspended after reaching the set timeout value when none of input is detected.


TimeOut

Press the F5 key to enter timeout menu. Click the F1 – F2 key for the desired timeout setting. See the figure below with available options.

**Note**

 When selecting “Auto”, the timeout setting will fully sync with the gate time value.

- F1 (AC Range) key to manually select range setting
- Press the “+” or the “-“ key to promptly select the range. The Auto indicator **A** turns to **M** indicating Manual range selection. If the appropriate range is unknown, select the highest range.



You can also press the F1 (AC Range) key to select a range for the measurement. Depending on the InJack setting, the available options vary. See examples below.

AC Range

When InJack is Voltage:

Press the F1 ~ F6 key to select a desired range for the measurement.

AC Range						[ESC]:Return
Auto	100mV	1V	10V	100V	750V	

When InJack is 3A:

More 1/2

Press the F1 ~ F5 key to select a desired range for the measurement.

AC Range						[ESC]:Return
Auto	100uA	1mA	10mA	100mA	More 1/2	

Press the F6 (More 1/2) key for next page with more options as figure shown below.

AC Range						[ESC]:Return
1A	3A					Page Up

When InJack is 10A (RSDM-9061 only):

Press the F1 ~ F2 key to select a desired parameter for the measurement.

AC Range						[ESC]:Return
Auto	10A					

Capacitance Measurement

Background The capacitance measurement function checks the capacitance of a component.

Activate capacitance test Press the Shift →   to activate capacitance measurement.

Capacitance mode display appears The screen will switch to capacitance mode immediately. Press  +  on the front panel as shown below.



Capacitance Indicates the Capacitance measurement

2/s Indicates the active refresh rate

 **Note** Refresh rate of capacitance is fixed in 2/s.


 **A** Indicates Automatic range selection

Range: 100nF Indicates the available range of Capacitance

105.0 nF Indicates the exact measured value



Connect the test lead and measure between the Input HI terminal and the LO terminal; Positive-HI, Negative-LO. The display updates the reading.

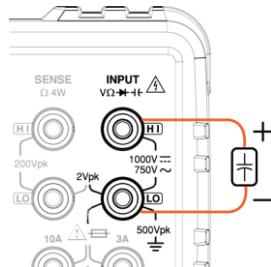


Cable Open Function

Background


Cable open function will be activated when capacitance range is between 1nF and 10nF. It is required to proceed to Cable Open function when capacitance is between 1nF and 10nF in which test leads connected will result in measuring capacity in small scale.

Display

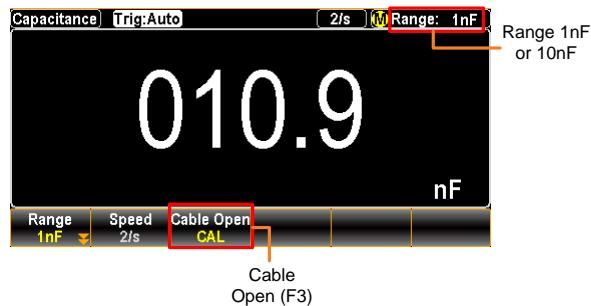

Activate cable open function

Connect test leads followed by pressing the F3 (Cable Open) key to proceed to Cable Open function. The measured value will be rectified and returned to zero as the figure shown below.

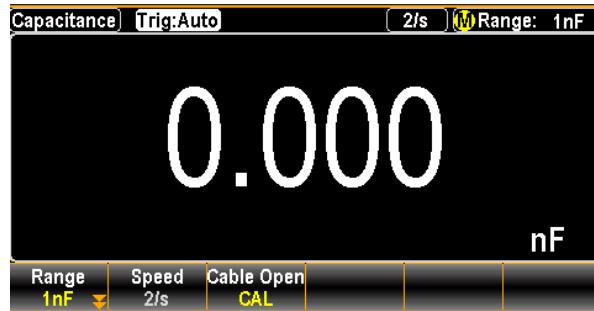

Connect the test lead and measure Follow the connection method of capacitance measurement to measure and obtain precise-prone value.



Note Except for 1nF/10nF, all are Not applicable to Cable Open function.

Select Capacitance Range


Auto range

To turn the automatic range selection On/Off, press the Auto key.



Manual range

Press the "+" or the "-" key to select the range. The Auto indicator **A** turns to **M** indicating Manual range selection. If the appropriate range is unknown, select the highest range.

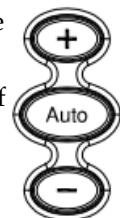

You can also press the F1 (Range) key to select a range for the measurement.

Range

Press the F1 ~ F5 key to select a desired range for the measurement.



Press the F6 (More 1/2) key for next page with more options as the figure shown below.

More 1/2



	Range			[ESC]:Return ⌂	[Page Up]
	10uF	100uF			

Selectable Capacitance Ranges	Range	Resolution	Full scale		
	1nF	1pF	1.199nF		
	10nF	10pF	11.99nF		
	100nF	100pF	119.9nF		
	1μF	1nF	1.199μF		
	10μF	10nF	11.99μF		
	100μF	100nF	119.9μF		


 Note	For further details, please see the specifications on page 355.
 Note	The refresh rate settings and the EXT trigger cannot be used in the capacitance mode.

Temperature Measurement

Background	The RSDM-9060/9061 can measure temperature utilizing several devices including Thermocouple, RTD (Resistance Temperature Detector) as well as Thermistor. To measure temperature, the RSDM-9060/9061 accepts a device input and calculates the temperature from the voltage fluctuation.
Temperature Range	Thermocouple -200°C ~ +1820°C (vary by sensor types)
	RTD -200°C ~ +630°C
	Thermistor -80°C ~ +150°C
Activate temperature measurement	Press the TEMP key to activate temperature measurement. 
Temperature mode display appears	<p>A-Zero MEAS:+001.5191mV SIM: 14.44 °C</p> <p>Probe TCouple Speed 20/s Auto Zero On Unit °C Type R Simulated Auto</p>
Temperature	Indicates Temperature measurement
+ 0214.552 °C	Indicates the exact measured value
T Couple	Indicates the active Probe
Type R	Indicates the active Type



Connect the test lead and measure between the Input HI terminal and the LO terminal. The display updates the reading.

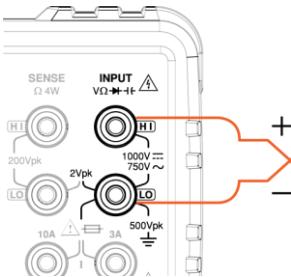

General Temperature Setting

F2 (Speed) key to Press the F1 ~ F3 key to select the select the rate desired rate

Speed



F3 (Auto Zero) key Background to enable Auto Zero

Autozero provides the most accurate measurements, but requires additional time to perform the zero measurement. With autozero enabled (On), the RSDM-9060/9061 internally measures the offset following each measurement. It then subtracts that measurement from the preceding reading. This prevents offset voltages present on the RSDM-9060/9061's input circuitry from affecting measurement accuracy. With autozero disabled (Off), the RSDM-9060/9061 measures the offset once and subtracts the offset from all

Auto Zero
On Off

subsequent measurements.

Display When turning On the Auto Zero, the display shows an icon **A-Zero** indicating the Auto Zero mode is currently being activated.

F4 (Unit) key to select unit of temperature Press the F4 (Unit) key to enter the Temperature Unit menu followed by clicking the F1 – F3 key to choose desired temperature unit. See the figure shown below.



Thermocouple Sensor Type

Background The RSDM-9060/9061 accepts thermocouple inputs and calculates the temperature from the voltage difference of two dissimilar metals. Thermocouple sensor type is one of the main factors to be considered.

Parameter	Thermocouple Sensor Type	Measurement Range	Resolution
J		-210 to +1200°C	0.002 °C
K		-200 to +1372°C	0.002 °C
N		-200 to +1300°C	0.003 °C
R		-50 to +1768°C	0.01 °C
S		-50 to +1768°C	0.01 °C
T		-200 to +400°C	0.002 °C
B		+250 to +1820°C	0.01 °C
E		-200 to +1000°C	0.002 °C



Reference Junction Temperature (SIM Temperature)

Background (Thermocouple only)

When a thermocouple is connected to the RSDM-9060/9061, the temperature difference between the thermocouple lead and the RSDM-9060/9061 input terminal should be taken into account and be cancelled out; otherwise an erroneous temperature might be added. The value of the reference junction temperature should be determined by the user.

Type	Range	Resolution
SIM (simulated)	-20°C ~ +80°C	0.01°C

The terminal temperature is manually defined by user.

Default value: Auto

Thermocouple Setting

Procedure

1. Press the F1 (Probe) key **Probe** to enter the Temperature Probe menu followed by clicking the F1 (TCouple) key **TCouple** to activate Thermocouple mode. See the figure shown below.



2. Press the F5 (Type) key **Type** to enter the Sensor Type menu as the figure shown below. Click the F1 – F5 key to select a desired sensor type per situations.



3. Press the F6 (More 1/2) key **More 1/2** to enter the next page with more sensor types available for selection.

Sensor Type			ESC :Return
T	B	E	Page Up

4. Further press the F6 (Simulated) key **Simulated** after returning to the previous menu page. You can select either the default fixed “23.00” or the “Auto” option for the so-called “Reference Junction Temperature” as following.

Simulated Method Setup			ESC :Return
23.00	Auto		

- When selecting “23.00” by F1 (23.00) key **23.00**, the display shows an icon **SIM: 23.00** indicating the simulated baseline is 23°C.
- If choosing “Auto” by F2 (Auto) key **Auto**, the subset menu appears with additional option. Press the F3 (ADJ:+00.00) key **ADJ:+00.00** followed by inputting a desired parameter as the following figure (+10 for example).

Auto SIM Offset	<input checked="" type="radio"/>	+10.00	3 6	ESC :Return
°C				Enter

5. Press the F6 (Enter) key **Enter** or the Knob key



to confirm the setting. The icon **SIM: 34.50** appears on display indicating the simulated 34.5 °C, which derives from the input terminal temperature plus the defined +10 degrees. That is, the input terminal temperature is $34.5 - 10 = 24.5$ °C.

RTD 2W/4W Setting

Background The RSDM-9060/9061 supports 2 or 4 wire RTD. It is important to specify the type of temperature sensor used.

Parameter	RTD type	Range	Resolution
	All (based on PT100)	-200~630°C	0.001°C


Procedure 1. Press the F1 (Probe) key **Probe** to enter the Temperature Probe menu followed by clicking either the F2 (RTD 2W) **RTD 2W** or F3 (RTD 4W) key **RTD 4W** to activate RTD 2W/4W mode. See the figure shown below.



2. Press the F5 (Type) key **Type** to enter the Sensor Type menu as the figure shown below. Click the F1 – F5 key to select a desired sensor type per your requirement.



3. The display shows the latest setting. See the example of the figure below where RTD 2W: PT100 is currently activated by user.

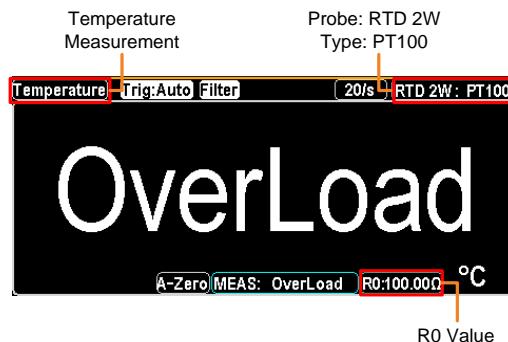

Set User Type of RTD 2W/4W

Background

The User Type allows any customized RTD sensor coefficients to be used. The User Type is available for user to configure the alpha, beta, delta and R₀ coefficients individually, as defined by the Callendar-Van Dusen equation.

Type	Alpha (α)	Beta (β)	Delta (δ)
Coefficient			
PT100	0.00385	0.10863	1.49990
D100	0.00392	0.10630	1.49710
F100	0.00390	0.11000	1.49589
PT385	0.00385	0.11100	1.50700
PT3916	0.00392	0.11600	1.50594

Equation

$$-200^{\circ}\text{C} \text{ to } 0^{\circ}\text{C} R_{\text{RTD}} = R_0[1+AT+BT^2+CT^3(T-100)]$$

range where: R_{RTD} is the calculated resistance of the RTD
 R_0 is the known RTD resistance at 0°C
 T is the temperature in $^{\circ}\text{C}$

$$A = \alpha [1 + (\delta / 100)]$$

$$B = -1 (\alpha)(\delta)(1e-4)$$

$$C = -1 (\alpha)(\beta)(1e-8)$$

$$-0^{\circ}\text{C} \text{ to } 630^{\circ}\text{C} R_{\text{RTD}} = R_0 (1+AT+BT^2)$$

range where: R_{RTD} is the calculated resistance of the RTD
 R_0 is the known RTD resistance at 0°C
 T is the temperature in $^{\circ}\text{C}$

$$A = \alpha [1 + (\delta / 100)]$$

$$B = -1 (\alpha)(\delta)(1e-4)$$

Operate Procedure

1. Press the F5 (Type) key **Type** to enter the Sensor Type menu followed by pressing the F6 (User) key **User** to activate User Type.



2. Press the F6 (User Type) key **User Type** to enter the User Type Setup menu where α , β , δ and R0 coefficients can be set up respectively.

User Type Setup				ESC:Return
α :0.003850	β :0.108630	δ :1.499900	R0:100.0000	PT100 DEF

3. Click the F1 (α :0.003850) key **a:0.003850** to enter the RTD Alpha Setup page as the figure shown below. Use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value.
 α default: 0.00385
 α range: 0 ~ 9.99999

RTD Alpha Setup				ESC:Return
?	0 ,0.003850	-	-	Enter

4. Press the F6 (Enter) key **Enter** or the Knob key to confirm the input α value and repeat the previous steps 2 - 4 to set up the β (Beta), δ (Delta) and R0 coefficients individually.
 β default: 00.10863, δ default: 1.49990, R0 default: 100
 β , δ range: 0 ~ 9.999999, R0 range: 80 ~ 120

RTD Beta Setup

RTD Beta Setup				ESC:Return
?	0 .108630	-	-	Enter

RTD Delta Setup

RTD Delta Setup				ESC:Return
?	1 .499900	-	-	Enter

RTD R0 Setup

RTD R0 Setup				ESC:Return
?	100 .0000	-	-	Enter

5. After returning to the User Type Setup page, if necessary, press the F6 (PT100 DEF) key **PT100 DEF** to restore to the default coefficients' setting based on the PT100 sensor type.

Thermistor 2W/4W Setting

Background The RSDM-9060/9061 supports 2 or 4 wire Thermistor. It is important to specify the type of temperature sensor used.

Parameter	Type	Range	Resolution
	All	-80~150°C	0.001°C


Procedure 1. Press the F1 (Probe) key to **Probe** enter the Temperature Probe menu followed by clicking either the F4 (Therm2W) **Therm2W** or F5 (Therm4W) key **Therm4W** to activate Therm 2W/4W mode. See the figure shown below.



2. Press the F5 (Type) key **Type** to enter the Sensor Type menu as the figure shown below. Click the F1 – F3 key to select a desired sensor type per your requirement.



3. The display shows the latest setting. See the example of the figure below where Thermistor 2W: 10kΩ is currently activated by user.

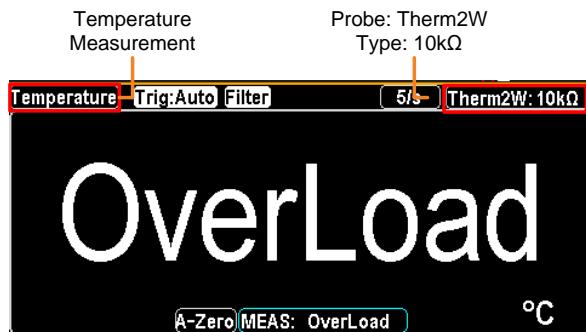

Set User Type of Thermistor 2W/4W

Background

The User Type allows any customized Thermistor sensor coefficients to be used. The User Type is available for user to configure the A, B and C coefficients individually as defined by the Steinhart-Hart equation.

Type Coefficient	A	B	C
2.2k	0.0014733	0.0002372	1.07E-07
5k	0.0012880	0.0002356	9.56E-08
10k	0.0010295	0.0002391	1.57E-07

Equation

$$T_K = \frac{1}{A + B(\ln R) + C(\ln R)^3}$$

where: T_K is the calculated temperature in Kelvin.

$\ln R$ is the natural log of the measured resistance of the thermistor.

A, B, and C are the curve fitting constants.

Operate Procedure

4. Press the F5 (Type) key **Type** to enter the Sensor Type menu followed by pressing the F4 (User) key **User** to activate User Type.



-
5. Press the F6 (User Type) key **User Type** to enter the User Type Setup menu where A, B and C coefficients can be set up respectively.



6. Click the F1 (A:1.2880E-03) key **A:1.2880E-03** to enter the THERM A Setup page as the figure shown below. Use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value.

A range: 0 ~ 9.9999 (default: 1.2880E-03)



7. Press the F6 (Enter) key **Enter** or the Knob

key to confirm the input A value and repeat the previous steps 2 - 4 to set up the B and C coefficients individually.

B range: 0 ~ 9.9999 (default :2.35600E-04)

C range: 0 ~ 9.9999 (default :9.55700E-08)

THERM B Setup



THERM C Setup



8. After returning to the User Type Setup page, if necessary, press the F6 (5 kΩ DEF) key **5kΩ DEF** to restore to the default coefficients' setting based on the 5 kΩ sensor type.
-



DUAL MEASUREMENT



Dual Measurement	79
Refresh Rate.....	82
Connect the Test Leads	83
The error influence on Dual Measurement (V & I)	85
The error of current shunt.....	87

Dual Measurement

Background

The dual measurement mode allows you to use the 2nd display to show another item, thus viewing two different measurement results at once.

When the multimeter is used in dual measurement mode, both displays are updated from either a single measurement or from two separate measurements. If the primary and secondary measurement modes have the same range, rate and rely on the same fundamental measurement, then a single measurement is taken for both displays; such as ACV and frequency/period measurements. If the primary and secondary displays use different measurement functions, ranges or rates, then separate measurements will be taken for each display. For example, ACV and DCV measurements.

Most of the basic measurement functions, except for resistance/continuity/diode/capacitance can be used in the dual measurement mode. The following table shows the available measurement combinations.

Primary Display	Secondary Display					
	ACV	DCV	ACI	DCI	FREQ	Temp
ACV	X	•	•	•	•	X
DCV	•	X	•	•	X	•
ACI	•	•	X	•	•	X
DCI	•	•	•	X	X	•
FREQ	•	X	•	X	X	X

Note

When two different measurements are taken, there is a switching delay between the first measurement and the second measurement.



1st Measurement item setting Choose one of the basic measurement functions from the table above to set the measurement mode for the primary display.

7 DCI

DCV

For example, press DCV to set the first display to DCV measurement.

2nd Measurement item setting To set a measurement mode for the second display, press the F6 (2ND) key and the 2ND Function options appear subsequently.

DCI ACV ACI TEMP ESC:Return OFF

For example, press the F2 (ACV) key to select ACV measurement for the second display.

Display



1ST Display Shows the DCV measurement

2ND Display Shows the ACV measurement

 
1ST in orange Indicates that 1ST display is the currently active display.

Editing 1st or 2nd measurement item settings After the secondary measurement function has been activated, the rate, range and measurement item can be edited for either the primary or secondary display. Note, however, it is more practical to configure the first or second measurement items before activating dual measurement mode.

To edit measurement parameters in dual measurement mode, you must first set which display is the active display. The orange outline covering either 1ST or 2ND icon indicates the active display.

1. Select active display

Toggle the active display between the 1ST and 2ND display by pressing the Knob key:



Primary display: 1ST highlighted in orange outline.

Secondary display: 2ND highlighted in orange outline.

Display

1ST in active display: **1ST**

2ND in active display: **2ND**

2. Edit active display settings

Edit the range, rate or measurement item for the active display in the same way as for single measurement operation.

Turn Off 2nd Measurement

To turn Off the 2ND measurement, first toggle in 1ST active display followed by pressing the F6 (2ND) key. Click the F6 (OFF) key again to disable the 2ND measurement.




Refresh Rate

Background Refresh rate defines how frequently the RSDM-9060/9061 captures and updates measurement data. A faster refresh rate yields a lower accuracy and resolution. A slower refresh rate yields a higher accuracy and resolution. Consider these tradeoffs when selecting the refresh rate.

Measurement Type	Refresh Rate
DCV/DCI	5/s, 20/s, 60/s, 100/s, 400/s, 1k/s ^{*1} , 1.2k/s ^{*2} , 2.4k/s ^{*2} , 4.8k/s ^{*2} , 7.2k/s ^{*2}
ACV/ACI	1/s, 5/s, 20/s
Frequency /Period	1s, 100ms, 10ms


 **Note** ^{*1} is applicable to RSDM-9060, whilst ^{*2} is specifically for RSDM-9061.

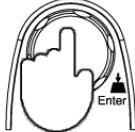Selection steps	<ol style="list-style-type: none">1. Toggle the active display between the 1ST and 2ND display by pressing the Knob key until click. 2. Press the F2 (Speed) key to select a desired rate for measurement. Press the corresponding function key (F1 – F5) in accord with the desired option on screen display. Also, press the F6 (More 1/2) key to enter the next page with more options when available.  
------------------------	--

3. The refresh rate will be shown at the left side of each display. See the figure below shown.



Reading Indicator The reading indicator  flashes according to the defined refresh rate setting of the active display.

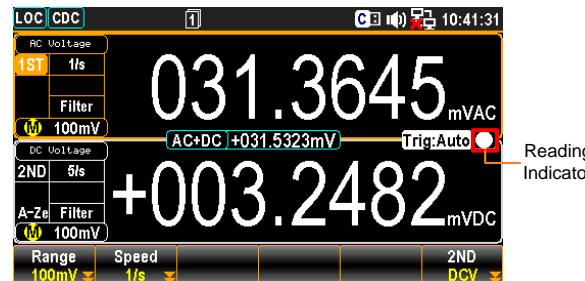


Connect the Test Leads

Connect the test leads and measure


When using the dual measurement function, the connection method and number of test leads required depends on the measurement combination. Use the connect diagrams below as guide when taking dual measurements.



Voltage and Frequency/Period Measurement

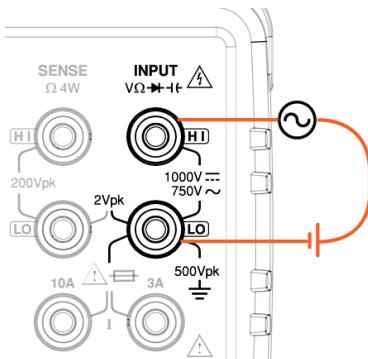

Voltage/Frequency /Period and Current Measurement

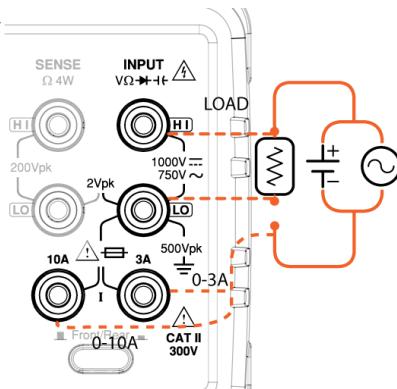

Note


DC Current measurements will be displayed as a negative value as the polarity of the current leads has been reversed.

Please take into account the resistance of the test leads and internal resistance of the current connection as it is in series with the test circuit.


The above measuring configuration is used to measure the voltage present on the resistance under test and the current through the resistance under test when using the DCI/DCV or ACI/ACV dual measurement function.

When dual measurement (DCI/DCV or ACI/ACV) is underway, the input impedance will change, thus resulting in load deviation due to the fluctuation of different measuring range.

DC Voltage and Temperature Measurement
(Sense HI/LO connects to K-Type +/-, whilst Input HI/LO connects DCV source)

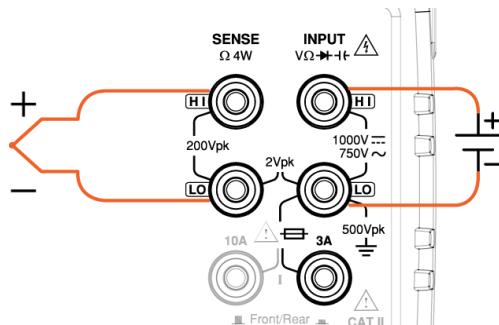

DC Current and Temperature Measurement
(Sense HI/LO connects to K-Type +/-, whilst Input 3A/LO connects DCI source)

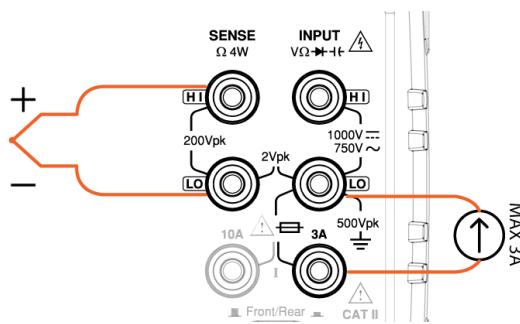


The error influence on Dual Measurement (V & I)

Background

While dual measurement of voltage and current is being executed, the route from DMM internal circuit to the LO terminal circuit for measuring voltage is totally identical with that for measuring current, and thus the resistor within the route is commonly shared by the two measuring circuits. While measuring current, the resistor within the circuit will generate a voltage drop. When the internal resistor of LO terminal is added to the external load resistor within the circuit, the accuracy of voltage reading will be influenced.



Diagram

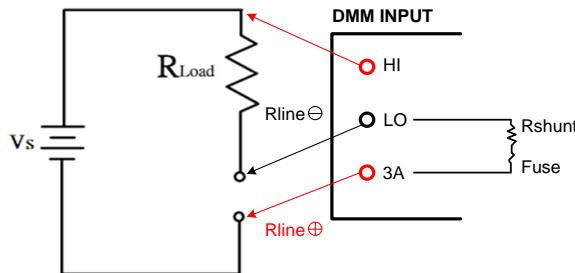

Example

V_s = Voltage source

R_{load} = Load under test

R_{int} = Current terminal total impedance containing R_{shunt} + Fuse + R_{line}^{\oplus} + R_{line}^{\ominus}

When different current range for measurement is selected, R_{shunt} will vary accordingly.

For example,

$V_s = 10V$, $R_{load} = 10 \Omega$, $V_s = 10V$, $R_{load} = 10 \Omega$

If the total impedance passing through current terminal is $R_{int} = 0.5\Omega$, the ideal measured voltage will be 10V regardless of impact on load from voltmeter input impedance. The calculation for

$$\frac{10 \Omega}{\text{actual measured value is } 10V * \frac{(10 \Omega + 0.5 \Omega)}{9.52381V}}$$

R_{int}

Error (%) = $\frac{(R_{load} + R_{int})}{(R_{load} + R_{int})} * 100$, this error is applicable to not only DC but AC measurement as well. The influence will be probably more serious depending on varied actual conditions.


The error of current shunt

Background

The principle of current measuring is to obtain current via the voltage proportionated by the measured shunt resistor and the current under test. The circuit is basically designed by high impedance ($0.01\Omega \sim 100\Omega$ approximately) and with shortcoming of voltage drop by shunt. There will be obvious error occurred while measuring low current due to the measurable voltage generated by a larger shunt.

An ideal ammeter never changes flowing route of current, and thus it owns the characteristics of both zero-input resistor and zero-input voltage drop. In practice, however, ammeter always generates an input voltage drop while measuring, which is known as burden voltage in series.

Diagram

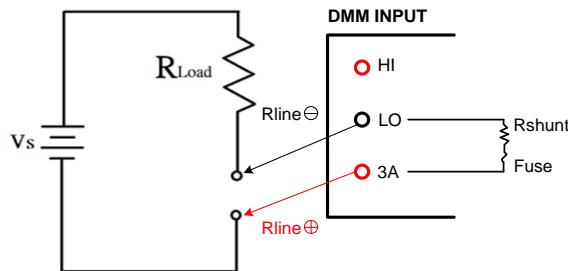

Example	Vs = Voltage source															
	RLoad = Load under test															
	Rint = Current terminal total impedance containing Rshunt + Fuse + Rline \oplus + Rline \ominus															
	When different current range for measurement is selected, Rshunt will vary accordingly.															
	For example,															
	Vs = 10V, Rload = 10 Ω , Rint = total impedance flowing through current terminal 0.5 Ω															
	The theoretical value for current reading should be															
	$I = \frac{Vs}{Rload}$ = 1A in that the DMM internal resistor Rint, which contains Shunt, Rline \oplus , Rline \ominus and Fuse, will cause impact on the measuring reading.															
	$= \frac{Vs}{(Rload + Rint)}$															
	The measured value is I $= \frac{10V}{(10\Omega + 0.5\Omega)}$ = 0.952381 A.															
	$\frac{Rint}{(Rload + Rint)} * 100$															
	This error is applicable to not only DC but AC measurement, and the burden voltage, per varied current measuring range, is generally within the range of several hundreds mV.															
DC Current	<table border="1"> <thead> <tr> <th>Range</th> <th>Shunt</th> <th>Burden Voltage</th> </tr> </thead> <tbody> <tr> <td>100 μA</td> <td>100 Ω</td> <td><0.011 V</td> </tr> <tr> <td>1 mA</td> <td>100 Ω</td> <td><0.11 V</td> </tr> <tr> <td>10 mA</td> <td>1 Ω</td> <td><0.04 V</td> </tr> <tr> <td>100 mA</td> <td>1 Ω</td> <td><0.4 V</td> </tr> </tbody> </table>	Range	Shunt	Burden Voltage	100 μ A	100 Ω	<0.011 V	1 mA	100 Ω	<0.11 V	10 mA	1 Ω	<0.04 V	100 mA	1 Ω	<0.4 V
Range	Shunt	Burden Voltage														
100 μ A	100 Ω	<0.011 V														
1 mA	100 Ω	<0.11 V														
10 mA	1 Ω	<0.04 V														
100 mA	1 Ω	<0.4 V														

1 A	0.1 Ω	<0.7 V
3 A	0.1 Ω	<2 V
10 A	10m Ω	<0.5 V

The above table indicates the maximum burden voltage caused by the maximum current within the applicable range.



ADVANCED MEASUREMENT



Advanced Measurement Overview	91
Relative Value Measurement	92
Hold Measurement	94
Trigger Setting.....	98
Automatic/Single Triggering	98
Use External Trigger	99
Set Trigger Delay	101
Filter Setting	104
Digital Filter Overview	104
Digital Filter Setting.....	106
Math Measurement	109
dBm/dB/Watt Measurement	109
Compare Mode.....	119
MX+B Measurement	126
1/X Measurement.....	130
Measure Percent.....	133

Advanced Measurement Overview

Background

Advanced measurement mainly refers to the type of measurement which uses the result obtained by one of the basic measurements: ACV, DCV, ACI, DCI, 2/4W, Diode/Continuity, Frequency/Period, and Temperature.

Advanced Measurement	Basic Measurement					
	AC/DCV	AC/DCI	2/4W	Hz/P	TEMP	►/●))
Relative	•	•	•	•	•	—
Hold	•	•	•	•	•	—
Trigger	•	•	•	•	•	•
Filter	•	•	•	•	•	—
dB	•	—	—	—	—	—
dBm	•	—	—	—	—	—
Compare	•	•	•	•	•	—
MX+B	•	•	•	•	•	—
1/X	•	•	•	•	•	—
Percent	•	•	•	•	•	—



Relative Value Measurement

Applicable to



Background

Relative measurement stores a value, typically the data at the moment, as the reference. The following measurement is shown as the delta between the references. The reference value will be cleared upon exit.

REL, basically, is to subtract a certain value in the following measurement. The value is fixed and remains its effect even user exits and returns back to this function again.

One of the most seen purposes of REL is to eliminate impedance of test lead from measurement. Before operating impedance measurement, short circuit the test lead followed by pressing the [REL] button. For other measurements, press the [REL] button after putting test lead in a null circuit.


Alternatively, user can modify the value by pressing the [REL#] button followed by using the knob or number keys to enter a specified value. Press the [REL] button again to disable null operation.

 
Activate Relative measurement

Press the REL key. The measurement reading at the moment becomes the reference value.



Relative measurement display appears

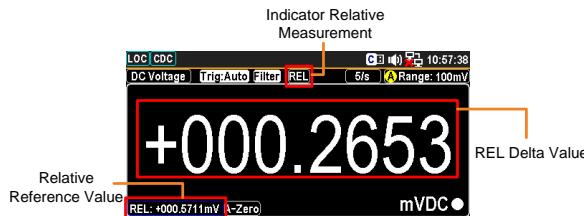

	REL	Indicates Relative value measurement
	REL: +000.5711mV	Shows the stored reference value
	+000.2653	Shows the delta between the current measurement data and the reference value
Manually set the reference value	To set the reference (REL) value manually, press the Shift key followed by the REL key.	 → 
	The setting appears.	
	First use function keys to decide unit value. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value.	 
	Press the F6 (Enter) key or the Knob key until click to confirm the relative value setting.	 
Deactivate Relative measurement	To cancel the Relative measurement, press the REL key again, or simply activate another measurement.	



Hold Measurement

Applicable to



Background


The Hold Measurement function retains the current measurement data and updates it only when it exceeds the set threshold (as a percentage of the retained value).

Activate Hold measurement

Press the Hold key to activate Hold measurement.



Hold measurement display appears

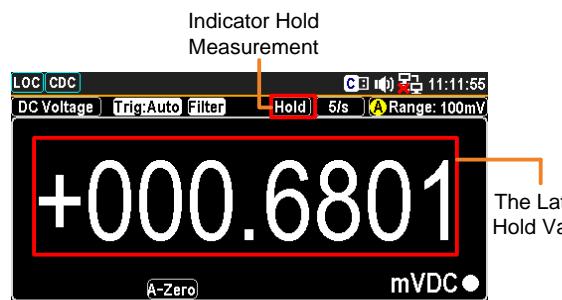

Hold

Indicates Hold measurement

+000.6801 mVDC

Shows the latest hold value

Enter hold settings

Press the Shift + Hold key to activate detailed setting menu of Hold mode as the figure below.



F5 (Percent) key to define threshold



Hold Percent				ESC:Return
0.01%	0.1%	1%	10%	

Press F1 ~ F4 key to select desired hold percent. For example, once the measured value is beyond 10%, which corresponds to the selected 10% option here, the latest hold value will be updated on the main reading.

F4 (BeepVol) key to define beep volume

Press the F4 (BeepVol) key to show the menu of Volume level of Beep as the following.

Beep Volume				ESC:Return
Off	Small	Medium	Large	

Press the F2 - F4 key to select volume level. Once the latest hold value is updated, the beep sounds based on the defined volume. Press the F1 key to set Beep volume off.

F2 (MathDisp) key to show STAT & Math

Press the F2 (MathDisp) key to show the option menu as the figure below shown.

Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.

Math Display				ESC:Return
Off	STAT	Math		

Show STAT result

Background The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.



Operation Press the F2 (STAT) key **STAT** to show the statistical data immediately as the figure below.



View Data -000.9716 mVDC Indicates the latest hold value

Minimum Indicates the minimum data value

Maximum Indicates the maximum data value

Average Indicates the mean (average) value

Peak-Peak Indicates the peak to peak data

STDEV Indicates the standard deviation of the data

Count Indicates the latest counts of hold

Show Math result **Background** The Math page in MathDisp allows you to view mathematical calculations for several parameters.

Operation Press the F3 (Math) key **Math** to show the mathematical analysis instantly as below.



View Data	+000.7098 mVDC	Indicates the latest hold value
Measure:	+000.7326mV	Indicates the originally measured mV value
5 hold values in blue	Counts of hold values	Indicates the latest 5 counts of hold values

F6 (HoldValue) key to restart

Press the F6 (HoldValue) key to simply Restart the hold value.

HoldValue

Function Hold On	MathDisp Off	Method Percent	BeepVol Small	Percent 0.1%	HoldValue ReStart
---------------------	-----------------	-------------------	------------------	-----------------	----------------------



Trigger Setting

Automatic/Single Triggering

Applicable to



Automatic triggering (default)

By default, the RSDM-9060/9061 triggers according to the refresh rate automatically. See the previous page for refresh rate setting details. The figure below shows the screen of Automatic Trigger measurement.

Auto Trigger Mode




Single triggering

Press the TRIG key to Single trigger measurement. See below for details.



Single Trigger Mode

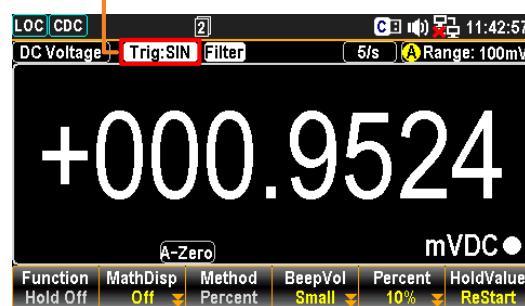


-
- Change mode
- Under Single Trigger mode, press and hold the TRIG button for at least 2 second to return to Auto Trigger mode.
 - Under Auto Trigger mode, simply press the TRIG button to return to Single Trigger mode.
-

Use External Trigger

Background The RSDM-9060/9061 uses the internal trigger by default, for example to count the frequency and the period. Using an external trigger allows customized triggering conditions.

Signal connection Connect the external trigger signal to the Digital I/O port located on the rear panel.

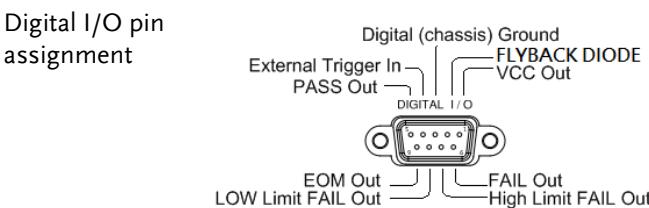

Activate external trigger Press the Shift + TRIG key to activate setting menu of trigger.




Press the F1 (TrigSource) key to enter the trigger source menu followed by pressing the F3 (EXT) to select External Trigger mode.



The “EXT” indicator appears on the display.

External Trigger Mode

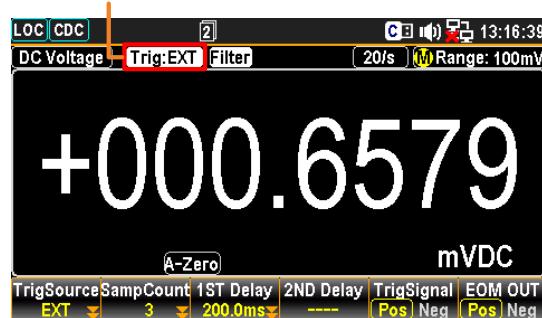


Set sample count

- Under the setting menu of trigger, press the F2 (SampCount) key to enter the ensuing setting of Sample Count. Use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired counts.



- Push the Knob key (Enter) or press **Enter** or the F6 (Enter) key to confirm the input value.

Range: 1 ~ 1,000,000

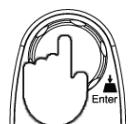

Set Trigger Signal Background

When utilizing external trigger, select either positive or negative terminal as the main trigger source in light of the actual applications.

Press the F5 (TrigSignal) key to toggle between Positive and Negative mode for Trigger Signal.

TrigSignal



Set EOM OUT	Background	It indicates EOM (End Of Measurement) output signal. Select Positive or Negative as the output signal for extension applications when necessary.
-------------	------------	--

Press the F6 (EOM OUT) key to toggle **EOM OUT** between Positive and Negative mode for EOM OUT setting.



Reading indicator	The reading indicator does not flash before triggering (can be on or off). After triggering, the indicator flashes according to the external signal trigger timing.
-------------------	--

Exit external trigger	Press the F1 (TrigSource) key to reenter the TrigSource menu followed by pressing the F1 (Auto) or the F2 (Single) key to switch to other trigger modes.	TrigSource Auto Single
-----------------------	--	---



Alternatively, it is viable to simply click the TRIG button to change to Trig:SIN mode or click and hold the TRIG button for 2 seconds to enter the Trig:Auto mode.



Set Trigger Delay

Background	Trigger delay defines the time delay between triggering and measurement start. The default is set at 200us.
------------	---

Manual trigger delay	1. Press the Shift + TRIG key to activate setting menu of trigger.	Local
----------------------	--	-----------



2. Press the F3 (1ST Delay) key to enter the Trigger Delay (1ST) menu. The Trigger Delay setting appears as the figure below.




The F4 (2ND Delay) key is only available when 2ND measurement is activated.

3. Press the F4 (AutoDelay) key to switch to the manual delay time setting.



4. Use F1 – F3 keys to decide unit value. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value.
5. Push the Knob key (Enter) or press the F6 (Enter) key to confirm the input value.
Range: 0 ~ 3600s, 1us resolution

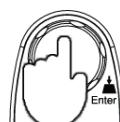

- Auto trigger delay 1. Repeat the steps 1 – 2 of manual trigger delay first, and press the F4 (AutoDelay) key to switch the display as the following.



-
2. Press the ESC key to return to the previous page and have the auto trigger delay setting take effect. The 1ST display will be shown like the following figure.



Filter Setting

Digital Filter Overview

Applicable to



Filter basics


The RSDM-9060/9061 internal digital filter converts the analog input signal into digital format before passing it to internal circuits for processing. The filter affects the amount of noise included in the measurement result.

Filter type

The digital filter averages a specific number of input signal samples to generate one reading. The filter type defines the averaging method. The following diagrams highlight the differences between the Moving and Repeating filter using 4 samples per reading.

Moving
(default)

The Moving filter takes in one new sample and discards the oldest sample per reading. This is the default behavior when the digital filter is not specified, and is recommended for most applications.

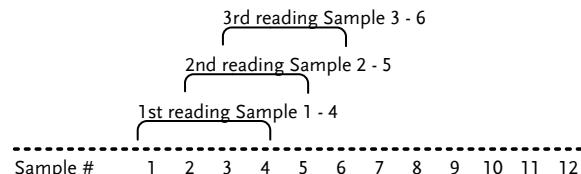


Repeating

The Repeating filter renews a whole group of samples per reading. This method is recommended when using the optional scanner.

	1st reading Sample 1 - 4				2nd reading Sample 5 - 8				3rd reading Sample 9 - 12			
Sample #	1	2	3	4	5	6	7	8	9	10	11	12

Filter count	Filter count defines the number of samples to be averaged per reading. More samples offer low noise but a long delay. Less samples offer high noise but a short delay.	
Range	2 ~ 100	
Filter window	Filter window defines the threshold for when the digital filter data is updated again. When the AD data falls in the range between TH and TL, the filter keeps processing. When the AD data falls out of the range between TH and TL, the filter will restart. When measuring unstable signals, appropriately setting the filter window can improve the measurement speed.	

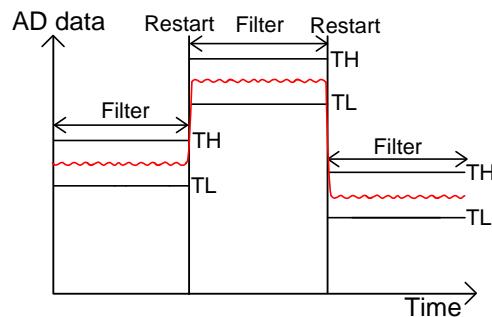

The diagram illustrates the digital filter window mechanism. It shows three horizontal lines representing the filter window boundaries (TH and TL) and the filter output. The filter output is a red wavy line. The diagram shows the filter restarting whenever the red line falls outside the TH and TL boundaries.


TH: Threshold High, TL: Threshold Low



Filter window	Measure:
Formula	Previous Meas*(1-window)< threshold< Previous Meas*(1+window).
	Range:
	Previous Measure + (Range* window)< threshold<Previous Measure + (Range * window)
	There are 5 windows range settings that can be chosen: 10%, 1%, 0.1%, 0.01% and none

Digital Filter Setting

Filter setting	Press the Shift key + Menu (Filter) key. The Filter setting menu shows as the figure below.	
Select display	Press the F1 (Setup) key to toggle between the 1ST and the 2ND measurement to be setup for filter setting.	
	Only when 2ND measurement is enabled, you are able to toggle options here. Otherwise, only the 1ST is available for setup	
Turn on filter	Press the F2 (Filter) key to turn On or Off filter function. The Filter indicator appears on the display.	

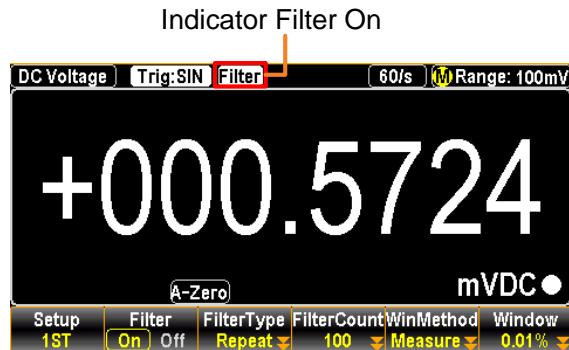

Choose filter type Press the F3 (FilterType) key to enter the subsequent menu. Press the F1 or F2 keys to select desired filter type.



 
Define filter count Press the F4 (FilterCount) key to enter the subsequent menu. Use the Left/Right arrow keys to move cursor and scroll Knob key or press Number keys to enter the desired value.

FilterCount



Press the F6 (Enter) key or the Knob key until click to confirm the filter count settings.

Enter or



Range: 2 ~100



Set filter window method Select the Filter Window Method by clicking the F5 (WinMethod) key. The display changes accordingly as the figure below shown. Press the F1 or F2 keys to choose desired Filter Window Method.

WinMethod




-
- Define filter window Press the F6 (Window) key to enter the subsequent menu. Press the F1 – F5 keys to choose desired Filter Window percentage.



Range 0.01%, 0.1%, 1%, 10%, None

 - Turn off Filter Press the Shift key + the Menu (Filter) key. Press the F2 (Filter) key to turn Off Filter function.
- The Filter indicator will disappear **Filter** from display.
-



Math Measurement

Applicable to



Background

Math measurement runs 6 types of mathematical operations, dBm, dB, Compare, MX+B, 1/X and Percent, based on the other measurement results.

Math Equation

$$\text{dBm} \quad 10 \times \log_{10} (1000 \times V_{\text{reading}}^2 / R_{\text{ref}})$$

$$\text{dB} \quad \text{dBm} - \text{dBm}_{\text{ref}}$$

Compare Checks and updates if measurement data stays between the specified upper (high) and lower (low) limit.

MX+B Multiplies the reading (X) by the factor (M) and adds/subtracts offset (B).

1/X Divides 1 by the reading (X).

Percentage Runs the following equation.

$$\frac{(\text{Reading}_X - \text{Reference})}{\text{Reference}} \times 100\%$$

Reference

dBm/dB/Watt Measurement

Applicable to



Background

Using the ACV or DCV measurement result, the RSDM-9060/9061 calculates the dBm, dB or Watt value based on a reference resistance value in the following way.

Equation

$$\text{dBm} \quad 10 \times \log_{10} (1000 \times V_{\text{reading}}^2 / R_{\text{ref}})$$

$$\text{dB} \quad \text{dBm} - \text{dBm}_{\text{ref}}$$

$$\text{Watt} \quad V_{\text{reading}}^2 / R_{\text{ref}}$$



Parameters	Vreading	Input Voltage, ACV or DCV
	Rref	Reference resistance simulating an output load
	dBmref	Reference dBm value

Measure dBm/Watt

Applicable to




Equation	dBm	$10 \times \log_{10} (1000 \times Vreading^2 / Rref)$
	Watt	$Vreading^2 / Rref$

Parameters	Vreading	Input Voltage, ACV or DCV
	Rref (REF Ω)	Reference resistance simulating an output load

Activate dBm

 Press the Shift key + Math key to activate Math setting menu as the following figure shown.




Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.



Press F3 (dBm) key to enable the dBm function. The screen, after activation, will appear as figure below.

Indicator dBm On

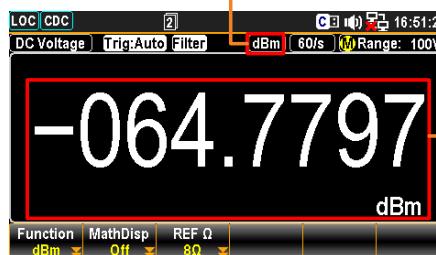

Measured
dBm Value

Select reference resistance (REF Ω) To change the reference resistance, press the F3 (REF Ω) key to enter the setting menu. Scroll the Knob key or press Number keys to enter the desired value of reference resistance.

REF Ω



Enter or

Push the Knob key (Enter) or press the F6 (Enter) key to confirm the input reference resistance.



Resistance List 2, 4, 8, 16, 50, 75, 93, 110, 124, 125, 135, 150, 250, 300, 500, 600, 800, 900, 1000, 1200, 8000

View result in Watt When the reference resistance is less than 50 Ω , it is possible to calculate the watt value. If the reference resistance is greater than 50 Ω , please ignore this step.

To calculate the Watt power, press the **Function** F1 (Function) key followed by clicking **dBm**



Watt result appears



F2 (MathDisp) key Press the F2 (MathDisp) key to show Math to show STAT & the Math Display menu as the figure below shown. Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.



Show STAT result Background

The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.

Operation

Press the F2 (STAT) key **STAT** to show the statistical data immediately as the figure below.



View Data


+00.00000 dBW Indicates the latest dBW value

Minimum

Indicates the minimum data value

Maximum

Indicates the maximum data value

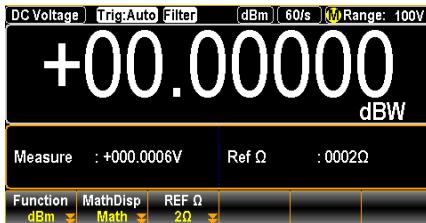Average	Indicates the mean (average) value
Peak-Peak	Indicates the peak to peak data
STDEV	Indicates the standard deviation of the data
Count	Indicates the latest counts of dBm
Show Math result	Background The Math page in MathDisp allows you to view mathematical calculations for several parameters.
Operation	Press the F3 (Math) key Math to show the mathematical analysis instantly as below. 
View Data	+00.00000 dBW Indicates the latest dBW value
Measure:	Indicates the originally measured Voltage value +000.0006V
Ref Ω	Indicates the defined reference Ω value.
Deactivate dBm/dBW measurement	To cancel the dBm/dBW measurement, press the F1 (Function) key followed by clicking F1 (OFF) key to deactivate or simply activate another measurement. Function OFF

Measure dB

Applicable to



Equation	dB	$\text{dBm} - \text{dBmref}$
----------	-------------	------------------------------

	dBm	$10 \times \log_{10} (1000 \times V_{\text{reading}}^2 / R_{\text{ref}})$
--	--------------	---

Parameters	dBmref	Reference dBm value
------------	-----------------	---------------------

Background

dB is, specifically, defined as $[\text{dBm} - \text{dBmref}]$. When the dB measurement is activated, the RSDM-9060/9061 calculates the dBm using the reading at the first moment and stores it as dBmref .

Activate dB

Press the Shift + Math key to activate Math setting menu as the following figure shown.




Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.



Press F2 (dB) key to enable the dB function. The screen, after activation, will appear as figure below.

dB result appears

Indicator dB On

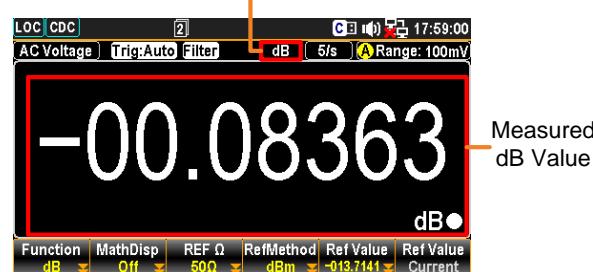


F3 (REF Ω) to select reference resistance

To change the reference resistance, press the F3 (REF Ω) key to enter the setting menu. Scroll the Knob key or press Number keys to enter the desired value of reference resistance.



Push the F6 (Enter) key or the Knob key **Enter** or (Enter) to confirm the input reference resistance.

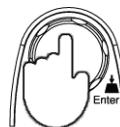


Resistance List

2, 4, 8, 16, 50, 75, 93, 110, 124, 125, 135, 150, 250, 300, 500, 600, 800, 900, 1000, 1200, 8000

F4 (Ref Method) to select dB reference method

Reference method involves the ways to calculate dB value. When dBm option is selected, user can specify a definite dBm value for dB calculation. If selecting Voltage option, system regards the defined voltage value as the Vreading parameter for dBm calculation, thus resulting in different dB value than the previous option.

Press the F4 (RefMethod) key to enter the dB Ref Method menu followed by clicking the F1 (Voltage) or F2 (dBm) key to determine which method of calculation to proceed to.

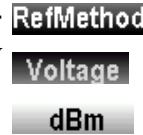


F5 (Ref Value) to define reference value (voltage or dBm)

In order to define either voltage or dBm reference value, both of which are corresponding to the previous F4 (Ref Method) option, press the F5 (Ref Value) to enter the dB Ref Value menu, and use the Left/Right arrow keys to move cursor followed by scrolling the Knob key or pressing Number keys to enter the desired Ref value. Press the F6 (Enter) key or Knob key to confirm the input value.

Ref Value**Enter****Note**

When setting voltage Ref value, press the function keys to promptly define the unit.

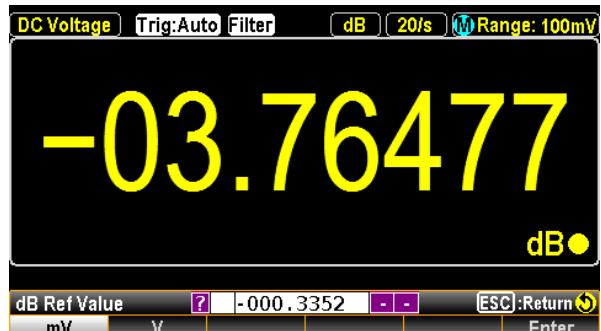

F6 (Ref Value) key to set the dBm reference

Press the F6 (Ref Value_Current) key to instantly make the current dBm value, which is calculated by the current input voltage with the equation, as the Ref dBm (dBm reference).

Ref Value Current

F2 (MathDisp) key to show STAT & Math


MathDisp

Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.



Show STAT result **Background** The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.

Operation Press the F2 (STAT) key **STAT** to show the statistical data immediately as the figure below.

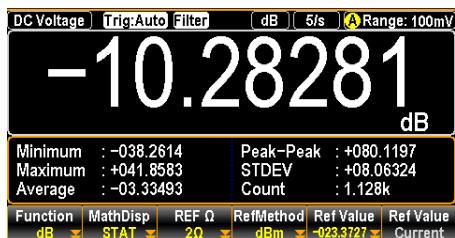


View Data	-10.28281 dB	Indicates the calculated dB value
	Minimum	Indicates the minimum data value
	Maximum	Indicates the maximum data value
	Average	Indicates the mean (average) value
	Peak-Peak	Indicates the peak to peak data
	STDEV	Indicates the standard deviation of the data
	Count	Indicates the latest counts of db

Show Math result **Background** The Math page in MathDisp allows you to view mathematical calculations for several parameters.



Operation Press the F3 (Math) key to show the mathematical analysis instantly as below.

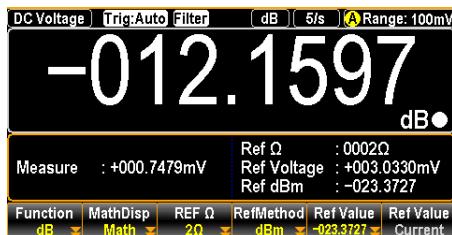

View Data -012.1597 Indicates the calculated dB value

Measure: +000.7479mV Indicates the originally measured m Voltage value

Ref Ω: 0002 Ω Indicates the defined reference resistance value

Ref Voltage: +003.0330mV Indicates the measured reference voltage value

Ref dBm: -023.3727 Indicates the measured reference dBm value

Deactivate dB measurement To cancel the dB measurement, press **Function OFF** the F1 (Function) key followed by clicking F1 (OFF) to deactivate or simply activate another measurement.

Compare Mode

Applicable to



Background

The Compare mode checks and updates if measurement data stays between the specified upper (high) and lower (low) limit.

Activate Compare mode


Press the Shift + Math key to activate Math setting menu as the following figure shown.



Further press the F1 (Function) key to **Function** enter the Math Function menu as the figure shown below.



Press F4 (Compare) key to enable the Compare function. The screen, after activation, will appear as figure below.

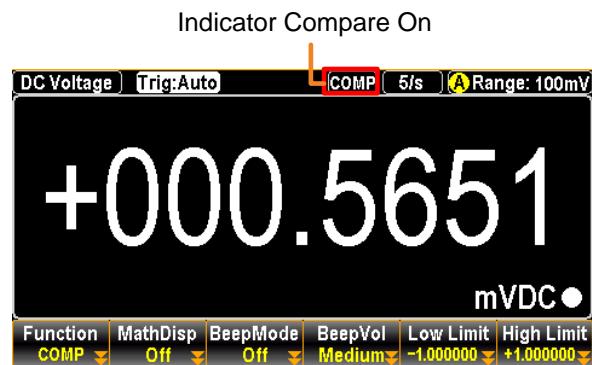


F6 (High Limit) to Press the F6 (High Limit) key to **High Limit** set high limit enter the setting menu.




Comp High Limit	<input checked="" type="checkbox"/>	+100.0000	5 9	ESC:Return ⌂
mV	V			Enter

First use the functions keys to determine the unit, which varies by different measure modes. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number Keys to enter the desired value of high limit.

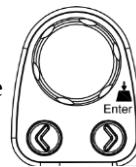

Push the F6 (Enter) key or the Knob key (Enter) to make the setting into effect.

 Enter or



F5 (Low Limit) to Press the F5 (Low Limit) key to enter set low limit


Low Limit

Comp Low Limit	<input checked="" type="checkbox"/>	-6.600000	4 9	ESC:Return ⌂
mV	V			Enter

First use the functions keys to determine the unit, which varies by different measure modes. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number Keys to enter the desired value of low limit.



 Push the F6 (Enter) key or the Knob key **Enter** or (Enter) to make the setting into effect.



F3 (BeepMode) to Press the F3 (BeepMode) key to enter define beep mode the beep mode setting. By enabling beep mode, user can be aware of the latest state promptly by beep voice.

BeepMode

The display shows as the figure below.
Press the F2 (Pass) or F3 (Fail) key to determine the condition of beep alarm.

Pass

or

Fail

Press the F1 (Off) key to disable beep mode.

Off

F4 (BeepVol) to select beep volume

Press the F4 (BeepVol) key to enter the beep volume setting.

BeepVol

Select the intensity of beep volume via pressing F1 – F3 key for desired level as the figure shown below.

Small**Medium****Large**

Compare mode result

When the measured result is within the range of high and low limit, the display shows as the figure below with purely black background indicating the state of "Pass".



However, when measured result is either above or less than the limit range, the display appears as the figure below with boldly red background indicating the state of "Fail".





See the contents below for more details of each state in compare mode

High If the compare result is High, the relative pins of digital I/O port in action are as the follows.

Digital I/O: FAIL Out (Pin 6) and HIGH Limit FAIL Out (Pin 7) are activated.

Low If the compare result is Low, the relative pins of digital I/O port in action are as the follows.


Digital I/O: FAIL Out (Pin 6) and LOW Limit FAIL Out (Pin 8) are activated.

Pass If the compare result is Pass, the relative pin of digital I/O port in action is as the follows.

Digital I/O: PASS Out (Pin 5) is activated.

F2 (MathDisp) key Press the F2 (MathDisp) key to show **MathDisp** to show STAT, the Math Display menu as the figure below shown. Proceed to the F2 (STAT), F3 (Math) or F4 (Math+STAT) display in accord with the following chapters.

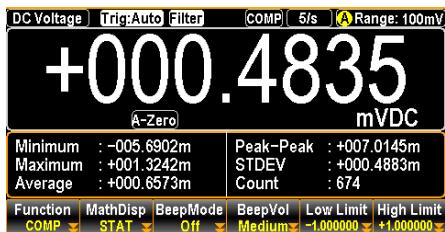

Show STAT result Background	The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.
Operation	Press the F2 (STAT) key STAT to show the statistical data as the figure below.
	
View Data	<p>+000.4835 mVDC Indicates the currently measured mVDC value</p> <p>Minimum Indicates the minimum data value</p> <p>Maximum Indicates the maximum data value</p> <p>Average Indicates the mean (average) value</p> <p>Peak-Peak Indicates the peak to peak data</p> <p>STDEV Indicates the standard deviation of the data</p> <p>Count Indicates the latest counts of compare</p>
Show Math result Background	The Math page in MathDisp allows you to view mathematical calculations for several parameters.



Operation

Press the F3 (Math) key **Math** to show the mathematical analysis as the figure below.



View Data

+000.5625 mVDC Indicates the currently measured mVDC value

Low Limit Indicates the defined low limit

Low Fail Indicates the counts of below the defined low limit

High Limit Indicates the defined high limit


High Fail Indicates the counts of above the defined high limit

Show Math+STAT Background result

The Math+STAT page in MathDisp allows you to view data from both statistical calculations and mathematical analysis.

Operation

Press the F4 (Math+STAT) key **Math+STAT** to show the hybrid page of Math & STAT instantly as figure below.

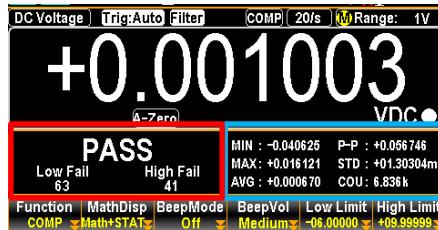
**View Data**

+0.001003 VDC Indicates the currently measured mVDC value

Blue Section It is identical to the contents of STAT display. Refer to the previous chapter for details.

Red Section It is identical to the contents of Math display. Refer to the previous chapter for details.


Compare live-result in MathDisp's “Pass”, “High” or “Low”, will also appear within each mode of MathDisp. See the example below for the “High” result in Math+STAT mode.

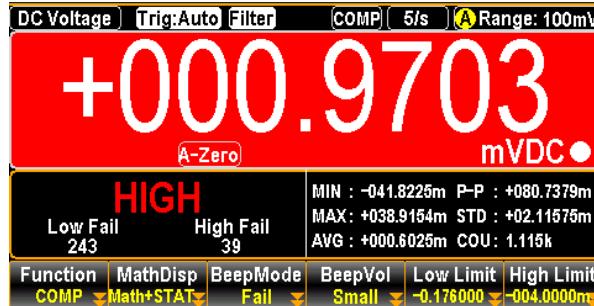

The boldly red background along with the indicator “HIGH” within the display means the compare result is over the range of defined high limit.

Digital I/O

The Compare measurement result comes out from the rear panel Digital I/O terminal.

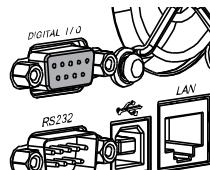

Deactivate Compare measurement

To cancel the Compare measurement, press the F1 (Function) key followed by clicking F1 (OFF) to deactivate or simply activate another measurement.

Function

OFF

MX+B Measurement

Applicable to



Activate MX+B

Press the Shift + Math key to activate Math setting menu as the following figure shown.

Local
Shift → Math



Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.


Function



Press F5 (MX+B) key to enable the MX+B function. The screen, after activation, will appear as figure below.

MX+B


Indicator MX+B On

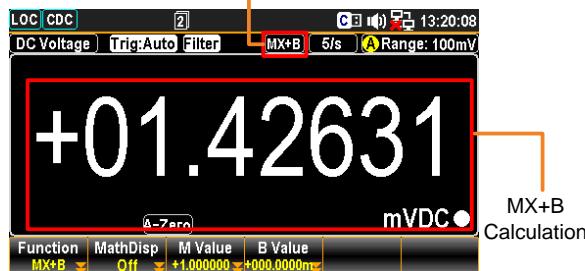

F3 (M Value) key Press the F3 (M Value) key to enter to set the factor M the MX+B M Value menu. First use function keys to decide unit value, which may vary by different measurements. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value. See the figure below.

M Value

Press the F6 (Enter) key or the Knob key until click to confirm the input M value.

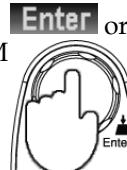


F4 (B Value) key to set the offset B

Press the F4 (B Value) key to enter the setting menu. First use function keys to decide unit value, which may vary by different measurements. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value. See the figure below.

B Value

Press the F6 (Enter) key or the Knob key until click to confirm the input B value.

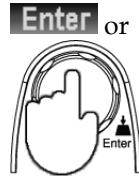


F2 (MathDisp) key Press the F2 (MathDisp) key to show to show STAT & the option menu as the figure below Math shown.

Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.



Show STAT result Background The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.


Operation Press the F2 (STAT) key **STAT** to show the statistical data immediately as the figure below.

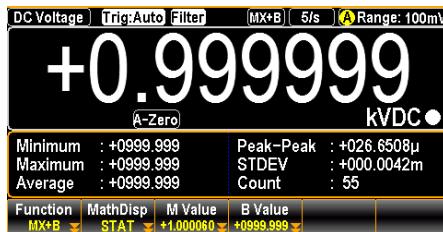

View Data +0.999999 k Indicates the currently VDC MX+B calculating result

Minimum Indicates the minimum data value

Maximum Indicates the maximum data value

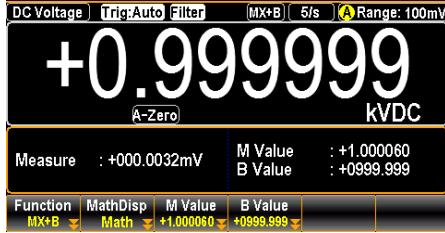Average	Indicates the mean (average) value
Peak-Peak	Indicates the peak to peak data
STDEV	Indicates the standard deviation of the data
Count	Indicates the latest counts of MX+B
Show Math result	The Math page in MathDisp allows you to view mathematical calculations for several parameters.
Operation	Press the F3 (Math) key Math to show the mathematical analysis instantly as below.
	
View Data	+0.999999 k VDC Indicates the currently MX+B calculating result
	Measure: +000.9389mV Indicates the originally measured m Voltage value
M Value	Indicates the defined M value
B Value	Indicates the defined B value



Deactivate MX+B To cancel the MX+B measurement, press the F1 (Function) key followed by clicking F1 (OFF) key to deactivate or simply activate another measurement.

Function **OFF**

1/X Measurement

Applicable to



Activate 1/X

Press the Shift + Math key to activate Math setting menu as the following figure shown.

Local
 Shift → Math
DISP



Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.


Function



Press F6 (More 1/2) key to enter the next page followed by pressing the F1 (1/X) key. The 1/X function will be activated as the figure below.

More 1/2
1/X

Indicator 1/X On

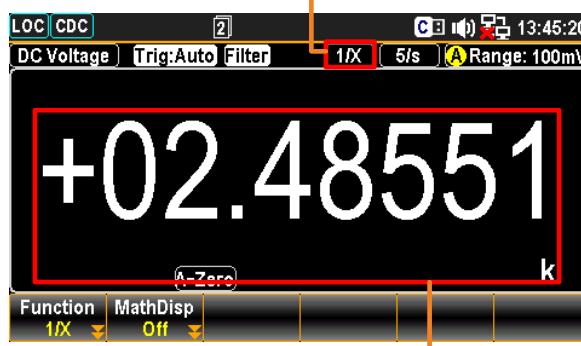

The Measured 1/X Value

F2 (MathDisp) key Press the F2 (MathDisp) key to show to show STAT & the Math Display menu as the figure Math below shown. Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.



Show STAT result Background The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.

Operation Press the F2 (STAT) key **STAT** to show the statistical data as the figure below.




View Data +01.50367 k Indicates the 1/X calculation



Minimum	Indicates the minimum data value
Maximum	Indicates the maximum data value
Average	Indicates the mean (average) value
Peak-Peak	Indicates the peak to peak data
STDEV	Indicates the standard deviation of the data
Count	Indicates the latest counts of $1/X$

Show Math result Background The Math page in MathDisp allows you to view mathematical calculations for several parameters.

Operation Press the F3 (Math) key **Math** to show the mathematical analysis as the figure below.

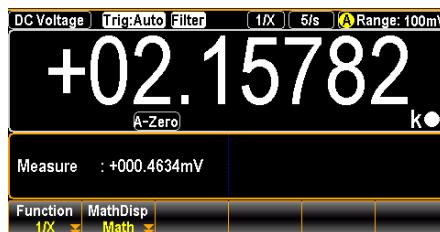

View Data $+02.15782k$ Indicates the $1/X$ calculation

Measure: $+000.4634$ Indicates the originally measured m Voltage value

Deactivate $1/X$ measurement To cancel the $1/X$ measurement, press the F1 (Function) key followed by clicking the F1 (OFF) key to deactivate or simply activate another measurement.

 
Measure Percent

Applicable to



Activate percent

Press the Shift + Math key to activate Math setting menu as the following figure shown.



Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.




Press F6 (More 1/2) key to enter the next page followed by pressing the F2 (Percent) key. Percent function will be activated as the following figure shown.

More 1/2

Percent

Indicator Percent On

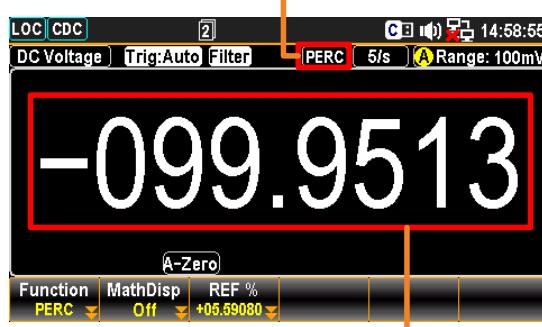


The Measured Percent Value



F3 (REF %) key to Press the F3 (REF %) key to enter the set reference % Percent REF % menu. First use the functions keys to determine the unit, which may vary by different measure modes. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number keys to enter the desired value. See the figure below.

REF %

 Push the Knob key (Enter) or press the F6 (Enter) key to confirm the input value.

Enter or

F2 (MathDisp) key Press the F2 (MathDisp) key to show to show STAT & Math the option menu as the figure below


MathDisp

Proceed to the F2 (STAT) or F3 (Math) display in accord with the following chapters.



Show STAT result Background The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.

Operation Press the F2 (STAT) key **STAT** to show the statistical data immediately as the figure below.

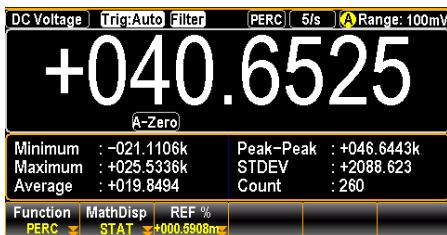

View Data **+040.6525** Indicates the Percent calculation

Minimum Indicates the minimum data value

Maximum Indicates the maximum data value

Average Indicates the mean (average) value

Peak-Peak Indicates the peak to peak data

STDEV Indicates the standard deviation of the data

Count Indicates the latest counts of Percent

Show Math result **Background** The Math page in MathDisp allows you to view mathematical calculations for several parameters.

Operation Press the F3 (Math) key **Math** to show the mathematical analysis instantly as below.




View Data	-017.3037	Indicates the Percent calculation
Measure:	+000.4886mV	Indicates the originally measured m Voltage value
Ref %:	+000.5908m	Indicates the defined reference % value

Deactivate percent measurement To cancel the percent measurement, press the F1 (Function) key followed by clicking F1 (OFF) to deactivate or simply activate another measurement.

Function

OFF

DIGITAL I/O

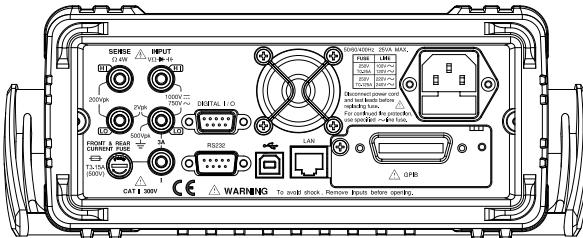

Digital I/O Overview	138
Application: Compare Mode	142
Application: 4094 / User Mode	150
User Mode – IO (Output) Mode	150
User Mode – Switch Mode (LED)	152
User Mode – Switch Mode (Relay)	154
4094 Mode	156
Application: External Trigger	158

Digital I/O Overview

Background

The Digital I/O port is a triple function port. By default (Compare Mode) the port is used with the compare function to output Hi Fail, Lo Fail, Pass, and EOM (end of measurement) signals. In addition, there is also a TRIG IN input pin.

As a secondary function (4094 Mode) and third function (User Mode), the Digital I/O port can have the output state of pins 5 ~ 8 controlled via remote control.

By providing separate VCC power for the terminal, the outputs can also be used as a power source for TTL and CMOS circuits.

Related Commands

DIGItal:INTerface:MODE ?



DIGItal:INTerface:MODE {COMP | 4094 | IO}

DIGItal:INTerface:DATA:OUTPut (For 4094 Mode)

DIGItal:INTerface:DATA:SETUp (For User Mode)

Pin Assignment

 
Connector type: DB-9 female

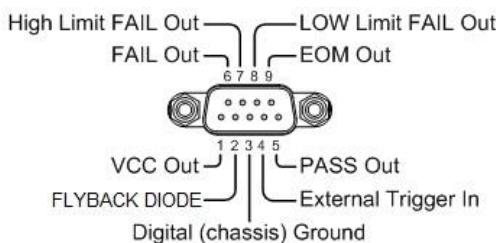

Pin No	Compare Mode	4094 Mode	User Mode
1	VCC Out	VCC Out	VCC Out
2	Flyback Diode	Flyback Diode	Flyback Diode
3	Digital Ground	Digital Ground	Digital Ground
4	External Trigger In	External Trigger In	External Trigger In
5	Pass Out	Clock	OUT1
6	Fail Out	Output Enable	OUT2
7	High Limit Fail Strobe Out		OUT3
8	Low Limit Fail Out	Serial Input	OUT4
9	EOM Out	EOM Out	EOM Out
Pin1	VCC output, 5V. Serves as the unregulated max power source for the external device/logic. The maximum current is 100mA.		
Pin2	Flyback Diode. Connect to VCC or External power source.		
Pin3	Digital (chassis) Ground.		
Pin4	External Trigger Input. Accepts external trigger signals. For using external signals.		



Pins 3-4 output wiring diagram

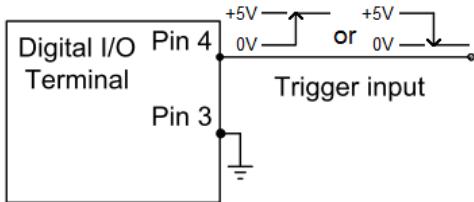


Pin5-8 Pin 5-8 are designed as composite pins, which can be specified by user for diversified functions as follows:

Compare/4094/User Mode


Refer to the page 14 for details of Compare Mode, and the page 20 for details of 4094/User Mode.

Pins 5-8 output wiring diagram

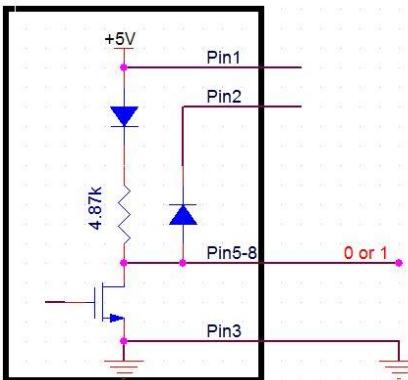

Pin9 EOM (End Of Measurement) signal Output. Activates when compare measurement is over. It is also available in other measurements.

EOM pulse width timing

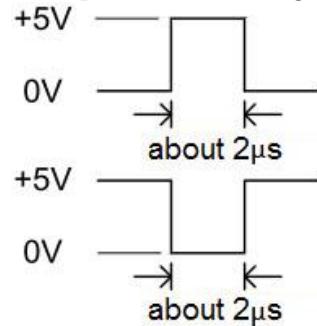

Application: Compare Mode

Applicable to



Background

The Compare Mode outputs the pass/fail results of the Compare function. Each signal is an active low signal. In addition, an active low pulse of approximately $2\mu s$ is output to indicate the end of compare measurement (EOM).

When the input signal exceeds the high threshold or the low threshold, the High Fail or Low Fail pin is pulled low. When the signal stays within the threshold levels, the Pass pin is pulled low.

Pin Assignment

Pin No	Compare Mode	Description
1	VCC Out	Option(Vcc)
2	Flyback Diode	No Use
3	Digital Ground	GND
5	Pass	Out
6	Fail	Out
7	High Limit Fail	Out
8	Low Limit Fail	Out

Activate Compare mode

Press the Shift + Math key to activate Math setting menu as the following figure shown.



Further press the F1 (Function) key to enter the Math Function menu as the figure shown below.

Function

Math Function						ESC : Return
OFF	dB	dBm	Compare	MX+B	More 1/2	

Press F4 (Compare) key to enable the Compare function. The screen, after activation, will appear as figure below.

Compare

Indicator Compare On



F6 (High Limit) to Press the F6 (High Limit) key to enter set high limit **High Limit**



First use the functions keys to determine the unit, which varies by different measure modes. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number Keys to enter the desired value of high limit.



Push the F6 (Enter) key or the Knob key (Enter) to make the setting into effect.




F5 (Low Limit) to Press the F5 (Low Limit) key to enter set low limit **Low Limit**



First use the functions keys to determine the unit, which varies by different measure modes. Then use the Left/Right arrow keys to move cursor and scroll the Knob key or press Number Keys to enter the desired value of low limit.



Push the F6 (Enter) key or the Knob key (Enter) to make the setting into effect.

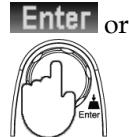

F3 (BeepMode) to Press the F3 (BeepMode) key to enter define beep mode the beep mode setting. By enabling beep mode, user can be aware of the latest state promptly by beep voice.

BeepMode

The display shows as the figure below. Press the F2 (Pass) or F3 (Fail) key to determine the condition of beep alarm.

Pass

or

Fail

Press the F1 (Off) key to disable beep mode.

Off

BeepMode			[ESC]:Return
Off	Pass	Fail	

F4 (BeepVol) to select beep volume

Press the F4 (BeepVol) key to enter the beep volume setting.

BeepVol

Select the intensity of beep volume via pressing F1 – F3 key for desired level as the figure shown below.

Small

or **Medium**

or **Large**


Beep Volume			[ESC]:Return
Small	Medium	Large	

Compare mode result

When the measured result is within the range of high and low limit, the display shows as the figure below with purely black background indicating the state of "Pass".



However, when measured result is either above or less than the limit range, the display appears as the figure below with boldly red background indicating the state of "Fail".

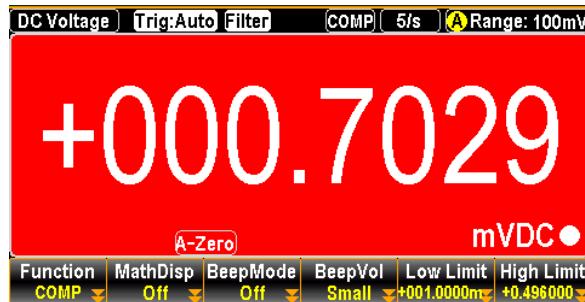

See the contents below for more details of each state in compare mode

High If the compare result is High, the relative pins of digital I/O port in action are as the follows.

Digital I/O: FAIL Out (Pin 6) and HIGH Limit FAIL Out (Pin 7) are activated.

Low If the compare result is Low, the relative pins of digital I/O port in action are as the follows.

Digital I/O: FAIL Out (Pin 6) and LOW Limit FAIL Out (Pin 8) are activated.



Pass If the compare result is Pass, the relative pin of digital I/O port in action is as the follows.


Digital I/O: PASS Out (Pin 5) is activated.

F2 (MathDisp) key Press the F2 (MathDisp) key to show **MathDisp** to show STAT, the Math Display menu as the figure below shown. Proceed to the F2 Math & (STAT), F3 (Math) or F4 Math+STAT (Math+STAT) display in accord with the following chapters.



Show STAT result Background The STAT page in MathDisp allows you to make statistical calculations for several measurements including Minimum, Maximum, Average Peak-Peak, Standard Deviation and Count.

Operation Press the F2 (STAT) key **STAT** to show the statistical data as the figure below.

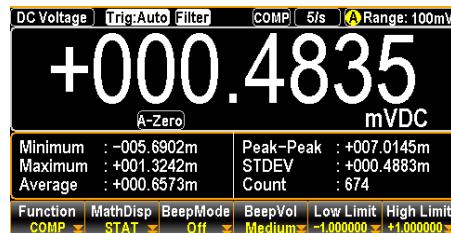

View Data +000.4835 m Indicates the currently measured mVDC value

Minimum Indicates the minimum data value


Maximum Indicates the maximum data value

Average Indicates the mean (average) value

	Peak-Peak	Indicates the peak to peak data
	STDEV	Indicates the standard deviation of the data
	Count	Indicates the latest counts of compare
Show Math result Background		The Math page in MathDisp allows you to view mathematical calculations for several parameters.
Operation		Press the F3 (Math) key Math to show the mathematical analysis as the figure below.
		
View Data	+000.5625m VDC	Indicates the currently measured mVDC value
Low Limit		Indicates the defined low limit
Low Fail		Indicates the counts of below the defined low limit
High Limit		Indicates the defined high limit
High Fail		Indicates the counts of above the defined high limit
Show Math+STAT Background result		The Math+STAT page in MathDisp allows you to view data from both statistical calculations and mathematical analysis.



Operation Press the F4 (Math+STAT) key **Math+STAT** to show the hybrid page of Math & STAT instantly as figure below.

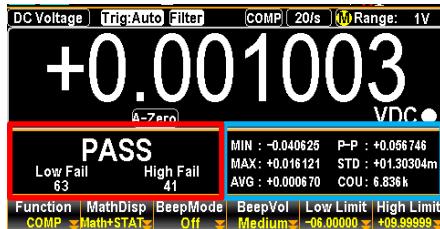


View Data **+0.001003** Indicates the currently measured mVDC value

Blue Section It is identical to the contents of STAT display. Refer to the previous chapter for details.

Red Section It is identical to the contents of Math display. Refer to the previous chapter for details.


Compare live-result in MathDisp The latest state of compare measurement, whether it's "Pass", "High" or "Low", will also appear within each mode of MathDisp. See the example below for the "High" result in Math+STAT mode.

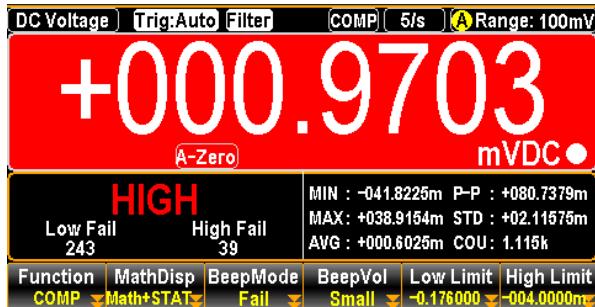

The boldly red background along with the

indicator "HIGH" within the display means the compare result is over the range of defined high limit.

Timing Diagram
for pins 5-8 when
the Compare
function is
activated

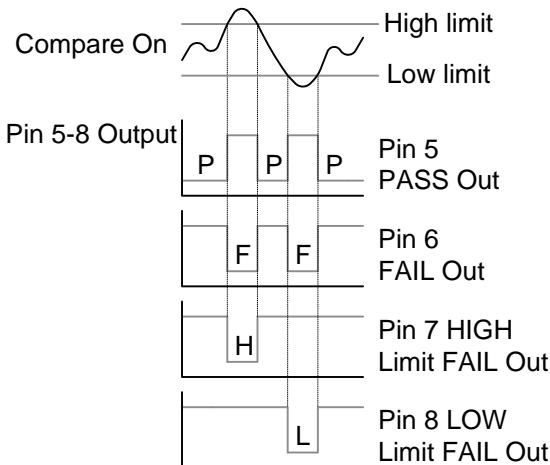

Deactivate
Compare
measurement

To cancel the Compare measurement, press the F1 (Function) key followed by clicking F1 (OFF) to deactivate or simply activate another measurement.

Function

OFF



Application: 4094 / User Mode

Overview

4094 and User mode can only be used when using a remote control interface. Likewise this mode can only be enabled or disabled via remote control. Please see the digital I/O commands on page 259 for full usage details.

User Mode – IO (Output) Mode

Overview

It is the mode utilizing output as general IO (Output) usage with up to 4 pins available for use simultaneously. Refer to the following introductions along with diagrams for more details. Please see the digital I/O commands on page 259 for full usage details.

Related Commands

DIG:INT:MODE IO (switch to IO mode)

DIG:INT:DATA:SET 0,1,1,0

=> OUT1(Pin5) : +0V

OUT2(Pin6) : +5V


OUT3(Pin7) : +5V

OUT4(Pin8) : +0V

Pin Assignment	Pin No	User Mode	Description
	1	VCC Out	Option(Vcc:+5V)
	2	Flyback Diode	No Use
	3	Digital Ground	GND
	5	OUT1	Use
	6	OUT2	Use
	7	OUT3	Use
	8	OUT4	Use


Pin Diagram

* Use the built-in power supply

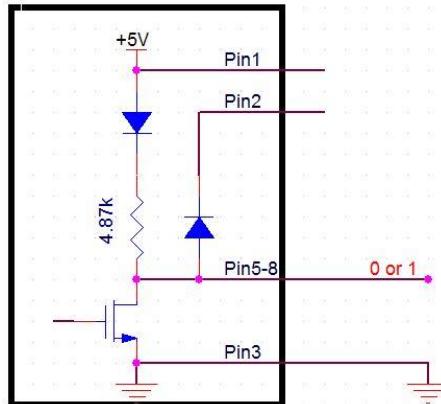

⚠ Note: Pin1 and Pin2 Not in use

* Use in conjunction with the logic gate

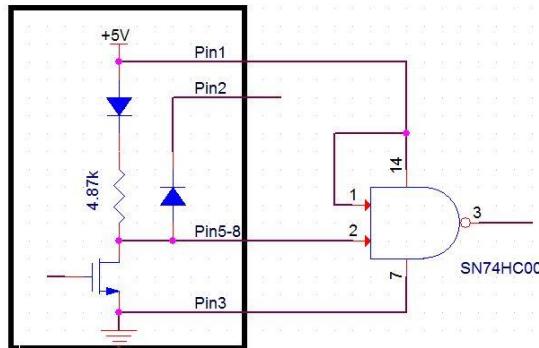

⚠ Note: Pin2 Not in use




User Mode – Switch Mode (LED)

Overview	It is the mode driving LED as status display for user with up to 4 pins available for use simultaneously. Refer to the following introductions along with diagrams for more details. Please see the digital I/O commands on page 259 for full usage details.		
Related Commands	<p>DIG:INT:MODE IO (switch to IO mode) DIG:INT:DATA:SET 1,0,0,1 => OUT1(Pin5) : LED OFF OUT2(Pin6) : LED ON OUT3(Pin7) : LED ON OUT4(Pin8) : LED OFF</p>		
<hr/>			
Pin Assignment	Pin No	User Mode	Description
	1	VCC Out	Option(Vcc:+5V)
	2	Flyback Diode	No Use
	3	Digital Ground	Option(GND)
	5	OUT1	Use
	6	OUT2	Use
	7	OUT3	Use
	8	OUT4	Use


Pin Diagram

* Use the built-in power supply

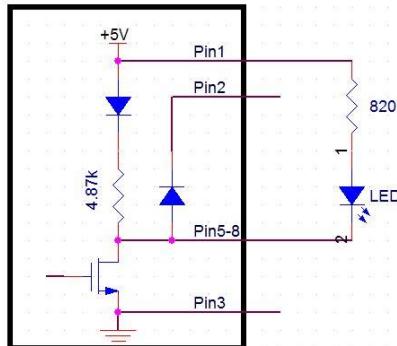

⚠ Note: Pin2 and Pin3 Not in use

* Use the external power

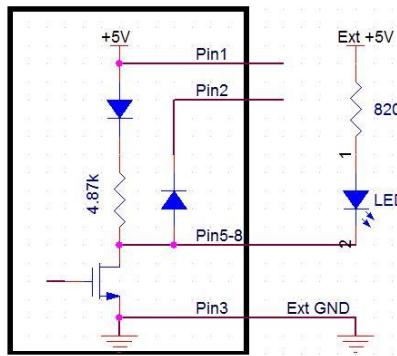

⚠ Note: Pin1 and Pin2 Not in use



User Mode – Switch Mode (Relay)

Overview

It is the mode driving Relay to control external circuit with up to 4 pins available for use simultaneously. Refer to the following introductions along with diagrams for more details. Please see the digital I/O commands on page 259 for full usage details.

Related Commands

DIG:INT:MODE IO (switch to IO mode)

DIG:INT:DATA:SET 1,0,1,0

=> OUT1(Pin5) : RELAY OFF

OUT2(Pin6) : RELAY ON


OUT3(Pin7) : RELAY OFF

OUT4(Pin8) : RELAY ON

Pin Assignment	Pin No	User Mode	Description
	1	VCC Out	Option(Vcc:+5V)
	2	Flyback Diode	Use (connect to Pin1 or Ext Vcc)
	3	Digital Ground	GND
	5	OUT1	Use
	6	OUT2	Use
	7	OUT3	Use
	8	OUT4	Use


Pin Diagram

* Use the built-in power supply which provides the power of maximum 100mA

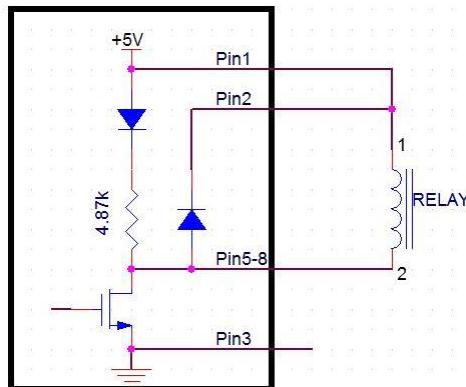

⚠ Note: Pin3 Not in use

* Use the external power (+5~24V) (Maximum Ids of each channel: 400mA)

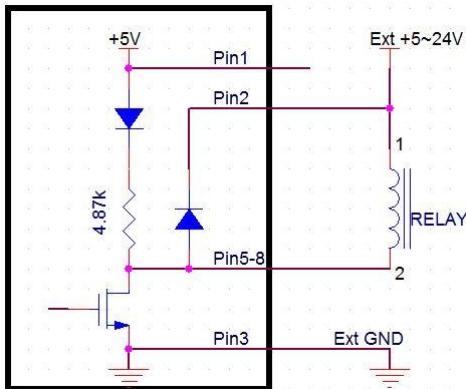

⚠ Note: Connect Pin2 to Ext Vcc



4094 Mode

Overview

It is the mode for IO expansion via converting serial data into parallel data. Up to 8 pins are available simultaneously when single 4094 is in operation, whereas it rises to the maximum of 16 pins available simultaneously if putting two 4094 in series. Refer to the following introductions along with diagrams for more details. Please see the digital I/O commands on page 259 for full usage details.

Related Commands

DIG:INT:MODE 4094 (switch to 4094 mode)

4094 x 1(8 Pin)

DIG:INT:DATA:OUTP 10 , 1

=> 4094 Output(Out1~Out8) : 01010000

4094 x 2(16 Pin)

DIG:INT:DATA:OUTP 22,0

DIG:INT:DATA:OUTP 88,1

=> 4094 Output(Out1~Out8) : 01101000

(Out9~Out16): 00011010




Note: 0=> output is Low (+0V); 1=> output is High (+5V)

Pin Assignment	Pin No	4094 Mode	Description
	1	VCC Out	Option(Vcc:+5V)
	2	Flyback Diode	Option (connect to Pin1)
	3	Digital Ground	GND
	5	Clock	Use
	6	Output Enable	Option (connect to Vcc when not in use)
	7	Strobe	Use

8 Serial Input Use


Pin Diagram

* Use the built-in power supply

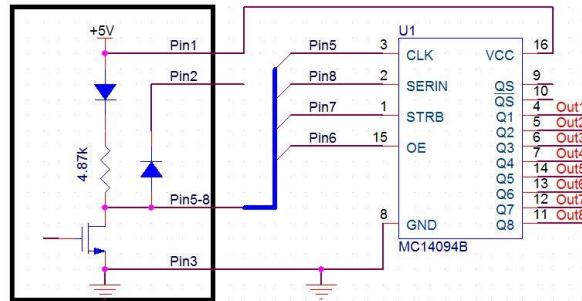


Note: Pin2 Not in use

* Use the external power

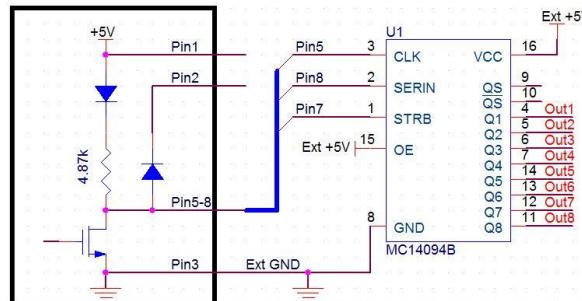

Note: Pin1 and Pin2 Not in use

* Method of series

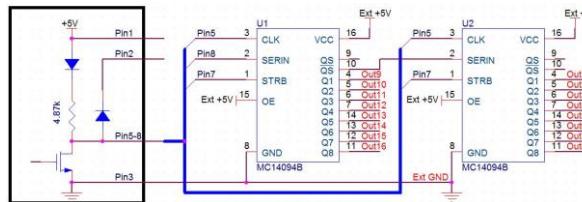

Note: Pin1 and Pin2 Not in use




Application: External Trigger

Background

The external trigger uses the digital I/O pin for manual triggering of the RSDM-9060/9061. To trigger the RSDM-9060/9061 a pulse of $\geq 10\mu\text{s}$ is needed.


The READ? command can also be used to externally trigger the RSDM-9060/9061 when the RSDM-9060/9061 is in the external trigger mode. See page xxx for details.

Signal connection Connect the external trigger signal to the Digital I/O port located on the rear panel.

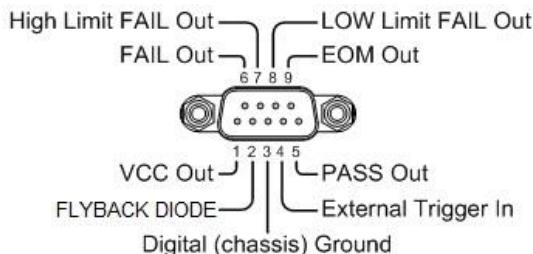

Pin4 External Trigger Input pin

Connection

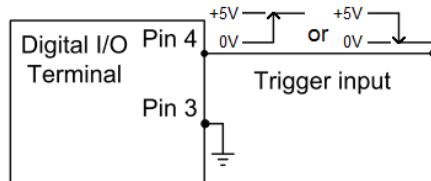

Activate external trigger

Press the Shift + TRIG key to activate setting menu of trigger.



TrigSource	SampCount	1ST Delay	2ND Delay	TrigSignal	EOM OUT
Auto	3	200.0ms	----	Pos Neg	Pos Neg


Press the F1 (TrigSource) key to enter the trigger source menu followed by pressing the F3 (EXT) to select External Trigger mode.

TrigSource

TrigSource			ESC :Return
Auto	Single	EXT	


The “EXT” indicator appears on the display.

External Trigger Mode

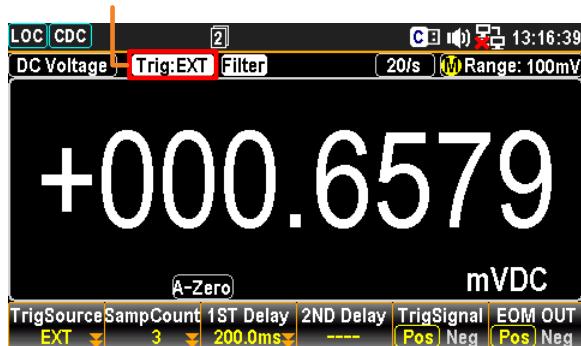

Reading indicator The reading indicator does not flash before triggering (can be on or off). After triggering, the indicator flashes according to the external signal trigger timing.

 Exit external trigger Press the Shift key followed by the TRIG key. The EXT indicator disappears and the trigger goes back to internal mode.



SYSTEM & FIRMWARE

View System Info.....	161
Firmware Update.....	162



View System Info

Background


View system information including Vendor, Model Name, Serial Number, Master Firmware and Slave Firmware.

Step

- Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Security&Info - SystemInfo field.

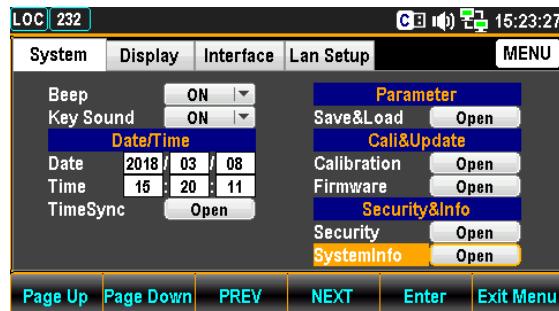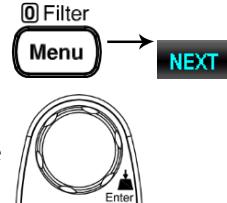

 - Press the F5 (Enter) key or Knob key **Enter** to enter the System Information where all the critical contents are exposed for check.




Firmware Update

Background

This section is for updating the latest firmware.

Step

1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Cali&Update - Firmware field.

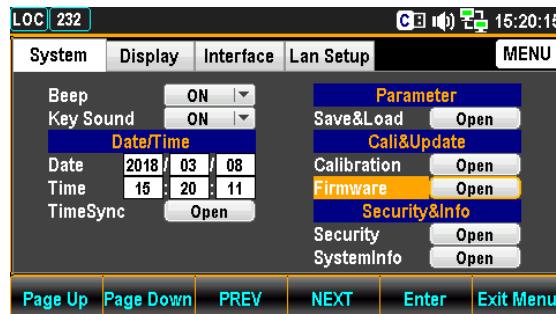

Press the F5 (Enter) key or Knob key to enter the Firmware Update menu.

Enter



Firmware Update Process

Prior to update, make sure if the required firmware file is stored within the flash drive plugged into the USB port on the front panel. Also, user can check the current Master and Slave firmware version respectively in this menu.



Note Prior to update, please rename the downloaded firmware files as below:

Master file: M_IMAGE.bin

Slave file: S_IMAGE.bin

1. Press the F5 (Enter) key or Knob key first, the qualified firmware version will show then.



Note If flash drive has no update files, it will show as the figure below.



2. Press the NEXT key or scroll Knob key to move to the Update followed by pressing the F5 (Enter) key or Knob key to Start update.



MENU SETTING

Configure System	166
Beep Setting.....	166
Key Sound Setting.....	167
Date Setting	168
Time Setting.....	169
TimeSync Setting	171
Save and Load Setting	172
Calibration Setting	179
Firmware Update	183
Security Setting	185
View System Info	187
Configure Display.....	189
Brightness Setting.....	189
Auto Off Setting	190
Auto Off Time Setting.....	192
1ST Color Setting	194
2ND Color Setting	196
Math Color Setting.....	198
Display Mode Setting	200
Anti Aliasing Setting	205
Additional Info Setting	207
Language Setting	209




Configure System


Beep Setting

Background Enable or Disable Beep Sound.


- Step 1. Press the Menu key, the System configuration menu appears.

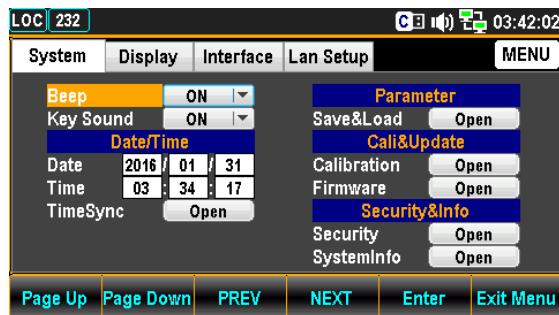


2. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.

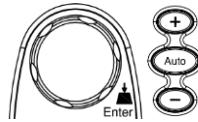


Enter

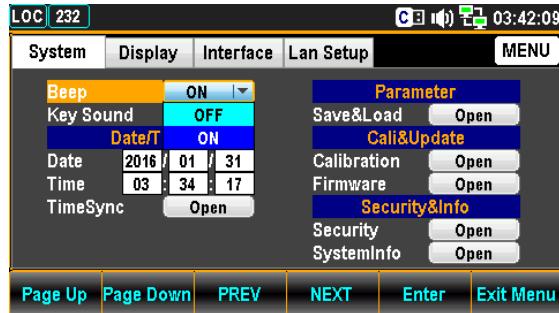


3. Press the F5 (Enter) key or Knob key to select the ON option.

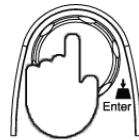
Enter

Key Sound Setting

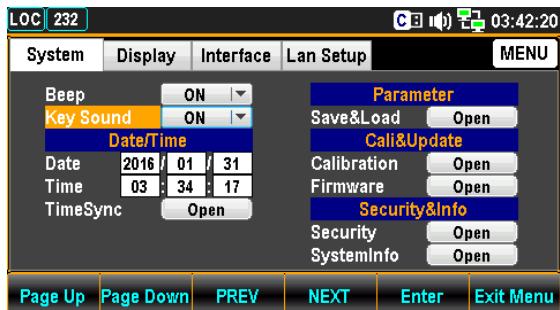Background	Enable or Disable Key Sound.
Step	<p>1. Press the Menu key, the System configuration menu appears. And then press the NEXT key repeatedly or scroll the Knob key to move to the Key Sound field.</p> <div style="display: flex; align-items: center;"> Menu NEXT </div> <div style="display: flex; align-items: center; margin-top: 10px;">  Enter </div> <div style="margin-top: 10px;">  </div>


2. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the On option.

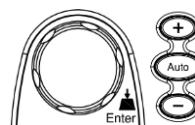Enter

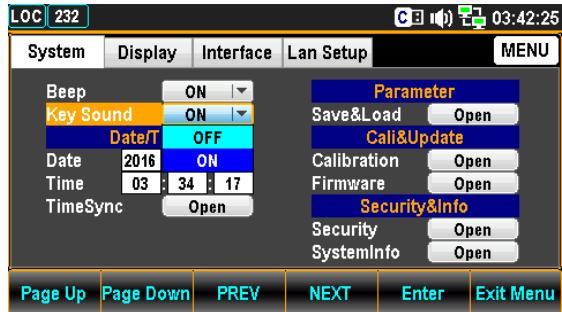

3. Press the F5 (Enter) key or Knob key to select the ON option for Key Sound.



Enter

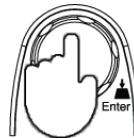



Date Setting

Background Manually adjust date for system or automatically set date via TimeSync setting.

- Step** 1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Date/Time - Date field.

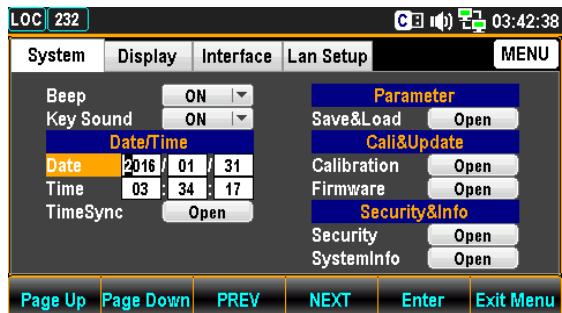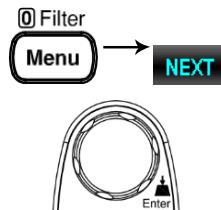

2. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define year of Date. Also, you can press Number keys to directly input a specific digit.

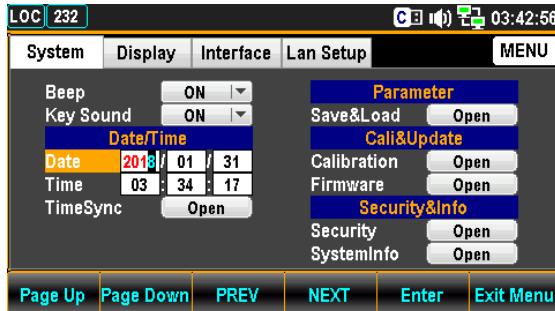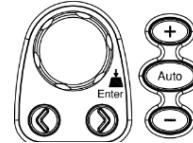

3. Press the F5 (Enter) key or Knob key to confirm the input digit for year of Date.

Enter

 
 



4. Repeat steps 2 to 3 for month and day.

Time Setting



Background Manually adjust time for system or automatically set time via TimeSync setting.

- Step** 1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Date/Time - Time field.



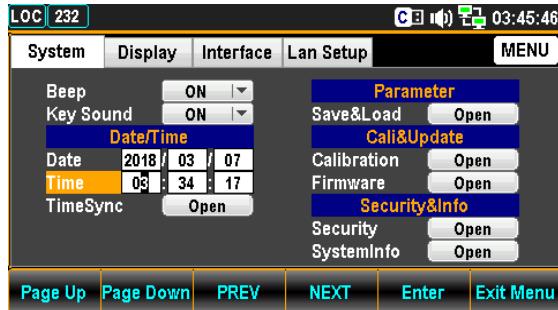

2. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define hour of Time. Also, you can press Number keys to directly input a specific digit.

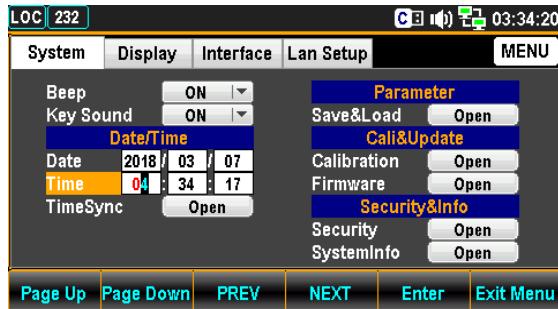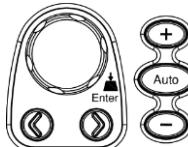



3. Press the F5 (Enter) key or Knob key to confirm the input digit for hour of Time.





4. Repeat steps 2 to 3 for minute and second.

TimeSync Setting

  Background TimeSync is only available when connecting to internet with appropriate network setting.

 - Step**
1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Date/Time - TimeSync field.
- 
- 

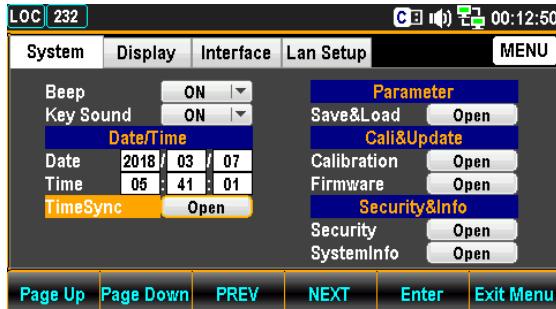

2. Press the F5 (Enter) key or Knob key to enter the Internet Time Sync menu.
- 





Internet Time Synchronize	Enable Synchronize	Enable or disable time sync Check / Uncheck
	Synchronize Server	Choose remote server for time sync time.nust.gov / time-nw.nist.gov The 2nd server is available for user customization. Refer to page 154 for SCPI setting.
	Synchronize Now	Retrieve the currently standard time from the remote sever.
	Synchronize Time	Define an interval to retrieve the currently standard time from the remote sever.
		7 Days / 14 Days / 30 Days
	Set the time zone	Set UTC (Coordinated Universal Time) hour / minute
	Last Update Time is	Display the currently standard time.

Save and Load Setting

Background	The RSDM-906X can save up to 5 instrument settings. The settings can save the state, function, I/O and range. The Recall function enables saved settings or default settings to be recalled at the next power up or immediately.
------------	--

Step

1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Parameter – Save&Load field.

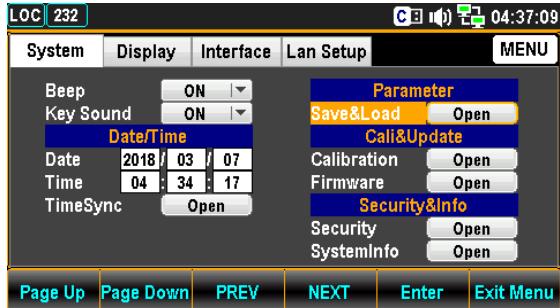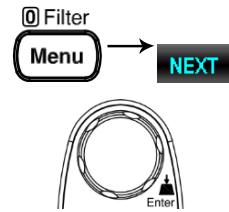

2. Press the F5 (Enter) key or Knob key to enter the Parameter Save&Load menu.




Parameter Save & Save Load

Select a Group



1. Press the F5 (Enter) key or Knob key to open the dropdown menu.

Enter

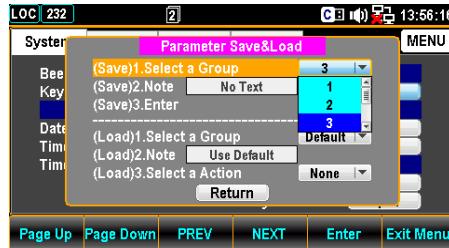

2. Scroll the Knob key or pressing +/- keys followed by pressing the F5 (Enter) key or Knob key to confirm the group selection.

Enter

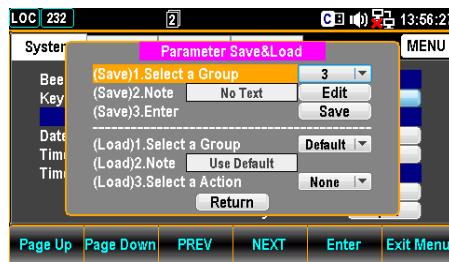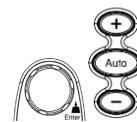

Note

1. Press the F5 (Enter) key or Knob key to open the KeyBoard page.

Enter

 




2. Press the F2 (Backspace) key **Backspace** to clear default words.



3. Use the Left/Right and +/- keys or scroll the Knob key to move the cursor to desired word followed by pressing the F5 (Input) key or Knob key to input the word.




Input



4. Press the F4 (OK) or the Knob key to confirm the input words.

OK

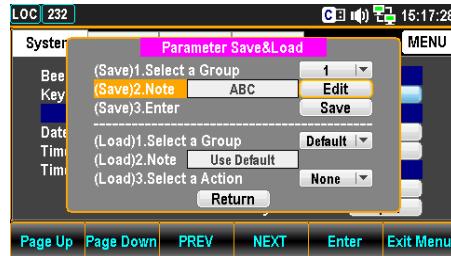

Enter

5. Press the F5 (Enter) key or Knob key to saved the input words.

Enter




Load


Select a Group

1. Press the F5 (Enter) key or Knob key to open the dropdown menu.


Enter

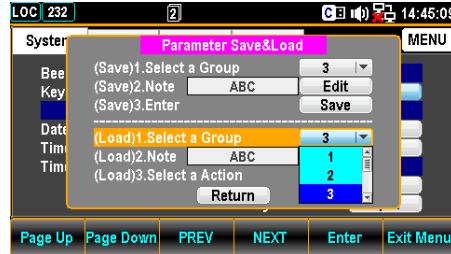

 2. Scroll the Knob key or press +/- keys followed by pressing the F5 (Enter) key or Knob key to confirm the group selection.




Enter

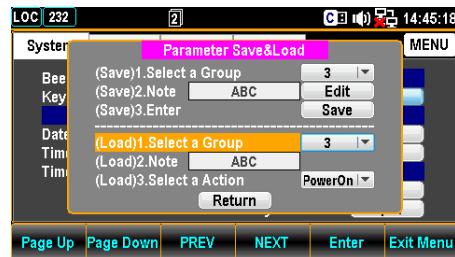

Note

1. The currently selected group name appears in the Note field.

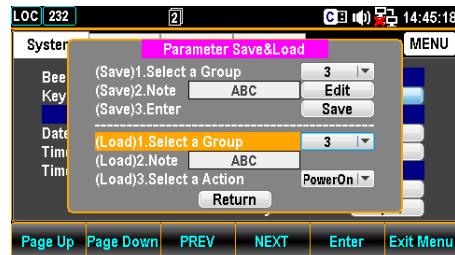


Select a Action


1. Press the F5 (Enter) key or Knob key to open the dropdown menu.




Enter

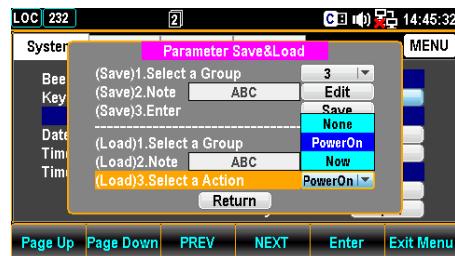

2. Scroll the Knob key or press +/- keys followed by pressing the F5 (Enter) key or Knob key to confirm the action selection.

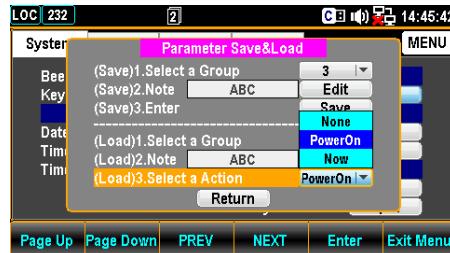Enter


3. Press the F5 (Enter) key or Knob key to confirm the action selection.

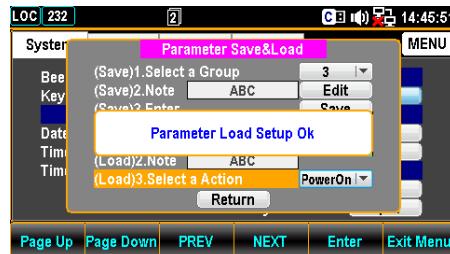

Parameter None: no recall action

Power On: recall at next power up

Now: recall instantly



Calibration Setting

Background

This section mainly provides several calibrations for frequency, DC gain and DMM. Note that only the certified technician can operate the calibration procedure. Refer to the qualified personnel for more details when necessary.

Step

1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Cali&Update - Calibration field.

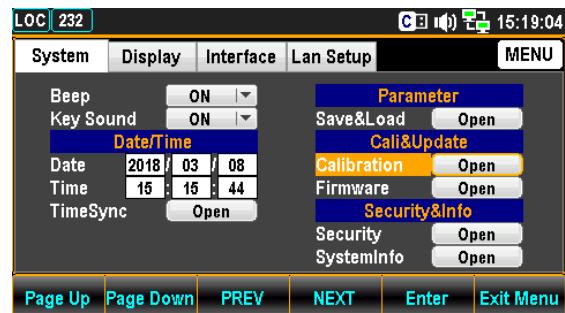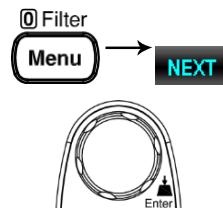

2. Press the F5 (Enter) key or Knob key to enter the Calibration menu.





Frequency Calibration

Frequency Compensate Enable or disable frequency compensation (the value indicates the compensation coefficient; default: 1.000017)

Factory calibration value)

Check the box to enable:

$$\text{Frequency} = \text{Original Frequency} \times \text{Compensate Coefficient}$$

Uncheck the box to disable:

$$\text{Frequency} = \text{Original Frequency}$$

FREQ Cali Mathod Select either Auto or Manual frequency cali method. When Manual is opted, input a frequency compensation coefficient directly.

1. Select Manual mode.



2. Input a compensation coefficient.



3. Use the Left/Right keys to move the cursor followed by pressing the F5 (Enter) key to save the frequency compensation coefficient. The value changes as the figure shown below.



Please Input Start the frequency compensation 1kHz Source coefficient calculation and connect the 1k Hz standard source to the Input HI and LO terminals (only available when Auto mode is opted).



 **Note** Please regard the 1k Hz standard source as the baseline for frequency compensation coefficient calculation. The accuracy of value after compensation is relevant to the connected 1k Hz standard source. For instance, if the accuracy of 1k Hz standard source is +5ppm, the value after compensation will be +5ppm plus the accuracy of +1ppm.

DC Gain Calibration	DC Gain Calibration	Click “Start” to execute DC Gain Calibration, which is an internally self-calibration function that does Not require external signal source. It corrects the gain of internal amplifier, though it is not necessary for general conditions unless the significant change in the gain of internal amplifier. It is suggested performing this calibration one time monthly.
DMM Calibration	DMM Password	Input the password into the field. Default: 12345678
	DMM Start Calibration	Click “Start” to perform the DMM Calibration.

 **Note** The calibration procedure can be only executed by the certified technician in accordance with the standard instruments. Refer to the qualified personnel for details.


 
 
Firmware Update

Background

This section is for updating the latest firmware.


Step

- Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Cali&Update - Firmware field.

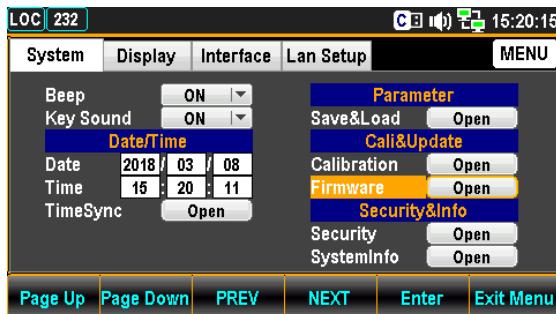

- Press the F5 (Enter) key or Knob key to enter the Firmware Update menu.

Enter

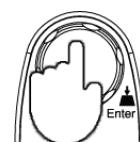

Firmware Update Process

Prior to update, make sure if the required firmware file is stored within the flash drive plugged into the USB port on the front panel. Also, user can check the current Master and Slave firmware version respectively in this menu.


1. Press the F5 (Enter) key or Knob key first, the qualified firmware version will show then.



Note: If flash drive has no update files, it will show as the figure below.





2. Press the NEXT key or scroll Knob key to move to the Update followed by pressing the F5 (Enter) key or Knob key to Start update.

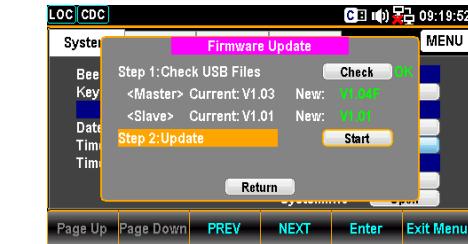


Security Setting

Background This section is to change the password and enable or disable Lan password.


 
- Step**
1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Security&Info – Security field.

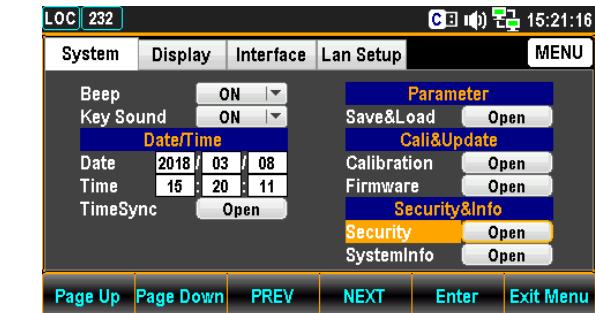


2. Press the F5 (Enter) key or Knob key to enter the Please Input Password page.

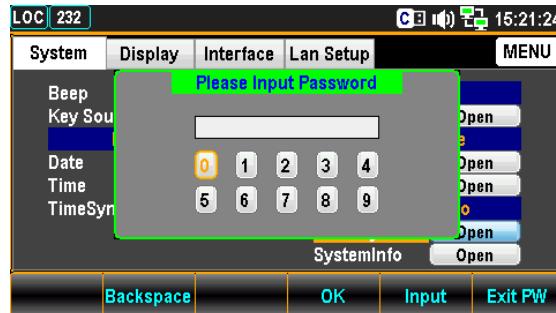Enter

3. Use the Left/Right and +/- keys or scroll the Knob key to move the cursor followed by pressing the F5 (Input) key or the Knob key to input the password.

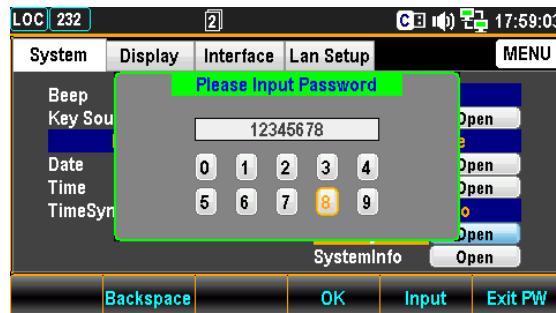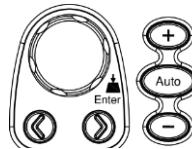Input

 4. Press the F4 (OK) key or Knob key to enter the Security page.

OK




Security	Lan Password Enable	Enable or disable password requirement for Lan web and telnet Control.
		Check / Uncheck
	Old Password	Enter the old password
	New Password	Enter the new password
	Confirm Password	Enter the new password again
	Modify Password	Change password by clicking Start

View System Info

Background	View system information including Vendor, Model Name, Serial Number, Master Firmware and Slave Firmware.
Step	<p>1. Press the Menu key, the System configuration menu appears. And press the NEXT key repeatedly or scroll the Knob key to move to the Security&Info – SystemInfo field.</p>



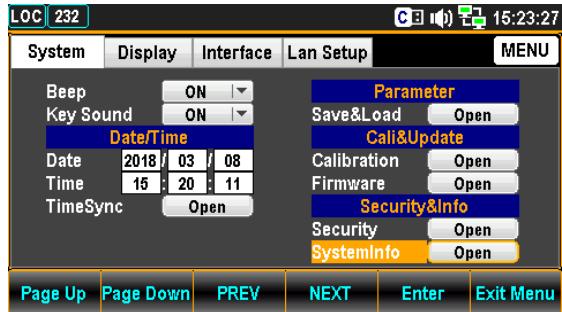

2. Press the F5 (Enter) key or Knob key to enter the System Information where all the critical contents are exposed for check.




Enter





Configure Display

Brightness Setting

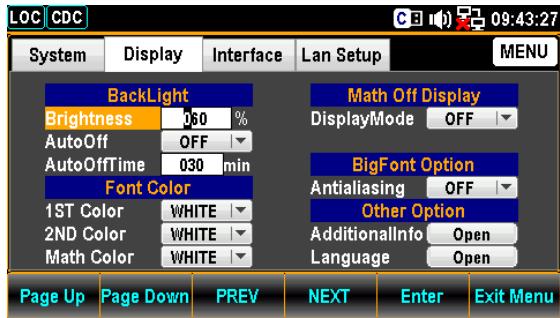Background	Backlight brightness adjustment
Step	<p>1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.</p> <p>0 Filter</p> <p>Menu → Page Down</p>  <p>LOC CDC 09:43:27</p> <p>System Display Interface Lan Setup MENU</p> <p>BackLight</p> <p>Brightness 50 %</p> <p>AutoOff OFF</p> <p>AutoOffTime 030 min</p> <p>Font Color</p> <p>1ST Color WHITE</p> <p>2ND Color WHITE</p> <p>Math Color WHITE</p> <p>Math Off Display</p> <p>DisplayMode OFF</p> <p>BigFont Option</p> <p>Antialiasing OFF</p> <p>Other Option</p> <p>AdditionalInfo Open</p> <p>Language Open</p> <p>Page Up Page Down PREV NEXT Enter Exit Menu</p>

2. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing + / - keys to define digit. Also, you can press Number keys to directly input a specific digit.

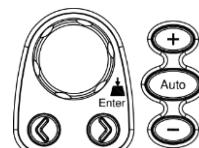

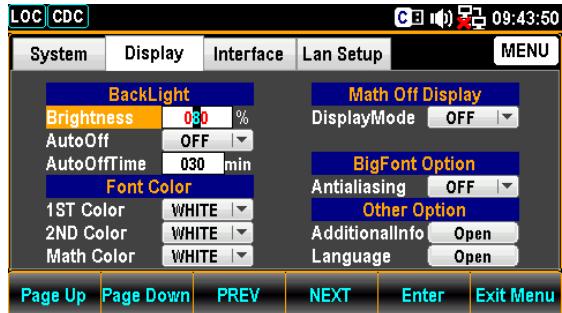


3. Press the F5 (Enter) key or Knob key to confirm the input digit for backlight brightness.



Auto Off Setting

Background Enable or disable automatic brightness adjustment

- Step
1. Press the Menu key followed by pressing the → **Page Down** key repeatedly until the Display configuration menu appears.

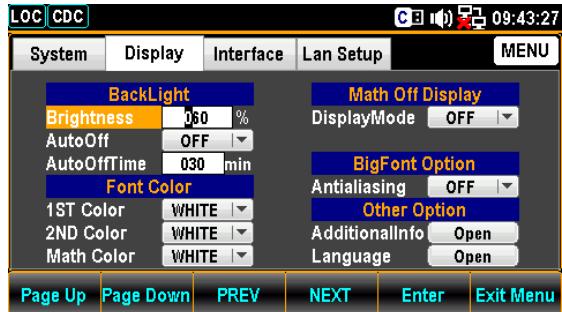


2. Press the NEXT key repeatedly or scroll the Knob key to move to the BackLight - AutoOff field.



LOC CDC 09:45:00

System		Display		Interface		Lan Setup		MENU	
BackLight									
Brightness	070 %								
AutoOff	OFF								
AutoOffTime	030 min								
Font Color									
1ST Color	WHITE								
2ND Color	WHITE								
Math Color	WHITE								
Page Up		Page Down		PREV		NEXT		Enter	
Exit Menu									

3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select the ON option.

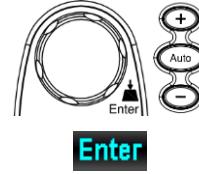


Enter

LOC CDC 09:45:09

System		Display		Interface		Lan Setup		MENU	
BackLight									
Brightness	070 %								
AutoOff	ON								
AutoOffTime	OFF								
Font C									
1ST Color	WHITE								
2ND Color	WHITE								
Math Color	WHITE								
Page Up		Page Down		PREV		NEXT		Enter	
Exit Menu									

4. Press the F5 (Enter) key or Knob key to confirm the ON option for AutoOff.

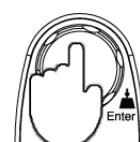

Enter

Auto Off Time Setting

Background

Set the duration before automatic brightness adjustment. When the machine has been idle for the set duration, the screen will change to automatic brightness adjustment.



Note

Auto Off Time will be activated only when Auto Off option is turned ON.


Step

1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

① Filter


Menu


Page Down

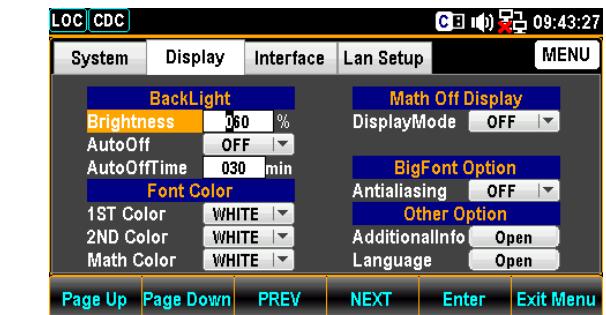



2. Press the NEXT key repeatedly or scroll the Knob key to move to the BackLight - AutoOffTime field.

 NEXT




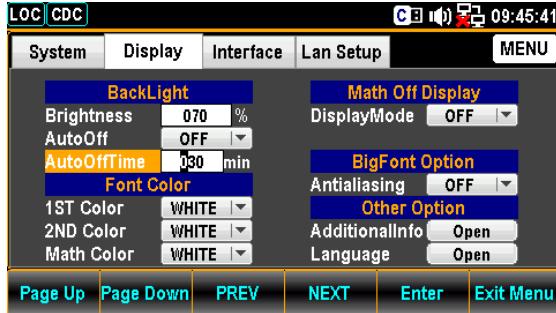

3. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define minutes. Also, you can press Number keys to directly input a specific minutes.

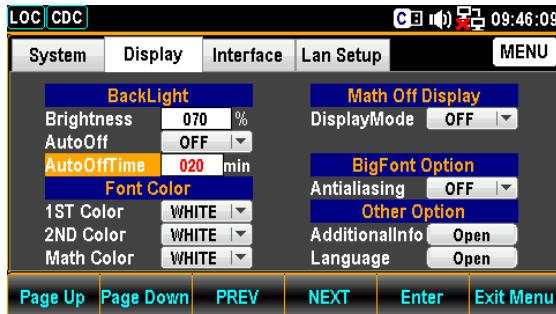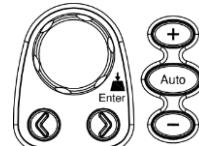

 4. Press the F5 (Enter) key or Knob key to confirm the input minutes for Auto Off Time.




Enter


1ST Color Setting

Background Set the theme color of 1ST display


- Step 1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

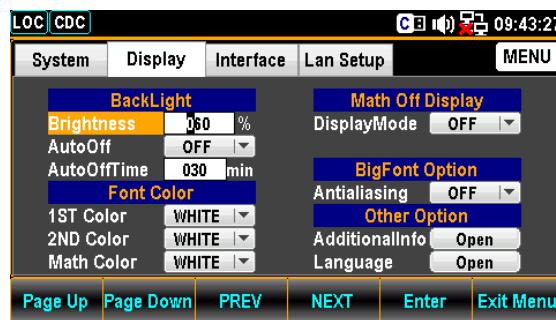


2. Press the NEXT key repeatedly or scroll the Knob key to move to the Font Color - 1ST Color field.

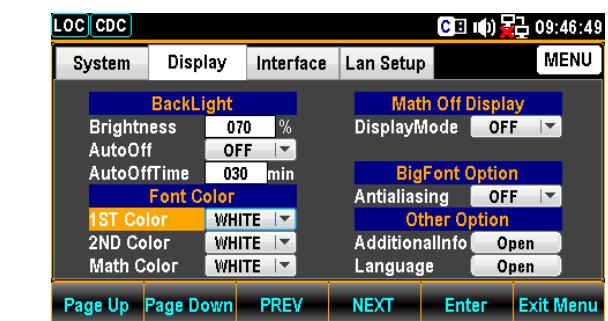


3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select desired color for 1ST display.

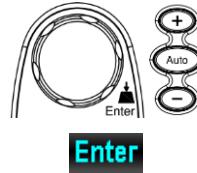

Enter

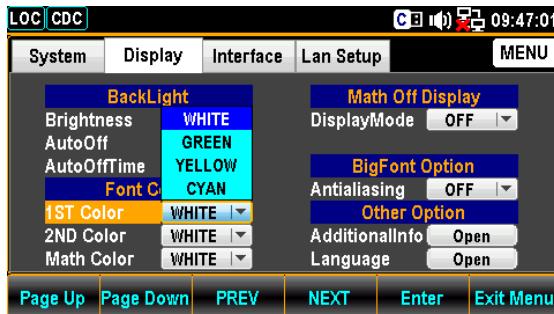


 4. Press the F5 (Enter) key or Knob key to confirm the selected color.



Display result


The following figure demonstrates the defined yellow color for 1ST display.

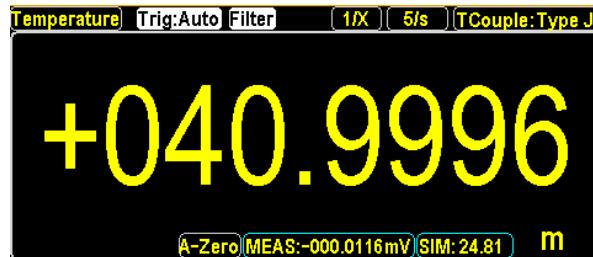



2ND Color Setting

Background Set the theme color of 2ND display


- Step 1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

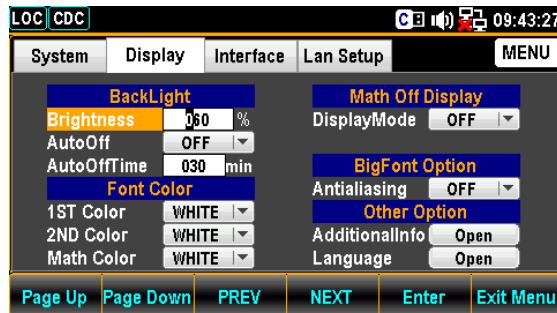

 2. Press the NEXT key repeatedly or scroll the Knob key to move to the Font Color – 2ND Color field.

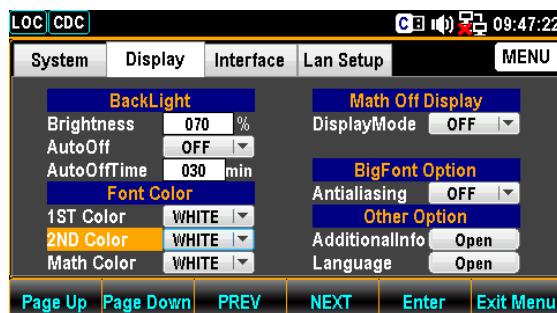

3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select desired color for 2ND display.

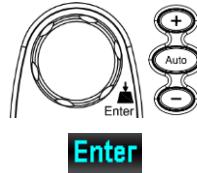


Enter

BackLight		Math Off Display	
Brightness	070 %	DisplayMode	OFF
AutoOff	WHITE	BigFont Option	
AutoOffTime	GREEN	Antialiasing	OFF
Font Color	YELLOW	Other Option	
2ND Color	WHITE	AdditionalInfo	Open
Math Color	CYAN	Language	

Page Up Page Down PREV NEXT Enter Exit Menu

 4. Press the F5 (Enter) key or Knob key to confirm the selected color.



Display result


The following figure demonstrates the defined green color for 2ND display.





Math Color Setting

Background Set the theme color of Math functions


- Step 1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

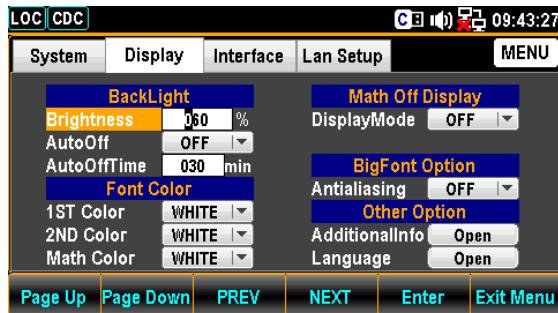

 
2. Press the NEXT key repeatedly or scroll the Knob key to move to the Font Color – Math Color field.

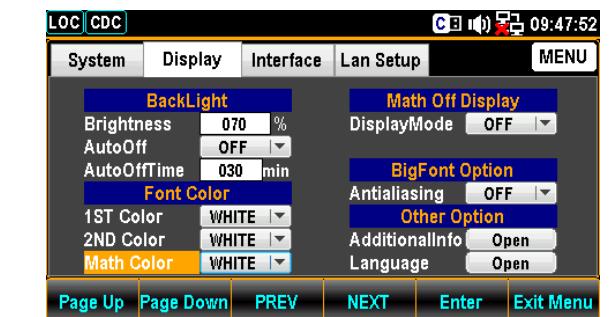


3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select desired color for Math display.

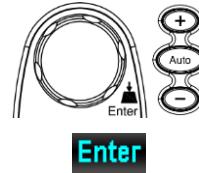

Enter

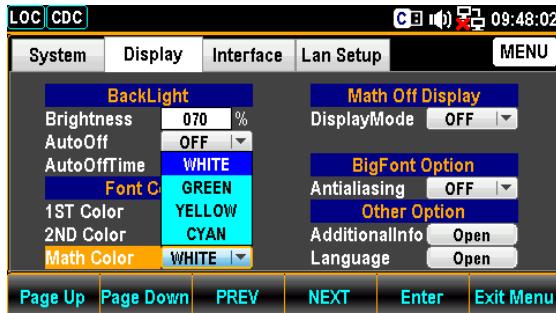


 4. Press the F5 (Enter) key or Knob key to confirm the selected color.



Display result


The following figure demonstrates the defined cyan color for Math display.

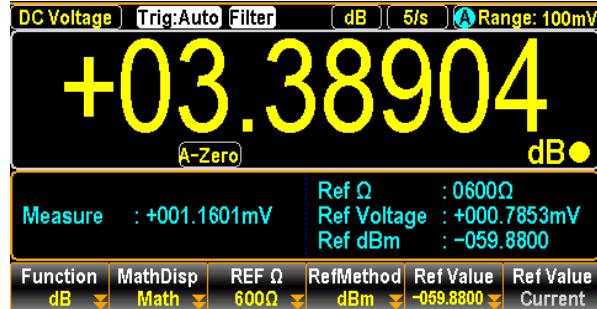


Display Mode Setting

Background Enable or disable if time info or user-defined text is shown in the 1ST display only when MathDisp is off.

- Step**
1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

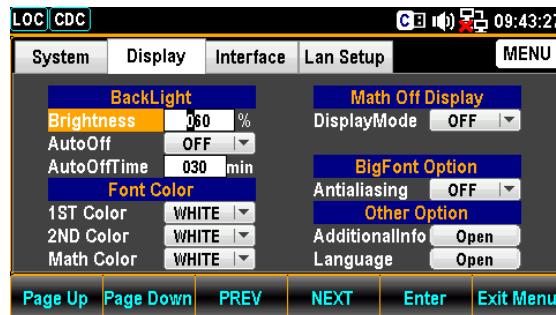


2. Press the NEXT key repeatedly or scroll the Knob key to move to the Math Off Display – DisplayMode field.

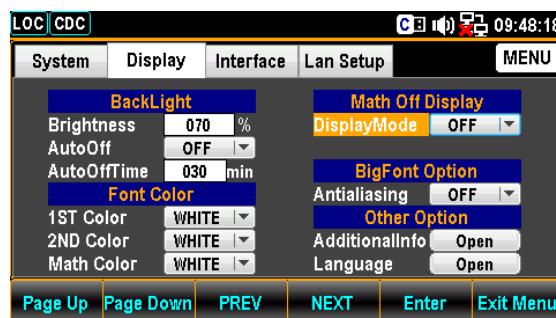


Time display


1. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select the Time option.

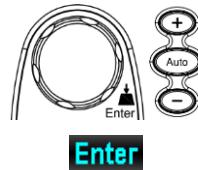


Enter

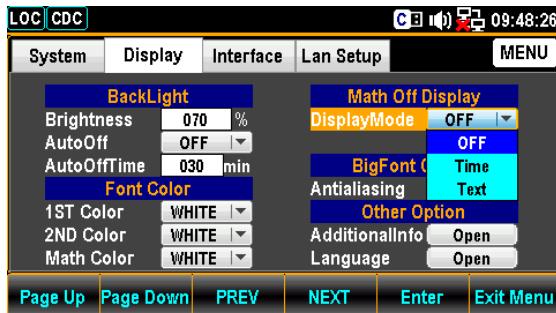

 2. Press the F5 (Enter) key or Knob key to confirm the Time option.




Enter

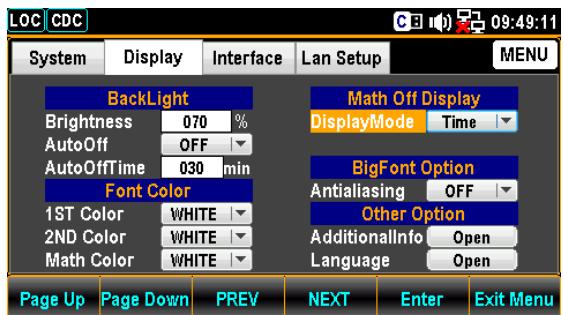

Display result


The following figure demonstrates the time info shown in the 1ST display.



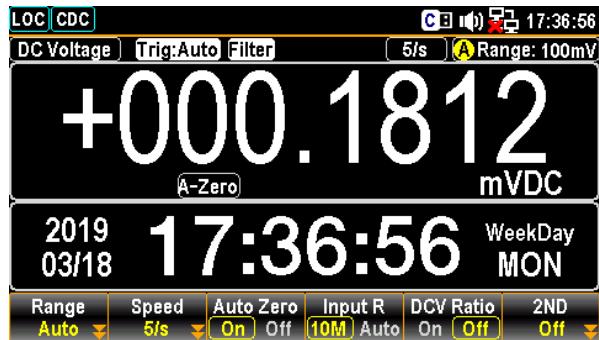


Text display


1. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select the Text option.

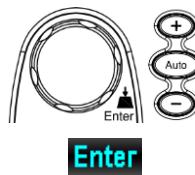

Enter

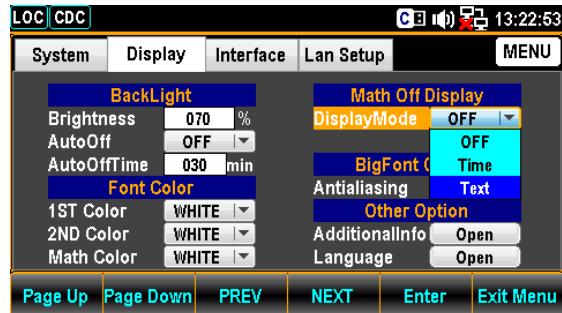

 2. Press the F5 (Enter) key or Knob key to confirm the Text option.



LOC | CDC C E I 13:24:51

System	Display	Interface	Lan Setup	MENU
BackLight		Math Off Display		
Brightness	070 %	DisplayMode	Text ▾	
AutoOff	OFF ▾	GwINSTEK	Edit	
AutoOffTime	030 min	BigFont Option		
Font Color		Antialiasing	OFF ▾	
1ST Color	WHITE ▾	Other Option		
2ND Color	WHITE ▾	AdditionalInfo	Open	
Math Color	WHITE ▾	Language	Open	
Page Up	Page Down	PREV	NEXT	Enter
Exit Menu				

3. Press the NEXT key or scroll the Knob key to move to the Math Off Display – Edit field.




LOC | CDC C E I 13:26:16

System	Display	Interface	Lan Setup	MENU
BackLight		Math Off Display		
Brightness	070 %	DisplayMode	Text ▾	
AutoOff	OFF ▾	No Text	Edit	
AutoOffTime	030 min	BigFont Option		
Font Color		Antialiasing	OFF ▾	
1ST Color	WHITE ▾	Other Option		
2ND Color	WHITE ▾	AdditionalInfo	Open	
Math Color	WHITE ▾	Language	Open	
Page Up	Page Down	PREV	NEXT	Enter
Exit Menu				

4. Press the F5 (Enter) key or Knob key to enter the KeyBoard page.

 Enter




LOC | CDC C E I 13:36:58


System	Display	Interface	Lan Setup	MENU
KeyBoard				
Bright	No Text			
AutoC	A	B	C	D
AutoC	E	F	G	H
	I	J	K	L
	M	N	O	P
	Q	R	S	T
	U	V	W	X
	Y	Z		
1ST C	0	1	2	3
2ND C	4	5	6	7
Math Color	8	9	-	=
Language	Open			
Caps Lock	Backspace	OK	Input	Exit KeyB




5. Press Backspace to clear default text first. Use the Left/Right & +/- keys or scroll the Knob key to move the cursor followed by pressing the F5 (Input) key or Knob key to input desired words.

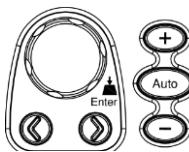Backspace**Input**

Note: F1 (Caps Lock) key is for high and low case shift.

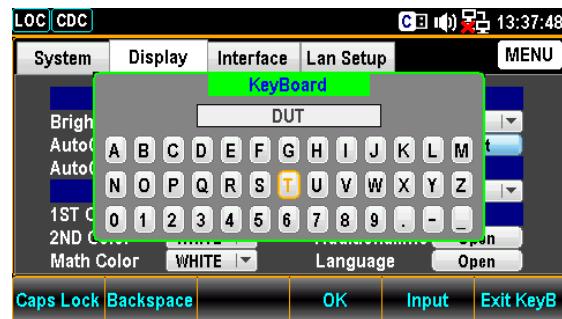
Caps Lock

6. Press the F4 (OK) key to confirm the input words.

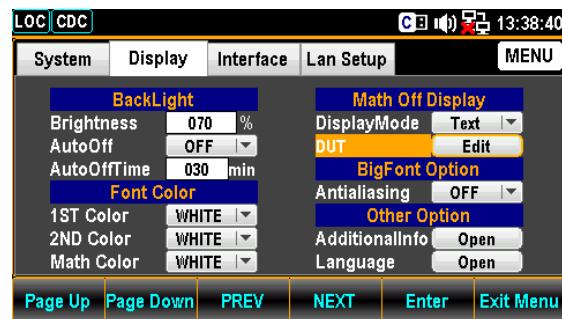OK

Display result

The following figure demonstrates the defined text shown in the 1ST display.

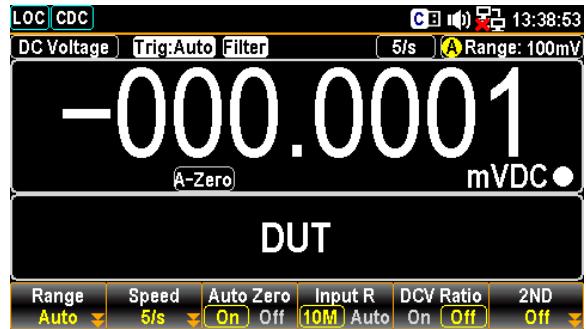


Anti Aliasing Setting

Background Enable or disable the anti-aliasing function, which facilitates the display of measured value much smoother and easy-readable. Note that this function is available for up to 1.2k/s refresh rate. The 2.4k/s above refresh rates are Not supported by anti-aliasing.





Note When Auto Zero or dual measure mode, both of which lower down computing speed, is activated, anti-aliasing function can support up to the maximum 10k/s refresh rate.

- Step**
1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

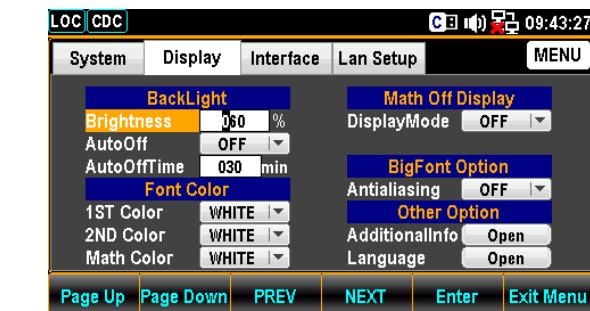



2. Press the NEXT key repeatedly or scroll the Knob key to move to the BigFont Option – Antialiasing field.

 NEXT

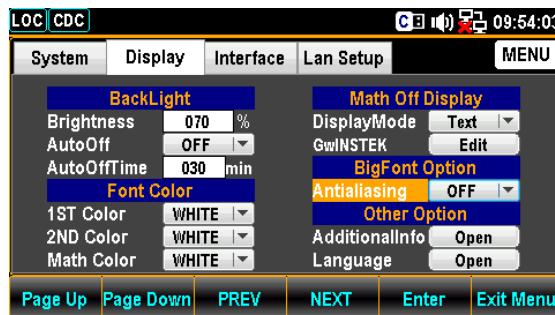


3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to select the ON option.

Enter

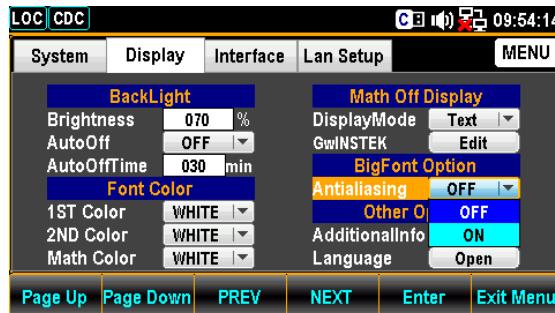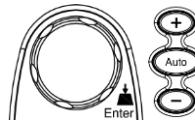

4. Press the F5 (Enter) key or Knob key to confirm the ON selection.

 
Enter




Additional Info Setting

Background Enable or disable the additional information display.

- Step**
1. Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

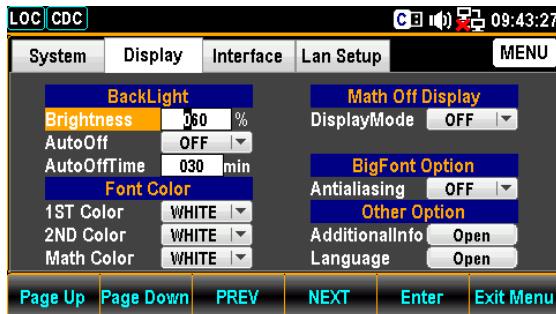


2. Press the NEXT key repeatedly or scroll the Knob key to move to the Other Option – AdditionalInfo field.

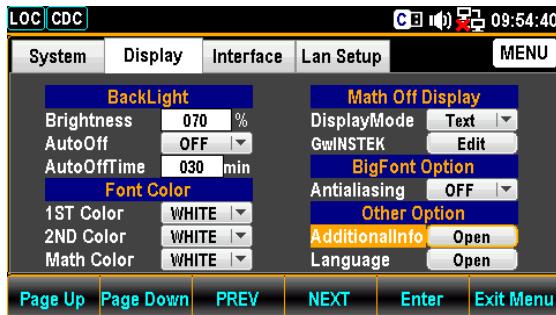

3. Press the F5 (Enter) key or Knob key to enter the Additional menu. Press the Next key or scroll the Knob key followed by pushing the F5 (Enter) key or Knob key to enable/disable each option. Move to the Return option followed by pressing the F5 (Enter) key or Knob key to have the setting take effect.




NEXT

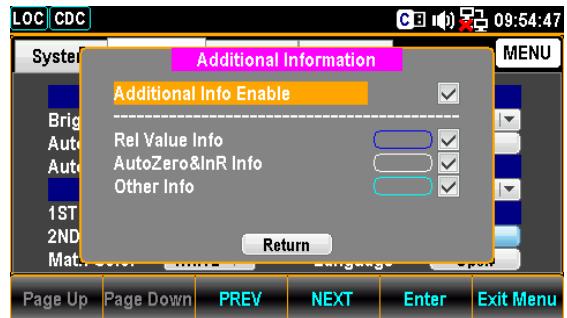

Display result

Take the Temperature mode for example as the figure below, we can clearly recognize the colors with info as follows.

- Rel Value Info is outlined by blue frame.
- Auto Zero Info is outlined by white frame.
- Additional (SIM) Info is outlined by cyan frame.

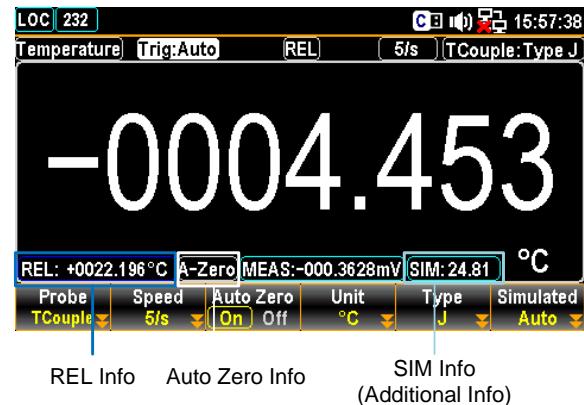



Language Setting

Background


Select language for user interface display.

Step

 
- Press the Menu key followed by pressing the Page Down key repeatedly until the Display configuration menu appears.

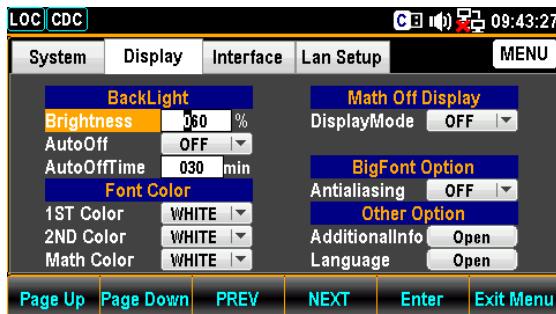

- Press the NEXT key repeatedly or scroll the Knob key to move to the Other Option – Language field.

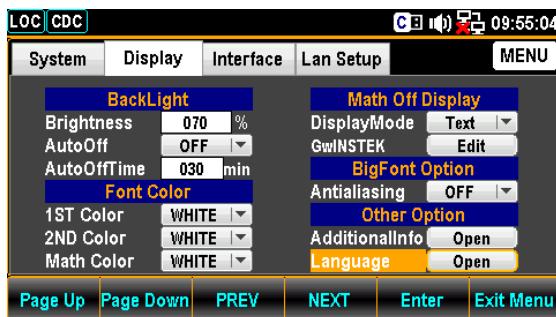

 3. Press the F5 (Enter) key or Knob key to enter the Language menu. Press the Next key or scroll the Knob key followed by pushing the F5 (Enter) key or Knob key to select one of the language options. Move to the Return option followed by pressing the F5 (Enter) key or Knob key to have the setting take effect.

Enter**NEXT**

Options	English
	繁體中文 (Traditional Chinese)
	简体中文 (Simplified Chinese)
	日本語 (Japanese)
	한국어 (Korean)

**Note**

When “日本語” is checked, only prompt message will be shown in Japanese. The user interface still remains in full English display. See the figure below.



SCREENSHOT & LOG

Capture	212
Save Reading.....	215



Capture

Background Configure the mode of screenshot capturing.

Supported USB Sticks:

USB Disk Type: Flash Disk Only

FAT Format: Fat16 or Fat32(Recommended)

 
Max memory size: 128GB



Flash disks which need to use card adaptors are not recommended to be used in this application.

Step

1. Press the Shift key followed by the LOG/LOG# key and the following menu appears.



2. Press the F1 (Log Mode) key followed by clicking the F1 (Capture) key to enable the Capture mode for screenshot.



3. Press the F2 (FileName) key to enter the Log FileName Mode menu.

Further press the F1 (Default) key to let system saves screenshot by auto name in serial number or press the F2 (Manual) key to determine file name by user.



Number Range The auto name in serial number ranges from SCREEN00 to SCREEN99.


Number Zero Replugging the USB disk will zero the serial number to the initial.



Note

When the serial number reaches the maximum, e.g., SCREEN99, the save action will be Not available.

- Press the F3 (EditName) key to enter the KeyBoard page where user can press the F2 (Backspace) key to clear default text. Use the Left/Right & +/ - keys or scroll the Knob key to move the cursor followed by pressing the F5 (Input) key or Knob key to input desired words. The F1 (Caps Lock) key is for high and low case shift.

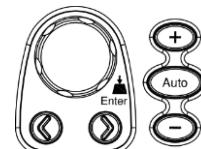EditName**Backspace****Input****Caps Lock**

- Press the F4 (OK) key to confirm the input words.

OK

It is only available when “Manual” is selected for Log FileName Mode.

- Press the F4 (OverWrite) key to enter the Log OverWrite Mode menu where user can press the F1 (Always) key to automatically overwrite filename when saving or press the F2 (Query) key to let system query first before saving.

OverWrite**Always****Query**



Note

 
For File Name - Default

- Under Overwrite – “Always mode”, when replugging the USB disk, the serial number will be zeroed to the initial and the existed file in the USB disk will be overwritten automatically when saving.
- Under Overwrite – “Query mode”, when replugging the USB disk, the serial number will be zeroed to the initial and a prompt message asks, when saving, if to overwrite the existed file, click F1 (Yes) to overwrite, whilst click F2 (No) to save in a non-occupied serial number of file name. Click ESC key to simply discard the overwrite action.

For File Name - Manual

- Under Overwrite – “Always mode”, when replugging the USB disk, the file to save will overwrite the existed file in the USB disk by the user-edited name.
- Under Overwrite – “Query mode”, when replugging the USB disk, a prompt message asks if to overwrite the existed file, click F1 (Yes) to overwrite, whilst click F2 (No) to bring out the KeyBoard page to reedit a file name to save. Click ESC key to simply discard the overwrite action.

Save Reading

Background	Configure the mode of data log saving.
Step	<p>1. Press the Shift key followed by the LOG/LOG# key and the following menu appears.</p> 
	 <p>2. Press the F1 (Log Mode) key followed by clicking the F2 (SaveRead) key to enable the Save and Read mode for data log.</p> 
	<p>3. Press the F2 (FileName) key to enter the Log FileName Mode menu. Further press the F1 (Default) key to let system saves screenshot by auto name in serial number or press the F2 (Manual) key to determine file name by user.</p> 
Number Range	<p>For Count Source</p> <ul style="list-style-type: none"> The auto name in serial number ranges from DATAC000 to DATAC999. <p>For Recent Source</p> <ul style="list-style-type: none"> The auto name in serial number ranges from DATAR000 to DATAR999.
Number Zero	Replugging the USB disk will zero the serial number to the initial.






When the serial number reaches the maximum, e.g., DATAC999, the save action will be Not available.

- Press the F3 (EditName) key to enter the KeyBoard page where user can press the F2 (Backspace) key to clear default text. Use the Left/Right & +/- keys or scroll the Knob key to move the cursor followed by pressing the F5 (Input) key or Knob key to input desired words. The F1 (Caps Lock) key is for high and low case shift.

EditName
Backspace

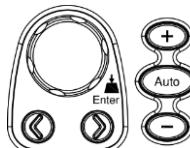

Input

Caps Lock



- Press the F4 (OK) key to confirm the input words.

OK



Note

It is only available when Manual is selected for Log FileName Mode.

- Press the F4 (OverWrite) key to enter the Log OverWrite Mode menu where user can press the F1 (Always) key to automatically overwrite filename when saving or press the F2 (Query) key to let system query first before saving.

OverWrite

Always
Query





Note

For File Name - Default

- Under Overwrite – “Always mode”, when replugging the USB disk, the serial number will be zeroed to the initial and the existed file in the USB disk will be overwritten automatically when saving.
- Under Overwrite – “Query mode”, when replugging the USB disk, the serial number will be zeroed to the initial and a prompt message asks, when saving, if to overwrite the existed file, click F1 (Yes) to overwrite, whilst click F2 (No) to save in a non-occupied serial number of file name. Click ESC key to simply discard the overwrite action.

For File Name - Manual

- Under Overwrite – “Always mode”, when replugging the USB disk, the file to save will overwrite the existed file in the USB disk by the user-edited name.
- Under Overwrite – “Query mode”, when replugging the USB disk, a prompt message asks if to overwrite the existed file, click F1 (Yes) to overwrite, whilst click F2 (No) to bring out the KeyBoard page to reedit a file name to save. Click ESC key to simply discard the overwrite action.



-
7. Press the F5 (Source) key to enter **Source** the SaveRead Source(Log) menu where user can select either source to save and read. Determine the source mode by further pressing the F1 (Count) key or the F2 (Recent) key. “Count” indicates the **Count** saved data log contains the total counts of measurement, whilst “Recent” represents each count of measurement has user-defined interval in the saved data log. For details, refer to page 54.



DISPLAY SETTING

Digit.....	220
Display.....	222
Number.....	222
Bar Meter	223
Trend Chart.....	227
Histogram.....	238



Digit

Background Define the maximum digit numbers for each measurement.

Step

1. Press DISP key followed by clicking the F1 (Digit) key, the Digit menu appears where several digit options are available to select.

Math

DISP

Digit



2. Further press F1 (6 1/2), F2 (5 1/2), F3 (4 1/2) keys for desired maximum digit numbers on display, or press the F1 (Auto) key to allow system determine digit numbers for display per measuring situation.




6 1/2

5 1/2

4 1/2

Auto

Digit Parameter Display

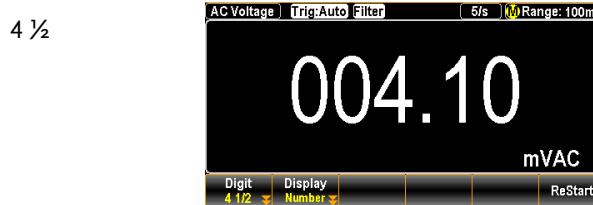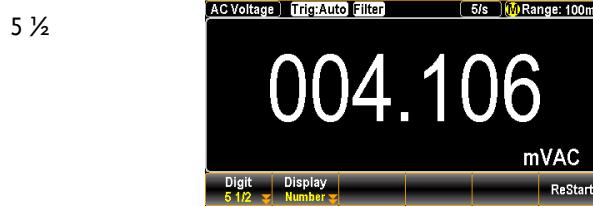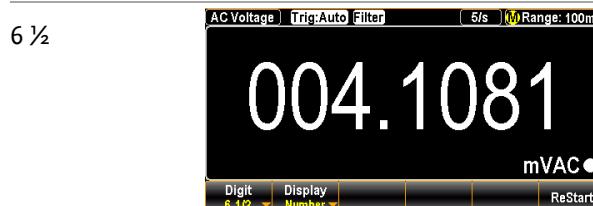

Auto

The maximum digit numbers may vary in accord with the applied measuring functions and refresh rates.

The correlation between measure types and speeds for available digit numbers

Measure Type \ Speed	1/s	2/s	5/s	20/s	60/s	100/s	400/s	1k/s	1.2k/s	2.4k/s	4.8k/s	7.2k/s	10k/s
DCV	-	-	6 1/2	6 1/2	6 1/2	6 1/2	5 1/2	5 1/2	5 1/2	5 1/2	5 1/2	4 1/2	4 1/2
ACV	6 1/2	-	5 1/2	4 1/2	-	-	-	-	-	-	-	-	-
DCI	-	-	6 1/2	6 1/2	6 1/2	6 1/2	5 1/2	5 1/2	5 1/2	5 1/2	5 1/2	4 1/2	4 1/2
ACI	6 1/2	-	5 1/2	4 1/2	-	-	-	-	-	-	-	-	-
2W/4W	-	-	6 1/2	6 1/2	6 1/2	6 1/2	5 1/2	5 1/2	5 1/2	5 1/2	5 1/2	4 1/2	4 1/2
Continuity	-	-	-	-	6 1/2	5 1/2	4 1/2	-	-	-	-	-	-
Diode	-	-	-	-	6 1/2	5 1/2	4 1/2	-	-	-	-	-	-
Temp	-	-	6 1/2	5 1/2	4 1/2	-	-	-	-	-	-	-	-
Cap	-	4 1/2	-	-	-	-	-	-	-	-	-	-	-



■ is applicable to RSDM-9060, whilst ■ is specifically for RSDM-9061.

The correlation between frequency/period and gate time for available digit numbers

Measure Type \ Gate Time	1/s	100ms	10ms
Frequency/Period	6 1/2	5 1/2	4 1/2



Display

Number

Background Shift to the Number display mode for each measurement.

Step

1. Press the DISP key followed by clicking the F2 (Display) key, the Display menu appears where several display options are available for selection.




Digit



2. Press the F1 (Number) key, the screen shows the Number mode for measurement display. The measured value is presented in the clear number way for viewing, along with the maximum digits display depending on the Digit selection.


Number

Display

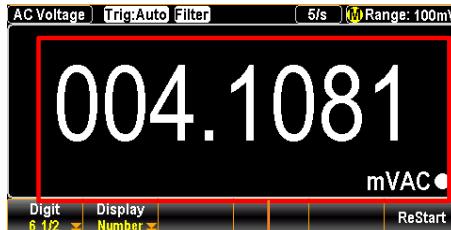

Measured value presented in Number


Bar Meter

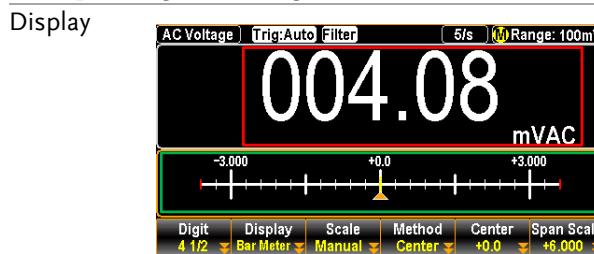Background	Shift to the Bar Meter display for each measurement.
Step	<p>1. Press the DISP key followed by clicking the F2 (Display) key, the Display menu appears where several display options are available for selection.</p>  <p>2. Press the F2 (Bar Meter) key, the screen shows the Bar Meter mode for measurement display. The measured value is presented in the bar meter way for viewing, along with the maximum digits display depending on the Digit selection.</p> 
Display	<p>Red Sect. It indicates the currently measured value in number display.</p> <p>Green Sect. It indicates the currently measured value in bar meter display.</p> <p>Background Press the F3 (Scale) key to enter the Scale Mode menu where Normal and Manual options are available for selection.</p>



F3 (Scale) key to Background Press the F3 (Scale) key to enter the Scale Mode menu where Normal and Manual options are available for selection.

Normal Selecting “Normal” allows the scale of meter bar to be symmetric with the selected range of measurement.

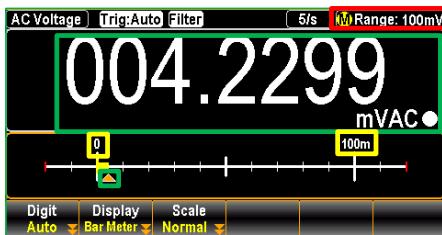

Red Sect. The user-specified range for measurement.


Yellow Sect. The endpoints of 2 sides are “0” and “100m” respectively, which perfectly correspond to the specified range of measurement.

Green Sect. The currently measured value.

Manual Selecting “Manual” allows user to customize the available scale for meter bar on display.

F4 (Method) key Background When user selects “Manual” option under the F3 (Scale) key, the Method can be further defined here for varied applications.

LowHigh When LowHigh is selected, it is available to further determine the exact scales for both the high and low ends on the bar meter display.

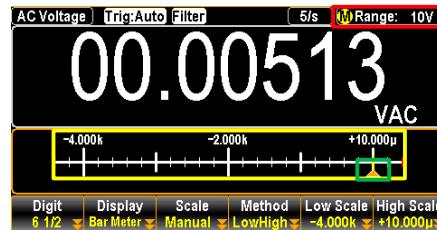


Yellow Sect. The available scale of bar meter starts from the lowest (-4.000k) to the highest (+10.000 μ), which are defined by user individually.

Red Sect. The user-specified range for measurement.

Green Sect. The currently measured value.

Center When Center is selected, it is available to further determine the exact Center value and the Span Scale for the meter bar display.

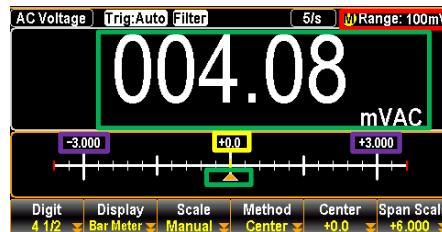

Yellow Sect. The Center value defined by user.

Purple Sect. The Span Scale defined by user.


Red Sect. The user-specified range for measurement.



Green Sect. The currently measured value.

F5 (Low Scale) & F6 (High Scale) keys After user selects “LowHigh” option under the F4 (Method) key, the low and high scales can be specified individually via F5 (Low Scale) & F6 (High Scale) keys.

Display

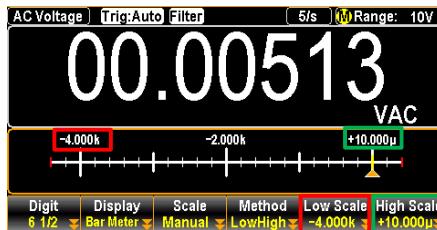


Red Sect. The specified Low Scale (-4.000k) in F5 key is identical with the upper value in red frame on the low scale of meter bar.

Green Sect. The specified High Scale (+10.000μ) in F6 key is identical with the upper value in green frame on high scale of meter bar.

F5 (Center) & F6 (Span Scale) keys When Center method is opted, user can further determine the Center and Span Scale individually via F5 (Center) & F6 (Span Scale) keys.

Display

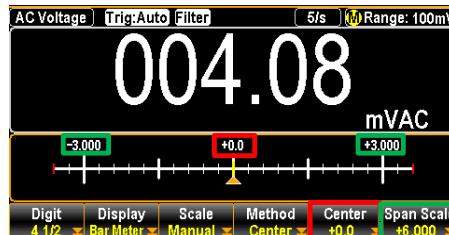

Red Sect. The specified Center (+0.0) in F5 key is identical with the upper value in red frame

on the center value of meter bar.

Green Sect.	The specified Span Scale (+6.000) in F6 key indicates the whole scale of the meter bar, which means +6.000 will be evenly divided into 2 ends of the meter bar that results in -3.000 in the left end and +3.000 in the right end as the figure shown.
-------------	--

Trend Chart

Background Shift to the Trend Chart display for each measurement.

- Step
- Press the DISP key followed by clicking the F2 (Display) key, the Display menu appears where several display options are available for selection.

Math
DISP


Digit



- Press the F3 (TrendChart) key, the screen shows the Trend Chart mode for measurement display. The measured value is presented in the trend chart way for viewing, along with the maximum digits display depending on the Digit selection.

TrendChart

Display

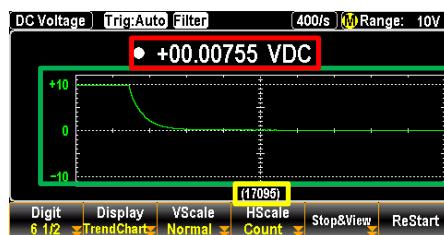

Red Sect. It indicates the currently measured value in number display.


Green Sect. It indicates the latest measurements of 400 counts in the intuitive trend chart.

Yellow Sect. The total counts of measurement with the maximum of 100,000. Only 400 counts, however, can be displayed in the trend chart at once.

F3 (VScale) key to Background define vertical scale

Press the F3 (Scale) key to enter the VScale Setup menu where Normal and Manual options are available for selection.

Normal Selecting “Normal” allows the vertical scale of trend chart to be symmetric with the selected range of measurement.

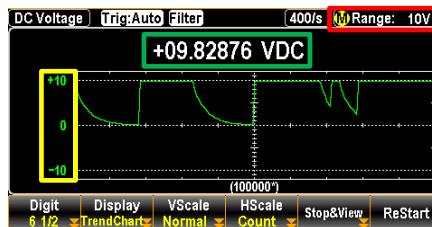

Red Sect. The user-specified range for measurement.


Yellow Sect. The highest scale (+10) corresponds to the upper defined manual range 10V, and the lowest scale is the relative value in the opposite spectrum.

Green The currently measured

Sect.	value.
-------	--------

Manual

Selecting “Manual” allows user to customize the available scale for trend chart on display.

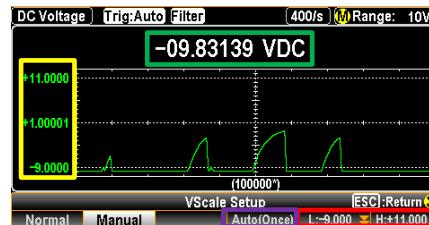


Red Sect. The user-specified highest and lowest scales. Press the F5 and F6 keys to set up individually.

Yellow Sect. Both the highest scale (+11.0000) and the lowest scale (-9.0000) correspond to the user-specified values in the red section.

Green Sect. The currently measured value.

Purple Sect. Press the F4 (Auto(Once)) key to obtain the highest and lowest scales from the latest 400 counts of measurements into the trend chart as a baseline of vertical scale. Take the figure below for instance, the highest and lowest ends in vertical scale are irregular values 20.573m and -9.8303 which come from the latest measurements.



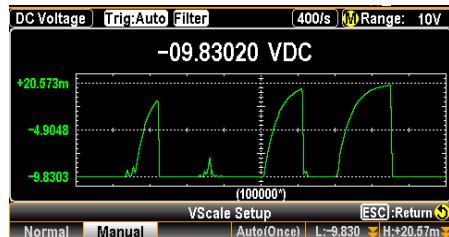


F4 (HScale) key to Background define horizontal scale

Press the F4 (HScale) key to enter the HScale Setup menu where Count and Recent options are available for selection.

Count

Selecting “Count” allows the horizontal scale of trend chart to be symmetric with the defined refresh rate of measurement.

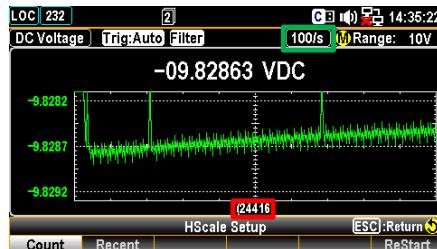


Green Sect.

The user-defined refresh rate.

Red Sect. The refreshing frequency of the total counts of measurements is consistent with the refresh rate. For example, setting 10k/s results in the fastest frequency, while 1s leading to the slowest frequency.

Recent

Selecting “Recent” allows the horizontal scale of trend chart to be customized by user.

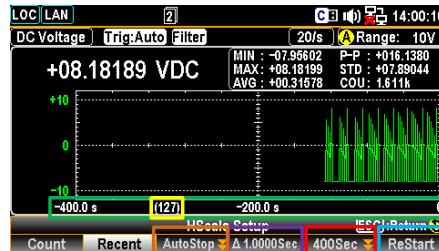


Red Sect. The user-specified range of horizontal scale in the unit of second. Press the F5 key to set up individually.

Green Sect. The horizontal scale ranging from the right-side 0 to the left-hand -400.0s that corresponds to the user-specified range of horizontal scale.

Yellow Sect. The currently total counts of measurement.


Orange Sect. The user-specified auto-stop feature of the F3 key, which automatically suspends recording after a course of time period defined by user from the field highlighted in red as follows.

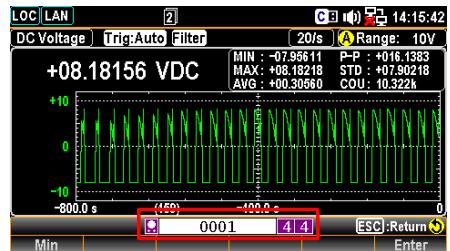

Value: 1~9999 Min




After confirming the time period for auto-stop, click “Start” in orange and the countdown appears on top of screen as the field highlighted in yellow below

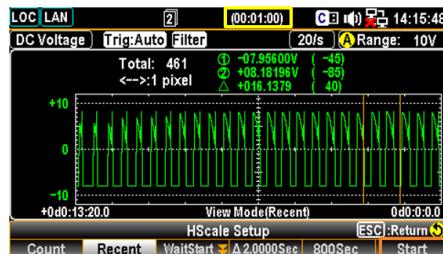


Purple Sect. The interval of each count of measurement which relates to the user-specified range of horizontal scale. To put it simply, due to the maximum 400 counts at once, when setting 400Sec, the interval is equal to 400Sec divided by 400 counts = 1 second. If setting 800Sec, it turns out $800/400 = 2$ seconds.

Blue Sect. Press the F6 (Restart) key to recount the measurements.

F5 (Stop&View) key for data Press the F5 (Stop&View) key to enter the View Setup (Trend) mode which empowers user to have a detailed view into the measured data on the trend chart. Once clicking the key, measurement will stop right away.

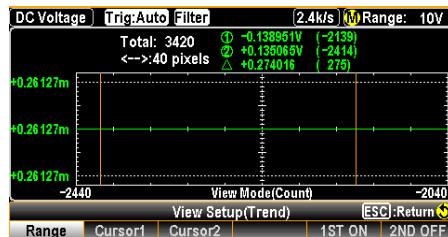Display**F1 key (Range)**

Press the F1 (Range) key to check a certain course of range of the measured counts. Scroll the Knob key rightward or leftward to move cursor on different sections.

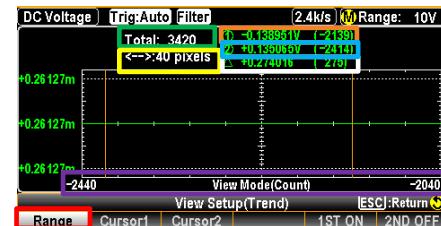

Red Sect. Press the F1 (Range) for range check.

Green Sect.

The total counts of measurements before entering the Stop&View.

Yellow Sect.

Press the Knob key to change the maximum counts for display.

1 pixel – 4 pixels – 400 pixels

Orange Sect.

The lowest value of the selected count with its affiliated serial number.


Blue Sect. The highest value of the selected count with its affiliated serial number.



White Sect. The delta between the highest and lowest values of the selected count with its affiliated serial number.

Purple Sect. The scale of measurements displayed, which relates to the yellow section - pixels. When 40 pixels are defined previously, scroll the Knob key once, the scale will increase or decrease 40 counts per time.

F2 key (Cursor1) Press the F2 (Cursor1) key to check the lowest value of each count. Scroll the Knob key rightward or leftward to move cursor on different sections.

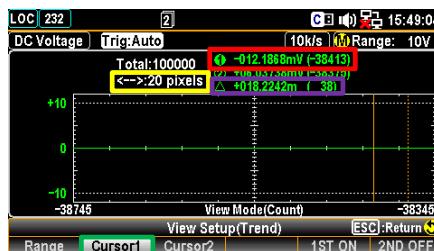

Green Sect. Press the F2 (Cursor1) for checking the lowest value of each count.

Red Sect. The lowest value of the selected count with its affiliated serial number.

Yellow Sect. Press the Knob key to change the maximum counts for display.


1 pixel – 10 pixels – 20 pixels

Purple Sect. The delta between the highest and lowest values

of the selected count with its affiliated serial number.

F3 key
(Cursor2)

Press the F3 (Cursor2) key to check the highest value of each count. Scroll the Knob key rightward or leftward to move cursor on different sections.

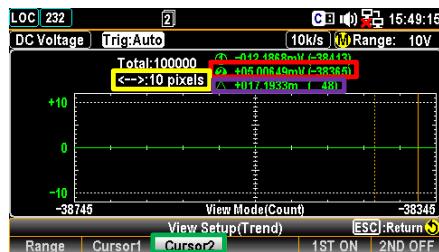

Green Sect. Press the F3 (Cursor2) for checking the highest value of each count.

Red Sect. The highest value of the selected count with its affiliated serial number.

Yellow Sect. Press the Knob key to change the maximum counts for display.

1 pixel – 10 pixels – 20 pixels

Purple Sect. The delta between the highest and lowest values of the selected count with its affiliated serial number.

F4 key
(COU/TIM)

COU


Press the F4 (COU/TIM) key to toggle between the 2 modes (COU/TIM). In association with the previous F1 (Range), F2 (Cursor1) and F3 (Cursor2) keys, user can utilize COU to check diversified values of each count per needs





Note

This option is only available when “Recent” under HScale is selected.

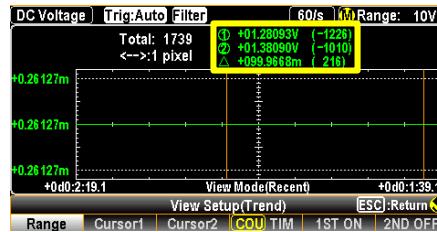

Yellow Sect. The display basically is identical with the previous introductions of F1 (Range), F2 (Cursor1) and F3 (Cursor2) keys. Refer to the each section for further details.


TIM

Press the F4 (COU/TIM) key to toggle between the 2 modes (COU/TIM). In association with the previous F1 (Range), F2 (Cursor1) and F3 (Cursor2) keys, user can utilize TIM to check time parameters of each count per needs.



Note

This option is only available when “Recent” under HScale is selected.

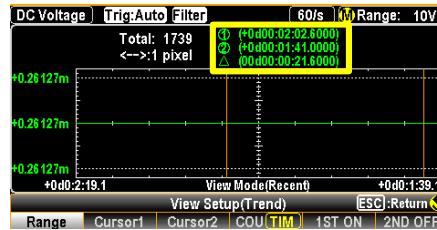


Yellow Sect. The time parameters of the selected lowest, highest and delta values display in the clear time format below, which indicate the exact day and time when the selected values occurred respectively.

+0d00:02:02.6000
Day Hour Minute Second

F5 & F6 keys The Stop&View under Trend Chart is (1ST ON & also applicable to the dual 2ND ON) measurement. Activating dual measurement followed by entering this mode where the statistics are almost identical to those of the previous single measurement.

Display

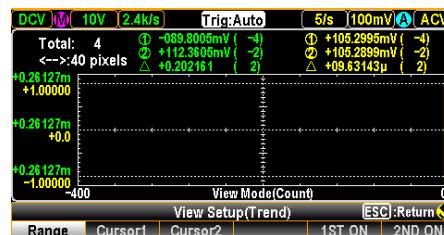

User can view each data for dual measurements or toggle on/off for either 1ST or 2ND channel at any time per requirement.

F6 (Start) key to restart measurement

After entering the View Setup (Trend) mode, system will halt the measurement right away. Exit the View Setup (Trend) mode and press the F6 (Start) key to restart measurement.

When measurement is ongoing, press the F6 (ReStart) key to recount the accumulated measurements.




Histogram

Background Shift to the Trend Chart display for each measurement.

Step 1. Press the DISP key followed by clicking the F2 (Display) key, the Display menu appears where several display options are available for selection.




 Digit



2. Press the F4 (Histogram) key, the screen shows the Histogram mode for measurement display. The measured value is presented in the way of histogram for viewing, along with the maximum digits display depending on the Digit selection.

Histogram

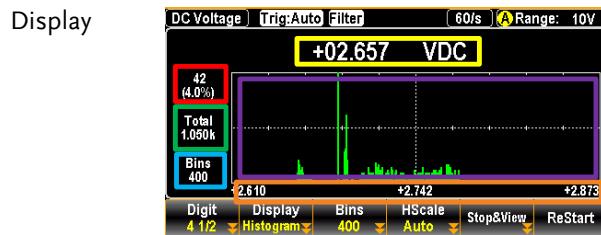

Green Sect. It indicates the total measured bins accumulated currently.

Red Sect. It indicates bins of the highest section of measured values with its affiliated percentage from the total counts of measurements.

Yellow Sect.	The currently measured value.
Purple Sect.	The histogram display for the measured bins. Up to the 400 latest bins can be shown concurrently.
Blue Sect.	The maximum bin numbers displayed <u>within</u> the purple section.
Orange Sect.	The range of horizontal scale of histogram display.


F3 (Bins) key to define bin numbers

Background

Press the F3 (Bins) key to enter the Bins Setup menu where user can customize the maximum numbers of stripe-like bins for display.


Note: The available options for bin numbers will vary in accordance with the defined refresh rate. Faster the refresh rate, smaller the numbers of bins available.

Display

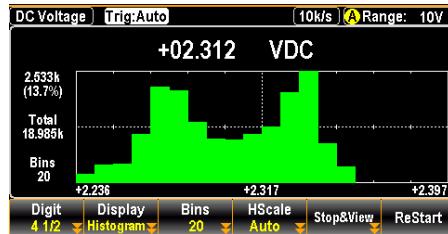

The histogram is defined with 20 bins display. The central line divides the left and right parts, each of which contains 10 bins respectively.



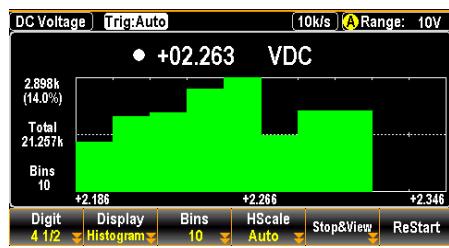


The 10 bins setting make the histogram display much thicker in its each bin compared to the previous 20 bins setting.

The max bin number varies by the refresh rate. Check the table below for correlative parameters.

Refresh Rate	5/s ~	4.8k/s	7.2k/s	10k/s
	2.4k/s			
Max. Bin Number	400	200	100	20

F4 (HScale) key to Background Press the F4 (HScale) key to enter the HScale Setup menu where Auto and Manual options are available for selection.

Auto Selecting “Auto” allows the frequency of the measuring counts to be symmetric with the defined refresh rate. For example, setting 10k/s results in the fastest frequency, while 1s leading to the slowest frequency.

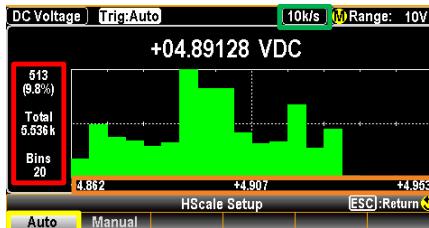


Yellow Sect. Press the F1 (Auto) key for auto HScale setup mode.

Green Sect. The user-defined refresh rate.

Red Sect. The frequency of the measured total counts, highest values percentage and bin numbers is consistent with the refresh rate.

Orange Sect. The range of horizontal scale of histogram display varies according to the currently measured value.

Manual Selecting “Manual” allows the horizontal scale of histogram display to be customized by user.

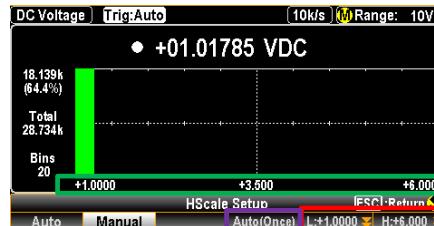


Red Sect. The user-specified highest and lowest scales. Press the F5 and F6 keys to set up individually.

Green Sect. The horizontal scale ranging from the right-side +6.000 to the left-hand +1.0000 that corresponds to the user-specified range of



horizontal scale.


Purple Sect. Press the F4 (Auto(Once)) key to obtain the highest and lowest scales from the latest bins of measurement within the histogram as a baseline for horizontal scale. Take the figure below for instance, the right and left ends in horizontal scale are irregular values +1.1022 and +1.0740 which come from the latest measurement of bins.

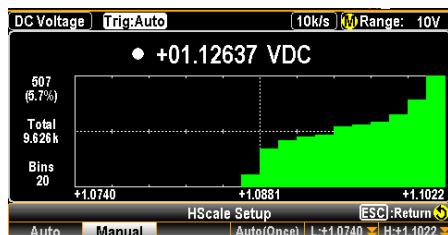

F5 (Stop&View) key for data


Press the F5 (Stop&View) key to enter the View Setup (His) mode which empowers user to have a detailed view into the measured data on the histogram. Once clicking the key, measurement will stop right away.

Display

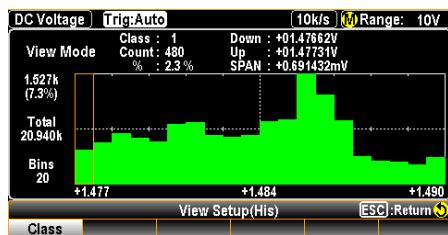

F1 key (Class)

Press the F1 (Class) key to check the detailed data of each bin from the histogram measurement.

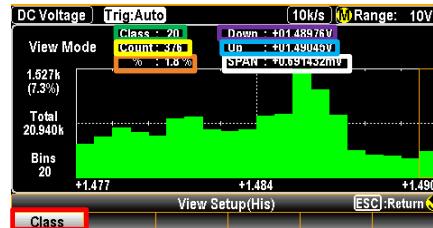

Red Sect. It indicates the Class mode under View Setup (His) is activated.

Green Sect. It indicates the selected bin number. Scroll the Knob key rightward or leftward to change bin number for checking.

Yellow Sect. It indicates the total accumulated counts of measurement categorized within the selected bin number.

Orange Sect. It indicates the exact percentage of the total counts of measurement from the selected bin number.

Purple Sect. It indicates the lowest value being measured within the selected bin number.

Blue Sect. It indicates the highest value being measured within the selected bin number.



White Sect. It indicates the difference in value between the purple section (Down) and the blue section (Up).

F6 (Start) key to restart measurement

After entering the View Setup (His) mode, system will halt the measurement right away. Exit the View Setup (His) mode and press the F6 (Start) key to restart measurement.

When measurement is ongoing, press the F6 (ReStart) key to recount the accumulated measurements.

REMOTE CONTROL

Configure Interface	246
Return to Local Control Mode.....	246
Configure SCPI ID Setting	246
Configure USB Interface.....	248
Set the USB Protocol	250
Configure RS232 Interface.....	251
Set the FlowCtrl handshake.....	259
Set the EOL Character	259
Set the Separation Character.....	259
Insert GPIB Card (Optional).....	259
Configure GPIB Interface.....	260
Activate Ethernet Interface	264
Reboot LAN Setup	265
Configure Ethernet Interface to DHCP.....	266
Configure Ethernet IP	267
Configure Protocol.....	274
Remote Terminal Session (Telnet / TCP)	280
Command Syntax	282
Command Set	286
Speed & NPLC & Resolution Relation Table.....	298
Status system.....	370



Configure Interface

Return to Local Control Mode

Background

When the unit is in remote control mode, the RMT icon **RMT** above the main display can be seen.

When this icon is not displayed, it indicates that the unit is in local control mode.

In order to switch back to the Local control mode (front panel operation),
press the Shift key.




Configure SCPI ID Setting

Background


The *IDN? query returns the manufacturer, model number, serial number and system firmware version number. When SCPI ID is set to User, a user defined manufacturer and model number is returned with the *IDN? query. Please see the SYSTem:IDNStr command on page 345 for details.

Step

1. Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.

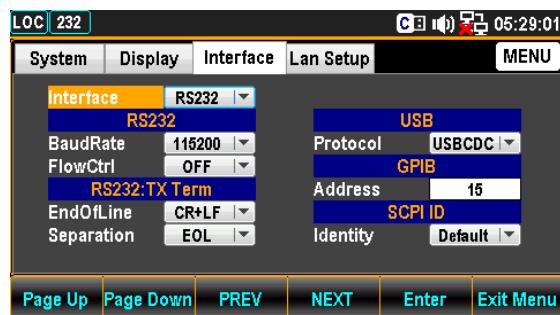


2. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the SCPI ID field.

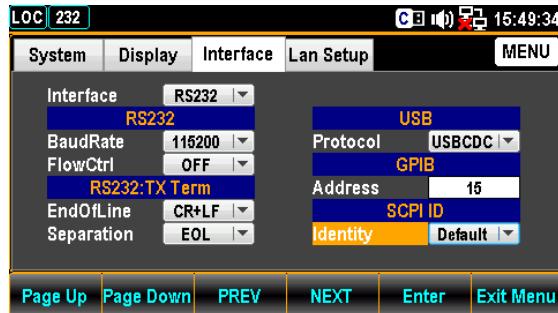


3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired SCPI ID Identity option.



Enter

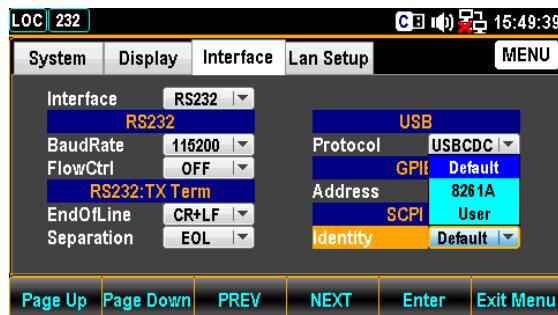


4. Press the F5 (Enter) key or Knob key again to confirm the desired SCPI ID Identity option

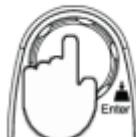


Configure USB Interface

USB Configuration	PC side connector	Front panel, Type A, host
	Unit side connector	Real panel, Type B, device
	USB Speed	2.0 (Full speed)


- Steps
1. Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.

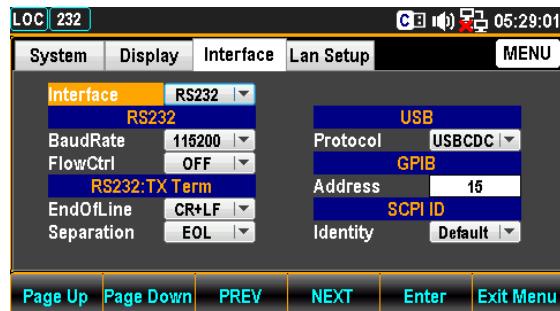

2. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the USB option.

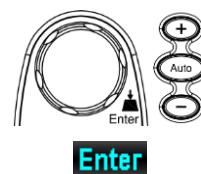

Enter

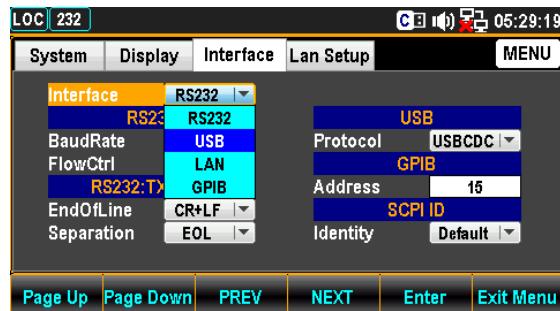



3. Press the F5 (Enter) key or Knob key to select the USB option.

Enter





4. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the USB - Protocol field.

 NEXT

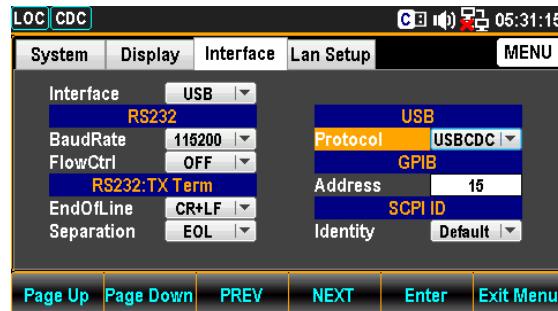


5. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired USB Protocol option.

Enter

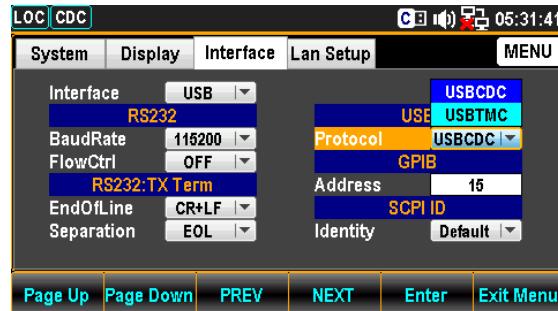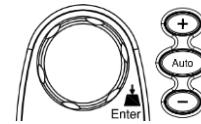


-
6. Press the F5 (Enter) key or Knob key again to confirm the USB Protocol option.

Enter

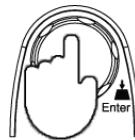

 -
7. Connect the USB cable to the rear panel terminal (upper port).



Set the USB Protocol

Description The USB device port on the rear panel is used for remote control. The USB port can be configured as either a TMC or CDC interface.

Before the RSDM-9060/9061 can be used for remote control utilizing the CDC or TMC USB class, install the appropriate CDC or TMC USB driver included on the User Manual CD.

USBCDC:

The USB port on the RSDM-9060/9061 will appear as a virtual COM port to a connected PC.

USBTMC:

The RSDM-9060/9061 can be controlled using National Instruments NI-Visa software*. NI-Visa supports USB TMC.


 Note

*To use the TMC interface National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>


Configure RS232 Interface


RS232 Configuration	Connector	D-sub 9 pin, male
	Baud rate	115200/57600/38400/19200/9600
	Data bits	8
	Parity	none
	Stop bits	1
	Flow control	none, RTS/CTS, DTR/DSR

- Step
1. Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.

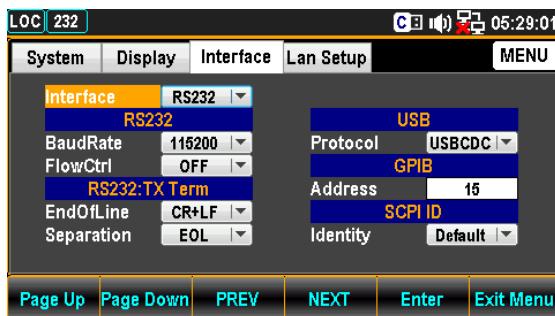


2. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the RS232 option.

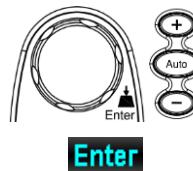

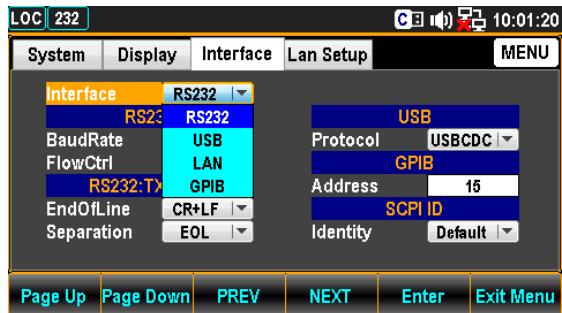



3. Press the F5 (Enter) key or Knob key to select the RS232 option.

Enter

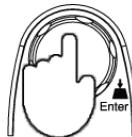


4. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the RS232 - Baud Rate field.

 
NEXT

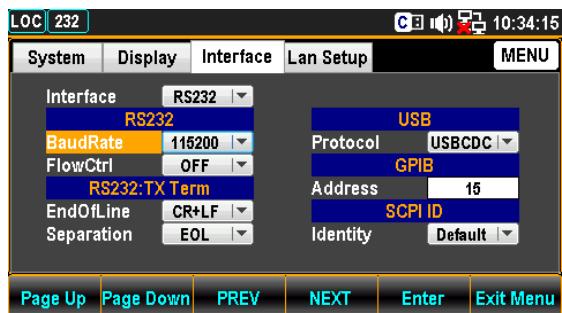


5. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired RS232 Baud Rate option.

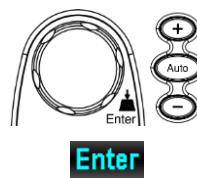


Enter

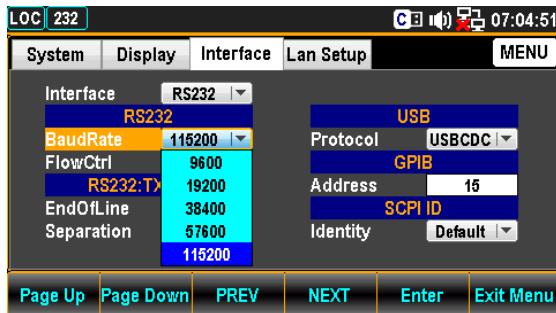


6. Press the F5 (Enter) key or Knob key again to confirm the desired RS232 Baud Rate option.

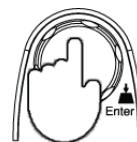


7. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the RS232 - FlowCtrl field.

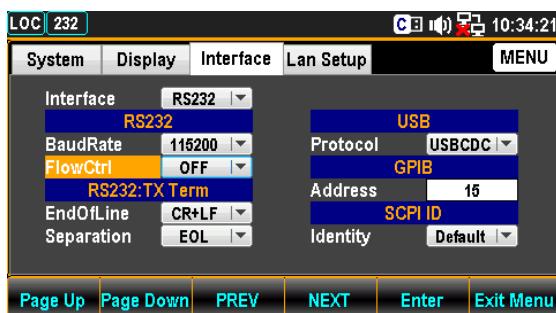


8. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired RS232 FlowCtrl option.

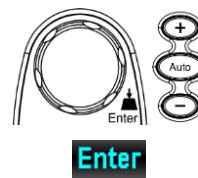

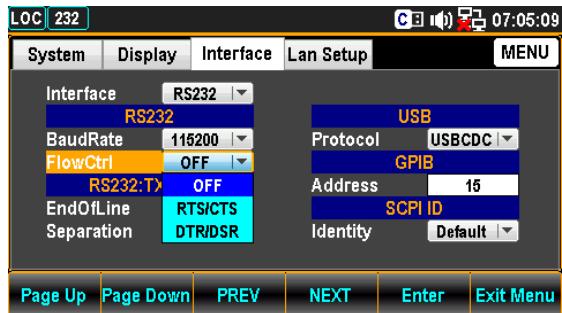



9. Press the F5 (Enter) key or Knob key again to confirm the desired RS232 FlowCtrl option.

Enter

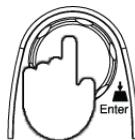


10. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the RS232: TX Term - EndOfLine field.


NEXT

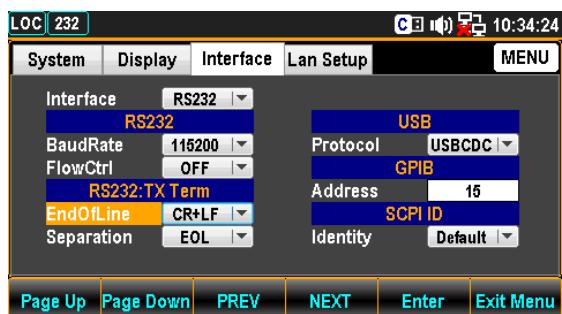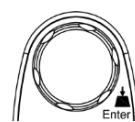


11. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired RS232: TX Term - EndOfLine option.

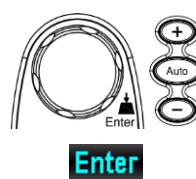

Enter


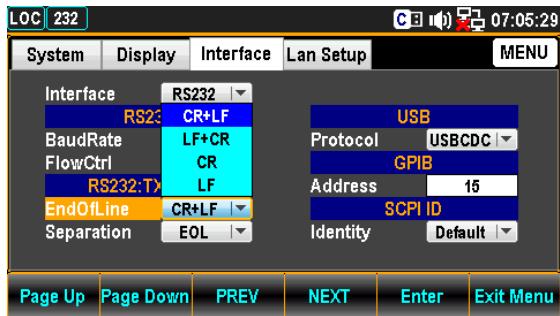


12. Press the F5 (Enter) key or Knob key again to confirm the desired RS232: TX Term EndOfLine option.

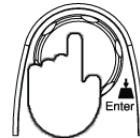
Enter

Note
GPIB, USBTMC and LAN are fixed with only LF option.

 
13. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the RS232: TX Term - Separation field.

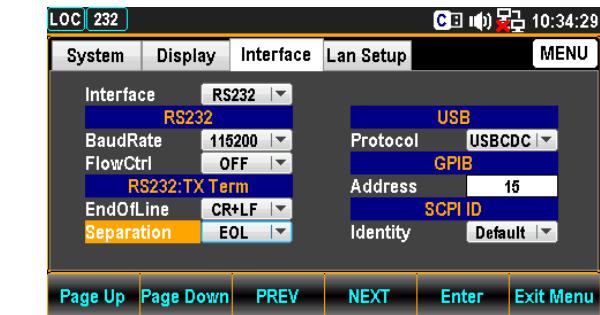NEXT

14. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the desired RS232: TX Term - Separation option.

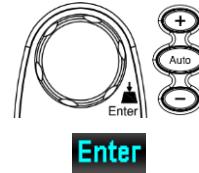

Enter

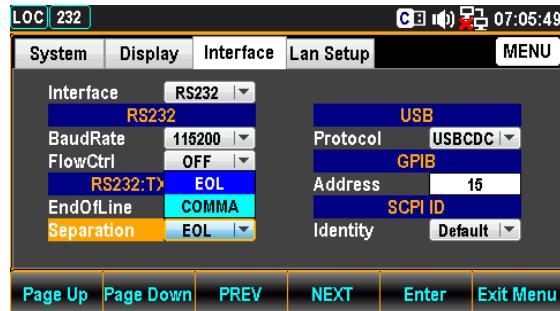


15. Press the F5 (Enter) key or Knob key again to confirm the desired RS232: TX Term Separation option.



Note: GPIB, USBTMC and LAN are fixed with only COMMA option.

 16. Connect the RS232 cable to the rear panel terminal.



RS232 Pin Assignment

Pin	Input/Output Description	1 2 3 4 5	6 7 8 9
1 -----	No Connection		
2 Input	Receive Data (RxD)		
3 Output	Transmit Data (TxD)		
4 Output	Data Terminal Ready (DTR)		
5 -----	Signal Ground (SG)		


6	Input	Data Set Ready (DSR)
7	Input	Request To Send (RTS)
8	Output	Clear To Send (CTS)
9	-----	No Connection



Do Not connect wire to pin 9 as it is specifically used for update function by certified factories.


RS-232 Connection

RSDM-906X provides the complete RS-232 signals control. Select the corresponding null-modem cable, which has the DB-9 female connectors on both ends, when the port of DB-9 male connector on PC is utilized. The connecting diagram is shown as the following figure where the pin 2 (Tx) crossly links with the pin 3 (Rx) and the pin 5 (GND) is the necessary connection.

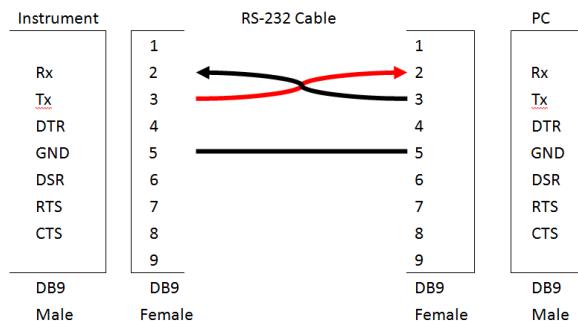


GTL-234 Connection

An example below when optional accessory GTL-234 is being employed. Likewise, first crossly link the pin 2 (Tx) to the pin 3 (Rx) and the pin 5 (GND) is the necessary connection. Furthermore, crossly link the pin 7 (RTS) to pin 8 (CTS) for advanced function of GTL-234.

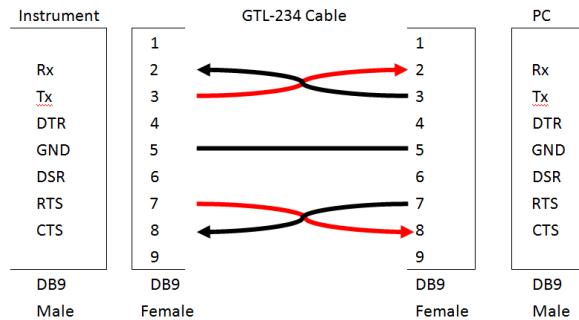

More Connections

If more other cables are applied, the diagram of full connections is illustrated as the following figure where the pin 2 (Tx), pin 3 (Rx) as well as pin 5 (GND), as mentioned previously, are necessary whilst the pin 4 (DTR), pin 6 (DSR), pin 7 (RTS) and pin 8 (CTS) are optionally required depending on different cables with varied functions to be used.

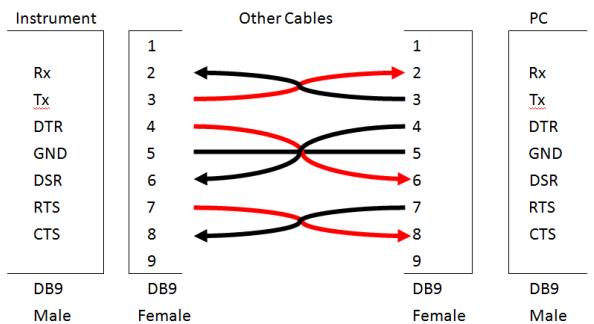

Set the FlowCtrl handshake

Description	The FlowCtrl configuration menu can set the handshake for return messages.
-------------	--

Set the EOL Character


Description	The TX TERM configuration menu can set the EOL (end-of-line) character for return messages. The EOL characters that can be received from the PC include CR+LF, LF+CR, CR or LF. The most common EOL character is CR+LF.
 Note	The USBTMC, GPIB and LAN's EOL character is fixed with LF.
EOL	CR+LF, LF+CR, CR, LF (default = CR+LF)

Set the Separation Character

Description	The TX TERM configuration menu can set the separation character for multiple return measurement values.
 Note	The USBTMC, GPIB and LAN's separation character is fixed with comma.


Insert GPIB Card (Optional)

Power Off Turn the Power Off and take out the power cord.

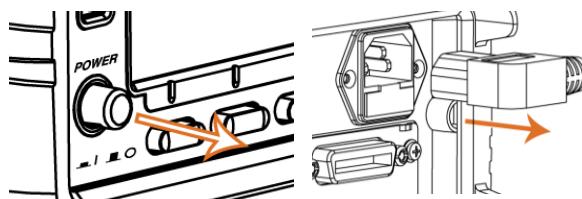


Open the RSDM-906X optional communication port

Take off the two screws on the slot corners to remove the optional communication port cover. Keep the screws for later reuse.

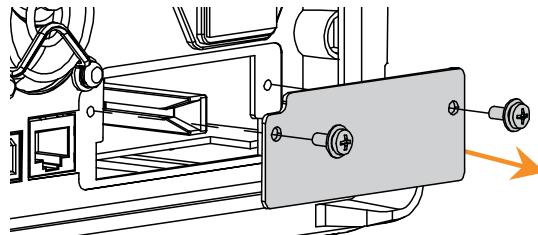


Insert the GPIB card

Insert the GPIB card into the slot. Close the cover by tightening the screws.

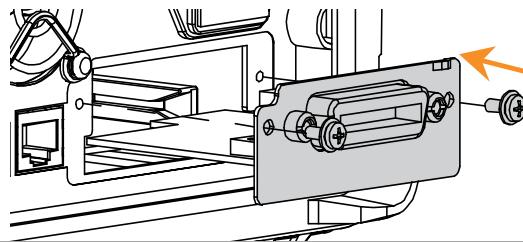

Power On

Connect the power cord and turn On the power.

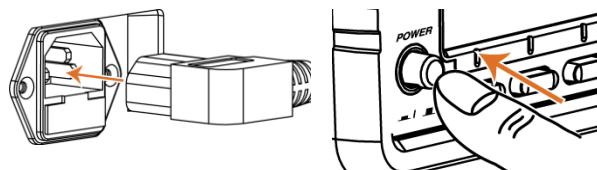



Configure GPIB Interface

GPIB Configuration	Connector	24 Pin female GPIB port
	Address	0-30(default 15)


Step

1. Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.

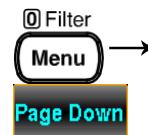


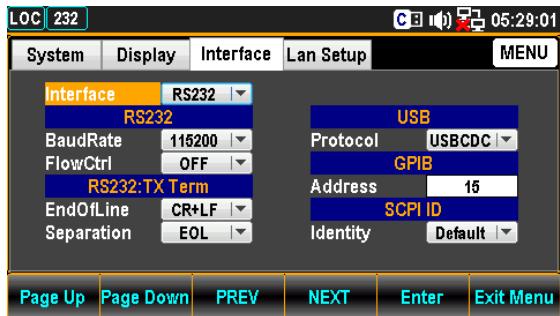

2. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the GPIB option.

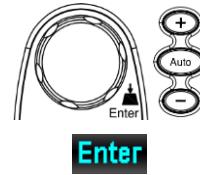


Enter

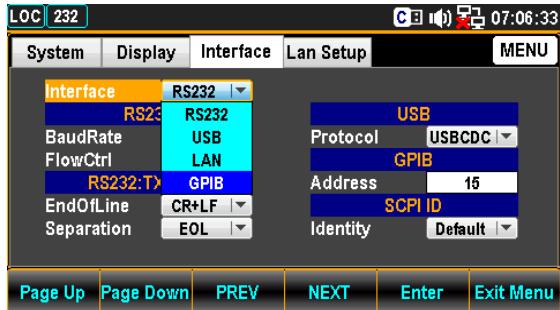


Note

As the figure shown below, GPIB option won't appear when optional GPIB card is not well installed.

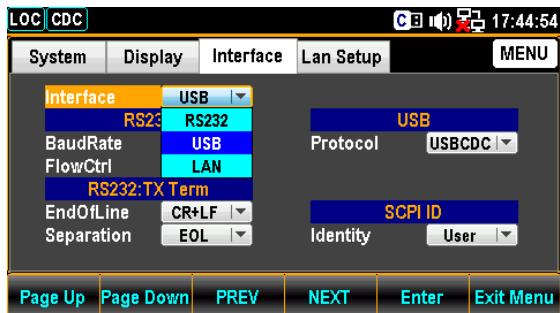


3. Press the F5 (Enter) key or Knob key to select the GPIB option.

Enter

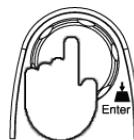

4. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the GPIB - Address field.

 NEXT



LOC 232

10:34:36

System	Display	Interface	Lan Setup	MENU
Interface	RS232	USB	Protocol	USBCDC
BaudRate	115200	GPIB	Address	15
FlowCtrl	OFF	SCPI ID	Identity	Default
RS232:TX Term				
EndOfLine	CR+LF			
Separation	EOL			

Page Up Page Down PREV NEXT Enter Exit Menu



As the figure shown below, the GPIB - Address field won't appear when optional GPIB card is not installed.



LOC CDC

17:44:54

System	Display	Interface	Lan Setup	MENU
Interface	USB	USB	Protocol	USBCDC
RS232	RS232	USB		
USB	USB	LAN		
LAN				
RS232:TX Term			SCPI ID	
EndOfLine	CR+LF		User	
Separation	EOL			


Page Up Page Down PREV NEXT Enter Exit Menu

5. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define GPIB Address. Also, you can press Number keys to directly input a specific digit.

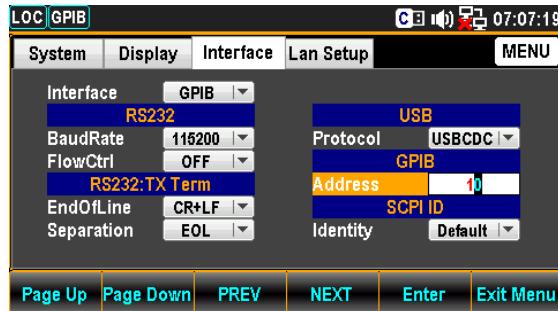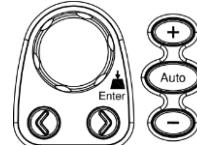


6. Press the F5 (Enter) key or Knob key again to confirm the input digit for GPIB Address.

Enter

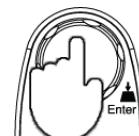


 7. Connect the GPIB cable to the rear panel optional communication port after the GPIB card has been installed.



GPIB Pin Assignment

Pin	Signal	Pin	Signal
1	Data I/O 1	13	Data I/O 5
2	Data I/O 2	14	Data I/O 6
3	Data I/O 3	15	Data I/O 7
4	Data I/O 4	16	Data I/O 8
5	EOI	17	REN

 



6	DAV	18	Ground (DAV)
7	NRFD	19	Ground (NRFD)
8	NDAC	20	Ground (NDAC)
9	IFC	21	Ground (IFC)
10	SRQ	22	Ground (SRQ)
11	ATN	23	Ground (ATN)
12	SHIELD Ground	24	Single GND

Activate Ethernet Interface


Overview	Speed	10BaseT/100BaseTx
Ethernet(LAN) port activation	1. Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.	<p>① Filter Menu → Page Down</p>

- Press the Menu key, and then the Page Down key repeatedly until the Interface configuration menu appears.
- Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the LAN option.

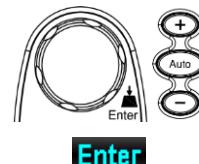

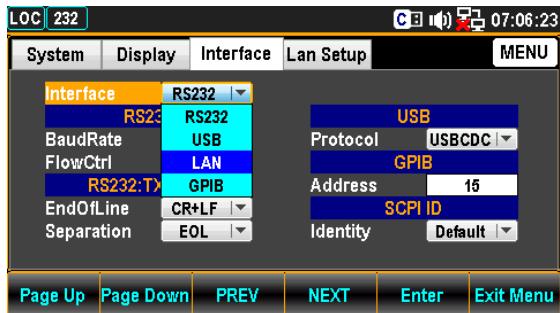

3. Press the F5 (Enter) key or Knob key to select the LAN option.

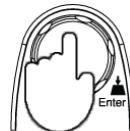Enter

4. Connect the Ethernet cable to the rear panel Ethernet port.




Reboot LAN Setup

Background

To reboot is used to reset the Ethernet configuration when new settings have been made. When the Lan Setup settings have been edited, reboot to validate the changes and reset the Ethernet to the new configuration settings. New Ethernet configuration settings are only updated after the RSDM-906X has been reset.



Note

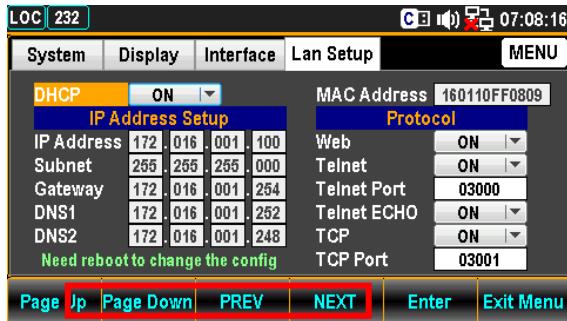



Configure Ethernet Interface to DHCP

Background


The RSDM-906X supports DHCP to have an IP address and other configuration parameters automatically assigned by a DHCP server.

DHCP Configuration


- Press the Menu key, and then the Page Down key repeatedly until the Lan Setup configuration menu appears.

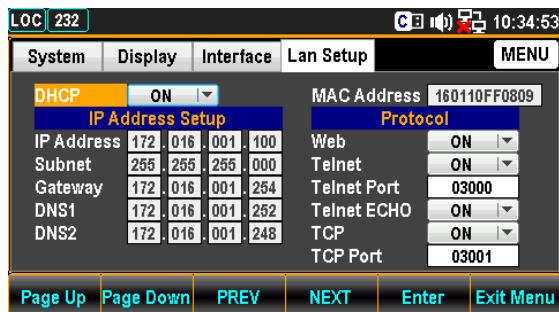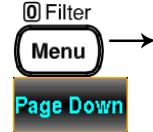

- Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.

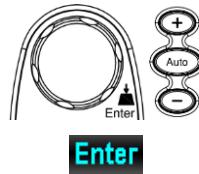


Enter

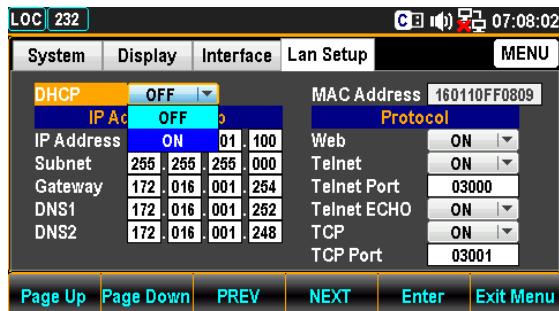

3. Press the F5 (Enter) key or Knob key to select the DHCP ON option.

Enter

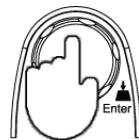

Configure Ethernet IP



Background	The RSDM-906X supports manually setting of the IP addresses, including the subnet mask, gateway, DNS1 and DNS2.
------------	---



Note The IP Address Setup can only be edited if DHCP is off.


IP Address Configuration


1. Press the Menu key, and then the Page Down key repeatedly until the Lan Setup configuration menu appears.

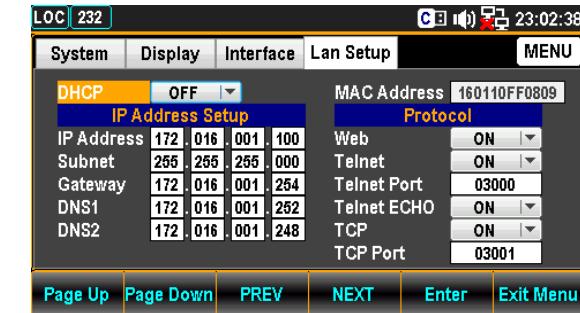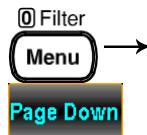



2. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the IP Address Setup – IP Address field.

 NEXT



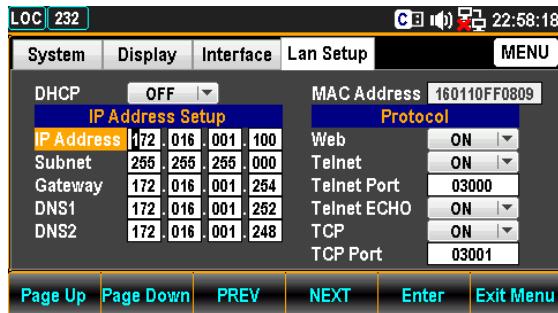

3. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define IP Address. Also, you can press Number keys to directly input a specific digit.

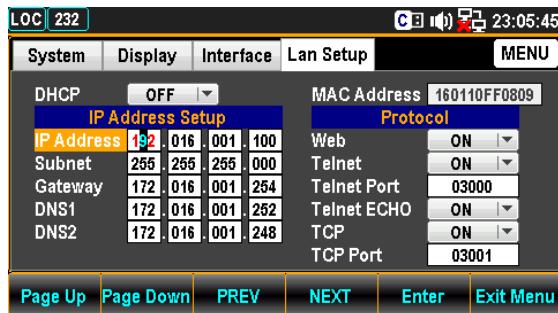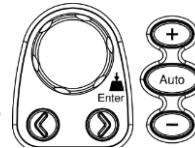

4. Press the F5 (Enter) key or Knob key to confirm the input digit for IP1 Address. And the cursor will automatically jump to next groups.




5. Repeat the steps 3 to 4 for IP2, IP3 and IP4.





The IP address is divided in 4 groups; IP1:IP2:IP3:IP4.

Subnet Configuration


6. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the IP Address Setup – Subnet field.

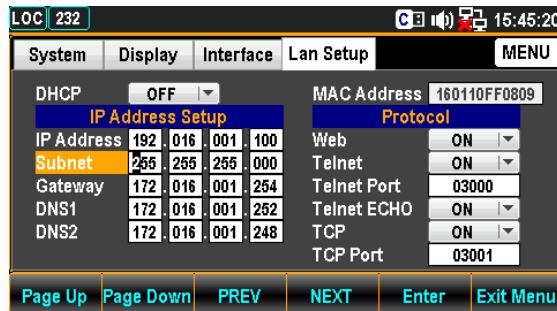

7. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define Subnet. Also, you can press Number keys to directly input a specific digit.

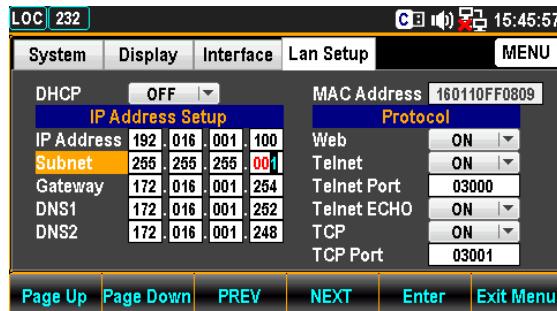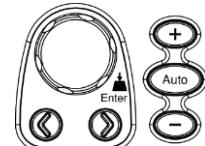

8. Press the F5 (Enter) key or Knob key again to confirm the input digit for S1. And the cursor will automatically jump to next groups.

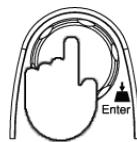Enter


9. Repeat steps 7 to 8 for S2, S3 and S4.




The Subnet is divided in 4 groups; S1:S2:S3:S4.

Gateway Configuration

10. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the IP Address Setup – Gateway field.

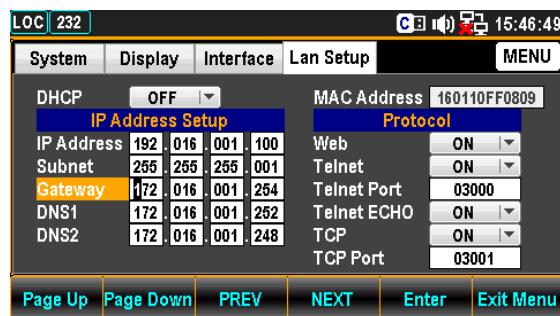NEXT


11. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define Gateway. Also, you can press Number keys to directly input a specific digit.

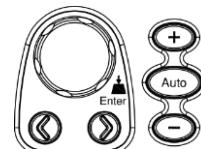


LOC 232 15:47:11

System	Display	Interface	Lan Setup	MENU
DHCP	OFF		MAC Address 160110FF0809	
IP Address Setup			Protocol	
IP Address	192.016.001.100		Web	ON
Subnet	255.255.255.001		Telnet	ON
Gateway	172.016.001.250		Telnet Port	03000
DNS1	172.016.001.252		Telnet ECHO	ON
DNS2	172.016.001.248		TCP	ON
			TCP Port	03001
Page Up		Page Down	PREV	NEXT
		Enter	Exit Menu	

12. Press the F5 (Enter) key or Knob key to confirm the input digit for G1. And the cursor will automatically jump to next groups.

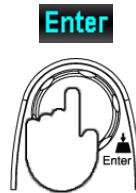

 13. Repeat steps 11 to 12 for G2, G3 and G4.



Note

The Gateway is divided in 4 groups; G1:G2:G3:G4.

DNS1 Configuration

14. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the IP Address Setup – DNS1 field.





LOC 232 15:47:21

System	Display	Interface	Lan Setup	MENU
DHCP	OFF		MAC Address 160110FF0809	
IP Address Setup			Protocol	
IP Address	192.016.001.100		Web	ON
Subnet	255.255.255.001		Telnet	ON
Gateway	172.016.001.250		Telnet Port	03000
DNS1	172.016.001.252		Telnet ECHO	ON
DNS2	172.016.001.248		TCP	ON
			TCP Port	03001
Page Up		Page Down	PREV	NEXT
		Enter	Exit Menu	




15. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define DNS1. Also, you can press Number keys to directly input a specific digit.

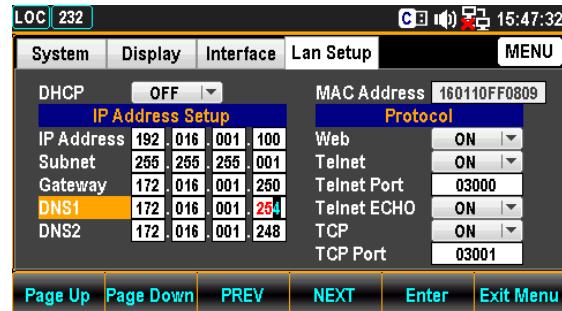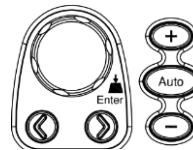

16. Press the F5 (Enter) key or Knob key again to confirm the input digit for D11. And the cursor will automatically jump to next groups.

Enter

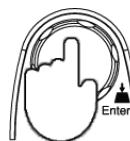

17. Repeat steps 15 to 16 for D12, D13 and D14.




Note The Gateway is divided in 4 groups;
D11:D12:D13:D14.

DNS2 Configuration



18. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the IP Address Setup – DNS2 field.

NEXT



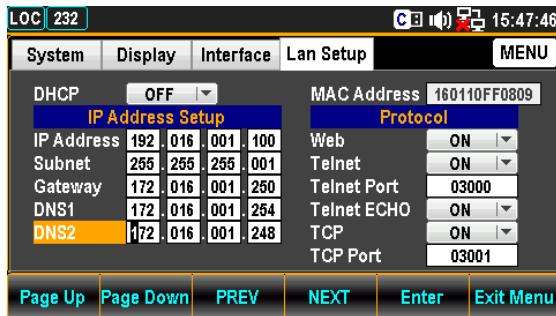


19. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define DNS2. Also, you can press Number keys to directly input a specific digit.

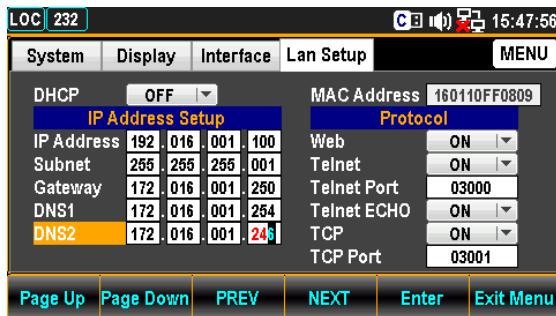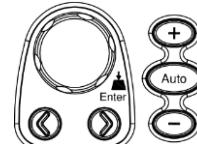

20. Press the F5 (Enter) key or Knob key again to confirm the input digit for D21. And the cursor will automatically jump to next groups.

Enter

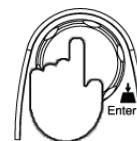

21. Repeat steps 20 to 21 for D22, D23 and D24.



Note

The Gateway is divided in 4 groups;
D21:D22:D23:D24.





Configure Protocol


Background The RSDM-906X supports 3 Ethernet protocol to used, including the Web browser, Telnet and TCP.

Web Configuration


1. Press the Menu key, and then the Page Down key repeatedly until the Lan Setup configuration menu appears.

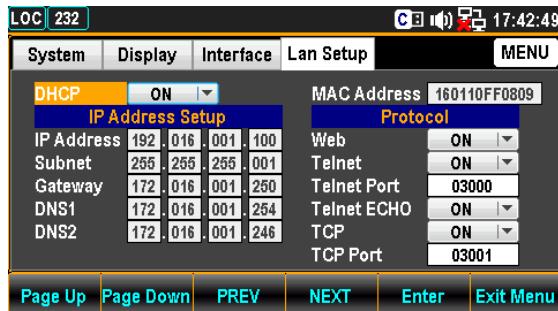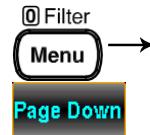

 
2. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol - Web field.




Enter

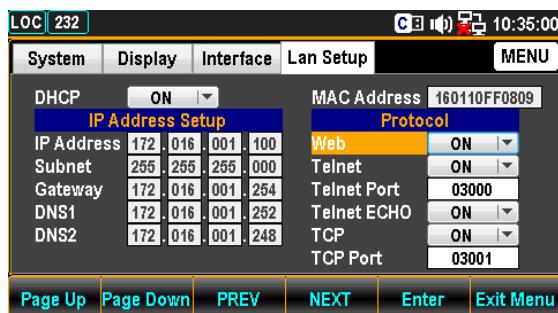

 
3. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.



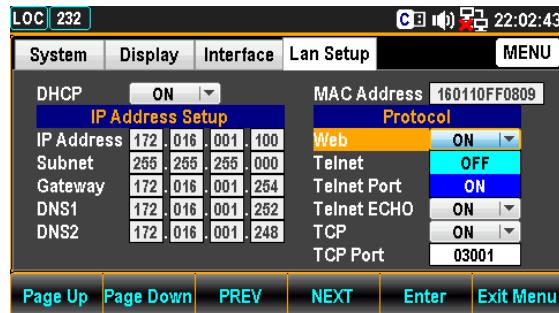

4. Press the F5 (Enter) key or Knob key to confirm the Web ON option.


Enter

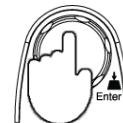

Telnet Configuration


5. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol – Telnet field.


NEXT

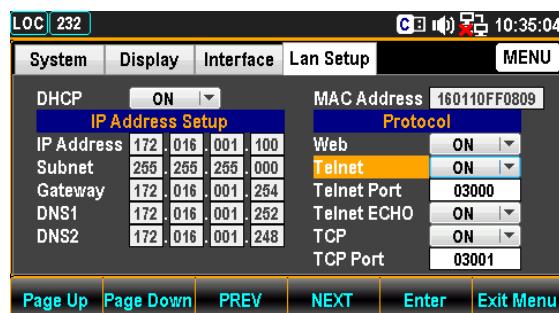

6. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.


Enter

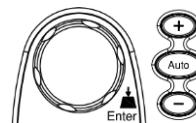

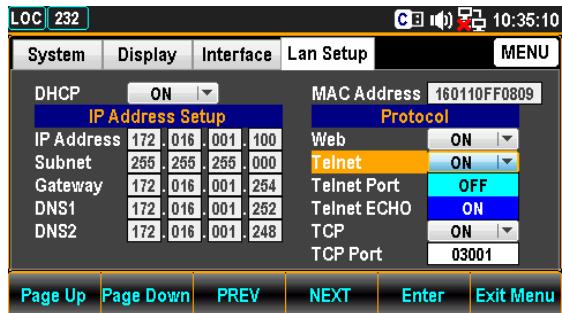

7. Press the F5 (Enter) key or Knob key to confirm the Telnet ON option.



Enter

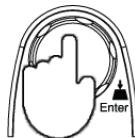


Telnet Port Configuration

8. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol – Telnet Port field.

NEXT

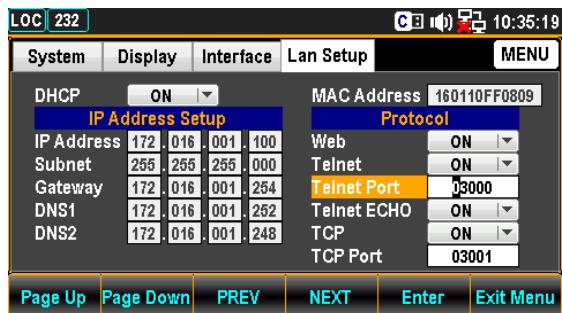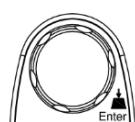

9. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define Telnet Port. Also, you can press Number keys to directly input a specific digit.

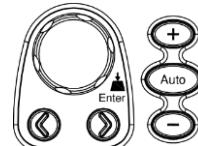


LOC 232 10:35:51

System		Display		Interface		Lan Setup		MENU
DHCP	ON					MAC Address	160110FF0809	
IP Address Setup								
IP Address	172 . 016 . 001 . 100	Subnet	255 . 255 . 255 . 000	Gateway	172 . 016 . 001 . 254	Telnet	ON	Protocol
DNS1	172 . 016 . 001 . 252	DNS2	172 . 016 . 001 . 248			Telnet Port	13000	
						Telnet ECHO	ON	
						TCP	ON	
						TCP Port	03001	
Page Up		Page Down		PREV		NEXT	Enter	Exit Menu

10. Press the F5 (Enter) key or Knob key to confirm the input digit for Telnet Port.

Enter

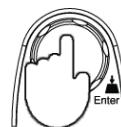


Range 1024~65535(Default = 3000)

Telnet ECHO Configuration

11. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol - Telnet ECHO field.

 NEXT




LOC 232 22:41:56

System		Display		Interface		Lan Setup		MENU
DHCP	ON					MAC Address	170A11FF0105	
IP Address Setup								
IP Address	172 . 016 . 001 . 100	Subnet	255 . 255 . 255 . 000	Gateway	172 . 016 . 001 . 254	Telnet	ON	Protocol
DNS1	172 . 016 . 001 . 262	DNS2	172 . 016 . 001 . 248			Telnet Port	03000	
						Telnet ECHO	ON	
						TCP	ON	
						TCP Port	03001	
Page Up		Page Down		PREV		NEXT	Enter	Exit Menu



12. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.

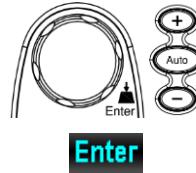

LOC 232 **22:42:05**

System	Display	Interface	Lan Setup	MENU
DHCP	ON	IP Address Setup	MAC Address 170A11FF0105	
IP Address	172 . 016 . 001 . 100	Protocol	Web ON	
Subnet	255 . 255 . 255 . 000		Telnet OFF	
Gateway	172 . 016 . 001 . 254		Telnet Port ON	
DNS1	172 . 016 . 001 . 252		Telnet ECHO ON	
DNS2	172 . 016 . 001 . 248		TCP ON	
			TCP Port 03001	
<input type="button" value="Page Up"/> <input type="button" value="Page Down"/> <input type="button" value="PREV"/> <input type="button" value="NEXT"/> <input type="button" value="Enter"/> <input type="button" value="Exit Menu"/>				

13. Press the F5 (Enter) key or Knob key again to confirm the Telnet ECHO ON option.

 
Enter



TCP Configuration

14. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol - TCP field.


NEXT



LOC 232 **22:42:14**

System	Display	Interface	Lan Setup	MENU
DHCP	ON	IP Address Setup	MAC Address 170A11FF0105	
IP Address	172 . 016 . 001 . 100	Protocol	Web ON	
Subnet	255 . 255 . 255 . 000		Telnet ON	
Gateway	172 . 016 . 001 . 254		Telnet Port 03000	
DNS1	172 . 016 . 001 . 252		Telnet ECHO ON	
DNS2	172 . 016 . 001 . 248		TCP ON	
			TCP Port 03001	
<input type="button" value="Page Up"/> <input type="button" value="Page Down"/> <input type="button" value="PREV"/> <input type="button" value="NEXT"/> <input type="button" value="Enter"/> <input type="button" value="Exit Menu"/>				

15. Press the F5 (Enter) key or Knob key followed by scrolling Knob key or pressing +/- keys to land on the ON option.

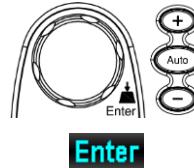

Enter

LOC 232 22:42:23

System	Display	Interface	Lan Setup	MENU
DHCP	ON		MAC Address 170A11FF0105	
IP Address Setup			Protocol	
IP Address	172.016.001.100	Subnet	Web	ON
Gateway	172.016.001.254	DNS1	Telnet	ON
DNS1	172.016.001.252	DNS2	Telnet Port	OFF
DNS2	172.016.001.248		Telnet ECHO	ON
			TCP	ON
			TCP Port	03001
Page Up		Page Down	PREV	NEXT
			Enter	Exit Menu

16. Press the F5 (Enter) key or Knob key again to confirm the TCP ON option



Enter

TCP Port Configuration

17. Press the F4 (NEXT) key repeatedly or scroll the Knob key to move to the Protocol - TCP Port field.





NEXT

LOC 232 22:42:33

System	Display	Interface	Lan Setup	MENU
DHCP	ON		MAC Address 170A11FF0105	
IP Address Setup			Protocol	
IP Address	172.016.001.100	Subnet	Web	ON
Gateway	172.016.001.254	DNS1	Telnet	ON
DNS1	172.016.001.252	DNS2	Telnet Port	03000
DNS2	172.016.001.248		Telnet ECHO	ON
			TCP	ON
			TCP Port	03001
Page Up		Page Down	PREV	NEXT
			Enter	Exit Menu




18. Use the Left/Right keys to move the cursor followed by scrolling Knob key or pressing +/- keys to define TCP Port. Also, you can press Number keys to directly input a specific digit.

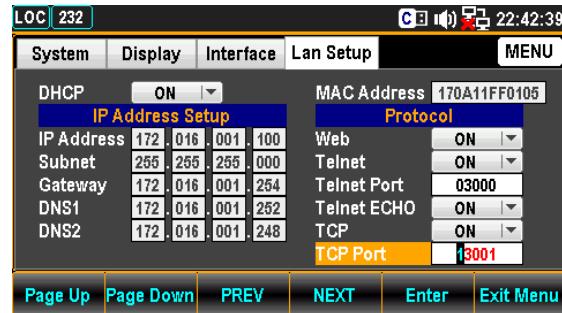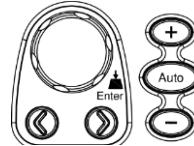

Range 1024~65535 (Default = 3001)

19. Press the F5 (Enter) key or Knob key again to confirm the input digit for TCP Port.

Enter

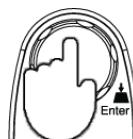

Remote Terminal Session (Telnet / TCP)

Background A terminal application can be used to remotely control the RSDM-906X via the Telnet or TCP protocol.

Operation

1. Establish a connection via the Ethernet port.
2. Open a terminal program such as Hyper Terminal and enter the IP address and port number of the RSDM-906X.

-
3. Run this query via the terminal application:

*idn?

The command will return the instrument manufacturer, model number, serial number and firmware version in the following format:
>RSPRO, RSDM9061, 000000000,
M0.69B_S0.25B




Command Syntax

Compatible Standard	IEEE488.2 SCPI, 1994	Partial compatibility Partial compatibility
---------------------	-------------------------	--

Command Structure SCPI (Standard Commands for Programmable Instruments) commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

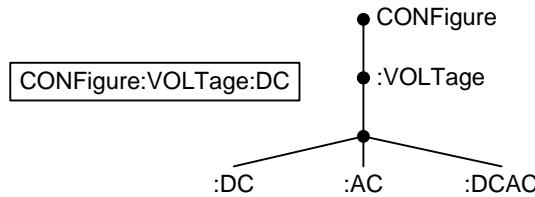

Command Types There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Simple A single command with/without a parameter

Example CONFigure:VOLTage:DC

Query A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.

Example CONFigure:RANGE?

Command Forms Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written either in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.


Below are examples of correctly written commands.

Long form	CONFigure:DIODE CONFIGURE:DIODE Configure:diode
Short form	CONF:DIOD conf:diod

Square Brackets Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below. For example, for the query:

[SENSe:]UNIT?

 Both SENSe:UNIT? and UNIT? are valid forms.

Command Format	 1. Command header 3. Parameter 1 2. Space
----------------	--

Common Input Parameters	Type	Description	Example
	<Boolean>	boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5



<NR3>	floating point with exponent	4.5e-1, 8.25e+1
<NRF>	any of NR1, 2, 3	1, 1.5, 4.5e-1
[MIN] (Optional parameter)	For commands, this will set the setting to the lowest value. This parameter can be used in place of any numerical parameter where indicated.	For queries, it will return the lowest possible value allowed for the particular setting.
[MAX] (Optional parameter)	For commands, this will set the setting to the highest value. This parameter can be used in place of any numerical parameter where indicated.	For queries, it will return the highest possible value allowed for the particular setting.
DEF	For commands, this will set the setting to the default value. This parameter can be used in place of any numerical parameter where indicated.	For queries, it will return the default value allowed for the particular setting.
Automatic parameter range selection	The RSDM-9060/9061 automatically sets the command parameter to the next available value.	
Example	conf:volt:dc 3	This will set the measurement item to DC Voltage and the range to 10V. There is no 3V range so the DMM selects the next available range, 10V.

Message Terminator (EOL)	Remote Command	Marks the end of a command line. The following messages are in accordance with IEEE488.2 standard. LF, CR, The most common EOL CR+LF, character is CR+LF LF+CR
Message Separator	EOL or ; (semicolon)	Command Separator



Command Set

ABORT.....	299
FETCh[X]?	299
HCOPy:SDUMP:DATA?	299
INITiate[:IMMediate]	300
R? [<reading_number>].....	300
READ?	301
VAL?	301
VAL1?	301
VAL2?	301
ROUTE:TERMinate?	302
TIME:SYNC:SERVer.....	302
TIME:SYNC:SERVer?	302
CALCulate:CLEar[:IMMediate]	303
CALCulate:DATA?	303
CALCulate:FUNCTION.....	303
CALCulate:FUNCTION?	303
CALCulate:HOLD:REFERENCE	303
CALCulate:HOLD:REFERENCE?	303
CALCulate:STATE	303
CALCulate:STATE?	303
CALCulate:AVERage:ALL?	303
CALCulate:AVERage:AVERage?.....	304
CALCulate:AVERage:CLEAR[:IMMediate]	304
CALCulate:AVERage:COUNT?	304
CALCulate:AVERage:MAXimum?	304
CALCulate:AVERage:MINimum?	304
CALCulate:AVERage:PTPeak?.....	304
CALCulate:AVERage:SDEViation?.....	304
CALCulate:AVERage[:STATE]	304
CALCulate:AVERage[:STATE]?	304
CALCulate:LIMit:CLEar[:IMMediate]	304
CALCulate:LIMit:BEEPer:MODE	304
CALCulate:LIMit:BEEPer:MODE?	304
CALCulate:LIMit:DATA?	305
CALCulate:LIMit:LOWER[:DATA]	305
CALCulate:LIMit:LOWER[:DATA]?	305
CALCulate:LIMit:UPPER[:DATA]	305
CALCulate:LIMit:UPPER[:DATA]?	305
CALCulate:LIMit[:STATE]	305
CALCulate:LIMit[:STATE]?	305
CALCulate:DB:REFERENCE	305
CALCulate:DB:REFERENCE?	305

CALCulate:DB:REFerence:METHod.....	306
CALCulate:DB:REFerence:METHod?.....	306
CALCulate:DBM:REFerence.....	306
CALCulate:DBM:REFerence?	306
CALCulate:SCALE:REFerence:AUTO	306
CALCulate:SCALE:REFerence:AUTO?.....	306
CALCulate:MATH:MMFactor	306
CALCulate:MATH:MMFactor?	306
CALCulate:MATH:MBFactor	306
CALCulate:MATH:MBFactor?	307
CALCulate:MATH:PERCent.....	307
CALCulate:MATH:PERCent?	307
CALCulate:TCHart[:STATe].....	307
CALCulate:TCHart [:STATe]?.....	307
CALCulate:TRANsform:HISTogram[:STATe].....	307
CALCulate:TRANsform:HISTogram[:STATe]?	307
CALCulate:TRANsform:HISTogram:ALL?	307
CALCulate:TRANsform:HISTogram:CLEar [:IMMEDIATE]	308
CALCulate:TRANsform:HISTogram:COUNt?	308
CALCulate:TRANsform:HISTogram:DATA?	308
CALCulate:TRANsform:HISTogram:POINTs	308
CALCulate:TRANsform:HISTogram:POINTs?	308
CALCulate:TRANsform:HISTogram:RANGE :AUTO	308
CALCulate:TRANsform:HISTogram:RANGE :AUTO?	308
CALCulate:TRANsform:HISTogram:RANGE :LOWER.....	309
CALCulate:TRANsform:HISTogram:RANGE :LOWER?	309
CALCulate:TRANsform:HISTogram:RANGE :UPPer	309
CALCulate:TRANsform:HISTogram:RANGE :UPPer?	309
CALCulate:TRANsform:HISTogram[:STATe]	309
CALCulate:TRANsform:HISTogram[:STATe]?	309
CONFigure?	309
CONFigure[:VOLTage]:DC.....	309
CONFigure[:VOLTage][:DC]:RATio.....	310
CONFigure[:VOLTage]:AC	310
CONFigure:CURRent[:DC]	310
CONFigure:CURRent:AC	311
CONFigure:RESistance	311
CONFigure:FRESistance.....	311



CONFigure:FREQuency	312
CONFigure:PERiod.....	312
CONFigure:CAPacitance	312
CONFigure:CONTinuity	312
CONFigure:DIODe.....	312
CONFigure:TEMPerature	312
CONFigure2[:VOLTage]:DC.....	313
CONFigure2[:VOLTage]:AC	313
CONFigure2:CURREnt[:DC]	313
CONFigure2:CURREnt:AC	314
CONFigure2:FREQuency	314
CONFigure2:PERiod.....	314
CONFigure2:OFF	314
DATA[X]:LAST?.....	314
DATA:POINTS?.....	315
DATA:POINTS:EVENT:THreshold	315
DATA:POINTS:EVENT:THreshold?.....	315
DATA:REMove? <reading_number>,[WAIT].....	315
DIGital:INTerface:MODE.....	316
DIGital:INTerface:MODE?.....	316
DIGital:INTerface:DATA:OUTPut	316
DIGital:INTerface:DATA:SETup	316
DISPlay[:STATE]	316
DISPlay[:STATE]?	316
DISPlay:TEXT:CLEar.....	317
DISPlay:TEXT[:DATA]	317
DISPlay:TEXT[:DATA]?	317
DISPlay:VIEW	317
DISPlay:VIEW?	317
MEASure[:VOLTage]:DC?.....	317
MEASure[:VOLTage][:DC]:RATio?	318
MEASure[:VOLTage]:AC?	318
MEASure:CURREnt[:DC]?	318
MEASure:CURREnt:AC?	318
MEASure:RESistance?.....	319
MEASure:FRESistance?	319
MEASure:FREQuency?	319
MEASure:PERiod?.....	320
MEASure:CAPacitance.....	320
MEASure:CONTinuity?	320
MEASure:DIODe?.....	320
MEASure:TEMPerature?	320
MEASure2[:VOLTage]:DC?.....	321
MEASure2[:VOLTage]:AC?	321
MEASure2:CURREnt[:DC]?	321

MEASure2:CURREnt:AC?	321
MEASure2:FREQuency?	322
MEASure2:PERiod?	322
[SENSe:]FUNCTION[X]	322
[SENSe:]FUNCTION[X]?	322
[SENSe:]DATA?	322
[SENSe:]DIGItal:SHIFt	323
[SENSe:]DIGItal:SHIFt?	323
[SENSe:]UNIT	323
[SENSe:]UNIT?	323
[SENSe:]AVERage:COUNT[X]	323
[SENSe:]AVERage:COUNT[X]?	323
[SENSe:]AVERage:STATE[X]	323
[SENSe:]AVERage:STATE[X]?	323
[SENSe:]AVERage:TCONtrol[X]	324
[SENSe:]AVERage:TCONtrol[X]?	324
[SENSe:]AVERage:WINDOW[X]	324
[SENSe:]AVERage:WINDOW[X]?	324
[SENSe:]AVERage:WINDOW:METHod[X]	324
[SENSe:]AVERage:WINDOW:METHod[X]?	324
[SENSe:]CAPacitance:CABLE:CALibratoin	324
[SENSe:]CAPacitance:RANGE	325
[SENSe:]CAPacitance:RANGE?	325
[SENSe:]CAPacitance:RANGE:AUTO	325
[SENSe:]CAPacitance:RANGE:AUTO?	325
[SENSe:]CONTinuity:NPLCycles	325
[SENSe:]CONTinuity:NPLCycles?	325
[SENSe:]CONTinuity:RESolution	325
[SENSe:]CONTinuity:RESolution?	325
[SENSe:]CONTinuity:THReShold	326
[SENSe:]CONTinuity:THReShold?	326
[SENSe:]CONTinuity:TRIGger:DELay	326
[SENSe:]CONTinuity:TRIGger:DELay?	326
[SENSe:]CONTinuity:ZERO:AUTO	326
[SENSe:]CONTinuity:ZERO:AUTO?	326
[SENSe:]DIODe:NPLCycles	326
[SENSe:]DIODe:NPLCycles?	327
[SENSe:]DIODe:RESolution	327
[SENSe:]DIODe:RESolution?	327
[SENSe:]DIODe:TRIGger:DELay	327
[SENSe:]DIODe:TRIGger:DELay?	327
[SENSe:]DIODe:ZERO:AUTO	327
[SENSe:]DIODe:ZERO:AUTO?	327
[SENSe:]VOLTage[:DC]:IMPedance:AUTO	327
[SENSe:]VOLTage[:DC]:IMPedance:AUTO?	328



[SENSe:]VOLTage[:DC]:NPLCycles.....	328
[SENSe:]VOLTage[:DC]:NPLCycles?	328
[SENSe:]VOLTage[:DC]:NULL[:STATe]	328
[SENSe:]VOLTage[:DC]:NULL[:STATe]?.....	328
[SENSe:]VOLTage[:DC]:NULL:VALue.....	328
[SENSe:]VOLTage[:DC]:NULL:VALue?	328
[SENSe:]VOLTage[:DC]:NULL:VALue:AUTO	329
[SENSe:]VOLTage[:DC]:NULL:VALue:AUTO?	329
[SENSe:]VOLTage[:DC]:RANGE.....	329
[SENSe:]VOLTage[:DC]:RANGE?	329
[SENSe:]VOLTage[:DC]:RANGE:AUTO	329
[SENSe:]VOLTage[:DC]:RANGE:AUTO?	329
[SENSe:]VOLTage[:DC]:RESolution.....	329
[SENSe:]VOLTage[:DC]:RESolution?	329
[SENSe:]VOLTage[:DC]:TRIGger:DELay	329
[SENSe:]VOLTage[:DC]:TRIGger:DELay?.....	330
[SENSe:]VOLTage[:DC]:ZERO:AUTO	330
[SENSe:]VOLTage[:DC]:ZERO:AUTO?.....	330
[SENSe:]VOLTage:AC:BANDwidth.....	330
[SENSe:]VOLTage:AC:BANDwidth?	330
[SENSe:]VOLTage:AC:NULL[:STATe]	330
[SENSe:]VOLTage:AC:NULL[:STATe]?.....	330
[SENSe:]VOLTage:AC:NULL:VALue.....	330
[SENSe:]VOLTage:AC:NULL:VALue?	330
[SENSe:]VOLTage:AC:NULL:VALue:AUTO	331
[SENSe:]VOLTage:AC:NULL:VALue:AUTO?	331
[SENSe:]VOLTage:AC:RANGE.....	331
[SENSe:]VOLTage:AC:RANGE?	331
[SENSe:]VOLTage:AC:RANGE:AUTO	331
[SENSe:]VOLTage:AC:RANGE:AUTO?	331
[SENSe:]VOLTage:AC:TRIGger:DELay	331
[SENSe:]VOLTage:AC:TRIGger:DELay?.....	331
[SENSe:]CURRent[:DC]:NPLCycles	332
[SENSe:]CURRent[:DC]:NPLCycles?	332
[SENSe:]CURRent[:DC]:NULL[:STATe]	332
[SENSe:]CURRent[:DC]:NULL[:STATe]?	332
[SENSe:]CURRent[:DC]:NULL:VALue	332
[SENSe:]CURRent[:DC]:NULL:VALue?	332
[SENSe:]CURRent[:DC]:NULL:VALue:AUTO	333
[SENSe:]CURRent[:DC]:NULL:VALueAUTO?	333
[SENSe:]CURRent[:DC]:RANGE	333
[SENSe:]CURRent[:DC]:RANGE?	333
[SENSe:]CURRent[:DC]:RANGE:AUTO	333
[SENSe:]CURRent[:DC]:RANGE:AUTO?	333
[SENSe:]CURRent[:DC]:RESolution	333

[SENSe:]CURRent[:DC]:RESolution?	333
[SENSe:]CURRent[:DC]:TERMinals	333
[SENSe:]CURRent[:DC]:TERMinals?	333
[SENSe:]CURRent[:DC]:TRIGger:DELay	334
[SENSe:]CURRent[:DC]:TRIGger:DELay?	334
[SENSe:]CURRent[:DC]:ZERO:AUTO	334
[SENSe:]CURRent[:DC]:ZERO:AUTO?	334
[SENSe:]CURRent:AC:BANDwidth	334
[SENSe:]CURRent:AC:BANDwidth?	334
[SENSe:]CURRent:AC:NULL[:STATe]	334
[SENSe:]CURRent:AC:NULL[:STATe]?	334
[SENSe:]CURRent:AC:NULL:VALue	334
[SENSe:]CURRent:AC:NULL:VALue?	335
[SENSe:]CURRent:AC:NULL:VALue:AUTO	335
[SENSe:]CURRent:AC:NULL:VALue:AUTO?	335
[SENSe:]CURRent:AC:RANGE	335
[SENSe:]CURRent:AC:RANGE?	335
[SENSe:]CURRent:AC:RANGE:AUTO	335
[SENSe:]CURRent:AC:RANGE:AUTO?	335
[SENSe:]CURRent:AC:TERMinals	335
[SENSe:]CURRent:AC:TERMinals?	335
[SENSe:]CURRent:AC:TRIGger:DELay	335
[SENSe:]CURRent:AC:TRIGger:DELay?	336
[SENSe:]RESistance:NPLCycles	336
[SENSe:]RESistance:NPLCycles?	336
[SENSe:]RESistance:NULL[:STATe]	336
[SENSe:]RESistance:NULL[:STATe]?	336
[SENSe:]RESistance:NULL:VALue	336
[SENSe:]RESistance:NULL:VALue?	337
[SENSe:]RESistance:NULL:VALue:AUTO	337
[SENSe:]RESistance:NULL:VALue:AUTO?	337
[SENSe:]RESistance:RANGE	337
[SENSe:]RESistance:RANGE?	337
[SENSe:]RESistance:RANGE:AUTO	337
[SENSe:]RESistance:RANGE:AUTO?	337
[SENSe:]RESistance:RESolution	337
[SENSe:]RESistance:RESolution?	337
[SENSe:]RESistance:TRIGger:DELay	338
[SENSe:]RESistance:TRIGger:DELay?	338
[SENSe:]RESistance:ZERO:AUTO	338
[SENSe:]RESistance:ZERO:AUTO?	338
[SENSe:]FRESistance:NPLCycles	338
[SENSe:]FRESistance:NPLCycles?	338
[SENSe:]FRESistance:NULL[:STATe]	339
[SENSe:]FRESistance:NULL[:STATe]?	339



[SENSe:]FRESistance:NULL:VALue	339
[SENSe:]FRESistance:NULL:VALue?	339
[SENSe:]FRESistance:NULL:VALue:AUTO	339
[SENSe:]FRESistance:NULL:VALue:AUTO?	339
[SENSe:]FRESistance:RANGE	339
[SENSe:]FRESistance:RANGE?	339
[SENSe:]FRESistance:RANGE:AUTO	340
[SENSe:]FRESistance:RANGE:AUTO?	340
[SENSe:]FRESistance:RESolution	340
[SENSe:]FRESistance:RESolution?	340
[SENSe:]FRESistance:TRIGger:DELay	340
[SENSe:]FRESistance:TRIGger:DELay?	340
[SENSe:]FRESistance:ZERO:AUTO	340
[SENSe:]FRESistance:ZERO:AUTO?	340
[SENSe:]FREQuency:APERture	341
[SENSe:]FREQuency:APERture?	341
[SENSe:]FREQuency:CURREnt:RANGE	341
[SENSe:]FREQuency:CURREnt:RANGE?	341
[SENSe:]FREQuency:CURREnt:RANGE:AUTO	341
[SENSe:]FREQuency:CURREnt:RANGE:AUTO?	341
[SENSe:]FREQuency:INPutjack	341
[SENSe:]FREQuency:INPutjack?	341
[SENSe:]FREQuency:NULL[:STATE]	341
[SENSe:]FREQuency:NULL[:STATE]?	342
[SENSe:]FREQuency:NULL:VALue	342
[SENSe:]FREQuency:NULL:VALue?	342
[SENSe:]FREQuency:NULL:VALue:AUTO	342
[SENSe:]FREQuency:NULL:VALue:AUTO?	342
[SENSe:]FREQuency:TIMEout:AUTO	342
[SENSe:]FREQuency:TIMEout:AUTO?	342
[SENSe:]FREQuency:TRIGger:DELay	342
[SENSe:]FREQuency:TRIGger:DELay?	342
[SENSe:]FREQuency:VOLTage:RANGE	343
[SENSe:]FREQuency:VOLTage:RANGE?	343
[SENSe:]FREQuency:VOLTage:RANGE:AUTO	343
[SENSe:]FREQuency:VOLTage:RANGE:AUTO?	343
[SENSe:]PERiod:APERture	343
[SENSe:]PERiod:APERture?	343
[SENSe:]PERiod:CURREnt:RANGE	343
[SENSe:]PERiod:CURREnt:RANGE?	343
[SENSe:]PERiod:CURREnt:RANGE:AUTO	343
[SENSe:]PERiod:CURREnt:RANGE:AUTO?	343
[SENSe:]PERiod:INPutjack	344
[SENSe:]PERiod:INPutjack?	344
[SENSe:]PERiod:NULL[:STATE]	344

[SENSe:]PERiod:NULL[:STATe]?	344
[SENSe:]PERiod:NULL:VALue	344
[SENSe:]PERiod:NULL:VALue?	344
[SENSe:]PERiod:NULL:VALue:AUTO	344
[SENSe:]PERiod:NULL:VALue:AUTO?	344
[SENSe:]PERiod:TIMEout:AUTO	344
[SENSe:]PERiod:TIMEout:AUTO?	345
[SENSe:]PERiod:TRIGger:DELay	345
[SENSe:]PERiod:TRIGger:DELay?	345
[SENSe:]PERiod:VOLTage:RANGe	345
[SENSe:]PERiod:VOLTage:RANGe?	345
[SENSe:]PERiod:VOLTage:RANGe:AUTO	345
[SENSe:]PERiod:VOLTage:RANGe:AUTO?	345
[SENSe:]TEMPerature:NPLCycles	345
[SENSe:]TEMPerature:NPLCycles?	346
[SENSe:]TEMPerature:NULL[:STATe]	346
[SENSe:]TEMPerature:NULL[:STATe]?	346
[SENSe:]TEMPerature:NULL:VALue	346
[SENSe:]TEMPerature:NULL:VALue?	346
[SENSe:]TEMPerature:NULL:VALue:AUTO	346
[SENSe:]TEMPerature:NULL:VALue:AUTO?	346
[SENSe:]TEMPerature:RESolution	346
[SENSe:]TEMPerature:RESolution?	347
[SENSe:]TEMPerature:TRANsduser:TYPE	347
[SENSe:]TEMPerature:TRANsduser:TYPE?	347
[SENSe:]TEMPerature:TRIGger:DELay	347
[SENSe:]TEMPerature:TRIGger:DELay?	347
[SENSe:]TEMPerature:ZERO:AUTO	347
[SENSe:]TEMPerature:ZERO:AUTO?	347
[SENSe:]TEMPerature:RJUNction:SIMulated	347
[SENSe:]TEMPerature:RJUNction:SIMulated?	347
[SENSe:]TEMPerature:RJUNction:SIMulated: :AUTO	348
[SENSe:]TEMPerature:RJUNction:SIMulated: :AUTO?	348
[SENSe:]TEMPerature:RJUNction:SIMulated: :AUTO:OFFSet	348
[SENSe:]TEMPerature:RJUNction:SIMulated: :AUTO:OFFSet?	348
[SENSe:]TEMPerature:RJUNction:SIMulated: :AUTO:TEMPerature?	348
[SENSe:]TEMPerature:TCouple:TYPE	348
[SENSe:]TEMPerature:TCouple:TYPE?	348
[SENSe:]TEMPerature:RTD:ALPHA	348
[SENSe:]TEMPerature:RTD:ALPHA?	349



[SENSe:]TEMPerature:RTD:BETA	349
[SENSe:]TEMPerature:RTD:BETA?	349
[SENSe:]TEMPerature:RTD:DELTa	349
[SENSe:]TEMPerature:RTD:DELTa?	349
[SENSe:]TEMPerature:RTD:RESistance	
[:REFerence]	349
[SENSe:]TEMPerature:RTD:RESistance	
[:REFerence]?	349
[SENSe:]TEMPerature:RTD:TYPE	349
[SENSe:]TEMPerature:RTD:TYPE?	349
[SENSe:]TEMPerature:FRTD:ALPHA	349
[SENSe:]TEMPerature:FRTD:ALPHA?	349
[SENSe:]TEMPerature:FRTD:BETA	349
[SENSe:]TEMPerature:FRTD:BETA?	349
[SENSe:]TEMPerature:FRTD:DELTa	350
[SENSe:]TEMPerature:FRTD:DELTa?	350
[SENSe:]TEMPerature:FRTD:RESistance	
[:REFerence]	350
[SENSe:]TEMPerature:FRTD:RESistance	
[:REFerence]?	350
[SENSe:]TEMPerature:FRTD:TYPE	350
[SENSe:]TEMPerature:FRTD:TYPE?	350
[SENSe:]TEMPerature:THERmistor:APARameter	350
[SENSe:]TEMPerature:THERmistor:APARameter?	350
[SENSe:]TEMPerature:THERmistor:BPARameter	350
[SENSe:]TEMPerature:THERmistor:BPARameter?	350
[SENSe:]TEMPerature:THERmistor:CPARameter	350
[SENSe:]TEMPerature:THERmistor:CPARameter?	350
[SENSe:]TEMPerature:THERmistor:TYPE	351
[SENSe:]TEMPerature:THERmistor:TYPE?	351
[SENSe:]TEMPerature:FTHermistor:APARameter	351
[SENSe:]TEMPerature:FTHermistor:APARameter?	351
[SENSe:]TEMPerature:FTHermistor:BPARameter	351
[SENSe:]TEMPerature:FTHermistor:BPARameter?	351
[SENSe:]TEMPerature:FTHermistor:CPARameter	351
[SENSe:]TEMPerature:FTHermistor:CPARameter?	351
[SENSe:]TEMPerature:FTHermistor:TYPE	351
[SENSe:]TEMPerature:FTHermistor:TYPE?	351
SAMPLE:COUNT	352
SAMPLE:COUNT?	352
TRIGger:COUNT	352
TRIGger:COUNT?	352
TRIGger:DELay	352
TRIGger:DELay?	352
TRIGger:DELay:AUTO	353

TRIGger:DELay:AUTO?	353
TRIGger:SLOPe	353
TRIGger:SLOPe?	353
TRIGger:SOURce	353
TRIGger:SOURce?	354
OUTPut:TRIGger:SLOPe	354
OUTPut:TRIGger:SLOPe?	354
SYSTem:BEEPer[:IMMEDIATE]	355
SYSTem:BEEPer:ERRor	355
SYSTem:BEEPer:ERRor?	355
SYSTem:BEEPer:STATE	355
SYSTem:BEEPer:STATE?	355
SYSTem:BEEPer:COMPARE:VOLUME	355
SYSTem:BEEPer:COMPARE:VOLUME?	355
SYSTem:BEEPer:CONTinuity:VOLUME	355
SYSTem:BEEPer:CONTinuity:VOLUME?	356
SYSTem:BEEPer:HOLD:VOLUME	356
SYSTem:BEEPer:HOLD:VOLUME?	356
SYSTem:CLICk:STATE	356
SYSTem:CLICk:STATE?	356
SYSTem:DATE	356
SYSTem:DATE?	356
SYSTem:DISPLAY	356
SYSTem:DISPLAY?	356
SYSTem:ERRor[:NEXT]?	356
SYSTem:IDNStr	357
SYSTem:IDNStr?	357
SYSTem:LABel	357
SYSTem:LABel?	357
SYSTem:LFRequency?	357
SYSTem:OUTPut:EOF	357
SYSTem:OUTPut:EOF?	357
SYSTem:OUTPut:SEParate	358
SYSTem:OUTPut:SEParate?	358
SYSTem:PARameter:LOAD	358
SYSTem:PARameter:LOAD?	358
SYSTem:PARameter:SAVE	358
SYSTem:PRESet	358
SYSTem:SCPi:MODE	358
SYSTem:SCPi:MODE?	359
SYSTem:SERial?	359
SYSTem:TEMPerature?	359
SYSTem:TIME	359
SYSTem:TIME?	359
SYSTem:UPTime?	359



SYSTem:VERSion?	359
SYSTem:WMESsage	359
SYSTem:WMESsage?	359
SYSTem:COMMUnicATE:GPIB:ADDResS	360
SYSTem:COMMUnicATE:GPIB:ADDResS?	360
SYSTem:COMMUnicATE:LAN:DHCp	360
SYSTem:COMMUnicATE:LAN:DHCp?	360
SYSTem:COMMUnicATE:LAN:DNS[X]	360
SYSTem:COMMUnicATE:LAN:DNS[X]?	360
SYSTem:COMMUnicATE:LAN:GATEway	360
SYSTem:COMMUnicATE:LAN:GATEway?	360
SYSTem:COMMUnicATE:LAN:HOSTname	361
SYSTem:COMMUnicATE:LAN:HOSTname?	361
SYSTem:COMMUnicATE:LAN:IPADDress	361
SYSTem:COMMUnicATE:LAN:IPADDress?	361
SYSTem:COMMUnicATE:LAN:MAC?	361
SYSTem:COMMUnicATE:LAN:SMASK	361
SYSTem:COMMUnicATE:LAN:SMASK?	361
SYSTem:COMMUnicATE:LAN:TELNet:ECHO	361
SYSTem:COMMUnicATE:LAN:TELNet:ECHO?	361
SYSTem:COMMUnicATE:LAN:TELNet:ENABLE	361
SYSTem:COMMUnicATE:LAN:TELNet:ENABLE?	362
SYSTem:COMMUnicATE:LAN:TELNet:PORT	362
SYSTem:COMMUnicATE:LAN:TELNet:PORT?	362
SYSTem:COMMUnicATE:LAN:TELNet:PROMpt	362
SYSTem:COMMUnicATE:LAN:TELNet:PROMpt?	362
SYSTem:COMMUnicATE:LAN:TELNet:TIMEout	362
SYSTem:COMMUnicATE:LAN:TELNet:TIMEout?	362
SYSTem:COMMUnicATE:LAN:WMESsage	362
SYSTem:COMMUnicATE:LAN:WMESsage?	362
SYSTem:COMMUnicATE:LAN:TCP:ENABLE	363
SYSTem:COMMUnicATE:LAN:TCP:ENABLE?	363
SYSTem:COMMUnicATE:LAN:TCP:PORT	363
SYSTem:COMMUnicATE:LAN:TCP:PORT?	363
SYSTem:COMMUnicATE:LAN:TIMEout	363
SYSTem:COMMUnicATE:LAN:TIMEout?	363
SYSTem:COMMUnicATE:LAN:WEB:ENABLE	363
SYSTem:COMMUnicATE:LAN:WEB:ENABLE?	363
SYSTem:LOCal	364
SYSTem:REMote	364
SYSTem:RWLock	364
STATUs:OPERation:CONDition?	364
STATUs:OPERation:ENABLE	364
STATUs:OPERation:ENABLE?	364
STATUs:OPERation[EVENT]?	365

STATus:PRESet	365
STATus:QUEStionable:CONDition?	365
STATus:QUEStionable:ENABLE	365
STATus:QUEStionable:ENABLE?	365
STATus:QUEStionable[:EVENT]?	366
*CLS	366
*ESE?	366
*ESE	366
*ESR?	366
*IDN?	367
*OPC?	367
*OPC	367
*OPT?	367
*PSC	368
*PSC?	368
*RCL	368
*RST	368
*SAV	368
*SRE?	368
*SRE	369
*STB?	369
*TRG	369
*WAI	369



Speed & NPLC & Resolution Relation Table

Speed	5/s	20/s	60(50)/s	100/s	400/s	1.2k/s	2.4k/s	4.8k/s	7.2k/s	10k/s
NPLC (16.6ms)	12	3	1	0.6	0.15	0.05	0.025	0.0125	0.0083	0.006
Resolution(Range * PPM)										
Range \\PPM	1	2	3	10	20	50	100	200	400	500
1n	1.0E-15	2.0E-15	3.0E-15	1.0E-14	2.0E-14	5.0E-14	1.0E-13	2.0E-13	4.0E-13	5.0E-13
10n	1.0E-14	2.0E-14	3.0E-14	1.0E-13	2.0E-13	5.0E-13	1.0E-12	2.0E-12	4.0E-12	5.0E-12
100n	1.0E-13	2.0E-13	3.0E-13	1.0E-12	2.0E-12	5.0E-12	1.0E-11	2.0E-11	4.0E-11	5.0E-11
1μ	1.0E-12	2.0E-12	3.0E-12	1.0E-11	2.0E-11	5.0E-11	1.0E-10	2.0E-10	4.0E-10	5.0E-10
10μ	1.0E-11	2.0E-11	3.0E-11	1.0E-10	2.0E-10	5.0E-10	1.0E-09	2.0E-09	4.0E-09	5.0E-09
100μ	1.0E-10	2.0E-10	3.0E-10	1.0E-09	2.0E-09	5.0E-09	1.0E-08	2.0E-08	4.0E-08	5.0E-08
1m	1.0E-09	2.0E-09	3.0E-09	1.0E-08	2.0E-08	5.0E-08	1.0E-07	2.0E-07	4.0E-07	5.0E-07
10m	1.0E-08	2.0E-08	3.0E-08	1.0E-07	2.0E-07	5.0E-07	1.0E-06	2.0E-06	4.0E-06	5.0E-06
100m	1.0E-07	2.0E-07	3.0E-07	1.0E-06	2.0E-06	5.0E-06	1.0E-05	2.0E-05	4.0E-05	5.0E-05
1	1.0E-06	2.0E-06	3.0E-06	1.0E-05	2.0E-05	5.0E-05	1.0E-04	2.0E-04	4.0E-04	5.0E-04
3	3.0E-06	6.0E-06	9.0E-06	3.0E-05	6.0E-05	1.5E-04	3.0E-04	6.0E-04	1.2E-03	1.5E-03
10	1.0E-05	2.0E-05	3.0E-05	1.0E-04	2.0E-04	5.0E-04	1.0E-03	2.0E-03	4.0E-03	5.0E-03
100	1.0E-04	2.0E-04	3.0E-04	1.0E-03	2.0E-03	5.0E-03	1.0E-02	2.0E-02	4.0E-02	5.0E-02
1k	1.0E-03	2.0E-03	3.0E-03	1.0E-02	2.0E-02	5.0E-02	1.0E-01	2.0E-01	4.0E-01	5.0E-01
10k	1.0E-02	2.0E-02	3.0E-02	1.0E-01	2.0E-01	5.0E-01	1.0E+00	2.0E+00	4.0E+00	5.0E+00
100k	1.0E-01	2.0E-01	3.0E-01	1.0E+00	2.0E+00	5.0E+00	1.0E+01	2.0E+01	4.0E+01	5.0E+01
1M	1.0E+00	2.0E+00	3.0E+00	1.0E+01	2.0E+01	5.0E+01	1.0E+02	2.0E+02	4.0E+02	5.0E+02
10M	1.0E+01	2.0E+01	3.0E+01	1.0E+02	2.0E+02	5.0E+02	1.0E+03	2.0E+03	4.0E+03	5.0E+03
100M	1.0E+02	2.0E+02	3.0E+02	1.0E+03	2.0E+03	5.0E+03	1.0E+04	2.0E+04	4.0E+04	5.0E+04
 Note	The above contents of table are only references to NPLC and Resolution mentioned within SCPI commands.									

Other Commands

ABORt

Aborts a measurement in progress, returning the instrument to the trigger idle state.

- Use this to abort a measurement when the instrument is waiting for a trigger, or for aborting a long measurement or series of measurements.
-

FETCh[X]?

Waits for measurements to complete and copies all available measurements to the instrument's output buffer. The readings remain in reading memory.

X = null or 1 indicate 1st display value, X = 2 indicate 2nd display value

Example: SAMP:COUN 3

INIT

FETC?

Returns: -4.98748741E-01,-4.35163427E-01,-4.33118686E-01

• The FETCh? query does not erase measurements from the reading memory. You can send the query multiple times to retrieve the same data.

• You can store up to 10,000 measurements in the reading memory of the RSDM-9060 or 100,000 measurements on the RSDM-9061. If reading memory overflows, new measurements overwrite the oldest measurements stored; the most recent measurements are always preserved. No error is generated, but the Reading Mem Ovfl bit (bit 14) is set in the Questionable Data Register's condition register.

HCOPY:SDUMP:DATA?

Executes TFT LCD screenshot action.

Returns the front panel display image ("screen shot").

Returns a count of data streaming by the image file format of BMP.



INITiate[:IMMEDIATE]

Changes the state of the triggering system from "idle" to "wait-for-trigger", and clears the previous set of measurements from reading memory. Measurements begin when the specified trigger conditions are satisfied following the receipt of INIT.

Example: CONF:VOLT:DC 10

```
SAMP:COUN 5  
TRIG:SOUR BUS  
INIT  
*TRG  
FETC?
```

- Storing measurements in reading memory with INITiate is faster than sending measurements to the instrument's output buffer using READ? (provided you do not send FETCh? until done). The INITiate command is also an "overlapped" command. This means that after executing INITiate, you can send other commands that do not affect the measurements.
- To retrieve the measurements from the reading memory, use FETCh?. Use DATA:REMove? or R? to read and erase all or part of the available measurements.
- Use ABORt to return to idle.

R? [<reading_number>]

Reads and erases measurements from reading memory up to the specified <reading_number>.

The measurements are read and erased from the reading memory starting with the oldest measurement first.

Ex:SAMP:COUN 5

INIT

R? 4

Returns: #263-1.12816521E-04,-1.13148354E-04,-1.13485152E-04,-1.13365632E-04

"#2" represents the length of readback data is 2 digits.

"63" represents the total length of readback data.

● If you do not specify a value for <reading_number>, all measurements are read and erased.

Ex: SAMP:COUN 2

INIT

R?

Returns: #231-1.12816521E-04,-1.13148354E-04

● The R? and DATA:REMove? queries can be used during a long series of readings to periodically remove readings from memory that would normally cause the reading memory to

overflow. R? does not wait for all readings to complete. It sends the readings that are complete at the time the instrument receives the command.

- Use Read? or Fetch? if you want the instrument to wait until all readings are complete before sending readings.
- No error is generated if the reading memory contains less readings than requested. In this case, all available readings in memory are read and deleted.

READ?

Returns 1st display value.

Return parameter: <NRF>, Ex: -1.13148354E-04

- The Read query will not return the unit or count number of the reading.
- Sending READ? is similar to sending INITi te followed immediately by FETCh?

VAL?

Returns the 1st and 2nd display value.

Example: SAMP:COUN 5

 VAL?

 >+0.33452387E-4,+0.38954687E-4

 >+0.32897125E-4,+0.32764551E-4

 > etc, for 5 counts.

Queries 5 counts of stored samples from the reading memory.

VAL1?

Returns the 1st display value.

Example: SAMP:COUN 5

 VAL1?

 >+0.33452387E-4

 >+0.32897125E -4

 > etc, for 5 counts.

Queries 5 counts of stored samples from the 1st display.

VAL2?

Returns the 2nd display value.

Example: SAMP:COUN 5

 VAL2?

 >+0.38954687E -4

 >+0.32764551E -4

 > etc, for 5 counts.

Queries 5 counts of stored samples from the 2nd display.



ROUTe:TERMinate?

Indicates which input terminals are selected on the RSDM-9061 front panel Front/Rear switch. This switch is not programmable; this query reports the position of the switch, but cannot change it.

Return parameter: FRON | REAR

•On the RSDM-9060, this query always returns FRON.

TIME:SYNC:SERVer

Sets the server source for time sync of the 2nd group.

Parameter: "<server>", max length = 22 characters.

Example: TIME:SYNC:SERV "time-nv.nist.gov"

TIME:SYNC:SERVer?

Returns the server source for time sync of the 2nd group.

Return parameter: "<server>", Ex: "time-nv.nist.gov"

CALCulate Commands

CALCulate:CLEar[:IMMEDIATE]

Clears all of the compare results, statistic calculation value, histogram calculation value, and measurement value.

Parameter: <None>

Example: CALC:CLE:IMM

CALCulate:DATA?

Returns uncalculated original measurement.

CALCulate:FUNCTION

Sets the Advanced function.

Parameter: OFF | HOLD | DB | DBM | LIM | MXB | INV | REF

Example: CALC:FUNC DB

Sets the Advanced function to DB mode

CALCulate:FUNCTION?

Returns the current Advanced function.

Return parameter: OFF | HOLD | DB | DBM | LIM | MXB | INV |
REF

CALCulate:HOLD:REFERENCE

Sets the percentage threshold for the Hold function.

Parameter: <NRF> (0.01, 0.1, 1, 10)

Example: CALC:HOLD:REF 10

Sets the hold percentage to 10%.

CALCulate:HOLD:REFERENCE?

Returns the percentage threshold from the Hold function.

Return parameter: 0.01 | 0.1 | 1 | 10

CALCulate:STATe

Turns the Advanced function on/off.

Parameter: 0 | 1 | ON | OFF

Example: CALC:STAT OFF

Turns the Advanced function off.

CALCulate:STATe?

Returns the status of the Advanced function.

Return Parameter: 0 | 1, 1=ON, 0=OFF

CALCulate:AVERage:ALL?

Returns all of the statistic calculation values.

Return parameter: average, standard deviation, minimum,
maximum values.



CALCulate:AVERage:AVERage?

Returns the average value.

Return parameter: <NRF>

CALCulate:AVERage:CLEar[:IMMEDIATE]

Clears all of the statistic calculation values.

Parameter: <None>

Example: CALC:AVER:CLE:IMM

CALCulate:AVERage:COUNT?

Returns the total count of statistic.

Return parameter: <NRF>

CALCulate:AVERage:MAXimum?

Returns the maximum value.

Return parameter: <NRF>

CALCulate:AVERage:MINimum?

Returns the minimum value.

Return parameter: <NRF>

CALCulate:AVERage:PTPeak?

Returns the peak to peak value (max value – min value).

Return parameter: <NRF>

CALCulate:AVERage:SDEVIation?

Returns the Standard Deviation value.

Return parameter: <NRF>

CALCulate:AVERage[:STATe]

Turns the statistic calculation function on/off.

Parameter: 0 | 1 | ON | OFF

Example: CALC:AVER:STAT ON

Turns the statistic calculation function on.

CALCulate:AVERage[:STATe]?

Returns the statistic calculation function state.

Return parameter: 0 | 1, 1=ON, 0=OFF

CALCulate:LIMit:CLEar[:IMMEDIATE]

Clears compare function result counts

CALCulate:LIMit:BEEPer:MODE

Sets the beeper alarm mode of the compare function.

Parameter: OFF | PASS | FAIL

Example: CALC:LIM:BEEP:MODE:PASS

Sets the pass alarm to compare function.

CALCulate:LIMit:BEEPer:MODE?

Returns the beeper alarm mode of the compare function.

Return Parameter: OFF | PASS | FAIL

CALCulate:LIMit:DATA?

Returns the low / high fail count of the compare function.

Return Parameter: <NR1>

CALCulate:LIMit:LOWER[:DATA]

Sets the lower limit value of the compare function.

Parameter: <NRF> (-1.2E+08 ~ 1.2E+08) | MIN | MAX | DEF

Example: CALC:LIM:LOW:DATA -1.0

Sets the lower limit to -1.0

CALCulate:LIMit:LOWER[:DATA]?

Returns the lower limit value of the compare function.

Return parameter: <NRF>

CALCulate:LIMit:UPPer[:DATA]

Sets the upper limit value of the compare function.

Parameter: <NRF> (-1.2E+08 ~ 1.2E+08) | MIN | MAX | DEF

Example: CALC:LIM:UPP:DATA 1.0

Sets the upper limit to 1.0

CALCulate:LIMit:UPPer[:DATA]?

Returns the upper limit value of the compare function.

Return parameter: <NRF>

CALCulate:LIMit[:STATe]

Sets the status on/off for the compare function.

Parameter: 0 | 1 | ON | OFF

Example: CALC:LIM:STAT 1

Sets the compare function to on.

CALCulate:LIMit[:STATe]?

Returns the status of the compare function.

CALCulate:DB:REFerence

Sets the reference value for the dB function.

Parameter: <NRF> | MIN | MAX | DEF

RefMethod:

Voltage: (-1200 ~ 1200 V)

dBm: (-200.0 ~ 200 dBm)

Example: CALC:DB:REF MAX

Sets the reference value for dB measurements to the maximum allowed.

CALCulate:DB:REFerence?

Returns the reference value from the dB function.

Return parameter: <NRF>



CALCulate:DB:REFERENCE:METHod

Sets the unit of reference value for the dB function.

Parameter: VOLTage | DBM

Example: CALC:DB:REF:METH DBM

Sets the unit to dbm of reference value for dB function.

CALCulate:DB:REFERENCE:METHod?

Returns the unit of reference value from the dB function.

Return parameter: Voltage | dBm

CALCulate:DBM:REFERENCE

Sets the resistance value for the dBm function.

Parameter: <NR1> (2, 4, 8, 16, 50, 75, 93, 110, 124, 125, 135, 150, 250, 300, 500, 600, 800, 900, 1000, 1200, 8000) | MIN | MAX | DEF

Example: CALC:DBM:REF MAX

Sets the resistance value for dBm measurements to the maximum allowed.

CALCulate:DBM:REFERENCE?

Returns the resistance value from the dBm function.

Return parameter: <NRF>

CALCulate:SCALe:REFERENCE:AUTO

Sets the first measurement as the reference value.

Parameter: 0 | 1 | ON | OFF

Example: CALC:SCAL:REF:AUTO ON

Sets the reference value auto setting on for dB measurement.

CALCulate:SCALe:REFERENCE:AUTO?

Returns the auto setting status of the dB function.

Return parameter: 0 | 1, 1=ON, 0=OFF

CALCulate:MATH:MMFactor

Sets the scale factor M for math measurement.

Parameter: <NRF> | MIN | MAX | DEF

Example: CALC:MATH:MMF MIN

Sets the scale factor M to the minimum allowed value.

CALCulate:MATH:MMFactor?

Returns the scale factor M used in the math measurement.

Return parameter: <NRF>

CALCulate:MATH:MBFactor

Sets the offset factor B for math measurement.

Parameter: <NRF> | MIN | MAX | DEF

Example: CALC:MATH:MBF MIN

Sets the offset factor B to the minimum allowed value.

CALCulate:MATH:MBFactor?

Returns the offset factor B used in the math measurement.

Return parameter: <NRF>

CALCulate:MATH:PERCent

Sets the reference value for the Percent function.

Parameter: <NRF> | MIN | MAX | DEF

Example: CALC:MATH:PERC MAX

Sets the reference value for the Percent function to the maximum.

CALCulate:MATH:PERCent?

Returns the reference value setting for the Percent function.

Return parameter: <NRF>

CALCulate:TCHart[:STATe]

Turns the trend chart function on/off.

Parameter: 0 | 1 | ON | OFF

Example: CALC:TCH:STAT ON

Turns the trend chart function on.

CALCulate:TCHart [:STATe]?

Returns the trend chart function state.

Return parameter: 0 | 1, 1=ON, 0=OFF

CALCulate:TRANSform:HISTogram[:STATe]

Turns the histogram function on/off.

Parameter: 0 | 1 | ON | OFF

Example: CALC:TRAN:HIST:STAT OFF

Turns the histogram function OFF.

CALCulate:TRANSform:HISTogram[:STATe]?

Returns the histogram function state.

Return parameter: 0 | 1, 1=ON, 0=OFF

CALCulate:TRANSform:HISTogram:ALL?

Returns all of the histogram calculation values.

Return parameter: lower limit, upper limit, total count and all of the histogram data.

<1> <2> <3> <4>

histogram data: refer to “CALC:TRAN:HIST:DATA”

Example: SAMP:COUN 5

CALC:TRAN:HIST:POIN 100

CALC:TRAN:HIST:STAT ON

INIT

CALC:TRAN:HIST:ALL?

Returns: -1.37201300E-04,-1.17674251E-04,+8,+0.....+0

<1> <2> <3> <4>



CALCulate:TRANSform:HISTogram:CLEar[:IMMEDIATE]

Clears all of the histogram calculation values.

Parameter: <None>

Example: CALC:TRAN:HIST:CLE:IMM

CALCulate:TRANSform:HISTogram:COUNt?

Returns the total counts of histogram function.

Return parameter: <NR1>, Ex: +125

CALCulate:TRANSform:HISTogram:DATA?

Returns all of the histogram data.

Return parameter: low than lower limit count, histogram data and high than upper limit count.

<1> <2> <3>

Example: SAMP:COUN 5

CALC:TRAN:HIST:POIN 100

CALC:TRAN:HIST:STAT ON

INIT

CALC:TRAN:HIST:DATA?

Returns: +0,+0,+0,+0,+0,+1,+1,+1,+1.....+0

<1> <2> <3>

CALCulate:TRANSform:HISTogram:POINTs

Sets the number of bins between the lower and upper range values for the histogram.

Parameter: <NR1> (10, 20, 40, 100, 200, 400) | MIN | MAX |

DEF

Example: CALC:TRAN:HIST:POIN MAX

Sets the number of bins for the histogram to the maximum allowed.

CALCulate:TRANSform:HISTogram:POINTs?

Returns the number of bins for the histogram.

Return parameter: +10 | +20 | +40 | +100 | +200 | +400.

CALCulate:TRANSform:HISTogram:RANGe:AUTO

Turns the auto setting on/off of the histogram's lower and upper range values.

Parameter: 0 | 1 | ON | OFF

Example: CALC:TRAN:HIST:RANG:AUTO OFF

Turns the auto setting off of the histogram's lower and upper range values.

CALCulate:TRANSform:HISTogram:RANGe:AUTO?

Returns the auto setting state of the histogram's lower and upper range values.

Return parameter: 0 | 1, 1=ON, 0=OFF.

CALCulate:TRANSform:HISTogram:RANGE:LOWer

Sets the lower range value of the histogram function.

Parameter: <NRF> (-1.0E+15 ~ 1.0E+15) | MIN | MAX | DEF

Example: CALC:TRAN:HIST:RANG:LOW -0.5

Sets the lower range value to -0.5.

CALCulate:TRANSform:HISTogram:RANGE:LOWer?

Returns the lower range value of the histogram function.

Return parameter: <NRF>

CALCulate:TRANSform:HISTogram:RANGE:UPPer

Sets the upper range value of the histogram function.

Parameter: <NRF> (-1.0E+15 ~ 1.0E+15) | MIN | MAX | DEF

Example: CALC:TRAN:HIST:RANG:UPP 1.0

Sets the upper range value to 1.0.

CALCulate:TRANSform:HISTogram:RANGE:UPPer?

Returns the upper range value of the histogram function.

Return parameter: <NRF>

CALCulate:TRANSform:HISTogram[:STATe]

Turns the histogram function on/off.

Parameter: 0 | 1 | ON | OFF

Example: CALC:TRAN:HIST:STAT OFF

Turns the histogram function OFF.

CALCulate:TRANSform:HISTogram[:STATe]?

Returns the histogram function state.

Return parameter: 0 | 1, 1=ON, 0=OFF

CONFigure Commands

CONFigure?

Return current function,range and resolution.

Example: CONF:VOLT:DC 10,MIN

CONF?

Rereuns: "VOLT +1.0000000E+01,+1.0000000E-05".

CONFigure[:VOLTage]:DC

Sets measurement to DC Voltage on the 1st display and specifies range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF), Resolution(<NRF> | MIN | MAX | DEF)]

Example: CONF:VOLT:DC 1,MAX

Sets the voltage range to 1V and the resolution to the maximum.

•Autoranging (AUTO or DEFault), will generate an error if you



specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

CONFigure[:VOLTage][:DC]:RATio

Sets measurement to DCV ratio mode on the 1st display and specifies range/resolution.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: CONF:VOLT:DC:RAT 1

Sets the DC voltage range to 1V using the default resolution.

● Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

CONFigure[:VOLTage]:AC

Sets measurement to AC Voltage on the 1st display and specifies range.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)]

Example: CONF:VOLT:AC

Sets the AC voltage range to auto range.

CONFigure:CURREnt[:DC]

Sets measurement to DC Current on the 1st display and specifies range/resolution.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: CONF:CURR:DC 10e-3,DEF

Sets the DC current range to 10mA using the default resolution.

● Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

CONFigure:CURRent:AC

Sets measurement to AC Current on the 1st display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: CONF:CURR:AC 10e-2

Sets the measurement mode to AC Current with a 100mA range.

CONFigure:RESistance

Sets measurement to 2-wire Resistance on the 1st display and specifies range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF:RES 10e3,MIN

Sets the measurement mode to 2-wire Resistance with a 10kΩ range at the lowest resolution.

- Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.
-

CONFigure:FRESistance

Sets measurement to 4-wire Resistance on the 1st display and specifies the range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF:FRES 1e3,MAX

Sets the measurement mode to 4-wire Resistance with a range of 1kΩ at the maximum resolution.

- Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.
-



CONFigure:FREQuency

Sets measurement to Frequency on the 1st display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF), Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF:FREQ MIN:MAX

Sets the frequency range to max.

CONFigure:PERiod

Sets measurement to Period on the 1st display and specifies range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF), Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF:PER AUTO,MAX

Sets the measurement mode to period with a auto range.

CONFigure:CAPacitance

Sets measurement to Capacitance on the 1st display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF),]

Example: CONF:CAP 10e-7

Sets the Capacitance range to 100nF.

CONFigure:CONTinuity

Sets measurement to Continuity on the 1st display.

Parameter: [None]

CONFigure:DIODE

Sets measurement to Diode on the 1st display.

Parameter: [None]

CONFigure:TEMPerature

Sets measurement to Temperature on the 1st display and specifies type/resolution.

Parameter: [None] | [Probe type [, Type [, 1 [, Resolution(<NRF> | MIN | MAX | DEF)]]]]

<Probe type>: TCOouple, RTD, FRTD, THERmistor, FTHERmistor.

<Type>:

Tcouple: J | K | N | R | S | T | B | E | USER

RTD / FRTD : PT100 | D100 | F100 | PT385 | PT3916 | USER

Thermistor / Fthermistor : 2.2kΩ | 5kΩ | 10kΩ | USER

Example: CONF:TEMP TCO,K

Sets the measurement mode to TCO with a type K sensor.

•Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input

continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

Secondary Display: CONFigure2 Commands

CONFigure2[:VOLTage]:DC

Sets measurement to DC Voltage on the 2nd display and specifies range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF2:VOLT:DC 1,MAX

Sets the voltage range to 1 volt and the resolution to the maximum.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

CONFigure2[:VOLTage]:AC

Sets measurement to AC Voltage on the 2nd display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: CONF2:VOLT:AC

Sets the measurement mode to AC voltage on the 2nd display.

CONFigure2:CURRent[:DC]

Sets measurement to DC Current on the 2nd display and specifies range/resolution.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF2:CURR:DC 10e-3,DEF

Sets the DC current range to 10mA using the default resolution on the 2nd display.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.



CONF2:CURR:AC

Sets measurement to AC Current on the 2nd display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: CONF2:CURR:AC 10e-2

Sets the measurement mode to AC Current with a 100mA range on the 2nd display.

CONF2:FREQuency

Sets measurement to Frequency on the 2nd display and specifies range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF2:FREQ MAX

Sets the frequency range to max on the 2nd display.

CONF2:PERiod

Sets measurement to Period on the 2nd display and specifies the range.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: CONF2:PER

Sets the measurement mode to period measurement using the auto range on the 2nd display.

CONF2:OFF

Turns the 2nd display function off.

Parameter: [None]

DATA Commands

DATA[X]:LAST?

Returns the last measurement value with units taken. You can execute this query at any time, even during a series of measurements.

X = null or 1 indicate 1st display value, X = 2 indicate 2nd display value

Return parameter: <NRF>, Ex: +0.15900000E+01 VDC

• If no data is available, +9.91000000E+37 (Not a Number) is returned with units

DATA:POINTs?

Returns the total number of measurements currently in reading memory.

Return parameter: <NR1>, Ex: +100

- You can store up to 10,000 measurements values in the reading memory of the RSDM-9060 or 100,000 measurements values on the RSDM-9061.
-

DATA:POINTs:EVENT:THRESHOLD

Sets the threshold for event number of measurement.

Parameter: <NR1> RSDM-9060 : 1-10,000 / RSDM-9061 : 1-100,000

Example: DATA:POIN:EVEN:THR 10

Sets the event threshold to 10.

- When measurement numbers reach the set threshold, the Bit9 within the Operator Event Register (STATus:OPERation:EVENT.) will be set as 1.
 - Once the Memory Threshold bit (bit 9 in the Standard Operation Event register) is set, it remains set until cleared by STATus:OPERation:EVENT? or *CLS.
-

DATA:POINTs:EVENT:THRESHOLD?

Returns the event threshold number.

Return parameter: <NR1>, Ex: +10

DATA:REMOVED? <reading_number>,[WAIT]

Reads and erases measurement values from reading memory up to the specified <reading_number>.

The measurement values are read and erased from the reading memory starting with the oldest measurement first.

Ex:SAMP:COUN 10

INIT

DATA :REM? 4

Returns: -1.12816521E-04,-1.13148354E-04,-1.13485152E-04,-1.13365632E-04

- If you do not specify a value for <reading_number>, +9.91000000E+37 (Not a Number) is returned.
 - If reading_number is greater than the latest counts of measurement, it will return the error. However, it will return data if reading_number of counts of measurement reach the set threshold only when WAIT parameter is specified.
 - The R? and DATA:REMOVED? queries can be used during a long series of readings to periodically remove readings from memory that would normally cause the reading memory to overflow. R? does not wait for all readings to complete. It sends
-



the readings that are complete at the time the instrument receives the command.

DIGItal INTerface Commands

DIGItal:INTerface:MODE

Sets the application mode of digital I/O (Remote Control Only).

Parameter: COMP | 4094 | IO

Example: DIG:INT:MDOE IO

Sets the digital I/O to IO mode.

DIGItal:INTerface:MODE?

Returns the digital I/O mode.

Return parameter: COMP | 4094 | IO

DIGItal:INTerface:DATA:OUTPut

When the 4094 mode (serial to parallel) is selected for digital I/O, make use of this command to set output status.

Parameter: <NR1> (0-255), <Boolean> (0 | 1) / (serial input data, strobe pulse)

Example: DIG:INT:MDOE 4094

DIG:INT:DATA:OUPt 10,1

DIGItal:INTerface:DATA:SETUp

When the IO mode is selected for digital I/O, make use of this command to set output status.

Parameter: <Boolean> (0 | 1) / (OUT1, OUT2, OUT3, OUT4)

Example: DIG:INT:MDOE IO

DIG:INT:DATA:SET 0,1,0,1

Sets OUT1 to low, OUT2 to high, OUT3 to low, OUT4 to high,

DISPlay Commands

DISPlay[:STATe]

Sets TFT LCD display screen on/off.

Parameter: 0 | 1 | ON | OFF

Example: DISP OFF

Turns the TFT LCD display screen OFF.

DISPlay[:STATe]?

Returns the TFT LCD display screen state.

Return parameter: 0 | 1, 0=OFF, 1=ON

DISPlay:TEXT:CLEar

Clears the text message from the display.

- With DISP:STAT ON, DISP:TEXT:CLE returns the display to its normal mode.
 - With DISP:STAT OFF, DISP:TEXT:CLE clears the message and the display remains disabled. To enable the display, send DISPlay ON or press the front panel Shift key (Local).
-

DISPlay:TEXT[:DATA]

Sets the text message to TFTLCD display screen.

Parameter: "<message>"

Example: DISP:TEXT:DATA "testing"

Prints the testing characters to TFT LCD display screen.

DISPlay:TEXT[:DATA]?

Returns the text message of TFT LCD display screen.

Return parameter: "<message>", Ex: "testing"

DISPlay:VIEW

Sets the display form of measured value.

Parameter: NUMeric | HISTogram | TCHart | METer

Example: DISP:VIEW HIST

Sets display in the histogram mode.

DISPlay:VIEW?

Returns the display form of measured value.

Return parameter: NUM | HIST | TCH | MET

MEASure Commands

MEASURE[:VOLTage]:DC?

Returns the DC voltage measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:VOLT:DC? MIN

> +6.64925206E-04

Returns the DC voltage measurement value as 0.6649 mV.

- Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.



MEASure[:VOLTage][:DC]:RATio?

Returns the DC ratio measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:VOLT:DC:RAT?

> +2.87393920E-03

Returns the DC ratio measurement value as 2.87393 m.

● Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure[:VOLTage]:AC?

Returns the AC voltage measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)]

Example: MEAS:VOLT:AC?

> +1.34567684E-04

Returns the AC voltage measurement value as 0.134 mV.

MEASure:CURRent[:DC]?

Returns the DC current measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:CURR:DC? 0.1

> -1.09750431E-07

Returns the DC current measurement value as -0.1097 µA.

● Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure:CURRent:AC?

Returns the AC current measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)]

Example: MEAS:CURR:AC?

> +1.46445157E-07

Returns the AC current measurement value as 0.000146 mA.

MEASure:RESistance?

Returns the 2-wire resistance measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:RES? 1,MIN

> +1.18137284E+06

Sets measurement mode to 2-wire resistance with a range of 1Ω at the minimum resolution and return measurement value.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure:FRESistance?

Returns the 4-wire resistance measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:FRES?

> +1.18134472E+06

Sets measurement mode to 4-wire resistance to auto range and return measurement value.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure:FREQuency?

Returns the frequency measurement value on the 1st display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX | DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS:FREQ?

> +0.21504529E+05

Returns the frequency measurement value as 21.5 kHz.



MEASure:PERiod?

Returns the period measurement value on the 1st display.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF), Resolution(<NRF> | MIN | MAX | DEF)]]

Example: MEAS:PER? MAX

Returns the period measurement value at the maximum range.

MEASure:CAPacitance

Returns the capacitance measurement value on the 1st display

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: MEAS:CAP?

Returns the capacitance measurement value.

MEASure:CONTinuity?

Returns the continuity measurement value on the 1st display.

Example: MEAS:CONT?

Returns the continuity measurement value.

MEASure:DIODe?

Returns the diode measurement value on the 1st display.

Example: MEAS:DIOD?

Returns the diode measurement value.

MEASure:TEMPerature?

Returns the temperature measurement value with the selected probe and type on the 1st display.

Parameter: [None] | [Probe type [, Type [, 1 [, Resolution(<NRF> | MIN | MAX | DEF)]]]]

< Probe type >:

TCouple | RTD | FRTD | THERmistor | FTHermistor

<Type>:

Tcouple: J | K | N | R | S | T | B | E

RTD / FRTD : PT100 | D100 | F100 | PT385 | PT3916 | USER

Thermistor / Fthermistor : 2.2kΩ | 5kΩ | 10kΩ | USER

Example: MEAS:TEMP? TCO,K

> +0.26561348E+02

Returns the temperature measurement value.

- Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.
-

Secondary Display: MEASure2 Commands

MEASure2[:VOLTage]:DC?

Returns the DC voltage measurement value on the 2nd display.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: MEAS2:VOLT:DC? 1,MIN

> +4.88519457E-04

Returns the DC voltage measurement value as 0.000488 V.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure2[:VOLTage]:AC?

Returns the AC voltage measurement value on the 2nd display.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: MEAS2:VOLT:AC? MIN

> +5.11895142E-04

Returns the AC voltage measurement value as 0.5118 mV.

MEASure2:CURRrent[:DC]?

Returns the DC current measurement value on the 2nd display.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRF> | MIN | MAX | DEF)]]

Example: MEAS2:CURR:DC? 1E-4

> -1.05580457E-07

Returns the DC current measurement value as -0.1055 µA.

• Autoranging (AUTO or DEFault), will generate an error if you specify a <resolution> because the instrument cannot accurately resolve the integration time (especially if the input continuously changes). If your application requires autoranging, specify DEFault for the <resolution> or omit the <resolution> altogether.

MEASure2:CURRrent:AC?

Returns the AC current measurement value on the 2nd display.

Parameter: [None] | [Range(<NRF> | AUTO | MIN | MAX | DEF)]

Example: MEAS2:CURR:AC?

> +2.20387154E-07

Returns the AC current measurement value as 0.2203 µA.



MEASure2:FREQuency?

Returns the frequency measurement value on the 2nd display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS2:FREQ?

> +0.21501429E+05

Returns the frequency measurement value as 21.5kHz.

MEASure2:PERiod?

Returns the period measurement value on the 2nd display.

Parameter: [None] | [Range(<NRf> | AUTO | MIN | MAX |

DEF)[,Resolution(<NRf> | MIN | MAX | DEF)]]

Example: MEAS2:PER? MAX

Returns the period measurement value at the maximum range.

SENSe Related Commands

[SENSe:]FUNCTION[X]

Sets the function for the 1st or 2nd display, which X = 1 indicate 1st display, X = 2 indicate 2nd display

Parameter:

(1st): "VOLT[:DC]", "VOLT:AC", "CURR[:DC]", "CURR:AC",
"RES", "FRES", "FREQ", "PER", "TEMP:TCO", "TEMP:RTD",
"TEMP:FRTD", "TEMP:THER", "TEMP:FTH", "CAP", "DIOD",
"CONT"

(2nd): "VOLT[:DC]", "VOLT:AC", "CURR[:DC]", "CURR:AC",
"FREQ", "PER", "NON"

Example: SENS:FUNC1 "VOLT:DC"

Sets the 1st display to the DCV function.

[SENSe:]FUNCTION[X]?

Returns the function displayed on the 1st or 2nd display, which X = 1 indicate 1st display, X = 2 indicate 2nd display

Return parameter:

(1st): "VOLT", "VOLT:AC", "CURR", "CURR:AC", "RES",
"FRES", "FREQ", "PER", "TEMP", "CAP", "DIOD", "CONT"

(2nd): "VOLT", "VOLT:AC", "CURR", "CURR:AC", "FREQ",
"PER", "NON"

[SENSe:]DATA?

Returns the auxiliary measurement value.

[SENSe:]DIGItal:SHIFt

Sets the digital shift function on or off.

Parameter: 0 | 1 | ON | OFF

Example: SENS:DIG:SHIF ON

Turn the digital shift function on.

[SENSe:]DIGItal:SHIFt?

Returns the digital shift function status.

Return parameter: 0 | 1 ,1=AUTO, 0=User selected

[SENSe:]UNIT

Sets the temperature unit.

Parameter: C | F | K

Example: SENS:UNIT C

Sets the temperature unit to °C.

[SENSe:]UNIT?

Returns the temperature unit.

Return parameter: C | F | K

SENSe AVERage Commands

[SENSe:]AVERage:COUNt[X]

Sets the digital filter count, which X = 1 indicate 1st display, X = 2 indicate 2nd display.

Parameter: <NR1> (2 ~ 100) | MIN | MAX | DEF

Example: SENS:AVER:COUN 100

Sets 2nd display digital filter count number to 100.

[SENSe:]AVERage:COUNt[X]?

Returns the digital filter count.

Return parameter: <NR1>, Ex: +002

[SENSe:]AVERage:STATe[X]

Turns the digital filter function On/Off, which X = 1 indicate 1st display, X = 2 indicate 2nd display.

Parameter: 0 | 1 | ON | OFF

Example: SENS:AVER:STAT ON

Turns 1st display digital filter function on.

● If NPLC >= 7.2k/s, the filter function will be disabled.

[SENSe:]AVERage:STATe[X]?

Returns the state of the digital filter function (on or off).

Return parameter: 0 | 1, 0=OFF, 1=ON



[SENSe:]AVERage:TCONtrol[X]

Selects the digital filter type, which X = 1 indicate 1st display, X = 2 indicate 2nd display.

Parameter: MOV | REP

Example: SENS:AVER:TCON MOV

Sets 1st display digital filter type to the moving filter.

[SENSe:]AVERage:TCONtrol[X]?

Returns the digital filter type.

Return parameter: MOV (moving) | REP (repeating)

[SENSe:]AVERage:WINDOW[X]

Selects a digital filter window, which X = 1 indicate 1st display, X = 2 indicate 2nd display.

Parameters: 0.01 | 0.1 | 1 | 10 | NONE

Example: SENS:AVER:WIND 0.1

Sets 1st display digital filter window to 0.1%

[SENSe:]AVERage:WINDOW[X]?

Returns the digital filter window value.

Return parameter: 0.01 | 0.1 | 1 | 10 | NONE

[SENSe:]AVERage:WINDOW:METHod[X]

Selects a digital filter window method type, which X = 1 indicate 1st display, X = 2 indicate 2nd display.

Parameters: Measure | Range

Example: SENS:AVER:WIND:METH Measure

Sets 1st display digital filter window method to the measure type

[SENSe:]AVERage:WINDOW:METHod[X]?

Returns the digital filter window method type.

Return parameter: Measure | Range

SENSe CAPacitance Commands

[SENSe:]CAPacitance:CABLE:CALibratoin

It is used like Relative function before capacitance measurement, (only be used at range 1nF,10nF)

Parameter: [None]

Example: CONF:CAP 1e-9

SENS:CAP:CABL:CAL

Makes test lead to zero before capacitance measurement.

[SENSe:]CAPacitance:RANGe

Sets the Capacitance measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:CAP:RANG 1e-9

Sets the capacitance range to 1nF.

[SENSe:]CAPacitance:RANGE?

Returns the capacitance measurement range.

[SENSe:]CAPacitance:RANGe:AUTO

Sets the Capacitance Auto-range on, off or once only.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:CAP:RANG:AUTO ON

Turns Auto-range on for capacitance measurements.

[SENSe:]CAPacitance:RANGE:AUTO?

Returns the capacitance Auto-range settings.

Return parameter: 0 | 1, 0=OFF, 1=ON

SENSe CONTInuity Commands

[SENSe:]CONTInuity:NPLCycles

Sets the integration time for Continuity measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.15 | 0.6 | 1).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)

Example: SENS:CONT:NPLC MIN

Sets the integration time to the 0.15 PLCs for continuity measurement.

[SENSe:]CONTInuity:NPLCycles?

Returns the integration time for Continuity measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.15 | 0.6 | 1

[SENSe:]CONTInuity:RESolution

Sets the Continuity measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRF> | MIN | MAX | DEF)

Example: SENS:CONT:RES 0.001

Sets the Continuity resolution to 0.001

[SENSe:]CONTInuity:RESolution?

Returns the Continuity measurement resolution.



[SENSe:]CONTinuity:THReShold

Sets the continuity threshold value in ohms.

Parameter: <NR1> (1 ~ 1000)

Example: SENS:CONT:THR 10

Sets the continuity threshold value to 10Ω

[SENSe:]CONTinuity:THReShold?

Returns the continuity threshold value.

Return parameter: <NR1>, Ex: +0010

[SENSe:]CONTinuity:TRIGger:DELay

Sets the trigger delay that minimum step is microseconds of Continuity measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:CONT:TRIG:DEL 0.0001

Sets the trigger delay time to 100us of Continuity measurement.

[SENSe:]CONTinuity:TRIGger:DELay?

Returns the trigger delay time in seconds of Continuity measurement.

Return parameter: <NRF>

[SENSe:]CONTinuity:ZERO:AUTO

Sets the auto zero mode to on, off or once only of Continuity measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:CONT:ZERO:AUTO OFF

Sets the auto zero to off.

[SENSe:]CONTinuity:ZERO:AUTO?

Returns the auto zero mode of Continuity measurement.

Return parameter: 0 | 1, 1=ON, 0=OFF

SENSe DIODe Commands

[SENSe:]DIODe:NPLCycles

Sets the integration time for Diode measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.15 | 0.6 | 1).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)

Example: SENS:DIOD:NPLC DEF

Sets the integration time to the 1 PLCs for diode measurement.

[SENSe:]DIODe:NPLCycles?

Returns the integration time for Diode measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.15 | 0.6 | 1

[SENSe:]DIODe:RESolution

Sets the Diode measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRF> | MIN | MAX | DEF)

Example: SENS:DIOD:RES 0.1e-4

Sets the Diode resolution to 0.00001

[SENSe:]DIODe:RESolution?

Returns the Diode measurement resolution.

[SENSe:]DIODe:TRIGger:DELay

Sets the trigger delay that minimum step is microseconds of Diode measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:DIOD:TRIG:DEL 0.5

Sets the trigger delay time to 500ms of Diode measurement.

[SENSe:]DIODe:TRIGger:DELay?

Returns the trigger delay time in seconds of Diode measurement.

Return parameter: <NRF>

[SENSe:]DIODe:ZERO:AUTO

Sets the auto zero mode to on, off or once only of Diode measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:DIOD:ZERO:AUTO ON

Sets the auto zero to on.

[SENSe:]DIODe:ZERO:AUTO?

Returns the auto zero mode of Diode measurement.

Return Parameter: 0 | 1, 1=ON, 0=OFF

SENSe VOLTage Commands

[SENSe:]VOLTage[:DC]:IMPedance:AUTO

Sets the Automatic input impedance for DC Voltage measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:VOLT:DC:IMP:AUTO ON

Turns the Automatic input impedance on.



[SENSe:]VOLTage[:DC]:IMPedance:AUTO?

Returns the Automatic input impedance mode.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]VOLTage[:DC]:NPLCycles

Sets the integration time for DC Voltage measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)

Example: SENS:VOLT:DC:NPLC 12

Sets the integration time to 12 PLCs for DC Voltage measurements.

[SENSe:]VOLTage[:DC]:NPLCycles?

Returns the integration time for DC Voltage measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12

[SENSe:]VOLTage[:DC]:NULL[:STATe]

Sets the relative function on/off for DC Voltage measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:VOLT:DC:NULL:STAT OFF

Turns the relative function off for DC Voltage measurement.

[SENSe:]VOLTage[:DC]:NULL[:STATe]?

Returns the relative function state of DC Voltage measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]VOLTage[:DC]:NULL:VALue

Sets the relative value for DC Voltage measurement.

Parameter: <NRF> (-1200.0~1200.0 V) | MIN | MAX | DEF

Example: SENS:VOLT:DC:NULL:STAT ON

SENS:VOLT:DC:NULL:VAL 1.2

Sets the relative value to 1.2V for DC Voltage measurement.

[SENSe:]VOLTage[:DC]:NULL:VALue?

Returns the current relative value of DC Voltage measurement.

[SENSe:]VOLTage[:DC]:NULL:VALue:AUTO

Sets the relative value auto on/off for DC Voltage measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:VOLT:DC:NULL:STAT ON

SENS:VOLT:DC:NULL:VAL:AUTO ON

READ ?

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]VOLTage[:DC]:NULL:VALue:AUTO?

Returns the null value auto state of DC Voltage measurement.

[SENSe:]VOLTage[:DC]:RANGE

Sets the DC voltage measurement range.

Parameter: <NRF> | MIN | MAX | DEF

Example: SENS:VOLT:DC:RANG MIN

Set the DC voltage range to lowest range allowed.

[SENSe:]VOLTage[:DC]:RANGE?

Returns the DC voltage measurement range.

[SENSe:]VOLTage[:DC]:RANGE:AUTO

Sets the DC voltage Auto-range setting on, off or once only.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:VOLT:DC:RANG:AUTO ON

Turns Auto-range on for DC voltage measurements.

[SENSe:]VOLTage[:DC]:RANGE:AUTO?

Returns the DC voltage Auto-range settings.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]VOLTage[:DC]:RESolution

Sets the DC Voltage measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRF> | MIN | MAX | DEF)

Example: SENS:VOLT:DC:RES MAX

Sets the DC Voltage resolution to MAX.

[SENSe:]VOLTage[:DC]:RESolution?

Returns the DC Voltage resolution.

[SENSe:]VOLTage[:DC]:TRIGger:DELay

Sets the trigger delay that minimum step is microseconds of DC Voltage measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:VOLT:DC:TRIG:DEL MAX

Sets the trigger delay time to the maximum of DC Voltage measurement.



[SENSe:]VOLTage[:DC]:TRIGger:DELay?

Returns the trigger delay time in seconds of DC Voltage measurement.

Return parameter: <NRf>

[SENSe:]VOLTage[:DC]:ZERO:AUTO

Sets the auto zero mode to on, off or once of DC Voltage measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:VOLT:DC:ZERO:AUTO ONCE

Sets the auto zero to once.

[SENSe:]VOLTage[:DC]:ZERO:AUTO?

Returns the auto zero mode of DC Voltage measurement.

Return Parameter: 0 | 1, 1=ON, 0=OFF

[SENSe:]VOLTage:AC:BANDwidth

Sets the AC bandwidth (AC filter).

Parameter: <NRf> (3 | 20 | 200) | MIN | MAX | DEF

Example: SENS:VOLT:AC:BAND 20

Sets the AC bandwidth to 20Hz.

[SENSe:]VOLTage:AC:BANDwidth?

Returns the AC bandwidth.

Return parameter: <NRf>, Ex: 3.0000000E+00

[SENSe:]VOLTage:AC:NULL[:STATe]

Sets the relative function on/off for AC Voltage measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:VOLT:AC:NULL:STAT ON

Turns the relative function on for AC Voltage measurements.

[SENSe:]VOLTage:AC:NULL[:STATe]?

Returns the relative function state of AC Voltage measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]VOLTage:AC:NULL:VALue

Sets the relative value for AC Voltage measurement.

Parameter: <NRf> (-1200.0~1200.0 V) | MIN | MAX | DEF

Example: SENS:VOLT:AC:NULL:VAL 1

Sets the relative value to 1V for AC Voltage measurement.

[SENSe:]VOLTage:AC:NULL:VALue?

Returns the current relative value of AC Voltage measurement.

[SENSe:]VOLTage:AC:NULL:VALue:AUTO

Sets the relative value auto on/off for AC Voltage measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:VOLT:AC:NULL:STAT ON

SENS:VOLT:AC:NULL:VAL:AUTO OFF

READ?

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]VOLTage:AC:NULL:VALue:AUTO?

Returns the null value auto state of AC Voltage measurement.

[SENSe:]VOLTage:AC:RANGE

Sets the AC voltage measurement range.

Parameter: <NRF> | MIN | MAX | DEF

Example: SENS:VOLT:AC:RANG MAX

Set the AC voltage range to highest range allowed.

[SENSe:]VOLTage:AC:RANGE?

Returns the AC Voltage measurement range.

[SENSe:]VOLTage:AC:RANGE:AUTO

Sets the AC voltage Auto-range setting on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:VOLT:AC:RANG:AUTO ON

Turns Auto-range on for AC voltage measurements.

[SENSe:]VOLTage:AC:RANGE:AUTO?

Returns the AC voltage Auto-range settings.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]VOLTage:AC:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of AC Voltage measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:VOLT:AC:TRIG:DEL 0.4

Sets the trigger delay time to 400ms of AC Voltage measurement.

[SENSe:]VOLTage:AC:TRIGger:DELay?

Returns the trigger delay time in seconds of AC Voltage measurement.

Return parameter: <NRF>



SENSe CURRent Commands

[SENSe:]CURREnt[:DC]:NPLCycles

Sets the integration time for DC Current measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRf> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12).
Parameter: NPLCycles(<NRf> | MIN | MAX | DEF)

Example: SENS:CURR:DC:NPLC 1

Sets the integration time to 1 PLCs for DC Current measurement.

[SENSe:]CURREnt[:DC]:NPLCycles?

Returns the integration time for DC Current measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12

[SENSe:]CURREnt[:DC]:NULL[:STATe]

Sets the relative function on/off for DC Current measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:CURR:DC:NULL:STAT ON

Turns the relative function on for DC Current measurement.

[SENSe:]CURREnt[:DC]:NULL[:STATe]?

Returns the relative function state of DC Current measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]CURREnt[:DC]:NULL:VALue

Sets the relative value for DC Current measurement.

Parameter: <NRf> (-12.0~12.0 A) | MIN | MAX | DEF

Example: SENS:CURR:DC:NULL:VAL 1.1

Sets the relative value to 1.1A for DC Current measurement.

[SENSe:]CURREnt[:DC]:NULL:VALue?

Returns the current relative value of DC Current measurement.

[SENSe:]CURREnt[:DC]:NULL:VALue:AUTO

Sets the relative value auto on/off for DC Current measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:CURR:DC:NULL:STAT ON

SENS:CURR:DC:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]CURREnt[:DC]:NULL:VALueAUTO?

Returns the null value auto state of DC Current measurement.

[SENSe:]CURREnt[:DC]:RANGe

Sets the DC current measurement range.

Parameter: Range(<NRf> | MIN | MAX | DEF)

Example: SENS:CURR:DC:RANG 10e-2

Sets the DC current range to 100mA.

[SENSe:]CURREnt[:DC]:RANGe?

Returns the DC current measurement range.

[SENSe:]CURREnt[:DC]:RANGe:AUTO

Sets the DC current Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:CURR:DC:RANG:AUTO OFF

Turns Auto-range off for DC current measurement.

[SENSe:]CURREnt[:DC]:RANGe:AUTO?

Returns the DC current Auto-range settings.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]CURREnt[:DC]:RESolution

Sets the DC Current measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRf> | MIN | MAX | DEF)

Example: SENS:CURR:DC:RES 0.01

Sets the DC Current resolution to 0.01

[SENSe:]CURREnt[:DC]:RESolution?

Returns the DC Current resolution.

[SENSe:]CURREnt[:DC]:TERMinals

Assigns an input port for the current function.

Parameter: <NR1> RSDM-9060 : 3 / RSDM-9061 : 3 | 10

Example: SENS:CURR:DC:TERM 3

Sets the input jack to the 3A current input port.

[SENSe:]CURREnt[:DC]:TERMinals?

Returns the assigned input port used for the current function.

Return parameter: +3 | +10



-
- [SENSe:]CURREnt[:DC]:TRIGger:DELay
Sets the trigger delay time that minimum step is microseconds of DC Current measurement.
Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF
Example: SENS:CURR:DC:TRIG:DEL 2e-4
Sets the trigger delay time to 200us of DC Current measurement.
-
- [SENSe:]CURREnt[:DC]:TRIGger:DELay?
Returns the trigger delay time in seconds of DC Current measurement.
Return parameter: <NRF>
-
- [SENSe:]CURREnt[:DC]:ZERO:AUTO
Sets the auto zero to on, off or once of DC Current measurement.
Parameter: 0 | 1 | ON | OFF | ONCE
Example: SENS:CURR:DC:ZERO:AUTO ON
Sets the auto zero to on.
-
- [SENSe:]CURREnt[:DC]:ZERO:AUTO?
Returns the auto zero mode of DC Current measurement.
Return Parameter: 0 | 1, 1=ON, 0=OFF
-
- [SENSe:]CURREnt:AC:BANDwidth
Sets the AC current bandwidth (AC filter).
Parameter: <NRF> (3 | 20 | 200) | MIN | MAX | DEF
Example: SENS:CURR:AC:BAND 3
Sets the AC current bandwidth to 3Hz.
-
- [SENSe:]CURREnt:AC:BANDwidth?
Returns the AC current bandwidth.
Return parameter: <NRF>
-
- [SENSe:]CURREnt:AC:NULL[:STATe]
Sets the relative function on/off for AC Current measurement.
Parameter: 0 | 1 | ON | OFF
Example: SENS:CURR:AC:NULL:STAT ON
Turns the relative function on for AC Current measurement.
-
- [SENSe:]CURREnt:AC:NULL[:STATe]?
Returns the relative function state of AC Current measurement.
Return parameter: 0|1, 0=OFF, 1=ON
-
- [SENSe:]CURREnt:AC:NULL:VALue
Sets the relative value for AC Current measurement.
Parameter: <NRF> (-12.0~12.0 A) | MIN | MAX | DEF
Example: SENS:CURR:AC:NULL:VAL 0.02
Sets the relative value to 0.02A for AC Current measurement.

[SENSe:]CURREnt:AC:NULL:VALue?

Returns the current relative value of AC Current measurement.

[SENSe:]CURREnt:AC:NULL:VALue:AUTO

Sets the relative value auto on/off for AC Current measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:CURR:AC:NULL:STAT ON

SENS:CURR:AC:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]CURREnt:AC:NULL:VALue:AUTO?

Returns the null value auto state of AC Current measurement.

[SENSe:]CURREnt:AC:RANGe

Sets the AC current measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:CURR:AC:RANG 10e-3

Sets the AC current range to 10mA.

[SENSe:]CURREnt:AC:RANGe?

Returns the AC current measurement range.

[SENSe:]CURREnt:AC:RANGe:AUTO

Sets the AC current Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:CURR:AC:RANG:AUTO OFF

Turns Auto-range off for AC current measurements.

[SENSe:]CURREnt:AC:RANGe:AUTO?

Returns the AC current Auto-range settings.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]CURREnt:AC:TERMinals

Assigns an input port for the current function.

Parameter: <NR1> RSDM-9060 : 3 / RSDM-9061 : 3 | 10

Example: SENS:CURR:AC:TERM 10

Sets the input jack to the 10A current input port.

[SENSe:]CURREnt:AC:TERMinals?

Returns the assigned input port used for the current function.

Return Parameter: +3 | +10

[SENSe:]CURREnt:AC:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of AC Current measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:CURR:AC:TRIG:DEL 1

Sets the trigger delay time to 1s of AC Current measurement.



[SENSe:]CURRent:AC:TRIGger:DELay?

Returns the trigger delay time in seconds of AC Current measurement.

Return parameter: <NRF>

SENSe RESistance Commands

[SENSe:]RESistance:NPLCycles

Sets the integration time for 2-wire resistance measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)

Example: SENS:RES:NPLC MIN

Sets the integration time to 0.006 PLCs for 2-wire resistance measurement.

[SENSe:]RESistance:NPLCycles?

Returns the integration time for 2-wire resistance measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12

[SENSe:]RESistance:NULL[:STATe]

Sets the relative function on/off for 2-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:RES:NULL:STAT ON

Turns the relative function on for 2-wire resistance measurement.

[SENSe:]RESistance:NULL[:STATe]?

Returns the relative function state of 2-wire resistance measurement.

Return parameter: 0|1, 0=OFF, 1=ON

[SENSe:]RESistance:NULL:VALue

Sets the relative value for 2-wire resistance measurement.

Parameter: <NRF> (-120.0~120.0 MΩ) | MIN | MAX | DEF

Example: SENS:RES:NULL:VAL 2

Sets the relative value to 2Ω for 2-wire resistance measurements.

[SENSe:]RESistance:NULL:VALue?

Returns the current relative value of 2-wire resistance measurement.

[SENSe:]RESistance:NULL:VALue:AUTO

Sets the relative value auto on/off for 2-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:RES:NULL:STAT ON

SENS:RES:NULL:VAL:AUTO OFF

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]RESistance:NULL:VALue:AUTO?

Returns the null value auto state of 2-wire resistance measurement.

[SENSe:]RESistance:RANGe

Sets the 2-wire resistance measurement range.

Parameter: Range(<NRf> | MIN | MAX | DEF)

Example: SENS:RES:RANG 1000

Sets the 2-wire resistance range to 1kΩ.

[SENSe:]RESistance:RANGe?

Returns the 2-wire resistance measurement range.

[SENSe:]RESistance:RANGe:AUTO

Sets the 2-wire resistance Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:RES:RANG:AUTO ON

Turns Auto-range on for 2-wire resistance measurement.

[SENSe:]RESistance:RANGe:AUTO?

Returns the 2-wire resistance Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]RESistance:RESolution

Sets the 2-wire resistance measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRf> | MIN | MAX | DEF)

Example: SENS:RES:RES 0.01

Sets the 2-wire resistance resolution to 0.01

[SENSe:]RESistance:RESolution?

Returns the 2-wire resistance resolution.



[SENSe:]RESistance:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of 2-wire resistance measurement.

Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:FRES:TRIG:DEL DEF

Sets the trigger delay time to 1s of 2-wire resistance measurement.

[SENSe:]RESistance:TRIGger:DELay?

Returns the trigger delay time in seconds of 2-wire resistance measurement.

Return parameter: <NRF>

[SENSe:]RESistance:ZERO:AUTO

Sets the auto zero mode to on, off or once of 2-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:RES:ZERO:AUTO ON

Sets the auto zero to on.

[SENSe:]RESistance:ZERO:AUTO?

Returns the auto zero mode of 2-wire resistance measurement.

Return Parameter: 0 | 1, 1=ON, 0=OFF

[SENSe:]FRESistance:NPLCycles

Sets the integration time for 4-wire resistance measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)

Example: SENS:FRES:NPLC MAX

Sets the integration time to the 12 PLCs for 4-wire resistance measurement.

[SENSe:]FRESistance:NPLCycles?

Returns the integration time for 4-wire Resistance measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 0.006 | 0.0083 | 0.0125 | 0.025 | 0.05 | 0.15 | 0.6 | 1 | 3 | 12

[SENSe:]FRESistance:NULL[:STATe]

Sets the relative function on/off for 4-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:FRES:NULL:STAT ON

Turns the relative function on for 4-wire resistance measurement.

[SENSe:]FRESistance:NULL[:STATe]?

Returns the relative function state of 4-wire resistance measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]FRESistance:NULL:VALue

Sets the relative value for 4-wire resistance measurement.

Parameter: <NRF> (-120.0~120.0 MΩ) | MIN | MAX | DEF

Example: SENS:FRES:NULL:VAL 2

Sets the relative value to 2Ω for 4-wire resistance measurement.

[SENSe:]FRESistance:NULL:VALue?

Returns the current relative value of 4-wire resistance measurement.

[SENSe:]FRESistance:NULL:VALue:AUTO

Sets the relative value auto on/off for 4-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:FRES:NULL:STAT ON

SENS:FRES:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]FRESistance:NULL:VALue:AUTO?

Returns the null value auto state of 4-wire resistance measurement.

[SENSe:]FRESistance:RANGe

Sets the 4-wire resistance measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:FRES:RANG 10e3

Sets the 4-wire resistance range to 10kΩ.

[SENSe:]FRESistance:RANGe?

Returns the 4-wire resistance measurement range.



[SENSe:]FRESistance:RANGE:AUTO

Sets the 4-wire resistance Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:FRES:RANG:AUTO ON

Turns Auto-range on for 4-wire resistance measurement.

[SENSe:]FRESistance:RANGE:AUTO?

Returns the 4-wire resistance Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]FRESistance:RESolution

Sets the 4-wire resistance measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRF> | MIN | MAX | DEF)

Example: SENS:FRES:RES 0.01

Sets the 4-wire resistance resolution to 0.01

[SENSe:]FRESistance:RESolution?

Returns the 4-wire resistance resolution.

[SENSe:]FRESistance:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of 4-wire resistance measurement.

Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:RES:TRIG:DEL MIN

Sets the trigger delay time to 0s of 4-wire resistance measurement.

[SENSe:]FRESistance:TRIGger:DELay?

Returns the trigger delay time in seconds of 4-wire resistance measurement.

Return parameter: <NRF>

[SENSe:]FRESistance:ZERO:AUTO

Sets the auto zero mode to on, off or once of 4-wire resistance measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:FRES:ZERO:AUTO ON

Sets the auto zero to on.

[SENSe:]FRESistance:ZERO:AUTO?

Returns the auto zero mode of 4-wire resistance measurement.

Return Parameter: 0 | 1, 1=ON, 0=OFF

SENSe FREQency Commands

[SENSe:]FREQuency:APERture

Sets the aperture time (gate time) for the frequency function (0.01s, 0.1s, 1s).

Parameter: <NRf> (0.01 | 0.1 | 1)

Example: SENS:FREQ:APER 0.01

Sets the gate time to 0.01 seconds.

[SENSe:]FREQuency:APERture?

Returns aperture time (gate time) for the frequency function.

Return parameter: <NRf>

[SENSe:]FREQuency:CURREnt:RANGe

Sets the frequency measurement range.

Parameter: Range(<NRf> | MIN | MAX | DEF)

Example: SENS:FREQ:CURR:RANG MIN

Sets the frequency to the minimum range.

[SENSe:]FREQuency:CURREnt:RANGe?

Returns the frequency measurement range.

[SENSe:]FREQuency:CURREnt:RANGe:AUTO

Sets the Frequency Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:FREQ:CURR:RANG:AUTO ON

Turns the Auto-range on for the frequency function.

[SENSe:]FREQuency:CURREnt:RANGe:AUTO?

Returns the frequency Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]FREQuency:INPutjack

Assigns an input port for the frequency function.

Parameter: <NR1> (0 | 1 | 2), 0=Voltage, 1=3A, 2=10A

Example: SENS:FREQ:INP 0

Sets the input jack to the Voltage input port.

[SENSe:]FREQuency:INPutjack?

Returns the assigned input port used for the frequency function.

Return Parameter: VOLT | 3A | 10A

[SENSe:]FREQuency:NULL[:STATe]

Sets the relative function on/off for Frequency measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:FREQ:NULL:STAT ON

Turns the relative function on for Frequency measurement.



[SENSe:]FREQuency:NULL[:STATe]?

Returns the relative function state of Frequency measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]FREQuency:NULL:VALue

Sets the relative value for Frequency measurement.

Parameter: <NRF> (-1.2e6~1.2e6 Hz) | MIN | MAX | DEF

Example: SENS:FREQ:NULL:VAL 10

Sets the relative value to 10Hz for Frequency measurement.

[SENSe:]FREQuency:NULL:VALue?

Returns the current relative value of Frequency measurement.

[SENSe:]FREQuency:NULL:VALue:AUTO

Sets the relative value auto on/off for Frequency measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:FREQ:NULL:STAT ON

SENS:FREQ:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]FREQuency:NULL:VALue:AUTO?

Returns the null value auto state of Frequency measurement.

[SENSe:]FREQuency:TIMEout:AUTO

Assigns timeout time at the frequency measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:FREQ:TIM:AUTO OFF

Sets the timeout time at 1 seconds.

[SENSe:]FREQuency:TIMEout:AUTO?

Returns the assigned timeout time used for the frequency function.

Return parameter: 0 | 1, 0:timeout time = 1 second, 1:timeout time is different in according with ac filter bandwith (gate time).

[SENSe:]FREQuency:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of Frequency measurement.

Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:FREQ:TRIG:DEL 0.5

Sets the trigger delay time to 0.5s of Frequency measurement.

[SENSe:]FREQuency:TRIGger:DELay?

Returns the trigger delay time in seconds of Frequency measurement.

Return parameter: <NRF>

[SENSe:]FREQuency:VOLTage:RANGE

Sets the frequency measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:FREQ:VOLT:RANG MIN

Sets the frequency to the minimum range.

[SENSe:]FREQuency:VOLTage:RANGE?

Returns the frequency measurement range.

[SENSe:]FREQuency:VOLTage:RANGE:AUTO

Sets the Frequency Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:FREQ:VOLT:RANG:AUTO ON

Turns the Auto-range on for the frequency measurement.

[SENSe:]FREQuency:VOLTage:RANGE:AUTO?

Returns the Frequency Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]PERiod:APERture

Sets the aperture time (gate time) for the period function(0.01s, 0.1s, 1s).

Parameter: <NRF> (0.01 | 0.1 | 1)

Example: SENS:PER:APER 0.1

Sets the gate time to 0.1 seconds for the period function.

[SENSe:]PERiod:APERture?

Returns the aperture time (gate time) for the period function.

Return parameter: <NRF>

[SENSe:]PERiod:CURRent:RANGE

Sets the frequency measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:PER:CURR:RANG MAX

Sets the period to the maximum range.

[SENSe:]PERiod:CURRent:RANGE?

Returns the period measurement range.

[SENSe:]PERiod:CURRent:RANGE:AUTO

Sets the Period Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:PER:CURR:RANG:AUTO OFF

Turns the Auto-range setting off for period measurement.

[SENSe:]PERiod:CURRent:RANGE:AUTO?

Returns the Period Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON



[SENSe:]PERiod:INPutjack

Assigns an input port for the period function.

Parameter: <NR1> (0 | 1 | 2), 0=Voltage, 1=3A, 2=10A

Example: SENS:PER:INP 1

Sets the input jack to the current 3A input port.

[SENSe:]PERiod:INPutjack?

Returns the assigned input port used for the period function.

Return parameter: VOLT | 3A | 10A

[SENSe:]PERiod:NULL[:STATe]

Sets the relative function on/off for Period measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:PER:NULL:STAT ON

Turns the relative function on for Period measurement.

[SENSe:]PERiod:NULL[:STATe]?

Returns the relative function state of Period measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]PERiod:NULL:VALue

Sets the relative value for Period measurement.

Parameter: <NRF> (-1.2~1.2 s) | MIN | MAX | DEF

Example: SENS:FREQ:NULL:VAL 1

Sets the relative value to 1s for Period measurement.

[SENSe:]PERiod:NULL:VALue?

Returns the current relative value of Period measurement.

[SENSe:]PERiod:NULL:VALue:AUTO

Sets the relative value auto on/off for Period measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:PER:NULL:STAT ON

SENS:PER:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]PERiod:NULL:VALue:AUTO?

Returns the null value auto state of Period measurement.

[SENSe:]PERiod:TIMEout:AUTO

Assigns timeout time at the period measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:PER:TIM:AUTO ON

Sets the timeout time in according with ac filter bandwith (gete time).

[SENSe:]PERiod:TIMEout:AUTO?

Returns the assigned timeout time used for the period function.

Return parameter: 0 | 1, 0:timeout time = 1 second, 1:timeout time is different in according with ac filter bandwith (gate time).

[SENSe:]PERiod:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of Period measurement.

Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:PER:TRIG:DEL 0.05

Sets the trigger delay time to 50ms of Period measurement.

[SENSe:]PERiod:TRIGger:DELay?

Returns the trigger delay time in seconds of Period measurement.

Return parameter: <NRF>

[SENSe:]PERiod:VOLTage:RANGe

Sets the period measurement range.

Parameter: Range(<NRF> | MIN | MAX | DEF)

Example: SENS:PER:VOLT:RANG DEF

Sets the period to the default range.

[SENSe:]PERiod:VOLTage:RANGe?

Returns the period measurement range.

[SENSe:]PERiod:VOLTage:RANGe:AUTO

Sets the Period Auto-range settings on, off or once.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:PER:VOLT:RANG:AUTO OFF

Turns the Auto-range setting off for period measurements.

[SENSe:]PERiod:VOLTage:RANGe:AUTO?

Returns the Period Auto-range setting.

Return parameter: 0 | 1, 0=OFF, 1=ON

SENSe TEMPerature Commands

[SENSe:]TEMPerature:NPLCycles

Sets the integration time for Temperature measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds. For any <NRF> parameter, the DMM will automatically set the PLC to the closest acceptable PLC value (1 | 3 | 12).

Parameter: NPLCycles(<NRF> | MIN | MAX | DEF)



Example: SENS:TEMP:NPLC DEF

Sets the integration time to the 12 PLCs for Temperature measurement.

[SENSe:]TEMPerature:NPLCycles?

Returns the integration time for Temperature measurement in PLCs (power line cycles). Where one PLC is equal to 16.6 milliseconds.

Return parameter: 1 | 3 | 12

[SENSe:]TEMPerature:NULL[:STATe]

Sets the relative function on/off for Temperature measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:TEMP:NULL:STAT ON

Turns the relative function on for Period measurement.

[SENSe:]TEMPerature:NULL[:STATe]?

Returns the relative function state of Temperature measurement.

Return parameter: 0 | 1, 0=OFF, 1=ON

[SENSe:]TEMPerature:NULL:VALue

Sets the relative value for Temperature measurement.

Parameter: <NRF> (-1.0e15~1.0e15) | MIN | MAX | DEF

Example: SENS:FREQ:NULL:VAL 5

Sets the relative value to 5°C for Temperature measurement.

[SENSe:]TEMPerature:NULL:VALue?

Returns the current relative value of Temperature measurement.

[SENSe:]TEMPerature:NULL:VALue:AUTO

Sets the relative value auto on/off for Temperature measurement.

Parameter: 0 | 1 | ON | OFF

Example: SENS:TEMP:NULL:STAT ON

SENS:TEMP:NULL:VAL:AUTO ON

The unit automatically sets the 1st count of measurement as null value.

[SENSe:]TEMPerature:NULL:VALue:AUTO?

Returns the null value auto state of Temperature measurement.

[SENSe:]TEMPerature:RESolution

Sets the Temperature measurement resolution. The resolution depends on the rate and range settings.

Parameter: Resolution(<NRF> | MIN | MAX | DEF)

Example: SENS:TEMP:RES MAX

Sets the Temperature resolution to the maximum.

[SENSe:]TEMPerature:RESolution?

Returns the temperature measurement resolution.

[SENSe:]TEMPerature:TRANsducer:TYPE

Sets the temperature probe type.

Parameter: [None] | TC | RTD | FRTD | THER | FTH

Example: SENS:TEMP:TRAN:TYPE RTD

Sets the temperature probe type to RTD.

[SENSe:]TEMPerature:TRANsducer:TYPE?

Returns the temperature probe type.

Return parameter: TC, RTD, FRTD, THER, FTH

[SENSe:]TEMPerature:TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds of Temperature measurement.

Parameter: <NRF>(0 ~ 3600 s) | MIN | MAX | DEF

Example: SENS:TEMP:TRIG:DEL 0.001

Sets the trigger delay time to 1ms of Temperature measurement.

[SENSe:]TEMPerature:TRIGger:DELay?

Returns the trigger delay time in seconds of Temperature measurement.

Return parameter: <NRF>

[SENSe:]TEMPerature:ZERO:AUTO

Sets the auto zero mode to on, off or once of Temparature measurement.

Parameter: 0 | 1 | ON | OFF | ONCE

Example: SENS:TEMP:ZERO:AUTO OFF

Sets the auto zero to off.

[SENSe:]TEMPerature:ZERO:AUTO?

Returns the auto zero mode of Temparature measurement.

Return Parameter: 0 | 1, 1=ON, 0=OFF

[SENSe:]TEMPerature:RJUNction:SIMulated

Sets temperature simulation value of thermocouple measurement.

Parameter: <NRF> (-20.00 ~ 80.00) | MIN | MAX | DEF

Example: SENS:TEMP:RJUN:SIM 25.00

Sets the thermocouple junction temperature to 25°C.

[SENSe:]TEMPerature:RJUNction:SIMulated?

Returns temperature simulation value of thermocouple measurement.

Return parameter: <NRF> (-

2.0000000E+01~+8.0000000E+01), where unit = °C



- [SENSe:JTEMPerature:RJUNction:SIMulated:AUTO]
Sets junction reference temperature of thermocouple measurement used by simulation temperature or internal temperature of front panel.
Parameter: 0 | 1 | ON | OFF
Example: SENS:TEMP:RJUN:SIM:AUTO ON
Sets the thermocouple junction temperature used by internal temperature.
-
- [SENSe:JTEMPerature:RJUNction:SIMulated:AUTO?]
Returns thermocouple measurement which junction reference temperature is selected.
Return Parameter: 0 | 1, 1= internal temperature, 0= simulation temperature
-
- [SENSe:JTEMPerature:RJUNction:SIMulated:AUTO:OFFSet]
Sets junction reference temperature adjust value of thermocouple measurement which internal temperature is selected.
Parameter: <NRF> (-20.00 ~ 20.00) | MIN | MAX | DEF
Example: SENS:TEMP:RJUN:SIM:AUTO:OFFS 5
Sets the junction reference temperature adjust value to 5°C
-
- [SENSe:JTEMPerature:RJUNction:SIMulated:AUTO:OFFSet?]
Returns junction reference temperature adjust value of thermocouple measurement.
Return Parameter: <NRF> (-2.0000000E+01~+2.0000000E+01), where unit = °C
-
- [SENSe:JTEMPerature:RJUNction:SIMulated:AUTO:TEMPerature]
Returns internal temperature of thermocouple measurement.
Return Parameter: <NRF> (-5.5000000E+01~+1.2500000E+02), where unit = °C
-
- [SENSe:JTEMPerature:TCouple:TYPE]
Sets the thermocouple type.
Parameter: Type(J | K | N | R | S | T | B | E)
Example: SENS:TEMP:TCO:TYPE J
Sets the thermocouple to type J.
-
- [SENSe:JTEMPerature:TCouple:TYPE?]
Returns the thermocouple type.
Return parameter: J | K | N | R | S | T | B | E
-
- [SENSe:JTEMPerature:RTD:ALPHA]
Sets the 2-wire RTD Alpha coefficient.
Parameter: <NRF> (0.0~9.99999) | MIN | MAX | DEF
Example: SENS:TEMP:RTD:ALPH 0.00385

[SENSe:]TEMPerature:RTD:ALPHA?

Returns the 2-wire RTD Alpha coefficient.

[SENSe:]TEMPerature:RTD:BETA

Sets the 2-wire RTD Beta coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:RTD:BETA 0.00495

[SENSe:]TEMPerature:RTD:BETA?

Returns the 2-wire RTD Beta coefficient.

[SENSe:]TEMPerature:RTD:DELTA

Sets the 2-wire RTD Delta coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:RTD:DELT 0.000568

[SENSe:]TEMPerature:RTD:DELTa?

Returns the 2-wire RTD Delta coefficient.

[SENSe:]TEMPerature:RTD:RESistance[:REFerence]

Sets the reference resistance (R0) of 2-wire RTD measurement.

Parameter: <NRF> (80.0~120.0) | MIN | MAX | DEF

Example: SENS:TEMP:RTD:RES:REF 100

[SENSe:]TEMPerature:RTD:RESistance[:REFerence]?

Returns the 2-wire RTD reference resistance (R0).

[SENSe:]TEMPerature:RTD:TYPE

Sets the 2-wire RTD sensor type.

Return parameter: Type(PT100 | D100 | F100 | PT385 | PT3916 | USER)

Example: SENS:TEMP:RTD:TYPE PT100

Sets the 2-wire RTD sensor to PT100

[SENSe:]TEMPerature:RTD:TYPE?

Returns the 2-wire RTD sensor type.

Return parameter: PT100 | D100 | F100 | PT385 | PT3916 | USER

[SENSe:]TEMPerature:FRTD:ALPHA

Sets the 4-wire RTD Alpha coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:FRTD:ALPH 0.00385

[SENSe:]TEMPerature:FRTD:ALPHA?

Returns the 4-wire RTD Alpha coefficient.

[SENSe:]TEMPerature:FRTD:BETA

Sets the 4-wire RTD Beta coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:FRTD:BETA 0.00495

[SENSe:]TEMPerature:FRTD:BETA?

Returns the 4-wire RTD Beta coefficient.



[SENSe:JTEMPerature:FRTD:DELTa]

Sets the 4-wire RTD Delta coefficient.

Parameter: <NRF> (0.0~9.99999) | MIN | MAX | DEF

Example: SENS:TEMP:FRTD:DELT 0.000568

[SENSe:JTEMPerature:FRTD:DELTa?]

Returns the 4-wire RTD Delta coefficient.

[SENSe:JTEMPerature:FRTD:RESistance[:REFerence]]

Sets the reference resistance (R0) of 4-wire RTD measurement

Parameter: <NRF> (80.0 ~ 120.0) | MIN | MAX | DEF

Example: SENS:TEMP:FRTD:RES:REF 100

[SENSe:JTEMPerature:FRTD:RESistance[:REFerence]?]

Returns the 4-wire RTD reference resistance (R0).

[SENSe:JTEMPerature:FRTD:TYPE]

Sets the 4-wire RTD sensor type.

Parameter: Type(PT100 | D100 | F100 | PT385 | PT3916 | USER)

Example: SENS:TEMP:FRTD:TYPE PT100

Sets the 4-wire RTD sensor to PT100

[SENSe:JTEMPerature:FRTD:TYPE?]

Returns the 4-wire RTD sensor type.

Return parameter: PT100 | D100 | F100 | PT385 | PT3916 |

USER

[SENSe:JTEMPerature:THERmistor:APARameter]

Sets the 2-wire Thermistor A coefficient.

Parameter: <NRF> (0.0~9.99999) | MIN | MAX | DEF

Example: SENS:TEMP:THER:APAR 0.002154

[SENSe:JTEMPerature:THERmistor:APARameter?]

Returns the 2-wire Thermistor A coefficient.

[SENSe:JTEMPerature:THERmistor:BPARameter]

Sets the 2-wire Thermistor B coefficient.

Parameter: <NRF> (0.0~9.99999) | MIN | MAX | DEF

Example: SENS:TEMP:THER:BPAR 0.003425

[SENSe:JTEMPerature:THERmistor:BPARameter?]

Returns the 2-wire Thermistor B coefficient.

[SENSe:JTEMPerature:THERmistor:CPARameter]

Sets the 2-wire Thermistor C coefficient.

Parameter: <NRF> (0.0~9.99999) | MIN | MAX | DEF

Example: SENS:TEMP:THER:CPAR 0.006993

[SENSe:JTEMPerature:THERmistor:CPARameter?]

Returns the 2-wire Thermistor C coefficient.

[SENSe:]TEMPerature:THERmistor:TYPE

Sets the 2-wire Thermistor sensor type.

Parameter: Type(2.2kΩ | 5kΩ | 10kΩ | USER)

Example: SENS:TEMP:THER:TYPE 2200

Sets the 2-wire Thermistor sensor type to 2.2kΩ.

[SENSe:]TEMPerature:THERmistor:TYPE?

Returns the 2-wire Thermistor sensor type.

Return parameter: +2200 | +5000 | +10000 | USER.

[SENSe:]TEMPerature:FTHermistor:APARameter

Sets the 4-wire Thermistor A coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:FTH:APAR 0.002154

[SENSe:]TEMPerature:FTHermistor:APARameter?

Returns the 4-wire Thermistor A coefficient.

[SENSe:]TEMPerature:FTHermistor:BPARameter

Sets the 4-wire Thermistor B coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:FTH:BPAR 0.003425

[SENSe:]TEMPerature:FTHermistor:BPARameter?

Returns the 4-wire Thermistor B coefficient.

[SENSe:]TEMPerature:FTHermistor:CPARameter

Sets the 4-wire Thermistor C coefficient.

Parameter: <NRF> (0.0~9.999999) | MIN | MAX | DEF

Example: SENS:TEMP:FTH:CPAR 0.006993

[SENSe:]TEMPerature:FTHermistor:CPARameter?

Returns the 4-wire Thermistor C coefficient.

[SENSe:]TEMPerature:FTHermistor:TYPE

Sets the 4-wire Thermistor sensor type.

Parameter: Type(2.2kΩ | 5kΩ | 10kΩ | USER)

Example: SENS:TEMP:FTH:TYPE 10000

Sets the 4-wire Thermistor sensor type to 10kΩ.

[SENSe:]TEMPerature:FTHermistor:TYPE?

Returns the 4-wire Thermistor sensor type.

Return parameter: +2200 | +5000 | +10000 | USER.



TRIGger Commands

SAMPLE:COUNT

Sets the number of samples.

Parameter: <NRF>(1.0 ~ 1000000.0) | MIN | MAX | DEF

Example: TRIG:COUN 10

SAMP:COUN 10

INIT

FETC?

Will returns 100 measurement results.

Sets the number of samples to 10.

- The total measurement counts is trigger count multiplication sample count.
-

SAMPLE:COUNT?

Returns the number of samples.

Return parameter: <NRF>

TRIGger:COUNT

Sets the number of trigger counts.

Parameter: <NRF>(1.0 ~ 1000000.0) | MIN | MAX | DEF

Example: TRIG:COUN 10

SAMP:COUN 10

READ?

Will returns 100 measurement results.

Sets the number of trigger counts to 10.

- The total measurement counts is trigger count multiplication sample count.
-

TRIGger:COUNT?

Returns the number of trigger counts.

Return parameter: <NRF>

TRIGger:DELay

Sets the trigger delay time that minimum step is microseconds in all of the function.

Parameter: <NRF> (0 ~ 3600 s) | MIN | MAX | DEF

Example: TRIG:DEL MAX

Sets the trigger delay time to the maximum.

TRIGger:DELay?

Returns the trigger delay time in seconds of current function.

Return parameter: <NRF>

TRIGger:DELay:AUTO

Sets the trigger delay time auto mode on/off in all of the function.

Parameter: 0 | 1 | ON | OFF

Example: TRIG:DEL:AUTO OFF

Turns trigger delay time auto mode off.

TRIGger:DELay:AUTO?

Returns the trigger delay time auto mode state.

Return parameter: 0 | 1, 1=ON, 0=OFF.

TRIGger:SLOPe

Selects whether the instrument uses the rising edge (POS) or the falling edge (NEG) of the trigger signal on the rear-panel Digital I/O connector when external trigger is selected;

Parameter: POSitive | NEGative

Example: TRIG:SLOP POS

Sets the trigger signal in rising edge (POS).

TRIGger:SLOPe?

Returns the method of external trigger.

Return parameter: POS | NEG

TRIGger:SOURce

Selects the trigger source.

Parameter: IMMEDIATE | EXTERNAL | BUS

Example: TRIG:SOUR EXT

Sets the trigger source as external trigger.

IMMEDIATE:

The trigger signal is always present. When you place the instrument in the "wait-for-trigger" state, the trigger is issued immediately.

Ex:SAMP:COUN 5

TRIG:SOUR IMM

READ?

Returns : 5 measurement values.

EXTERNAL:

The instrument accepts hardware triggers applied to the rear-panel Ext Trig input and takes the specified number of measurements (SAMP:COUN), each time a TTL pulse specified by

TRIG:SLOP is received. If the instrument receives an external trigger before it is ready, it buffers one trigger.

Ex:SAMP:COUN 5



TRIG:SOUR EXT
TRIG :SLOP NEG
INIT
<wait external trigger in signal>
FETC ?
Returns : 5 measurement values.

BUS:

The instrument is triggered by *TRG over the remote interface once the DMM is in the "wait-for-trigger" state.

Ex:SAMP:COUN 5
TRIG:SOUR EXT
TRIG :SLOP NEG
INIT
*TRG
FETC ?

Returns : 5 measurement values.

- After selecting the trigger source, you must place the instrument in the "wait-for-trigger" state by sending INITiate or READ?. A trigger is not accepted from the selected trigger source until the instrument is in the "wait-for-trigger" state.

TRIGger:SOURce?

Returns current trigger source.

Return parameter: IMM | EXT | BUS

OUTPut:TRIGger:SLOPe

Sets the output signal method after each measurement.

Parameter: POSitive | NEGative

Example: OUTP:TRIG:SLOP POS

Sets the output signal as positive pulse after measurement.

OUTPut:TRIGger:SLOPe?

Returns the output signal method after measurement.

Return parameter: POS | NEG

SYSTem Related Commands

SYSTem:BEEPer[:IMMEDIATE]

Makes buzzer beep once.

Parameter: <None>

Example: SYST:BEEP:IMM

- This function is Not affected by the state of SYST:BEEP:STAT.

SYSTem:BEEPer:ERRor

Sets the beeper to sound on an SCPI error.

Parameter: 0 | 1 | ON | OFF

Example: SYST:BEEP:ERR ON

Allows the beeper to sound when an SCPI error occurs.

SYSTem:BEEPer:ERRor?

Returns the beeper error mode.

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:BEEPer:STATE

Turns the buzzer on/off.

Parameter: 0 | 1 | ON | OFF

Example: SYST:BEEP:STAT OFF

Turns the buzzer off.

- The key sound of front panel is Not affected by the state.

- The command of SYST:BEEPer is Not affected by the state.

SYSTem:BEEPer:STATE?

Returns the buzzer state.

Return parameter: 0 | 1, 1=ON, 0=OFF.

SYSTem:BEEPer:COMPARE:VOLUME

Sets the beeper volume of Compare function.

Parameter: <NR1> (0 ~ 2)

0(small), 1(Medium) , 2(Large)

Example: SYST:BEEP:COMP:VOL 2

Sets the beeper volume to large of Compare function.

SYSTem:BEEPer:COMPARE:VOLUME?

Returns the beeper volume of Compare function.

Return parameter: SMALL | MEDIUM | LARGE

SYSTem:BEEPer:CONTINUITY:VOLUME

Sets the beeper volume of Continuity function.

Parameter: <NR1> (0 ~ 3)

Example: SYST:BEEP:CONT:VOL 1

Sets the beeper volume to small of Continuity function.



SYSTem:BEEPer:CONTinuity:VOLume?

Returns the beeper volume of Continuity function.

Return parameter: OFF | SMALL | MEDIUM | LARGE

SYSTem:BEEPer:HOLD:VOLume

Sets the beeper volume of Hold function.

Parameter: <NR1> (0 ~ 3)

Example: SYST:BEEP:HOLD:VOL 2

Sets the beeper volume to medium of Hold function.

SYSTem:BEEPer:HOLD:VOLume?

Returns the beeper volume of Hold function.

Return parameter: OFF | SMALL | MEDIUM | LARGE

SYSTem:CLICk:STATe

Turns the key sound of front panel on/off.

Parameter: 0 | 1 | ON | OFF

Example: SYST:CLIC:STAT OFF

Turns key sound off.

SYSTem:CLICk:STATe?

Returns the key sound of front panel state.

Return Parameter: 0 | 1, 1=ON, 0=OFF.

SYSTem:DATE

Sets the date for the instrument's real-time clock.

Parameter: <NR1> (year, month, day)

Example: SYST:DATE 2018,03,19

Sets the date to 2018/3/19.

year: 2000~2099

month: 1~12

day: 1~31

SYSTem:DATE?

Returns system date.

Return parameter: <Date>, Ex: 2018,3,19

SYSTem:DISPlay

Turns the TFT LCD display on/off.

Parameter: 0 | 1 | ON | OFF

Example: SYST:DISP ON

Turns the TFT LCD display on.

SYSTem:DISPlay?

Returns the status of the TFT LCD display

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:ERRor[:NEXT]?

Returns the current system error, if any.

SYSTem:IDNStr

Sets a user-defined identification string for the *IDN? query when the SYSTem:SCPi:MODE command is set to “Compatible”.

Parameter: “<manufacturer>”, “<model number>”, max length 24 characters

Example: SYST:IDNS “ABCDE”, “12345”

Sets the user-defined manufacturer as ABCDE and the model number as 12345.

SYSTem:IDNStr?

Returns the manufacturer and model number set with the SYSTem:IDNStr command.

Return parameter: manufacturer, model number

Example: SYST:IDNS?

>ABCDE, 12345

Returns the manufacturer as ABCDE and the model number as 12345.

SYSTem:LABel

Places a message in a large font on the bottom half of the instrument's front panel display.

Parameter: “< message >”, max length 40 characters

Example: SYST:LAB “RSPRO”

- To turn off the message, send the following to change the label to a null string. This also removes the label area from the screen: SYST:LAB “”

- The parameters will not be saved.
-

SYSTem:LABel?

Returns the display message.

Return parameter: “< message >”

SYSTem:LFrequency?

Returns the AC source line frequency.

Parameter: +50 | +60

SYSTem:OUTPut:EOF

Sets the EOL character (CR+LF, LF+CR, CR, LF).

Parameter: <NR1>(0~3) (0=CR+LF, 1=LF+CR, 2=CR, 3=LF)

Example: SYST:OUTP:EOF 0

Sets the EOL character as CR+LF.

- The parameters will not be saved.
-

SYSTem:OUTPut:EOF?

Returns the EOL character.

Return parameter: +0 | +1 | +2 | +3 (0=CR+LF, 1=LF+CR, 3=CR, 4=LF)



SYSTem:OUTPut:SEParate

Sets the command separation character.

Parameter: 0 | 1 (0=EOL, 1=,)

Example: SYST:OUTP:SEP 0

Sets the command separation character as the EOL character.

- The parameters will not be saved.
-

SYSTem:OUTPut:SEParate?

Returns the command separation character.

Return parameter: 0 | 1 (0=EOL, 1=,)

SYSTem:PARAmeter:LOAD

Load the system parameters from 0 of 5 memory locations.

Parameter: <NR1> (0~5) (0=Default settings, 1~5= memory number)

Example: SYST:PAR:LOAD 0

Loads the default system parameters.

SYSTem:PARAmeter:LOAD?

Returns the loaded system parameters.

Return parameter: <NR1> (0~5) (0=Default settings, 1~5= memory number, Last = State before power-off)

SYSTem:PARAmeter:SAVE

Saves the system parameters into 1 of 5 memory slots.

Parameter: <NR1> (1~5)

Example: SYST:PAR:SAVE 1

Saves the system parameters to memory 1.

SYSTem:PRESet

This command is nearly identical to *RST. The difference is that *RST resets the instrument for SCPI operation, and SYSTem:PRESet resets the instrument for front panel operation. As a result, *RST turns the histogram and statistics off, and SYSTem:PRESet turns them on.

SYSTem:SCPi:MODE

Sets the SCPI mode. The SCPI mode is used to determine whether the *IDN? query returns the "Normal" or "Compatible" identification string. See the SYSTem:IDNStr command for details.

Parameter: NOR | GDM | COMP (NOR=Normal, GDM=8261A, COMP= User-define)

Example: SYST:SCP:MODE NOR

Sets the SCPI mode to normal.

- The parameters will not be saved.
-

SYSTem:SCPi:MODE?

Returns the SCPI mode. The SCPI mode is used to determine whether the *IDN? query returns the “Normal” or “Compatible” identification string . See the SYSTem:IDNStr command for details.

Return parameter: NORMAL | GDM8261A | COMPATIBLE

SYSTem:SERial?

Returns the serial number (nine characters/numbers)

SYSTem:TEMPerature?

Returns the internal temperature of machine.

Return parameter: <NRF>, where unit = °C

SYSTem:TIME

Sets the time for the instrument's real-time clock.

Parameter: <NR1> (hour, minute, second)

Example: SYST:TIME 16,20,30

Sets the time to 16:20:30

hour: 0~23

minute: 0~60

second: 0~60

SYSTem:TIME?

Returns system time.

Return parameter: <Time>, Ex: 16:20:40.000

SYSTem:UPTime?

Returns the amount of time that the instrument has been running since the last power-on.

Return parameter: +0, +1, +25, +53 (day, hour, minute, second)

SYSTem:VERSion?

Returns SCPI version.

Return parameter: 1994.0.

SYSTem:WMESsage

Displays a power-on message.

Parameter: “<string>”, max length 40 characters

Example: SYST:WMES “RSPRO”

•Specifying a null string (“”) disables the power-on message.

SYSTem:WMESsage?

Returns the display string that is showing after power on.

Return parameter: “<string>”



SYSTem COMMunication Commands

SYSTem:COMMunicate:GPIB:ADDReSS

Sets the GPIB address that is only on GPIB communication bus.

Parameter: <NR1> (0 ~ 30) | MIN | MAX | DEF

Example: SYST:COMM:GPIB:ADDR 15

Sets the GPIB address to 15.

SYSTem:COMMunicate:GPIB:ADDReSS?

Returns the GPIB address.

Return parameter: <NR1> (0~30)

SYSTem:COMMunicate:LAN:DHCP

Sets the DHCP on/off.

Parameter: 0 | 1 | ON | OFF

Example: SYST:COMM:LAN:DHCP ON

Sets the DHCP on to automaticall get related configuration information.

SYSTem:COMMunicate:LAN:DHCP?

Returns the DHCP state.

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:COMMunicate:LAN:DNS[X]

Sets the DNS address. which X = 1 indicate DNS1, X = 2 indicate DNS2.

Parameter: "<address>"

Example: SYST:COMM:LAN:DNS1 "172.16.1.252"

Sets the DNS1 address to 172.16.1.252.

SYSTem:COMMunicate:LAN:DNS[X]?

Returns the DNS address. which X = 1 indicate DNS1, X = 2 indicate DNS2.

Return parameter: xxx.xxx.xxx.xxx

SYSTem:COMMunicate:LAN:GATEway

Sets the Gateway address.

Parameter: "<address>"

Example: SYST:COMM:LAN:GAT "192.168.31.254"

Sets the Gatway address to 192.168.31.254.

SYSTem:COMMunicate:LAN:GATEway?

Returns the Gateway address.

Return parameter: xxx.xxx.xxx.xxx

SYSTem:COMMunicate:LAN:HOSTname

Sets the hostname.

Parameter: "<string>" , max length = 15 characters

Example: SYST:COMM:LAN:HOST "DMM"

Sets the Hostname to DMM.

SYSTem:COMMunicate:LAN:HOSTname?

Returns the hostname.

Return parameter: "<string>"

SYSTem:COMMunicate:LAN:IPADDress

Sets the IP address.

Parameter: "<address>"

Example: SYST:COMM:LAN:IPAD "192.168.31.117"

Sets the IP address to 192.168.31.117.

SYSTem:COMMunicate:LAN:IPADDress?

Returns the IP address.

Return parameter: xxx.xxx.xxx.xxx

SYSTem:COMMunicate:LAN:MAC?

Returns the MAC number.

Return parameter: 12 Hexadecimal characters.

SYSTem:COMMunicate:LAN:SMASK

Sets the subnet mask address.

Parameter: "<address>"

Example: SYST:COMM:LAN:SMAS "255.255.255.0"

Sets the subnet mask address to 255.255.255.0.

SYSTem:COMMunicate:LAN:SMASK?

Returns the subnet mask address.

Return parameter: xxx.xxx.xxx.xxx

SYSTem:COMMunicate:LAN:TELNet:ECHO

Sets the Telnet communication echo state.

Parameter: 0 | 1 | ON | OFF

Example: SYST:COMM:LAN:TELN:ECHO ON

Sets the Telnet communication echo to on.

SYSTem:COMMunicate:LAN:TELNet:ECHO?

Returns the Telnet communication echo state.

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:COMMunicate:LAN:TELNet:ENABLE

Sets the Telnet communication enable/disable.

Parameter: 0 | 1 | ON | OFF

Example: SYST:COMM:LAN:TELN:ENAB ON

Enables the Telnet communication.



SYSTem:COMMunicate:LAN:TELNet:ENABLE?

Returns the Telnet communication state.

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:COMMunicate:LAN:TELNet:PORT

Sets the Telnet communication port number.

Parameter: <NR1> (1024~65535) | MIN | MAX | DEF

Example: SYST:COMM:LAN:TELN:PORT "3000"

Sets the Telnet port to 3000.

SYSTem:COMMunicate:LAN:TELNet:PORT?

Returns the Telnet port number.

Retrun parameter: <NR1>

SYSTem:COMMunicate:LAN:TELNet:PROMpt

Sets the telnet prompt message.

Parameter: "<stirng>", max length 15 characters

Example: SYST:COMM:LAN:TELN:PROM "RSDM906X">

Sets the telnet prompt characters to RSDM906X>.

SYSTem:COMMunicate:LAN:TELNet:PROMpt?

Returns the telnet prompt message.

Retrun parameter: "<string>"

SYSTem:COMMunicate:LAN:TELNet:TIMEout

Sets the timeout time for auto logout from Telnet communication, where unit of time is second.

Parameter: <NR1> (0~60000)

Example: SYST:COMM:LAN:TELN:TIM 0

Since 0 indicates infinite, Telnet communication has no timeout always.

SYSTem:COMMunicate:LAN:TELNet:TIMEout?

Returns the set time for timeout of Telnet communication.

Return parameter: <NR1>

SYSTem:COMMunicate:LAN:TELNet:WMESsage

Sets the telnet welcome message that telnet communication connect success.

Parameter: "<stirng>", max length 63 characters

Example: SYST:COMM:LAN:TELN:WMES "Welcome to RSDM906X Telnet Server"

Sets the telnet welcome message to Welcome to RSDM906X Telnet Server.

SYSTem:COMMunicate:LAN:TELNet:WMESsage?

Returns the telnet welcome message.

Retrun parameter: "<string>"

SYSTem:COMMunicate:LAN:TCP:ENABLE

Sets the TCP communication enable/disable.

Parameter: 0 | 1 | ON | OFF

Example: SYST:COMM:LAN:TCP:ENAB ON

Enables the TCP communication.

SYSTem:COMMunicate:LAN:TCP:ENABLE?

Returns the TCP communication state.

Return parameter: 0 | 1, 0=OFF, 1=ON

SYSTem:COMMunicate:LAN:TCP:PORT

Sets the TCP communication port number.

Parameter: <NR1> (1024~65535) | MIN | MAX | DEF

Example: SYST:COMM:LAN:TCP:PORT "3001"

Sets the TCP port to 3001.

SYSTem:COMMunicate:LAN:TCP:PORT?

Returns the TCP port number.

Retrun parameter: <NR1>

SYSTem:COMMunicate:LAN:TIMEout

Sets the TCP communication timeout time, where unit = second.

Parameter: <NR1> (1~60000)

Example: SYST:COMM:LAN:TIM 10

Makes the TCP communication timeout time to 10s.

SYSTem:COMMunicate:LAN:TIMEout?

Returns the TCP communication timeout time.

Retrun parameter: <NR1>

SYSTem:COMMunicate:LAN:WEB:ENABLE

Sets the Web page communication enable/disable.

Parameter: 0 | 1 | ON | OFF

Example: SYST:COMM:LAN:WEB:ENAB ON

Enables the Web page communication.

SYSTem:COMMunicate:LAN:WEB:ENABLE?

Returns the Web page communication state.

Return parameter: 0 | 1, 0=OFF, 1=ON



RS-232C Interface Commands

SYSTem:LOCal

Enables local control (front panel control) and disables remote control.

SYSTem:REMote

Enables remote control and disables local control (front panel control, all key are disable except Shift key(return to local control)).

SYSTem:RWLock

Enables remote control and disables local control (front panel control, all key are disable).

STATus Report Commands

STATus:OPERation:CONDition?

Returns the total number of the Operation Condition register.
Return parameter: <NR1>, Ex: +4096

- A condition register continuously monitors the state of the instrument. Condition register bits are updated in real time; they are neither latched nor buffered.

This register is read-only; bits are not cleared when read.

STATus:OPERation:ENABLE

Sets bits in the Operation Enable register.

Parameter: <NR1> (0~32767)

Example: STAT:OPER:ENAB 10

Sets the bit1 and bit3 in Operation Enable register, $10 = 2^1 + 2^3$.

- The selected bits are then reported to the Status Byte. An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.

•A STATus:PRESet clears all bits in the enable register.

•The *PSC command controls whether the enable register is cleared at power on.

STATus:OPERation:ENABLE?

Returns the total number of the Operation Enable register.

Return parameter: <NR1>, Ex: +256

STATus:OPERation[:EVENT]?

Returns the total number of the Operation Event register.
Return parameter: <NR1>, Ex: +786

- An event register is a read-only register that latches events from the condition register. While an event bit is set, subsequent events corresponding to that bit are ignored.
- Once a bit is set, it remains set until cleared by reading the event register or by sending *CLS (clear status).

STATus:PRESet

Clears the Operation Enable register and Questionable Enable register.

Example: STAT:PRES

STATus:QUESTIONable:CONDition?

Returns the contents of the Questionable Condition register.
Return parameter: <NR1>, Ex: +2

- A condition register continuously monitors the state of the instrument. Condition register bits are updated in real time; they are neither latched nor buffered.
- This register is read-only; bits are not cleared when read.

STATus:QUESTIONable:ENABLE

Set bits in the Ouesrionable Enable register.

Parameter: <NR1> (0~32767)

Example: STAT:QUES:ENAB 4099

Sets the bit0, bit1 and bit12 in Ouesrionable Enable register,
 $4099 = 2^0 + 2^1 + 2^{12}$.

- The selected bits are then reported to the Status Byte. An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.
- A STATus:PRESet clears all bits in the enable register.
- The *PSC command controls whether the enable register is cleared at power on.

STATus:QUESTIONable:ENABLE?

Returns the total number of the Ouesrionable Enable register.
Return parameter: <NR1>, Ex: +1



STATus:QUESTIONable[:EVENT]?

Returns the total number of the Questionable Event register.
Return parameter: <NR1>, Ex: +2

- An event register is a read-only register that latches events from the condition register. While an event bit is set, subsequent events corresponding to that bit are ignored.
 - Once a bit is set, it remains set until cleared by reading the event register or by sending *CLS (clear status).
-

IEEE 488.2 Common Commands

***CLS**

Clears the Event Status register (Output Queue, Operation Event Status, Questionable Event Status, Standard Event Status Register)

***ESE?**

Returns the ESER (Event Status Enable Register) contents.
Example: *ESE?

>130

Returns 130. ESER=10000010

***ESE**

Sets the ESER contents.

Parameter: <NR1> (0~255)

Ex: *ESE 65

Sets the ESER to 01000001

- The selected bits are then reported to bit 5 of the Status Byte Register. An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.
-

***ESR?**

Returns SESR (Standard Event Status Register) contents.

Ex: *ESR?

>198

Returns 198. SESR=11000110

- An event register is a read-only register that latches events from the condition register. While an event bit is set, subsequent events corresponding to that bit are ignored.

- Once a bit is set, it remains set until cleared by reading the
-

event register or by sending *CLS (clear status).

***IDN?**

Returns the manufacturer, model No., serial number and system version number.

Example: *IDN?

>RSPRO,RSDM9061,00000000,M0.70_S0.25B

***OPC?**

Returns 1 to the output buffer after all pending commands complete. Other commands cannot be executed until this command completes.

Ex: CONF:VOLT:DC

SAMP:COUN 100

INIT

*OPC?

- The difference between *OPC and *OPC? is that*OPC sets a status bit when the operation completes, and *OPC? outputs "1" when the operation completes.
-

***OPC**

Sets operation complete bit (bit0) in SESR (Standard Event Status Register) when all pending operations are completed.

Ex: *CLS

*ESE 1

*SRE 32

CONF:VOLT:DC

SAMP:COUN 10

INIT

*OPC

- The difference between *OPC and *OPC? is that*OPC sets a status bit when the operation completes, and *OPC? outputs "1" when the operation completes.
-

***OPT?**

Returns a string identifying any installed options.



***PSC**

Clears Power On status.

Parameter: <Boolean>(0|1) 0= disables, 1= enables

- Enables (1) or disables (0) the clearing of certain enable registers at power on:

Questionable Data Register (STATus:OPERation:ENABLE)

Standard Operation Register (STATus:QUEstionable:ENABLE)

Status Byte Condition Register (*SRE)

Standard Event Enable Register (*ESE)

- The *PSC command does not affect the clearing of the condition or event registers, just the enable registers.
-

***PSC?**

Returns power on clear status.

Return parameter: <Boolean>(0|1) 0= disables, 1= enables

***RCL**

Load the system parameters from 0 of 5 memory locations.

Parameter: <NR1> (0~5) (0=Default settings, 1~5= memory number)

Example: *RCL 1

Loads the memory 1 system parameters.

***RST**

Recalls default panel setup.

- Resets instrument to factory default state. This is similar to SYSTem:PRESet. The difference is that *RST resets the instrument for SCPI operation, and SYSTem:PRESet resets the instrument for front panel operation. As a result, *RST turns the histogram and statistics off, and SYSTem:PRESet turns them on.
-

***SAV**

Save the system parameters to 1 of 5 memory locations.

Parameter: <NR1> (1~5) (1~5= memory number)

Example: *SAV 2

Saves the system parameters to memory 2.

***SRE?**

Returns the SRER (Service Request Enable Register) contents.

***SRE**

Sets SRER contents.

Parameter: <NR1>(0~255)

Example: *SRE 7

Sets the SRER to 00000111.

- An enable register defines which bits in the event register will be reported to the Status Byte register group. You can write to or read from an enable register.
-

***STB?**

Returns the SBR (Status Byte Register) contents.

Example: *STB?

>81

Returns the contents of the SBR as 01010001.

- A condition register continuously monitors the state of the instrument. Condition register bits are updated in real time; they are neither latched nor buffered.

- This register is read-only; bits are not cleared when read.
-

***TRG**

Manually triggers the RSDM-906X if TRIG:SOUR is selected to BUS.

Ex:SAMP:COUN 10

TRIG:SOUR BUS

INIT

*TRG

FETC?


***WAI**

Configures the instrument's output buffer to wait for all pending operations to complete before executing any additional commands over the interface.



Status system

The diagram below is a description of the status system

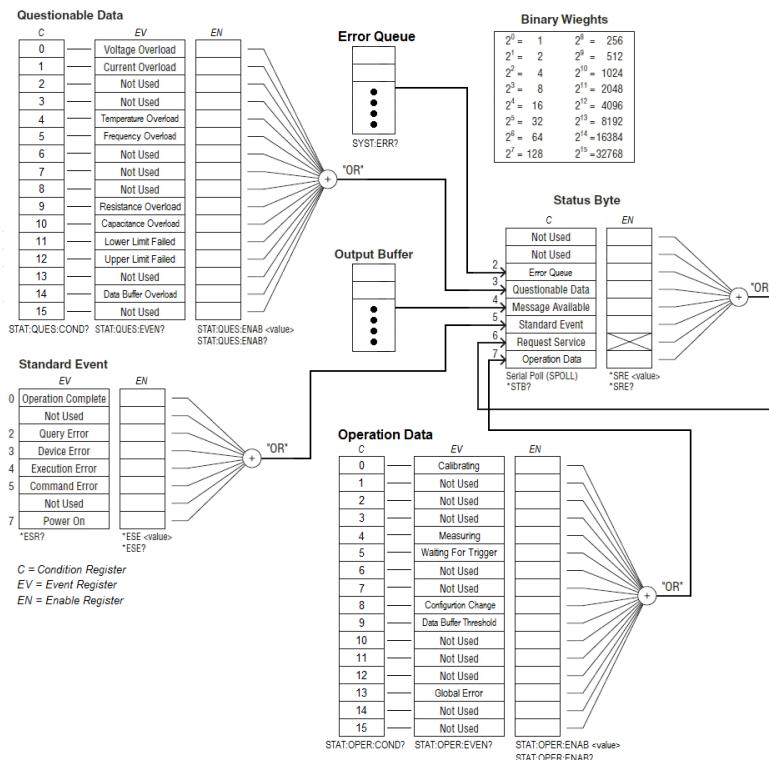

The following table lists the bit definitions for the Questionable Data Register:



Note: The overload bits are set once per INITiate command. If you clear an overload bit, it is not set again until a new INITiate is sent.

Bit	Name	Decimal Definition
0	Voltage Overload	1 Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.

1	Current Overload	2	Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.
2	Not Used	4	(Reserved for future use)
3	Not Used	8	(Reserved for future use)
4	Temperature Overload	16	Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.
5	Frequency Overload	32	Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.
6	Not Used	64	(Reserved for future use)
7	Not Used	128	(Reserved for future use)
8	Not Used	256	(Reserved for future use)
9	Resistance Overload	512	Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.
10	Capacitance Overload	1024	Only reported as event. In Condition Register this bit always returns 0. Read the Event Register.
11	Lower Limit Failed	2048	The most recent measurement failed the lower limit test.
12	Upper Limit Failed	4096	The most recent measurement failed the upper limit test.
13	Not Used	8192	(Reserved for future use)
14	Data Buffer Overload	16384	Data buffer is full. One or more (oldest) measurements have been lost.
15	Not Used	32768	(Reserved for future use)



The following table lists the bit definitions for the Operation Data Register:

Bit	Name	Decimal	Definition
0	Calibrating	1	Instrument is performing a calibration.
1	Not Used	2	(Reserved for future use)
2	Not Used	4	(Reserved for future use)
3	Not Used	8	(Reserved for future use)
4	Measuring	16	Instrument is initiated, and is making or about to make a measurement.
5	Waiting For Trigger	32	Instrument is waiting for a trigger.
6	Not Used	64	(Reserved for future use)
7	Not Used	128	(Reserved for future use)
8	Configuration Change	256	Instrument configuration has been changed since the last INIT, READ? or MEASure?, either from the front panel or from SCPI.
9	Data Output Threshold	512	Programmed number of measurements (DATA:POINTS:EVENT:THreshold) have been stored in measurement memory.
10	Not Used	1024	(Reserved for future use)
11	Not Used	2048	(Reserved for future use)
12	Not Used	4096	(Reserved for future use)
13	Global Error	8192	Set if any remote interface has an error in its error queue; cleared otherwise.
14	Not Used	16384	(Reserved for future use)
15	Not Used	32768	(Reserved for future use)

The following table describes the Standard Event Register

Bit	Name	Decimal	Definition
0	Operation Complete	1	All commands prior to and including *OPC have been executed.
1	Not Used	2	(Reserved for future use)
2	Query Error	4	The instrument tried to read the output buffer but it was empty. Or, a new command line was received before a previous query has been read. Or, both the input and output buffers are full.
3	Device Error	8	A device error, including a self-test error or calibration error, occurred (an error in the -300 range or any positive error has been generated).
4	Execution Error	16	An execution error occurred (an error in the -200 range has been generated).
5	Command Error	32	A command syntax error occurred (an error in the -100 range has been generated).
6	Not Used	64	(Reserved for future use)
7	Power On	128	Power has been cycled since the last time the event register was read or cleared.



The following table describes the Status Byte Register.

Bit	Name	Decimal	Definition
0	Not Used	1	(Reserved for future use)
1	Not Used	2	(Reserved for future use)
2	Error Queue	4	One or more errors have been stored in the Error Queue. Use SYST:ERR? to read and delete errors.
3	Questionable Data	8	One or more bits are set in the Questionable Data Register (bits must be enabled, see STAT:QUES:ENAB).
4	Message Available	16	Data is available in the instrument's output buffer.
5	Standard Event	32	One or more bits are set in the Standard Event Register (bits must be enabled, see *ESE).
6	Request Service	64	One or more bits are set in the Status Byte Register and may generate a Request for Service(RQS). Bits must be enabled using *SRE.
7	Operation Data	128	One or more bits are set in the Standard Operation Register (bits must be enabled, see STAT:OPER:ENAB).

APPENDIX

Fuse Replacement	376
Replace AC Source Fuse	376
Replace 3A Input Current Fuse.....	377
Replace Internal 3A/10A Input Current Fuse	378
Battery Replacement	380
Factory Default Parameters	382
Specifications.....	387
General.....	387
RSDM-9061	389
DC Characteristics ^[1]	389
Measuring Characteristics	390
AC Characteristics ^[1]	392
Measuring Characteristics	394
Operating Characteristics.....	394
Frequency and Period Characteristics	395
Measuring Characteristics	395
Operating Characteristics.....	396
Temperature Characteristics ^[1] (Exclusive of probe errors)	396
Capacitance.....	398
RSDM-9060	399
DC Characteristics ^[1]	399
Measuring Characteristics	400
AC Characteristics ^[1]	402
Measuring Characteristics	403
Operating Characteristics.....	404
Frequency and Period Characteristics	405
Measuring Characteristics	405
Operating Characteristics.....	405
Temperature Characteristics ^[1] (Exclusive of probe errors)	406
Capacitance.....	407
Dimensions.....	409
Declaration of Conformity	410

 


Fuse Replacement


Replace AC Source Fuse

Steps


1. Take off the power cord and place dual flat-blade drivers into the grooves of fuse socket sideways followed by pinch together to pull out the fuse socket.




2. The fuse socket appears. The "240" symbol within the hole on fuse socket indicates the line voltage is positioned as 240V.

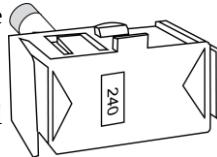


3. Pull the fuse holder out of the fuse socket gently as the right figure illustrates.

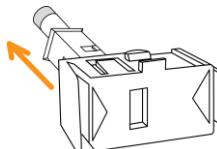

4. Further pull the fuse out of the fuse holder and replace it with a new fuse.

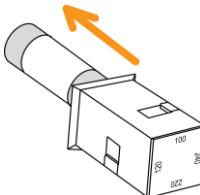

5. Restore the fuse holder with new fuse back to the fuse socket. Ensure the correct line voltage shows within the hole of the fuse socket per requirement.

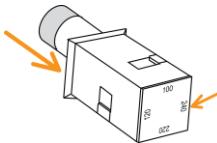

Rating

Type of fuse (time-lag)

Input line voltage

T0.25A,250V,5x20mm

100/120VAC

T0.125A,250V,5x20mm

220/240VAC

Replace 3A Input Current Fuse

Preparation


To make sure if 3A input current needs to be replaced, press the  button to set RSDM-9060/9061 in Continuity mode and short circuit the HI input terminal with the 3A input current terminal.

If the test result shows OPEN, either one of the fuses requires replacement. The one is accessible from the rear panel, and the other one is within the internal part.


If either one of the fuses of 3A input current is damaged, please first check the one (3.15 A, 500 V) in the lower-left corner of rear panel.

Step

1. Turn the RSDM-9060/9061 off
2. Press and hold the fuse holder in the rear panel followed by rotating it counterclockwise with a flat-blade screwdriver.

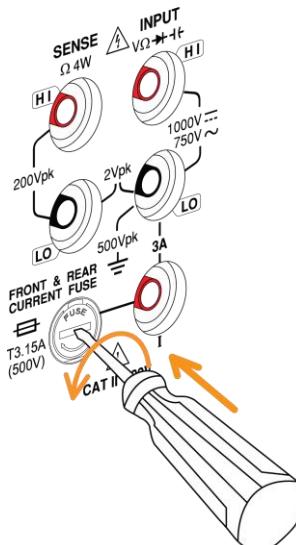

-
3. The fuse holder comes out. Replace the fuse inserted at the end of the holder followed by rotating the fuser holder clockwise to fasten it firmly.

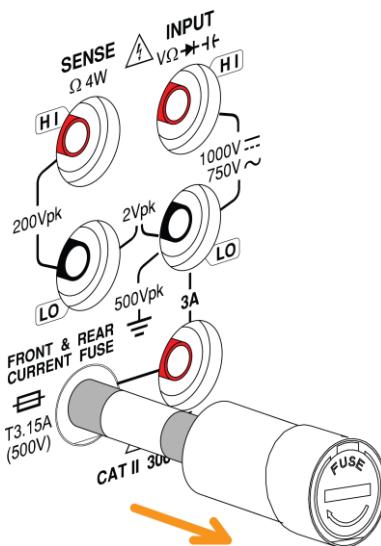

Rating T3.15A, 500V , 5*20mm

Replace Internal 3A/10A Input Current Fuse

Preparation	Replace internal 3A input fuse	If there is still a damaged fuse in 3A input current, follow the instructions in the following section to replace fuse of internal 3A input current.
	Replace internal 10A input fuse (RSDM-9061 only)	To make sure if 10A input current needs to be replaced, press the button to set RSDM-9060/9061 in Continuity mode and short circuit the HI input terminal with the 10A input current terminal. If the test result shows OPEN, follow the following section to replace fuse of internal 10A input current.

Internal Fuse Spec

	Location	Current	Voltage	Type	Dimension
Internal 3A input current fuse	F502	6A	1000V	Fast-blow type	10 x 38mm
Internal 10A input current fuse	F601	12A	1000V	Fast-blow type	10 x 38mm

- Steps for Internal Fuse Replacement
1. Power off properly and disconnect all the test leads, cables including power cord.
 2. Disassemble the instrument case in light of the disassembling instructions.
 3. Make sure the certain fuse to be replaced as the figures below shown.

Internal 3A input current fuse



Internal 10A input current fuse



4. Pull the fuse out from the fuse holder with a flat-blade screwdriver. Be cautious Not to damage the printed circuit board (PCB).
5. Disassemble the fuse.



-
6. Place the new fuse into the fuse holder. Gently push the fuse downwards to make it firmly fixed within the fuse holder.
 7. Reassemble the instrument properly followed by connecting all the cables and cords.
-
8. Fuse replacement is completed.

Battery Replacement

Beforehand

This chapter describes the procedure of battery replacement in the front panel.


Before start, it is required to let a certified and trained technician properly aware of potential risks to disassemble instrument case. Unplug power cord and disconnect external circuit from the instrument before opening the case. Some of the electrical connections are dynamic and even available after powering off the instrument. Consequently, Do disconnect all the inputs, cords and cables before disassembling the instrument.

The steps to replace battery


1. Power off properly and disconnect all the test leads, cables including power cord.
2. Disassemble the instrument case in light of the disassembling instructions.
3. Find the battery (CR2032) on the main board, which is perfectly located in the BT101 behind the transformer.



-
4. Gently remove the metal guard plate on top of the battery as the figure shown.

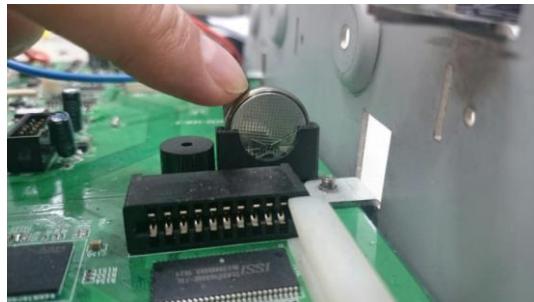

5. Pinch the battery out off the compartment with 2 fingers.

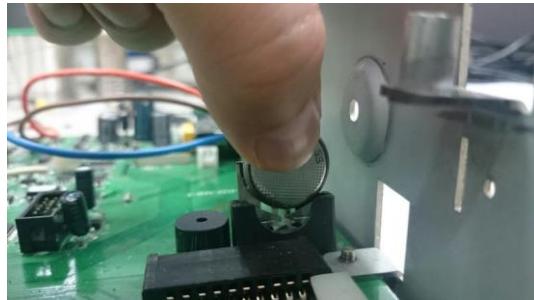

-
6. Remove the battery and dispose or recycle it in accord with the applicable regulations.
 7. Place the new battery (CR2032) into the compartment and beware of the polarity (+, -). "+" is way close to the metal guard plate. Gently press the battery downwards to make it firmly fixed.
 8. Connect every cable and cord in need and reassemble the instrument in proper order. The procedure of battery replacement is completed.
-

Factory Default Parameters

Measurement	Factory Default Parameter	Parameter Save/Load for Group 1 - 5
Item List		 NOTE
1ST Function	DCV	✓
1ST Range	Auto Range	✓
1ST Speed	5/s	✓
2ND Function	Off	✓
DCV Ratio	Off	✓
Filter	On	✓
Filter Type	Move	✓
Filter Count	10	✓
Filter Windows	0.10%	✓
Filter Method	Measure	✓
Auto Zero	On	✓
Input Impedance	10M(fixed for DCV)	✓
AC Speed (Bandwidth)	5/s(20Hz)	✓
Freq GetTime	100ms	✓
Freq InJack	Voltage	✓
Freq Timeout	1sec	✓
Continuity Threshold	10Ω	✓
Continuity Beep Volume	Small	✓

Temperature



Item List		Factory Default Parameter	Parameter Save/ Load for Group 1 - 5
Probe		Themocouple	✓
Unit		°C	✓
Type	J		✓
Simulated Method	Auto		✓
Themocouple	Simulated junction	23	✓
	Auto Simulated ADJ	0	✓
RTD	Type	PT100	✓
	R0	100	✓
Thermistor	Type	5kΩ	✓

Display



Item List		Factory Default Parameter	Parameter Save/ Load for Group 1 - 5
Digit		Auto	✓
Display		Number	✓
Bar Meter	Scale	Normal	✓
	VScale	Normal	✓
TrendChart	HScale	Count	✓
	Recent HScale	400sec	✓
Histogram	Bins	100	✓
	HScale	Auto	✓
Math			



Item List		Factory Default Parameter	Parameter Save/ Load for Group 1 - 5
Math Function		Off	✓
Math Display		Off	✓
	Function	Off	✓
Hold	Beep Volume	Small	✓
	Threshold	0.10%	✓
Rel	Function	Off	✓
	Reference Method	dBm	✓
dB	Reference Resistance	600Ω	✓
dBm	Reference Resistance	600Ω	✓
	Beep Mode	Off	✓
Compare	Beep Volume	Medium	✓
	Low Limit	-1	✓
	High Limit	1	✓
MX+B	M Value	1	✓
	B Value	0	✓
Trigger			
Item List		Factory Default Parameter	Parameter Save/ Load for Group 1 - 5
Trigger Source		Auto	✓
Trigger Delay		Auto	✓
Trigger Signal		NEG	✓
Sample Count		1	✓
EOM Out		NEG	✓

Menu

Item List	Factory Default Parameter	Parameter Save/ Load for Group 1 - 5
Beep	On	✓
Key Sound	On	✓
System	Internet Time Sync Disable	✗
	FREQ Compensate Enable	✗
	Lab Password	Enable
	Brightness	60%
	AutoOff	OFF
	AutoOff Time	30min
Display	1ST Font Color	White
	2ND Font Color	White
	Math Font Color	White
	Math Off Display Mode	Off
	Antialiasing	Off
	Additional Info	All On
	Languge	English
Interface	Interface	RS232
	BaudRate	115200
	FlowCtrl	Off
	EOL Character	CR+LF
	Separation Character	Comma
	USB Protocol	USBCDC
	GPIB Address	15



	Identity	Default	X
Lan	DHCP	ON	X
	Web	ON	X
	Telnet	ON	X
	Telnet Port	3000	X
	Telnet Echo	ON	X
	TCP	ON	X
	TCP Port	3001	X



Only utilized parameters are listed here due to over-amount parameters. The rest of the parameters unlisted, however, can be saved and loaded as well.



It indicates parameters can be saved and loaded from the groups 1 to 5.



It indicates the independent save zone which is free from impact of reboot.

Specifications

General

This section lists the general characteristics of the instrument.



Note:

- All specifications are ensured only under a single display.
- At least 1 hour of warm-up time is required before applying these specifications.
- Make sure that the Sense LO terminal to Input LO is limited to 2Vpk, the Sense HI to Sense LO terminals are limited to 200Vpk and the Input LO to earth is limited to 500Vpk. CAT II 300V. MAX DC1000V, AC 750V

Line Power	<ul style="list-style-type: none">• Power Supply: 100 / 120 / 220 / 240 VAC $\pm 10\%$• Power Line Frequency: 50 Hz / 60 Hz / 400 Hz $\pm 10\%$• Power Consumption: Max. 25 VA
Environment	<ul style="list-style-type: none">• Operating Environment: Full accuracy for 0 °C to 55 °C• Full accuracy to 80% R.H. at 40 °C Non-condensing• Operating Altitude Up to 2,000 m• Storage Temperature -40 to 70 °C
Mechanical	<ul style="list-style-type: none">• Rack Dimensions: 88mm(H) X 220mm(W) X276.6mm(D) (without bumpers)• Bench Dimensions: 107mm(H) X 266.9mm(W) X301.8mm(D) (with bumpers)• Weight (9060): 3.30 kg (7.3 lbs)• Weight (9061): 3.53 kg (7.8lbs)
Display	<ul style="list-style-type: none">• 4.3" color TFT WQVGA (480x272) with LED backlight• Supports basic number, bar meter, trend chart



and histogram views

- | | |
|--------------------------|--|
| Temperature Coefficient | <ul style="list-style-type: none">• Increment of one coefficient per one degree celsius when the range is beyond TCAL ± 5 °C. |
| Accuracy Specification | <ul style="list-style-type: none">• It is relevant to the calibration standard. |
| Real-Time Clock/Calendar | <ul style="list-style-type: none">• Set and read, year, month, day, hour, minute, seconds• Battery CR-2032 coin-type, replaceable |
-

RSDM-9061

DC Characteristics^[1]

DC Voltage

Range ^[2]	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 mV	0.0030 + 0.0030	0.0040 + 0.0035	0.0050 + 0.0035	0.0005 + 0.0005
1.000000 V	0.0020 + 0.0006	0.0035 + 0.0007	0.0048 + 0.0007	0.0005 + 0.0001
10.00000 V	0.0015 + 0.0004	0.0020 + 0.0005	0.0035 + 0.0005	0.0005 + 0.0001
100.0000 V	0.0020 + 0.0006	0.0035 + 0.0006	0.0050 + 0.0006	0.0005 + 0.0001
1000.000 V	0.0025 + 0.0006	0.0040 + 0.0010	0.0050 + 0.0010	0.0005 + 0.0001

Accuracy Specifications: ± (% of reading + % of range)

Resistance ^[3]

Range ^[2]	Test Current	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 Ω	1 mA	0.003 + 0.0030	0.008 + 0.004	0.010 + 0.004	0.0008+ 0.0005
1.000000 kΩ	1 mA	0.002 + 0.0005	0.008 + 0.001	0.010 + 0.001	0.0008+ 0.0001
10.00000 kΩ	100 μA	0.002 + 0.0005	0.008 + 0.001	0.010 + 0.001	0.0008+ 0.0001
100.0000 kΩ	10 μA	0.002 + 0.0005	0.008 + 0.001	0.010 + 0.001	0.0008+ 0.0001
1.000000 MΩ	5 μA	0.002 + 0.0010	0.008 + 0.001	0.010 + 0.001	0.0010+ 0.0002
10.00000 MΩ	500 nA	0.015 + 0.0010	0.020 + 0.001	0.040 + 0.001	0.0030+ 0.0004
100.0000 MΩ	500 nA	0.300 + 0.0100	0.800 + 0.0100	0.800 + 0.0100	0.1500+ 0.0002 //10 MΩ

Accuracy Specifications: ± (% of reading + % of range)

DC Current

Range ^[2]	Burden Voltage	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 μA	< 0.011 V	0.010 + 0.020	0.040 + 0.025	0.050 + 0.025	0.002 + 0.003
1.000000 mA	< 0.11 V	0.007 + 0.006	0.030 + 0.006	0.050 + 0.006	0.002 + 0.001
10.00000 mA	< 0.04 V	0.007 + 0.020	0.030 + 0.020	0.050 + 0.020	0.002 + 0.002
100.0000 mA	< 0.4 V	0.010 + 0.004	0.030 + 0.005	0.050 + 0.005	0.002 + 0.001



1.000000 A	< 0.7 V	0.050 + 0.006	0.080 + 0.010	0.100 + 0.010	0.005 + 0.001
3.000000 A	< 2.0 V	0.180 + 0.020	0.200 + 0.020	0.200 + 0.020	0.005 + 0.002
10.00000 A ^[6]	< 0.5 V	0.100 + 0.010	0.120 + 0.010	0.150 + 0.010	0.005 + 0.001

Accuracy Specifications: \pm (% of reading + % of range)

Continuity

Range ^[2]	24 Hour TCAL \pm 1 °C	90 Day TCAL \pm 5 °C	1 Year TCAL \pm 5 °C	Temperature Coefficient/°C
1 kΩ	0.002 + 0.030	0.008 + 0.030	0.01 + 0.03	0.001 + 0.002

Accuracy Specifications: \pm (% of reading + % of range)

Diode Test^[4]

Range ^[2]	24 Hour TCAL \pm 1 °C	90 Day TCAL \pm 5 °C	1 Year TCAL \pm 5 °C	Temperature Coefficient/°C
5 V	0.002 + 0.030	0.008 + 0.030	0.01 + 0.03	0.001 + 0.002

Accuracy Specifications: \pm (% of reading + % of range)

DCV Ratio^[5]

Accuracy Specification: \pm (DC Input accuracy + DC Reference accuracy)

Measuring Characteristics

DC Voltage

Input Resistance Range

100 mV	10 MΩ or >10 GΩ
1 V	Selectable
10 V	
100 V	10 MΩ ±1%
1000 V	

Input Bias 30 pA (Typ, 25°C)

Input Protection 1000 V on all ranges

Measurement Method: Sigma-delta A/D Converter

Resistance

Max. Lead Resistance 10% of range per lead for 100Ω, 1 kΩ ranges. 1 kΩ per lead on all other ranges.

Input Protection 1000 V on all ranges

Measurement Method: Selectable 4-wire or 2-wire ohms. Current source referenced to Input LO Terminal

	Range	Shunt	Burden Voltage
DC Current	100 μ A	100 Ω	<0.011 V
	1 mA	100 Ω	<0.11 V
	10 mA	1 Ω	<0.04 V
	100 mA	1 Ω	<0.4 V
	1 A	0.1 Ω	<0.7 V
	3 A	0.1 Ω	<2 V
	10 A	10m Ω	<0.5 V
	Input Protection	External 3.15 A, 500 V fuse for 3 A Internal 6 A, 1 kV fuse for 3 A Internal 12 A, 1 kV fuse for 10 A	
	Speed	Digits	
Reading Rate (Readings/sec)	DCV	5 /s , 20 /s , 60 /s , 100 /s	6 $\frac{1}{2}$
	DCI	400 /s , 1.2 k /s , 2.4 k /s	5 $\frac{1}{2}$
	2W/4W-Resistance	4.8 k /s , 7.5 k /s , 10 k/s	4 $\frac{1}{4}$
	Speed	Digits	
	Continuity	60 /s	6 $\frac{1}{2}$
	Diode	100 /s	5 $\frac{1}{2}$
		400 /s	4 $\frac{1}{4}$

[¹]DC Specification: In addition to the availability that requires warm-up of 60 minutes, it must be set in 5/s speed rate (60/s speed rate for Continuity and Diode), A-Zero on.

[²]The entire range of measurement will pass the set range by 20% except the tests of 1000 V DC, 3 A DC, 10 A DC and diode.

[³]This specification applies to 4-wire resistance measurement, whilst it requires using "REL" function for offset on 2-wire resistance measurement. 2-wire resistance measurement will cause additional error of 0.2 Ω if REL function is not executed.

[⁴]This specification applies to the voltage measured from input terminal. 1 mA test current is the typical value. The change of current source leads to the variation in buck of diode junction.

[⁵]Accuracy is \pm (DC Input accuracy + DC Reference accuracy), where Input accuracy = DC Voltage accuracy for the Input HI to LO (in % of the Input voltage), and Reference accuracy = DC Voltage accuracy for the HI to LO (Sense) Reference (in % of the Reference voltage).

[⁶]The 10 A range of measurement is available for the terminals on front panel only. Due to power factor resulting in temperature rise, 2 mA increment per one ampere when input is greater than 5 A.



AC Characteristics^[1]

True RMS AC Voltage ^{[2][3][4]}

Range [2]	Frequency	24 Hour	90 Day	1 Year	Temperature
		TCAL ± 1 °C	TCAL ± 5 °C	TCAL ± 5 °C	Coefficient / °C
100 mV	3 Hz - 5 Hz	1.00 + 0.03	1.00 + 0.04	1.00 + 0.04	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.03	0.35 + 0.04	0.35 + 0.04	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.03	0.05 + 0.04	0.06 + 0.04	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.05	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020
1 V ~	3 Hz - 5 Hz	1.00 + 0.02	1.00 + 0.03	1.00 + 0.03	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.02	0.35 + 0.03	0.35 + 0.03	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.02	0.05 + 0.03	0.06 + 0.03	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.04	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020
750 V	3 Hz - 5 Hz	1.00 + 0.02	1.00 + 0.03	1.00 + 0.03	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.02	0.35 + 0.03	0.35 + 0.03	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.02	0.05 + 0.03	0.06 + 0.03	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.04	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020

Accuracy Specifications: ± (% of reading + % of range)

True RMS AC Current ^{[2][4][5]}

Burden Range [2]	Voltage	Frequency	24 Hour	90 Day	1 Year	Temperature
			TCAL ± 1 °C	TCAL ± 5 °C	TCAL ± 5 °C	Coefficient / °C
100 µA/ 10 mA	<0.011 V, 3Hz~5 Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006	
	5Hz~10Hz	0.35 + 0.04	0.35 + 0.04	0.35 + 0.04	0.035 + 0.006	
	10Hz~5kHz	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006	
	5kHz~	0.18 + 0.04	0.18 + 0.04	0.18 + 0.04	0.030 + 0.006	
	10kHz					
1 mA/ 100 mA	<0.11 V, 3Hz~5Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006	
	5Hz~10Hz	0.30 + 0.04	0.30 + 0.04	0.30 + 0.04	0.035 + 0.006	
	10Hz~	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006	
	5 kHz					
1 A	<0.4 V	5Hz~10Hz	0.30 + 0.04	0.30 + 0.04	0.30 + 0.04	0.035 + 0.006
		10Hz~	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006
		5 kHz				
		5kHz~	0.15 + 0.04	0.15 + 0.04	0.15 + 0.04	0.030 + 0.006
		10 kHz				
	< 0.7 V	3 Hz - 5 Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006
		5 Hz - 10	0.30 + 0.04	0.30 + 0.04	0.30 + 0.04	0.035 + 0.006

		Hz					
10 Hz – 5 kHz		0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006		
5 kHz – 10 kHz		0.15 + 0.04	0.15 + 0.04	0.15 + 0.04	0.030 + 0.006		
3 A	< 2.0 V	3 Hz – 5 Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006	
10 A [6]	< 0.5 V	3 Hz – 5 Hz	1.10 + 0.04	1.10 + 0.04	1.10 + 0.04	0.100 + 0.006	
10 Hz – 5 kHz		0.35 + 0.04	0.35 + 0.04	0.35 + 0.04	0.035 + 0.006		
5 kHz – 10 kHz		0.23 + 0.04	0.23 + 0.04	0.23 + 0.04	0.030 + 0.006		
5 kHz – 10 kHz		0.35 + 0.04	0.35 + 0.04	0.35 + 0.04	0.030 + 0.006		

Accuracy Specifications: \pm (% of reading + % of range)

Additional Crest Factor Errors (non-sine wave)

Crest Factor	Error (% of reading)
1-2	0.05%
2-3	0.15%
3-4	0.30%
4-5	0.40%

Additional Low Frequency Errors (% of reading)

Frequency	Speed		
	1/s (>3 Hz)	5/s (>20 Hz)	20/s (>200 Hz)
10 Hz~20 Hz	0	0.74	-
20 Hz~40 Hz	0	0.22	-
40 Hz~100 Hz	0	0.06	0.73
100 Hz~200 Hz	0	0.01	0.22
200 Hz~1 kHz	0	0	0.18



>1 kHz	0	0	0
--------	---	---	---

Measuring Characteristics

True RMS AC Voltage	Measurement Method:	AC-coupled True RMS – measures the ac component of input with up to 400 Vdc of bias on any range.	
	Crest Factor	Maximum 5:1 at full scale	
AC Bandwidth	Speed	Bandwidth	
	1/s (>3 Hz)	3 Hz – 300 kHz (ACI:3 Hz – 10 kHz)	
	5/s (>20 Hz)	20 Hz – 300 kHz (ACI:20 Hz – 10 kHz)	
	20/s(>200 Hz)	200 Hz – 300 kHz(ACI:200 Hz – 10 kHz)	
	Input Impedance:	1 MΩ± 2%, in parallel with 100 pF	
	Input Protection: 750 Vrms on all ranges		
True RMS AC Current	Range	Shunt	Burden Voltage
	100 µ A	100Ω	<0.011 V
	1 mA	100Ω	<0.11 V
	10 mA	1Ω	<0.04 V
	100 mA	1Ω	<0.4 V
	1 A	0.1Ω	<0.7 V
	3 A	0.1Ω	<2 V
	10 A	10 mΩ	<0.5 V
	Input Protection: External 3.15 A, 500 V fuse for 3 A		
	Internal 6 A, 1 kV fuse for 3 A		
	Internal 12 A, 1 kV fuse for 10 A		

Operating Characteristics

Function	Speed	Digits	AC Bandwidth
ACV	1/s (>3 Hz)	6 ½	3 Hz – 300 kHz
	5/s (>20 Hz)	5 ½	20 Hz – 300 kHz
	20/s (>200 Hz)	4 ½	200 Hz – 300 kHz
ACI	1/s (>3 Hz)	6 ½	3 Hz – 10 kHz
	5/s (>20 Hz)	5 ½	20 Hz – 10 kHz
	20/s (>200 Hz)	4 ½	200 Hz – 10 kHz

AC Specification: It will be available after 60 minutes of warm-up, sine wave as well as 1/s speed rate.

The entire range of measurement will pass the set range by 20% except the tests of 750 VAC, 3 A AC and 10 A AC.

Specifications are for sinewave input >5% of range. For inputs from 1% to 5% of range and <50 kHz, add 0.1% of range additional error. For 50 kHz to 100 kHz, add 0.13% of range. The measurement range of 750 VAC is limited within the range of 7.5×10^7 Volt-Hz.

Three speed settings provided for low-frequency performance: 1/s (3 Hz), 5/s (20 Hz), 20/s (200 Hz). Additional errors will Not occur for the frequency greater than the filter settings.

Specifications are for sinewave input >5% of range, and is beyond 10 μ A AC. For inputs from 1% to 5% of range, add 0.1% of range additional error.

The 10A range of measurement is available for the terminals on front panel only. Due to power factor resulting in temperature rise, 2 mA increment per one ampere when input is greater than 5 A rms.

Frequency and Period Characteristics

Frequency Period [1] [2]

Range	Frequency	24 Hour	90 Day	1 Year	Temperature
		TCAL $\pm 1^\circ\text{C}$	TCAL $\pm 5^\circ\text{C}$	TCAL $\pm 5^\circ\text{C}$	Coefficient/ $^\circ\text{C}$
100 mV~	3 Hz – 5 Hz	0.100	0.100	0.100	0.100
750 V [3]	5 Hz – 10 Hz	0.050	0.050	0.050	0.035
	10 Hz – 40 Hz	0.030	0.030	0.030	0.015
	40 Hz – 1 MHz ^[4]	0.006	0.006	0.006	0.015

Accuracy Specifications: \pm % of reading

Measuring Characteristics

Frequency and Period	Measurement Method:	Reciprocal-counting technique. AC-coupled input using the ac voltage measurement function.
	Voltage Ranges	100 mVrms full scale to 750 Vrms. Auto or manual ranging.
Settling Considerations		Errors will occur when attempting to measure the frequency or period of an input following a dc offset voltage change. The input blocking RC time constant must be allowed to fully settle (up to 1 sec) before the most accurate measurements are possible.
Measurement		All frequency counters are susceptible to error when



Considerations	measuring low-voltage, low-frequency signals. Shielding inputs from external noise pickup is critical for minimizing measurement errors.
----------------	---

Operating Characteristics

Function	Gate Time	Digits
Frequency, Period	1 s	6 ½
	100 ms	5 ½
	10 ms	4 ½

This specification will be available after 60 minutes of warm-up and sine wave input, unless stated otherwise. This specification applies to 1s gate time.

This specification is available when both sine wave and square wave input ≥ 100 mV. For the input of 10 mV to 100 mV, the % of reading error needs to be multiplied by 10 times.

The amplitude range is from 10% to 120% and is lower than 750 VAC.

The input ≥ 60 mV, for 300 k \sim 1 MHz, within 100mV range.

Temperature Characteristics^[1] (Exclusive of probe errors)

RTD (Accuracy based on PT100):

(100 Ωplatinum [PT100], D100, F100,PT385, PT3916, or user type)

Range	Resolution	1 Year (23°C ±5°C)	Temperature Coefficient 0°-18°C & 28°-55°C
-200 °C~ -100 °C	0.001 °C	0.09 °C	0.004 °C / °C
-100 °C~ -20 °C	0.001 °C	0.08 °C	0.005 °C / °C
-20 °C~ 20 °C	0.001 °C	0.06 °C	0.005 °C / °C
20 °C~100 °C	0.001 °C	0.08 °C	0.005 °C / °C
100 °C~300 °C	0.001 °C	0.12 °C	0.007 °C / °C
300 °C~600 °C	0.001 °C	0.22 °C	0.009 °C / °C

Thermocouples (Accuracy based on ITS-90):

Type	Range	Resolution	90 Day/1 Year (23 °C±5 °C)*	Temperature Coefficient 0°-18 °C & 28°-55 °C
E	-200 to +1000 °C	0.002 °C	0.2 °C	0.03 °C / °C
J	-210 to +1200 °C	0.002 °C	0.2 °C	0.03 °C / °C
T	-200 to +400 °C	0.002 °C	0.3 °C	0.04 °C / °C

K	-200 to +1372 °C	0.002 °C	0.3 °C	0.04 °C / °C
N	-200 to +1300 °C	0.003 °C	0.4 °C	0.05 °C / °C
R	-50 to +1768 °C	0.01 °C	1 °C	0.14 °C / °C
S	-50 to +1768 °C	0.01 °C	1 °C	0.14 °C / °C
B	+350 to +1820 °C	0.01 °C	1 °C	0.14 °C / °C

*Relative to simulated junction

Thermistor: (2.2 kΩ, 5 kΩ, 10 kΩ or User Type)

Range	Resolution	90 Day/1 Year	Temperature
		(23 °C±5 °C)*	Coefficient / °C
-80 ° to 150 °C	0.001 °C	0.1 °C	0.003 °C/ °C

Reading Rate (Readings/sec)	TCO/RTD/ Thermistor	Speed	Digits
		5/s	6 ½
		20/s	5 ½
		60/s	4 ½

The actual measurement range and test lead error will be constrained by the adopted test lead. The test lead accuracy adder covers all errors of measurements and ITS-90 temperature change.

Capacitance [1]

Range	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
1.000 nF	2.00 + 2.00	2.00 + 2.00	2.00 + 2.00	0.05 + 0.01
10.00 nF	2.00 + 1.00	2.00 + 1.00	2.00 + 1.00	0.05 + 0.01
100.0 nF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
1.000 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
10.00 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
100.0 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01

Accuracy Specifications: ± (% of reading + % of range)

Specifications are for film Capacitance inputs that are greater than 10% range.



Capacitance

Measurement method: DC recharge & discharge.

Input protection: 500 Vpeak on all ranges.

The capacitor under test (C_x) is charged using a constant current source. The time to charge C_x is recorded. The capacitor is then discharged using a known resistance and the discharge time is recorded. The value of the resistance depends on the capacitance range that is selected. The charge and discharge time is used to calculate the capacitance of C_x if the selected capacitance range is equal to or less than 10 nF. Only the charge time is used to calculate the capacitance of C_x if the selected capacitance range is equal to or greater than 100 nF.

As measuring capacitance with the DMM is effectively a DC measurement, the measured capacitance tends to be higher than what is measured by LCR meters. For best measurement results, first perform a zeroing of the test leads when the cables are “open” to compensate for the test lead capacitance.

RSDM-9060

DC Characteristics^[1]

DC Voltage

Range ^[2]	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 mV	0.0040 + 0.0060	0.0070 + 0.0065	0.0090 + 0.0065	0.0005 + 0.0005
1.000000 V	0.0030 + 0.0009	0.0060 + 0.0010	0.0080 + 0.0010	0.0005 + 0.0001
10.00000 V	0.0025 + 0.0004	0.0050 + 0.0005	0.0075 + 0.0005	0.0005 + 0.0001
100.0000 V	0.0030 + 0.0006	0.0065 + 0.0006	0.0085 + 0.0006	0.0005 + 0.0001
1000.000 V	0.0030 + 0.0006	0.0065 + 0.0010	0.0085 + 0.0010	0.0005 + 0.0001

Accuracy Specifications: ± (% of reading + % of range)

Resistance ^[3]

Range ^[2]	Test Current	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 Ω	1 mA	0.004 + 0.0060	0.011 + 0.007	0.014 + 0.007	0.0006 + 0.0005
1.000000 kΩ	1 mA	0.003 + 0.0008	0.011 + 0.001	0.014 + 0.001	0.0006 + 0.0001
10.00000 kΩ	100 µA	0.003 + 0.0005	0.011 + 0.001	0.014 + 0.001	0.0006 + 0.0001
100.0000 kΩ	10 µA	0.003 + 0.0005	0.011 + 0.001	0.014 + 0.001	0.0006 + 0.0001
1.000000 MΩ	5 µA	0.003 + 0.0010	0.011 + 0.001	0.014 + 0.001	0.0010 + 0.0002
10.00000 MΩ	500 nA	0.015 + 0.0010	0.020 + 0.001	0.040 + 0.001	0.0030 + 0.0004
100.0000 MΩ	500 nA	0.300 + 0.0100	0.800 + 0.010	0.800 + 0.010	0.1500 + 0.0002 //10 MΩ

Accuracy Specifications: ± (% of reading + % of range)

DC Current

Range ^[2]	Burden Voltage	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
100.0000 µA	< 0.011 V	0.010 + 0.020	0.040 + 0.025	0.050 + 0.025	0.0020 + 0.0030
1.000000 mA	< 0.11 V	0.007 + 0.006	0.030 + 0.006	0.050 + 0.006	0.0020 + 0.0005
10.00000 mA	< 0.04 V	0.007 + 0.020	0.030 + 0.020	0.050 + 0.020	0.0020 + 0.0020
100.0000 mA	< 0.4 V	0.010 + 0.004	0.030 + 0.005	0.050 + 0.005	0.0020 + 0.0005



1.000000 A	< 0.7 V	0.050 + 0.006	0.080 + 0.010	0.100 + 0.010	0.0050 + 0.0010
3.000000 A	< 2.0 V	0.180 + 0.020	0.200 + 0.020	0.200 + 0.020	0.0050 + 0.0020

Accuracy Specifications: \pm (% of reading + % of range)

Continuity

Range [2]	24 Hour TCAL \pm 1 °C	90 Day TCAL \pm 5 °C	1 Year TCAL \pm 5 °C	Temperature Coefficient/°C
1 kΩ	0.003 + 0.030	0.011 + 0.030	0.014 + 0.030	0.001 + 0.002

Accuracy Specifications: \pm (% of reading + % of range)

Diode Test [4]

Range [2]	24 Hour TCAL \pm 1 °C	90 Day TCAL \pm 5 °C	1 Year TCAL \pm 5 °C	Temperature Coefficient/°C
5 V	0.003 + 0.030	0.011 + 0.030	0.014 + 0.030	0.0010 + 0.0020

Accuracy Specifications: \pm (% of reading + % of range)

DCV Ratio [5]

Accuracy Specification: \pm (DC Input accuracy + DC Reference accuracy)

Measuring Characteristics

DC Voltage

Input Resistance Range

100 mV	10 M Ω or >10 G Ω
1 V	Selectable
10 V	
100 V	10 M Ω \pm 1%
1000 V	

Input Bias 30 pA (Typ, 25°C)

Input Protection 1000 V on all ranges

Measurement Method: Sigma-delta A/D Converter

Resistance

Max. Lead
Resistance

10% of range per lead for 100Ω, 1 kΩ
ranges. 1 kΩ per lead on all other ranges.

Input Protection 1000 V on all ranges

Measurement Method: Selectable 4-wire or 2-wire ohms. Current source

referenced to Input LO Terminal

	Range	Shunt	Burden Voltage
DC Current	100 µA	100Ω	<0.011 V
	1 mA	100Ω	<0.11 V
	10 mA	1Ω	<0.04 V
	100 mA	1Ω	<0.4 V
	1 A	0.1Ω	<0.7 V
	3 A	0.1Ω	<2 V
	Input Protection	External 3.15 A, 500 V fuse for 3 A Internal 6 A, 1 kV fuse for 3 A	
	Speed	Digits	
Reading Rate (Readings/sec)	DCV	5 /s, 20 /s, 60 /s, 100 /s	6 ½
	DCI, 2W/4W-Resistance	400 /s, 1 k /s	5 ½
	Continuity Diode	Speed	Digits
		60 /s	6 ½
		100 /s	5 ½
		400 /s	4 ¼

[1] DC Specification: In addition to the availability that requires warm-up of 60 minutes, it must be set in 5/s speed rate (60/s speed rate for Continuity and Diode), A-Zero on.

[2] The entire range of measurement will pass the set range by 20% except the tests of 1000 V DC, 3 A DC, 10 A DC and diode.

[3] This specification applies to 4-wire resistance measurement, whilst it requires using "REL" function for offset on 2-wire resistance measurement. 2-wire resistance measurement will cause additional error of 0.2Ω if REL function is not executed.

[4] This specification applies to the voltage measured from input terminal. 1 mA test current is the typical value. The change of current source leads to the variation in buck of diode junction.

[5] Accuracy is \pm (DC Input accuracy + DC Reference accuracy), where Input accuracy = DC Voltage accuracy for the Input HI to LO (in % of the Input voltage), and Reference accuracy = DC Voltage accuracy for the HI to LO (Sense) Reference (in % of the Reference voltage).



AC Characteristics^[1]

True RMS AC Voltage ^{[2][3][4]}

Range [2]	Frequency	24 Hour	90 Day	1 Year	Temperature
		TCAL ± 1 °C	TCAL ± 5 °C	TCAL ± 5 °C	Coefficient / °C
100 mV	3 Hz - 5 Hz	1.00 + 0.03	1.00 + 0.04	1.00 + 0.04	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.03	0.35 + 0.04	0.35 + 0.04	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.03	0.05 + 0.04	0.06 + 0.04	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.05	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020
1 V ~	3 Hz - 5 Hz	1.00 + 0.02	1.00 + 0.03	1.00 + 0.03	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.02	0.35 + 0.03	0.35 + 0.03	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.02	0.05 + 0.03	0.06 + 0.03	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.04	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020
750 V	3 Hz - 5 Hz	1.00 + 0.02	1.00 + 0.03	1.00 + 0.03	0.100 + 0.004
	5 Hz - 10 Hz	0.35 + 0.02	0.35 + 0.03	0.35 + 0.03	0.035 + 0.004
	10 Hz - 20 kHz	0.04 + 0.02	0.05 + 0.03	0.06 + 0.03	0.005 + 0.003
	20 kHz - 50 kHz	0.10 + 0.04	0.11 + 0.05	0.12 + 0.05	0.011 + 0.005
	50 kHz - 100 kHz	0.55 + 0.08	0.60 + 0.08	0.60 + 0.08	0.060 + 0.008
	100 kHz - 300 kHz	4.00 + 0.50	4.00 + 0.50	4.00 + 0.50	0.200 + 0.020

Accuracy Specifications: ± (% of reading + % of range)

True RMS AC Current ^{[2][4][5]}

Burden Range [2]	Voltage	Frequency	24 Hour	90 Day	1 Year	Temperature
			TCAL ± 1 °C	TCAL ± 5 °C	TCAL ± 5 °C	Coefficient / °C
100 µA/ 10 mA	<0.011 V, 3Hz~5 Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006	
	5Hz~10Hz	0.35 + 0.04	0.35 + 0.04	0.35 + 0.04	0.035 + 0.006	
	10Hz~5kHz	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006	
	5kHz~	0.18 + 0.04	0.18 + 0.04	0.18 + 0.04	0.030 + 0.006	
	10kHz					
1 mA/ 100 mA	<0.11 V, 3Hz~5Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006	
	5Hz~10Hz	0.30 + 0.04	0.30 + 0.04	0.30 + 0.04	0.035 + 0.006	
	10Hz~	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006	
	5kHz					
	5kHz~	0.15 + 0.04	0.15 + 0.04	0.15 + 0.04	0.030 + 0.006	
	10kHz					
1 A	< 0.7 V	3Hz~5 Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006
		5Hz~10Hz	0.30 + 0.04	0.30 + 0.04	0.30 + 0.04	0.035 + 0.006

		10Hz~5 kHz	0.10 + 0.04	0.10 + 0.04	0.10 + 0.04	0.015 + 0.006
		5 kHz~10 kHz	0.15 + 0.04	0.15 + 0.04	0.15 + 0.04	0.030 + 0.006
3 A	< 2.0 V	3Hz~5Hz	1.00 + 0.04	1.00 + 0.04	1.00 + 0.04	0.100 + 0.006
		5Hz~10Hz	0.35 + 0.04	0.35 + 0.04	0.35 + 0.04	0.035 + 0.006
		10 Hz ~5 kHz	0.23 + 0.04	0.23 + 0.04	0.23 + 0.04	0.015 + 0.006
		5 kHz ~ 10 kHz	0.23 + 0.04	0.23 + 0.04	0.23 + 0.04	0.030 + 0.006

Accuracy Specifications: \pm (% of reading + % of range)

Additional Crest Factor Errors (non-sine wave)

Crest Factor	Error (% of reading)
1-2	0.05%
2-3	0.15%
3-4	0.30%
4-5	0.40%

Additional Low Frequency Errors (% of reading)

Frequency	Speed		
	1/s (>3 Hz)	5/s (>20 Hz)	20/s (>200 Hz)
10 Hz~20 Hz	0	0.74	-
20 Hz~40 Hz	0	0.22	-
40 Hz~100 Hz	0	0.06	0.73
100 Hz~200 Hz	0	0.01	0.22
200 Hz~1 k Hz	0	0	0.18
>1 k Hz	0	0	0

Measuring Characteristics

True RMS AC Voltage	Measurement Method:	AC-coupled True RMS – measures the ac component of input with up to 400 Vdc of bias on any range.
	Crest Factor	Maximum 5:1 at full scale
AC Bandwidth	Speed	Bandwidth
	1/s (>3 Hz)	3 Hz – 300 kHz (ACI:3 Hz – 10 kHz)



5/s (>20 Hz)	20 Hz – 300 kHz (ACI:20 Hz – 10 kHz)
20/s(>200 Hz)	200 Hz – 300 kHz(ACI:200 Hz – 10 kHz)
Input Impedance:	1 MΩ ± 2%, in parallel with 100 pF
Input Protection: 750 Vrms on all ranges	

True RMS AC Current	Range	Shunt	Burden Voltage
100 μA	100Ω	<0.011 V	
1 mA	100Ω	<0.11 V	
10 mA	1Ω	<0.04 V	
100 mA	1Ω	<0.4 V	
1 A	0.1Ω	<0.7 V	
3 A	0.1Ω	<2 V	

Input Protection: External 3.15 A, 500 V fuse for 3 A
Internal 6 A, 1 kV fuse for 3 A

Operating Characteristics

Function	Speed	Digits	AC Bandwidth
ACV	1/s (>3 Hz)	6 ½	3 Hz – 300 kHz
	5/s (>20 Hz)	5 ½	20 Hz – 300 kHz
	20/s (>200 Hz)	4 ½	200 Hz – 300 kHz
ACI	1/s (>3 Hz)	6 ½	3 Hz – 10 kHz
	5/s (>20 Hz)	5 ½	20 Hz – 10 kHz
	20/s (>200 Hz)	4 ½	200 Hz – 10 kHz

[1]AC Specification: It will be available after 60 minutes of warm-up, sine wave as well as 1/s speed rate.

[2]The entire range of measurement will pass the set range by 20% except the tests of 750 VAC, 3 A AC and 10 A AC.

[3]Specifications are for sinewave input >5% of range. For inputs from 1% to 5% of range and <50 kHz, add 0.1% of range additional error. For 50 kHz to 100 kHz, add 0.13% of range. The measurement range of 750 VAC is limited within the range of 7.5×10^7 Volt–Hz.

[4]Three speed settings provided for low-frequency performance: 1/s (3 Hz), 5/s (20 Hz), 20/s (200 Hz). Additional errors will Not occur for the frequency greater than the filter settings.

[5]Specifications are for sinewave input >5% of range, and is beyond 10 μ A AC. For inputs from 1% to 5% of range, add 0.1% of range additional error.

[6]The 10A range of measurement is available for the terminals on front panel

only. Due to power factor resulting in temperature rise, 2 mA increment per one ampere when input is greater than 5 A rms.

Frequency and Period Characteristics

Frequency Period [1] [2]

Range	Frequency	24 Hour	90 Day	1 Year	Temperature Coefficient/°C
100 mV-	3 Hz – 5 Hz	0.100	0.100	0.100	0.100
750 V ^[3]	5 Hz – 10 Hz	0.050	0.050	0.050	0.035
	10 Hz – 40 Hz	0.030	0.030	0.030	0.015
	40 Hz – 1 MHz ^[4]	0.006	0.006	0.006	0.015

Accuracy Specifications: ± % of reading

Measuring Characteristics

Frequency and Period	Measurement Method:	Reciprocal-counting technique. AC-coupled input using the ac voltage measurement function.
	Voltage Ranges	100 mVrms full scale to 750 Vrms. Auto or manual ranging.
Settling Considerations		Errors will occur when attempting to measure the frequency or period of an input following a dc offset voltage change. The input blocking RC time constant must be allowed to fully settle (up to 1 sec) before the most accurate measurements are possible.
Measurement Considerations		All frequency counters are susceptible to error when measuring low-voltage, low-frequency signals. Shielding inputs from external noise pickup is critical for minimizing measurement errors.

Operating Characteristics

Function	Gate Time	Digits
Frequency, Period	1 s	6 ½
	100 ms	5 ½
	10 ms	4 ½

[1]This specification will be available after 60 minutes of warm-up and sine wave input, unless stated otherwise. This specification applies to 1s gate time.



[²]This specification is available when both sine wave and square wave input \geq 100 mV. For the input of 10 mV to 100 mV, the % of reading error needs to be multiplied by 10 times.

[³]The amplitude range is from 10% to 120% and is lower than 750 VAC.

[⁴]The input \geq 60 mV, for 300 k ~ 1 MHz, within 100mV range.

Temperature Characteristics^[1](Exclusive of probe errors)

RTD (Accuracy based on PT100):

(100Ω platinum [PT100], D100, F100,PT385, PT3916, or user type)

Range	Resolution	1 Year (23°C ±5°C)	Temperature Coefficient 0°-18°C & 28°-55°C
-200 °C~ -100 °C	0.001 °C	0.09 °C	0.004 °C / °C
-100 °C~ -20 °C	0.001 °C	0.08 °C	0.005 °C / °C
-20 °C~20 °C	0.001 °C	0.06 °C	0.005 °C / °C
20 °C~100 °C	0.001 °C	0.08 °C	0.005 °C / °C
100 °C~300 °C	0.001 °C	0.12 °C	0.007 °C / °C
300 °C~600 °C	0.001 °C	0.22 °C	0.009 °C / °C

Thermocouples (Accuracy based on ITS-90):

Type	Range	Resolution	90 Day/1 Year (23 °C±5 °C)*	Temperature Coefficient 0°-18 °C & 28°-55 °C
E	-200 to +1000 °C	0.002 °C	0.2 °C	0.03 °C / °C
J	-210 to +1200 °C	0.002 °C	0.2 °C	0.03 °C / °C
T	-200 to +400 °C	0.002 °C	0.3 °C	0.04 °C / °C
K	-200 to +1372 °C	0.002 °C	0.3 °C	0.04 °C / °C
N	-200 to +1300 °C	0.003 °C	0.4 °C	0.05 °C / °C
R	-50 to +1768 °C	0.01 °C	1 °C	0.14 °C / °C
S	-50 to +1768 °C	0.01 °C	1 °C	0.14 °C / °C
B	+350 to +1820 °C	0.01 °C	1 °C	0.14 °C / °C

*Relative to simulated junction

Thermistor: (2.2 kΩ, 5 kΩ, 10 kΩ or User Type)

Range	Resolution	90 Day/1 Year (23 °C±5 °C)*	Temperature Coefficient / °C
-80 ° to 150 °C	0.001 °C	0.1 °C	0.003 °C / °C

Reading Rate (Readings/sec)	TCO/RTD/ Thermistor	Speed	Digits
		5/s	6 ½
		20/s	5 ½
		60/s	4 ½

[1]The actual measurement range and test lead error will be constrained by the adopted test lead. The test lead accuracy adder covers all errors of measurements and ITS-90 temerature change.

Capacitance [1]

Range	24 Hour TCAL ± 1 °C	90 Day TCAL ± 5 °C	1 Year TCAL ± 5 °C	Temperature Coefficient/°C
1.000 nF	2.00 + 2.00	2.00 + 2.00	2.00 + 2.00	0.05 + 0.01
10.00 nF	2.00 + 1.00	2.00 + 1.00	2.00 + 1.00	0.05 + 0.01
100.0 nF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
1.000 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
10.00 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01
100.0 µF	2.00 + 0.40	2.00 + 0.40	2.00 + 0.40	0.05 + 0.01

Accuracy Specifications: ± (% of reading + % of range)

[1] Specifications are for film Capacitance inputs that are greater than 10% range.

Capacitance

Measurement method: DC recharge & discharge.

Input protection: 500 Vpeak on all ranges.




The capacitor under test (C_x) is charged using a constant current source. The time to charge C_x is recorded. The capacitor is then discharged using a known resistance and the discharge time is recorded. The value of the resistance depends on the capacitance range that is selected. The charge and discharge time is used to calculate the capacitance of C_x if the selected capacitance range is equal to or less than 10 nF. Only the charge time is used to calculate the capacitance of C_x if the selected capacitance range is equal to or greater than 100 nF.

As measuring capacitance with the DMM is effectively a DC measurement, the measured capacitance tends to be higher than what is measured by LCR meters.

For best measurement results, first perform a zeroing of the test leads when the cables are “open” to compensate for the test lead capacitance.

Dimensions

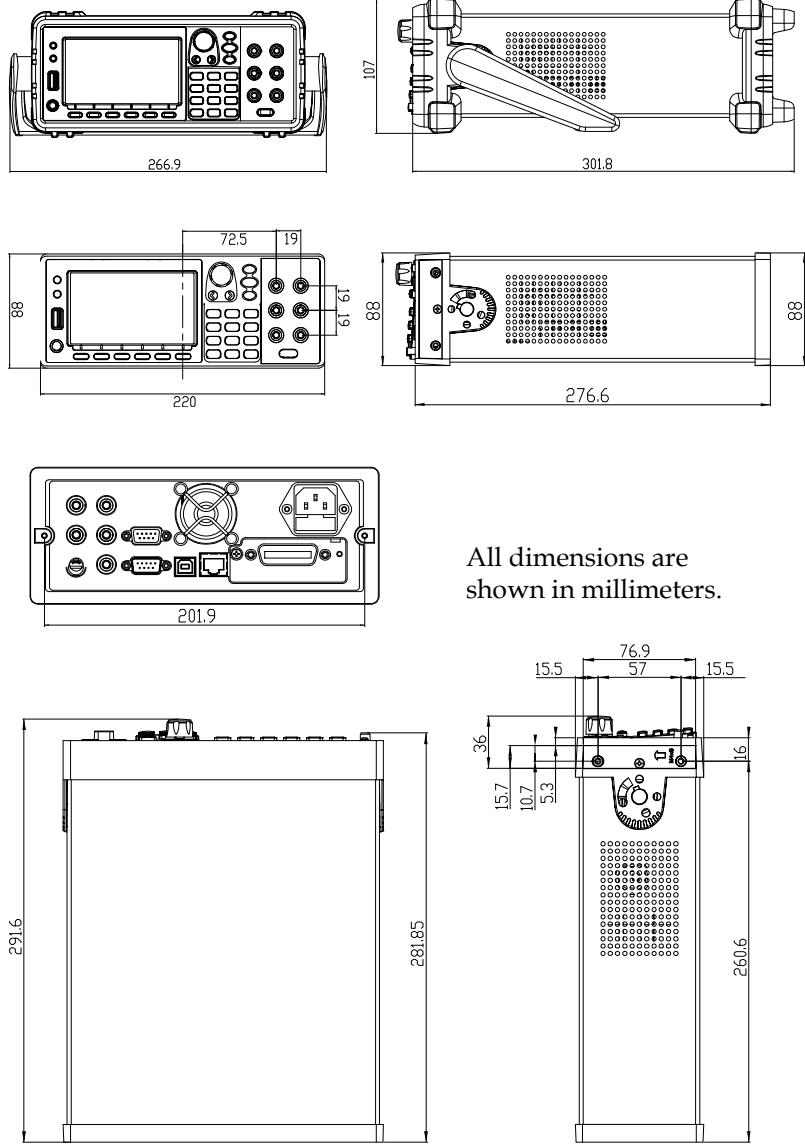

Declaration of Conformity

We Declare that the below mentioned product

Type of Product: **Digital Multimeter**

Model Number: **RSDM-9060 / RSDM-9061**

satisfies all the technical relations application to the product within the scope of council:

Directive: 2014/30/EU; 2014/35/EU; 2011/65/EU; 2012/19/EU

The above product is in conformity with the following standards or other normative documents:

① EMC

EN 61326-1: EN 61326-2-1: EN 61326-2-2:	Electrical equipment for measurement, control and laboratory use — EMC requirements (2013)
Conducted & Radiated Emission EN 55011: 2016+A1:2017 Class A	Electrical Fast Transients EN 61000-4-4: 2012
Current Harmonics EN 61000-3-2: 2014	Surge Immunity EN 61000-4-5: 2014
Voltage Fluctuations EN 61000-3-3: 2013	Conducted Susceptibility EN 61000-4-6: 2014
Electrostatic Discharge EN 61000-4-2: 2009	Power Frequency Magnetic Field EN 61000-4-8: 2010
Radiated Immunity EN 61000-4-3: 2006+A1: 2008+A2: 2010	Voltage Dip/ Interruption EN 61000-4-11: 2004

② Safety

Low Voltage Equipment Directive 2014/35/EU	
Safety Requirements	EN 61010-1: 2010 / EN 61010-2-030: 2010

Africa

RS Components SA
P.O. Box 12182, Vorna Valley 1686
20 Indianapolis Street, Kyalami Business Park
Kyalami, Midrand, South Africa

Asia

RS Components Ltd.
Suite 1601, Level 16, Tower 1, Kowloon Commerce Centre,
51 Kwai Cheong Road, Kwai Chung, Hong Kong

China

RS Components Ltd.
Suite 23 A-C, East Sea Business Centre Phase 2
NO. 618 Yan'an Eastern Road, Shanghai, 200001, China

Europe

RS Components Ltd.
PO Box 99, Corby, Northants NN17 9RS
United Kingdom

Japan

RS Components Ltd.
West Tower (12th Floor), Yokohama Business Park,
134 Godocho, Hodogaya, Yokohama,
Kanagawa 240-0005 Japan

North America

Allied Electronics
7151 Jack Newell Blvd. S. Fort Worth, Texas 76118
U.S.A.

South America

RS Componentes Electrónicos Limitada
Av. Pdte. Eduardo Frei M. 6001-71, Centro Empresas El Cortijo
Conchali, Santiago, Chile





AUDITED

In compliance with
industry standards



INSPECTED

For guaranteed quality
and performance



TESTED

By leading engineers