

Expert Power Control 8316 © 2021 GUDE Systems GmbH


2

Table of contents

1. Dev	vice Description	5
1.1	Security Advice	6
1.2	Content of Delivery	6
1.3	Description	6
1.4	Installation	7
1.5	Technical Specifications	8
1.5.1	Electrical Measurement	8
1.6	Sensor	9
2. Ope	erating	12
2.1	Operating the device directly	13
2.2	Control Panel	
2.3	Maintenance	
2.3.1	Maintenance Page	
2.3.2	Configuration Management	
2.3.3	Bootloader Activation	
3. Cor	nfiguration	22
3.1	Power Ports	
3.1.1	Watchdog	
3.2	Ethernet	
3.2.1	IP Address	
3.2.2	IP ACL	
3.2.3	HTTP	
3.3	Protocols	29
3.3.1	Console	30
3.3.2	Syslog	31
3.3.3	SNMP	32
3.3.4	Radius	34
3.3.5	Modbus TCP	35
3.3.6	MQTT	36
3.4	Clock	37
3.4.1	NTP	37
3.4.2	Timer	38
3.4.3	Timer Configuration	38
3.5	Sensors	45
3.5.1	Port Switching	46
3.6	E-Mail	47
3.7	Front Panel	48
4. Spe	ecifications	49

Table of contents

 4.1	Automated Access	50
4.2	Messages	50
4.3	IP ACL	52
4.4	IPv6	53
4.5	Radius	53
4.6	SNMP	54
4.6.1	Device MIB 8314	56
4.6.2	Device MIB 8316	58
4.7	SSL	60
4.8	Console	62
4.8.1	SSH	66
4.8.2	Console Cmd 8314	66
4.8.3	Console Cmd 8316	75
4.8.4	Serial Console	85
4.9	Modbus TCP	86
4.10	MQTT	91
4.10.1	Example HiveMQ	93
5. Sup	port	95
5.1	Data Security	96
5.2	Contact	96
5.3	Declaration of Conformity	97
5.4	FAQ	97
Index		99



1.1 Security Advice

- The device must be installed only by qualified personnel according to the following installation and operating instructions.
- The manufacturer does not accept responsibility in case of improper use of the device and particularly any use of equipment that may cause personal injury or material damage.
- The device contains no user-maintenable parts. All maintenance has to be performed by factory trained service personnel.
- This device contains potentially hazardous voltages and should not be opened or disassembled.
- The device can be connected only to 230V AC (50 Hz or 60 Hz) power supply sockets.
- The power cords, plugs and sockets have to be in good condition. Always connect the device to properly grounded power sockets.
- The device is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.
- Because of safety and approval issues it is not allowed to modify the device without our permission.
- The device is NOT a toy. It has to be used or stored out or range of children.
- Care about packaging material. Plastics has to be stored out of range of children. Please recycle the packaging materials.
- In case of further questions, about installation, operation or usage of the device, which are not clear after reading the manual, please do not hesitate to ask our support team.
- Please, never leave connected equipment unattended, that can cause damage.
- Connect only electrical devices that do not have limited on-time. I.e. in case of failure, all connected appliances have to cope with a continuous on-time without causing damage.

1.2 Content of Delivery

The package includes:

- Expert Power Control 8314 / 8316
- Quick Start Guide

1.3 Description

The **Expert Power Control 8314/8316** can switch 8 different load outputs and measure energy values on them. The device has the following features:

- (EPC 8314-1/8316-1) Switching of 8 load outputs (CEE 7/3 type F, max. 16A)
- (EPC 8314-2/8316-2) Switching of 8 load outputs (IEC C13, max. 10A)
- Energy Metering of the mains connection and measurement of voltage, current, active power, reactive power, apparent power, frequency, phase angle, power factor

- (only EPC 8316) Energy Metering and meters for each port of the 8 load outputs and measurement of voltage, current, active power, reactive power, apparent power, frequency, phase angle, power factor per output
- Connecting of two optional external sensors to determine the temperature and humidity, or a input switch
- One three-digit 7-segment LED display (for display of current or temperature / humidity of the external sensors)
- · Console commands via SSH and Telnet
- · SSH support with public key and passwords
- Individually parameterisable switch-on delay of all outputs
- Programmable timetables and turn-on/turn-off sequences
- Individually adjustable watchdog for each output, which switches depending on accessibility (network ping)
- Dual TCP/IP stack with IPv4 and IPv6 support (IPv6-ready)
- Control and monitoring of the device via Ethernet with an integrated web server with SSL encryption (TLS 1.1, 1.2, 1.3)
- Control and configuration with CGI parameters and JSON messages via HTTP (REST API)
- SNMP (v1, v2c and v3, traps)
- MQTT 3.1.1 Support
- Modbus TCP support
- Radius support
- Generation of messages (e-mail, syslog and SNMP traps) and switching of relays depending on sensor measurement limits
- Firmware update during operation via Ethernet possible
- Encrypted e-mails (SSL, STARTTLS)
- Access protection through IP access control
- Low own consumption
- Developed and produced in Germany

1.4 Installation



- 1. External sensor connector 1 (RJ45)
- 2. External sensor connector 2 (RJ45)
- 3. Ethernet connector (RJ45)
- 4. Select button
- 5. Ok button
- 6. Status LED
- 7. RS232 connector
- 8. 8 plain text displays (on/off) for the state of the outputs
- 9. Current power consumption (7-segment LED)



1. - 8. Load outputs (Expert Power Control 8314-2/8316-2, see Technical Specifications 8 for other models)

Start-up the device

- Connect the power cord (IEC C20, max. 16A) to the mains supply.
- Plug the network cable into the Ethernet socket (RJ45).
- If required, setup a serial connection to the RS232 port.
- Insert optional external sensors.
- Connect the consumers with the load outputs.

1.5 Technical Specifications

(EPC 8314-1/8316-1) (EPC 8314-2/8316-2)	1 x Ethernet port (RJ45) 1 x Serial connector (D-SUB, RS232) 1 x Mains cable (IEC C20, max.16A) 2 x RJ45 for external sensor 8 x Load outputs (CEE 7/3 type F, max. 16A) 8 x Load outputs (IEC C13, max. 10A)
Network connectivity	10/100 MBit/s 10baseT Ethernet
Power Supply	internal power supply (90-265V AC / -15% / +10%)
EnvironmentOperating temperatureStorage temperatureHumidity	0°C - 50°C -15°C - 60°C 10% - 85%
Case	powder coated, galvanized steel sheet
Measurements	690 mm x 70 mm x 60 mm (L x H x W)
Weight	approx. 2.9 kg

1.5.1 Electrical Measurement

typical fault tolerances for Ta=25°C, I=1Arms...16Arms, Un=90Vrms...265Vrms

Electrical Measurement Specification						
Category	Range	Unit	Resolu- tion	Inaccuracy (typical)		
Voltage	90-265	V	0.01	< 1%		
Current	0 - 16	Α	0.001	< 1.5%		
Frequency	45-65	Hz	0.01	< 0.03%		
Phase	-180 - +180	0	0.1	< 1%		
Active power	0 - 4000	W	1	< 1.5%		
Reactive power	0 - 4000	Var	1	< 1.5%		
Apparent power	0 - 4000	VA	1	< 1.5%		
Power factor	0 - 1	-	0.01	< 3%		
	Er	nergy Co	unter			
Active Energy (total)	9.999.999,999	kWh	0.001	< 1.5%		
Active Energy (temporary)	9.999.999,999	kWh	0.001	< 1.5%		

1.6 Sensor

Two external sensors can be connected to the **Expert Power Control 8314/8316**. The following sensors are currently available



Humidity/Temperature Sensor 7102 (End-of-Life)				
Cable length	≈ 2m			
Connector	RJ45			
temperature range	-20°C to +80°C, ±0,5°C (maximum) and ±0,3°C (typical)			
air humidity range (non-condensing))	0-100%, ±3% (maximum) and ±2% (typical)			

9



7101 7104 - 7106

Product Name	7101	7104-1	7105-1	7106-1
Calibrated Sensor	-	7104-2	7105-2	7106-2
Cable length	≈ 2m	≈ 2m	≈ 2m	≈ 2m
Connector	RJ45	RJ45	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)			
air humidity range (non-condensing)	-	-	0-100%, ±3% (maximum) and ±2% (typical)	0-100%, ±3% (maximum) and ±2% (typical)
air pressure range (full)	-	-	-	± 1 hPa (typical) at 300 1100 hPa, 0 +40 °C
air pressure range (ext)	-	-	-	± 1.7 hPa (typical) at 300 1100 hPa, -20 0 °C
Protection	IP68	-	-	-



7201, 7202

Product Name	7201	7202
Cable length	-	-
Connector	RJ45	RJ45
temperature range	-20°C to +80°C at ±2°C (max- imum) and ±1°C (typical)	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)
air humidity range (non-condensing)	-	0-100%, ±3% (maximum) and ±2% (typical)


The sensors are automatically detected after connect. This is indicated by the green LED on the sensor port that is lit permanently. The sensor values are displayed at the "Control Panel" web page:



A click on the link in the "Name" column opens the display of the Min and Max values. The values in a column can be reset using the "Reset" button. The "Reset" button in the name column deletes all stored Min and Max values.

ld	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	7106	22.5	34.4	6.1	16.5	1013.8
	30m min	0.0	34.1	5.9	16.4	125.0
	30m max	22.6	34.7	6.2	300.0	1013.8
	Reset	Reset	Reset	Reset	Reset	Reset

 Expert Power Control 8316 © 2021 GUDE Systems GmbH



2 Operating

2.1 Operating the device directly

Port Switching

The current status of the output is indicated by the color of the LED. Red indicates that the output is off, green shows that the output is on. On the device are the buttons "select" and "ok". If you press "select", you can select the following modes one by one:

- 1. At first, all LEDs flash green. If you press the "Ok" button for 2.5 seconds, all ports are switched on. (If all ports are switched on, this is skipped).
- 2. After that, all LEDs flash red. If you hold the "Ok" button for 2.5 seconds, all ports will be switched off. (If all ports are switched off, this will be skipped).
- 3. If you press "Select" again, the LED for the first output starts blinking, i.e. the output is selected. Press "Select" again to select the next output. If you keep the "Ok" button pressed for one second, the state of the selected output will be toggled.

You can switch off in the front panel 48 configuration that all ports with the modes 1 and 2 can be switched by pushbutton.

Display Information

If no port is selected manually, repeatedly pressing the "ok" button will show the IP-address and the values of the external sensors on the display.

Status-LED

The Status LED shows the different states of the device:

- red: The device is not connected to the Ethernet.
- orange: The device is connected to the Ethernet and waits for data from the DHCP server.
- green: The device is connected to the Ethernet and the TCP/IP settings are allocated.
- periodic blinking: The device is in Bootloader mode.


2.2 Control Panel

13

Expert Power Control 8316

Access the web interface: http://"IP-address" and log-in.

Operating

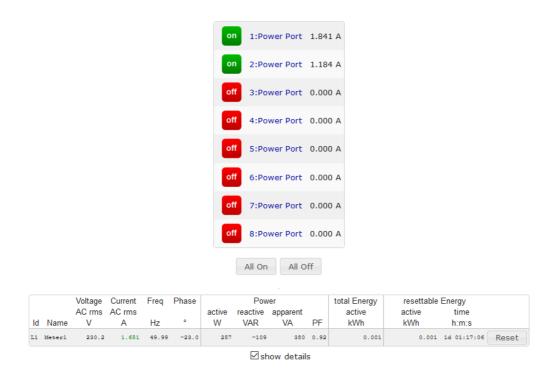

The web page provides an overview of the switching state, energy measurement values, as well as the external sensors, provided that they are connected. When a single port is clicked a panel with buttons to control a single port appear:



The Port icon is green when the relay is closed, or red in the open state. An additional small clock icon indicates that a timer is active. Timer can be activated by delay, reset or batch mode.

 


An activated Watchdog is represented by an eye icon. An "X" means, that the address that should be observed, could not be resolved. Two circular arrows show a booting status.



In addition to the panel, the **Expert Power Control 8316** shows the measured values of the selected port:

Expert Power Control 8316 © 2021 GUDE Systems GmbH



The ports can be switched manually with the "On" and "Off" buttons. If the port is turned on, it can be turned off by pressing the "Reset" button, until after a delay it turns itself on again. The delay time is determined by the parameter Reset Duration, which is described in the chapter "Configuration - Power Ports 23". The "Close" button dissolves the panel again.

Batchmode

Each individual port can be set for a selectable period of time to the state "switch on" or "switch off". After the selected time they are automatically switched to the second preselected state.



Optionally the device can be switched via a Perl script or external tools like wget. More information is available on our support wiki at www.gude.info/wiki.

2.3 Maintenance

The actual device generation with IPv6 and SSL allows all maintenance functions in the web interface to be carried out on the Maintenance Page 17.

Maintenance in the web interface

The following functions are available from the maintenance web page:

- Firmware Update
- Change the SSL certificate
- Load and save the configuration
- Restart the device
- Factory Reset
- Jump into the Bootloader
- · Delete the DNS cache

Upload Firmware, Certificate or Configuration

On the Maintenance Page 17, select the required file with "Browse .." in the sections "Firmware Update", "SSL Certificate Upload" or "Config Import File Upload" and press "Upload". The file is now transferred to the update area of the device and the contents are checked. Only now, pressing the "Apply" button will permanently update the data,

or abort with "Cancel".

Only one upload function can be initiated with a reboot, eg. you cannot transmit firmware and configuration at the same time.

If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of Javascript with an outdated browser cache. If a Ctrl-F5 does not help, it is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page 17).


Actions in Bootloader mode

If the web interface of the device is no longer accessible, the device can be put into Bootloader mode (see chapter Bootloader activation $\lceil 20 \rceil$). The following functions can be executed using the GBL_Conf.exe application:

- Set IPv4 address, net-mask and gateway
- Turn HTTP password on and off
- Turn IP-ACL on and off
- · Factory Reset
- Jump into the bootloader (can be switched on and off)
- Restart the device

For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

The GBL_Conf.exe program is available free of charge on our website www.gude.info and can also be found on the enclosed CD-ROM.

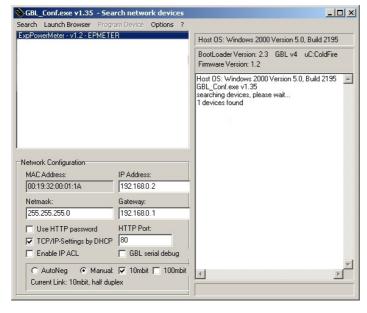

Interface GBL_Conf

Operating

To check the network settings with GBL_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All Devices" in the "Search" menu of GBL_Conf.exe.

The new network configuration is now displayed.

Factory Reset

The device can be reset to the factory default via the web interface from the Maintenance Page 17 or from the Bootloader mode (see chapter Bootloader activation 20). All TCP/IP settings are reset in this operation.

If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

2.3.1 Maintenance Page

This section provides access to important functions such as Firmware Update or Restart Device. It is advisable to set an HTTP password for this reason.

Firmware Update
Choose File Upload
SSL Certificate Upload
Choose File Upload
Config Import File Upload
Choose File Upload
Config File Export
Restart / Fab-Settings
Restart Device Restore Fab Settings and Restart Device
Enter Bootloader Mode Flush DNS Cache
Service Data
Config/Status View: status.html Config/Status Download: export.json

Firmware Update: Start a firmware update.

SSL Certificate Upload: Saves your own SSL certificate. See chapter "SSL 61" for the generation of a certificate in the right format.

<u>Config Import File Upload</u>: Loads a new configuration from a text file. To apply the new configuration, a "Restart Device" must be executed after the "Upload".

Config File Export: Saves the current configuration in a text file.

Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed).

Restart Device: Restarts the device without changing the status of the relays.

Some functions such as a firmware update or changing of the IP-address and HTTP settings require a restart of the device. A jump to the boot loader or a restart of the device lead by no means to a change of the relay states.

Restore Fab Settings and Restart Device: Performs a restart and resets the device to factory default 21.

<u>Enter Bootloader Mode</u>: Jumps into bootloader mode, where additional settings can be made with GBL Conf.exe.

 
<u>Flush DNS Cache</u>: All entries in the DNS cache are discarded and address resolutions are requested again.

Config/Status View: status.html: Displays the status.html page with the JSON data.

Config/Status Download: <u>export.json</u>: Direct file download of JSON data from status.hml.

2.3.2 Configuration Management

The device configuration can be saved and restored in the maintenance area 17.



The "Config File Export" function can be used to save the current configuration as a text file. The syntax used in the configuration file corresponds to the commands of the Telnet console. If the configuration of a device is to be restored from a text file, load the file with "Upload" and restart the device with "Restart Device".

Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed). For the same reasons, it is advisable to carefully handle the generated configuration files when archiving.

Editing the configuration file

It is possible to customize a saved configuration file with a text editor for your own needs. For example, one scenario would be to use a script language to automate the creation of many customized versions of a configuration, then equip a large number of devices with an individualized configuration. Also Upload and restart with CGI commands can be done in scripting languages. With use of the comment sign "#" you can quickly hide single commands or add personal notes.

If you modify a configuration file manually, it is not always clear which limits are allowed for parameters. After uploading and restarting, commands with invalid parameters are ignored. Therefore, the generated configuration includes comments describing the boundaries of the parameters. Where "range:" refers to a numeric value, and "len:" to a text parameter. E.g:

```
email auth set 0 #range: 0..2
email user set "" #len: 0..100
```

The command "system fabsettings" from the beginning of a generated configuration file brings the device into the factory state, and then executes the individual commands that modify the configuration state. It may be desirable to make the changes relative to the current configuration, and not out of the factory state. Then the "system fabsettings" should be removed.

No output of default values

The configuration file contains (with exceptions) only values which differ from the default. The command "system fabsettings" (go to the factory state) from the beginning of a generated configuration file should not be removed, otherwise the device can get incompletely configured.

Configuration via Telnet

The configuration files can in principle also be transferred in a Telnet session, but then the settings are changed during operation, and not completely when restarting, as it would have been the case with an upload. It can happen that events are triggered at the same time as the device is configured. One should therefore:

- a) disable the function
- b) completely parametrize
- c) reactivate the function

An example:

```
email enabled set 0
email sender set "" #len: 0..100
email recipient set "" #len: 0..100
email server set "" #len: 0..100
email port set 25
email security set 0 #range: 0..2
email auth set 0 #range: 0..2
email user set "" #len: 0..100
email passwd hash set "" #len: 0..100
email enabled set 1 #range: 0..1
```

2.3.3 Bootloader Activation

The configuration of the device from the application "GBL_Conf.exe" is only possible, if the device is in Bootloader Mode.

Activation of the Bootloader Mode

- 1) via push button:
- Hold both buttons for 3 seconds
- 2) or
- Remove the power supply
- Hold down the "Select" button. If the push button is recessed, use a pin or paper clip
- · Connect the operating voltage
- 3) by Software: (only if "Enable FW to BL" was previously activated in the "GBL_Conf.exe" application)
- Start the "GBL_Conf.exe" program
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"
- 4) via web interface:

Press "Enter Bootloader Mode" on the maintenance 17 web page.

Whether the device is in Bootloader mode, is indicated by the flashing of the status LED, or it is shown in "GBL_Conf.exe" application after a renewed device search (appendix "BOOT-LDR" after the device name). In Bootloader mode the program

Operating

"GBL_Conf.exe" can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

Abandonment of the Bootloader Mode

- 1) via push button:
- Hold both buttons for 3 seconds (only if the device has 2 buttons)
- 2) or
- Remove and connect the power supply without operating a button
- 3) by Software:
- Start the "GBL_Conf.exe" application
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

 
For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

Factory Reset

If the device is in bootloader mode, it can always be put back to its factory default. All TCP/IP settings are reset in this operation.

If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

- 1) via push button:
- Activate the Bootloader Mode of the device
- Hold down the button (or the "Select" button for devices with 2 buttons) for 6 seconds. If the push button is recessed, use a pin or paper clip
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)
- 2) by Software:
- · Activate the Bootloader Mode of the device
- "Start the GBL Conf.exe" program
- In menu "Program Device" activate the item "Reset to Fab Settings"
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)



TCP/IP configuration by DHCP

After switching on the device is scanning on the Ethernet for a DHCP server and requests an unused IP address. Check the IP address that has been assigned and adjust if necessary, that the same IP address is used at each restart. To turn off DHCP use the software GBL Conf.exe or use the configuration via the web interface.

To check the network settings with GBL_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

3.1 Power Ports

Power Ports		
Choose Power Port to configure:	1: Power Port	~
Label:	Power Port	
Initialization status (coldstart):	○on ○off ●rem	nember last state
Initialization delay:	0	s
Repower delay:	0	s
Reset duration:	10	s
Enable watchdog:	○yes ® no	
	Apply	

<u>Choose Power Port to configure</u>: This field is used to select the power ports to be configured.

<u>Label</u>: You can assign a name up to 15 characters for each of the power ports. Using the name, an identification of the the device connected to the port can be facilitated.

Start-up Monitoring

It is important, that if necessary the condition of the power ports can be restored after a power failure. Therefore each port can be configured with <u>Initialization status</u> to a specific start-up state. This start-up sequence can be carried out delayed by the parameter <u>Initialization Delay</u>. There is in any case a minimum one-second delay between switching of ports.

<u>Initialization status(coldstart)</u>: This is the port state (on, off, remember last state) the port should be set when the device is turned on. The setting "remember last state" saves the last manually set state of the power port in the EEPROM.

<u>Initialization delay</u>: Here can be configured how long the port should wait to switch to its defined state after the device is turned on. The delay may last up to 8191 seconds. This corresponds to a period of approx. two hours and 20 minutes. A value of zero means that the initialization is off.

Repower delay: When this feature is enabled (value greater than 0), the power port will switch itself on again a specified time after it has been disabled. Unlike the "Reset" button this function applies to all switch actions, including SNMP, or an optional serial interface.

<u>Reset Duration</u>: When the "*Reset*" button is triggered, the device turns the power port off, waits for the time entered here (in seconds) and turns the power port on.

3.1.1 Watchdog

The watchdog feature enables to monitor various remote devices. Therefore either ICMP pings or TCP pings are sent to the device to be monitored. If these pings are not answered within a certain time (both the time and the number of attempts can be set), the port is reset. This allows e.g. to automatically restart not responding server or NAS systems. The mode IP master-slave port allows you to switch a port depending on the availability of a remote device.

When a watchdog is activated it presents various information in the Control Panel. The information is color-coded.

- Green text: The watchdog is active and regularly receives ping replies.
- Orange text: The watchdog is currently enabled, and waits for the first Ping response.
- Red text: The watchdog is active and receives no ping replies anymore from the configured IP address.

After the watchdog has been enabled, the display remains orange until the watchdog receives a ping response for the first time. Only then the watchdog is activated. Even after triggering a watchdog and a subsequent power port reset, the display will remain orange until the device is rebooted and responds again to ping requests. This will prevent a premature watchdog reset of the port, e.g. when a server needs a long time for a file check.

You can monitor devices on your own network, as well as devices on an external network, e.g. the operating status of a router.

Enable watchdog:	● yes ○ no
Ping type:	● ICMP ○ TCP
Hostname:	
Ping interval:	10 s
Ping retries:	6
Watchdog mode:	Reset port when host down:
	 Infinite wait for booting host after reset
	Repeat reset on booting host after 10 ping timeouts
	O Switch off once when host down
	O IP Master-Slave port:
	Ohost comes up -> switch on, host goes down -> switch off
	Ohost goes down -> switch on, host comes up -> switch off
	$\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $

Enable watchdog: Enables the watchdog function for this Power Port.

<u>Watchdog type</u>: Here you can choose between the monitoring by ICMP pings or TCP pings.

- ICMP Pings: The classic ping (ICMP echo request). It can be used to check the accessibility of network devices (for example, a server).
- TCP Pings: With TCP pings, you can check if a TCP port on the target device would accept a TCP connect. Therefore a non-blocked TCP port should be selected. A good choice would be port 80 for http or port 25 for SMTP.

<u>TCP port</u>: Enter the TCP port to be monitored. When using ICMP pings this is not needed.

Hostname: The name or IP address of the monitored network device.

<u>Ping interval</u>: Select the frequency (in seconds) at which the ping packet is sent to each network device to check its operating status.

<u>Ping retries</u>: After this number of consecutive unanswered ping requests the device is considered inactive.

<u>Watchdog mode</u>: When <u>Reset port when host down</u> is enabled, the Power Port is turned off and switched back on after the time set in <u>Reset Duration</u>. In mode <u>Switch</u> off once when host down the Power Port remains disabled.

At the default setting (Infinite wait for booting host after reset) the watchdog monitors the connected device. When there is no longer a reply after a set time, the watchdog performs the specified action, usually a reset of the Power Port. Now the watchdog waits until the monitored device reports again on the network. This may take several minutes depending on the boot duration of the device. Only when the device is accessible from network again, the watchdog is re-armed. If the option Repeat reset on booting host after x ping timeout is enabled, this mechanism is bypassed. Now the watchdog is re-activated after N Ping intervals (input field ping timeouts).

When enabling the <u>IP master-slave mode</u>, the port is switched depending on the availability of a remote device. Depending on the configuration, the port is switched on when the terminal is reachable, or vice versa.

The option Repeat reset on booting host after x ping timeout has the following pitfall: If a server, that is connected to the monitored Port is in need for a long boot process (e.g. it is doing a file system check), the server would probably exceed the tripping time of the watchdog. The server would be switched off and on again, and the file system check is restarted. This would be repeated endlessly.

count PING requests as unreplied when ethernet link down: If the Ethernet link of the device is not active, watchdog monitoring is not possible and the watchdog function is not activated. If this option is activated, a watchdog is also triggered if the Ethernet link is down.

3.2 Ethernet

25

3.2.1 IP Address

<u>Hostname</u>: Here you can enter a name with up to 63 characters. This name will be used for registration on the DHCP server.

Special characters and umlauts can cause problems in the network.

IPv4 Address: The IP address of the device.

IPv4 Netmask: The network mask used in the network.

IPv4 Gateway address: The IP address of the gateway.

IPv4 DNS address: The IP address of the DNS server.

<u>Use IPv4 DHCP</u>: Select "yes" if the TCP/IP settings should be obtained directly from the DHCP server: When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network. If not, the last used TCP/IP setting will be used further.

Use IPv6 Protocol: Activates IPv6 usage.

<u>Use IPv6 Router Advertisement</u>: The Router Advertisement communicates with the router to make global IPv6 addresses available.

<u>Use DHCP v6</u>: Requests from an existing DHCPv6 server addresses of the configured DNS server.

<u>Use manual IPv6 address settings</u>: Activates the entry of manual IPv6 addresses.

 $\underline{\mathsf{IPv6}}$ status: Displays the IPv6 addresses over which the device can be accessed, and additionally DNS and router addresses.

IPv6 status	Current IPv6 status:	IPv6 Addr: fe80::219:32ff:fe00:996d 2007:7dd0:ffcl:l:219:32ff:fe00:996d IPv6 DNS Server: 2007:7dd0:ffcl:1:20c:29ff:feaf:93c	
		IPv6 Router: fe80::20c:29ff:feaf:93c	

For IP changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

Manual IPv6 Configuration



The input fields for the manual setting of IPv6 addresses allow you to configure the prefix of four additional IPv6 device addresses, and to set two DNS addresses, and a gateway.

3.2.2 IP ACL



Expert Power Control 8316 © 2021 GUDE Systems GmbH


Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

<u>Enable IP filter</u>: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

Please note that when IP access control is enabled HTTP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.

If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

3.2.3 HTTP

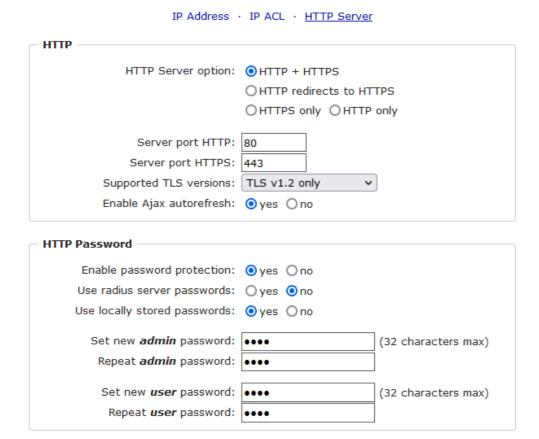

<u>HTTP Server option</u>: Selects whether access is possible only with HTTP, HTTPS, or both.

<u>Server port HTTP</u>: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

<u>Server port HTTPS</u>; The port number to connect the web server via the SSL (TLS) protocol.

Supported TLS versions: Limits the supported TLS versions.

<u>Enable Ajax autorefresh</u>: If this is activated, the information of the status page is automatically updated via http request (AJAX).

For some HTTP configuration changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

<u>Enable password protection</u>: Password access protection can be activated. If the admin password is assigned, you can only log in by entering this password to change settings. Users can log in by entering the user password in order to query the status information and initiate switching operations.

<u>Use radius server passwords</u>: Username and password are validated by a Radius Sever.

<u>Use locally stored passwords</u>: Username and password are stored locally. In this case, an admin password and a user password must be assigned. The password can have a maximum of 31 characters. The name "admin" and "user" are provided for the user name in the password entry mask of the browser. In factory settings, the password for the admin is set to "admin" or "user" for the user password.

If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the SHA2-256 hash. If you want to change a password, the complete password must always be re-entered.

If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL_Conf.exe.

3.3 Protocols

29

3.3.1 Console

Console · Syslog · SNMP · Radius · Modbus · MQTT

TCP/IP Console	
Enable Telnet:	⊚ yes ○ no
Telnet TCP port:	
Raw mode:	Oyes ono
Active negotiation:	Oyes ono
Activate echo:	Oyes ono
Push messages:	Oyes ono
Delay after 3 failed logins:	O yes o no
	⊚ yes ○ no
SSH TCP port:	
Activate echo:	_ , _
Push messages:	○ yes
Require user login (Telnet/SSH):	oves Ono
Use radius server passwords:	
Use locally stored passwords:	
, Username:	
Set new password:	
Repeat password:	` '
Upload new SSH public key:	
	li.

Telnet

Enable Telnet: Enables the Telnet console.

<u>Telnet TCP port</u>: Telnet sessions are accepted on this port.

Raw mode: The VT100 editing and the IAC protocol are disabled.

Active negotiation: The IAC negotiation is initiated by the server.

Activate echo: The Telnet echo setting if not changed by IAC.

<u>Push messages</u>: Sends push messages via SSH.

<u>Delay after 3 failed logins</u>: After 3 wrong entries of username or password, the next login attempt is delayed.

SSH

Enable SSH: Enables the SSH protocol.

Expert Power Control 8316 © 2021 GUDE Systems GmbH

SSH TCP port: Port on which SSH sessions are accepted.

Activate echo: The echo setting for SSH.

<u>Push messages</u>: Sends push messages via SSH.

SSH and Telnet

Require user login: Username and password are required.

<u>Use radius server passwords</u>: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally.

<u>Upload SSH public key</u>: Input field for public key.

<u>Delete public key</u>: Setting this at Apply deletes the public key.



Enable serial console: Enables the serial console.

Raw mode: The VT100 editing is disabled.

Activate echo: The echo setting.

<u>Enable binary KVM protocol</u>: Additionally activates the KVM protocol.

Enable UTF8 support: Enables character encoding in UTF8.

<u>Push messages</u>: Sends push messages via serial console.

Require user login: Username and password are required.

<u>Delay after 3 failed logins</u>: After 3 wrong entries of username or password, the next login attempt is delayed.

<u>Use radius server passwords</u>: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally.

3.3.2 Syslog



31

Enable Syslog: Enables the usage of Syslog Messages.

 $\underline{\text{Syslog Server}}\text{: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.}$

3.3.3 **SNMP**

Console · Syslog	· <u>SNMP</u> · Radius · Modbu	s · MQTT
SNMP		
Enable SNMP options:	✓ SNMP get ✓ SNMP set	
SNMP UDP port:	161	
sysContact:	sysContact	
sysName:	-	
sysLocation:	sysLocation	
SNMP v2		
Enable SNMP v2:	⊙ yes ○ no	_
SNMP v2 public Community:	public	(16 char. max)
SNMP v2 private Community:	private	(16 char. max)
CMMP v2		
SNMP v3		
Enable SNMP v3:	⊙ yes ○ no	_
SNMP v3 Username:	standard	(32 char. max)
SNMP v3 Authorization Algorithm:	SHA2-256 V	
Set new Authorization password:	(8	char. min, 32 char. max)
Repeat <i>Authorization</i> password:		
SNMP v3 Privacy Algorithm:	AES-128 V	
Set new Privacy password:	(8	char. min, 32 char. max)
Repeat Privacy password:		
SNMP Traps		
Send SNMP Traps:	SNMP v3 Traps 🔻	
SNMP trap receiver 1 :		- +

SNMP-get: Enables the acceptance of SNMP-GET commands.

<u>SNMP-set</u>: Allows the reception of SNMP-SET commands.

SNMP UDP Port: Sets the UDP port where SNMP messages are received.

sysContact: Value of RFC 1213 sysContact.

sysName: Value of RFC 1213 sysName.

sysLocation: Value of RFC 1213 sysLocation.

Enable SNMP v2: Activates SNMP v2.

Because of security issues, it is advisable to use only SNMP v3, and to disable SNMP v2. Accesses to SNMP v2 are always insecure.

Community public: The community password for SNMP GET requests.

<u>Community private</u>: The community password for SNMP SET requests.

Enable SNMP v3: Activates SNMP v3.

SNMP v3 Username: The SNMP v3 User Name.

<u>SNMP v3 Authorization Algorithm</u>: The selected Authentication Algorithm.

SNMP v3 Privacy Algorithm: SNMP v3 Encryption Algorithm..

If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the key formed using the Authorization Algorithm. If you want to change a password, the complete password must always be re-entered.

The calculation of the password hashes varies with the selected algorithms. If the Authentication or Privacy algorithms are changed, the passwords must be re-entered in the configuration dialog. "SHA-384" and "SHA512" are calculated purely in software. If "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

<u>Send SNMP traps</u>: Here you can specify whether, and in what format the device should send SNMP traps.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

MIB table: The download link to the text file with the MIB table for the device.

More information about SNMP settings are available from our support or can be found on the Internet at www.gude.info/wiki.

33

3.3.4 Radius

Console \cdot Syslog \cdot SNMP \cdot Radius \cdot Modbus \cdot MQTT

⊙ yes ○ no
● PAP ○ CHAP
⊙ yes ○ no
1800
••••
••••
5
3
⊚ yes ○ no
••••
••••
5
3

Enable Radius Client: Enables validation over Radius.

Use CHAP: Use CHAP password encoding.

<u>Use Message Authentication</u>: Adds the "Message Authentication" attribute to the Authentication Request.

Primary Server: Name or IP address of the Primary Radius server.

<u>Shared secret</u>: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

<u>Timeout</u>: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Use Backup Server: Activates a Radius Backup server.

Backup Server: Name or IP address of the Radius Backup server.

<u>Shared secret</u>: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

<u>Timeout</u>: How long (in seconds) will be waited for a response from an Authentication Request.

<u>Retries</u>: How often an authentication request is repeated after a timeout.


Test Radius Server	
Test Username:	
Test Password:	
Test Radius Server	

<u>Test Username</u>: Username input field for Radius test.

<u>Test Password</u>: Password input field for Radius test.

The "Test Radius Server" function allows you to check whether a combination of Username and Password is accepted by the configured Radius Servers.

3.3.5 Modbus TCP

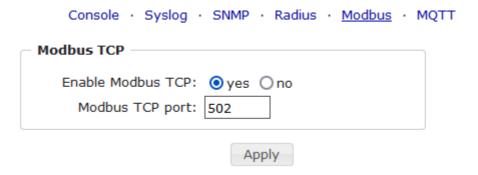

Enable Modbus TCP: Enables Modbus TCP support.

Modus TCP port: The TCP/IP port number for Modbus TCP.

3.3.6 MQTT

мотт	
Enable MQTT:	● yes ○ no
Broker:	6137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud
TLS:	⊚ yes ○ no
TCP Port:	8883 (Default: 8883)
Username:	epc-user
Set new password:	••••
Repeat password:	••••
Client ID:	client_1641
Quality of Service (QoS):	At most once (QoS 0) V
Keep-alive ping interval:	300 s (minimum 10s)
Topic Prefix:	de/gudesystems/epc/[mac]
	de/gudesystems/epc/00:19:32:01:16:41
Permit CLI commands:	○ yes
Publish device data summary interval:	30 s (0=disabled)

Enable MQTT: Enables MQTT support.

Broker: DNS or IP address of the MQTT broker.

TLS: Turns on TLS encryption.

Mode TCP port: The TCP/IP port number of the broker.

<u>Username</u>: The MQTT username.

password: The password for the username.

Client ID: The MQTT client ID.

The client IDs of a user must be different! If two clients of a user have the same name, the connection of one client is normally terminated.

Quality of Service (QoS): Sets the QoS value (0 or 1) of the MQTT publishes.

<u>Keep-alive ping interval</u>: This defines the time interval in which the client sends an MQTT ping.

<u>Topic prefix</u>: Defines the beginning of the topic with which all messages are sent. The strings **[mac]** and **[host]** symbolize the MAC address or the hostname of the device.

Permit CLI commands: Enables the execution of console commands.

<u>Publish device data summary</u> interval: Time interval in which messages with the global status of the device are sent.

Expert Power Control 8316 © 2021 GUDE Systems GmbH




MQTT Logs: Outputs individual log messages about the connection setup.

MQTT Broker Status: Time information about connection duration, the last publish and the last keep-alive.

3.4 Clock

3.4.1 NTP

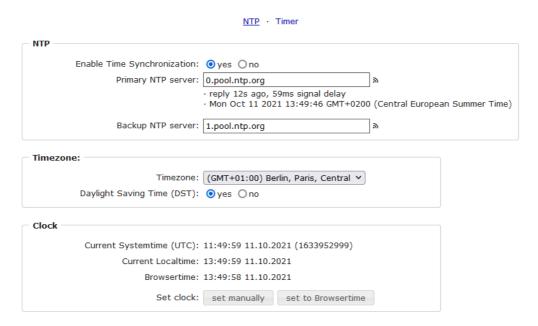

Enable Time Synchronization: Enables the NTP protocol.

Primary NTP server: IP address of the first NTP server.

<u>Backup NTP server</u>: IP address of the second NTP server. Used when the first NTP server does not respond.

<u>Timezone</u>: The set time zone for the local time.

<u>Daylight Saving Time</u>: If enabled, the local time is converted to Central European Sum-

37


mer Time.

set manually: The user can set a time manually.

set to Browsertime: Sets the time corresponding to web browser.

If Time synchronization is enabled, a manual time will be overwritten at the next NTP synchronization.

3.4.2 Timer

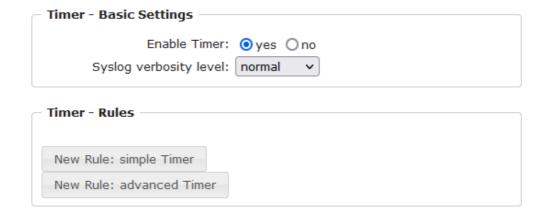

Enable Timer: nables or disables all timers globally.

Syslog verbosity level: Sets the verbosity level for timer syslog output.

New Rule simple Timer: Shows a dialog for a simple timer rule.


New Rule advanced Timer: Brings up the dialog for advanced timer settings.

3.4.3 Timer Configuration

In the timer configuration you have three options: Create a simple timer, add a complex timer, or change an existing configuration.


Timer rules are only executed if the device has a valid time. See configuration NTP 37.

This instruction chapter applies to all Gude devices. For devices without switchable ports you can only create a complex timer. For an action there is only the register "Action CLI" available, and not the register "Action PortSwitch".

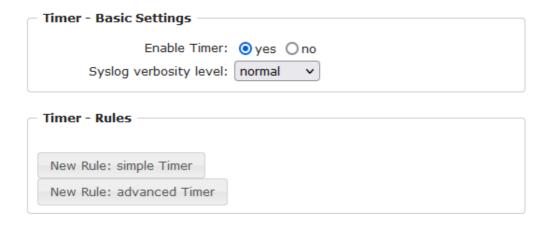


Creating a simple timer

If you activate "New Rule: simple Timer" the following dialog is displayed:

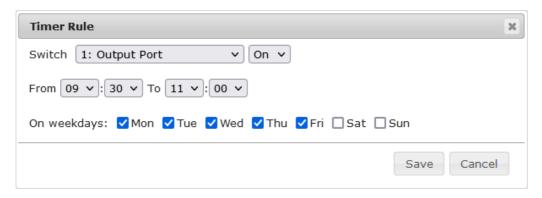

You set here which port should be switched for which time period, and on which days of the week the rule is active. In this example the period 9:00 to 17:00 is changed to 9:30 to 11:00 compared to the default input mask. Also, this rule should not be applied on Saturday and Sunday. The rule we have now says that every day, except Saturday and Sunday, port 1 will be switched on at 9:30 and switched off after 1.5 hours. Clicking on "Save" saves this rule.

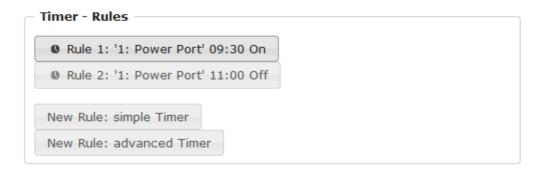


We have now created 2 rules, one for when the port is turned on and the second for when it is turned off.

Creating a complex timer


If you create a complex timer or change an existing timer, you will always see an extended dialog:

39

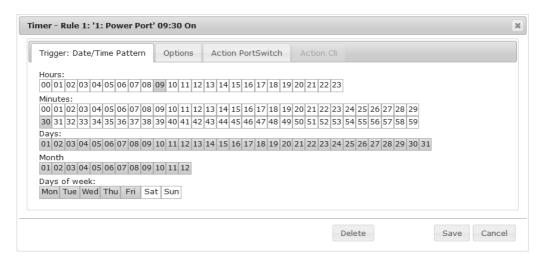


You can see here the extended representation of the first rule of the simple timer from the previous example. The action is started every day of every month at 9:30. The weekdays Saturday and Sunday are excluded. An existing rule can be removed with the "Delete" button.

If a rule is deleted, the following rules move up. The numbering of the following rules also changes by one. This also applies to the index in the console commands.

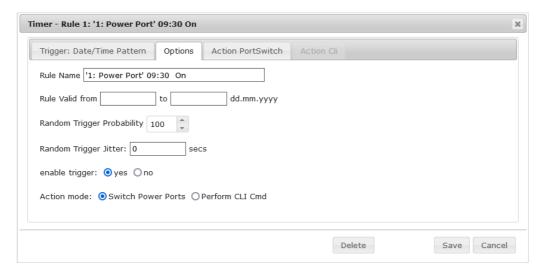

A simple timer is "enabled" directly, a new complex timer has to be "enabled trigger" manually. You can set a probability and a jitter for the timer rules. Here the rule is executed with 100% probability. A jitter of 0 means that the action takes place exactly at the programmed time. As normal action mode ports are switched, alternatively a console command (CLI Cmd) can be executed.

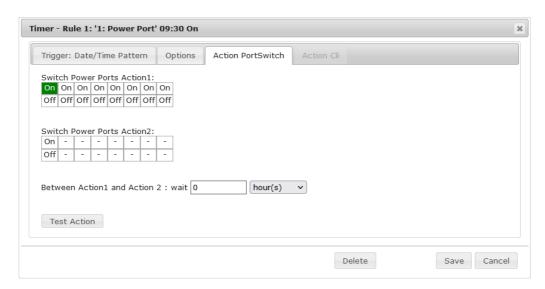


The switching function can be set in more detail on the "Action PortSwitch" register. Port 1 is switched on. You could extend the rule and switch more ports on or off. Additionally you can set a time for a batchmode in the field after "Between Action1 and Action 2: wait", which starts "Action 2" after expired time. However, the batch mode has the disadvantage that it is not automatically restarted when the device is rebooted. Also, the port is locked against manual operation on the web page as long as the batch mode is running.

🧚 The "Action PortSwitch" function is only available for devices with switchable ports.

Extending a rule

For demonstration purposes, here is an extension to the simple timer from the previous example:

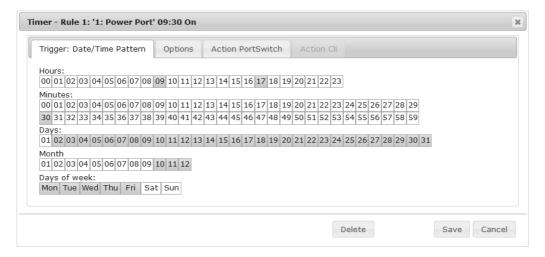


The action is now started not only at 9:30, but also at 17:30 There are other changes: The timer is only active between October and December, also the action does not take place on the first day of a month.


Since all fields in the mask are always considered, it is not possible to define the times 9:30 and 17:10 in a single timer rule. You need a second rule for this. If you set the hours 9 and 17, as well as the minutes 10 and 30, then the four times 9:10, 9:30, 17:10 and 17:30 would be programmed.

41

To change a field in this input mask without changing the state of the other fields, the Ctrl key must be pressed during the mouse click.

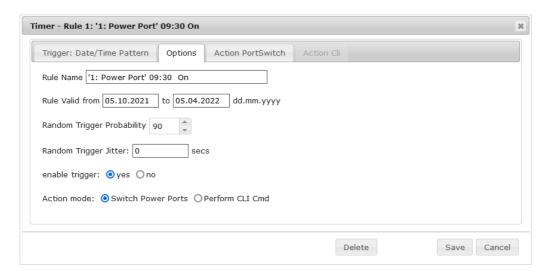


For this rule, on the "Options" tab, the time period is limited to the range between 5.10.2021 and 5.4.2022. In this example, the timer rule is only executed with a probability (Random Trigger Probability) of 90%.

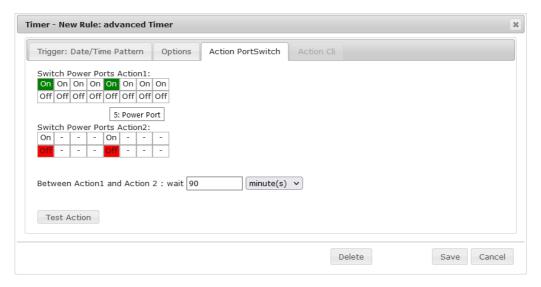

In this example, port 1 and port 5 are enabled and disabled after 90 minutes by batch mode.

🧱 A popup on the mouse pointer shows the port number of the field.


Console Commands

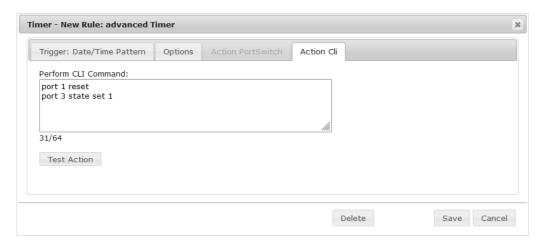


Instead of switching a port, one or more console commands can be executed. These commands are entered in the "Action CLI" register. The "Action Cli" tab can only be selected if the option "Perform CLI Cmd" is activated in "Options".

Example Switching a Port on a Date

If you want to switch on a timer on a certain date at a certain time and switch it off at a later time, you cannot do it directly with a simple timer. Therefore it can be useful to create the timer as a simple timer first, and then customize it in the advanced dialog.

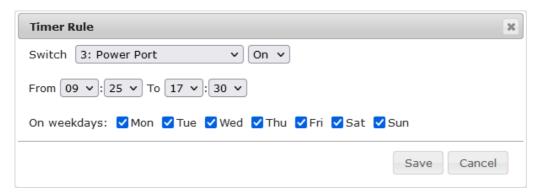


Switch port 3 on every day at 9:25, and off again at 17:30. You save.

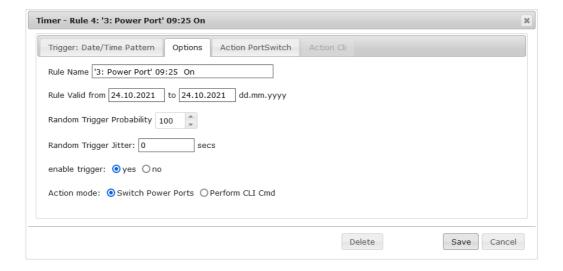

43

Then call up the two timer rules you created ("On" and "Off") and enter the date on which the switching operation is to take place in the "Options" tab.

Example blind control

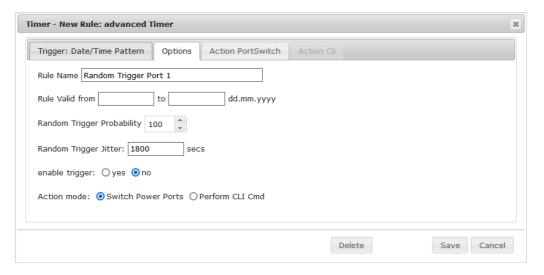

You can use the jitter e.g. for a shutter control. In the classic example of a shutter control, you do not always want to raise and lower the shutters at the same time in order to confuse potential burglars. The jitter of 1800 seconds means that the action is executed randomly in a period between 30 minutes before and 30 minutes after the programmed time. The probability (Random Trigger Probability) of execution here is 100%.

Further examples can be found at www.gude.info/wiki/timer

3.5 Sensors

Sensors Config	
Sensor:	1: 7106 - 7106 ~
Sensor Name:	7106
Select Sensor Field:	Temperature (°C) ∨
Enable 'Temperature' Messages:	● yes ○ no
Maximum value:	30.0 °C
Minimum value:	10.0 °C
Hysteresis:	0.1 °C
Message channels:	✓ Syslog ☐ SNMP ☐ Email ☐ Console
	☐ Flashing display
When above Max value:	Switch port 1: Power Port v to Off v
When below Max value:	Switch port 1: Power Port v to On v
When above Min value:	Switch port 2: Power Port v to On v
When below Min value:	Switch port 2: Power Port \vee to Off \vee
Console push-messages:	every time interval of \vee 10 seconds
Misc sensor options	
Min/Max measurement period:	24 Hours V
	Apply

<u>Sensor</u>: Selects a type of sensor to configure it. The first digit "1" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the sensor name, and the changeable sensor name.

<u>Sensor Name</u>: Changeable name for this sensor. Temperature and humidity can have different names, even if they are from the same sensor.

<u>Select Sensor Field</u>: Selects a data channel from a sensor.

<u>Enable</u> ... <u>Messages</u>: Enables the generation of sensor messages.

<u>Maximum/Minimum value</u>: Adjustable limits for current levels (high and low), which sends alerts via SNMP traps, syslog or E-Mail.

<u>Hysteresis</u>: This describes the margin of when an event is generated after the measured value has crossed the chosen limit.

Message channels: Enables the generation of messages on different channels.

With Flashing Display the 7-segment display flashes. By pressing a front panel button the flashing display will be reset.

<u>Console push-messages</u>: This option allows the output of sensor values on the console at a configured time interval, or when a certain threshold has been reached.

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

Hysteresis Example:


A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set. Example:

```
49.9 °C - is below the upper limit
50.0 °C - a message is generated for reaching the upper limit
50.1 °C - is above the upper limit
...
49.1 °C - is below the upper limit, but in the hysteresis range
49.0 °C - is below the upper limit, but in the hysteresis range
48.9 °C - a message is generated for underrunning the upper limit inclusive hysteresis range
```

3.5.1 Port Switching

Depending on the measured Current and the measured sensor values, switching actions can be triggered. During operation, the actions configured for crossing the limits are executed. For example, when a value moves from the range "above max value" inside the range "below max value", the action defined for "below max value" is performed. In the case of device start, configuration or plug-in of the sensor, the actions corresponding to the range in which the current temperature is located are switched.

Example with "Maximum value" of 65 $^{\circ}$ C, "Minimum value" of 25 $^{\circ}$ C and hysteresis of 3 $^{\circ}$ C. The dotted line shows the hysteresis.

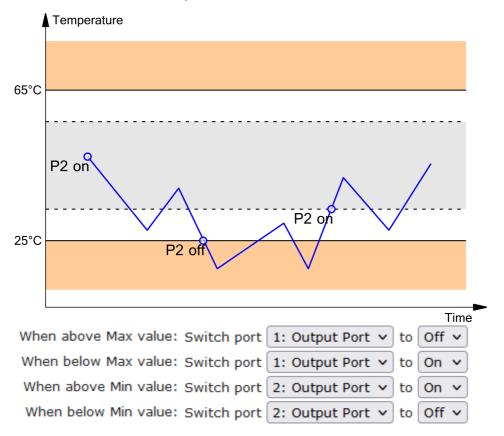

Actions during configuration, device start or plugging in the sensor (for given example):

actual temperature	actions
during configuration	
70 °C	Port 1 Off (above max) + Port 2 On (above min)
45 °C	Port 1 On (below max) + Port 2 On (above min)
20 °C	Port 1 On (below max) + Port 2 Off (below min)

Action matrix during operation when limit values are exceeded (for given example):

	to "above max"	to "below max"	to "above min"	to "below min"
from "above	-	P1 On	P1 On	P1 On + P2 Off
max"				
from "below max"	P1 Off	-	-	P2 Off
from "above min"	P1 Off	-	-	P2 Off
from "below min"	P1 Off + P2 On	P2 On	P2 On	-

Only the switching operations for which actions have been defined, are triggered. If no "On" or "Off" action is defined for a port, the port can never reach this state by exceeding sensor values. Unless it is the initial state.

3.6 E-Mail

E-Mail				
Enable E-Mail:	⊚ yes ○no			
Sender address:	sender@provider.net			
Recipient address:	info@gude.info			
0.170				
SMTP server:	smtp.provider.de			
SMTP server port:	587 (Default: 587)			
SMTP Connection Security:	SMTP Connection Security: STARTTLS >			
Authentication				
SMTP Authentication (password):	PLAIN V			
Username:				
Set new password:	••••			
Repeat password:	••••			

Enable E-Mail: Activates the E-Mail dispatch of messages.

Sender address: The E-Mail address of the sender.

<u>Recipient address</u>: The E-Mail address of the recipient. Additional E-Mail addresses, separated by comma, can be specified. The input limit is 100 characters.

<u>SMTP Server</u>: The SMTP IP-address of the E-Mail server. Either as FQDN, e.g: "mail.gmx.net", or as IP-address, e.g: "213.165.64.20". If required, attach a designated port, e.g: "mail.gmx.net:25".

<u>SMTP server port</u>: The port address of the E-Mail server. In the normal case this should be the same as the default, that is determined by the setting <u>SMTP Connection</u>

Security.

SMTP Connection Security: Transmission via SSL or no encryption.

SMTP Authentification (password): Authentication method of the E-Mail Server.

Username: User name that is registered with the SMTP E-Mail server.

Set new password: Enter the password for the login to the E-Mail server.

Repeat password: Enter the password again to confirm it.

If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the password is never shown itself. If you want to change a password, the complete password must always be re-entered.

E-Mail Logs: Logging of E-Mail system messages.


3.7 Front Panel

— Front Panel ——————	
Button Lock: Allow switching all ports: Display 1 default:	● yes ○ no
	Apply

<u>Button Lock</u>: Disables the front buttons (activates the key lock) with the exception of the bootloader activation.

Allow switching all ports: Allows to switch all ports on or off with the front panel buttons.

 Display 1 default: Selects what sensor is displayed in the display.



4.1 Automated Access

The device can be accessed automatically via four different interfaces, which offer different possibilities to access the configuration data and status information. Only http and the console (telnet and serial) provide full access to the device.

This chapter is general for all Gude devices. Depending on the device model are ports, certain sensors or other features not available.

List of different access options:

Interface	Scope of Access
HTTP	read / write status of Power Ports (relays or eFuses)
	read / write all configuration data
	read / write all status information
	(full access to the device)
Console 62	read / write status of Power Ports (relays or eFuses)
	read / write all configuration data
	read / write all status information
	(full access to the device)
SNMP 54	read / write status of Power Ports (relays or eFuses)
	read / write names of Power Ports (relays or eFuses)
	read / write status of Port start configuration
	read / write status Buzzer
	read / write configuration of power sources (EPC 8291)
	read / write fan configuration (EPC 8291)
	read measurement values of external sensors
	read measurement values of all energy sensors
	read NTP time and status
	resetting the energy meters
Modbus TCP 86	read the status of Overvoltage Protection
Modbus TCP 86	read / write status of Power Ports (relays or eFuses) read status of Inputs
	read / write configuration of power sources (EPC 8291)
	read / write fan configuration (EPC 8291)
	read measurement values of external sensors
	read measurement values of all energy sensors
	read the status of Overvoltage Protection
MQTT	Execute console commands
IVIQTI	Execute console commands

The device can be controlled via HTTP interface with CGI commands and returns the internal configuration and status in JSON format. The structure of the CGI commands and the JSON data is explained in more detail in our Wiki article: http://wiki.gude.info/EPC_HTTP_Interface

4.2 Messages

Depending on adjustable events, various messages can be sent from the device. The following message types are supported:

- · Sending of e-mails
- SNMP Traps

· Syslog messages

E-Mail messages

Email messages are triggered by the following events:

- · Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

Syslog messages

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (eg. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- · Switching of the Ports
- Exceeding of the max / min values of attached sensors
- · State change of digital sensor input ports

	SNMP Trap	Console	MQTT	Syslog	Email
Global					
Device started	Х	Х	Х	Х	Х
Switch port	Х	Х	Х	Х	Х
Port watchdog status	Х	Х	Х	Х	Х
Syslog switched on/off				Х	
MQTT connection established			Х	Х	
MQTT connection lost				Х	
Value-Threshold					
external sensors					
Current	Х	X	Х	Х	Х
Time-Interval					
external sensors					
Current		Х	Х		
Value-Delta					
external sensors					
Current		X	Х		

SNMP traps

There are common traps for state changes of the same device resource. For example, a SwitchEvtPort trap is sent when a port is turned on or off. The state change itself is conveyed by the supplied data within the trap.

MQTT published data

Messages on the MQTT channel are sent in JSON format.

Example switch a port: "{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}"

Console Push Messages

Push messages can be activated on the console channels (Telnet, SSH or serial console), which output sensor values at timed intervals (every n seconds) or as of a configurable change in the magnitude of the sensor value on that channel. The generated message always starts with a "#" and ends with a CR/LF.

Example: Switch a port: "#port 2 ON"

If you open a telnet or SSH connection, the push messages are either preconfigured, or you switch on the push messages temporarily with "console telnet pushmsgs set 1" (or "console ssh pushmsgs set 1"). From now on, push messages will be sent asynchronously on this channel. The asynchronous nature of the messages can cause problems on a connection if you send commands yourself at the same time. There are then the possibilities:

- Filter all incoming characters between "#" and CR/LF
- or open a second channel (Telnet, SSH, serial) and switch on the push messages there.

4.3 IP ACL

IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, only the hosts and subnets whose IP addresses are registered in the list, can contact via HTTP or SNMP, and make changes. For incoming connections from unauthorized PCs, the device is not completely transparent. Due to technical restraints, a TCP/IP connection will be accepted at first, but then rejected directly.

Examples:

Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access the device
1234:4ef0:eec1:0::/64	all devices of subnet "1234:4ef0:eec1:0::/64" can access the device

If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

4.4 IPv6

IPv6 Addresses

IPv6 addresses are 128 bit long and thus four times as long as IPv4 addresses. The first 64 bit form a so-called prefix, the last 64 bit designate a unique interface identifier. The prefix is composed of a routing prefix and a subnet ID. An IPv6 network interface can be reached under several IP addresses. Usually this is the case under a global address and the link local address.

Address Notation

IPv6 addresses are noted in 8 hexadecimal blocks at 16 bit, while IPv4 normally is noted in decimal. The seperator is a colon, not a period.

E.g.: 1234:4ef0:0:0:0019:32ff:fe00:0124

Leading zeros may be omitted within a block. The previous example can be rewritten as:

1234:4ef0:0:0:19:32ff:fe00:124

One may omit one or more successive blocks, if they consist of zeros. This may be done only once within an IPv6 address!

1234:4ef0::19:32ff:fe00:124

One may use the usual decimal notation of IPv4 for the last 4 bytes:

1234:4ef0::19:32ff:254.0.1.36

4.5 Radius

The passwords for HTTP, telnet, and serial console (depending on the model) can be stored locally and / or authenticated via RADIUS. The RADIUS configuration supports a primary server and a backup server. If the primary server does respond, the RADIUS request is sent to the backup server. If the local password and RADIUS are enabled at the same time, the system is first checking locally, and then in the event of a failure the RADIUS servers are contacted.

RADIUS attributes

The following RADIUS attributes are evaluated by the client:

Session-Timeout: This attribute specifies (in seconds) how long an accepted RADIUS request is valid. After this time has elapsed, the RADIUS server must be prompted again. If this attribute is not returned, the default timeout entry from the configuration is used instead.

Filter-Id: If the value "admin" is set for this attribute, then an admin rights are assigned for the login, otherwise only user access.

Service-Type: This is an alternative to Filter-Id. A service type of "6" or "7" means admin rights for the HTTP login, otherwise only limited user access.

HTTP Login

The HTTP login takes place via Basic Authentication. This means that it is the responsibility of the web server, how long the login credentials are temporarily stored there. The RADIUS parameter "Session-Timeout" therefore does not determine when the user has to login again, but at what intervals the RADIUS servers are asked again.

4.6 SNMP

SNMP can be used for status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios etc., or the simple command line tools of NET-SNMP software. The device supports SNMP protocols v1, v2c and v3. If traps are enabled in the configuration, the device messages are sent as notifications (traps). SNMP Informs are not supported. SNMP Requests are answered with the same version with which they were sent. The version of the sent traps can be set in the configuration.

MIB Tables

The values that can be requested or changed by the device, the so-called "Managed Objects", are described in Management Information Bases (MIBs). These substructures are subordinate to so-called "OID" (Object Identifiers). An OID digit signifies the location of a value inside a MIB structure. Alternatively, each OID can be referred to with its symbol name (subtree name). The device's MIB table can be displayed as a text file by clicking on the link "MIB table" on the SNMP configuration page in the browser.

SNMP v1 and v2c

SNMP v1 and v2c authenticates the network requests by so-called communities. The SNMP request has to send along the so-called community public for queries (read access) and the community private for status changes (write access) . The SNMP communities are read and write passwords. In SNMP v1 and v2 the communities are transmitted unencrypted on the network and can be easily intercepted with IP sniffers within this collision domain. To enforce limited access we recommend the use of DMZ or IP-ACL.

SNMP v3

Because the device has no multiuser management, only one user (default name "standard") is detected in SNMP v3. From the User-based Security Model (USM) MIB variables, there is a support of "usmStats ..." counter. The "usmUser ..." variables will be added with the enhancement of additional users in later firmware versions. The system has only one context. The system accepts the context "normal" or an empty context.

Authentication

The algorithms "HMAC-MD5-96" and "HMAC-SHA-96" are available for authentication. In addition, the "HMAC-SHA-2" variants (RFC7630) "SHA-256", "SHA-384" and "SHA-512" are implemented.

"SHA-384" and "SHA512" are calculated purely in software. If "SHA-384" or "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

Encryption

The methods "DES", "3DES", "AES-128", "AES-192" and "AES-256" are supported in combination with "HMAC-MD5-96" and "HMAC-SHA-96." For the "HMAC-SHA-2" protocols, there is currently neither RFC nor draft that will allow for cooperation with an encryption.

While in the settings "AES-192" and "AES256" the key calculation is based on "draft-blumenthalphoto-aes-usm-04", the methods "AES 192-3DESKey" and "AES 256-3DESKey" utilize a key generation, which is also used in the "3DES" configuration ("draft-reeder-snmpv3-usm-3desede-00"). If one is not an SNMP expert, it is recommended to try in each case the settings with and without "...- 3DESKey".

Passwords

The passwords for authentication and encryption are stored only as computed hashes for security reasons. Thus it is, if at all, very difficult to infer the initial password. However, the hash calculation changes with the set algorithms. If the authentication or privacy algorithms are changed, the passwords must be re-entered in the configuration dialog.

Security

The following aspects should be considered:

- If encryption or authentication is used, then SNMP v1 and v2c should be turned off. Otherwise the device could be accessed with it.
- If only authentication is used, then the new "HMAC-SHA-2" methods are superior to the MD5 or SHA-1 hashing algorithms. Since only SHA-256 is accelerated in hardware, and SHA-384 and SHA-512 are calculated purely in software, one should normally select SHA-256. From a cryptographic point of view, the security of SHA-256 is sufficient for today's usage.
- For SHA-1, there are a little less attack scenarios than MD5. If in doubt, SHA-1 is preferable.
- Encryption "DES" is considered very unsafe, use only in an emergency for reasons of compatibility!
- For cryptologists it's a debatable point whether "HMAC-MD5-96" and "HMAC-SHA-96" can muster enough entropy for key lengths of "AES-192" or "AES-256".
- From the foregoing considerations, we would recommended at present "HMAC-SHA-96" with "AES-128" as authentication and encryption method.

Change in Trap Design

In older MIB tables, a separate trap was defined for each combination of an event and a port number. This results in longer lists of trap definitions for the devices. For example, from epc8221SwitchEvtPort1 to epc8221SwitchEvtPort12. Since new firmware versions can generate many more different events, this behavior quickly produces several hundred trap definitions. To limit this overabundance of trap definitions, the trap design has been changed to create only one specific trap for each event type. The port or sensor number is now available in the trap as an index OID within the vari-

able bindings.

In order to recognize this change directly, the "Notification" area in the MIB table has been moved from sysObjectID.0 to sysObjectID.3. This way, unidentified events are generated until the new MIB table is imported. For compatibility reasons, SNMP v1 traps are created in the same way as before.

NET-SNMP

NET-SNMP provides a very widespread collection of SNMP command-line tools (snm-pget, snmpset, snmpwalk etc.) NET-SNMP is among others available for Linux and Windows. After installing NET-SNMP you should create the device-specific MIB of the device in NET-SMP share directory, e.g. after

c:\usr\share\snmp\mibs

or

/usr/share/snmp/mibs

So later you can use the 'subtree names' instead of OIDs:

```
Name: snmpwalk -v2c -mALL -c public 192.168.1.232 gudeads
OID: snmpwalk -v2c -mALL -c public 192.168.1.232 1.3.6.1.4.1.28507
```

NET-SNMP Examples

Query Power Port 1 switching state:

snmpget -v2c -mALL -c public 192.168.1.232 epc822XPortState.1

Switch on Power Port 1:

snmpset -v2c -mALL -c private 192.168.1.232 epc822XPortState.1 integer 1

4.6.1 Device MIB 8314

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.64.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	OID	Type	Acc.
	Description		
epc8314TrapCtrl	.97.1.1.1.0	Integer32	RW
	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3		
epc8314TrapIPIndex	.97.1.1.1.2.1.1.x	Integer32	RO
	A unique value, greater than zero, for each recei	iver slot.	
epc8314TrapAddr	.97.1.1.2.1.2.x	OCTETS	RW
	DNS name or IP address specifying one Trap re optionally be specified: 'name:port' An empty str		
epc8314portNumber	.97.1.3.1.1.0	Integer32	RO
	The number of Relay Ports	_	
epc8314PortIndex	.97.1.3.1.2.1.1.x	Integer32	RO
	A unique value, greater than zero, for each Rela	y Port.	
epc8314PortName	.97.1.3.1.2.1.2.x	OCTETS	RW

epc8314PortState	A textual string containing name of a Relay Port	RW
epc8314PortSwitchCount	current state a Relay Port .97.1.3.1.2.1.4.x Integer32	RO
,	The total number of switch actions ocurred on a Relay Port. I count switch commands which will not switch the ralay state,	
	relay switches are displayed here.	•
epc8314PortStartupMode	.97.1.3.1.2.1.5.x INTEGER set Mode of startup sequence (off, on , remember last state)	RW
epc8314PortStartupDelay	.97.1.3.1.2.1.6.x Integer32 Delay in sec for startup action	RW
epc8314PortRepowerTime	.97.1.3.1.2.1.7.x Integer32 Delay in sec for repower port after switching off	RW
epc8314PortResetDuration	.97.1.3.1.2.1.8.x Integer32	RW
epc8314ActivePowerChan	Delay in sec for turning Port on again after Reset action .97.1.5.1.1.0 Unsigned32	2 RO
epc8314PowerIndex	Number of suppported Power Channels. .97.1.5.1.2.1.1.x Integer32	RO
epc8314ChanStatus	Index of Power Channel entries .97.1.5.1.2.1.2.x Integer32	RO
epc8314AbsEnergyActive	0 = data not active, 1 = data valid .97.1.5.1.2.1.3.x Unsigned32	2 RO
	Absolute Active Energy counter.	
epc8314PowerActive	.97.1.5.1.2.1.4.x Integer32 Active Power	RO
epc8314Current	.97.1.5.1.2.1.5.x Unsigned32 Actual Curent on Power Channel.	2 RO
epc8314Voltage	.97.1.5.1.2.1.6.x Unsigned32 Actual Voltage on Power Channel	2 RO
epc8314Frequency	.97.1.5.1.2.1.7.x Unsigned32	2 RO
epc8314PowerFactor	Frequency of Power Channel .97.1.5.1.2.1.8.x Integer32	RO
epc8314Pangle	Power Factor of Channel between -1.0 and 1.00 .97.1.5.1.2.1.9.x Integer32	RO
	Phase Angle between Voltage and L Line Current between -1 180.0	80.0 and
epc8314PowerApparent	.97.1.5.1.2.1.10.x Integer32	RO
epc8314PowerReactive	L Line Mean Apparent Power .97.1.5.1.2.1.11.x Integer32	RO
epc8314AbsEnergyReactive	L Line Mean Reactive Power .97.1.5.1.2.1.12.x Unsigned32	2 RO
epc8314AbsEnergyActiveResettab	Absolute Reactive Energy counter.	
le	.97.1.5.1.2.1.13.x Unsigned32 Resettable Absolute Active Energy counter. Writing '0' resets	
004441 5 8 6 8	resettable counter.	all
epc8314AbsEnergyReactiveReset able	.97.1.3.1.2.1.14.X Offsigned32	2 RO
epc8314ResetTime	Resettable Absolute Reactive Energy counter97.1.5.1.2.1.15.x Unsigned32	2 RO
epc8314ForwEnergyActive	Time in seconds since last Energy Counter reset97.1.5.1.2.1.16.x Unsigned32	
	Forward Active Energy counter.	
epc8314ForwEnergyReactive	.97.1.5.1.2.1.17.x Unsigned32 Forward Reactive Energy counter.	2 RO
epc8314ForwEnergyActiveResettable	.97.1.5.1.2.1.18.x Unsigned32	2 RO
epc8314ForwEnergyReactiveRese	Resettable Forward Active Energy counter.	
ttable	.97.1.5.1.2.1.19.X Unsigned52	2 RO
epc8314RevEnergyActive	Resettable Forward Reactive Energy counter	2 RO
epc8314RevEnergyReactive	Reverse Active Energy counter97.1.5.1.2.1.21.x Unsigned32	2 RO
epc8314RevEnergyActiveResettal	Reverse Reactive Energy counter.	
le	.97.1.5.1.2.X Unsigned 52	2 RO
epc8314RevEnergyReactiveReset	Resettable Reverse Active Energy counter. t .97.1.5.1.2.1.23.x Unsigned32	2 RO
able	Resettable Reverse Reactive Energy counter.	
epc8314LineSensorName	.97.1.5.1.2.1.100.x OCTETS A textual string containing name of a Line Sensor	RW
epc8314NTPTimeValid	.97.1.5.15.1.0 INTEGER	RO
epc8314NTPUnixTime	Show if valid Time is received .97.1.5.15.2.0 Unsigned32	
	show received NTP time as unixtime (secs since 1 January 1	970)

epc8314NTPLastValidTimestamp		.97.1.5.15.3.0	Unsigned32	RO
	show seconds since last va	alid NTP timestamp re	eceived	
epc8314SensorIndex		.97.1.6.1.1.1.x	Integer32	RO
•	None		J	
epc8314TempSensor		.97.1.6.1.1.2.x	Integer32	RO
	actual temperature		ŭ	
epc8314HygroSensor	·	.97.1.6.1.1.3.x	Integer32	RO
, , , , ,	actual humidity		Ü	
epc8314InputSensor	·	.97.1.6.1.1.4.x	INTEGER	RO
	logical state of input sensor	r		
epc8314AirPressure		.97.1.6.1.1.5.x	Integer32	RO
•	actual air pressure		Ü	
epc8314DewPoint		.97.1.6.1.1.6.x	Integer32	RO
	dew point for actual temper	rature and humidity	•	
epc8314DewPointDiff	· ·	.97.1.6.1.1.7.x	Integer32	RO
·	difference between dew po	int and actual temper	ature (Temp -	
	DewPoint)	'	, ,	
epc8314ExtSensorName	·	.97.1.6.1.1.32.x	OCTETS	RW
•	A textual string containing r	name of a external Se	ensor	
	0 0			

4.6.2 Device MIB 8316

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.64.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	OID	Type	Acc.
	Description	• •	
epc8316TrapCtrl	.64.1.1.1.0	Integer32	RW
	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3		
epc8316TrapIPIndex	.64.1.1.1.2.1.1.x	Integer32	RO
20107	A unique value, greater than zero, for each rece		D14/
epc8316TrapAddr	.64.1.1.1.2.1.2.x	OCTETS	RW
	DNS name or IP address specifying one Trap re		
epc8316portNumber	optionally be specified: 'name:port' An empty st .64.1.3.1.1.0	Integer32	RO
epcos roportivamber	The number of Relay Ports	integersz	NO
epc8316PortIndex	.64.1.3.1.2.1.1.x	Integer32	RO
epoco for ortificex	A unique value, greater than zero, for each Rela		110
epc8316PortName	.64.1.3.1.2.1.2.x	OCTETS	RW
	A textual string containing name of a Relay Por		
epc8316PortState	.64.1.3.1.2.1.3.x	INTEGER	RW
•	current state a Relay Port		
epc8316PortSwitchCount	.64.1.3.1.2.1.4.x	Integer32	RO
	The total number of switch actions ocurred on a		
	count switch commands which will not switch th	ie ralay state, so	o just real
	relay switches are displayed here.		D14/
epc8316PortStartupMode	.64.1.3.1.2.1.5.x	INTEGER	RW
ana0216DartStartunDalay	set Mode of startup sequence (off, on , rememb .64.1.3.1.2.1.6.x		RW
epc8316PortStartupDelay	Delay in sec for startup action	Integer32	KVV
epc8316PortRepowerTime	.64.1.3.1.2.1.7.x	Integer32	RW
epcoordi dititepowei filile	Delay in sec for repower port after switching off	integeroz	1744
epc8316PortResetDuration	.64.1.3.1.2.1.8.x	Integer32	RW
opede for era toest.Baration	Delay in sec for turning Port on again after Reso		
epc8316ActivePowerChan	.64.1.5.1.1.0	Unsigned32	RO
•	Number of suppported Power Channels.	Ü	
epc8316PowerIndex	.64.1.5.1.2.1.1.x	Integer32	RO
	Index of Power Channel entries		
epc8316ChanStatus	.64.1.5.1.2.1.2.x	Integer32	RO
	0 = data not active, 1 = data valid		
epc8316AbsEnergyActive	.64.1.5.1.2.1.3.x	Unsigned32	RO
	Absolute Active Energy counter.	last	D0
epc8316PowerActive	.64.1.5.1.2.1.4.x	Integer32	RO
	Active Power		

epc8316Current	Actual Curent on Power Char	.64.1.5.1.2.1.5.x nnel.	Unsigned32	RO
epc8316Voltage		64.1.5.1.2.1.6.x	Unsigned32	RO
epc8316Frequency	·	.64.1.5.1.2.1.7.x	Unsigned32	RO
epc8316PowerFactor		64.1.5.1.2.1.8.x	Integer32	RO
epc8316Pangle		.64.1.5.1.2.1.9.x	Integer32	RO
	Phase Angle between Voltag 180.0	e and L Line Curren	t between -180.0	and and
epc8316PowerApparent	L Line Mean Apparent Power	64.1.5.1.2.1.10.x	Integer32	RO
epc8316PowerReactive		64.1.5.1.2.1.11.x	Integer32	RO
epc8316AbsEnergyReactive		64.1.5.1.2.1.12.x	Unsigned32	RO
epc8316AbsEnergyActiveResettab	•	.64.1.5.1.2.1.13.x	Unsigned32	RW
le	Resettable Absolute Active E resettable counter.	nergy counter. Writi	•	
epc8316AbsEnergyReactiveResett		64.1.5.1.2.1.14.x	Unsigned32	RO
epc8316ResetTime	Resettable Absolute Reactive	Energy counter. .64.1.5.1.2.1.15.x	Unsigned32	RO
·	Time in seconds since last E	nergy Counter reset.		
epc8316ForwEnergyActive	Forward Active Energy count		Unsigned32	RO
epc8316ForwEnergyReactive	Forward Reactive Energy cou	.64.1.5.1.2.1.17.x unter.	Unsigned32	RO
epc8316ForwEnergyActiveResetta ble		64.1.5.1.2.1.18.x	Unsigned32	RO
epc8316ForwEnergyReactiveRese	Resettable Forward Active En			
ttable	Resettable Forward Reactive	64.1.5.1.2.1.19.x	Unsigned32	RO
epc8316RevEnergyActive		64.1.5.1.2.1.20.x	Unsigned32	RO
epc8316RevEnergyReactive		.64.1.5.1.2.1.21.x	Unsigned32	RO
epc8316RevEnergyActiveResettab	Reverse Reactive Energy cou	unter. .64.1.5.1.2.1.22.x	Unsigned32	RO
le	Resettable Reverse Active E		Onoigned02	110
epc8316RevEnergyReactiveResettable		64.1.5.1.2.1.23.x	Unsigned32	RO
epc8316LineSensorName	Resettable Reverse Reactive	Energy counter. 64.1.5.1.2.1.100.x	OCTETS	RW
epc8316spActivePowerChan	A textual string containing na			RO
	Number of Single Port Power	Channels.		
epc8316spPowerIndex	Index of Single Port Power C		Integer32 es 0-5 mean Po	RO rts A1
epc8316spChanStatus		.64.1.5.5.2.1.2.x	Integer32	RO
epc8316spAbsEnergyActive	0 = data not active, 1 = data	valid .64.1.5.5.2.1.3.x	Unsigned32	RO
epc8316spPowerActive	Absolute Active Energy coun		Integer32	RO
epc8316spCurrent	Active Power	64.1.5.5.2.1.5.x	Unsigned32	RO
· ·	Actual Curent on Power Char	nnel.		
epc8316spVoltage	Actual Voltage on Power Cha		Unsigned32	RO
epc8316spFrequency	Frequency of Power Channel	64.1.5.5.2.1.7.x	Unsigned32	RO
epc8316spPowerFactor	Power Factor of Channel bety	64.1.5.5.2.1.8.x ween -1.0 and 1.00	Integer32	RO
epc8316spPangle	Phase Angle between Voltag	64.1.5.5.2.1.9.x	Integer32 t between -180.0	RO and
epc8316spPowerApparent		64.1.5.5.2.1.10.x	Integer32	RO
epc8316spPowerReactive		64.1.5.5.2.1.11.x	Integer32	RO
epc8316spAbsEnergyReactive	L Line Mean Reactive Power	.64.1.5.5.2.1.12.x	Unsigned32	RO
epc8316spAbsEnergyActiveResett	Absolute Reactive Energy co	unter. 64.1.5.5.2.1.13.x	Unsigned32	RW
, ,			J 	-

able				
	Resettable Absolute Active I resettable counter.	Energy counter. Writi	ng '0' resets all	
epc8316spAbsEnergyReactiveResettable	Resettable Absolute Reactiv	.64.1.5.5.2.1.14.x	Unsigned32	RO
epc8316spResetTime	Time in seconds since last E	.64.1.5.5.2.1.15.x	Unsigned32	RO
epc8316spForwEnergyActive	Forward Active Energy coun		Unsigned32	RO
epc8316spForwEnergyReactive	Forward Reactive Energy co	.64.1.5.5.2.1.17.x ounter.	Unsigned32	RO
epc8316spForwEnergyActiveResetable		.64.1.5.5.2.1.18.x	Unsigned32	RO
	Resettable Forward Active E	nergy counter.		
epc8316spForwEnergyReactiveResettable	Resettable Forward Reactive	.64.1.5.5.2.1.19.x	Unsigned32	RO
epc8316spRevEnergyActive	Reverse Active Energy coun	.64.1.5.5.2.1.20.x	Unsigned32	RO
epc8316spRevEnergyReactive	Reverse Reactive Energy co	.64.1.5.5.2.1.21.x	Unsigned32	RO
epc8316spRevEnergyActiveReset able		.64.1.5.5.2.1.22.x	Unsigned32	RO
	Resettable Reverse Active E	Energy counter.		
epc8316spRevEnergyReactiveResettable		.64.1.5.5.2.1.23.x	Unsigned32	RO
epc8316NTPTimeValid	Show if valid Time is received	.64.1.5.15.1.0	INTEGER	RO
epc8316NTPUnixTime	show received NTP time as	.64.1.5.15.2.0	Unsigned32 1 January 1970	RO
epc8316NTPLastValidTimestamp	show seconds since last vali	.64.1.5.15.3.0	Unsigned32	RO
epc8316SensorIndex	None	.64.1.6.1.1.1.x	Integer32	RO
epc8316TempSensor	actual temperature	.64.1.6.1.1.2.x	Integer32	RO
epc8316HygroSensor	actual humidity	.64.1.6.1.1.3.x	Integer32	RO
epc8316InputSensor	logical state of input sensor	.64.1.6.1.1.4.x	INTEGER	RO
epc8316AirPressure	actual air pressure	.64.1.6.1.1.5.x	Integer32	RO
epc8316DewPoint	dew point for actual tempera		Integer32	RO
epc8316DewPointDiff	difference between dew poir DewPoint)	'	Integer32 sture (Temp -	RO
epc8316ExtSensorName	A textual string containing na	.64.1.6.1.1.32.x ame of a external Se	OCTETS nsor	RW

4.7 SSL

TLS Standard

The device is compatible with TLS v1.1 to TLS v1.3 standards, but due to lack of security, SSL v3.0, TLS 1.0, and RC4, MD5, SHA1, and DES encryption are disabled. All ciphers use Diffie-Hellman key exchange (Perfect Forward Secrecy).

TLS 1.3 performance

The interaction of TLS 1.3 and unsecure certificates and a web browser with Chromium Engine (Google Chrome or MS Edge) can lead to performance losses, and thus longer loading times. In this constellation, the Chromium Engine does not correctly support the SSL Session Cache (Session Tickets) and the math unit of the embedded CPU may be overwhelmed with continuous RSA operations. There are some possible workarounds:

- Use secure certificates (official certificate authority or marked as secure in the OS)
- · or use of the Firefox browser
- or use of ECC 256 (no RSA) certificates
- or configure to "TLS v1.2 only

Creating your own Certificates

The SSL stack is supplied with a specially newly generated self-signed certificate. There is no function to generate the local certificate anew at the touch of a button, since the required random numbers in an embedded device are usually not independent enough. However, you can create new certificates and import them to the device. The server accepts RSA (2048/4096) and ECC (Elliptic Curve Cryptography) certificates.

Usually OpenSSL is used to create an SSL certificate. For Windows for example, there is the light version of Shining Light Productions. There you open a command prompt, change to the directory "C:\OpenSSL-Win32\bin" and set these environment variables:

```
set openssl_conf=C:\OpenSSL-Win32\bin\openssl.cfg
set RANDFILE=C:\OpenSSL-Win32\bin\.rnd
```

Here are some examples for the generation with OpenSSL:

Creation of a self-signed RSA 2048-bit certificate

```
openssl genrsa -out server.key 2048 openssl reg -new -x509 -days 365 -key server.key -out server.crt
```

RSA 2048-bit certificate with Sign Request:

```
openssl genrsa -out server.key 2048
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

The server keys should be created with "openssl genrsa". The Gude device processes keys in the traditional PKCS#1 format. This can be recognized by the fact that the generated key file starts with "-----BEGIN RSA PRIVATE KEY-----". If the file starts with "-----BEGIN PRIVATE KEY-----", the file is in PKCS#8 format and the key is not recognized. If you have only a key in PKCS#8 format, you can convert it to PKCS#1 with openssl: "openssl rsa -in pkcs8.key -out pkcs1.key".

ECC Certificate with Sign Request:

```
openssl ecparam -genkey -name prime256v1 -out server.key openssl req -new -key server.key -out server.csr openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

If you have created your key and certificate, both files are concatenated to one file:

Linux:

```
cat server.crt server.key > server.pem
Windows:
copy server.crt + server.key server.pem
```

The created server.pem can only be uploaded in the maintenance section of the

61

device.

If several certificates (Intermediate CRT's) should also be uploaded to the device, one should make sure, that firstly the server certificate and secondly the Intermediates are assembled, e.g:

cat server.crt IM1.crt IM2.crt server.key > server.pem

An uploaded certificate will be preserved, when a device is put back to factory defaults 21.

Performance Considerations

If RSA 4096 certificates are used, the first access to the web server can take 8-10 seconds, because the math unit of the embedded CPU is highly demanded. After that, the parameters are in the SSL session cache, so all other requests are just as fast as with other certificate lengths. For a quick response even on the first access, we recommend RSA 2048-bit certificates that offer adequate security, too.

4.8 Console

For the configuration and control of the device, there is a set of commands with parameters that can be entered through a console. The console is available via Telnet, or for devices with RS232 port through using a serial terminal. It is not necessary to use Telnet, in **Raw Mode** a simple TCP/IP connection is sufficient to send commands. The communication can also be performed automated (e.g. via scripting languages). The console features are configured through the web interface 30° .

Command Set

There are several command levels. The following commands are usable from each level:

back	go back one level
help	all commands of the actual level
help all	show all commands
logout	logout (only when login required)
quit	quit console

The "help" command returns all the commands of the current level. If "help" is called from the top level, e.g. the line "http [subtopics]" appears. This means that there is another level for "http". With the command "http help" all commands below "http" are shown. Alternatively, with entering "http" you can select the http level, and "help" shows all the commands on the selected level. The command "back" again selects the top level. It is possible to use "help" at any position: "http passwd help" provides all commands that have the prefix "http passwd".

You will find a complete list of all possible device commands in the chapter "Cmd Overview".

Parameter

If parameters are expected for the command, the parameter may be passed as nu-

meric or constant. If e.g. you get the following line as help:

```
http server set {http both=0|https only=1|http only=2}
```

the following instruction pairs are equivalent:

```
http server set https_only
http server set 1

or

http server set https_both
http server set 0
```

Numerical parameters can be entered with different bases. Here is an example of the decimal value 11:

Base	Input
decimal (10)	11
hexadecimal (16)	0xb
octal (8)	013
binary (2)	0b1011

Bit Field Parameter

Some parameters can take several values at the same time. In the following example, all values between 0 and 5 can be set. In the help, this can be recognized by the fact that the values are not separated by the "|" character, but by commas.

```
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"
```

To set EVT_SYSLOG and EVT_EMAIL in a command, you can use the following syntax:

```
>extsensor 1 2 0 events type set "EVT_SYSLOG,EVT_EMAIL"
OK.
```

or numeric

```
>extsensor 1 2 0 events type set "0,2" OK.
```

Additionally you can set all values with "ALLSET" or encode any bit pattern as hexadecimal with a syntax like "#7f1a".

Return Values

If a command is unknown or a parameter is incorrect, the output "ERR." is given at the beginning of the line, followed by a description of the fault. Successful instructions without special return value will be acknowledged by "OK.". All other return values are output within a single line. There are of two exceptions:

- Some configuration changes, that affect TCP / IP and UDP, need a restart to be applied. These parameters are output on two lines. In the first line the current value is shown, on the second row the value after a restart. In the "Cmd Overview" table this is marked with "Note 2".
- Other configurations (such as the assigned IPv6 addresses) have several values that can change dynamically. This is marked with "Note 3" in the "Cmd Overview" table.

Numerical Returns

For parameters that support constants, these constants are output as return values. To better deal with scripting languages, it may be easier to work only with numerical returns. The command "vt100 numeric set ON" enables that only numerical values appear.

Comments

If you use a tool to send an entire file of commands via Telnet, it is helpful, if you can place comments in there. Beginning with the comment character "#", the remaining contents of a line is ignored.

Telnet

If the configuration "Raw Mode" is turned off, it is tried to negotiate the Telnet configuration between client and server using IAC commands. If this fails, the editing functions are not active, and the "Activate echo" option determines whether the characters sent to the Telnet server will be returned. Normally the client begins with the IAC negotiation. If this is not the case with the client, the device configuration "Active negotiation" should be turned on.

Raw Mode

If you want to use the console only automated, it may be advantageous to set the configuration "Raw mode" to "yes" and "Activate echo" to "no" to. Then there is no interfering interaction with the editor functions and the is no need to filter the sent characters to process the return values.

If in the console "Raw mode" is activated but not in the used Telnet client, the IAC commands sent at the beginning can appear as interfering characters in the command line (partially invisible).

Editing

The following edit functions are available when the terminal supports VT100, and Raw Mode is deactivated. Entered characters are inserted at the cursor position.

Keys	Function
Left, Right	moves cursor left or right
Pos1, End	moves cursor to the beginning or end of line
Del	deletes character under the cursor
Backspace	deletes character left of cursor
Up, Down	shows input lines history
Tab, Ctrl-Tab	completes the word at cursor
Ctrl-C	clears the line

Sensor Examples

a) External Sensors

```
>extsensor all show E=1,L="7106",0="21.3°C",1="35.1%",3="1013hPa",4="5.2°C",5="16.0°C"" E=2,L="7102",0="21.2°C",1="35.4%",4="5.3°C",5="15.9°C""
```

The command lists one connected external sensor per line, and the individual measured values are separated by commas after the label name. The digit before the equal sign corresponds to the Index field in the External Sensor Table.

>extsensor 1 0 value show

Displays temperature of the sensor at Port 1

b) Line Sensors

```
>linesensor all "0,1,2,3,12" show
L=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
L=2,L="Power Port",0="13000Wh",1="0W",2="223V",3="0A",12="996199s"
```

This command outputs all line sensor values in one line. A list of all fields (according to the energy sensor table) is transferred as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>linesensor 1 "0,1,2,3,12" show
>linesensor 1 1 show
```

These variants give the sensor values of the field list or of a sensor at Line-In 1.

For devices with Overvoltage Protection, the "linesensor all" command also outputs the state of the protection ("OVP=x"). A "1" means ok, a "0" a failure of the protection.

c) Port Sensors

```
>portsensor all "0,1,2,3,12" show
P=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
P=2,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="996199s"
...
P=12,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

This command outputs all port sensor values in one line. A list of all fields (according to the energy sensor table) is passed as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>portsensor 2 "0,1,2,3,12" show
>portsensor 2 1 show
```

These variants give the sensor values of the field list or a sensor to at Outlet Port 2.

d) Displaying Port Relays

```
>port all state 1 show P1=ON, P2=OFF, P3=ON, P4=OFF, P5=OFF, P6=OFF, P7=OFF, P8=ON
```

The command "port all state {MODE0=0|MODE1=1|MODE2=2} show" returns the switching state of all relays in 3 possible formats.

e) Switching Port Relays

```
#port all state set "1,2,12" 1
OK.
```


The command syntax "port all state set "{port_list}" {OFF=0|ON=1}" sets a list of ports to ON=1 or OFF=0.

4.8.1 SSH


The device supports SSH-2 connections with either public key authentication or user name and password. The "login" must be enabled for SSH. Users and passwords can be stored locally or retrieved via a radius server. If you want to use SSH in a terminal, Activate echo should be enabled.

Public Keys

RSA and ECDSA public keys are accepted.

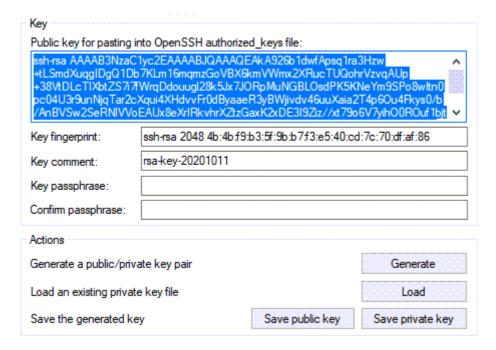

 Generated keys can be copied directly from e.g. putty gen,



and inserted into the Configuation - Console input field. Public keys are accepted in SSH2 or OpenSSH format.

4.8.2 Console Cmd 8314

Command	Description	Note
logout	go to login prompt when enabled	2

66

quit	quits telnet session - nothing in serial console	2
pack	back one cmd level	2
nelp	show all cmds from this level show all cmds	2
nelp all	Show all chius	
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	shows if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	shows timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show clock manual set "{hh:mm:ss yyyy-mm-dd}"	shows if dst is enabled sets time and date manually	
clock show	shows actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set		
{dns name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	shows ntp server name	
console	enters cmd group "console"	
console version	shows unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	shows if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	shows telnet port	
console telnet raw set {OFF=0 ON=1} console telnet raw show	sets raw mode (disables editing) on/off shows if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show	shows if echo enabled	
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off	
console telnet activeneg show	shows if active negotiation enabled	
console telnet login set (OFF=0 ON=1)	enables login on/off	
console telnet login show	shows if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	shows if local login enabled	
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
console telnet login radius show console telnet login delay set {OFF=0 ON=1}	shows if RADIUS login enabled enables delay (after 3 login fails) on/off	
console telnet login delay show	shows if login delay enabled	
console telnet pushmsgs config set {OFF=0		
ON=1}	enables persistent push msgs	
console telnet pushmsgs config show	shows if persistent push msgs are enabled	
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console telnet pushmsgs show	shows if temporary push msgs are enabled	
console telnet user set "{username}"	sets login user name	
console telnet user show console telnet passwd set "{passwd}"	shows login user name sets login password	
console telnet passwd set "{passwd}"	sets login hashed password	
console ssh enabled set {OFF=0 ON=1}	enables SSH	
console ssh enabled show	shows if SSH enabled	
	sets SSH port	
console ssh port show	shows SSH port	
console ssh echo set {OFF=0 ON=1}	enables echo on/off	
	shows if echo enabled	
	enables persistent push msgs	
console ssh pushmaga cot (OFF-0ION-1)	shows if persistent push msgs are enabled	
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console ssh pushmsgs show console ssh public hash set "{passwd}"	shows if temporary push msgs are enabled sets hash of SSH public key	
console ssh public hash show	shows hash of SSH public key	
OHOUR SOLI DUDIIC HASH SHOW		
console serial enabled set {OFF=0 ON=1}	enables serial console on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show	enables serial console on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial kvm show console serial utf8 set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo set {OFF=0 ON=1} console serial kvm set {OFF=0 ON=1} console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 show console serial utf8 show console serial login set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled enables login on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 show console serial login set {OFF=0 ON=1} console serial login set {OFF=0 ON=1} console serial login set serial login show	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled enables login on/off shows if login enabled	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw show console serial echo set {OFF=0 ON=1} console serial echo show console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 show console serial login set {OFF=0 ON=1} console serial login set {OFF=0 ON=1} console serial login set serial login show	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled enables login on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw set {OFF=0 ON=1} console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 show console serial login set {OFF=0 ON=1} console serial login set {OFF=0 ON=1} console serial login local set {OFF=0 ON=1} console serial login local show console serial login radius set {OFF=0 ON=1}	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled enables login on/off shows if login enabled enables local login on/off shows if local login enabled enables login for RADIUS on/off	
console serial enabled set {OFF=0 ON=1} console serial enabled show console serial raw set {OFF=0 ON=1} console serial raw set {OFF=0 ON=1} console serial echo set {OFF=0 ON=1} console serial echo show console serial kvm set {OFF=0 ON=1} console serial kvm show console serial utf8 set {OFF=0 ON=1} console serial utf8 show console serial login set {OFF=0 ON=1} console serial login sow console serial login local set {OFF=0 ON=1} console serial login local set {OFF=0 ON=1} console serial login radius show	enables serial console on/off shows if serial console enabled sets raw mode (disables editing) on/off shows if raw mode enabled enables echo on/off shows if echo enabled enables binary KVM cmds on serial port on/off shows if binary KVM cmds enabled enables UTF8 support shows if UTF8 enabled enables login on/off shows if login enabled enables local login on/off shows if local login enabled	

console serial pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console serial pushmsgs config show	shows if persistent push msgs are enabled	
console serial pushmaga show	enables temporary push mags are enabled	
console serial pushmsgs show console serial user set "{username}"	shows if temporary push msgs are enabled sets login user name	
console serial user show	shows login user name	
console serial passwd set "{passwd}" console serial passwd hash set "{passwd}"	sets login password sets login hashed password	
	· ·	
email email enabled set {OFF=0 ON=1}	enters cmd group "email" enables email on/off	
email enabled show	shows if email is enabled	
email sender set "{email_addr}"	sets email sender address	
email sender show email recipient set "{email addr}"	shows email sender address sets email recipient address	
email recipient show	shows email recipient address	
email server set "{dns_name}" email server show	sets email SMTP server address shows email SMTP server address	
email port set {ip_port}	sets email SMTP port	
email port show email security set {NONE=0 STARTTLS=1	shows email SMTP port	
SSL=2}	sets SMTP connection security	
email security show	shows SMTP connection security	
email auth set {NONE=0 PLAIN=1 LOGIN=2} email auth show	sets email authentication show email authentication	
email user set "{username}"	sets SMTP username	
email user show email passwd set "{passwd}"	shows SMTP username sets SMTP password	
email passwd hash set "{passwd}"	sets crypted SMTP password	
email testmail	send test email	
ethernet	enters cmd group "ethernet"	
ethernet mac show	shows MAC address shows ethernet link state	
ethernet link show ethernet phyprefer set {10MBIT_HD=0		
10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3}	sets preferred speed for PHY Auto Negotiation	
ethernet phyprefer show	shows preferred speed for PHY Auto Negotiation	
extsensor	enters cmd group "extsensor"	
extsensor all show	shows all values from connected external sensors	
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show		6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set	shows all values from connected external sensors shows all plugged sensors and fields	6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value	
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label	6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor	6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor	6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off	6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled 2 enables different event types shows what event types are enabled sets maximum value for sensor	6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=:,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} maxval show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled	6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} maxval show extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor	6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled 2 enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor	6 6 6 6 6 6 6
extsensor all show extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=:,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} maxval show extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor	6 6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor sets hysterese value for sensor	6 6 6 6 6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=: ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor	6 6 6 6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor sets hysterese value for sensor	6 6 6 6 6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3} extsensor {port_num} {sen_type} {sen_field}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor sets hysterese value for sensor shows hysterese value for sensor sets publish mode	6 6 6 6 6 6 6 6 6
extsensor all show extsensor all show extsensor {port_num} {sen_field} value show extsensor {port_num} {sen_type} label set "{name}" extsensor {port_num} {sen_type} label show extsensor {port_num} {sen_type} label show extsensor {port_num} type show extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1} extsensor {port_num} {sen_type} {sen_field} events show extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPEF=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}" extsensor {port_num} {sen_type} {sen_field} events type show extsensor {port_num} {sen_type} {sen_field} maxval set {num} extsensor {port_num} {sen_type} {sen_field} minval set {num} extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} minval show extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst set {num} extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} hyst show extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	shows all values from connected external sensors shows all plugged sensors and fields shows sensor value sets sensor name to label shows label of sensor shows type of sensor enables sensor events on/off shows if sensor events are enabled 2 enables different event types shows what event types are enabled sets maximum value for sensor shows maximum value for sensor sets minimum value for sensor shows minimum value for sensor shows minimum value for sensor sets hysterese value for sensor shows hysterese value for sensor	6 6 6 6 6 6 6 6 6

publish mqtt retain set {OFF=0 ON=1} extsensor {port num} {sen type} {sen field}		
publish mqtt retain show	shows if mqtt retain set	
extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs}	sets publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish timer show	shows publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish delta set {float}	sets publish delta value	
extsensor {port_num} {sen_type} {sen_field} publish delta show	shows publish delta value	
extsensor {port_num} {sen_type} {sen_field}		
{BELOWMÏN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port show	shows Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2	shows Port state for Power Port Switching actions	6
BELOWMAX=3} state show extsensor period set {24H=0 12H=1 2H=2 1H=3 30MIN=4}	sets sensor Min/Max measurement period	
extsensor period show	shows sensor Min/Max measurement period	
http	enters and group "http"	
http http server set {HTTP_BOTH=0 HTTPS_ONLY=1	enters cmd group "http"	
HTTP_ONLY=22 HTTPS_REDIR=3}	'sets accepted connection types	
http server show http port set {ip_port}	shows accepted connection types sets http port	
http port set {ip_port}	shows http port	
http portssl set {ip_port}	sets https port	
http portssl show	shows https port	
http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3}	restricts TLS mode	
http tls mode show	shows TLS mode restriction	
http ajax enabled set {OFF=0 ON=1}	enables ajax autorefresh on/off	
http ajax enabled show http passwd enabled set {OFF=0 ON=1}	shows if ajax autorefresh enabled enables http password on/off	
http passwd enabled show	shows if http password enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	shows if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show http passwd user set "{passwd}"	shows if RADIUS login enabled	
TILLD DASSWO USEL SEL {DASSWO}		
http nacewd admin cet "Inacewd"	sets http user password	
http passwd admin set "{passwd}"	sets http admin password	
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}"		
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}"	sets http admin password sets hashed http user password sets hashed http admin password	
http passwd admin set "{passwd}" http passwd hash user set "{passwd}"	sets http admin password sets hashed http user password	
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname	3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address	
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address	3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask	3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask	
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address show ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask	3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask set "{ip_address}" ip4 gateway set "{ip_address}" ip4 gateway show ip4 gateway show ip4 dns set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 pateway address shows IPv4 gateway address sets IPv4 DNS server address	3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 gateway show ip4 dns set "{ip_address}" ip4 dns set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 pateway address shows IPv4 gateway address sets IPv4 DNS server address shows IPv4 DNS server address	3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask set "{ip_address}" ip4 gateway set "{ip_address}" ip4 gateway show ip4 gateway show ip4 dns set "{ip_address}"	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 pateway address shows IPv4 gateway address sets IPv4 DNS server address	3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway show ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address shows IPv4 DNS server address shows IPv4 DHCP on/off shows IPv4 DHCP state	3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address shows IPv4 DNCP on/off shows IPv4 DHCP state enters cmd group "ip6"	3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled set {OFF=0 ON=1}	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address sets IPv4 DNCP on/off shows IPv4 DHCP on/off shows IPv4 DHCP state enters cmd group "ip6" enables IPv6 on/off	3 3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address shows IPv4 DNCP on/off shows IPv4 DHCP state enters cmd group "ip6"	3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6 ip6 enabled set {OFF=0 ON=1} ip6 routadv enabled show ip6 routadv enabled show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address shows IPv4 DNS server address enables IPv4 DHCP on/off shows IPv4 DHCP state	3 3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask set "{ip_address}" ip4 gateway set "{ip_address}" ip4 gateway set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip6 enabled set {OFF=0 ON=1} ip6 enabled show ip6 routadv enabled show ip6 routadv enabled show ip6 foutadv enabled set {OFF=0 ON=1}	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 gateway address sets IPv4 DNS server address sets IPv4 DNS server address shows IPv4 DHCP on/off shows IPv4 DHCP state enters cmd group "ip6" enables IPv6 on/off shows if IPv6 is enabled enables IPv6 router advertisement shows IPv6 router advertisement state enables IPv6 TPV6 ON/off	3 3 3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway show ip4 gateway show ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6 ip6 enabled show ip6 routadv enabled set {OFF=0 ON=1} ip6 routadv enabled set {OFF=0 ON=1} ip6 foutadv enabled show ip6 dhcp enabled set {OFF=0 ON=1}	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 pateway address sets IPv4 gateway address sets IPv4 DNS server address shows IPv4 DNS server address enables IPv4 DHCP on/off shows IPv4 DHCP state enters cmd group "ip6" enables IPv6 on/off shows if IPv6 is enabled enables IPv6 router advertisement shows IPv6 router advertisement state enables IPv6 DHCP on/off shows if IPv6 DHCP on/off shows if IPv6 DHCP on/off	3 3 3 3 3
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 address show ip4 netmask set "{ip_address}" ip4 netmask set "{ip_address}" ip4 gateway set "{ip_address}" ip4 gateway show ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6 ip6 enabled show ip6 routadv enabled set {OFF=0 ON=1} ip6 routadv enabled set {OFF=0 ON=1} ip6 dhcp enabled show	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 netmask shows IPv4 qateway address sets IPv4 DNS server address sets IPv4 DNS server address enables IPv4 DHCP on/off shows IPv4 DHCP state enters cmd group "ip6" enables IPv6 on/off shows if IPv6 is enabled enables IPv6 router advertisement shows IPv6 router advertisement state enables IPv6 DHCP on/off shows if IPv6 DHCP is enabled	3 3 3 3 3 3 4
http passwd admin set "{passwd}" http passwd hash user set "{passwd}" http passwd hash admin set "{passwd}" ip4 ip4 hostname set "{name}" ip4 hostname show ip4 address set "{ip_address}" ip4 netmask set "{ip_address}" ip4 netmask show ip4 gateway show ip4 gateway show ip4 dns set "{ip_address}" ip4 dns set "{ip_address}" ip4 dns show ip4 dhcp enabled set {OFF=0 ON=1} ip4 dhcp enabled show ip6 ip6 enabled show ip6 routadv enabled set {OFF=0 ON=1} ip6 routadv enabled set {OFF=0 ON=1} ip6 foutadv enabled show ip6 dhcp enabled set {OFF=0 ON=1}	sets http admin password sets hashed http user password sets hashed http admin password enters cmd group "ip4" sets device hostname shows device hostname sets IPv4 address shows IPv4 address sets IPv4 netmask shows IPv4 pateway address sets IPv4 gateway address sets IPv4 DNS server address shows IPv4 DNS server address enables IPv4 DHCP on/off shows IPv4 DHCP state enters cmd group "ip6" enables IPv6 on/off shows if IPv6 is enabled enables IPv6 router advertisement shows IPv6 router advertisement state enables IPv6 DHCP on/off shows if IPv6 DHCP on/off shows if IPv6 DHCP on/off	3 3 3 3 3

		_
ip6 manual enabled show ip6 manual address {14} set "{ip_address}"	shows if manual IPv6 addresses are enabled sets manual IPv6 address	3
ip6 manual address {14} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}" ip6 manual gateway show	sets manual IPv6 gateway address shows manual IPv6 gateway address	3
ip6 manual dns {12} set "{ip_address}"	sets manual IPv6 DNS server address	J
ip6 manual dns {12} show	shows manual IPv6 DNS server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show ipacl enabled set {OFF=0 ON=1}	shows if ICMP ping enabled enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter {ipacl_num} set "{dns_name}" ipacl filter {ipacl_num} show	sets IP filter {ipacl_num} shows IP filter {ipacl_num}	
· · · · · · · · · · · · · · · · · · ·		
linesensor	enters cmd group "linesensor" shows energy sensors according field list of all line	_
linesensor all {field_list} show	sensors	5
linesensor {line_num} {field_list} show	shows energy sensors according field list of one line sensor	5
linesensor {line_num} {energy_sensor} value show		5
linesensor {line_num} ovp show linesensor {line_num} counter reset	show state of Overvoltage Protection resets energy metering counter	
linesensor {line_num} label set "{name}"	sets line meter to label	
linesensor (line_num) (apartus apartus	shows label of line meter	
linesensor {line_num} {energy_sensor} events set {OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events show	shows if events are enabled	
linesensor {line_num} {energy_sensor} events		
type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2	enables different event types	
,ÈVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5}"	eriables unferent event types	
linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
linesensor {line_num} {energy_sensor} maxval set {float}	sets maximum value for line meter	
linesensor {line_num} {energy_sensor} maxval	shows maximum value for line meter	
show linesensor {line_num} {energy_sensor} minval set	sets minimum value for line meter	
{float} linesensor {line_num} {energy_sensor} minval	shows minimum value for line meter	
show linesensor {line num} {energy sensor} hyst set		
{float}	sets hysterese value for line meter	
linesensor {line_num} {energy_sensor} hyst show linesensor {line_num} {energy_sensor} publish	snows nysterese value for line meter	
mode set (NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish mode show	shows publish mode	
linesensor {line_num} {energy_sensor} publish	sets mgtt retain	
mqtt retain set {OFF=0 ON=1} linesensor {line num} {energy sensor} publish	·	
mqtt retain show linesensor {line_num} {energy_sensor} publish	shows if mqtt retain set	
timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	shows publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish	shows publish delta value	
delta show linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2	sets Port for Power Port Switching actions	
BELOWMAX=3} port set {port_num} linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2	shows Port for Power Port Switching actions	
BELOWMAX=3} port show linesensor {line_num} {energy_sensor}		
{BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2	shows Port state for Power Port Switching actions	

BELOWMAX=3} state show nesensor {line_num} events set {OFF=0 ON=1}	LEGACY - enables events on/off	L
nesensor {line_num} events show	LEGACY - shows if events are enabled	Ē
nesensor {line_num} events type set		
{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2		
EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER :5,EVT DISPLAY=6,EVT CONSOLE=7,EVT M	LEGACY - enables different event types	L
DISPLAT-0,EVT_CONSOLE-7,EVT_W QTT=8}"		
nesensor {line num} events type show	LEGACY - shows what event types are enabled	L
nesensor {line_num} maxval set {float}	LEGACY - sets maximum value for line meter	L
nesensor {line_num} maxval show	LEGACY - shows maximum value for line meter	L
nesensor {line_num} minval set {float}	LEGACY - sets minimum value for line meter	Ļ
nesensor (line_num) minval show	LEGACY - shows minimum value for line meter LEGACY - sets hysterese value for line meter	L
nesensor {line_num} hyst set {float} nesensor {line_num} hyst show	LEGACY - sets hysterese value for line meter	Ŀ
nesensor {line_num} {BELOWMIN=0		
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - sets Port for Power Port Switching actions	L
ort set {port_num}	actions	
nesensor {line_num} {BELOWMIN=0	LEGACY - shows Port for Power Port Switching	
ABOVEMIN=1 ĀBOVEMAX=2 BELOWMAX=3} ort show	actions	L
nesensor {line_num} {BELOWMIN=0		
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - sets Port state for Power Port	L
state set {OFF=0 ON=1 DISABLED=2}	Switching actions	
nesensor {line_num} {BELOWMIN=0	LEGACY - shows Port state for Power Port	
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	Switching actions	L
tate show		
nodbus	enters cmd group "modbus"	
nodbus enabled set <off=0 on="1"></off=0>	enables Modbus TCP support	
nodbus enabled show	shows if Modbus is enabled	
nodbus port set <ip_port></ip_port>	sets Modbus TCP port	
nodbus port show	shows Modbus TCP port	
	and and aread areas in the side!	
nqtt nqtt {broker_idx} enabled set {OFF=0 ON=1}	enters cmd group "mqtt" enable mqtt	
nqtt {broker_idx} enabled set {Of f =0 ON=1}	shows if mgtt enabled	
ngtt {broker_idx} endsled shew ngtt {broker_idx} server set "{dns_name}"	sets broker name	
ngtt {broker idx} server show	shows broker name	
nqtt {broker_idx} tls enabled set {OFF=0 ON=1}	enable TLS	
nqtt {broker_idx} tls enabled show	shows if TLS enabled	
nqtt {broker_idx} port set {ip_port}	set broker TCP/IP port	
nqtt {broker_idx} port show	shows broker TCP/IP port	
nqtt {broker_idx} user set "{username}" nqtt {broker idx} user show	sets username shows username	
ngtt {broker_idx} user snow ngtt {broker_idx} passwd set "{passwd}"	sets password	
nqtt {broker_idx} passwd set '{passwd}"	sets hashed passwd	
nqtt {broker idx} client set "{name}"	sets client name	
nqtt {broker_idx} client show	shows client name	
nqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level	
nqtt {broker_idx} qos show	shows QoS level	
nqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time	
nqtt {broker_idx} keepalive show nqtt {broker_idx} topic set "{name}"	shows keep-alive time sets topic prefix	
ngtt {broker_idx} topic set_{flame} ngtt {broker_idx} topic show	shwos topic prefix	
ngtt {broker_idx} topic show ngtt {broker_idx} console enabled set {OFF=0		
DN=1}	permit console cmds	
nqtt {broker_idx} console enabled show	shows if console cmds allowed	
nqtt {broker_idx} device data timer set	sets telemetry interval	
num_secs}		
nqtt {broker_idx} device data timer show	shows telemetry interval	
port	enters cmd group "port"	
ort {port_num} state set {OFF=0 ON=1}	sets port to new state	
ort {port_num} state show	shows port state	
oort all state set "{port_list}" {OFF=0 ON=1}	sets several ports in one cmd - e.g. port all state	
	set "1,3,5" 1	
ort all state {MODE0=0 MODE1=1 MODE2=2}	shows all port states in 3 different view modes	4
	,	
show	switch all ports on/off forward or reverse	
ort all set {OFF=0 ON=1 OFF_REV=2	Switch all ports of foll follward of reverse	
oort all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	•	
oort all set {OFF=0 ON=1 OFF_REV=2 DN_REV=3} oort restart all set {REINIT=0	reinit coldstart sequence (optional first all off)	
oort all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	•	
oort all set {OFF=0 ON=1 OFF_REV=2 DN_REV=3} oort restart all set {REINIT=0 DFF_REV_REINIT=1,OFF_REINIT=2}	reinit coldstart sequence (optional first all off)	

port {port_num} batch cancel	cancels batch mode
port {port_num} label set "{name}" port {port_num} label show	sets port label name shows port label name
port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2}	sets port coldstart initialization
port {port_num} initstate coldstart show	shows port coldstart initialization
port {port_num} initstate delay set {num} port {port_num} initstate delay show	sets port init delay shows port init delay
port {port_num} initiate delay show port {port_num} repowerdelay set {num}	sets port repower delay
port {port_num} repowerdelay show	shows port repower delay
port {port_num} resettime set {num}	sets port reset duration
port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0	shows port reset duration sets port watchdog to on/off
ON=1} port {port num} watchdog enabled show	shows port watchdog state
port (port_num) watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3}	sets port watchdog mode
port {port_num} watchdog mode show	shows port watchdog mode
<pre>port {port_num} watchdog type set {WD_ICMP=0 WD TCP=1}</pre>	sets port watchdog type
port {port_num} watchdog type show	shows port watchdog type
port {port_num} watchdog link down set {OFF=0 ON=1}	sets if watchdog active when eth link down
port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}"	shows if watchdog active when eth link down sets port watchdog host target
port {port_num} watchdog host show	shows port watchdog host target
port {port_num} watchdog port set {ip_port}	sets port watchdog TCP port
<pre>port {port_num} watchdog port show port {port_num} watchdog pinginterval set {num}</pre>	shows port watchdog TCP port sets port watchdog ping interval
port {port_num} watchdog pinginterval set {num} port {port_num} watchdog pinginterval show	shows port watchdog ping interval
port {port_num} watchdog pingretries set {num}	sets port watchdog ping retries
port {port_num} watchdog pingretries show	shows port watchdog ping retries
port {port_num} watchdog retrybooting set {OFF=0 ON=1}	sets port watchdog retry booting to on/off
port {port_num} watchdog retrybooting show	shows port watchdog retry booting state
port {port_num} watchdog bootretries set {num}	sets port watchdog retry boot timeout
port {port_num} watchdog bootretries show	hows port watchdog retry boot timeout
radius	enters cmd group "radius"
radius {PRIMARY=0 SECONDARY=1} enabled set <off=0 on="1"></off=0>	enables radius client
radius {PRIMARY=0 SECONDARY=1} enabled show	show if radius client enabled
radius {PRIMARY=0 SECONDARY=1} server set " <dns_name>"</dns_name>	sets radius server address
radius {PRIMARY=0 SECONDARY=1} server	
show	shows radius server address
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}"	shows radius server address sets radius server shared secret
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}"	
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth	sets radius server shared secret
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}"	sets radius server shared secret sets radius server crypted shared secret
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth	sets radius server shared secret sets radius server crypted shared secret sets server request timeout
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth set <off=0 on="1"></off=0></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth show</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth show radius default timeout set {num_secs}</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute)
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port}</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth set <off=0 on="1"> radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port} snmp port show</off=0></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port shows SNMP UDP port
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth set <off=0 on="1"> radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port} snmp port show snmp snmpget enabled set {OFF=0 ON=1}</off=0></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port shows SNMP UDP port enables SNMP GET cmds on/off
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth set <off=0 on="1"> radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port} snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show</off=0></off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port} snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled show snmp snmpset enabled show snmp snmpset enabled show snmp snmpset enabled show</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port shows SNMP UDP port enables SNMP GET cmds on/off
show radius {PRIMARY=0 SECONDARY=1} password set "{passwd}" radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}" radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth timeout show radius {PRIMARY=0 SECONDARY=1} retries set {099} radius {PRIMARY=0 SECONDARY=1} retries show radius chap enabled set <off=0 on="1"> radius chap enabled show radius message auth show radius default timeout set {num_secs} radius default timeout show snmp snmp port set {ip_port} snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled set {OFF=0 ON=1}</off=0>	sets radius server shared secret sets radius server crypted shared secret sets server request timeout shows server request timeout sets server number of retries shows server number of retries enables CHAP shows if CHAP is enabled enables request message authentication shows if request message authentication is enabled sets default session timeout (when not returned as Session-Timout Attribute) shows default session timeout enters cmd group "snmp" sets SNMP UDP port shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off

snmp snmpv2 public set "{text}"	enables SNMP v3 on/off
snmp snmpv2 public show	show if SNMP v3 isenabled
snmp snmpv2 private set "{text}"	sets SNMP v2 public cummnity
snmp snmpv2 private show	shows SNMP v2 public community
snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	sets sysLocation/sysName/sysContact
snmp system {CONTACT=0 NAME=1 LOCATION=2} show	gets sysLocation/sysName/sysContact
snmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community
snmp snmpv3 enabled show	shows SNMP v2 private community
snmp snmpv3 username set "{text}"	sets SNMP v3 username
snmp snmpv3 username show	shows SNMP v3 username
snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5}	sets SNMP v3 authentication
snmp snmpv3 authalg show	show SNMP v3 authentication algorithm
snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm
snmp snmpv3 authpasswd set "{passwd}"	sets SNMP v3 authentication password
snmp snmpv3 privpasswd set "{passwd}"	sets SNMP v3 privacy password
snmp snmpv3 authpasswd hash set "{passwd}"	sets SNMP v3 authentication hashed password
snmp snmpv3 privpasswd hash set "{passwd}" snmp trap type set {NONE=0 V1=1 V2=2 V3=3}	sets SNMP v3 privacy hashed password sets type of SNMP traps
snmp trap type set {NONE=U V I= I V2=2 V3=3} snmp trap type show	show SNMP trap type
	sets address and port of SNMP trap receiver
snmp trap receiver {trap_num} set "{dns_name}"	{trap num}
	show address and port of SNMP trap receiver
snmp trap receiver {trap_num} show	{trap_num}
syslog	enters cmd group "syslog"
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off
syslog enabled show	show if syslog enabled
syslog server set "{dns_name}"	sets address of syslog server
syslog server show	shows address of syslog server
system	enters cmd group "system"
system restart	restarts device
system fabsettings	restore fab settings and restart device
system bootloader	enters bootloader mode
system flushdns	flush DNS cache
system uptime	number of seconds the device is running shows device name
system name show system version show	shows actual firmware version
system display {disp_num} default extsensor	
{port_num} {sen_type} set {sen_field}	shows external sensor
system display {disp_num} default linesensor	
{line_num} set {sen_field}	shows energy line sensor
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	shows other contents
system display {disp_num} default show	shows default setting for display
system display default hash set "{data}"	sets hashed display setting
system display default hash show system panel enabled set {OFF=0 ON=1}	shows hashed display setting blocks panel buttons when not enabled
system panel enabled show	shows if panel buttons are enabled
system panel port all set {OFF=0 ON=1}	enable siwtch all relays from panel buttons
	shows if siwtch all relays from panel buttons
system panel port all show	enabled
timer	enters cmd group "timer"
timer enabled set {OFF=0 ON=1}	enables timer functions
timer enabled show	shows if timer a enabled
timer syslog facility set {023}	sets facility level for timer syslog
timer syslog facility show	shows facility level for timer syslog
timer syslog verbose set {07}	sets verbose level for timer syslog
timer syslog verbose show	shows verbose level for timer syslog
timer {rule_num} enabled set {OFF=0 ON=1}	enables rule
timer {rule_num} enabled show	shows if rule is enabled sets name of rule
	SEIS HAITIE OF TUIE
	shows name of rule
timer {rule_num} name set "{name}" timer {rule_num} name show timer {rule_num} {FROM=0 INTI =1} set "{vvvv-	shows name of rule
	shows name of rule sets date range of rule
timer {rule_num} name show timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-	
timer {rule_num} name show timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy- mm-dd}" timer {rule_num} {FROM=0 UNTIL=1} show timer {rule_num} trigger jitter set {065535}	sets date range of rule shows date range of rule sets jitter for rule
timer {rule_num} name show timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy- mm-dd}" timer {rule_num} {FROM=0 UNTIL=1} show timer {rule_num} trigger jitter set {065535} timer {rule_num} trigger jitter show	sets date range of rule shows date range of rule sets jitter for rule show jitter of rule
timer {rule_num} name show timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy- mm-dd}" timer {rule_num} {FROM=0 UNTIL=1} show timer {rule_num} trigger jitter set {065535}	sets date range of rule shows date range of rule sets jitter for rule

timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	shows time date list
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets switch or cli cmd
timer {rule_num} action mode show	shows if switch or cli cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for switch cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	shows port list for switch cmd
timer {rule_num} action delay set {065535}	delay between cmds
timer {rule_num} action delay show	shows delay between cmds
timer {rule_num} action console set "{cmd}"	sets cmd string
timer {rule_num} action console show	shows cmd string
timer {rule_num} action hash set "{data}"	sets action binary form
timer {rule_num} action hash show	shows action binary form
timer {rule_num} delete	delete one timer
timer delete all	delete all timer
vt100	enters cmd group "vt100"
vt100 echo set {OFF=0 ON=1}	sets console echo state
vt100 echo show	shows console echo state
vt100 numeric set {OFF=0 ON=1}	sets numeric mode
vt100 numeric show	shows numeric mode state
vt100 reset	resets terminal

Notes

- 1. Legacy The command has been replaced by a newer version
- 2. Command can be entered on any level
- 3. The output may show 2 lines the 1st line shows the actual state, the 2nd line the status after reboot
- 4. The output may show several lines
- 5. Please see the **Energy Sensor Table** for the right energy index
- 6. Please see the **External Type and External Sensor Field Tables** for the correct sensor index

Energy Sensor Table "{energy_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	Α
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	S
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh
15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	Α



pependent on the device model Residual Current may not be supported

External Sensor Type Table "{sen_type}"

Constants $\{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2\}$ "

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206

External Sensor Field Table "{sen_field}"

Index	Description	Unit
0	Temperature	ပိ
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

4.8.3 **Console Cmd 8316**

Command	Description	Note
logout	go to login prompt when enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	shows if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	shows timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show	shows if dst is enabled	
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually	
clock show	shows actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	shows ntp server name	
console	enters cmd group "console"	
console version	shows unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	shows if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	shows telnet port	
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	
console telnet raw show	shows if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show	shows if echo enabled	
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off	
console telnet activeneg show	shows if active negotiation enabled	
console telnet login set {OFF=0 ON=1}	enables login on/off	
console telnet login show	shows if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	shows if local login enabled	
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	

console telnet login radius show	shows if RADIUS login enabled
console telnet login delay set {OFF=0 ON=1} console telnet login delay show	enables delay (after 3 login fails) on/off shows if login delay enabled
console telliet logili delay show	,
ON=1}	enables persistent push msgs
console telnet pushmsgs config show	shows if persistent push msgs are enabled
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs
console telnet pushmsgs show console telnet user set "{username}"	shows if temporary push msgs are enabled sets login user name
console telnet user show	shows login user name
console telnet passwd set "{passwd}"	sets login password
console telnet passwd hash set "{passwd}"	sets login hashed password
console ssh enabled set {OFF=0 ON=1}	enables SSH
console ssh enabled show console ssh port set {ip_port}	shows if SSH enabled sets SSH port
console ssh port show	shows SSH port
console ssh echo set {OFF=0 ON=1}	enables echo on/off
console ssh echo show	shows if echo enabled
console ssh pushmsgs config set {OFF=0 ON=1}	enables persistent push mags
console ssh pushmsgs config show console ssh pushmsgs set {OFF=0 ON=1}	shows if persistent push msgs are enabled enables temporary push msgs
console ssh pushmsgs show	shows if temporary push msgs are enabled
console ssh public hash set "{passwd}"	sets hash of SSH public key
console ssh public hash show	shows hash of SSH public key
console serial enabled set {OFF=0 ON=1}	enables serial console on/off
console serial enabled show	shows if serial console enabled sets raw mode (disables editing) on/off
console serial raw set {OFF=0 ON=1} console serial raw show	shows if raw mode enabled
console serial echo set {OFF=0 ON=1}	enables echo on/off
console serial echo show	shows if echo enabled
console serial kvm set {OFF=0 ON=1}	enables binary KVM cmds on serial port on/off
console serial kvm show	shows if binary KVM cmds enabled
console serial utf8 set {OFF=0 ON=1} console serial utf8 show	enables UTF8 support shows if UTF8 enabled
console serial login set {OFF=0 ON=1}	enables login on/off
console serial login show	shows if login enabled
console serial login local set {OFF=0 ON=1}	enables local login on/off
console serial login local show	shows if local login enabled
console serial login radius set {OFF=0 ON=1}	enables login for RADIUS on/off
console serial login radius show console serial login delay set {OFF=0 ON=1}	shows if RADIUS login enabled enables delay (after 3 login fails) on/off
console serial login delay show	shows if login delay enabled
console serial pushmsgs config set {OFF=0	enables persistent push msgs
ON=1}	<u> </u>
console serial pushmsgs config show	shows if persistent push msgs are enabled
console serial pushmsgs set {OFF=0 ON=1} console serial pushmsgs show	enables temporary push msgs shows if temporary push msgs are enabled
console serial user set "{username}"	sets login user name
console serial user show	shows login user name
console serial passwd set "{passwd}"	sets login password
console serial passwd hash set "{passwd}"	sets login hashed password
amail .	enters and group "email"
email email enabled set {OFF=0 ON=1}	enters cmd group "email" enables email on/off
email enabled show	shows if email is enabled
email sender set "{email addr}"	sets email sender address
email sender show	shows email sender address
email recipient set "{email_addr}"	sets email recipient address
email recipient show	shows email recipient address
email server set "{dns_name}"	sets email SMTP server address shows email SMTP server address
email server show email port set {ip_port}	sets email SMTP port
email port set (ip_port)	shows email SMTP port
email security set {NONE=0 STARTTLS=1	sets SMTP connection security
SSL=2}	·
email security show	shows SMTP connection security
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication
email auth show email user set "{username}"	show email authentication sets SMTP username
email user show	shows SMTP username
email passwd set "{passwd}"	sets SMTP password
email passwd hash set "{passwd}"	sets crypted SMTP password
email testmail	send test email
ethernet	enters and group "ethornat"
ethernet ethernet mac show	enters cmd group "ethernet" shows MAC address

Expert Power Control 8316 © 2021 GUDE Systems GmbH

MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3} hernet phyprefer show	sets preferred speed for PHY Auto Negotiation shows preferred speed for PHY Auto Negotiation	
leffiet phypreter show	shows preferred speed for PHT Auto Negotiation	
tsensor	enters cmd group "extsensor"	
tsensor all show	shows all values from connected external sensors	
tsensor all show tsensor {port_num} {sen_field} value show	shows all plugged sensors and fields shows sensor value	6
tsensor {port_num} {sen_tipe} label set	Silows Selisor value	
name}"	sets sensor name to label	6
tsensor {port_num} {sen_type} label show	shows label of sensor	6
tsensor {port_num} type show	shows type of sensor	
tsensor {port_num} {sen_type} {sen_field} ents set {off=0 on=1}	enables sensor events on/off	6
tsensor {port_num} {sen_type} {sen_field} ents show	shows if sensor events are enabled	6
tsensor {port_num} {sen_type} {sen_field} ents type set		
EVT_\$YSLOG=0,EVT_\$NMP=1,EVT_EMAIL=2 VT_\$M\$=3,EVT_G\$MEMAIL=4,EVT_BEEPER i,EVT_DI\$PLAY=6,EVT_CONSOLE=7,EVT_M IT=8}"	enables different event types	6
tsensor {port_num} {sen_type} {sen_field} ents type show	shows what event types are enabled	6
tsensor {port_num} {sen_type} {sen_field} axval set {num}	sets maximum value for sensor	6
tsensor {port_num} {sen_type} {sen_field} axval show	shows maximum value for sensor	6
tsensor {port_num} {sen_type} {sen_field} inval set {num}	sets minimum value for sensor	6
tsensor {port_num} {sen_type} {sen_field} nval show	shows minimum value for sensor	6
tsensor {port_num} {sen_type} {sen_field} hyst t {num}	sets hysterese value for sensor	6
tsensor {port_num} {sen_type} {sen_field} hyst ow	shows hysterese value for sensor	6
tsensor {port_num} {sen_type} {sen_field} blish mode set {NONE=0 INTERVAL=1 ELTA=2 INTERV_DELTA=3}	sets publish mode	
tsensor {port_num} {sen_type} {sen_field} blish mode show	shows publish mode	
tsensor {port_num} {sen_type} {sen_field} blish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
tsensor {port_num} {sen_type} {sen_field} blish mqtt retain show	shows if mqtt retain set	
tsensor {port_num} {sen_type} {sen_field} blish timer set {num_secs}	sets publish time interval	
tsensor {port_num} {sen_type} {sen_field} blish timer show	shows publish time interval	
tsensor {port_num} {sen_type} {sen_field} blish delta set {float}	sets publish delta value	
tsensor {port_num} {sen_type} {sen_field} blish delta show	shows publish delta value	
tsensor {port_num} {sen_type} {sen_field} ELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 ELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	6
tsensor {port_num} {sen_type} {sen_field} ELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 ELOWMAX=3} port show	shows Port for Power Port Switching actions	6
tsensor {port_num} {sen_type} {sen_field} ELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 ELOWMAX=3} state set {OFF=0 ON=1 SABLED=2}	sets Port state for Power Port Switching actions	6
tsensor {port_num} {sen_type} {sen_field} ELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 ELOWMAX=3} state show	shows Port state for Power Port Switching actions	6
tsensor period set {24H=0 12H=1 2H=2 1H=3 MIN=4}	sets sensor Min/Max measurement period	
tsensor period show	shows sensor Min/Max measurement period	
tp	enters cmd group "http"	
rp server set {HTTP_BOTH=0 HTTPS_ONLY=1 FTP_ONLY=22 HTTPS_REDIR=3}		
	shows accepted connection types	
p server show	shows accepted connection types	
tp server show tp port set {ip_port}	sets http port	

http://www.nortool.chou.	aboug bittee part	
http portssl show http tls mode set {TLS12=0 TLS13_12=1	shows https port	
TLS13=2 TLS13_12_11=3}	restricts TLS mode	
http tls mode show	shows TLS mode restriction	
http ajax enabled set {OFF=0 ON=1}	enables ajax autorefresh on/off	
http ajax enabled show http passwd enabled set {OFF=0 ON=1}	shows if ajax autorefresh enabled enables http password on/off	
http passwd enabled show	shows if http password enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	shows if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show http passwd user set "{passwd}"	shows if RADIUS login enabled sets http user password	
http passwd admin set "{passwd}"	sets http admin password	
http passwd hash user set "{passwd}"	sets hashed http user password	
http passwd hash admin set "{passwd}"	sets hashed http admin password	
in/	enters and group "in4"	
ip4 ip4 hostname set "{name}"	enters cmd group "ip4" sets device hostname	
ip4 hostname show	shows device hostname	3
ip4 address set "{ip_address}"	sets IPv4 address	
ip4 address show	shows IPv4 address	3
ip4 netmask set "{ip_address}"	sets IPv4 netmask	2
ip4 netmask show ip4 gateway set "{ip_address}"	shows IPv4 netmask sets IPv4 gateway address	3
ip4 gateway show	shows IPv4 gateway address	3
ip4 dns set "{ip_address}"	sets IPv4 DNS server address	
ip4 dns show	shows IPv4 DNS server address	3
ip4 dhcp enabled set {OFF=0 ON=1}	enables IPv4 DHCP on/off	
ip4 dhcp enabled show	shows IPv4 DHCP state	3
ip6	enters cmd group "ip6"	
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	shows if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1}	enables IPv6 router advertisement	
ip6 routady enabled show	shows IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1} ip6 dhcp enabled show	enables IPv6 DHCP on/off shows if IPv6 DHCP is enabled	3
ip6 address show	show all IPv6 addresses	4
ip6 gateway show	show all IPv6 gateways	4
ip6 dns show	show all IPv6 DNS server	4
ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	2
ip6 manual enabled show ip6 manual address {14} set "{ip_address}"	shows if manual IPv6 addresses are enabled sets manual IPv6 address	3
ip6 manual address {14} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}"	sets manual IPv6 gateway address	
ip6 manual gateway show	shows manual IPv6 gateway address	3
ip6 manual dns {12} set "{ip_address}" ip6 manual dns {12} show	sets manual IPv6 DNS server address shows manual IPv6 DNS server address	3
ipo manuai uns {12} snow	Shows manual if vo Divo server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show ipacl filter {ipacl_num} set "{dns_name}"	shows if IP filter enabled sets IP filter {ipacl_num}	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
· · · · - ·	· - ,	
linesensor	enters cmd group "linesensor"	
linesensor all {field list} show	shows energy sensors according field list of all line	5
· - ·	sensors shows energy sensors according field list of one	
linesensor {line_num} {field_list} show	line sensor	5
linesensor {line_num} {energy_sensor} value sho		5
linesensor {line_num} ovp show	show state of Overvoltage Protection	
linesensor (line_num) counter reset	resets energy metering counter	
linesensor {line_num} label set "{name}" linesensor {line_num} label show	sets line meter to label shows label of line meter	
linesensor {line_num} {energy_sensor} events se	•	
{OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events	shows if events are enabled	
show	E.E.O. II OTORIO GIO ORGINO	
linesensor {line_num} {energy_sensor} events		
type set "{EVT SYSLOG=0,EVT SNMP=1,EVT EMAIL=	2 enables different event types	
,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPE		
=5}"		

linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
). linesensor {line_num} {energy_sensor} maxval set {float}	sets maximum value for line meter	
linesensor {line_num} {energy_sensor} maxval show	shows maximum value for line meter	
linesensor {line_num} {energy_sensor} minval set {float}	sets minimum value for line meter	
linesensor {line_num} {energy_sensor} minval show	shows minimum value for line meter	
linesensor {line_num} {energy_sensor} hyst set {float}	sets hysterese value for line meter	
linesensor {line_num} {energy_sensor} hyst show linesensor {line_num} {energy_sensor} publish	shows hysterese value for line meter	
mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish mode show	shows publish mode	
linesensor {line_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
linesensor {line_num} {energy_sensor} publish mqtt retain show	shows if mqtt retain set	
linesensor {line_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	shows publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish delta show	shows publish delta value	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port show	shows Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state show	shows Port state for Power Port Switching actions	
linesensor {line_num} events set {OFF=0 ON=1} linesensor {line_num} events show	LEGACY - enables events on/off LEGACY - shows if events are enabled	L
linesensor {line_num} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	2	L
linesensor {line_num} events type show linesensor {line_num} maxval set {float}	LEGACY - shows what event types are enabled LEGACY - sets maximum value for line meter	L
linesensor {line_num} maxval show	LEGACY - shows maximum value for line meter	L
linesensor {line_num} minval set {float} linesensor {line_num} minval show	LEGACY - sets minimum value for line meter LEGACY - shows minimum value for line meter	L
linesensor (line_num) hyst set (float) linesensor (line_num) hyst show	LEGACY - sets hysterese value for line meter LEGACY - shows hysterese value for line meter	L
linesensor (line_num) (BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3)	LEGACY - sets Port for Power Port Switching actions	L
port set {port_num} linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - shows Port for Power Port Switching actions	L
port show inesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - sets Port state for Power Port Switching actions	L
state set {OFF=0 ON=1 DISABLED=2} linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state show	LEGACY - shows Port state for Power Port Switching actions	L
modbus modbus enabled set <off=0 on="1"></off=0>	enters cmd group "modbus" enables Modbus TCP support	
modbus enabled set <ott=u on="1"> modbus enabled show</ott=u>	shows if Modbus is enabled	
modbus port set <ip_port></ip_port>	sets Modbus TCP port	
modbus port show	shows Modbus TCP port	
mqtt	enters cmd group "mqtt"	

mqtt {broker_idx} enabled set {OFF=0 ON=1}	enable mqtt
mqtt (broker_idx) enabled show	shows if mqtt enabled sets broker name
mqtt {broker_idx} server set "{dns_name}" mqtt {broker_idx} server show	shows broker name
mqtt {broker idx} tls enabled set {OFF=0 ON=1}	enable TLS
mqtt {broker_idx} tls enabled show	shows if TLS enabled
mqtt {broker_idx} port set {ip_port}	set broker TCP/IP port
mqtt {broker_idx} port show	shows broker TCP/IP port
mqtt {broker_idx} user set "{username}" mqtt {broker_idx} user show	sets username shows username
mqtt {broker_idx} dser snow mqtt {broker_idx} passwd set "{passwd}"	sets password
mqtt {broker idx} passwd hash set "{passwd}"	sets hashed passwd
mqtt {broker_idx} client set "{name}"	sets client name
mqtt {broker_idx} client show	shows client name
mqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level
mqtt {broker_idx} qos show mqtt {broker_idx} keepalive set {num_secs}	shows QoS level sets keep-alive time
mqtt {broker_idx} keepalive set {fidifi_sees}	shows keep-alive time
mqtt {broker idx} topic set "{name}"	sets topic prefix
mqtt {broker_idx} topic show	shwos topic prefix
mqtt {broker_idx} console enabled set {OFF=0	permit console cmds
ON=1} mqtt {broker idx} console enabled show	shows if console cmds allowed
mqtt {broker_idx} device data timer set	
{num_secs}	sets telemetry interval
mqtt {broker_idx} device data timer show	shows telemetry interval
port	enters cmd group "port"
port {port_num} state set {OFF=0 ON=1}	sets port to new state
port {port_num} state show	shows port state
port all state set "{port_list}" {OFF=0 ON=1}	sets several ports in one cmd - e.g. port all state
	set "1,3,5" 1
port all state {MODE0=0 MODE1=1 MODE2=2} show	shows all port states in 3 different view modes 4
port all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	switch all ports on/off forward or reverse
port restart all set {REINIT=0	reinit coldstart sequence (optional first all off)
OFF_REV_REINIT=1,OFF_REINIT=2} port {port num} reset	start reset sequence for port
· · · · · · · · · · · · · · · · · · ·	
port {port_num} toggle	toggles port
· · · · · · · · · · · · · · · · · · ·	
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel	toggles port starts batch mode for port cancels batch mode
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}"	toggles port starts batch mode for port cancels batch mode sets port label name
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show	toggles port starts batch mode for port cancels batch mode
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0	toggles port starts batch mode for port cancels batch mode sets port label name
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay show port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} initstate delay show port {port_num} repowerdelay set {num} port {port_num} repowerdelay show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay show port {port_num} resettime set {num}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} initstate delay show port {port_num} repowerdelay set {num} port {port_num} repowerdelay show port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} resettime show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration shows port reset duration
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set oldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay show port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0 ON=1}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port reset duration sets port watchdog to on/off
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog enabled show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration shows port reset duration
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled show port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 ON=1}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port reset duration sets port watchdog to on/off
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay show port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate coldstart show port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog mode show port {port_num} watchdog type set {WD_ICMP=0	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repeat duration sets port reset duration sets port watchdog to on/off shows port watchdog mode shows port watchdog mode
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog mode show port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repewer delay sets port reset duration shows port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode sets port watchdog type
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay show port {port_num} repowerdelay show port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog mode show port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration shows port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog type shows port watchdog type
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} linitstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay show port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repewer delay sets port reset duration shows port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode sets port watchdog type
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled show port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0 ON=1}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration shows port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog type shows port watchdog type
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog mode show port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization shows port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type shows port watchdog type shows port watchdog type sets if watchdog active when eth link down
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog host show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode sets port watchdog type shows port watchdog type sets if watchdog active when eth link down shows if watchdog host target shows port watchdog host target
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog host set {ip_port}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode sets port watchdog type shows port watchdog type sets if watchdog active when eth link down shows if watchdog host target sets port watchdog host target sets port watchdog TCP port
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay show port {port_num} repowerdelay show port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog link down set {OFF=0 PON=1} port {port_num} watchdog link down show port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port set {ip_port} port {port_num} watchdog port show	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type sets if watchdog active when eth link down sets port watchdog host target sets port watchdog host target sets port watchdog TCP port shows port watchdog TCP port
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay show port {port_num} repowerdelay show port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port set {ip_port} port {port_num} watchdog port set {	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type shows port watchdog type sets if watchdog active when eth link down sets port watchdog host target shows port watchdog TCP port shows port watchdog TCP port sets port watchdog ping interval
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime show port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port set {ip_port} port {port_num}	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type sets if watchdog active when eth link down sets port watchdog host target shows port watchdog TCP port sets port watchdog ping interval shows port watchdog ping interval
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port set {ip_port} port {port_num} watchdog port s	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type shows port watchdog type sets if watchdog active when eth link down sets port watchdog host target shows port watchdog TCP port shows port watchdog TCP port sets port watchdog ping interval
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label set "{name}" port {port_num} label show port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2} port {port_num} initstate delay set {num} port {port_num} initstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog enabled show port {port_num} watchdog mode set {OFF=0 ON=1} port {port_num} watchdog mode show port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port show port {port_num} watchdog port show port {port_num} watchdog port show port {port_num} watchdog pinginterval set {num} port {port_num} watchdog pinginterval	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay shows port repower delay sets port reset duration sets port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type shows port watchdog type sets if watchdog active when eth link down sets port watchdog host target shows port watchdog TCP port shows port watchdog TCP port sets port watchdog ping interval shows port watchdog ping interval sets port watchdog ping retries shows port watchdog ping retries
port {port_num} toggle port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1} port {port_num} batch cancel port {port_num} label set "{name}" port {port_num} label show port {port_num} label set "{name}" port {port_num} label set set {OFF=0 ON=1 REMEMBER=2} port {port_num} linitstate coldstart show port {port_num} linitstate delay set {num} port {port_num} repowerdelay set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} resettime set {num} port {port_num} watchdog enabled set {OFF=0 ON=1} port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3} port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1} port {port_num} watchdog type show port {port_num} watchdog link down set {OFF=0 ON=1} port {port_num} watchdog link down show port {port_num} watchdog host set "{dns_name}" port {port_num} watchdog port show port {port_num} watchdog port set {ip_port} port {port_num} watchdog port set {ip_port} port {port_num} watchdog pinginterval set {num} port {por	toggles port starts batch mode for port cancels batch mode sets port label name shows port label name sets port coldstart initialization shows port coldstart initialization sets port init delay shows port init delay sets port repower delay sets port repower delay sets port reset duration shows port reset duration sets port watchdog to on/off shows port watchdog state sets port watchdog mode shows port watchdog mode shows port watchdog type shows port watchdog type sets if watchdog active when eth link down shows if watchdog host target shows port watchdog host target shows port watchdog TCP port shows port watchdog ping interval shows port watchdog ping interval shows port watchdog ping retries

port {port_num} watchdog bootretries set {num} port {port_num} watchdog bootretries show	sets port watchdog retry boot timeout hows port watchdog retry boot timeout
port (port_nam) waterlady becausines onew	, i i
portsensor	enters cmd group "portsensor" shows energy sensors according field list of all
portsensor all {field_list} show	port sensors 5
portsensor {port_num} {field_list} show	shows energy sensors according field list of one port sensor 5
portsensor {port_num} {energy_sensor} value show	shows energy sensor of given port 5
portsensor {port_num} counter reset portsensor {port_num} {energy_sensor} events se	resets energy metering counter
(OFF=0 ON=1)	lenables sensor events on/off
oortsensor {port_num} {energy_sensor} events show	shows if sensor events are enabled
portsensor {port_num} {energy_sensor} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2 .EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	enables different event types
portsensor {port_num} {energy_sensor} events type show	shows what event types are enabled
portsensor {port_num} {energy_sensor} maxval set {num}	sets maximum value for sensor
portsensor {port_num} {energy_sensor} maxval show	shows maximum value for sensor
portsensor {port_num} {energy_sensor} minval set {num}	t sets minimum value for sensor
portsensor {port_num} {energy_sensor} minval show	shows minimum value for sensor
portsensor {port_num} {energy_sensor} hyst set {num}	sets hysterese value for sensor
portsensor {port_num} {energy_sensor} hyst show	shows hysterese value for sensor
portsensor {port_num} {energy_sensor} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode
portsensor {port_num} {energy_sensor} publish mode show	shows publish mode
portsensor {port_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain
portsensor {port_num} {energy_sensor} publish mqtt retain show	shows if mqtt retain set
portsensor {port_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval
portsensor {port_num} {energy_sensor} publish timer show	shows publish time interval
portsensor {port_num} {energy_sensor} publish delta set {float}	sets publish delta value
portsensor {port_num} {energy_sensor} publish delta show	shows publish delta value
portsensor {port_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port_num} set	sets power port for sensor values action
portsensor {port_num} {energy_sensor} [BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets state for sensor values action
oortsensor {port_num} {energy_sensor} [BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port show	shows port for sensor values action
portsensor {port_num} {energy_sensor} [BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state show	shows state for sensor values action
portsensor {port_num} events set {OFF=0 ON=1} portsensor {port_num} events show portsensor {port_num} events type set	LEGACY - shows if sensor events are enabled L
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2 EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	
portsensor {port_num} events type show	LEGACY - shows what event types are enabled L
portsensor {port_num} maxval set {num}	LEGACY - sets maximum value for sensor L LEGACY - shows maximum value for sensor L
portsensor {port_num} maxval show portsensor {port_num} minval set {num}	LEGACY - snows maximum value for sensor LEGACY - sets minimum value for sensor L
portsensor {port_num} minval show	LEGACY - shows minimum value for sensor L
portsensor {port_num} hyst set {num}	LEGACY - sets hysterese value for sensor L

portsensor {port_num} hyst show	LEGACY - shows hysterese value for sensor L	_
portsensor {port_num} {BELOWMIN=0	LEGACY - sets power port for sensor values	
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port num} set	action	-
port set {port_num} set portsensor {port_num} {BELOWMIN=0		
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - sets state for sensor values action L	_
state set {OFF=0 ON=1 DISABLED=2}		
portsensor {port_num} {BELOWMIN=0		
ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - shows port for sensor values action L	-
port show		
portsensor {port_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3}	LEGACY - shows state for sensor values action L	
state show	ELOAGT - Shows state for scripor values action	-
radius	enters cmd group "radius"	
radius {PRIMARY=0 SECONDARY=1} enabled	enables radius client	
set <off=0 on="1"> radius {PRIMARY=0 SECONDARY=1} enabled</off=0>		
show	show if radius client enabled	
radius {PRIMARY=0 SECONDARY=1} server set	sets radius server address	
" <dns_name>"</dns_name>	Sets ladius server address	
radius {PRIMARY=0 SECONDARY=1} server	shows radius server address	
show radius {PRIMARY=0 SECONDARY=1} password		
set "{passwd}"	sets radius server shared secret	
radius {PRIMARY=0 SECONDARY=1} password	sets radius server crypted shared secret	
hash set "{passwd}"	Solo radius server drypted strated sectet	
radius {PRIMARY=0 SECONDARY=1} auth	sets server request timeout	
timeout set {num_secs} radius {PRIMARY=0 SECONDARY=1} auth	·	
timeout show	shows server request timeout	
radius {PRIMARY=0 SECONDARY=1} retries set	sets server number of retries	
{099}	sets server fluitiber of fetties	
radius {PRIMARY=0 SECONDARY=1} retries	shows server number of retries	
show radius chap enabled set <off=0 on="1"></off=0>	enables CHAP	
radius chap enabled show	shows if CHAP is enabled	
radius message auth set <off=0 on="1"></off=0>	enables request message authentication	
radius message auth show	shows if request message authentication is	
- aaiaa maaaga aaiii ahan	enabled	
radius default timeout set {num_secs}	sets default session timeout (when not returned as Session-Timout Attribute)	
radius default timeout show	shows default session timeout	
snmp	enters cmd group "snmp"	
snmp port set {ip_port}	sets SNMP UDP port	
snmp port show	shows SNMP UDP port	
snmp port show snmp snmpget enabled set {OFF=0 ON=1}	shows SNMP UDP port enables SNMP GET cmds on/off	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1}	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1}	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled show snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled show snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v2 public cummnity	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled show snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private set "{text}" snmp snmpv2 private set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled show snmp snmpv2 enabled show snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v2 public cummnity	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpvet enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1}	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v3 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private show snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 cn/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 usenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 cn/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username show snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 authalg show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 usenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 username show snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 privalg set {NONE=0 DES=1	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 public cummnity shows SNMP v2 public community sets SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v3 username shows SNMP v3 username sets SNMP v3 authentication show SNMP v3 authentication algorithm	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 username show snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username shows SNMP v3 authentication	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 public cummnity shows SNMP v2 public community sets SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username shows SNMP v3 authentication show SNMP v3 authentication algorithm sets SNMP v3 privacy algorithm	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 authalg show snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7} snmp snmpv3 privalg show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 cn/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 public cummnity shows SNMP v2 public cummnity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username shows SNMP v3 authentication show SNMP v3 authentication algorithm sets SNMP v3 privacy algorithm	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP V2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 public cummnity shows SNMP v2 public community sets SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username shows SNMP v3 authentication show SNMP v3 authentication algorithm sets SNMP v3 privacy algorithm	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled show snmp snmpv2 public set "{text}" snmp snmpv2 public set "{text}" snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}" snmp system {CONTACT=0 NAME=1 LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 authalg show snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7} snmp snmpv3 authpasswd set "{passwd}" snmp snmpv3 privpasswd set "{passwd}" snmp snmpv3 privpasswd set "{passwd}" snmp snmpv3 privpasswd set "{passwd}"	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled sets SNMP v2 public cummity shows SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community sets SNMP v3 username shows SNMP v3 username shows SNMP v3 authentication show SNMP v3 authentication algorithm sets SNMP v3 privacy algorithm sets SNMP v3 privacy password sets SNMP v3 authentication password sets SNMP v3 authentication hashed password	
snmp port show snmp snmpget enabled set {OFF=0 ON=1} snmp snmpget enabled show snmp snmpset enabled set {OFF=0 ON=1} snmp snmpset enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 enabled set {OFF=0 ON=1} snmp snmpv2 public set "{text}" snmp snmpv2 public show snmp snmpv2 private set "{text}" snmp snmpv2 private show snmp snmpv2 private show snmp snmpv2 private show snmp snmpv3 private show snmp snmpv3 enabled set {OFF=0 ON=1} LOCATION=2} show snmp snmpv3 enabled set {OFF=0 ON=1} snmp snmpv3 enabled show snmp snmpv3 username set "{text}" snmp snmpv3 username set "{text}" snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5} snmp snmpv3 authalg show snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7} snmp snmpv3 privalg show	shows SNMP UDP port enables SNMP GET cmds on/off show if SNMP GET cmds are enabled enables SNMP SET cmds on/off show if SNMP SET cmds are enabled enables SNMP v2 on/off show if SNMP v2 is enabled enables SNMP v3 on/off show if SNMP v3 isenabled enables SNMP v3 public cummnity shows if SNMP v3 public community sets SNMP v2 public community sets sysLocation/sysName/sysContact gets sysLocation/sysName/sysContact sets SNMP v2 private community shows SNMP v2 private community shows SNMP v3 username shows SNMP v3 username sets SNMP v3 authentication show SNMP v3 authentication algorithm sets SNMP v3 privacy algorithm sets SNMP v3 privacy password sets SNMP v3 privacy password	

snmp trap type show	show SNMP trap type sets address and port of SNMP trap receiver
snmp trap receiver {trap_num} set "{dns_name}"	{trap num}
snmp trap receiver {trap num} show	show address and port of SNMP trap receiver
, , () 5	{trap_num}
syslog	enters cmd group "syslog"
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off
syslog enabled show	show if syslog enabled
syslog server set "{dns_name}" syslog server show	sets address of syslog server shows address of syslog server
systog server show	shows address or systog server
system	enters cmd group "system"
system restart	restarts device
system fabsettings system bootloader	restore fab settings and restart device enters bootloader mode
system flushdns	flush DNS cache
system uptime	number of seconds the device is running
system name show	shows device name
system version show	shows actual firmware version
system display {disp_num} default extsensor [port_num} {sen_type} set {sen_field}	shows external sensor
system display {disp_num} default linesensor line_num} set {sen_field}	shows energy line sensor
system display {disp_num} default portsensor	shows energy port sensor
(port_num) set {sen_field}	
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	shows other contents
system display {disp_num} default show	shows default setting for display
system display default hash set "{data}"	sets hashed display setting
system display default hash show system panel enabled set {OFF=0 ON=1}	shows hashed display setting blocks panel buttons when not enabled
system panel enabled set {OFF=U ON=1} system panel enabled show	shows if panel buttons are enabled
system panel port all set {OFF=0 ON=1}	enable siwtch all relays from panel buttons
system panel port all show	shows if siwtch all relays from panel buttons
System parior port all show	enabled
timer	enters cmd group "timer"
timer enabled set {OFF=0 ON=1}	enables timer functions
timer enabled show	shows if timer a enabled
timer syslog facility set {023}	sets facility level for timer syslog
timer syslog facility show timer syslog verbose set {07}	shows facility level for timer syslog sets verbose level for timer syslog
timer syslog verbose show	shows verbose level for timer syslog
timer {rule num} enabled set {OFF=0 ON=1}	enables rule
timer {rule_num} enabled show	shows if rule is enabled
timer {rule_num} name set "{name}" timer {rule_num} name show	sets name of rule
timer {rule_num} name snow timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-	shows name of rule
mm-dd}"	sets date range of rule
timer {rule_num} {FROM=0 UNTIL=1} show	shows date range of rule
timer {rule_num} trigger jitter set {065535}	sets jitter for rule
timer {rule_num} trigger jitter show timer {rule_num} trigger random set {0100}	show jitter of rule sets probability for rule
imer {rule_num} trigger random show	shows rule probability
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	shows time date list
timer {rule_num} action mode set {SWITCH=1	sets switch or cli cmd
imer {rule_num} action mode show	shows if switch or cli cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for switch cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	shows port list for switch cmd
imer {rule num} action delay set {065535}	delay between cmds
timer {rule_num} action delay show	shows delay between cmds
timer {rule_num} action console set "{cmd}" timer {rule_num} action console show	sets cmd string
timer {rule_num} action console snow timer {rule_num} action hash set "{data}"	shows cmd string sets action binary form
timer {rule_num} action hash show	shows action binary form
timer {rule_num} delete	delete one timer
timer delete all	delete all timer
vt100	enters cmd group "vt100"
vt100 vt100 echo set {OFF=0 ON=1}	sets console echo state

vt100 echo show	shows console echo state
vt100 numeric set {OFF=0 ON=1}	sets numeric mode
vt100 numeric show	shows numeric mode state
vt100 reset	resets terminal

Notes

- 1. Legacy The command has been replaced by a newer version
- 2. Command can be entered on any level
- 3. The output may show 2 lines the 1st line shows the actual state, the 2nd line the status after reboot
- 4. The output may show several lines
- 5. Please see the **Energy Sensor Table** for the right energy index
- 6. Please see the External Type and External Sensor Field Tables for the correct sensor index

Energy Sensor Table "{energy_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	Α
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	S
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh
15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	A



<section-header>

External Sensor Type Table "{sen_type}"

Constants "{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206

External Sensor Field Table "{sen_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

4.8.4 Serial Console

If the device has a serial port, the entire Telnet command set is also available at the serial console. Connect your PC to the device via an RS232 serial cable (9-pin RS232). To use the editing functions, the serial terminal must support VT100 emulation, and "echo" must not be activated. In the device configuration on the other hand, "Activate echo" should be set to "yes" and "Raw mode" to "no". Start your terminal program and select the COM port to which the RS232 cable is connected. Use the following settings for the serial port:

Baudrate	115200
Databits	8
Parity	No
Stoppbits	1
Flow Control	No

KVM Protocol

For compatibility reasons, the KVM protocol can be activated on the serial port. These binary control sequences can be used for devices with power ports, to turn the relays on and off individually.

Syntax:

wxyz

- w prefix 0x80
- x command (0x31 to turn on, 0x32 for turning off)
- **y** port number (0x01 ...)
- z check byte, must be: \x xor \y

KVM Examples

Port	Power On	Power Off
1	0x80 0x31 0x01 0x30	0x80 0x32 0x01 0x33
2	0x80 0x31 0x02 0x33	0x80 0x32 0x02 0x30
12	0x80 0x31 0x0C 0x3D	0x80 0x32 0x0C 0x3E

4.9 Modbus TCP

If Modbus TCP is activated in the configuration, the ports (relays, outputs, eFuses) can be switched and the following data is callable:

Address range overview:

Device Resource	Start	End	Modbus Data Type
Power/Output/eFuse Ports	0x000	0x3ff	Coils
DC Inputs	0x400	0x7ff	Discrete Inputs
Stop Condition active	0x800	0x800	Discrete Inputs
POE active	0x801	0x801	Discrete Inputs
Status Power Sources	0x1000	0x100f	Discrete Inputs
OVP active (Line-Ins)	0x1010	0x101f	Discrete Inputs
eFuse Errors	0x1100	0x11ff	Discrete Inputs
Info Area	0x000	0x005	Input Registers
CPU Sensor values	0x080	0x083	Input Registers
External Sensors	0x100	0x1ff	Input Registers
Fan Level	0x200	0x20f	Input Registers
Line Energy Sensors	0x400	0x39ff	Input Registers
Port Energy Sensors	0x3a00	0x81ff	Input Registers
Bank Energy Sensors	0x8200	0x823f	Input Registers
Power Source Sensors	0x8240	0x827f	Input Registers
Residual Current Monitor	0x8280	0x82cf	Input Registers
Bank Power Source Select	0x000	0x00f	Holding Registers
Fan Mode	0x010	0x01f	Holding Registers

This chapter is general for all Gude devices. Depending on the device type, some ports or certain sensors are not available.

All calculations in this chapter are based on addresses starting at "0". For some Modbus TCP Utilities, however, the addresses start at 1, in which case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

The Unit-ID is ignored because the device is uniquely identified by its IP address.

Supported Modbus TCP Functions

Function	Request Code
Read Coils	0x01
Read Discrete Inputs	0x02
Write Single Coil	0x05
Write Multiple Coils	0x0f
Read Input Registers	0x04
Read Holding Registers	0x03
Write Holding Register	0x06
Write Multiple Holding Registers	0x10
Read Device Identification	0x2B / 0x0E

Coils

Device Resource	Start	End	Device Function
Power/Output/eFuse	0x000	0x3ff	Coil represens Port State

Discrete Inputs

Device Resource	Start	End	Function when set
DC Inputs	0x400	0x7ff	Input logically 1
Stop Condition active	0x800	0x800	Stop Input active
POE active	0x801	0x801	POE active
Status Power Sources	0x1000	0x100f	Power Source active
OVP active (Line-Ins)	0x1010	0x101f	OVP active
eFuse Error	0x1100	0x11ff	eFuse Error

Status Power Sources	Offset	
EPC 8221 / 8226	0 = Bank A, 1 = Bank B	
ENC 2111 / 2191	0 = Pwr1, 1 = Pwr2	
ESB 7213 / 7214	0 = Pwr1, 1 = Pwr2 (only 7214)	

Input Registers

Device Resource	Start	End	Function
Info Bereich	0x000	0x005	see table
CPU Sensor values	0x080	0x083	see table
Externe Sensoren	0x100	0x1ff	see table
Fan Level	0x200	0x20f	0 (aus) bis 3 (maximal)
Line Energy Sensors	0x400	0x39ff	see table
Port Energy Sensors	0x3a00	0x81ff	see table
Bank Energy Sensors	0x8200	0x823f	see table
Power Source Sensors	0x8240	0x827f	see table
Residual Current Monitor	0x8280	0x82cf	see table

Info Area

Address	Width	Information	
0	16-bit	Number of Ports (Relay)	
1	16-bit	Number of Ports (Outlets) with	
		Energy Measurement	
2	16-bit	Number of Banks	
3	16-bit	Number of Line-In	
4	16-bit	Phases per line	
5	16-bit	Number of Inputs	

Sensor Type Description

Address	Width	Information
0x080 to 0x083	16-bit (signed	CPU Sensor values
0x100 to 0x1ff	16-bit (signed)	external Sensors

0x400 to 0x39ff	32-bit (signed)	Line Energy Sensors
0x3a00 to 0x81ff	32-bit (signed)	Port Energy Sensors
0x8200 to 0x823f	16-bit (signed)	Bank Energy Sensors
0x8240 to 0x827f	16-bit (signed)	Power Source Energy Sensors
0x8280 to 0x82cf	16-bit (signed)	Residual Current Monitor

CPU Sensor Values

Offset	Sensor Field	Unit
0	Vsystem	0.01 V
1	Vaux	0.01 V
2	Vmain	0.01 V
3	CPU Temperature	0.1 °C

External Sensors:

The measured value of the external sensors are coded as fixed point arithmetic. For a factor of e.g. 0.1 in the unit the value must be divided by 10 in order to reach the real measured value. A value of 0x8000 means that no sensor is plugged into the corresponding port, or the corresponding field in the sensor is not available. The formula for the address is (the port numbers start at zero):

0x100 + Port * 8 + Offset

In the Expert Sensor Box 7213 / 7214 the internal sensor corresponds to the value Port = 0, and is coded Port = 1 for Sensor 2 and Port = 2 for Sensor 3.

Offset	fset Sensor Field Unit	
0	Temperature	0.1 °C
1	Humidity	0.1 %
2	Digital Input	bool
3	Air Pressure	1 hPa (millibar)
4	Dew Point	0.1 °C
5	Dew Point Difference	0.1 °C

For example, the humidity of the second port has the address: 0x100 + 1 * 8 + 1 = 0x109

Energy Sensors:

We distinguish the line sensors (which correspond to the input circuits) and the port sensors, which measure the energy that is passed over the switched port. The measured values of the energy sensors are returned as signed 32-bit integers. The high-order 16-bits are starting on the even address, followed by the low-order 16-bits on the odd address. To calculate the address, there are the following formulas (the values for line, port and phase start at zero):

Line: 0x0400 + Line * 0x120 + Phase * 0x60 + Offset * 2

Port: 0x3a00 + Port * 0x120 + Phase * 0x60 + Offset * 2

For devices with only one phase, the phase is set to zero in the formula.

Examples:

"Power Active" for 1st line sensor and 3rd phase: 0x400 + 0 * 0x120 + 2 * 0x60 + 1 * 2

= 0x4C2

"Voltage" for 2nd line sensor and single phase device: 0x400 + 1 * 0x120 + 2 * 2 = 0x524

"Power Angle" for 4th port sensor and single phase device: 0x3a00 + 3 * 0x120 + 6 * 2 = 0x3d6c

Offset	Sensor Field	Unit
0	Absolute Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	mA
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Absolute Active Energy Resettable	Wh
10	Absolute Reactive Energy	VARh
11	Absolute Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	S
13	Forward Active Energy	Wh
14	Forward Reactive Energy	VARh
15	Forward Active Energy Resettable	Wh
16	Forward Reactive Energy Resettable	VARh
17	Reverse Active Energy	Wh
18	Reverse Reactive Energy	VARh
19	Reverse Active Energy Resettable	Wh
20	Reverse Reactive Energy Resettable	VARh
21	Residual Current Type A	mA
22	Neutral Current	mA

Whether the measured values "Residual Current" and "Neutral Current" are supported depends on the respective device model. For measured values such as "Neutral Current", which are independent of the phase, the same value is returned for all phases.

DC Energy Sensors:

With the EPC 8291 / 8290 devices, the voltage and current of the individual banks and voltage sources can be read out. The measured values of the energy sensors are returned as signed 16-bit integers. The following formulas are available for the address (the values for Bank and PowerSrc start at zero):

Bank: 0x8200 + Bank * 2 + Offset

Power Source: 0x8240 + PowerSrc * 2 + Offset

Examples:

"Voltage" at third bank: 0x8200 + 2 * 2 + 0 = 0x8204

"Current" at first PowerSrc: 0x8240 + 0 * 2 + 1 = 0x8241

	Offset	Sensor Field	Unit
--	--------	--------------	------

0	Voltage	0.01 V
1	Current	mA

Residual Current Monitor Type B (RCMB):

Devices with a Residual Current Monitor Type B (RCMB) module separately measure the RMS and DC fault current components of the input supply. The values are returned as signed 16-bit integers. The following formulas are used for the address (the module number starts at zero):

Bank: 0x8280 + ModuleNo * 8 + Offset.

Examples:

"Residual Current DC" at first module: 0x8280 + 0 * 8 + 1 = 0x8281.

"Output DC" for second module: 0x8280 + 1 * 8 + 3 = 0x828b

Offset	Sensor Field	Unit
0	Residual Current RMS Type B	0.1 mA
1	Residual Current DC Type B	0.1 mA
2	Output RMS	bool
3	Output DC	bool
4	Module State	

Whether a Residual Current Monitor Type B (RCMB) module is present depends on the particular device model.

Holding Registers

Device Resource	Start	End	Function
Bank Power Source	0x000	0x00f	Sets Power Source for Bank
Fan Mode	0x010	0x01f	0 = Automatic / 1 = Maximum

Device Identification

Returns manufacturer name and device identification:

Request Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Object Id	1 Byte	0x00

Response Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Conformity Level	1 Byte	0x01
More Follows	1 Byte	0x00
NextObjectID	1 Byte	0x00
Number of Objects	1 Byte	0x03
Object ID	1 Byte	0x00

Object Length	1 Byte	n1
Object Value	n1 Bytes	"Company Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n2
Object Value	n2 Bytes	"Product Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n3
Object Value	n3 Bytes	"Product Version"

4.10 MQTT

This device supports MQTT 3.1.1 to send configured messages and also to receive commands. This chapter is general for all Gude devices, some Gude models do not have switchable ports.

- Default port for an unencrypted connection is port 1883.
- Default port for a TLS secured connection is port 8883.
- If the broker allows anonymous login, username and password are arbitrary, but a username must be specified.
- If multiple MQTT clients are connected to a broker, the names of the clients must be different. For this reason, "client_xxxx" is generated as the default name. Here "xxxx" are the last 4 digits of the MAC address.

Message format

The MQTT messages of the device are always sent in JSON format. E.G..

{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}

This is a switching of the second port to the state on. The source of the switching command is CGI ("http"). The index is always numeric, "port" can also be alphanumeric for devices with multiple banks, e.g. "A2". At the end follows a timestamp ("ts"), which indicates the number of seconds the device is on, or unixtime if the device has synchronized with an NTP server.

MQTT Topic Prefix

The topic prefix for the messages can be set in the MQTT configuration. A default would be e.g. "de/gudesystems/epc/[mac]". Here "[mac]" is a placeholder for the MAC address of the device, another possible placeholder is "[host]", which contains the host name. An example topic for a switching message of the second port would then be:

Executing console commands

The device can be controlled remotely via MQTT using console commands. A list of all commands can be found in the Console of chapter. Depending on the topic, the commands are accepted in different formats.

As default the execution of commands is not allowed, but must be enabled in the MQTT configuration! ("Permit CLI commands")

[&]quot;de/gudesystems/epc/00:19:32:01:16:41/switch/2".

Format 1: Command in JSON Syntax

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd" Publish Message: "{"type": "cli", "cmd": "port 2 state set 1", "id": 10}"

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres" "{"type": "cli", "cmdres": ["OK."], "result": {"num": 0, "hint": "ok"}, "id": 10}"

The JSON object "result" returns whether the command was valid. The object "id" in the command is optional and is passed through in the response from the device. The passed number can help to establish a synchronicity between command and response via the broker.

Format 2: Raw Text

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/cli" Publish Message: "port 2 state set 1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/cli" "OK."

Format 3: Simplified port switching

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/port/2" Publish Message: "0" or "1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/port/2" "0" or "1"

🧱 This special form exists only for the port switching commands.

Device Data Summary


In the **Device Data Summary** the most important data of the device are summarized in a JSON object and sent periodically in a configurable time interval. This summary depends on the properties of the device and the connected sensors, and could look like this:

Topic: en/gudesystems/epc/00:19:32:01:16:41/device/telemetry

Message:

4.10.1 Example HiveMQ


What does an MQTT configuration look like using HiveMQ as an example?

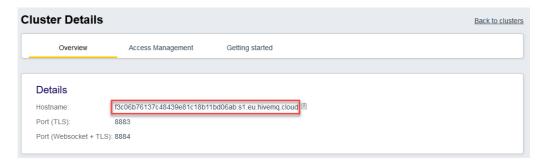


Create a free or commercial account at www.hivemq.com and create a new cluster.



In the "Manage Clusters" section, go to "Access Management" and add an MQTT user with name and password.

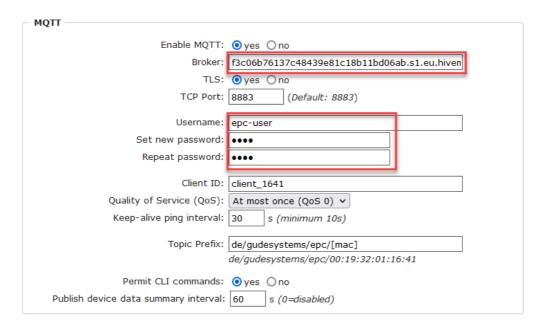

 In the MQTT configuration of the Gude device, transfer the hostname of the HiveMQ broker, as well as username and password. Additionally activate TLS and set the correct port.



5 Support

You will find the latest product software on our website at www.gude.info available for download. If you have further questions about installation or operation of the unit, please contact our support team. Furthermore, we present in our support wiki at www.gude.info/wiki FAQs and configuration examples.

5.1 Data Security

To provide the device with a high level of data security, we recommend the following measures:

- Check that the HTTP password is switched on.
- Set up your own HTTP password.
- Allow access to HTTP via SSL (TLS) only.
- Use TLS 1.3 if possible and avoid TLS 1.1.
- Enable authentication and encryption in SNMPv3.
- Disable SNMP v2 access.
- Enable STARTTLS or SSL in the e-mail configuration.
- Archive configuration files securely, they contain sensitive information.
- In the IP ACL, enter only the devices that require access to HTTP or SNMP.
- Use SSH if possible, since Telnet is not encrypted.
- Set login for telnet or serial console.
- Use MQTT 3.1.1 only with TLS and password.
- Only permit MQTT CLI commands when the broker is trustworthy.
- Modbus TCP is not encrypted, only activate it in a secure environment.
- Activate "Message Authentication" in RADIUS.

When accessed from the Internet

- Use a randomized password with at least 32 characters.
- If possible, place the device behind a firewall.

5.2 Contact

GUDE Systems GmbH Von-der-Wettern-Straße 23 51149 Cologne Germany

Phone: +49-221-912 90 97
Fax: +49-221-912 90 98
E-Mail: mail@gude.info
Internet: www.gude.info
shop.gude.info

Managing Director: Dr.-Ing. Michael Gude

District Court: Köln, HRB-Nr. 17 7 84

WEEE-number: DE 58173350

Value added tax identification number (VAT): DE 122778228

5.3 Declaration of Conformity

This product from the **Expert Power Control 8314/8316** series is in conformity with the European directives for CE marking applicable to this product. The complete CE declaration of conformity for this product can be found on the website www.gude.info in the download section of the product.

5.4 FAQ

1. What can I do if the device is no longer accessible?

- If the Status LED is red, the device has no connection to the switch. Unplug and plug
 the Ethernet cable. If the Status LED is still red, try other switches. If one uses no
 switch, but connects e.g. a laptop directly to the device, make sure you are using a
 crossover Ethernet cable.
- If the status LED is orange for a longer time after unplugging and plugging the Ethernet cable, then DHCP is configured, but no DHCP server was found in the network.

 After a timeout, the last IP address is configured manually.
- If there is a physical link (status LED is green) to the device, but you can not access the web server, bring the device into bootloader mode and search for it with GBL_Conf.exe 15. Then check the TCP-IP parameters and change them if necessary.
- If the device is not found by GBL_Conf.exe in bootloader mode, you can reset the settings to factory defaults 21 as the last option.

2. What can be done if the device is no longer accessible, but the buttons still respond?

• Entering or leaving the bootloader mode does not change the state of the relays. In the chapter Maintenance there is a description how to activate the bootloader by pressing the buttons and how to exit the bootloader afterwards. This will restart the firmware without switching relays. However, this procedure does not help if the network itself is incorrectly configured.

3. Where is the serial number stored in the device?

The serial number is not stored in the device, but only visible on the device label. However, you can display the MAC address in the IP address configuration but on the lambda contact Gude Systems Support with the MAC address, we will be happy to give you the corresponding serial number.

4. Why does it sometimes take so long to configure new SNMPv3 passwords on the website?

The authentication methods "SHA-384" and "SHA-512" are calculated purely in software, and can not use the crypto hardware. On the configuration page, e.g. "SHA-512", needs up to 45 seconds to calculate the key.

5. Can you enter multiple e-mail recipients?

• Yes. In the E-Mail configuration in the <u>Recipient Address</u> field, it is possible to enter multiple e-mail addresses separated by commas. The input limit is 100 characters.

6. Why did the MIB tables change after the firmware update?

• Since the number of possible event types was increased, the previous trap design resulted in an excess of trap definitions: See Change in Trap Design 55.

7. Importing an older firmware

• During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page 17).

8. Disable switching events

• You can set the sending of syslog, emails etc. when switching ports (only concerns Gude devices with relays) under "System" in the sensor configuration 45.

- A -	- -
automated Access 50	Installation 7 IP-ACL 27, 52
- B -	IP-Address 26 IPv6 53
Bootloader Mode 15, 20	
Button Lock 48	- L -
- C -	load Configuration 17
Certificate-Upload 15, 17 clear DNS-Cache 17	- M -
Configuration Management 19	Maintenance 15
Content of Delivery 6	messages 50
creating certificates 60	Modbus TCP 86
	MQTT 36, 91
- D -	NI
Data Security 96	- N -
Declaration of Conformity 97	NTP 37
Default Display 48	
Description 6	0
device MIB 56, 58	- 0 -
	Ok button 7
- E -	Operating the device directly 13
Electrical Measurement 8	n
E-Mail 47	- P -
Ethernet connnector 7	Power Ports 23
- F -	- R -
Factory Baset 45	
Factory Reset 15 FAQ 97	Radius 53
Firmware Upload 15	Restart 17
Firmware-Update 17	RS232 connector 7
	C
- G -	- S -
GBL_Conf.exe 15	Security Advice 6
	Select button 7
- H -	Sensors 9, 45 SNMP 32, 54
- 11 -	SSH 66
HTTP 28	SSL 60
HTTPS 28	Start-up the device 7
	Status LED 7
	Status-LED 13

Index

syslog 31

- T -

Technical Specifications 8
Timer 38
Timer Configuration 38
TLS 60

- W -

Watchdog 24



