



# EMpro - multifunctional energy measuring devices for DIN rail mounting

User manual

# User manual

## EMpro - multifunctional energy measuring devices for DIN rail mounting

UM EN EMpro DIN rail, Revision 00

2020-03-05

---

This user manual is valid for:

Designation	Order No.
EEM-MA370	2907983
EEM-MA371	2908307
EEM-MA370-R	2907980
EEM-MA371-R	2907985
EEM-MB370	2907954
EEM-MB371	2907955
EEM-MB370-PN	2907984
EEM-MB371-PN	2908308
EEM-MB370-EIP	2907971
EEM-MB371-EIP	2907976

# Table of contents

1	For your safety .....	7
	1.1 Identification of warning notes .....	7
	1.2 Qualification of users .....	7
	1.3 Field of application of the product .....	8
	1.3.1 Intended use .....	8
	1.3.2 Product changes .....	8
	1.4 Safety notes.....	8
2	Device description .....	9
	2.1 Product overview .....	13
3	Mounting and installation .....	15
	3.1 Mounting.....	15
	3.2 Installation .....	16
	3.2.1 Pin assignment .....	17
	3.2.2 Supply .....	19
	3.2.3 Grid types .....	20
4	Operating and indication elements .....	25
	4.1 Energy measuring device with display .....	25
	4.2 Energy measuring device without display .....	25
	4.3 Energy measuring device without display, with additional PROFINET interface .....	26
	4.4 Energy measuring device without display, with additional Ethernet/IP interface .....	27
	4.5 Technical data of the display .....	28
	4.6 Displaying the events.....	29
	4.7 Operating elements on the display (softkeys).....	30
5	Basic device configuration .....	31
	5.1 Basic device configuration via the display .....	31
	5.1.1 Step 1: Language selection .....	31
	5.1.2 Step 2: Network settings .....	32
	5.1.3 Step 3: IPv4 .....	32
	5.1.4 Step 4: Grid type .....	33
	5.1.5 Step 5a: Current input (energy measuring device with current transformer) .....	34
	5.1.6 Step 5b: Current input (energy measuring device with Rogowski coil) .....	35
	5.1.7 Step 6: Voltage input .....	35

5.1.8	Step 7: Configuration overview .....	36
5.1.9	Step 8: Setting a personal PIN .....	36
5.1.10	Step 9: Activating the PIN .....	36
5.2	Basic device configuration via the web server .....	37
5.2.1	Step 1: Network settings .....	38
5.2.2	Step 2: Selecting the grid type .....	39
5.2.3	Step 3: Configuration of the current input (current transformer) .....	40
5.2.4	Step 3: Configuration of the current input (Rogowski coil) .....	41
5.2.5	Step 4: Voltage input .....	43
5.2.6	Optional: Voltage transducer .....	44
5.2.7	Step 5: Configuration overview .....	45
6	Navigation structure and display .....	47
6.1	Menu structure on the display .....	47
6.2	Menu structure on the web server .....	48
7	Device settings and information .....	51
7.1	Selecting the language .....	51
7.2	Date and time .....	52
7.2.1	Reading the date and time .....	52
7.2.2	Setting the date and time manually .....	53
7.2.3	Synchronizing the date and time with an SNTP server .....	54
7.2.4	Time zones .....	55
7.2.5	Summer time rule .....	57
7.3	Adjusting the display (contract, brightness, illumination time of backlight) .....	58
7.3.1	Adjusting the contrast of the display .....	58
7.3.2	Adjusting the brightness of the display .....	59
7.3.3	Adjusting the illumination time of the backlight .....	60
7.3.4	Selecting the format of the standard display (IEC or IEEE) .....	62
7.3.5	Activating color change for alarm .....	63
7.3.6	Selecting the refresh time for displaying measured values .....	64
7.3.7	Adjusting the display via the web server .....	65
7.4	Device information .....	66
7.5	Resetting the device to default settings .....	67
8	Configuration .....	71
8.1	Access and passwords .....	72
8.1.1	Editing access data via the display .....	72
8.1.2	Editing access data via the web server .....	73
8.1.3	Deactivating the configuration via the display .....	74
8.1.4	Deactivating the Modbus communication interface .....	75

	8.2 Transferring configuration data .....	77
	8.2.1 Exporting configuration data .....	77
	8.2.2 Importing configuration data .....	78
	8.2.3 Direct transfer of configuration data .....	79
<b>9</b>	<b>Measuring technology .....</b>	<b>81</b>
	9.1 Meter readings.....	81
	9.1.1 Energy meters .....	82
	9.1.2 Energy resettable .....	83
	9.1.3 Tariff meter .....	84
	9.1.4 Operating hours counter .....	85
	9.2 Statistics .....	86
	9.2.1 Average values .....	86
<b>10</b>	<b>Functions .....</b>	<b>93</b>
	10.1 Digital input.....	93
	10.1.1 Impulse counter .....	95
	10.1.2 Tariff selection .....	97
	10.1.3 Synchronization of average values .....	99
	10.1.4 Acknowledgment of alarms .....	101
	10.2 Digital output.....	102
	10.2.1 Impulse .....	104
	10.2.2 Device state .....	106
	10.2.3 Manually .....	108
	10.2.4 Alarm .....	109
	10.2.5 Rotary field direction .....	114
	10.2.6 Deactivating the digital output .....	116
	10.3 Tariff selection .....	118
	10.3.1 Tariff selection via the communication interface .....	119
	10.3.2 Tariff selection using a time schedule .....	120
	10.4 Logic gate .....	123
	10.5 Data logging .....	128
	10.6 Firmware update.....	131
	10.6.1 Execution .....	131
	10.6.2 Security .....	133
<b>11</b>	<b>Communication .....</b>	<b>135</b>
	11.1 Ethernet.....	138
	11.1.1 IP addressing .....	138
	11.1.2 Configuration of the communication interface .....	139
	11.1.3 Status of the communication interface .....	140
	11.1.4 Security .....	140

11.2	Modbus .....	140
11.2.1	Function .....	140
11.2.2	Modbus/RTU .....	141
11.2.3	Modbus/TCP .....	145
11.2.4	Modbus gateway .....	145
11.3	PROFINET .....	147
11.3.1	Software .....	147
11.3.2	Preparing the GSDML file .....	147
11.3.3	Integrating the GSDML file .....	147
11.3.4	Integrating hardware .....	150
11.3.5	Integrating modules and submodules .....	156
11.3.6	Linking process data .....	161
11.3.7	Assigning a device name .....	162
11.3.8	Function check .....	167
11.4	Configuration .....	168
11.4.1	Modbus/RTU .....	168
11.4.2	Modbus/TCP .....	168
11.4.3	Modbus gateway .....	168
11.5	Safety .....	169
11.6	Data types and registers .....	170
11.7	Register table .....	172
11.8	Contents of the register table .....	172
11.9	Description of the register table .....	172
12	Technical data .....	177
A	Appendix for document lists .....	181
A 1	List of figures .....	181
A 2	List of tables .....	187
A 3	Index .....	189

# 1 For your safety

Read this user manual carefully and keep it for future reference.

## 1.1 Identification of warning notes



This symbol indicates hazards that could lead to personal injury.

There are three signal words indicating the severity of a potential injury.

### **DANGER**

Indicates a hazard with a high risk level. If this hazardous situation is not avoided, it will result in death or serious injury.

### **WARNING**

Indicates a hazard with a medium risk level. If this hazardous situation is not avoided, it could result in death or serious injury.

### **CAUTION**

Indicates a hazard with a low risk level. If this hazardous situation is not avoided, it could result in minor or moderate injury.



This symbol together with the **NOTE** signal word warns the reader of actions that might cause property damage or a malfunction.



Here you will find additional information or detailed sources of information.

## 1.2 Qualification of users

The use of products described in this user manual is oriented exclusively to:

- Electrically skilled persons or persons instructed by them. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.
- Qualified application programmers and software engineers. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.

## 1.3 Field of application of the product

### 1.3.1 Intended use

The EMpro energy measuring devices described in this user manual are suitable for installation in electrical systems with different voltage levels and performance classes.

Keep in mind that electrical systems pose hazards due to high voltages, high short-circuit currents, electric arcs and/or other hazards.

### 1.3.2 Product changes

Modifications to hardware and firmware of the device are not permitted. Incorrect operation or modifications to the device can endanger your safety or damage the device. Do not repair the device yourself. If the device is defective, please contact Phoenix Contact.

## 1.4 Safety notes



**WARNING: Risk of death due to electric shock**

Only use external current transformers with reinforced or double isolation. Install current transformers and corresponding measuring devices only when the power supply of the system is disconnected.

- Installation should be carried out as described in the installation notes. Accessing circuits within the device is prohibited.
- Always disconnect the device from the energy supply before performing any work on it. Short-circuit the secondary side of each current transformer.
- Use an appropriate voltage measuring device to ensure that no voltage is present.
- Re-install all the equipment, doors, and covers on the device before switching on the device again.
- Ensure that the control cabinet is grounded in accordance with DIN EN 61439-1.
- Ensure that the control cabinet door in which the device is installed is grounded.
- Provide a switch/circuit breaker close to a device, which is marked as the disconnecting device for this device.
- Provide overcurrent protection ( $\leq 16$  A) for the supply voltage within the installation.
- To protect the device against mechanical or electrical damage, install it in a suitable housing with an appropriate degree of protection in accordance with IEC 60529.
- If the device is not used as described in the documentation, the provided protection may be impaired.
- The housing of the device is equipped with basic insulation against neighboring devices up to 300 V OVC III (overvoltage category). Please note that a minimum clearance of 6 mm to neighboring elements must be maintained to achieve double insulation.
- The device is maintenance-free. Repairs may only be carried out by the manufacturer.
- The device must be stopped if it is damaged, was subjected to an impermissible load, stored incorrectly or if it malfunctions.
- Check that the measuring device is working correctly by measuring a known voltage and a known current.
- Ground each current transformer on the secondary side.



## 2 Device description

The EMpro energy measuring devices (EEM-MA..., EEM-MB... types) are universally deployable, high-precision, network-compatible measuring devices, with or without LC display, that can measure, evaluate and process voltages and currents in one, two and three-phase power supply systems. For voltage measurements, up to four inputs are available; for current measurements, up to three inputs are available. You can use EMpro energy measuring devices in TN and IT systems.

Typical installation locations of EMpro energy measuring devices are:

- Switchgear and controlgear assemblies, switchgear and controlgear assembly systems
- Control cabinets

To enable versatile use, EMpro energy measuring devices are available for the following installation methods:

- For front panel installation or with DIN rail adapter, with LC display, with control buttons (included in the EMpro product family, but not described in this user manual)
- For mounting on a DIN rail, with LC display, with control buttons
- For mounting on a DIN rail, with LC display, with control buttons, without LC display, without control buttons

Your advantages:

- Precise knowledge of load profiles allows load management, optimization of the electrical energy usage and optimization of energy consumption from the public supply network and own production (e.g., CHP, PV system).
- Meaningful load profiles are an important aid for planning system expansions and building new systems.
- Energy costs can be assigned to individual functional divisions or cost centers.
- A transparent overview of the energy flows increases the awareness of energy consumption, uncovers waste of energy and makes it possible to identify system components and equipment that harbor potential energy savings.
- Critical system states can be detected, reported and registered. Such critical system states can, e.g., be caused by overload, unbalanced load, undervoltage, voltage and current distortion by non-linear consumers, etc. Detection of critical system states makes it possible to quickly react to such states in order to prevent potential decreases in availability or energy supply failures. When critical system states are detected in time, measures can be taken to ensure permanent system availability.
- Seamless communication with control systems via Modbus/RTU, Modbus/TCP, PROFINET and EtherNet/IP™ and with higher-level energy management systems via standard TCP/IP networks (Ethernet, RJ45)
- Intuitive configuration and operation of EMpro energy measuring devices with four front buttons or integrated web server

Numerous parameters that are important for operating an electrical system are determined by means of the voltages and currents measured by the EMpro energy measuring devices. Apparent power, active power and reactive power are measured in all four quadrants (consumption, supply).

EMpro energy measuring devices have an integrated web server. It enables:

- Convenient configuration
- Data logging
- Mains quality evaluations
- Detailed recording of energy flows

A configurable digital input and a configurable digital output are also available. Communication interfaces to higher-level control systems are integrated in the device, depending on the type.

Currents can be measured with current transformers or Rogowski coils. If you use Rogowski coils, you do not need an external measuring transducer. EMpro energy measuring devices can be connected directly to Rogowski coils from any manufacturer. Different device types are deployed depending on whether current transformers or Rogowski coils are used. Voltages can be measured directly, or by means of voltage transducers.

Voltages and currents are measured using the principle of true r.m.s. value measurement (TRMS) up to the 63rd harmonic, which enables detailed assessment of the mains quality.

When EMpro energy measuring devices with LC display are used, it is possible to locally display measurement values and perform configuration tasks locally by means of buttons. All EMpro energy measuring devices have a Modbus communication interface and an integrated web server. Other communication interfaces are available, depending on the type. Via the web server, all relevant measurement values and parameters can be displayed and the energy measuring devices can be configured. On the web interface, settings can be configured for the following, among others:

- Grid types
- Mean values
- Four energy meters for apparent power, active power, reactive power, consumption/supply
- Energy tariff meter
- Logging
- Alarms and conduct in the event of alarms
- Network (TCP/IP)
- Interfaces with higher-level control systems
- Digital output (with logic functions)
- Digital input
- Pulse counter
- Date/time (realtime clock, SNTP compatible)
- Identifier (of metering point)
- Display

Other features of the EMpro energy measuring devices are:

- Firmware update function
- Password protection (local and web-based management (WBM))
- Deactivation of control buttons for configuration
- Sealable connection fields
- Export, import and direct transfer of configuration data
- Color changes on display (white, red) in the event of errors/events

The following measurement values/parameters are shown on the LC displays of EMpro energy measuring devices:

- Voltage U [V] (L-L, L-N)
- Current I [A]
- Frequency f [Hz]
- Active power P [W] (string, total)
- Reactive power Q [var] (string, total)
- Apparent power S [VA] (string, total)
- Power factor PF,  $\lambda$
- Active power factor, active factor  $\cos \Phi$
- Phase shift angle, phase angle  $\Phi$  (U-U, U-I)
- Total harmonic distortion (ratio) of the voltage, THD U (L-L, L-N)
- Total harmonic distortion (ratio) of the current, THD I
- Energy E [Wh, varh, VAh] (consumption/supply)
- Energy tariff meter E [Wh, varh, VAh] (consumption, supply, meter 1-4)

For the measurement values/parameters voltage U (L-L), U (L-N), current I, frequency f, active power P, reactive power Q and apparent power S, it is possible to switch between:

- Instantaneous = Instantaneous value
- Min = Minimum value (can be reset)
- Max = Maximum value (can be reset)
- AVG = Current average value
- AVG Min = Minimum average value (can be reset)
- AVG Max = Maximum average value (can be reset)

All the measures described above are also available via the web server that has been integrated into the EMpro energy measuring device. In the web browser, the data cannot only be displayed numerically, but also in the form of a convenient analog display with trend charts.

A variety of hardware and software interfaces can be used to communicate with higher-level control systems. At the time of writing this document, the following interfaces are available:

- Modbus/RTU (RS-485)
- Modbus/TCP (Ethernet)
- PROFINET (Ethernet, Dual Port)
- EtherNet/IP (Ethernet, Dual Port)

A variety of parameters from the EMpro energy measuring device can be read or configured in order to communicate with higher-level control systems. These parameters, the associated addresses, additional information and help texts are available in the web server. All information required for setting up communication with higher-level control systems is contained in a register table in the integrated web server. It is therefore usually not necessary to look up parameters in the paper copy of the documentation.

The register table contains:

- Device data
  - Device information
  - Device configuration (digital input/digital output)
- Network (TCP/IP)
- Interfaces for higher-level control systems (e.g., Modbus/RTU, Modbus/TCP, PROFINET, EtherNet/IP™)
- Control and status registers
  - Device control
  - Device status
  - Measuring system control
- Process data
  - Measured values
  - Counter values
  - Pulse counter
  - Statistics
  - Total harmonic distortion THD
  - Harmonics
  - Voltage quality

## 2.1 Product overview

Table 2-1 Product overview

Description	DIN rail devices	
	Current transformer	Rogowski connection
Modbus/TCP with display	EEM-MA370 2907983	EEM-MA371 2908307
Modbus/TCP without display	EEM-MB370 2907954	EEM-MB371 2907955
Modbus/TCP with display + Modbus/RTU	EEM-MA370-R 2907980	EEM-MA371-R 2907985
Modbus/TCP without display + PROFINET	EEM-MB370-PN 2907984	EEM-MB371-PN 2908308
Modbus/TCP without display + EtherNet/IP™	EEM-MB370-EIP 2907971	EEM-MB371-EIP 2907976



## 3 Mounting and installation

### 3.1 Mounting

You can snap the device onto a DIN rail in the control cabinet. The mounting position can be freely selected, but will be determined by the readability of the LCD.

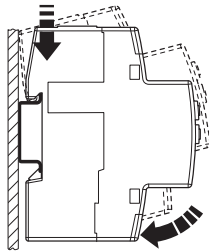


Figure 3-1 Mounting

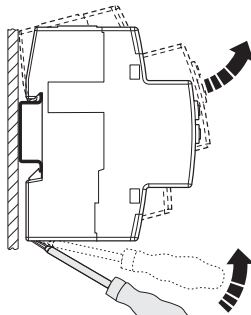


Figure 3-2 Removal

## 3.2 Installation



**DANGER: Risk of electric shock**

If the device is disconnected, the secondary side of the relevant current transformers must be short circuited.

Install the current sensors and corresponding measuring devices only when the power supply of the system is disconnected.

When the current transformer is operated with an open secondary circuit, hazardous voltages may occur at the secondary terminal blocks.



When measuring by means of current transformers or Rogowski coils, the accuracy is greatly influenced by the quality of the current sensors used.



### 3.2.1 Pin assignment

#### 3.2.1.1 Current transformer



Maximum tightening torque for the relevant screws: 0.5 Nm ... 0.6 Nm.

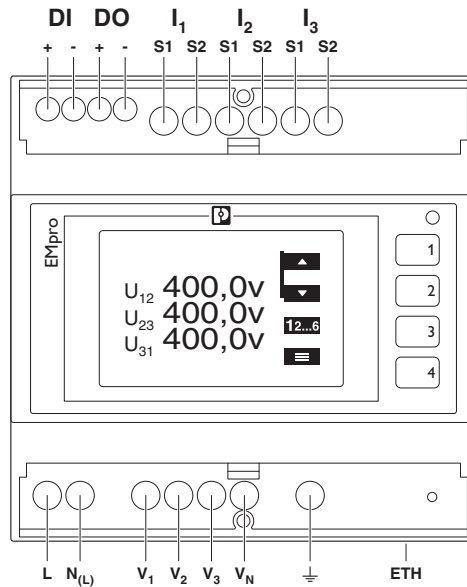


Figure 3-3 Pin assignment example

I <sub>1</sub> , I <sub>2</sub> , I <sub>3</sub>	Current measuring input, current transformer
DI+, DI-	Digital input
DO+, DO-	Digital output
L, N(L)	Supply
V <sub>1</sub> , V <sub>2</sub> , V <sub>3</sub> , V <sub>N</sub>	Voltage measuring input
⏏ FE	Functional ground
RJ45	Ethernet connection (Modbus)
LED	Status
Optional (depending on the version):	
1 x RS-485	RS-485 connection (Modbus/RTU)
2x ETH RJ45	Ethernet connection (PROFINET)
	Ethernet connection (EtherNet/IP™)

3.2.1.2 Rogowski coil

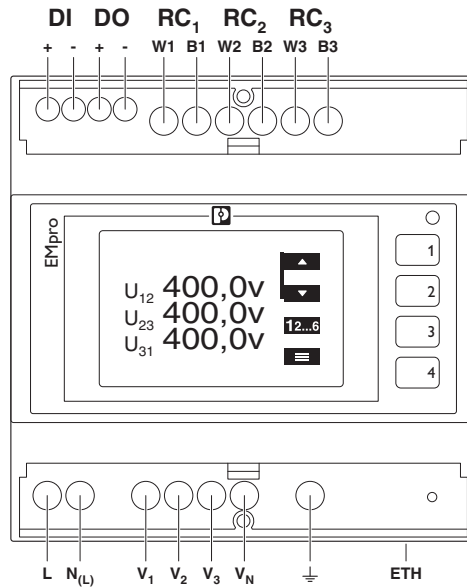


Figure 3-4 Pin assignment example

RC1, RC2, RC3	Current measuring input, Rogowski coil
DI+, DI-	Digital input
DO+, DO-	Digital output
L, N(L)	Supply
V1, V2, V3, VN	Voltage measuring input
⊥ FE	Functional ground
RJ45	Ethernet connection (Modbus)
LED	Status
Optional (depending on the version):	
1 x RS-485	RS-485 connection (Modbus/RTU)
2x ETH RJ45	Ethernet connection (PROFINET)
	Ethernet connection (EtherNet/IP™)

### 3.2.2 Supply

You can connect the device supply as follows:

1. Connection (L/N)
2. Connection (L/L)

#### Connection L/N

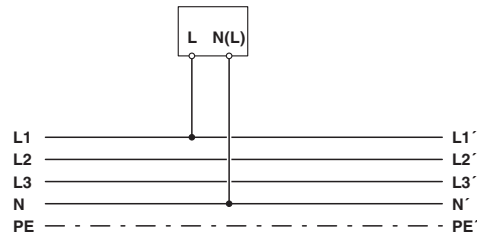


Figure 3-5 Connection L/N

#### Connection L/L

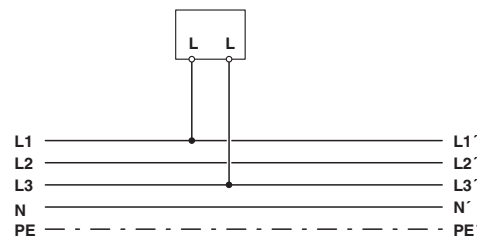


Figure 3-6 Connection L/L

Supply voltage range:	100 V AC ... 230 V AC $\pm 20\%$ 150 V DC ... 250 V DC $\pm 20\%$
Fuse:	$\leq 16$ A

### 3.2.3 Grid types

The device is designed for connection to various network types in two-, three- or four-conductor networks with symmetrical or asymmetrical load.

Where current sensors are concerned, a differentiation is made between current transformers and Rogowski coils, depending on the device type.

The definitions of the grid types are as follows:

1PH	One-phase network
2W	Two conductors
1CT	One current transformer
Alternative:	
1RC	One Rogowski coil

#### 3.2.3.1 Current transformer (CT)

##### 1PH-2W-1CT

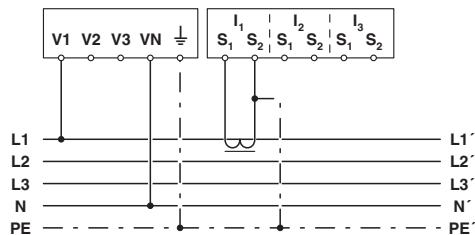


Figure 3-7 One-phase network, two conductors, one current transformer

##### 2PH-2W-1CT

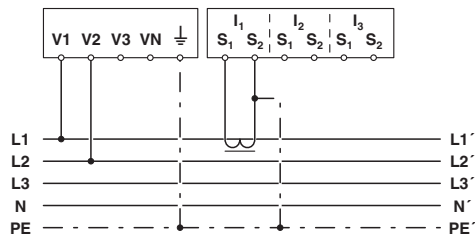


Figure 3-8 Two-phase network, two conductors, one current transformer

**3PH-3W-1CT**

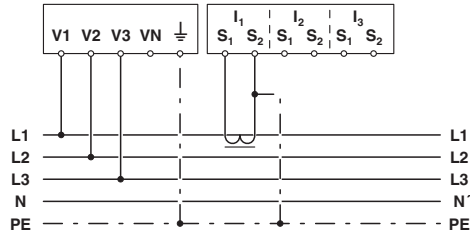


Figure 3-9 Three-phase network, three conductors, one current transformer

**3PH-3W-2CT**

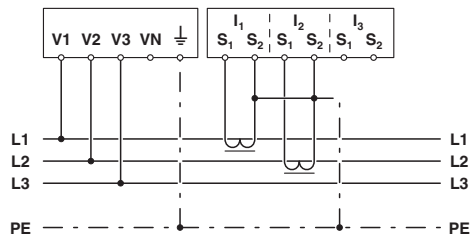


Figure 3-10 Three-phase network, three conductors, two current transformers

**3PH-3W-3CT**

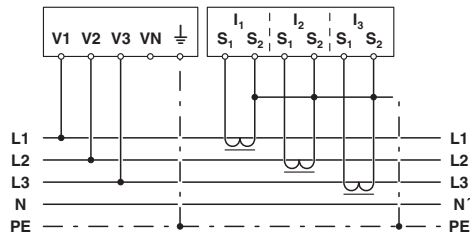


Figure 3-11 Three-phase network, three conductors, three current transformers

**3PH-4W-1CT**

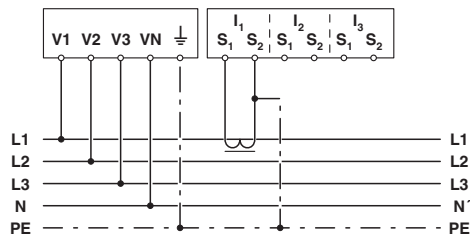


Figure 3-12 Three-phase network, four conductors, one current transformer

**3PH-4W-3CT**

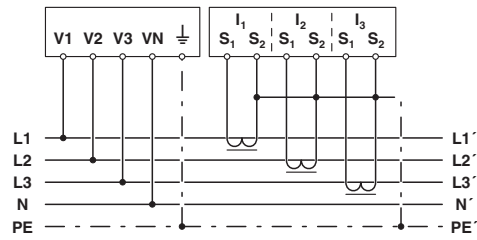


Figure 3-13 Three-phase network, four conductors, three current transformers

**2PH-3W-2CT**

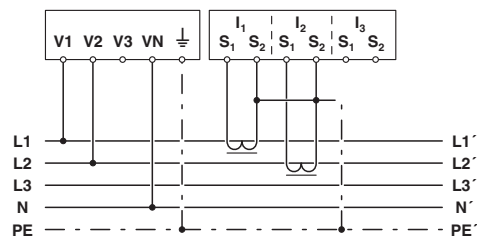


Figure 3-14 Two-phase network, three conductors, two current transformers

### 3.2.3.2 Rogowski coil (RCP)

#### 1PH-2W-1RC

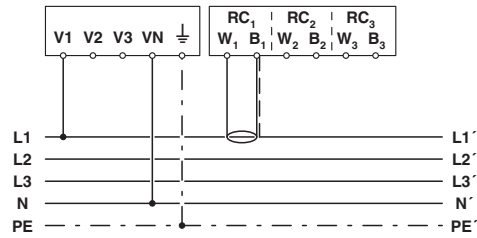


Figure 3-15 One-phase network, two conductors, one Rogowski coil

#### 2PH-2W-1RC

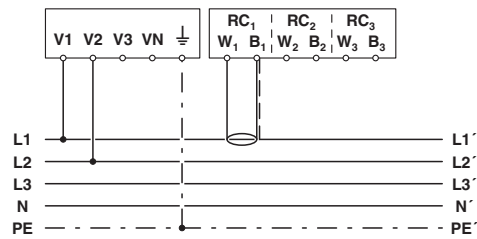


Figure 3-16 Two-phase network, two conductors, one Rogowski coil

#### 3PH-3W-1RC

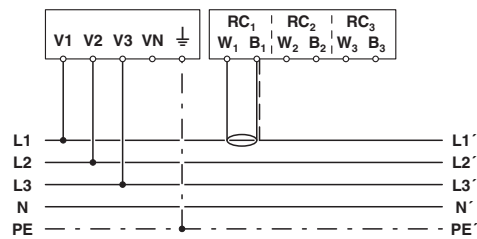


Figure 3-17 Three-phase network, three conductors, one Rogowski coil

**3PH-3W-3RC**

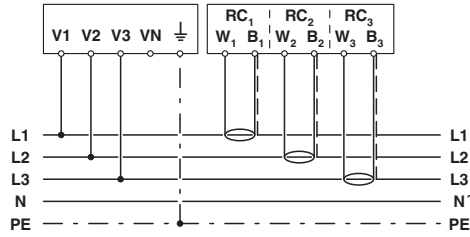


Figure 3-18 Three-phase network, three conductors, three Rogowski coils

**3PH-4W-1RC**

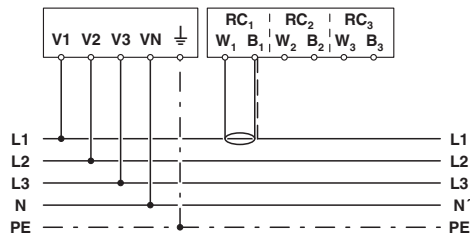


Figure 3-19 Three-phase network, four conductors, one Rogowski coil

**3PH-4W-3RC**

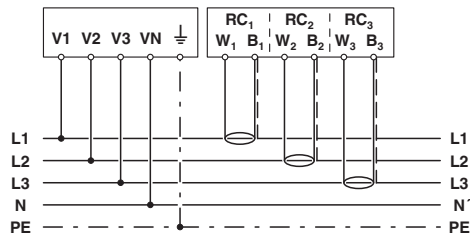


Figure 3-20 Three-phase network, four conductors, three Rogowski coils

**2PH-3W-2RC**


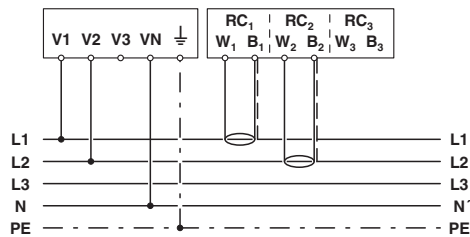


Figure 3-21 Two-phase network, three conductors, two Rogowski coils



## 4 Operating and indication elements

### 4.1 Energy measuring device with display

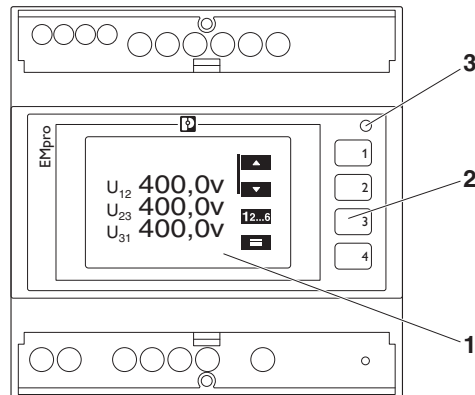

- 1 LCD display, two-color backlit
- 2 Operating buttons 1...4 for displaying measured values and for changing the configuration
- 3 Pulse LED

### 4.2 Energy measuring device without display

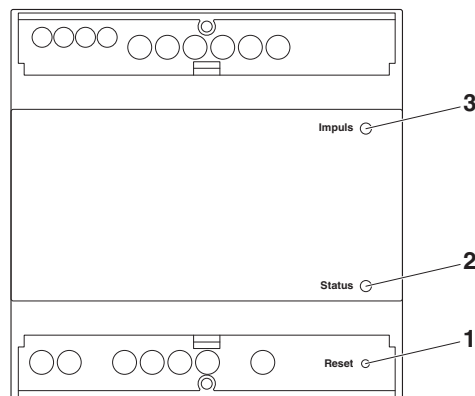


Figure 4-1 EEM-MB-370

- 1 Reset button
- 2 Status LED
- 3 Pulse LED

### 4.3 Energy measuring device without display, with additional PROFINET interface

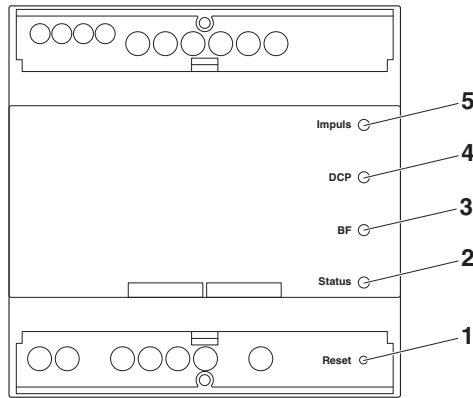


Figure 4-2 EEM-MB-370-PN

- 1 Reset button
- 2 Status LED
- 3 PROFINET status BF
- 4 PROFINET status DCP
- 5 Pulse LED

Table 4-1

Name	Color/status	Description of PROFINET communication
BF	Red	PROFINET communication
	Off	Communication OK
	On (red)	Fault in the communication controller or no physical connection to the PROFINET network
	Flashing	PROFINET timeout
DCP	Green	
	Flashing	DCP flashing

## 4.4 Energy measuring device without display, with additional Ethernet/IP interface

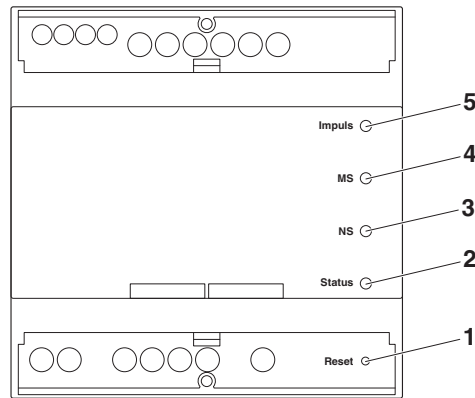


Figure 4-3 EEM-MB370-EIP

- 1 Reset button
- 2 Status LED
- 3 Ethernet/IP status: NS (network status)
- 4 Ethernet/IP status: MS (module status)
- 5 Pulse LED

Table 4-2

Name	Color/status	Description of Ethernet/IP communication
MS	Green/red	Module status
	Off	Supply voltage not present
	Flashing (green)	Device is not configured
	On (green)	No error
	Flashing (red)	Repairable error/peripheral error/message, e.g., overload, output driver, IFS device error, configuration error
	On (red)	Internal error Replace the device.
	Flashing (green/red)	Self test

Table 4-2






 
 
 


NS	Green/red	Network status
	Off	Supply voltage not present
	Flashing (green)	IP address assigned, but no EtherNet/IP connection
	On (green)	EtherNet/IP connection configured, cyclic data transmission OK
	Flashing (red)	EtherNet/IP™ connection timeout, connection interrupted
	On (red)	IP address conflict
	Flashing (green/red)	Self test

## 4.5 Technical data of the display

Technical data	
Display technology	FSTN positive, transfective
Resolution of devices for installation on front panel	128 x 80
Viewing angle	Min. 30° (horizontal and vertical)
Backlight	White and red














## 4.6 Displaying the events

Table 4-3 Displaying the events

Icon	Meaning
	Voltage transducer configured
	Measured values faulty (flashing)
	Tariff 1 set
	Tariff 2 set
	Tariff 3 set
	Tariff 4 set
	Network connected
	Warning
	User logged in
	User logged out

## 4.7 Operating elements on the display (softkeys)

Table 4-4 Meaning of the softkeys

Icon	Meaning
	Open/close settings menu
	Scroll up
	Scroll down
	Select menu page
	Exit menu page
	Edit setting
	Apply modified setting
	Increment (increase)
	Decrement (decrease)
	Next position
	Confirm query
	Reject query/first configuration: go back to start
	Reset: the displayed values are reset


## 5 Basic device configuration

The first time the energy measuring device is switched on, the installation wizard for the first configuration (basic device configuration) automatically starts. In the basic device configuration, you can edit the default settings of the device. Depending on the requirements, you can perform the basic device configuration via the display or via the integrated web server.

Menu-driven configuration is available for the following parameters:

- Language
- Network settings
- Grid type
- Current input
- Voltage input

### 5.1 Basic device configuration via the display

1. To start the first configuration (basic device configuration) of your energy measuring device, press the  button.

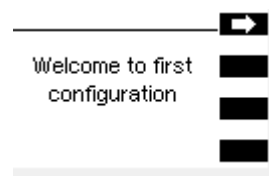


Figure 5-1 Starting the basic device configuration

#### 5.1.1 Step 1: Language selection

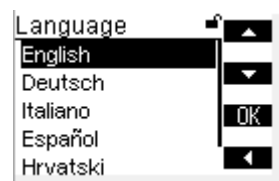





Figure 5-2 Language selection

1. Use the  and  buttons to select the desired language.
2. To proceed, press the  button.

### 5.1.2 Step 2: Network settings

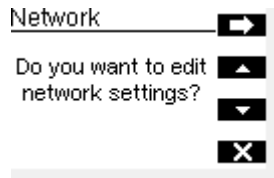


Figure 5-3 Network settings

1. If you do not want to edit the network settings, press the **X** button.
2. If you want to edit the network settings, press the **→** button.

### 5.1.3 Step 3: IPv4

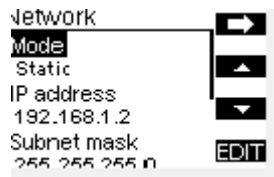


Figure 5-4 IPv4

1. To enter a network setting, use the **▼** or **▲** buttons to scroll to the desired setting.
2. To open edit mode, press the **EDIT** button.
3. To scroll through the possible values, use the buttons **→** and **+**.
4. Next, apply the settings by pressing the **OK** button.
5. After you have entered all settings, press the **→** button.



## 5.1.4 Step 4: Grid type

### Current transformer

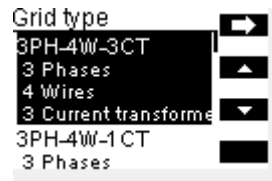


Figure 5-5 Selection of grid type with current transformers

### Rogowski coil

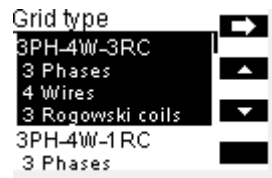





Figure 5-6 Selection of grid type with Rogowski coils

1. Use the  or  buttons to select the desired grid type.
2. To proceed, press the  button.



Explanations and information on the various grid types are available in [Section “Grid types” on page 20](#).

### 5.1.5 Step 5a: Current input (energy measuring device with current transformer)

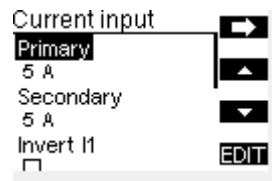


Figure 5-7 Current input (energy measuring device with current transformer)

1. To open the edit mode for the "Primary" device setting, press the **EDIT** button.
2. To set the primary current, press the buttons **▲** and **▼**.
3. To apply the change, press the **OK** button.

To set the secondary current, proceed in the same way as for setting the primary current.

4. To invert the current inputs, activate the checkbox below the appropriate current input with the **EDIT** button.
5. To continue the basic device configuration, press the **→** button.

### 5.1.6 Step 5b: Current input (energy measuring device with Rogowski coil)

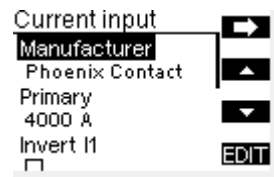


Figure 5-8 Current input (energy measuring device with Rogowski coil)

1. Use the **EDIT** button to open the edit mode of the “Manufacturer” device setting.
2. To make changes, use the buttons **▲** and **▼**.
3. To apply the change, press the **OK** button.

The same procedure applies to editing the nominal current.

4. To activate or deactivate a checkbox, press the **EDIT** button.
5. To continue the basic device configuration, press the **→** button.

### 5.1.7 Step 6: Voltage input

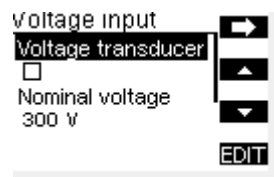


Figure 5-9 Voltage input

1. If you use a voltage transducer, activate the checkbox with the **EDIT** button. When you activate the checkbox, the primary and secondary voltage is displayed.
2. If no voltage transducer is used, enter the nominal voltage by means of the **▲** and **▼** buttons.
3. Select it with the **EDIT** button.
4. Use the buttons **→** and **+** to make changes.
5. To save the changes, press the **OK** button.
6. To proceed, press the **→** button.

### 5.1.8 Step 7: Configuration overview

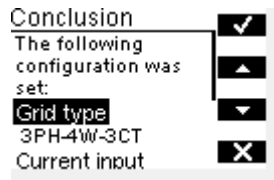


Figure 5-10 Configuration conclusion

1. Use the buttons **▲** and **▼** to check your configured settings.
2. If you are satisfied with the first configuration, finish it by pressing the **✓** button.
3. To restart the first configuration, press the **X** button.

### 5.1.9 Step 8: Setting a personal PIN

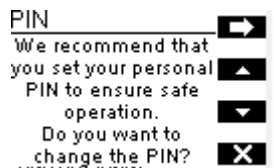


Figure 5-11 Setting a personal pin

1. To ensure safe operation, you can select a personal PIN. To this end, press the **→** button.
2. If you do not want to change the PIN, press the **X** button.

### 5.1.10 Step 9: Activating the PIN



Figure 5-12 Activating the PIN

1. To activate the PIN, press the **EDIT** button.
2. Use the buttons **→** and **+** to enter the desired PIN.
3. To apply the changes, press the **OK** button.
4. To finish the basic device configuration, press the **✓** button.



To ensure safe operation, we recommend changing the access data for the display!

For additional information, please refer to [Section “Configuration” on page 71](#).

## 5.2 Basic device configuration via the web server



We recommend using the integrated web server to perform the device configuration. You can access the web server directly after you have switched on the device. An installation wizard guides you through the basic device configuration process.

By default, a static IP address is set for the device.

To start the basic device configuration via the web server, open the Internet browser. Enter the following URL:

IP address:	192.168.1.2
Subnet mask:	255.255.255.0
Default gateway:	0.0.0.0
DHCP:	Off
DNS server:	0.0.0.0

Make sure that your computer and the energy measuring device are in the same network.

### 5.2.1 Step 1: Network settings

The first step in the basic device configuration is the network settings.

**Navigation on the web server**

“Network settings”

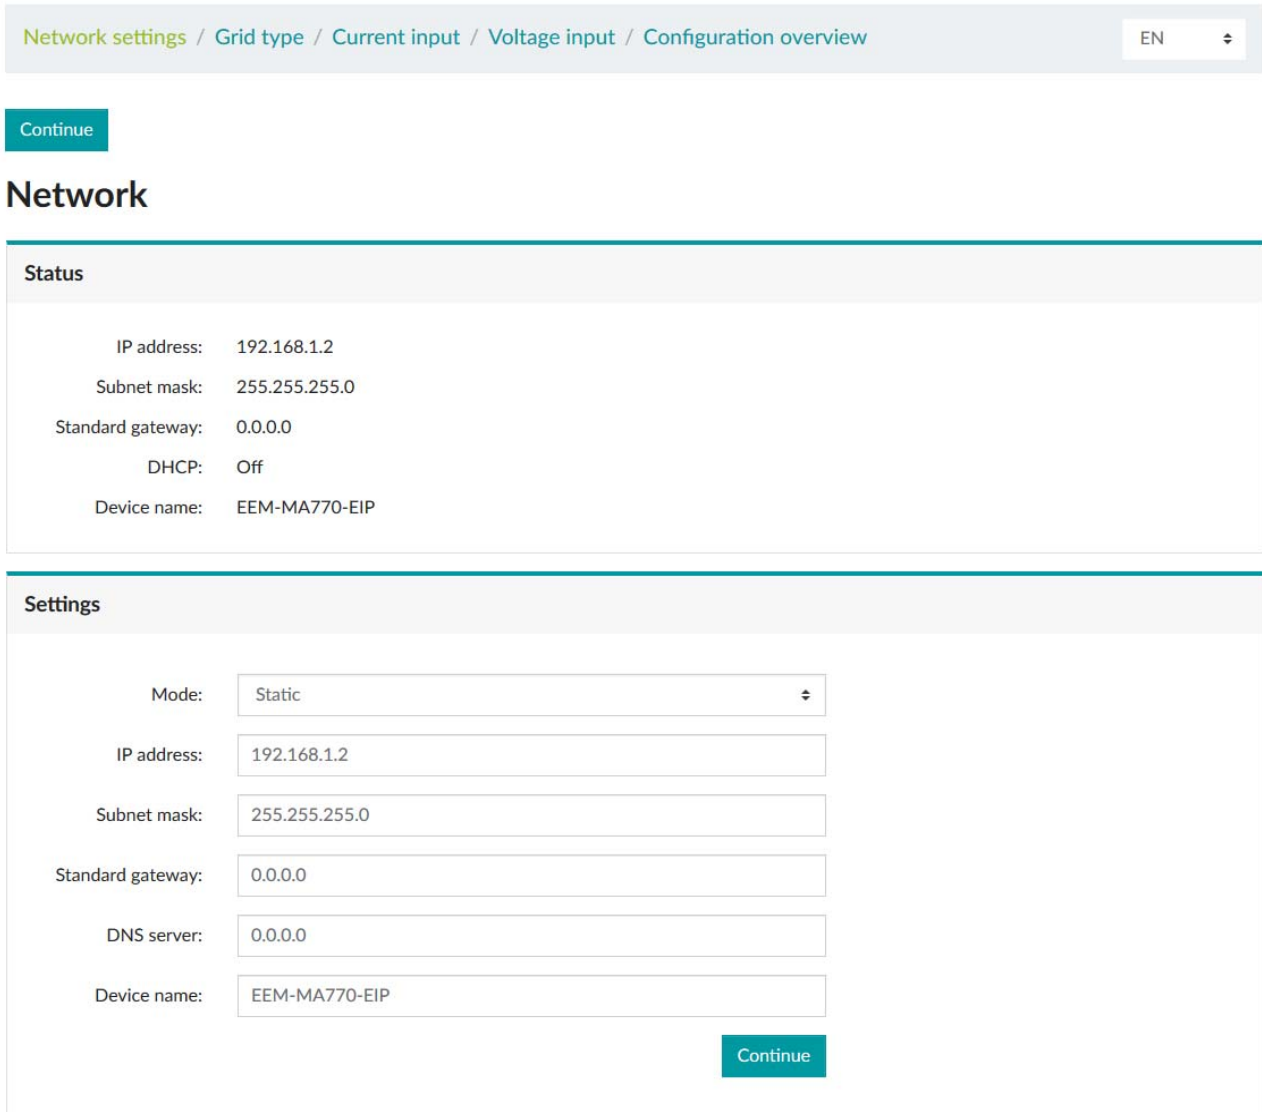


Figure 5-13 Network settings

**Status**

Here, an overview of the current network configuration is displayed.

**Settings**

Enter the desired network settings as appropriate for the respective application.

## 5.2.2 Step 2: Selecting the grid type

The second step is the selection of the grid type for the application.

Network settings / Grid type / Current input / Voltage input / Configuration overview EN

Back Continue

1 phase with neutral - 1PH\_2W\_1CT  
current transformer

2 phase without neutral - 2PH\_2W\_1CT  
current transformer

3 phase without neutral - 3PH\_3W\_1CT  
current transformer

3 phase without neutral - 3PH\_3W\_2CT  
2 current transformers

3 phase without neutral - 3PH\_3W\_3CT  
3 current transformers

3 phase with neutral - 3PH\_4W\_1CT  
current transformer

3 phase with neutral - 3PH\_4W\_3CT  
3 current transformers

2 phase with neutral - 2PH\_3W\_2CT  
2 current transformers

Back Continue

Figure 5-14 Grid type

Taking the device installation into account, select the desired grid type from the options provided in the overview.

### 5.2.3 Step 3: Configuration of the current input (current transformer)



Depending on the device selection and the associated device-specific current sensors, the current input setting may vary.

Configuring the current input is the third step of the basic device configuration.

Network settings / Grid type / **Current input** / Voltage input / Configuration overview EN ▾

Back Continue


Primary:  A

Secondary:  A

Invert I1:

Invert I2:

Invert I3:

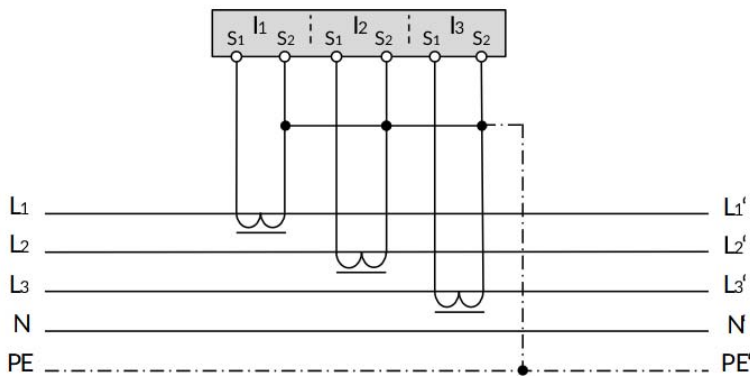

Back Continue

Figure 5-15 Current input, current transformer

**Primary**

Enter the primary current of the application here.

**Secondary**

Select the secondary current (1 A or 5 A) of the current transformer.

**Inversion**

With this function, the respective phase of the current transformer is inverted by the firmware. It is no longer necessary to rewire the two conductors.



### 5.2.4 Step 3: Configuration of the current input (Rogowski coil)



Depending on the device selection and the associated device-specific current sensors, the current input setting may vary.

Configuring the current input is the third step of the basic device configuration.

Network settings / Grid type / **Current input** / Voltage input / Configuration overview EN ↕

**Back** **Continue**

Primary:  A

Preselection: **Phoenix Contact coil D95** Phoenix Contact coil D140 Phoenix Contact coil D190

Transmission factor:  mV / kA

Internal resistance:  Ω

Invert I1:

Invert I2:

Invert I3:

**Back** **Continue**

© 2019 PHOENIX CONTACT - Version: 1.1.2

Figure 5-16 Current input (Rogowski coil)

**Primary**

Enter the primary current of the application here.

**Preselection**

Select a Rogowski coil of Phoenix Contact. You do not have to configure any other settings.

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

<b>Invert I1</b>	<p>With this function, the respective phase of the Rogowski coil is inverted by the firmware. It is no longer necessary to rewire the two conductors.</p> <p>If you use Rogowski coils of manufacturers other than Phoenix Contact, you have to configure additional settings.</p>
<b>Amplitude transmission factor</b>	<p>Enter the amplitude transmission factor (mV/kA) of the Rogowski coil.</p> <p>Refer to the documentation of the Rogowski coil for the amplitude transmission factor.</p>
<b>Internal resistance</b>	<p>Enter the internal resistance (<math>\Omega</math>) of the Rogowski coil.</p> <p>Refer to the documentation of the Rogowski coil for the internal resistance.</p>
<b>Inversion</b>	<p>With this function, the respective phase of the Rogowski coil is inverted by the firmware. It is no longer necessary to rewire the two conductors.</p>

### 5.2.5 Step 4: Voltage input

If you use a voltage transducer in your application, activate the checkbox here. Subsequently follow the next steps.


Network settings / Grid type / Current input / Voltage input / Configuration overview

EN

Back Continue

Voltage transducer:

Nominal voltage:  V

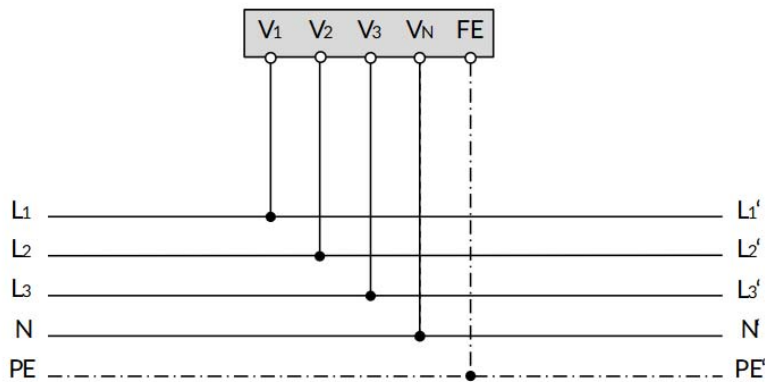

Back Continue

Figure 5-17 Voltage input

### 5.2.6 Optional: Voltage transducer


Network settings / Grid type / Current input / Voltage input / Configuration overview EN ↕

Back Continue

Voltage transducer:

Primary:  V

Secondary:  V

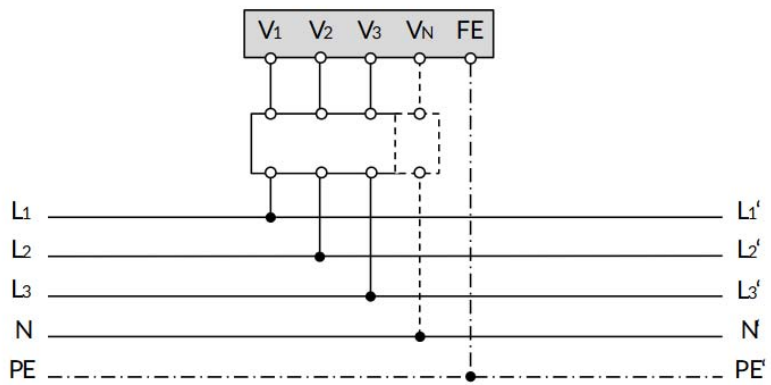

Back Continue

Figure 5-18 Voltage input with voltage transducer

**Primary** Enter the primary voltage of the voltage transducer.

**Secondary** Enter the secondary voltage of the voltage transducer.

## 5.2.7 Step 5: Configuration overview

Network settings / Grid type / Current input / Voltage input / Configuration overview EN

We recommend that you change the password for this website and the PIN for Modbus and possibly the display to ensure safe operation. ×

Back Complete

### Configuration overview

**Network settings**

IP address: 192.168.1.2  
 Subnet mask: 255.255.255.0  
 Standard gateway: 0.0.0.0  
 DNS server: 0.0.0.0  
 DHCP: Off

**Grid type**

3PH\_4W\_3CT:  
 3 phase with neutral  
 3 current transformers

**Current input**

Primary: 5A  
 Secondary: 5A  
 Invert I1:   
 Invert I2:   
 Invert I3:

**Voltage input**

Voltage transducer:   
 Primary: 60V  
 Secondary: 300V

Back Complete

Figure 5-19 Configuration overview

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

Check all settings and close the basic device configuration.



For your own safety, we recommend changing the access data for the web server!

## 6 Navigation structure and display

### 6.1 Menu structure on the display

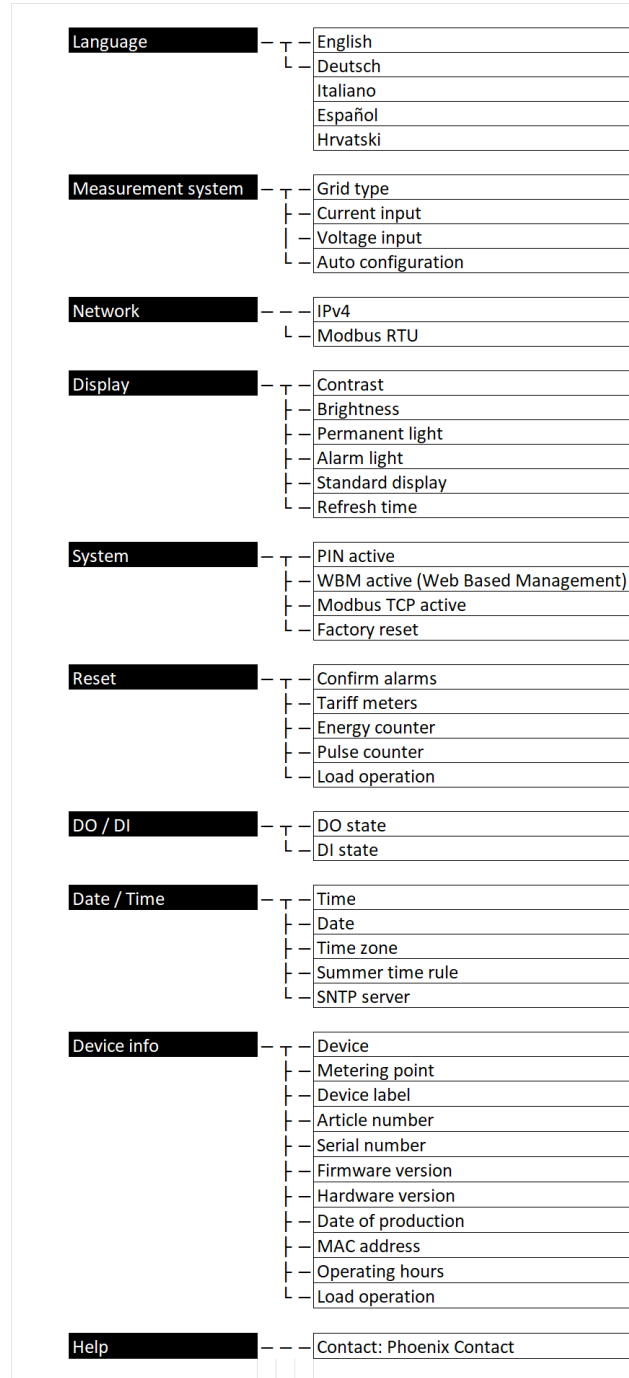


Figure 6-1 Menu structure on the display

## 6.2 Menu structure on the web server

EN ↕

EEM-MA770-EIP
Device label: Device label
Metering point: Metering point

**Home**

- Instantaneous values
- Meter readings
- Statistics
- Register table
- Settings**
- Measurement system
- Average values
- Tariffs
- Logging
- Alarming
- Network
- Modbus
- Digital output
- Digital input
- Impulse counter
- Date / Time
- Identifier
- Display
- System**
- Device information
- User management
- Configuration data
- Firmware
- Help

### Instantaneous values

Phase conductor voltage	
U12	0,00 V
U23	0,00 V
U31	0,00 V
U <sub>sysLL</sub>	0,00 V

Phase voltage	
U1	0,00 V
U2	0,00 V
U3	0,00 V
U <sub>sysLN</sub>	0,00 V

Current	
I1	0,00 A
I2	0,00 A
I3	0,00 A
I <sub>N</sub>	0,00 A
I <sub>sys</sub>	0,00 A

Frequency	
f	0,00 Hz

Active power	
P1	0,00 W
P2	0,00 W
P3	0,00 W
ΣP	0,00 W

Reactive power	
Q1	0,00 var
Q2	0,00 var
Q3	0,00 var
ΣQ	0,00 var

Apparent power	
S1	0,00 VA
S2	0,00 VA
S3	0,00 VA
ΣS	0,00 VA

Power factor	
PF1	1,00
PF2	1,00
PF3	1,00
PF	1,00

cos(φ)	
cos(φ1)	1,00
cos(φ2)	1,00
cos(φ3)	1,00

Phase angle U-I	
φ1	0,00 °
φ2	0,00 °
φ3	0,00 °

Phase angle U-U	
φ1N	0,00 °
φ2N	0,00 °
φ3N	0,00 °

THD phase conductor voltage	
U12	0,00 %
U23	0,00 %
U31	0,00 %

THD phase voltage	
U1	0,00 %
U2	0,00 %
U3	0,00 %

THD current	
I1	0,00 %
I2	0,00 %
I3	0,00 %
I <sub>N</sub>	0,00 %

Figure 6-2 Menu structure on the web server



The figure shows the start screen of the web server in operating mode after the basic device configuration has been completed.

The following information appears in the header:

- Order designation
- Equipment identification (EID) of the device, which you can name as desired
- A defined measuring point, which you can name as desired
- Language selection

The menu tree contains the following:

Home:	Reading measured data and measurement values
Settings:	Configuring the device and device parameters
System:	Managing rights and provision of information and data



## 7 Device settings and information

### 7.1 Selecting the language



The language selection for the display and the web server can differ. Thus, changing the language via the display does not affect the language set in the web server, and vice versa.

#### Navigation on the display

“Language”

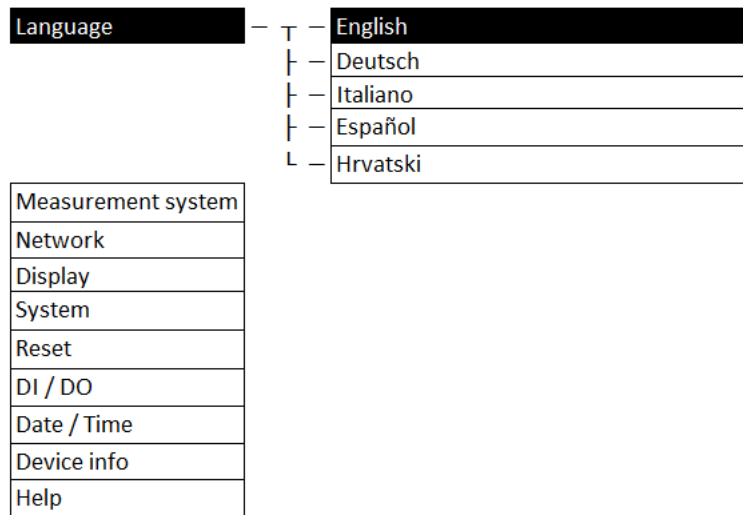


Figure 7-1 “Language” menu



Figure 7-2 Language selection

You can select the display language via the display.

The default setting for the language is English.

## 7.2 Date and time



When the device is switched off, or in the event of a power loss, the device retains the system time for at least one day.

This is usually adequate for maintenance and installation work.

### 7.2.1 Reading the date and time

#### Navigation on the display

“Date / Time”

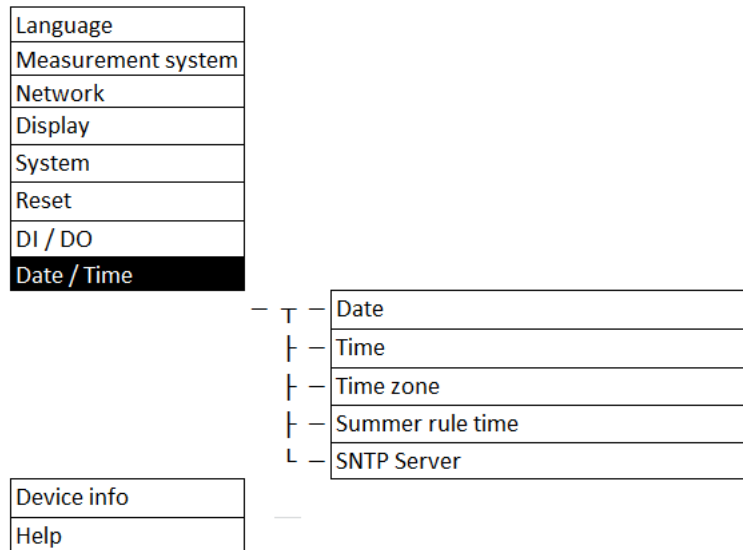


Figure 7-3 “Date / Time” menu

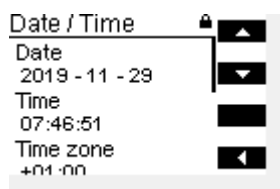


Figure 7-4 Settings: “Date / Time”

On the device display, you can only read the date and time settings.

The date and time settings can only be changed via the integrated web server or the Modbus communication interface.

The web server provides the following modes for setting the date and time:

- Manual
- SNTP server

## 7.2.2 Setting the date and time manually

Navigation on the web server

“Settings, Date / Time, Settings, “Manually” mode

### Date / Time

**Status**

Time: 11:05:07 AM

Date: 09/09/2019

**Settings**

Mode:

Time:

Date:

Time zone:

Summer time rule:

Figure 7-5 “Settings, Date / Time, Settings, “Manually” mode

**Status**

Here, the current date and current time is shown.

**Settings**

Here, you can change the settings for the date and time.

**Time zone**

Here, you can select a time zone. You can find a list of all time zones in [Section “Time zones” on page 55](#).

**Summer time rule**

Here, you can select a summer time rule. A description of the summer time rules can be found in [Section “Summer time rule” on page 57](#).

### 7.2.3 Synchronizing the date and time with an SNTP server

**Navigation on the web server**

“Settings, Date / Time, Settings, “SNTP Server” mode

Date / Time

The screenshot displays the 'Date / Time' configuration page. At the top, the 'Status' section shows the current system time as 4:59:04 PM and the date as 12/22/2019. Below this is the 'Settings' section, which contains several configuration options: 'Mode' is set to 'SNTP server'; 'SNTP server' is set to 'europe.pool.ntp.org' with a 'Check connection' button; 'Polling cycle' is set to '300' seconds; 'Time zone' is set to 'UTC+01:00 Africa (Lagos, Tunis), Europe (Amsterdam, Belgrad, Berlin, Brüssel)'; and 'Summer time rule' is set to 'EU'. At the bottom of the settings section are 'Discard' and 'Save' buttons.

Figure 7-6 Menu: “Settings, Date / Time, Settings, “SNTP Server” mode

**Settings**

Here, you can change the settings for the date and time.

**Mode**

Via the “SNTP server” Modbus, the internal clock of the device is automatically synchronized with an SNTP server (Simple Network Time Protocol).

**SNTP server**

Enter the address or the URL of the SNTP server and check the entered address by clicking “Check connection”.

**Polling cycle**

Enter the desired polling rate in seconds (s).

**Time zone**

Here, you can select a time zone. You can find a list of all time zones in [Section “Time zones” on page 55](#).

**Summer time rule**

Here, you can select a summer time rule. A description of the summer time rules can be found in [Section “Summer time rule” on page 57](#).

## 7.2.4 Time zones

### Navigation on the web server

“Settings, Date / Time, Settings, “Time zones”

GMT -12:00	
GMT -11:00	Pacific (Midway, Niue, Samoa)
GMT -10:00	Pacific (Hawaii, Honolulu, Tahiti)
GMT -09:30	Pacific (Marquesas)
GMT -09:00	America (Anchorage, Yakutat, Alaska)
GMT -08:00	America (Los Angeles, Vancouver, Tijuana)
GMT -07:00	America (Denver, Edmonton, Phoenix, Yellowknife)
GMT -06:00	America (Chicago, Cancun, Mexico City, Costa Rica, Winnipeg)
GMT -05:00	America (Cayman, Bogota, Havana, Lima, New York, Panama, Toronto)
GMT -04:30	America (Caracas)
GMT -04:00	America (Asuncion, Barbados, Grenada, Santiago)
GMT -03:30	America (St. Johns), Canada (Newfoundland)
GMT -03:00	America (Buenos Aires, Cordoba, Bahia, Recife, Sao Paulo)
GMT -02:00	America (Noronha), Atlantic (South Georgia)
GMT -01:00	Atlantic (Azores, Cape Verde)
GMT 00:00	Africa (Accra, Dakar) Europe (Lisbon, Madeira, Reykjavik, Dublin, London)
GMT +01:00	Africa (Lagos, Tunis) Europe (Amsterdam, Belgrade, Berlin, Brussels, Copenhagen, Paris, Rome)
GMT +02:00	Africa (Cairo, Johannesburg) Europe (Helsinki, Athens, Riga, Sofia)
GMT +03:00	Africa (Mogadishu, Nairobi), Asia (Baghdad, Bahrain, Kuwait, Qatar), Europe (Minsk, Kaliningrad)
GMT +04:00	Asia (Tehran, Baku, Dubai) Europe (Moscow, Volgograd) India (Mahe, Mauritius, Reunion)
GMT +04:30	Asia (Kabul)
GMT +05:00	Asia (Dushanbe, Tashkent) India (Maldives)
GMT +05:30	Asia (Calcutta, Colombo)
GMT +05:45	Asia (Kathmandu)
GMT +06:00	Asia (Almaty, Bishkek, Dacca, Yekaterinburg, Thimbu)
GMT +06:30	Asia (Rangoon), India (Cocos)
GMT +07:00	Asia (Bangkok, Jakarta, Novosibirsk, Omsk)

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

GMT +08:00	Asia (Brunei, Hong Kong, Kuala Lumpur, Singapore, Taipei, Manila), Australia (Perth, West)
GMT +08:45	Australia (Eucla)
GMT +09:00	Asia (Irkutsk, Seoul, Tokyo)
GMT +09:30	Australia (Adelaide, Darwin, North, South)
GMT +10:00	Asia (Yakutsk)  Australia (Brisbane, Melbourne, Queensland, Sydney, Tasmania)
GMT +11:00	Asia (Vladivostok)  Pacific (Guadalcanal)
GMT +11:30	Pacific (Norfolk)
GMT +12:00	Asia (Kamchatka)  Pacific (Auckland, Fiji, Majuro)
GMT +12:45	Pacific (Chatham)
GMT +13:00	Pacific (Apia, Enderbury, Tongatapu)
GMT +14:00	Pacific (Kiritimati)



## 7.2.5 Summer time rule

### Navigation on the web server

“Settings, Date / Time, Settings, Summer time rule”

### Date / Time

Status	
Time:	5:02:35 PM
Date:	12/22/2019

Settings	
Mode:	SNTP server
SNTP server:	<input type="text" value="europe.pool.ntp.org"/> <input type="button" value="Check connection"/>
Polling cycle:	<input type="text" value="300"/> s
Time zone:	UTC+01:00 Africa (Lagos, Tunis), Europe (Amsterdam, Belgrad, Berlin, Brüssel)
Summer time rule:	Manually
Based on UTC:	<input checked="" type="checkbox"/>
Begin summer time:	<input type="text" value="Last"/> <input type="text" value="Sunday"/> <input type="text" value="in"/> <input type="text" value="March"/> <input type="text" value="01:00"/> <input type="text" value="o'clock"/>
End summer time:	<input type="text" value="Last"/> <input type="text" value="Sunday"/> <input type="text" value="in"/> <input type="text" value="October"/> <input type="text" value="01:00"/> <input type="text" value="o'clock"/>
	<input type="button" value="Discard"/> <input type="button" value="Save"/>

Figure 7-7 Menu: “Settings, Date / Time, Settings, Summer time rule”

### Status

Here, the current date and current time is shown.

### Settings

Here, you can change the settings for the date and time.

You can select the summer time rule for Europe or the USA, or set a summer time rule manually. If you set the summer time rule manually, you can specify the start and end of the summer time rule:

- Month
- Day of week
- Hours
- Minutes

## 7.3 Adjusting the display (contrast, brightness, illumination time of backlight)

### 7.3.1 Adjusting the contrast of the display

Navigation on the display "Display, Contrast"

#### Contrast

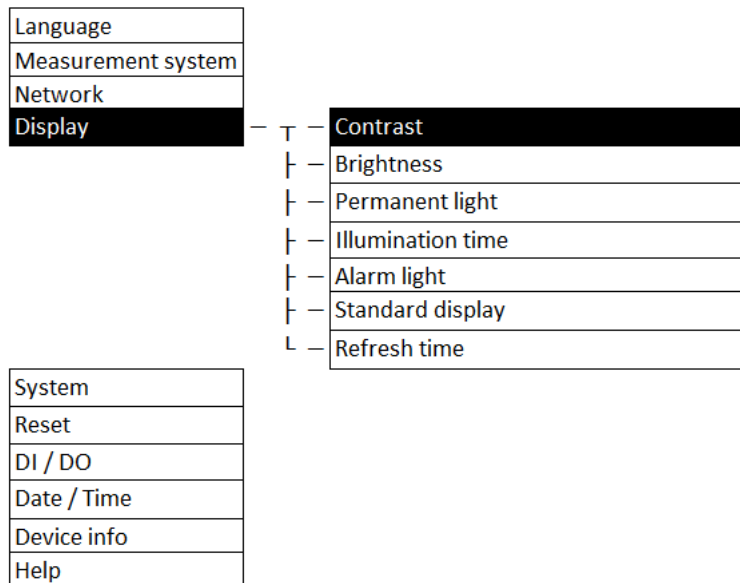


Figure 7-8 Menu: "Display, Contrast"

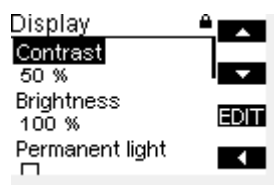


Figure 7-9 Settings: "Display, Contrast"

You can set the contrast of the display. The default setting for the contrast is 50%.

### 7.3.2 Adjusting the brightness of the display

Navigation on the display "Display, Brightness"

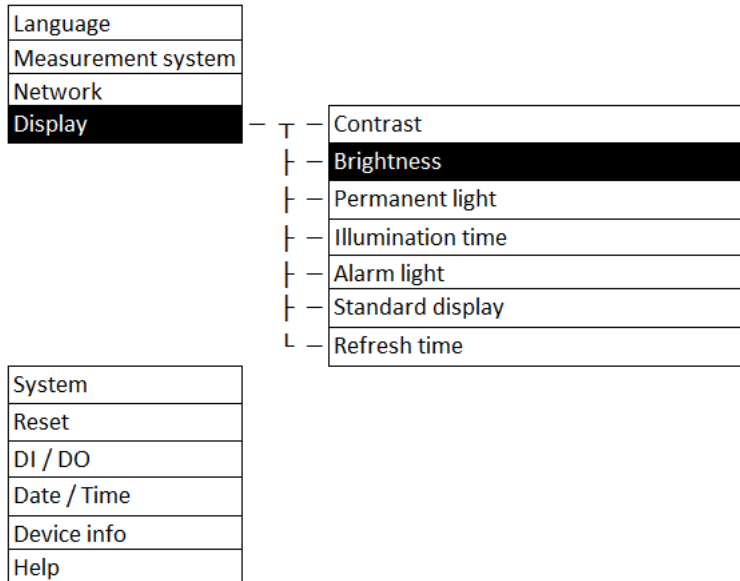


Figure 7-10 Menu: "Display, Brightness"

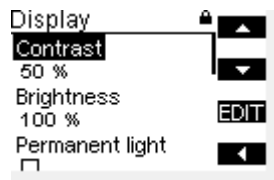


Figure 7-11 Settings: "Display, Brightness"

You can adjust the brightness of the display. The default setting for the brightness of the display is 100%.

### 7.3.3 Adjusting the illumination time of the backlight

Navigation on the display "Display, Permanent light, Illumination time"

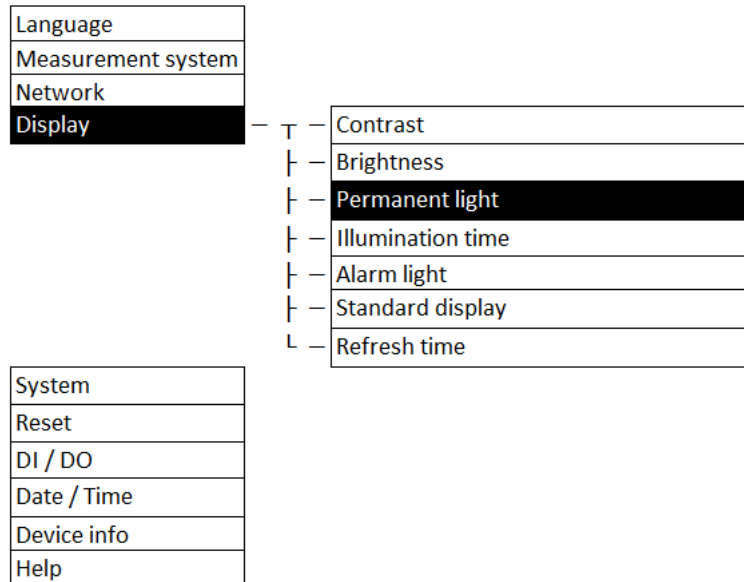


Figure 7-12 Menu: "Display, Permanent light"



Figure 7-13 Settings: "Display, Permanent light"

**Permanent light**

When the “Permanent light” checkbox is enabled, the white backlight of the display is on permanently.

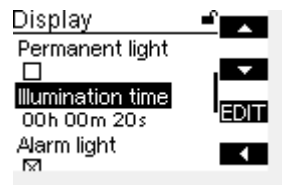


Figure 7-14 Settings: “Illumination time”

**Permanent light**

When the “Permanent light” checkbox is disabled, the white backlight of the display is off.

**Illumination duration**

When the “Permanent light” checkbox is disabled, you can freely define the duration for which the backlight remains lit.

The default setting for the illumination time is 20 seconds.

You can also change the settings for the illumination time via the web server.

### 7.3.4 Selecting the format of the standard display (IEC or IEEE)

Navigation on the display “Display, Standard display”

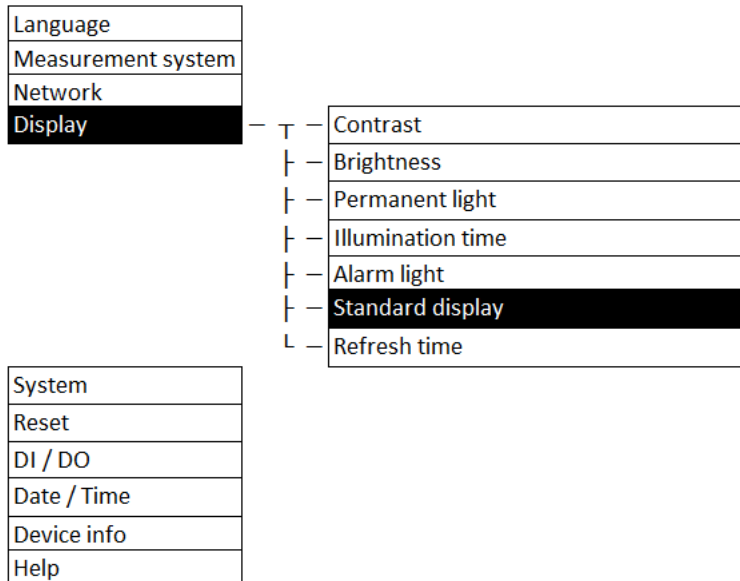


Figure 7-15 Menu: “Display, Standard display”



Figure 7-16 Settings: “Display, Standard display”

#### Standard display

You can choose between the formats IEC and IEEE for displaying the measured values and the associated units.

The default setting is IEC.

You can also change the format for the standard displays via the web server (see [Section “Adjusting the display via the web server” on page 65](#)).

### 7.3.5 Activating color change for alarm

Navigation on the display “Display, Alarm light”

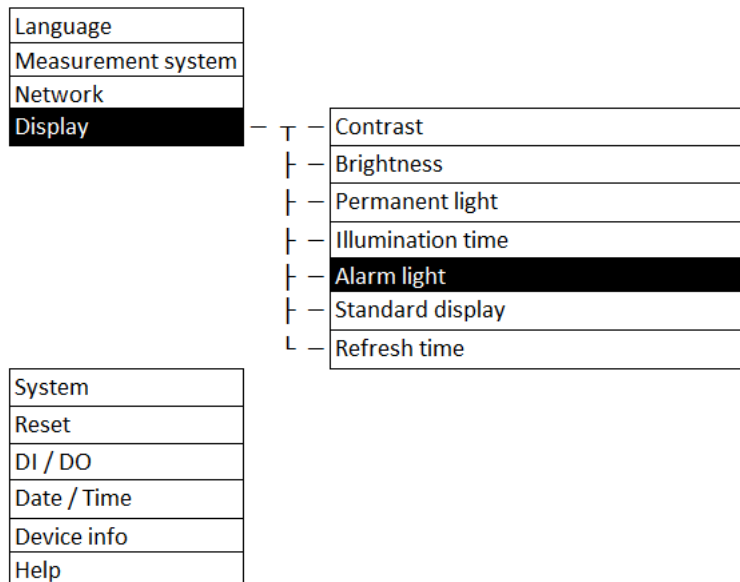


Figure 7-17 Menu: “Display, Alarm light”

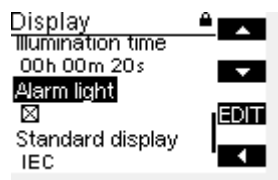


Figure 7-18 Settings: “Display, Alarm light”

#### Alarm light

The backlight of the display can change from white to red in the event of an error (color change).

When the “Alarm light” checkbox is enabled, the color change is active.

In the default setting, the color change is enabled.

You can also change the settings for the alarm light via the web server (see [“Red color change in case of error”](#) on page 65).

### 7.3.6 Selecting the refresh time for displaying measured values

Navigation on the display "Display, Refresh time"

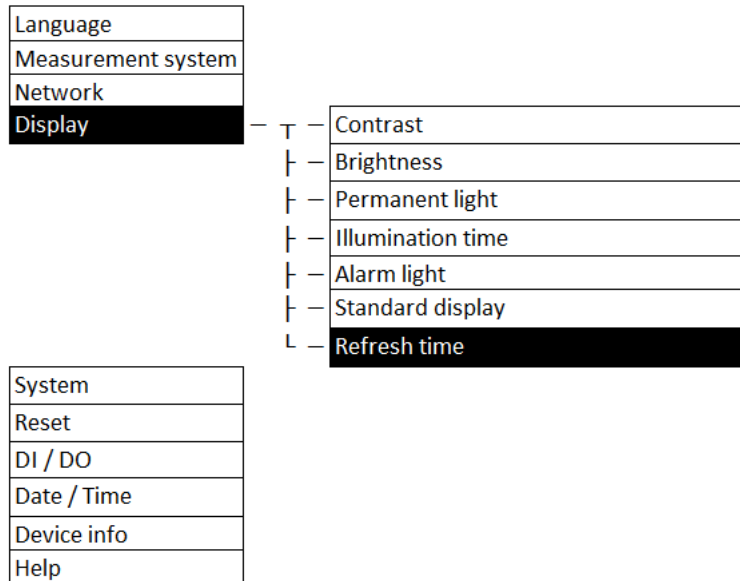


Figure 7-19 Menu: "Display, Refresh time"



Figure 7-20 Settings: "Display, Refresh time"

#### Refresh rate

You can choose between three refresh times for displaying the measured values:

- 500 ms
- 1 s
- 2 s

The default setting for the refresh time is 1 s.



### 7.3.7 Adjusting the display via the web server

Navigation on the web server

“Settings, Display”

#### Display

The screenshot shows a web interface for adjusting display settings. It features a 'Status' section at the top. Below this, there are four main configuration items:
 

- Standard display:** A dropdown menu currently set to 'IEC'.
- Activate configuration via display:** A checkbox that is checked.
- Illumination duration:** A dropdown menu set to 'Set duration', followed by a text input field containing '00:00:20' and a label 'hh:mm:ss'.
- Red color change in case of error:** A checkbox that is checked.

 At the bottom right of the settings area, there are two buttons: 'Discard' and 'Save'.

Figure 7-21 Web server: “Settings, Display”

<b>Status</b>	Here, the current settings for the display are shown. It is also possible to modify them here.
<b>Standard display</b>	Here, you can choose between the formats “IEC” or “IEEE”.
<b>Activate configuration via display</b>	If this checkbox has been enabled, you can configure the device via the display.
<b>Illumination duration</b>	Here, you can select between: <ul style="list-style-type: none"> <li>– Steady off</li> <li>– Set duration (in hh:mm:ss)</li> <li>– Steady on</li> </ul>
<b>Red color change in case of error</b>	If this checkbox is enabled, the color change in the event of an error is active. If this checkbox is disabled, the color change in the event of an error is inactive. In the default setting, this checkbox is enabled.

## 7.4 Device information

Navigation on the display "Device info"

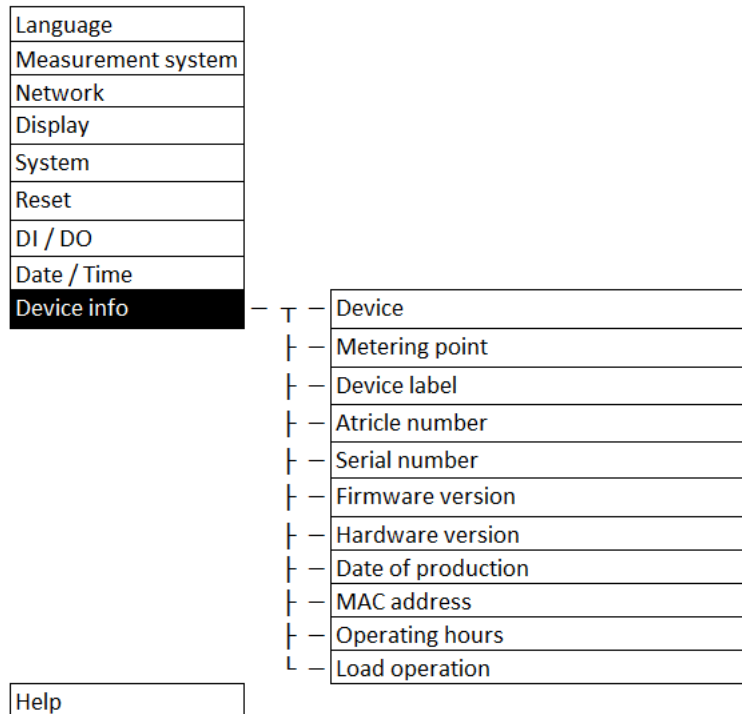


Figure 7-22 Menu: "Device info"

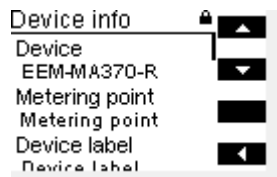


Figure 7-23 Display: "Device info"

The following device information can be read on the display:

- Hardware version
- Firmware version
- Device label
- Article number
- UUID
- Date and time of production
- Serial number
- Bootloader revision

## 7.5 Resetting the device to default settings

Navigation on the display "System, Factory reset"

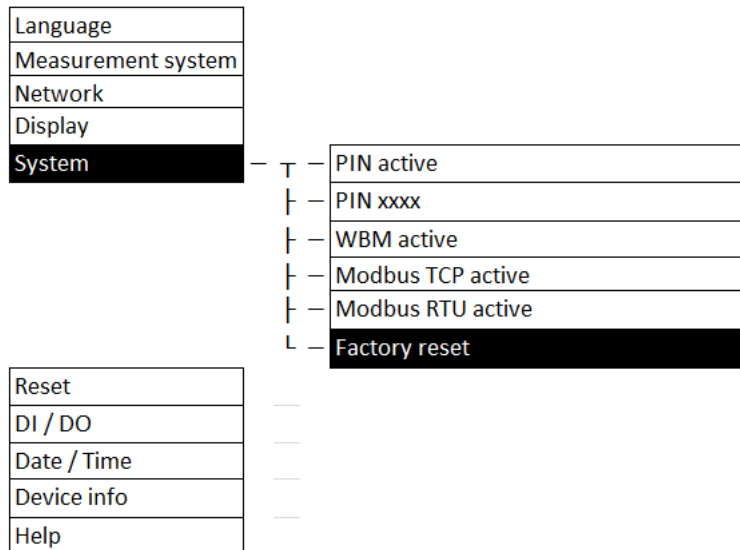


Figure 7-24 Menu: "System, Factory reset"

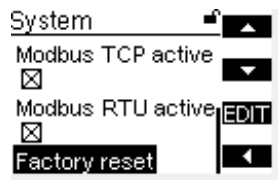


Figure 7-25 Menu: "System, Factory reset"

With the device PIN, the device can be reset to the default settings.

In the process, all configurations are lost and the device is returned to the delivery state.







## 8 Configuration

The device configuration is set by default as follows.

### **Configuration via the display**

You can use the control buttons on the front of the device to enter the basic device configuration and configure settings on the display.

### **Configuration via web server**

The web server is the tool provided for device configuration. In addition to offering intuitive operation, it has been designed for not only entering the basic device configuration, but also for performing all other configurations.

### **Configuration via Modbus**

In addition to the web server, the Modbus communication interface can also be used for device configuration.

## 8.1 Access and passwords



For your own safety, change the access data.

### 8.1.1 Editing access data via the display

#### Navigation on the display

“System, PIN xxxx”

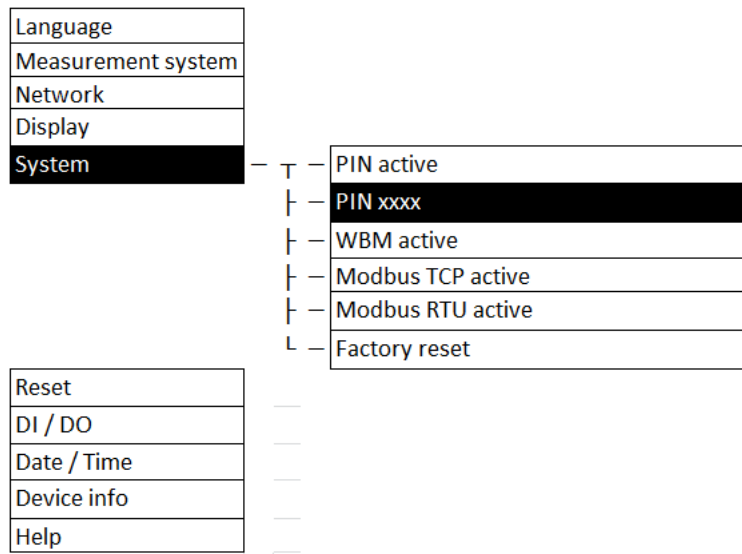


Figure 8-1 Menu: “System, PIN xxxx”

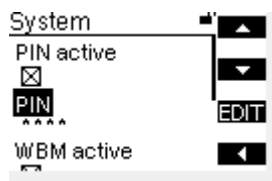


Figure 8-2 Settings: “System, PIN xxxx”

The default setting for the PIN is “0100”.

1. Under “PIN”, change the preset PIN for access permission.
2. Subsequently apply it by confirming the change.

In addition to the option to change the PIN, the device also offers an option for deactivating the PIN.



## 8.1.2 Editing access data via the web server

### Navigation on the web server

“System, User management, Change password”

### User management

The screenshot displays two sections of a web interface. The top section, titled 'Login', features a text input field labeled 'Password:' containing the text 'Logged in as admin'. To the right of this field is a teal button labeled 'Login'. The bottom section, titled 'Change password', contains two text input fields. The first is labeled 'New password:' and the second is labeled 'New password (repeat:)', both with eye icons for visibility toggling. A teal button labeled 'Change password' is positioned below the second field.

Figure 8-3 Menu: “System, User management, Change password”

The default setting for the password is “adm1n”.

1. Under “Change password”, change the preset password for access permission.
2. Confirm the change by clicking the “Change password” button.

### 8.1.3 Deactivating the configuration via the display

Navigation on the web server

“Settings, Display”

#### Display

The screenshot shows a web interface for configuring the display settings of an EMpro device. The page is titled "Display" and has a "Status" header. There are four main settings:

- Standard display:** A dropdown menu currently showing "IEC".
- Activate configuration via display:** A checkbox that is currently checked.
- Illumination duration:** A dropdown menu set to "Set duration", followed by a time input field showing "00:00:20" and a "hh:mm:ss" label.
- Red color change in case of error:** A checkbox that is currently checked.

At the bottom right of the settings area, there are two buttons: "Discard" and "Save".

Figure 8-4 Menu: “Settings, Display”

The device provides an option for protection against manipulative access: You can prevent access to the device and thus changes to the configured data by disabling the “Activate configuration via display” checkbox.

You can continue to use the control buttons of the device to read measurement values.

If the “Activate configuration via display” checkbox is disabled, it is not possible to use the function for deactivating the web server. The display and web server cannot be deactivated simultaneously.

### 8.1.4 Deactivating the Modbus communication interface

You can prevent device access via the Modbus communication interface by deactivating the communication interface (“WBM active”).

**Navigation on the display**

“System, PIN active/WBM active (web-based management)”

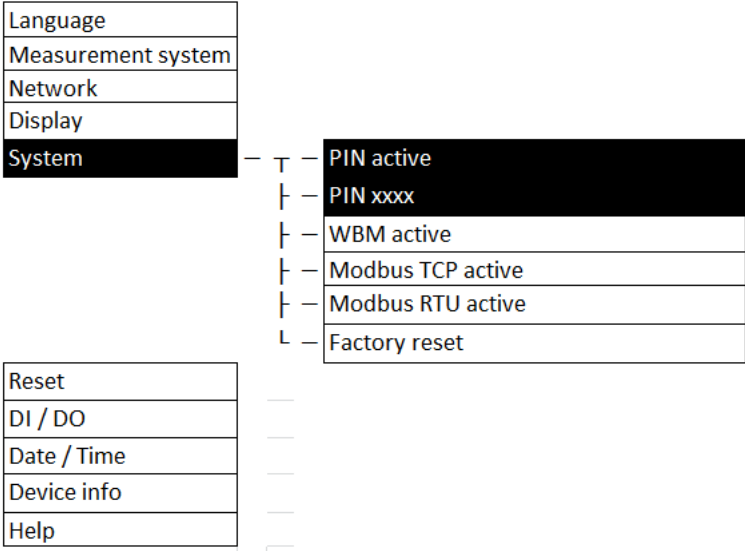


Figure 8-5 Menu: “System, PIN active/WBM active”

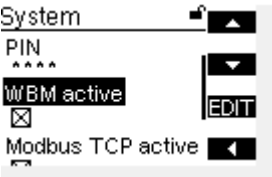


Figure 8-6 Setting: “System, WBM active”

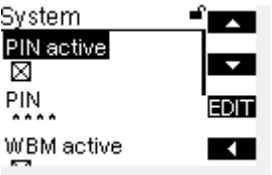


Figure 8-7 Setting: “System, PIN active”

If you disable the “WBM active” checkbox, the device no longer allows access via the communication interface.

Through this deactivation, access to the web server is also prohibited.

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

This precludes use of the function for deactivating the control buttons. The display and web server cannot be deactivated simultaneously.

## 8.2 Transferring configuration data

If you want to apply existing configurations to other devices, you can transmit the configuration data as follows:

- Exporting configuration data
- Importing configuration data
- Direct transfer of configuration data

### 8.2.1 Exporting configuration data

#### Navigation on the web server

“System, Configuration data, Export configuration”

The screenshot shows a web interface for exporting configuration data. At the top, there are three tabs: 'Transfer configuration', 'Export configuration' (which is active), and 'Import configuration'. Below the tabs, there are two buttons: 'Select all' and 'Unselect all'. A list of configuration categories follows, each with a checkbox:

- Measurement system:
- Average values:
- Tariffs:
- Logging:
- Alarming:
- Network:
- Modbus:
- Digital output:
- Digital input:
- Impulse counter:
- Date / Time:
- Identifier:
- Display:

At the bottom right of the list, there is a teal 'Download' button.

Figure 8-8 Menu: “System, Configuration data, Export configuration”

If you want to export the entire device configuration, all checkboxes except the network configuration are enabled.

To perform a 1:1 device exchange, or to download an identical device configuration, click “Select all”. All checkboxes in the overview are enabled.

Another option is to perform a partial configuration by only enabling the required checkboxes. In this case, only the selected configuration is downloaded.

Press the “Download” button to download the configuration.

### 8.2.2 Importing configuration data

#### Navigation on the web server

“System, Configuration data, Import configuration“



The screenshot shows a web interface for importing configuration data. At the top, there are three tabs: "Transfer configuration", "Export configuration", and "Import configuration". The "Import configuration" tab is selected. Below the tabs is a file selection area with a "Choose File" button and the text "No file chosen". Below that is a blue "Import" button.

Figure 8-9 Menu: “System, Configuration data, Import configuration“

If you want to load an existing configuration file onto the device, you can use the “Choose file” button to select it.

Use the “Import” button to load the selected file onto the device.

### 8.2.3 Direct transfer of configuration data

Navigation on the web server

“System, Configuration data, Transfer configuration”

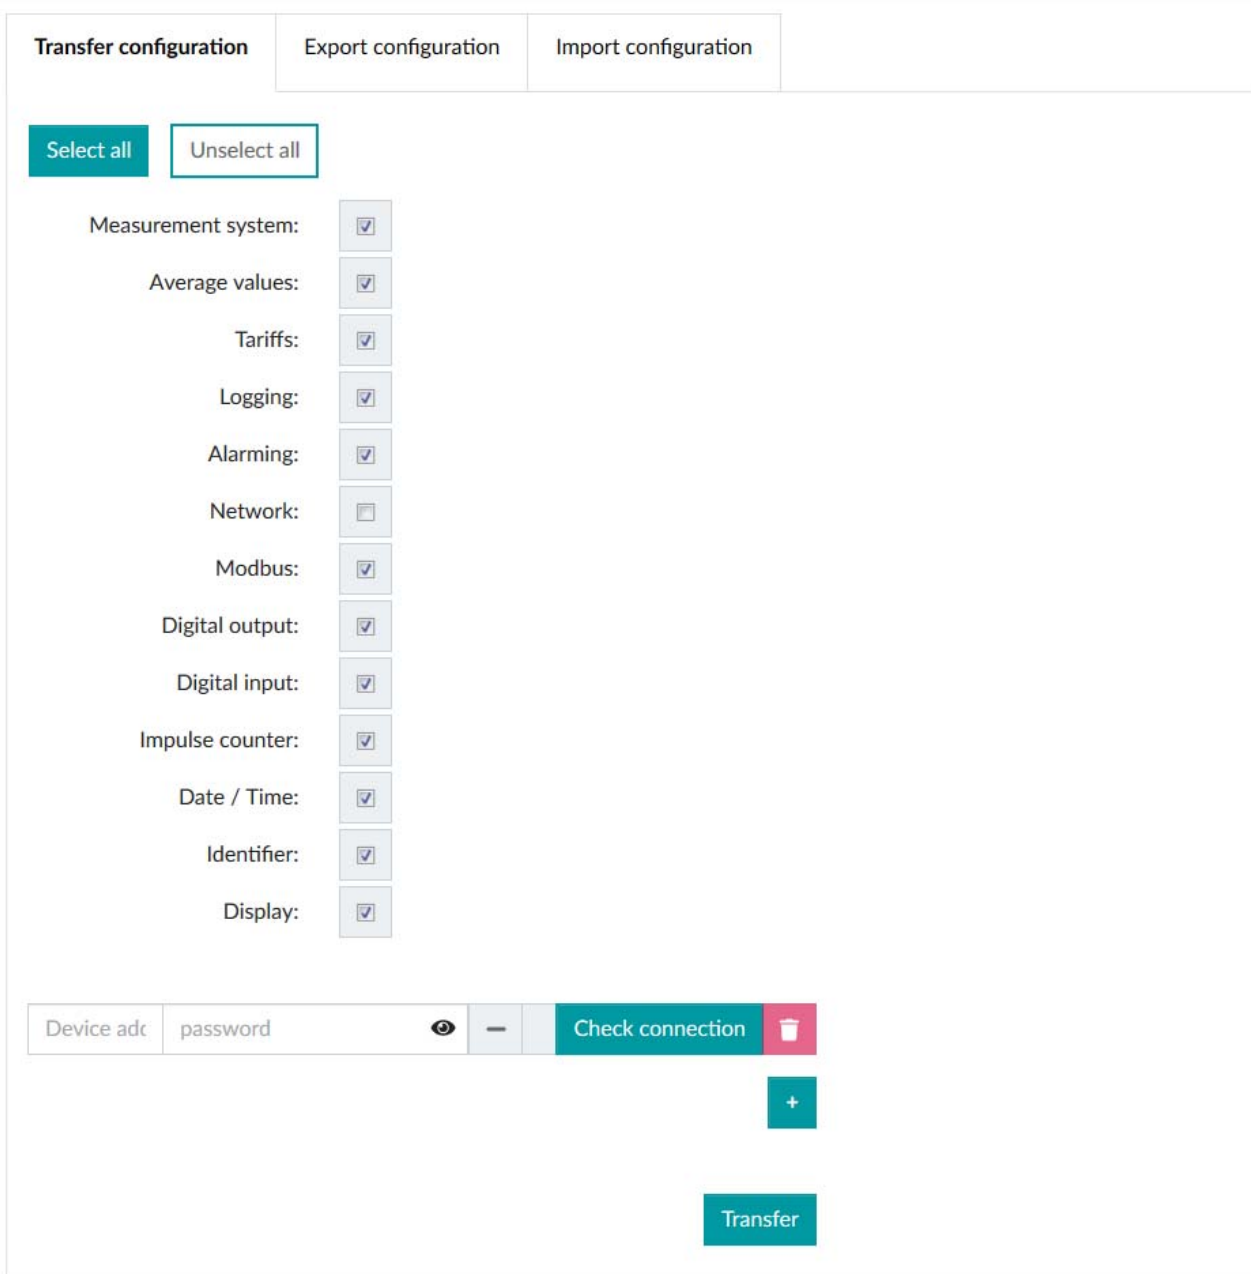


Figure 8-10 Menu: “System, Configuration data, Transfer configuration”

By directly transferring the configuration data, you prevent caching on a local computer.

If you want to transfer the entire device configuration directly from one device to another, use the “Select all” button to enable all checkboxes in the overview. The network connection is not activated. If you want to include the network configuration, select it additionally.

Observe the following:

- You have to know the IP addresses and passwords of the devices.
- All devices have to be accessible via the network.

In addition to transferring the entire device configuration, you can also perform a partial transfer of the configuration by selecting the required checkboxes.

Enter the device addresses and passwords into the respective fields.

To check the connection to the entered device, click the “Check connection” button.

Click the “Transfer” button to transfer the selected configuration data to the devices.



# 9 Measuring technology

## 9.1 Meter readings

Navigation on the web server

“Home, Meter readings”

### Meter readings

[Reset all](#)

<b>Energy meter total</b> Ea+ 0,02 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k varh Es 0,02 k VAh	<b>Energy meter</b> Ea+ 0,00 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k Wh Es 0,00 k VAh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>	<b>Tariff meter 1</b> Deactivated Ea+ 0,00 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k varh Es 0,00 k VAh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>
<b>Tariff meter 2</b> Deactivated Ea+ 0,00 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k varh Es 0,00 k VAh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>	<b>Tariff meter 3</b> Deactivated Ea+ 0,00 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k varh Es 0,00 k VAh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>	<b>Tariff meter 4</b> Deactivated Ea+ 0,00 k Wh Ea- 0,00 k Wh Er+ 0,00 k varh Er- 0,00 k varh Es 0,00 k VAh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>
<b>Impulse counter</b> Deactivated Imp 0,00 Imp_res 0,00 kWh <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>	<b>Operating hour counter</b> T_tot 132,00 h T_load 0,00 h <div style="text-align: center; margin-top: 10px;"><a href="#">Reset</a></div>	

Figure 9-1 Menu: “Home, Meter readings”

The device provides various meter readings for measuring the energy data. These are described in the following sections.

## 9.1.1 Energy meters

### 9.1.1.1 Energy meter, total

Navigation on the display "E, Energy total"

#### Navigation on the display

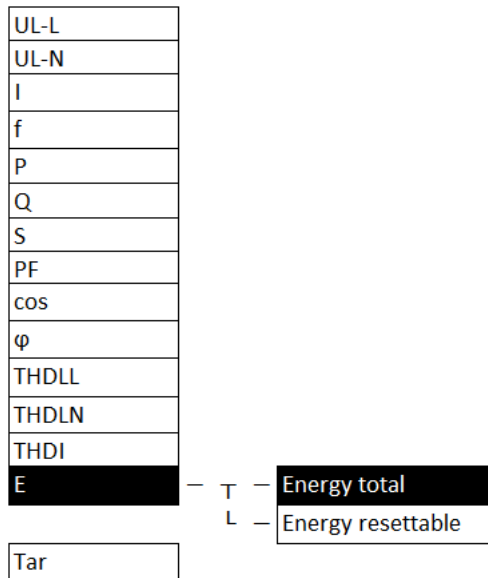


Figure 9-2 Menu: "E, Energy total"

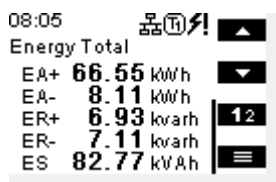


Figure 9-3 Menu: "E, Energy total"

#### Energy total

This energy meter is always counting.

This energy meter cannot be reset.

The following energy data is recorded:

- Active energy: supply (Ea+), consumption (Ea-)
- Reactive energy: supply (Er+), consumption (Er-)
- Apparent energy (Es)

### 9.1.2 Energy resettable

**Navigation on the display** "E, Energy resettable"

**Navigation on the display**

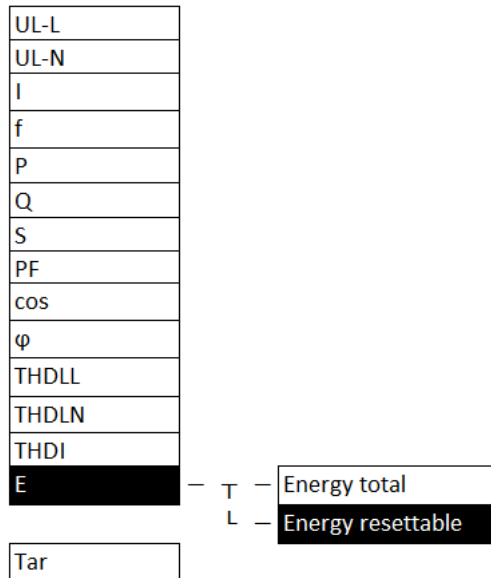


Figure 9-4 Menu: "E, Energy resettable"

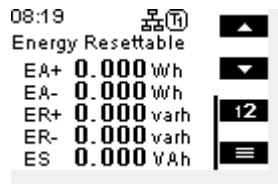


Figure 9-5 Menu: "E, Energy resettable"

#### Energy resettable

This energy meter is always counting. This energy meter can be reset.

#### Reset

The reset can be performed by means of the web server, the control buttons on the display, or the Modbus communication interface.

The following energy data is recorded:

- Active energy: supply (Ea+), consumption (Ea-)
- Reactive energy: supply (Er+), consumption (Er-)
- Apparent energy (Es)

### 9.1.3 Tariff meter

Navigation on the display "Tar, Tariff meter 1...4"

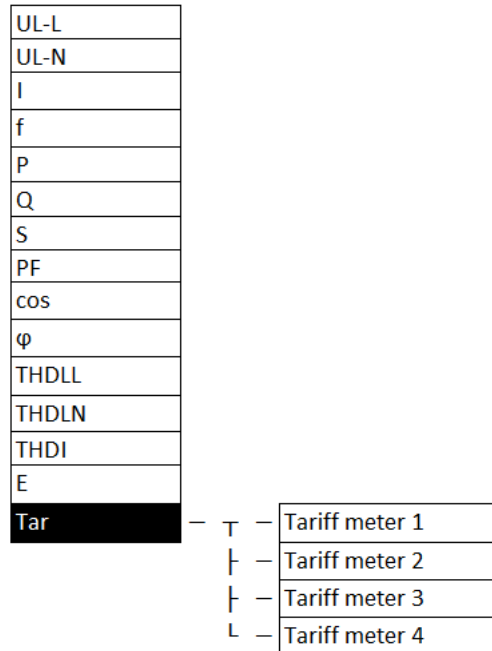


Figure 9-6 Menu: "Tar, Tariff meter 1...4"

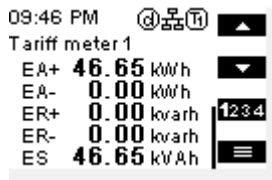


Figure 9-7 Menu: "Tar, Tariff meter 1"

#### Tariff meter (1...4)

If a tariff meter is selected/activated, counting is always performed on this meter. Tariff meters 1...4 can be reset.

#### Reset

The reset can be performed by means of the web server, the control buttons on the display, or the Modbus communication interface.

The following energy data is recorded for each tariff meter:

- Active energy: supply (Ea+), consumption (Ea-)
- Reactive energy: supply (Er+), consumption (Er-)
- Apparent energy (Es)

### 9.1.4 Operating hours counter

Navigation on the display “Device info, Operating hours/Load operation”

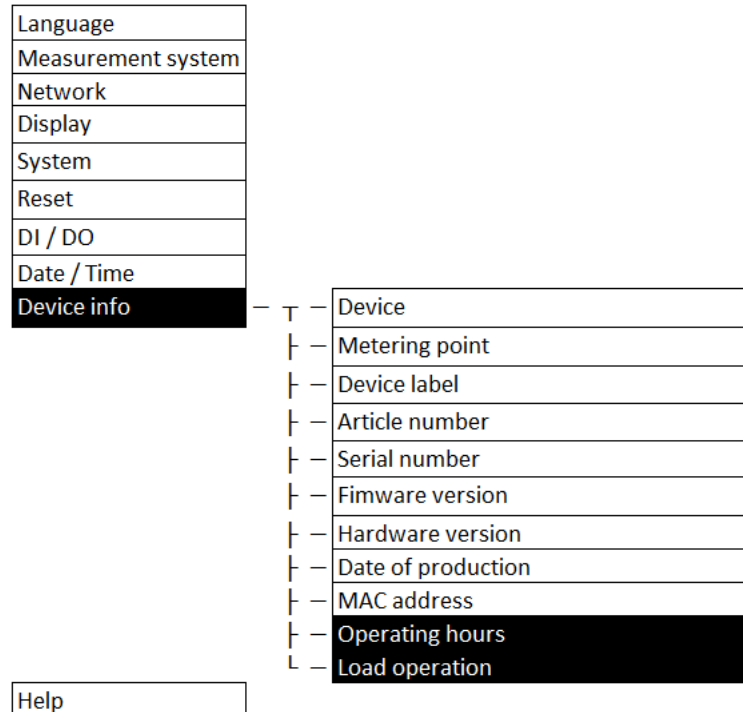


Figure 9-8 Menu: “Device info, Operating hours/Load operation”

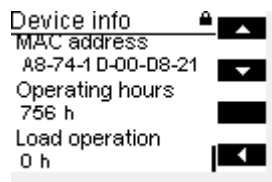


Figure 9-9 Menu: “Device info, Operating hours/Load operation”

The device provides two different operating hour counters.

**Operating hours (T\_tot)**

This counter keeps running as long as the device is supplied with voltage.

**Load operation (T\_load)**

This counter is a load counter that starts running from a configurable power threshold (in W). The default setting for the power threshold is 100 W. The value can be configured via the Modbus communication interface.

## 9.2 Statistics

### 9.2.1 Average values

The device makes it possible to determine average values based on the available measurement data.

The average is generated for the following measurement values:

- Voltages: phase to phase U12, U23, U31
- Voltages: phase to neutral conductor U1, U2, U3
- Frequency
- Currents I1, I2, I3, IN
- Active power: consumption, supply
- Reactive power: consumption, supply
- Apparent power

The measurement values are divided into groups. These groups can be configured independently of each other.

The following groups have been formed:

- Voltages
- Frequency
- Currents
- Power
- Predictions

For each average value, the minimum and maximum averages are always recorded and displayed. The data can be called up via the web server, the display and via the communication interface.

There are three different types of average value generation:

- AVG over fixed interval
- AVG over rolling interval
- AVG over sliding interval

The average value types are described in the following sections.

The figures show the three different types of average value calculation. Select a time interval that the measuring device will then use for calculating the average.

**Navigation on the web server**

“Settings, Average values”

**Average values**

Status				
Parameter	Type	Interval (hh:mm:ss)	Sub periods	Digital input
Voltage	0	00:15:00	-	<input type="checkbox"/>
Current	0	00:15:00	-	<input type="checkbox"/>
Frequency	0	00:15:00	-	<input type="checkbox"/>
power	0	00:15:00	-	<input type="checkbox"/>
Prediction	0	00:15:00	-	<input type="checkbox"/>

Figure 9-10 Menu: “Settings, Average values”

**Status**

Here, the current status of the average value generation is shown.

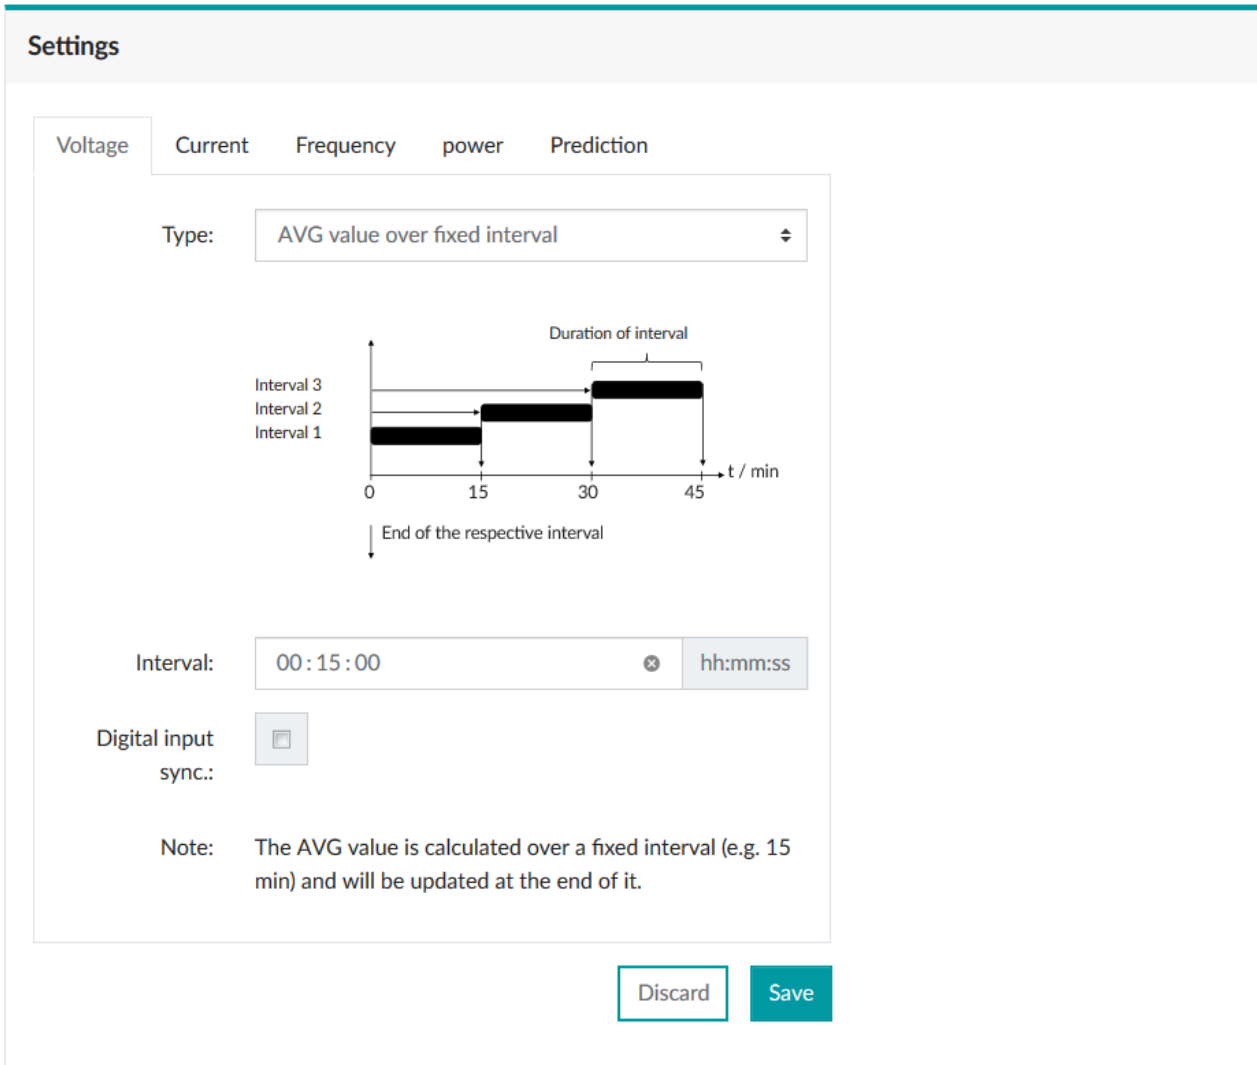


Figure 9-11 Menu: "Average values, Settings"

## Settings

Here, enter the configuration in hh:mm:ss for the average value generation. The average values can be synchronized via the digital input by enabling the checkbox.



**9.2.1.1 AVG over fixed interval (fixed block)**

**Interval with fixed measuring interval length**

The intervals follow each other consecutively at the measurement interval length. The requirement is calculated and updated at the end of each interval.

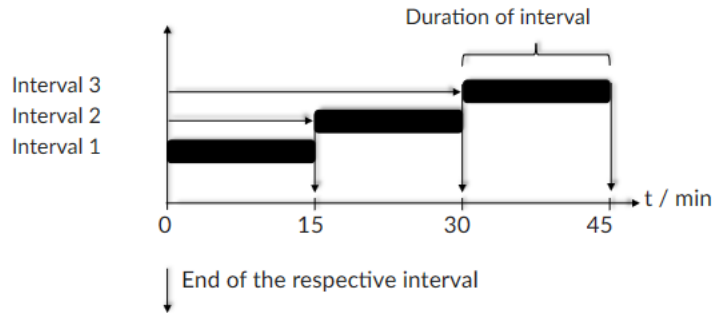


Figure 9-12 AVG over fixed interval (fixed block)

**9.2.1.2 Sliding average value (sliding block)**

**Interval with sliding measuring interval length**

The intervals slide and have a set measuring interval length. The average value is generated and updated with the sliding speed. During each update, the average is generated for the last completed interval.

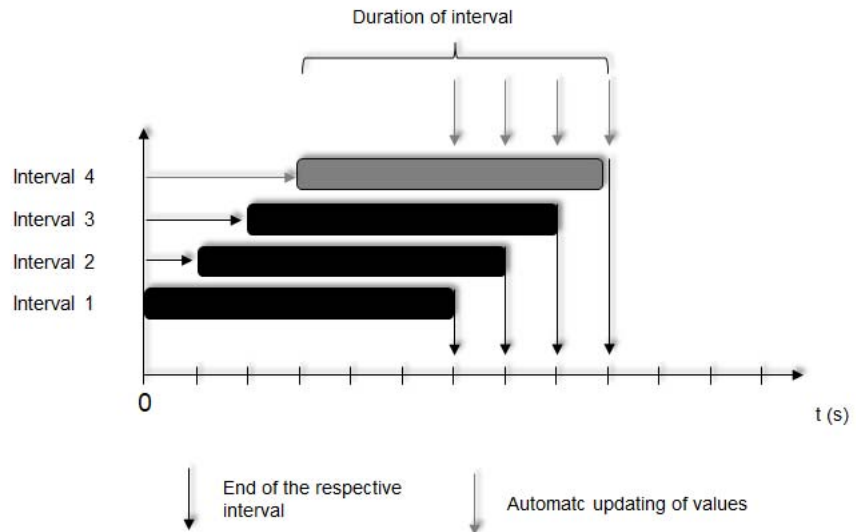


Figure 9-13 Sliding average value (sliding block)

9.2.1.3 Rolling average value (rolling block)

Interval with rolling block

There is a set interval and a subinterval. The subinterval has to be an integer factor of the interval. Example: If the selected interval is 15 minutes, three 5-minute subintervals have to be selected to match it. The average value is generated and updated at the end of each completed subinterval.

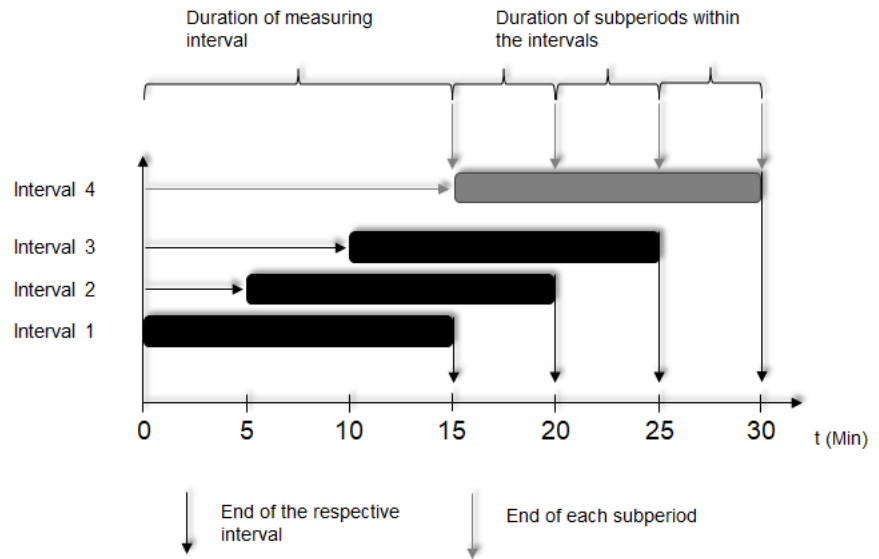


Figure 9-14 Rolling average value (rolling block)

**9.2.1.4 Trend calculation (equally weighted average)**

**Interval with fixed measuring interval length**

The intervals follow each other consecutively at the measurement interval length. All recorded individual values within the generated average values have the same weight.

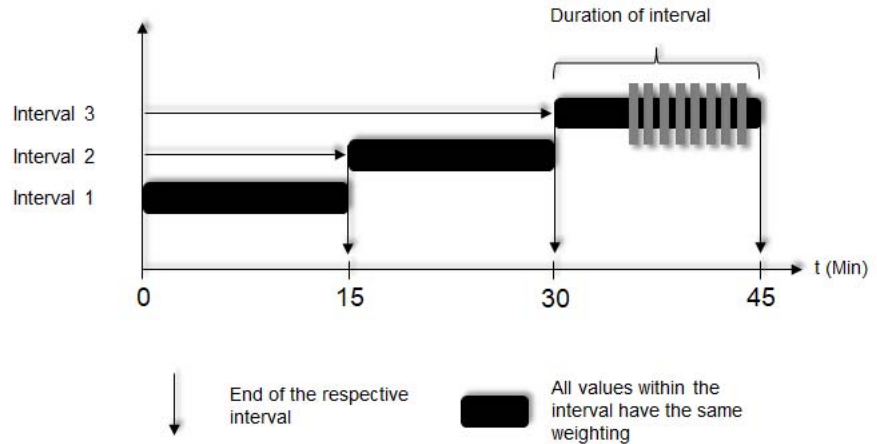


Figure 9-15 Prediction calculation (equally weighted average)

**9.2.1.5 Prediction calculation (weighted average)**

**Interval with fixed measuring interval length**

The intervals follow each other consecutively at the measurement period length. The last acquired, individual value within the generated average values has the highest weight. As each new value is recorded, the weight of the individual values decreases (exponentially).

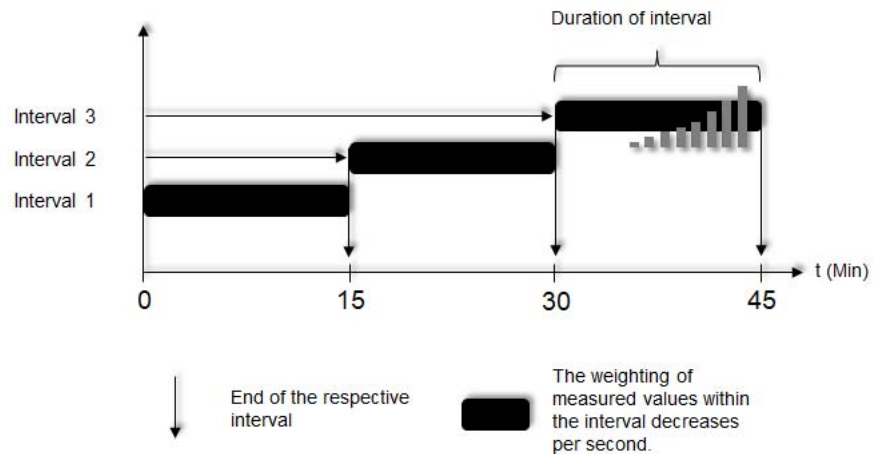


Figure 9-16 Prediction generation (weighted average)



# 10 Functions

## 10.1 Digital input

The digital input complies with IEC 61131-2 Type 3. It includes the following functions:

- Impulse counter
- Tariff selection
- Synchronization of average values
- Acknowledgment of alarms

## Digital input

### Status

State: Inactive

Activated:

### Linked functions

Impulse counter:  [Link to Impulse counter](#)

Tariffs:  [Link to Tariffs](#)

Average values:  [Link to Average values](#)

Alarming:  [Link to Alarming](#)

### Settings

Identifier:

Activate:

Figure 10-1 Digital input

**Status**

The “Status” area shows the current status of the digital input.

**Linked functions**

The digital input has been configured with a defined function.

By clicking the respective link, you can access the configuration page for the function.

**Settings**

An identifier can be assigned to the digital input. With the checkbox, it can be activated or deactivated.

In the default settings, the digital input is activated.

### 10.1.1 Impulse counter

The impulse counter counts the pulses generated by an external device.

It is possible to assign a measuring unit (volume, weight, distance, electrical power or an own unit), as well as the valency.

Navigation on the web server

“Settings, Impulse counter”

#### Impulse counter

The screenshot shows a web interface for configuring an impulse counter. It is split into two main panels: 'Status' and 'Settings'.  
**Status Panel:**  
 - 'Activated: [checked]'  
 - 'Valency: 1'  
 - 'Unit: kWh'  
**Settings Panel:**  
 - 'Activate: [checked]'  
 - 'Valency: 1' (input field with a spinner control)  
 - 'Unit: kWh' (dropdown menu)  
 - 'Discard' and 'Save' buttons at the bottom right.

Figure 10-2 Menu: “Settings, Impulse counter”

**Status**

The “Status” area shows the current status of the digital input.

**Settings**

Set the impulse counter in accordance with your requirements.

**Activated**

The impulse counter can be activated/deactivated with the checkbox.

**Valency**

The impulse corresponds to the set value and is thus an additional multiplier. The valid value range is 1 ... 65535.

**Unit**

Select a unit from the drop-down menu, or assign an own unit by selecting “Custom”.

Unit: You can select between the following units:

- kWh
- kVAh
- kvarh
- ml
- l
- m<sup>3</sup>
- g
- kg
- t
- m
- km
- Custom

You can use the "Custom" option to define an own unit.



### 10.1.2 Tariff selection

A switchover from one tariff to another can be performed via the digital input. Depending on the status of the input signal, tariff meter 1 or tariff meter 2 is used. Two of the four tariffs of the device can be used via the digital input.

Via the web server, you can manually configure up to four tariffs (identifiers 1 to 4) and read them via the communication interface.

Navigation on the web server

“Settings, Tariffs”

#### Tariffs

**Status**

Active: No active tariff

**Settings**

Identifier 1:

Identifier 2:

Identifier 3:

Identifier 4:

Mode:

Digital input active:

Digital input inactive:

Figure 10-3 Menu: “Settings, Tariffs, Digital input”

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

<b>Status</b>	The "Status" area shows the current status of the digital input.
<b>Settings</b>	Set the impulse counter according to your requirements.
<b>Identifier</b>	Define the two identifiers (names) for your tariffs.
<b>Mode</b>	Specify the digital input as method for using the tariff selection.
<b>Digital input</b>	Define the status of the digital input in relation to the identifier.

### 10.1.3 Synchronization of average values

By means of the digital input, the synchronization pulse can be used for starting the respective average value generation.

Navigation on the display "UL-L, UL-L ..."

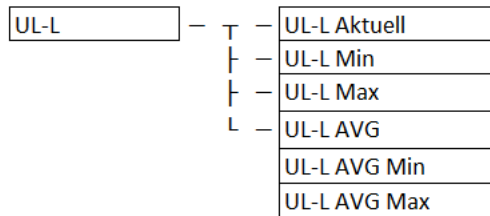


Figure 10-4 Menu: "UL-L"

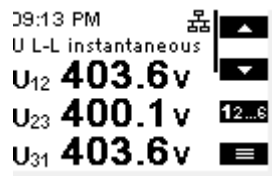


Figure 10-5 Menu: "UL-L, UL-L instantaneous" (instantaneous values, instantaneous)

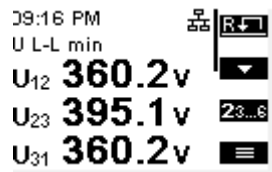


Figure 10-6 Menu: "UL-L, UL-L Min" (min. values, min)

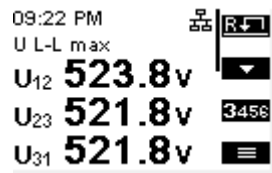


Figure 10-7 Menu: "UL-L, UL-L Max" (max. values, max)

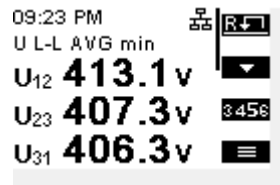


Figure 10-8 Menu: "UL-L, UL-L AVG Min" (minimum average values, AVG min)

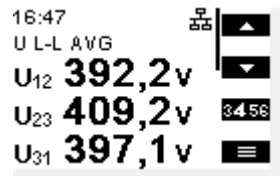


Figure 10-9 Menu: "UL-L, UL-L AVG" (average values, AVG)

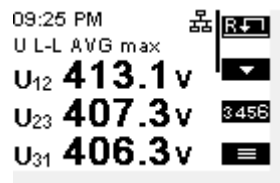


Figure 10-10 Menu: "UL-L, UL-L AVG max" (max. average values, AVG max)

Navigation on the web server

“Settings, Average values”

## Average values

Status				
Parameter	Type	Interval (hh:mm:ss)	Sub periods	Digital input
Voltage	0	00:15:00	-	<input type="checkbox"/>
Current	0	00:15:00	-	<input type="checkbox"/>
Frequency	0	00:15:00	-	<input type="checkbox"/>
power	0	00:15:00	-	<input type="checkbox"/>
Prediction	0	00:15:00	-	<input type="checkbox"/>

Figure 10-11 Menu: “Settings, Average values, Status”

The digital input can be used to synchronize the average value generation. This function is used, e.g., when energy requirements have been defined that are not to be exceeded.

When the average values are not synchronized, the measuring results might not correspond to the relevant energy requirements.

### 10.1.4 Acknowledgment of alarms

In most applications, configured alarms that occur in the event of an error in the application are self-acknowledging. After the error status has been restored to the normal status (operation) of the applications, the alarm message disappears again.

You can save an error status in the application until it is manually reset via the digital input.

## 10.2 Digital output

The digital output complies with IEC 61131-2 Type 3. It can be configured via the web server or the Modbus communication interface.

### Navigation on the web server

“Settings, Digital output”

### Digital output

**Status**

State: Inactive Aktivieren

---

**Settings**

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

1  
0

Function:

Figure 10-12 Menu: “Settings, Digital output”

### Status

The “Status” area shows the current status of the digital output.

### Identifier

The identifier can be used to assign a user-specific designation to the digital output.

**Idle level**

There are two possible statuses for the idle level.

- NC: Normally closed
- NO: Normally open

The default setting for the digital output is NC (normally closed).

Only one function can be configured at a time.

- Impulse
- Device status
- Manual
- Alarm
- Rotary field direction
- Deactivated

The digital output is deactivated by default.

### 10.2.1 Impulse

Navigation on the web server

“Settings, Digital output”, “Impulse” function

#### Digital output


#### Status

State: Inactive

#### Settings

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

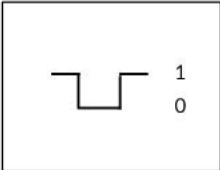

Function:

Electrical parameter:

Valency:

Impulse duration:

Figure 10-13 Menu: “Settings, Digital output”, “Impulse” function



With the "Impulse" function, the following electrical parameters can be transmitted to a higher-level evaluation unit:

- Active energy (positive, negative)
- Reactive energy (positive, negative)
- Apparent energy

Other configuration parameters are:

**Valency**

The impulse corresponds to the set value.

The valid value range is 0.01 ... 655.35 in kWh.

**Impulse duration**

The valid value range is 30 ... 900 in ms.

### 10.2.2 Device state

The “Device state” function can be used to check whether the device is on or off. Here, it is also possible to define whether the output is normally closed (NC) or normally open (NO) in idle state.

Navigation on the web server

“Settings, Digital output”, “Device state” function

## Digital output


### Status

State: Active

### Settings

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

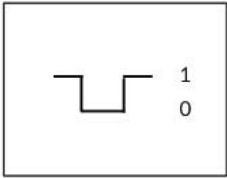

Function:

Figure 10-14 Menu: “Settings, Digital output”, “Device state” function

<b>Status</b>	The "Status" area shows the current status of the digital output.
<b>Identifier</b>	The identifier can be used to assign a user-specific designation to the digital output.
<b>Idle level</b>	<p>There are two possible statuses for the idle level.</p> <ul style="list-style-type: none"><li>– NC: Normally closed</li><li>– NO: Normally open</li></ul> <p>The default setting for the digital output is NO.</p>

### 10.2.3 Manually

With the “Manually” function, the digital output can be enabled and disabled via the Modbus communication interface. Here, you also have to define whether the output is normally closed (NC) or normally open (NO) in idle state.

Navigation on the web server

“Settings, Digital output”, “Manually” function

#### Digital output

The screenshot displays the 'Digital output' configuration interface. It is divided into two main sections: 'Status' and 'Settings'.  
In the 'Status' section, the current state is 'Inactive', and there is a teal 'Aktivieren' button to activate it.  
The 'Settings' section contains:  
- An 'Identifier' text input field containing 'DO'.  
- An 'Idle level' section with two radio buttons: 'Normally closed (NC)' and 'Normally open (NO)'. The 'Normally open (NO)' option is selected.  
- A logic diagram showing a square wave pulse. The high level is labeled '1' and the low level is labeled '0'.  
- A 'Function' dropdown menu currently set to 'Manually'.  
- At the bottom, there are 'Discard' and 'Save' buttons.

Figure 10-15 Menu: “Settings, Digital output”, “Manually” function

**Status**

The “Status” area shows the current status of the digital output.

**Identifier**

The identifier can be used to assign a user-specific designation to the digital output.

**Idle level**

There are two possible statuses for the idle level.

- NC: Normally closed
- NO: Normally open

The default setting for the digital output is NO.

#### **10.2.4 Alarm**

The "Alarm" function can be used to react to changes to the measurement values.

You can define upper and lower thresholds for the domain.

If the measured values are outside of these thresholds, the alarm function is activated and sent via the digital output.

Navigation on the web server

Menu: "Settings, Digital output", "Alarm" function

Digital output


### Status

State: Inactive


### Settings

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

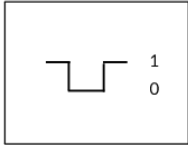

Function:

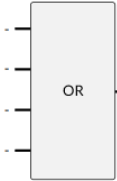

Alarm 1:   Invert

Alarm 2:   Invert

Alarm 3:   Invert

Alarm 4:   Invert

Logic gate:

Figure 10-16 Menu: "Settings, Digital output", "Alarm" function

- Status**                      The “Status” area shows the current status of the digital output.
- Identifier**                 The identifier can be used to assign a user-specific designation to the digital output.
- Idle level**                 There are two possible statuses for the idle level.
  - NC: Normally closed
  - NO: Normally open
- Function**                   Select the “Alarm” function.

**Navigation on the web server**                      “Settings, Alarm”

## Alarming

Status							
Identifier	Data source	Low limit	High limit	Delay	Hysteresis	Self cleared	State
Alarm 1	U12	390,00	410,00	1 s	5 %	<input checked="" type="checkbox"/>	Ok
Alarm 2	F	-	-	1 s	5 %	<input checked="" type="checkbox"/>	Ok
Alarm 3	F	-	-	1 s	5 %	<input checked="" type="checkbox"/>	Ok
Alarm 4	F	-	-	1 s	5 %	<input checked="" type="checkbox"/>	Ok

Confirm

Figure 10-17 Menu: “Settings, Alarm, Status”

**Status**                      The “Status” area shows the current status of the alarms.

### Settings

Set the alarm according to your requirements.

The screenshot displays the 'Settings' menu for configuring alarms. It includes a 'Confirm with digital input' checkbox, four 'Identifier' fields, and four tabs for 'Alarm 1' through 'Alarm 4'. The 'Alarm 1' tab is selected, showing configuration options for 'Data source', 'High limit', 'Low limit', 'Delay', 'Hysteresis', and 'Self cleared'. The 'Save' button is highlighted in blue.

Figure 10-18 Menu: “Settings, Alarm”

#### Confirm with digital input

You can use the checkbox to define that manual acknowledgment of an alarm is required. The acknowledgment is performed via the digital input, which has to be configured for this purpose.

#### Identifier

The identifier can be used to assign a user-specific designation to the alarms.

#### Alarm 1...4

You can use the four tabs to define the alarm configuration for each alarm.

#### Data source

Select the measurement value to be monitored.

#### High limit and low limit

Use the checkbox to select the monitoring function. Depending on which function you selected, enter the value to be monitored.

#### Delay

Enter the tripping delay for the alarm in seconds.

#### Hysteresis

For the switching threshold, a hysteresis in percent is required. Enter it here.



**Self-cleared**

With this checkbox, you can define that the alarm self-acknowledges after the normal status has been restored. This way, no manual acknowledgment via the digital input is required.

The integrated logic gate enables multiple use of the digital output for the alarm function.

### 10.2.5 Rotary field direction

The recognition of the rotary field direction is used to inform the digital output about the state of the application. The rotary field direction can be configured for both directions (left, right).

Navigation on the web server

“Digital output, Settings, “Rotary field direction” function

## Digital output


### Status

State: Inactive

### Settings

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

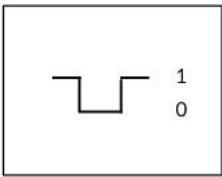

Function:

Rotary field direction:  Left  Right  None

Figure 10-19 Menu: “Digital output, Settings, “Rotary field direction”

<b>Status</b>	The "Status" area shows the current status of the alarms.
<b>Settings</b>	Set the alarm according to your requirements.
<b>Identifier</b>	The identifier can be used to assign a user-specific designation to the function.
<b>Idle level</b>	There are two possible statuses for the idle level. <ul style="list-style-type: none"><li>– NC: Normally closed</li><li>– NO: Normally open</li></ul> The default setting for the digital output is NO.
<b>Function</b>	Select the "Rotary field direction" function from the drop-down menu.
<b>Rotary field direction</b>	Select the appropriate rotary field direction.

### 10.2.6 Deactivating the digital output

The digital output can be deactivated, so that no function is assigned to it.

Navigation on the web server

“Digital output, Settings“, “Deactivated” function

#### Digital output

The screenshot shows a web interface for configuring a digital output. It is divided into two main sections: 'Status' and 'Settings'.  
- **Status:** Shows 'State: Inactive'.  
- **Settings:** Contains several fields:  
 - 'Identifier': A text input field containing 'DO'.  
 - 'Idle level': Two radio buttons. 'Normally closed (NC)' is unselected, and 'Normally open (NO)' is selected.  
 - A square-wave diagram showing a signal that is high for a short duration, then drops to low for a longer duration, and then rises again. The high level is labeled '1' and the low level is labeled '0'.  
 - 'Function': A dropdown menu currently set to 'Deactivated'.  
 - At the bottom right of the settings area are two buttons: 'Discard' and 'Save'.

Figure 10-20 Menu: “Digital output, Settings“, “Deactivated” function

**Status**

The “Status” area shows the current status of the digital output.

**Settings**

Set the digital output according to your requirements.

**Identifier**

The identifier can be used to assign a user-specific designation to the function.

**Idle level**

There are two possible statuses for the idle level.

- NC: Normally closed
- NO: Normally open

The default setting for the digital output is NO.

**Function**

Select the "Deactivated" function from the drop-down menu.

### 10.3 Tariff selection

Navigation on the display "Tar, Tariff meter 1...4"

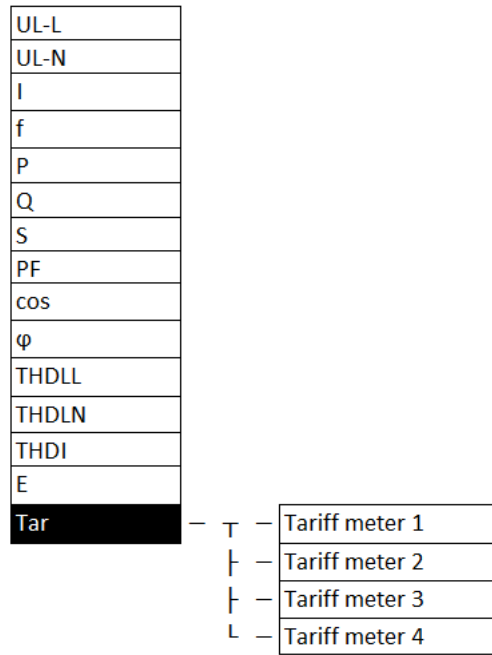


Figure 10-21 Menu: "Tar, Tariff meter"

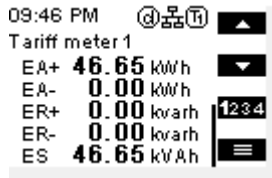


Figure 10-22 Menu: "Tar, Tariff meter 1"

The device offers various options for selecting between up to 4 tariffs. The following procedures are possible:

- Using the digital input: 2 tariffs can be used
- Using manual switching via a communication interface: 4 tariffs can be used
- Using a time schedule: 4 tariffs can be used

### 10.3.1 Tariff selection via the communication interface

The individual tariffs can also be selected via the Modbus communication interface. With the addresses in the register tables, a user-specific usage of all tariff meters can be defined, which is configured completely by means of the controller.

Navigation on the web server

“Tariffs, Settings”

#### Tariffs

**Status**

Active: No active tariff

**Settings**

Identifier 1:

Identifier 2:

Identifier 3:

Identifier 4:

Mode:  ▾

Tariff meter:  ▾

Figure 10-23 Menu: “Tariffs, Settings”

- Status** The “Status” area shows the current status of the tariff function.
- Settings** Configure the tariff selection according to your requirements.
- Identifier** Define the designations for your tariffs.
- Mode** Set the mode to “Manually”.
- Tariff meter** Select the desired tariff from the drop-down menu.

### **10.3.2 Tariff selection using a time schedule**

The individual tariffs can also be selected by using time control. A custom application can be configured using a configurable time.

The switchover to the respective tariff meter thus purely depends on the time.



Navigation on the web server

“Tariffs, Settings”

**Settings**

Identifier 1:

Identifier 2:

Identifier 3:

Identifier 4:

Mode:  ⌵

Station profile 1
Station profile 2
Tariff 3
Tariff 4

Days: **Su Mo Tu We Th Fr Sa**

From:  ⊗ o'clock

Until:  ⊗ o'clock

Note: Monday from 08:00 until 14:00 o'clock.  
 Tuesday from 08:00 until 14:00 o'clock.  
 Wednesday from 08:00 until 14:00 o'clock.  
 Thursday from 08:00 until 14:00 o'clock.  
 Friday from 08:00 until 14:00 o'clock.

Figure 10-24 Menu: “Tariffs, Settings”

**Status**

The “Status” area shows the current status of the tariff function.

**Settings**

Configure the tariff selection according to your requirements.

**Identifier**

Define the designations for your tariffs.

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

**Mode** Set the mode to "Time controlled".

**Tariff meter** Select the desired tariff from the drop-down menu.

Depending on the number of tariffs, you can configure the individual tabs for the tariffs.

**Days** Use the checkboxes to select the days of the week.

**From/Until** Enter the times for using the tariffs as appropriate for your application.



In the appendix, the configured weekdays and times are shown.

## 10.4 Logic gate

The integrated logic gate makes it possible to define several alarm messages for the alarm function of the digital output. The digital output can be used for this type of multiple assignment, depending on up to four alarms/thresholds.

**Navigation on the web  
server**

“Digital output, Settings”, “Alarm” function

## Digital output


### Status

State: Inactive


### Settings

Identifier:

Idle level:  Normally closed (NC)  Normally open (NO)

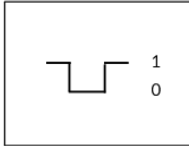

Function:

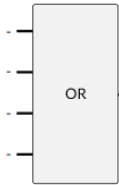

Alarm 1:   Invert

Alarm 2:   Invert

Alarm 3:   Invert

Alarm 4:   Invert

Logic gate:

Figure 10-25 Menu: "Settings, Digital output", "Alarm" function

**Alarm 1...4:**

Select the alarms that are to be linked to the logic gate. You can use the checkbox to invert the signal.

**Logic gate**

An operator has to be defined for the function of the logic gate.

Select a logic operator from the drop-down menu:

- AND
- OR
- XOR
- NAND
- NOR
- NXOR

The alarms themselves are configured via "Settings, Alarms".

**Function description of the logic gate**

The logic gate links configured statuses of the respective alarms with an assigned logic function. Various application-specific statuses can be monitored, depending on how the connections are combined.

Below, you can find explanations on how the logic operators work:

**AND operator**

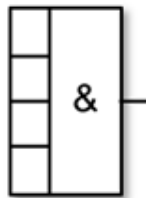


Figure 10-26 Logic gate with AND operator

When all alarms are active at the same time, this signal output is set.

If one of the alarms is no longer active, the signal output is reset.

**NAND operator**



Figure 10-27 Logic gate with NAND operator

When none of the alarms are active, this signal output is set.

If one of the alarms is active, this signal output is reset.

**OR operator**

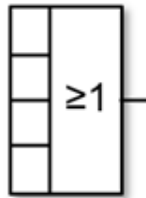


Figure 10-28 Logic gate with OR operator

When one of the alarms is active, the signal output is set.  
If none of the alarms are active, this signal output is reset.

**NOR operator**

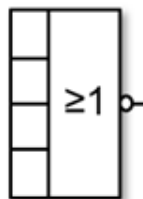


Figure 10-29 Logic gate with NOR operator

When none of the alarms are active, this signal output is set.  
If one of the alarms is active, this signal output is reset.

**XOR operator**

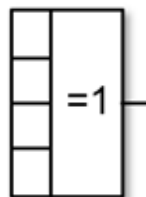


Figure 10-30 Logic gate with XOR operator

If an alarm is active, this signal output is set.  
If none or several of the alarms are active, this signal output is reset.

**NXOR operator**

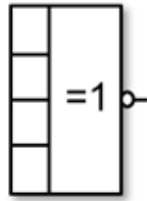


Figure 10-31 Logic gate with NXOR operator

If none or several of the alarms are active, this signal output is set.

If only one of the alarms is active, this signal output is reset.

## 10.5 Data logging

### Logging




Status					
No.	State	Data source	Interval	Circular buffer	Control
1	◆	I1	5 min	<input type="checkbox"/>	
2	◆	U1	5 min	<input type="checkbox"/>	
3	◆	P1	5 min	<input type="checkbox"/>	
4	—				
5	—				
6	—				
7	—				
8	—				

Figure 10-32 Menu: “Logging“

#### Status

The “Status” area shows an overview of the current logging data.



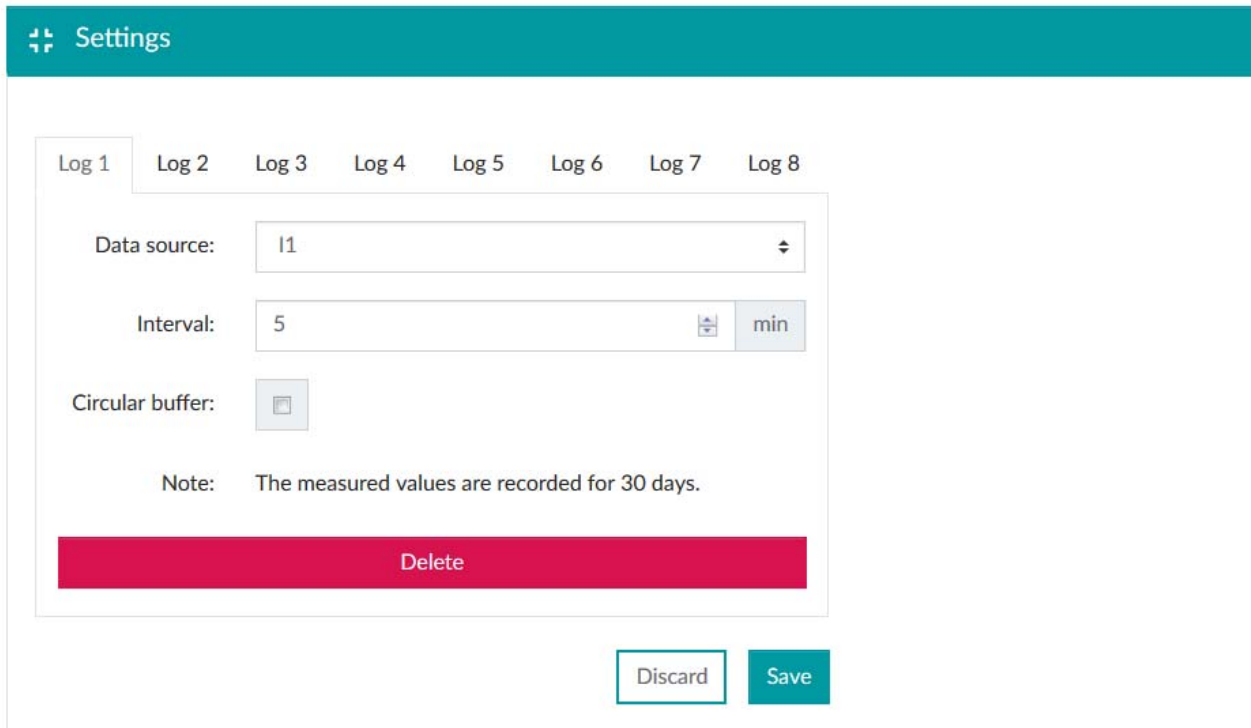


Figure 10-33 “Menu: Logging, Settings”

**Log 1...8**

Here, you can configure up to eight different logging parameters.

**Data source**

Select the desired electrical parameter from the drop-down menu for the logging.

**Interval**

Enter the interval time in minutes. The shortest duration that can be set is 1 minute.

The maximum logging duration depends on the configured interval. For an interval of 15 minutes, the logging capacity is approx. 90 days. If you shorten the interval, the logging capacity is also reduced (e.g., 10 minute interval/60 days logging capacity).

**Circular buffer**

If you want to use the FIFO principle (first-in/first-out) for the data logging, activate the circular buffer.

If you want to define a fixed starting point, deactivate the circular buffer.

The logging automatically stops once the memory is full.

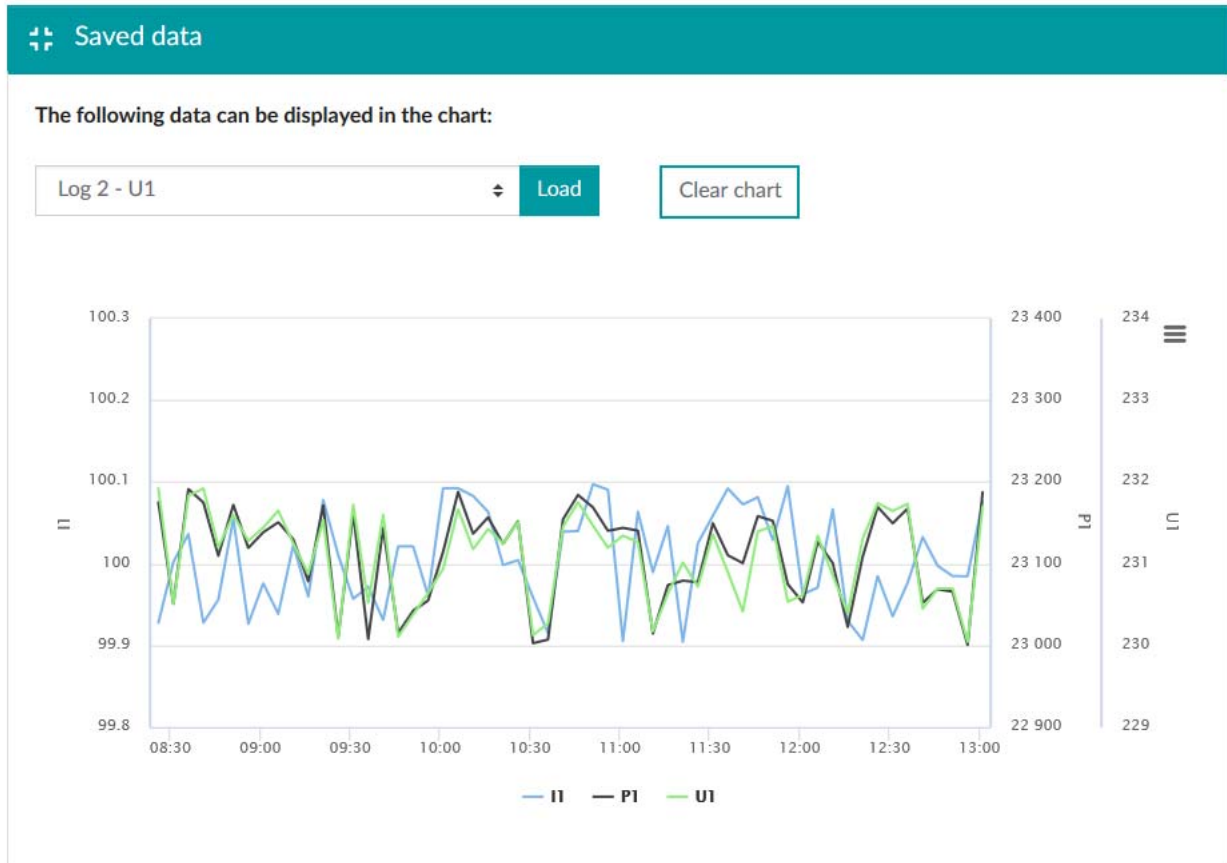


Figure 10-34 Menu: "Logging, Saved data"

You can view all configured logging data as a chart in the web server.

To do so, select the desired logging data from the drop-down menu.

With your mouse, you can zoom in on the saved data.

By means of the selection box to the right next to the chart, you can export the logging data as CSV, XLS or PDF file.


## 10.6 Firmware update

The device provides a function for updating the firmware. New versions can contain bug fixes, optimize the performance and expand the functionality.

Update files are provided by Phoenix Contact GmbH & Co. KG. The respective update containers can be downloaded from the product-specific pages at [phoenixcontact.com](http://phoenixcontact.com).

### 10.6.1 Execution

#### Firmware

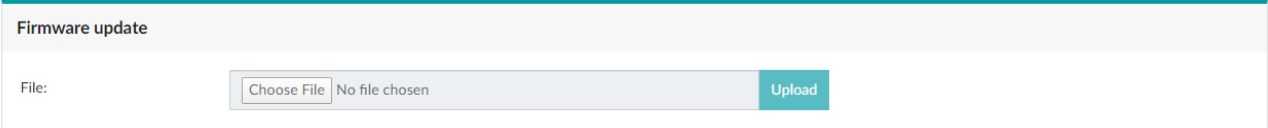

The screenshot shows a web interface for firmware updates. At the top, there is a header bar labeled "Firmware update". Below this, there is a form with a "File:" label on the left. To the right of the label is a file selection area containing a "Choose File" button, the text "No file chosen", and an "Upload" button.

Figure 10-35 Execution of a firmware update

#### Firmware update

In this area, you can load a new firmware update onto the device. To perform the update, you need administrator rights.

An update can only be performed via the web server of the device.

#### File

Upload the new firmware file. Click the "Upload" button to begin the process.

## Firmware

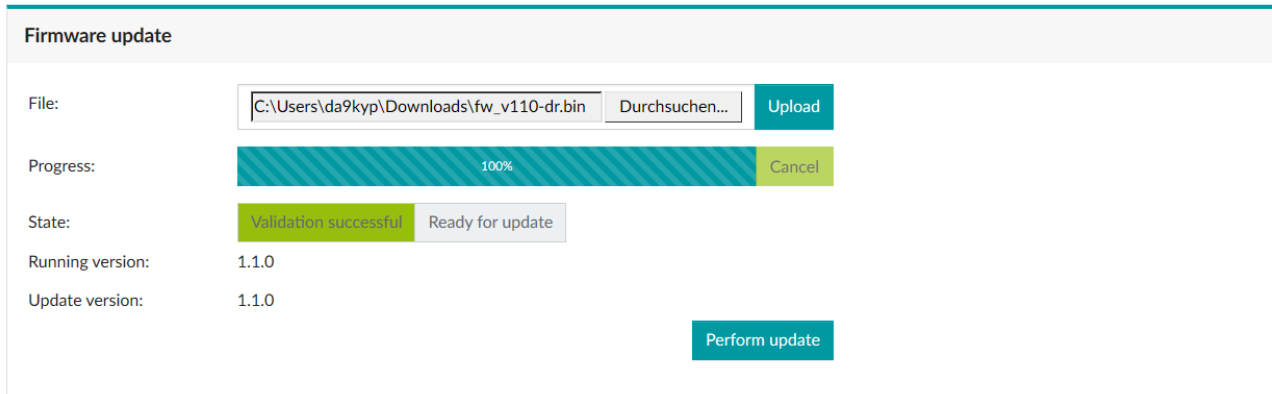


Figure 10-36 Progress and state

### Progress and state

Once the firmware file has been uploaded, you can start the update on the device by clicking “perform update”.

Observe the following when performing a firmware update:

- The update process can take several minutes and should not be interrupted.
- Do not exit the subpage for updating the firmware of the web-based management.
- During the update process, the device restarts and is thus unavailable for a certain period of time.
- During certain steps of the update process, it is possible that the energy meters of the system are stopped.

## 10.6.2 Security

Executing a firmware update requires read access to the system. Since execution is only possible via the web server, the access is password-protected.

The update file is protected against manipulation. The system detects and rejects manipulated update files.

The update process is safeguarded against unintentional interruption or failure. An executable firmware version is always retained on the system.



# 11 Communication

All devices are equipped with an Ethernet interface with an RJ45 socket.

Other communication interfaces can also be available optionally.

- RS-485
- PROFINET
- EtherNet/IP™

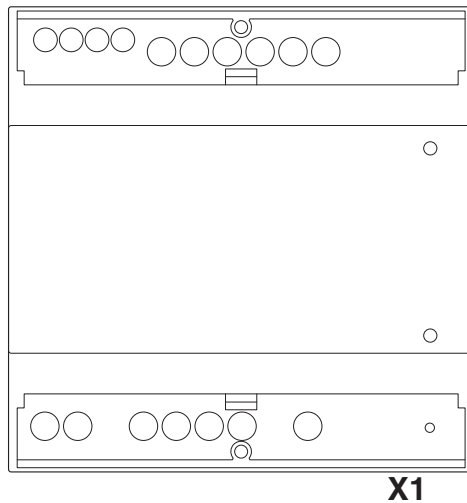


Figure 11-1

Table 11-1

X1	Modbus/TCP	Write and read access
----	------------	-----------------------

All devices are equipped with an integrated Ethernet interface (X1) with an RJ45 socket.

The device configuration is performed via this Ethernet interface.

Other communication interfaces can also be available optionally.

**Modbus/RTU via RS-485**

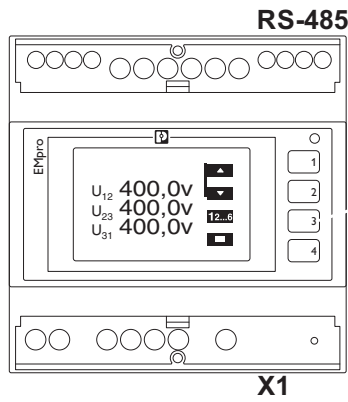


Figure 11-2

Table 11-2

X1	Modbus/TCP	Write and read access
RS-485	Modbus/RTU	Write and read access

The device configuration can be implemented via the Modbus/RTU interface (RS-485) or via the integrated Ethernet interface.

**PROFINET**

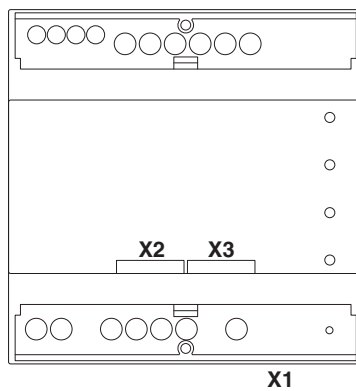


Figure 11-3

Table 11-3

X1	Modbus/TCP	Write and read access
X2	PROFINET	Read access
X3	PROFINET	Read access



The Ethernet interfaces (X2 and X3) do not offer any options for device configuration and can therefore not be reached via the display or the web server.

The interfaces only offer a read function for the data via the dual ports (2xRJ45).

The associated IP addresses are assigned accordingly via the controller.

You can use both communication protocols with only one Ethernet cable. To do so, bridge Ethernet interfaces X1 and X3. Via the Ethernet interface X2, both protocols (Modbus/TCP and PROFINET) can now be used in parallel.

**EtherNet/IP™**

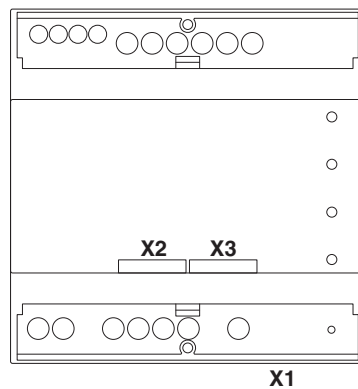


Figure 11-4

Table 11-4

X1	Modbus/TCP	Write and read access
X2	EtherNet/IP™	Read access
X3	EtherNet/IP™	Read access

The Ethernet interfaces (X2 and X3) do not offer any options for device configuration and can therefore not be reached via the display or the web server.

The interfaces only offer a read function for the data via the dual ports (2xRJ45).

The associated IP addresses are assigned accordingly via the controller.

You can use both communication protocols with only one Ethernet cable. To do so, bridge Ethernet interfaces X1 and X3. Via Ethernet interface X2, both protocols (Modbus/TCP and EtherNet/IP™) can now be used in parallel.

## 11.1 Ethernet

All device versions are Ethernet-capable via an RJ45 interface. The devices support 10/100 Mbit full/half duplex. It is recommended to use at least Cat.5 cables (EIA/TIA-568).

### 11.1.1 IP addressing

The EMpro devices can be assigned both a static and a dynamic IP configuration.

Current devices support IPv4.

In the delivery state, the devices use a static IP configuration with the following parameters:

Table 11-5

IP address	192.168.1.2
Subnet mask	255.255.255.0
Default gateway	0.0.0.0
DNS server	0.0.0.0

The entry IP 0.0.0.0, e.g., for the default gateway, indicates that no default gateway has been configured.

When the dynamic IP assignment is used, the device receives its IP configuration via the DHCP protocol from another DHCP server in the same network.


## 11.1.2 Configuration of the communication interface

You can adapt the following parameters of the network interface:

Table 11-6

Function	Information	Web server	Display	Register
Mode	The mode is used to define whether a static IP configuration from the device memory has to be used, or a dynamic configuration should be performed via DHCP instead.	x	x	x
IP address	This setting is only used in static mode. Here, the static IP address of the device is configured. In dynamic mode, this parameter is supplied by the DHCP server.	x	x	x
Subnet mask	This setting is only used in static mode. Here, the static subnet mask of the device is configured. In dynamic mode, this parameter is supplied by the DHCP server.	x	x	x
Default gateway	This setting is only used in static mode. Here, the static IP address of the default gateway to be used is configured. In dynamic mode, this parameter is supplied by the DHCP server. The default gateway is required to allow communication across network boundaries. This is defined by means of the subnet mask.	x	x	x
DNS server	This setting is only used in static mode. Here, the static IP address of the DNS server to be used is configured. In dynamic mode, this parameter is supplied by the DHCP server. The DNS server is used to perform name resolutions, e.g., for an NTP time server.	x	x	x
Device name	The device supports the NetBios name service. With this protocol, the device can be addressed using a host name, without knowing the IP address of the device. The device has three NetBios names. Two of these names are manufacturer-specific and cannot be modified. You can change the third name. The following names have been defined: First manufacturer-specific NetBios name: <DEVICE_NAME> (e.g., EEM-MA770) Second manufacturer-specific NetBios name: eem<SERIAL_NUMBER> (e.g., eem1234567890) User-specific NetBios name: <YOUR_DEVICE_NAME> (default: <DEVICE_NAME>)	x	x (read only)	x

### 11.1.3 Status of the communication interface

If the network interface is ready, this is indicated by the  icon on the display.

The following conditions must be met for the network interface to be ready:

- Device start completed
- Network link established
- IP configuration valid
  - Always true for static configurations
  - True for dynamic configurations after the IP configuration has been received by the DHCP server

The current status of the network interface can be viewed via the WBM, the display and Modbus.

There are two LEDs at the RJ45 socket:

- Green LED for link status, to the left of the RJ45 connector
- Green LED for sending activity, to the right of the RJ45 connector

### 11.1.4 Security

The users are responsible for securing their networks against unauthorized access.

Up to four clients can access the interface simultaneously.

## 11.2 Modbus

### 11.2.1 Function

The Modbus protocol defines both a protocol on the application layer and a transmission protocol. The application layer protocol is identical for all interface versions. The differences between Modbus/TCP and Modbus/RTU lie in the transmission protocol.

On the application layer, Modbus supplies a 16-bit address space that can be used to address 16-bit registers. Using various function codes, read and write operations can be performed on registers.

For detailed information about the Modbus specification refer to [www.modbus.org/](http://www.modbus.org/).

The EMpro supports the following function codes:

- 03 (0x03) Read holding registers
- 04 (0x04) Read input registers
- 06 (0x06) Write single register
- 16 (0x10) Write multiple registers

Here, it has to be noted that the device does not differentiate between holding and input registers. Both function codes return the same registers.

## 11.2.2 Modbus/RTU

In the case of Modbus/RTU, the Modbus application layer protocol is supplemented with additional information and physically sent via an RS-485 interface. The start and end of a Modbus message is coordinated by means of timings.

Modbus/RTU describes a master/slave protocol. Here, the EMpro acts as Modbus/RTU slave. An exception here is the gateway mode.

The additional information consists of a byte for addressing the device. Valid device addresses are in the range from 1-247.

The default setting for the devices is address 1. Address 0 is reserved for broadcast messages in the network and cannot be assigned as an address to a device.

According to the specification, addresses 248-255 are reserved and cannot be assigned to the device either.

A cyclic redundancy check (CRC) is attached to the Modbus message as additional information. The CRC is used to detect transmission errors. The calculation and the polynomial used are documented in the Modbus specification.

The Modbus/RTU protocol is supported by all EMpro versions with an RS-485 interface.

### 11.2.2.1 Topology

The smallest network via RS-485 (Modbus) that makes sense consists of two devices:

- 1 x master 1 x slave  
The typical limit is 32 devices.
- 1 x master 31 x slaves

The largest network via RS-485 (Modbus) that makes sense consists of 248 devices, because of the addressing:

- 1 x master 247 x slaves

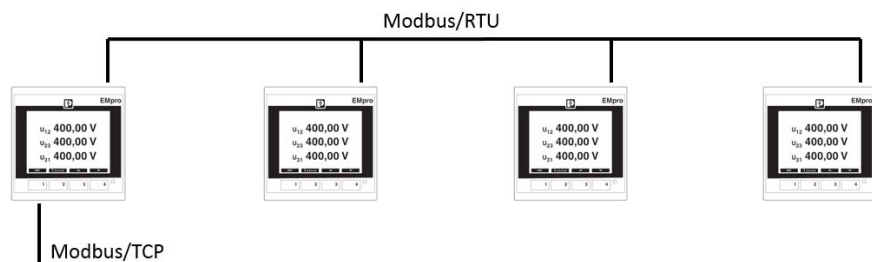


Figure 11-5 Topology

### 11.2.2.2 Using connections and designations

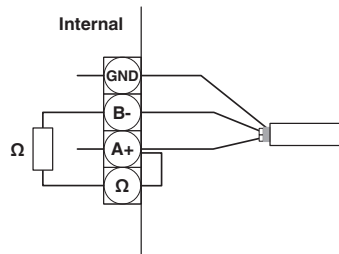


Figure 11-6 Connections and designations

The RS-485 interface has four assigned terminals.

- |            |                       |
|------------|-----------------------|
| GND:       | Shield of signal line |
| B- and A+: | Signal lines          |
| Ω:         | 120 Ω resistor        |

The non-inverted signal can have the following designations: A, +, A+, TxD+/RxD+, D+

The inverted signal can have the following designations: B, -, B-, TxD-/RxD-, D-

To ensure that the communication is guaranteed even in the event of malfunctions, ensure that the following conditions are met in the RS-485 network:

- Twisted pair conductors (A and B) (stranding)
- Shielded conductors (GND)
- Termination resistors (and a bias network)

NOTE: If you want to activate the integrated 120 Ω resistor, bridge the terminals Ω and A+.

## 11.2.2.3 Parameters for using Modbus via RS-485

## Modbus

Status	
Modbus TCP activated:	<input checked="" type="checkbox"/>
Modbus RTU activated:	<input checked="" type="checkbox"/>
Address:	1
Master gateway:	<input type="checkbox"/>
Baudrate:	9600
Stop bits:	1
Parity:	None

Figure 11-7 Modbus status

**Status**

The “Status” area gives an overview of the current Modbus configuration.

### Settings

Activate Modbus TCP:

Activate Modbus RTU:

Address:

Master gateway:

Baudrate:  baud

Stop bits:

Parity:

Figure 11-8 Modbus settings

Please observe the following:

- Each slave is assigned an address between 1 and 247.
- Each address is used only once.
- There is only one master per RS-485 network.
- All devices use the same parameters for the baud rate, stop bits and parity.

You can configure the following parameters that are supported by the RS-485 interface:

- Baud rates: 2400, 4800, 9600, 19200, 38400, 57600 and 115200 bps
- Stop bits: 1, 2
- Parity: even, odd, none

The parameters can also be set via Modbus/TCP.



### 11.2.3 Modbus/TCP

In the case of Modbus/TCP, a special header (Modbus Application Header [MBAP]) is prefixed to the Modbus header. This Modbus/TCP message is then transmitted via an IP-based network in a TCP frame.

The EMpro acts as Modbus/TCP server and opens port 502 for communication with any Modbus/TCP clients. This port cannot be configured by the user.

Since TCP is a connection-oriented protocol, a client first has to establish a TCP connection with the EMpro to exchange data via Modbus/TCP.

The number of Modbus/TCP connections that can be open in parallel on each version of the EMpro product family is limited to four.

If there are already four open Modbus/TCP connections on the EMpro, additional connection queries on port 502 are rejected.

Additionally, to enable Modbus/TCP communication, the user has to make sure that this port is enabled in the network.

The MBAP contains a field that is declared as *unit identifier* in the specification. This *unit identifier* is comparable with the device address of Modbus/RTU. However, it is not relevant for the EMpro in the case of Modbus/TCP and is ignored by the device since the address already has a unique address in a network through its IP address. An exception applies if the device is operated in gateway mode (see [Section “Modbus gateway” on page 145](#)).

The Modbus TCP specification recommends using 255 as *unit identifier* for queries.

All EMpro versions support the Modbus TCP protocol.

### 11.2.4 Modbus gateway

EMpro versions with an RS-485 interface can optionally be operated in gateway mode.

By default upon delivery, the gateway mode is not active. In this case, the device acts as Modbus TCP server on the Ethernet interface and as Modbus/RTU slave on the RS-485 interface.

When the gateway function is activated, the device behaves as Modbus gateway on the Ethernet interface and, in parallel, continues to operate as Modbus TCP server (can be reached via *unit identifier* == 255).

On the RS-485 interface, the device now acts as Modbus/RTU master. As master, the EMpro can now independently send queries in the network (note: there must be no other master in the system).

As Modbus gateway, the device converts an incoming Modbus TCP message (that does not have the *unit identifier* 255 in the MBAP header) into a Modbus RTU message and forwards it to the appropriate receiver in the Modbus RTU network. On the TCP side, the *unit identifier* is used for addressing the Modbus RTU receiver. In turn, the response is converted from Modbus/RTU format back to Modbus/TCP format and is sent to the querying client as Modbus/TCP response.

### Broadcast messages in gateway mode

The Modbus specification does not describe the behavior of a gateway device when the *unit identifier* in the MBAP header has a value of 0. In the Modbus/RTU network, this value represents a broadcast message.

There are different interpretations of the behavior of a gateway in this case.

The following questions regarding the behavior of a gateway remain open:

- Forwarding the broadcast in the RTU network.  
Since there is no broadcast in the case of Modbus/TCP, it is not defined whether or not the MBAP address 0 is forwarded in the RTU network by the Modbus gateway.
- Response messages with the *unit identifier* 0.  
Neither is there a definition on whether the gateway itself generates an answer to messages with a unit identifier of 0.

By default upon delivery, devices of the EMpro product family behave as follows:

The EMpro does not forward messages with *unit identifier* 0 to the RTU network as broadcast. Furthermore, the EMpro itself responds to the query as Modbus TCP server.

### Timing in gateway mode

As gateway, the EMpro acts as Modbus master on the Modbus/RTU side and forwards queries to the addressed slaves.

As Modbus/RTU master, the device requires a time-out for queries. If this time-out has expired without a response from the Modbus/RTU slave, the gateway replies to the Modbus/TCP client with an error message.

By default upon delivery, the duration for the time-out is 250 ms.

Unsuitable time-out settings both at the gateway and at the querying Modbus/TCP client can cause unwanted problems.

Problems can occur if the time-out times at the Modbus/TCP client or EMpro in gateway mode are too short, or if the ratios between these two time-out times are unfavorable.

The time-out setting has to be individually configured based on the application.

Nevertheless, the following recommendation can be given; they should work in normal cases.

- The default setting of the EMpro is adequate for most applications.
- If there are slaves with slow response times in the RTU network, the time-out setting of the gateway should be increased.
- If very slow Baud rates are used on the RS-485, the time-out setting of the gateway should be increased.
- The time-out duration of the querying Modbus/TCP client should always be longer than that of the gateway.

## 11.3 PROFINET

### 11.3.1 Software

1. Check whether the firmware of your energy measuring device is up to date with the firmware available on the Phoenix Contact homepage. If the firmware is not up to date, download the current firmware from the specific product site at [phoenixcontact.com](http://phoenixcontact.com) (see Section “Firmware update” on page 131).
2. Download the current GSDML file for your energy measuring device from the Phoenix Contact website.

Additional requirements:

- Pertinent knowledge of the preferred PROFINET engineering system
- Executable project with configured controller

### 11.3.2 Preparing the GSDML file

1. Unpack the ZIP file on your file system.

### 11.3.3 Integrating the GSDML file

Integrate the GSDML file into your existing engineering system.

An example of the integration is shown below, using the TIA portal V15.

1. Select “Options, Manage general station description files (GSD)”.

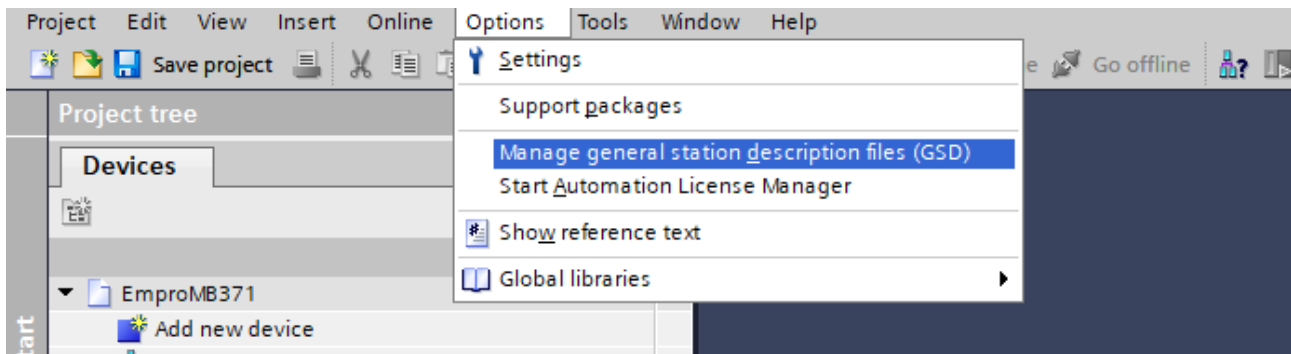


Figure 11-9 “Options, Manage general station description files (GSD)”

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

2. Select the file that you want to install.
3. Checkmark the file that you want to install.
4. Click on "Install".

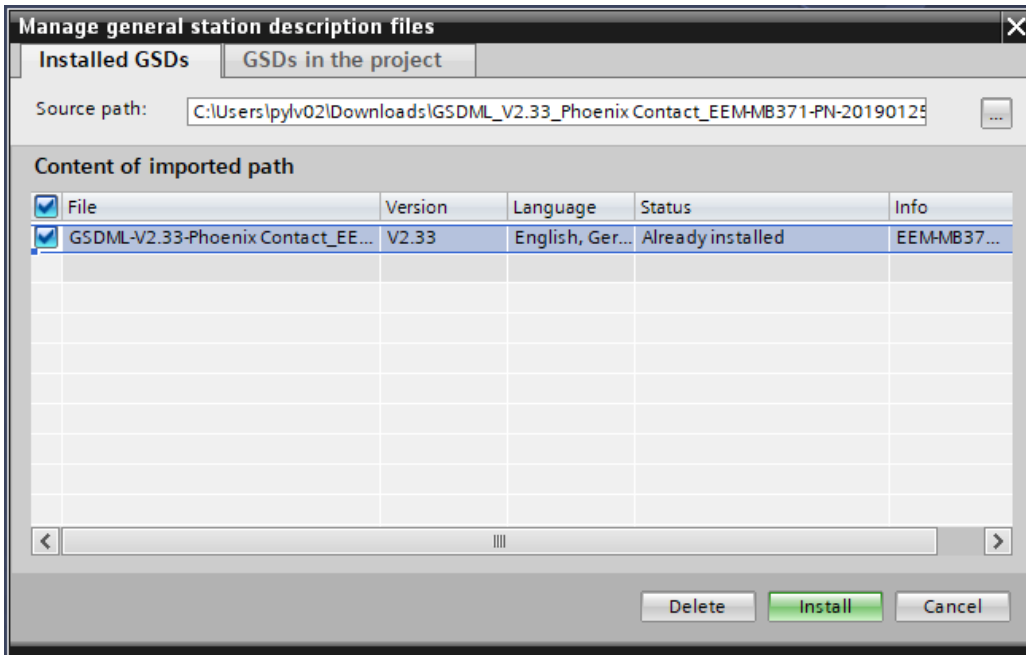


Figure 11-10 Installing the station description file



### 11.3.4 Integrating hardware

1. Create a project with any PROFINET-capable controller.

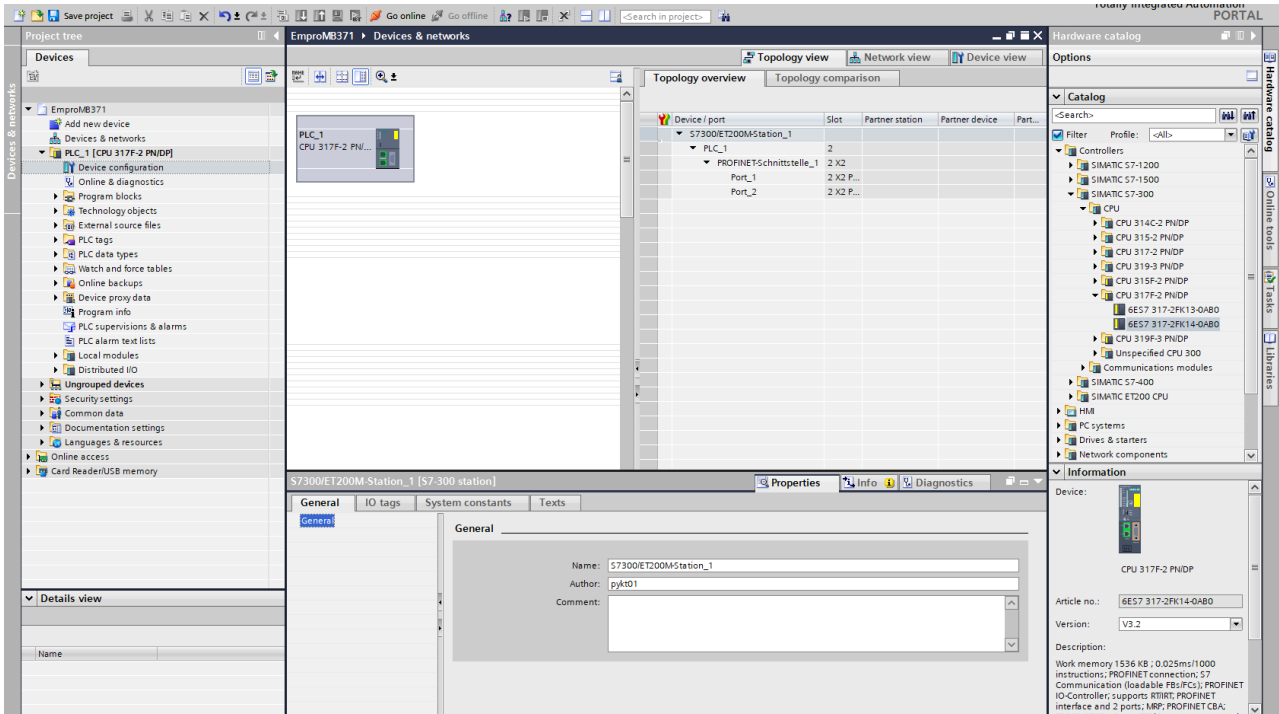


Figure 11-12 "Devices & networks" in the network view

- Select “Devices & networks, Network view, Hardware catalog, Other field devices, PROFINET IO , Sensors, Phoenix Contact, EMpro“ and select your installed EMpro (e.g., EMM-MB371-PN).

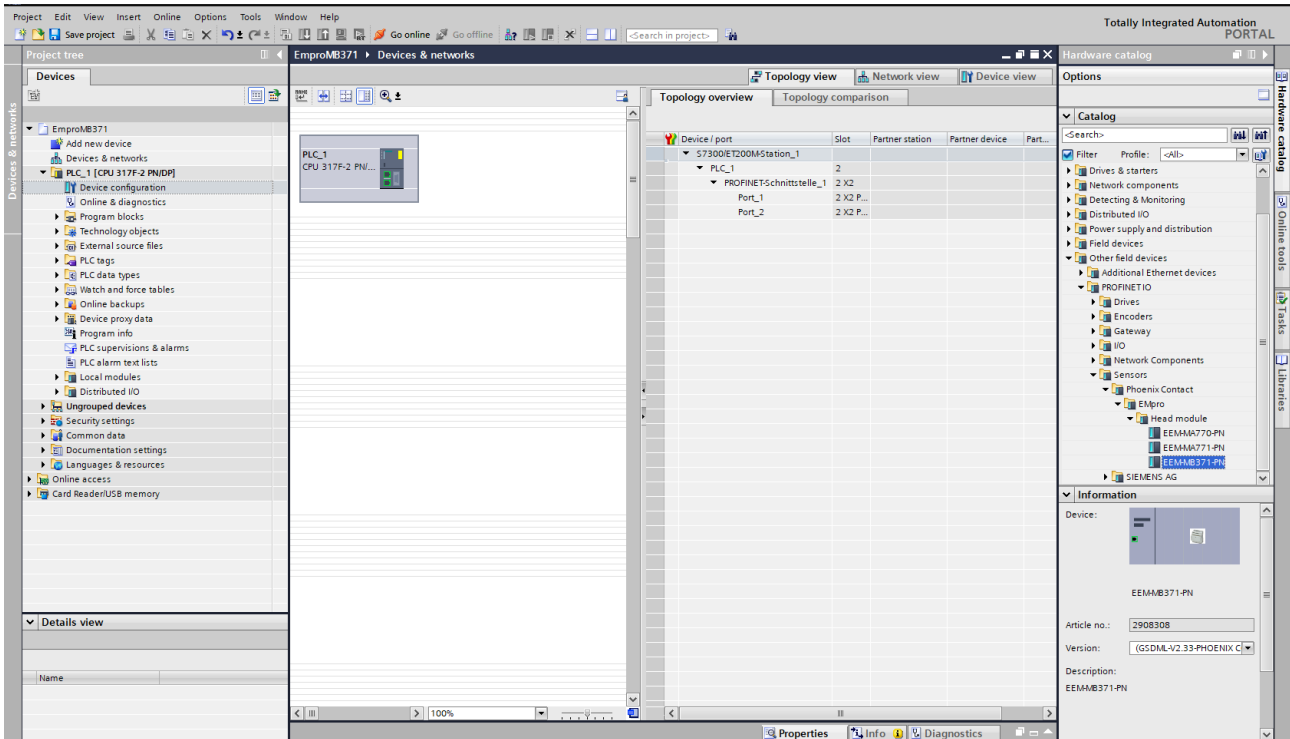


Figure 11-13 Selecting the EMpro from the hardware catalog

## EMpro - multifunctional energy measuring devices for DIN rail mounting

3. Drag and drop the EMpro from the hardware catalog to the network view.

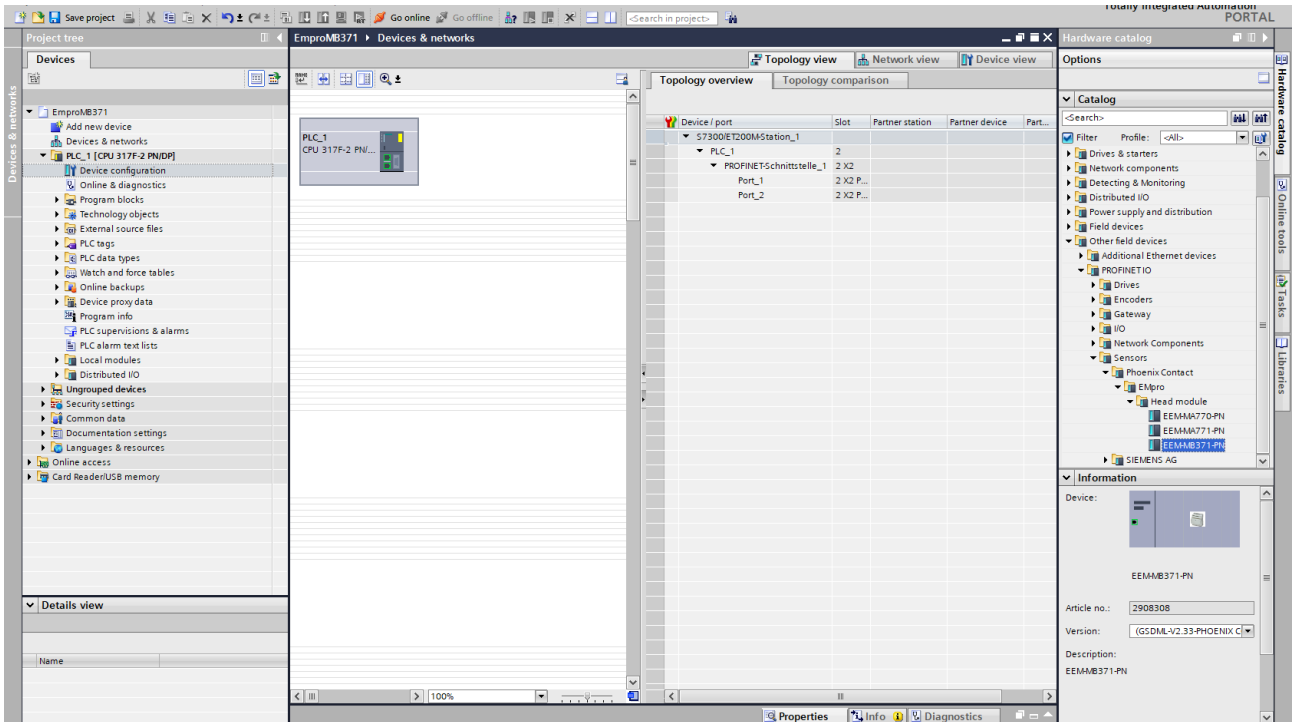


Figure 11-14 Adding EMpro to network view



The EMpro appears in the network view.

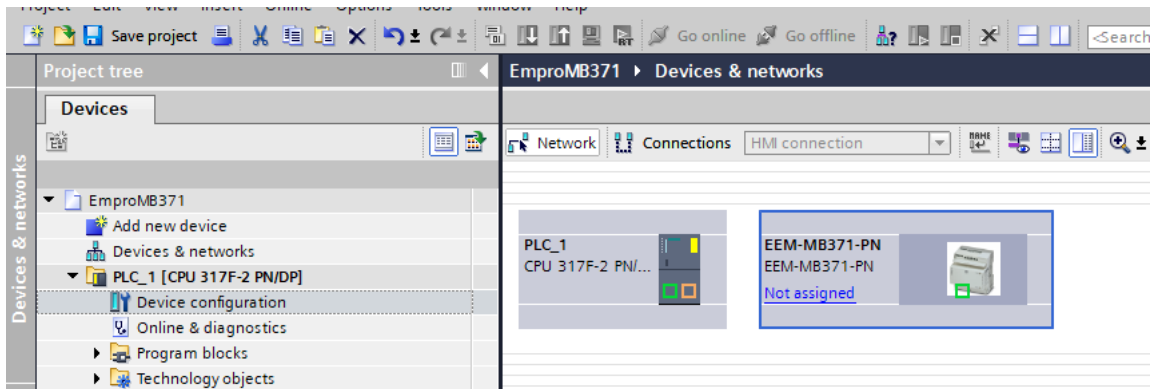


Figure 11-15 EMpro in the network view

## EMpro - multifunctional energy measuring devices for DIN rail mounting

4. Right-click on the EMpro in the network view.
5. Select "Assign to new IO controller".

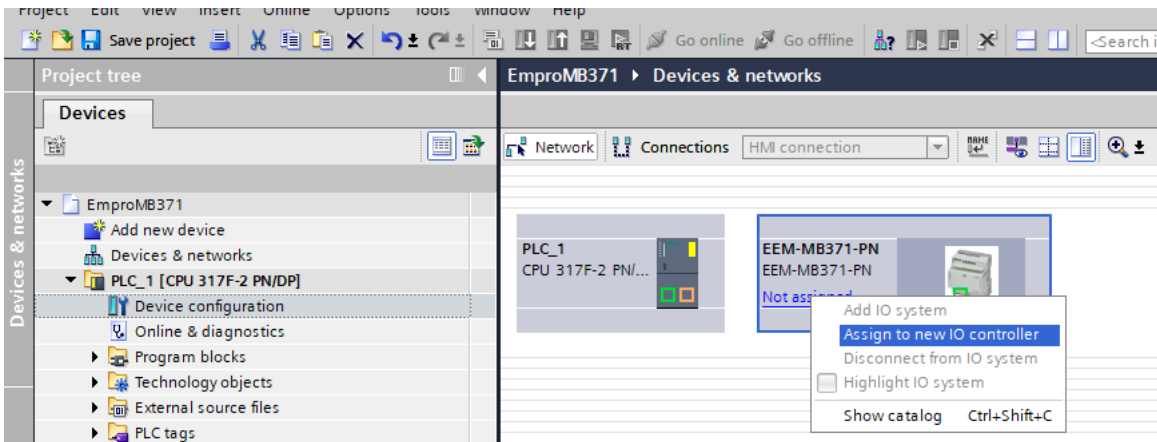


Figure 11-16 Assigning an I/O controller to the EMpro

6. Select the desired network interface.
7. Confirm with "OK".

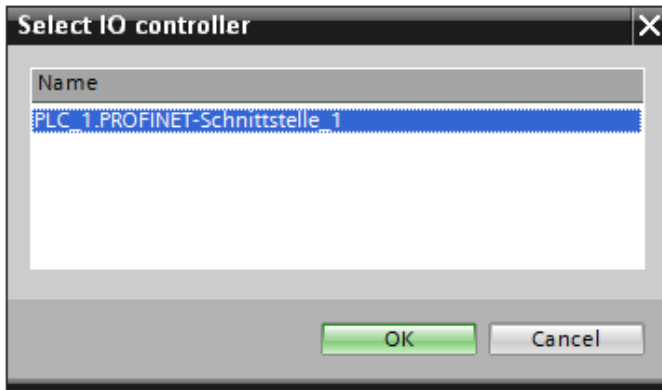


Figure 11-17 Selecting the I/O controller

The assignment has now been set up.

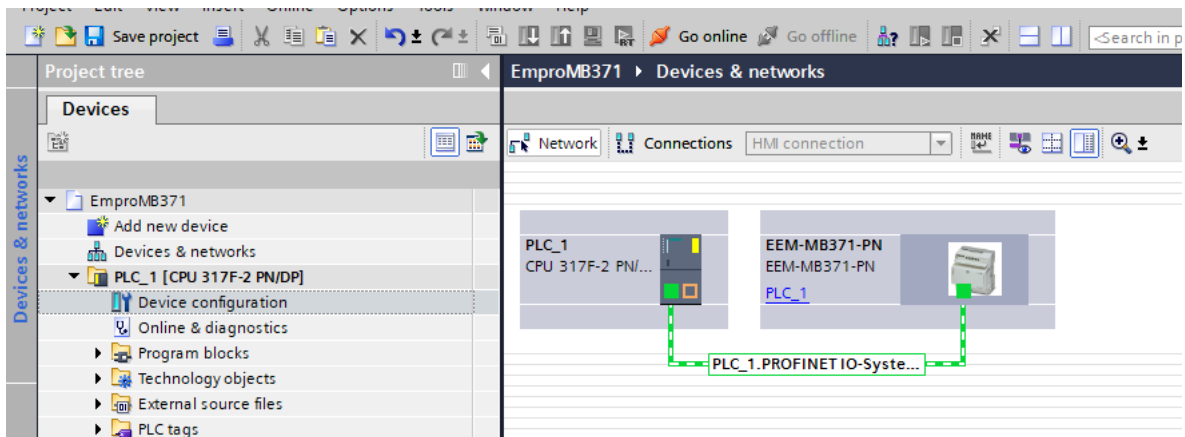


Figure 11-18 Networking controller and energy measurement device

### 11.3.5 Integrating modules and submodules

1. In the structure tree, switch to the “Device configuration” view.
2. In the hardware catalog, mark the desired module.
3. Drag and drop it to the device overview.

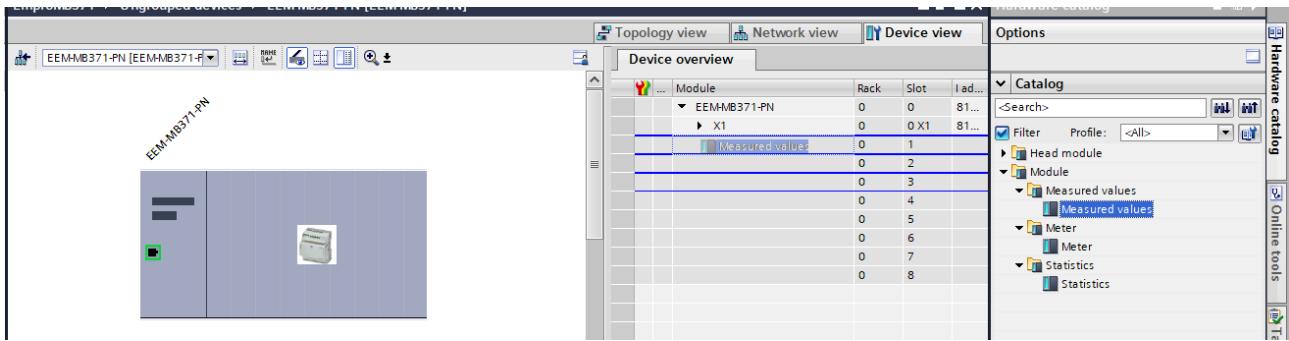


Figure 11-19 Adding a module to the device overview

Subsequently, the associated submodules appear in the catalog.

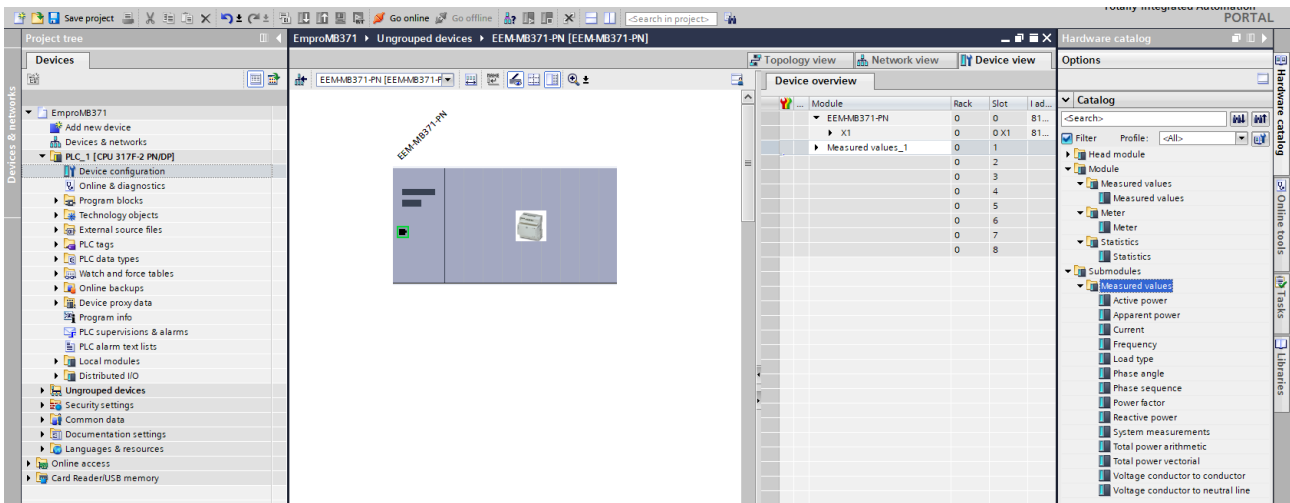


Figure 11-20 Submodules in the hardware catalog

## EMpro - multifunctional energy measuring devices for DIN rail mounting

4. Select the desired submodules.
5. Add the submodules under the respective main module using drag-and-drop.

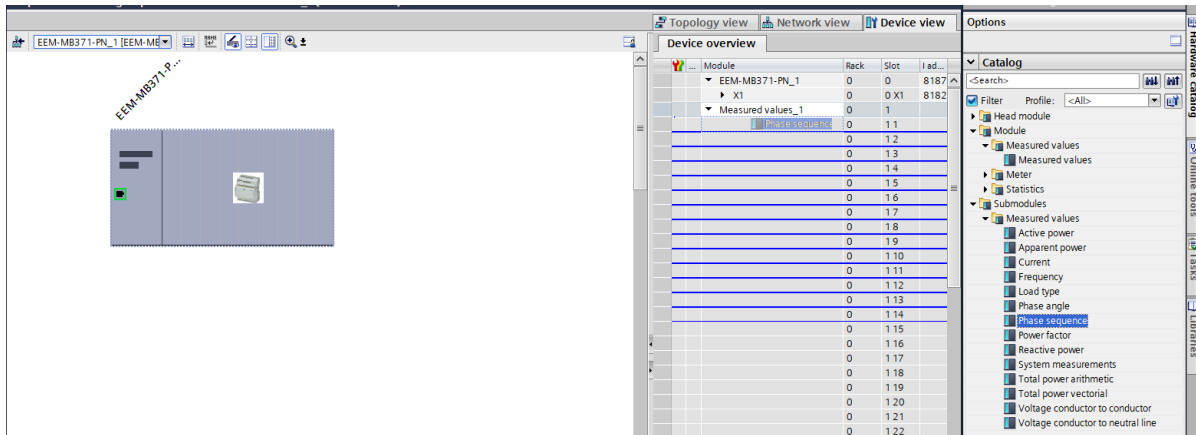


Figure 11-21 Inserting submodules

The device overview shows the available modules and submodules.

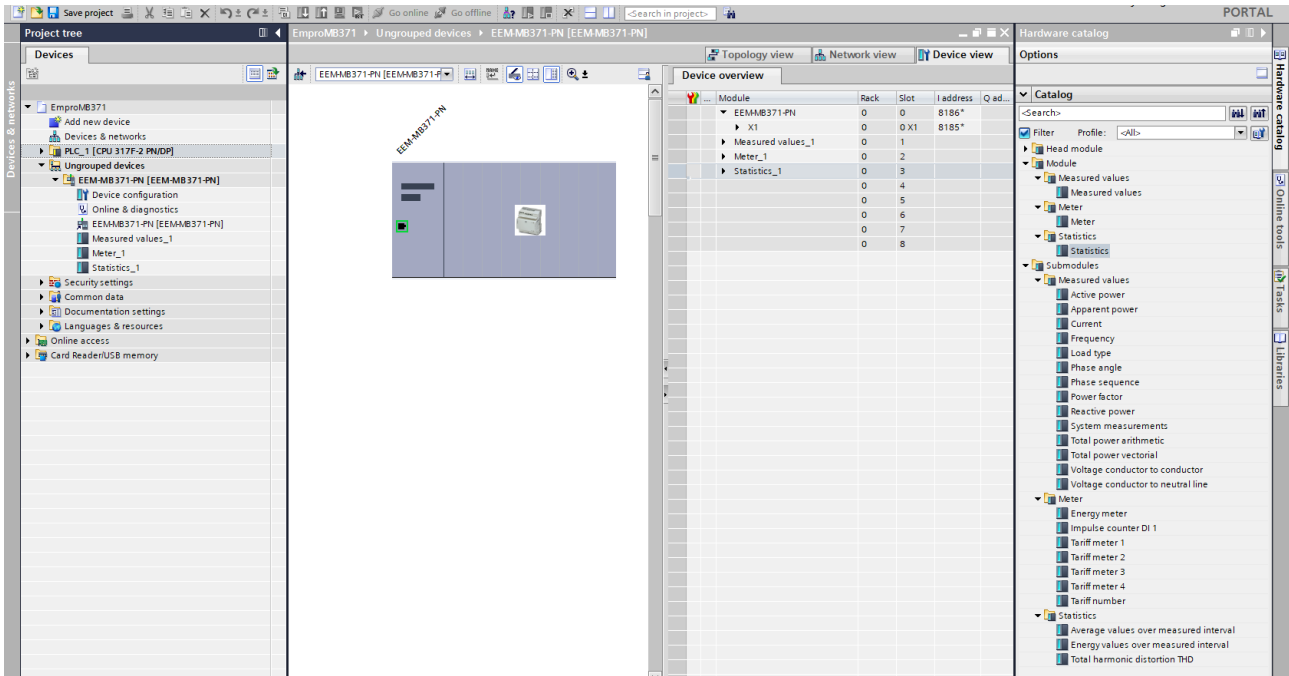


Figure 11-22 Available modules and submodules

## EMpro - multifunctional energy measuring devices for DIN rail mounting

6. Select a configured submodule in the device overview.

If you are a Siemens user, refer to the register table for the respective energy measuring device for descriptions of the individual process data, which can be downloaded at [phoenixcontact.net/products](http://phoenixcontact.net/products).

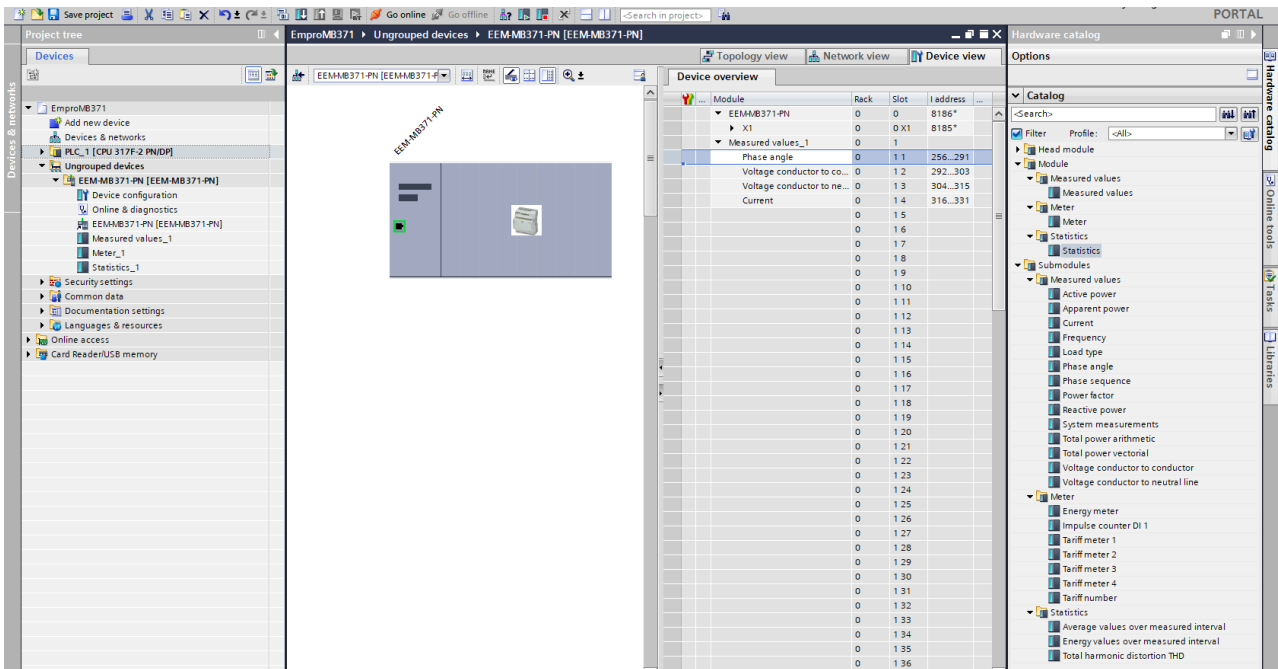


Figure 11-23 Selecting a submodule in the device overview



### 11.3.6 Linking process data

1. Create PLC variables with unique designations.
2. Connect these with the I/O variables.

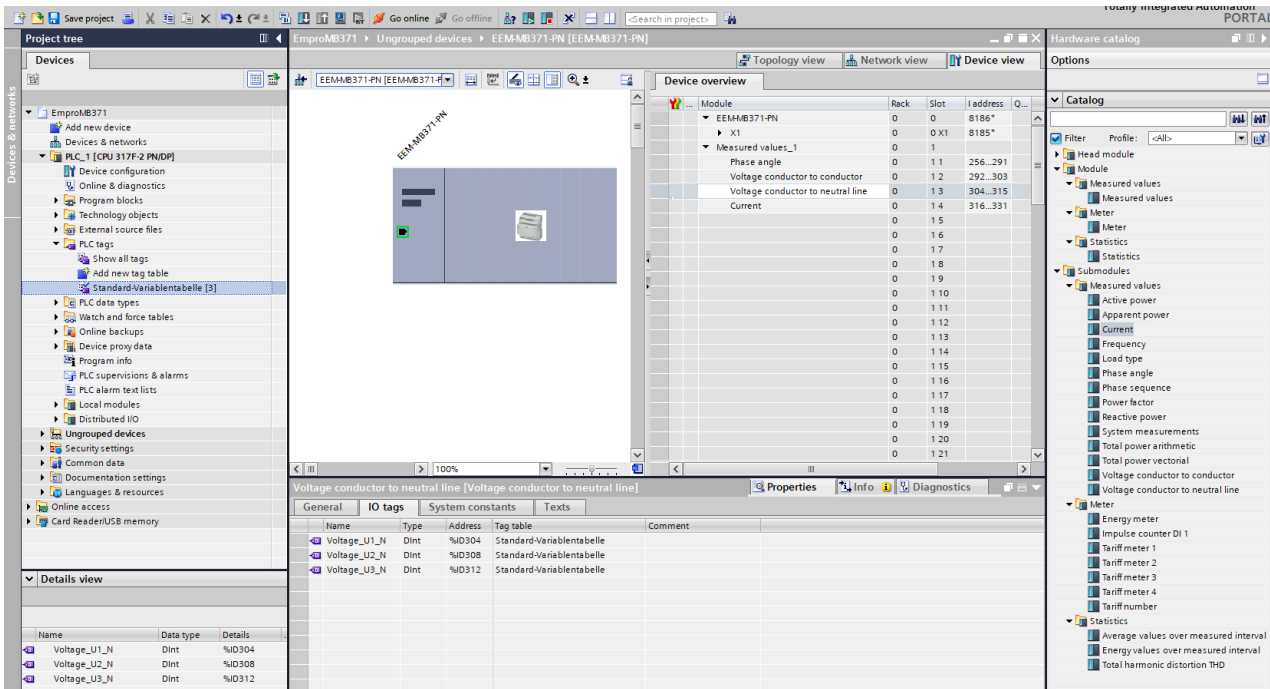


Figure 11-24 Creating PLC variables and connecting them with I/O variables

### 11.3.7 Assigning a device name

1. Right-click on the device to which you want to assign a name.
2. Select “Assign device name”.

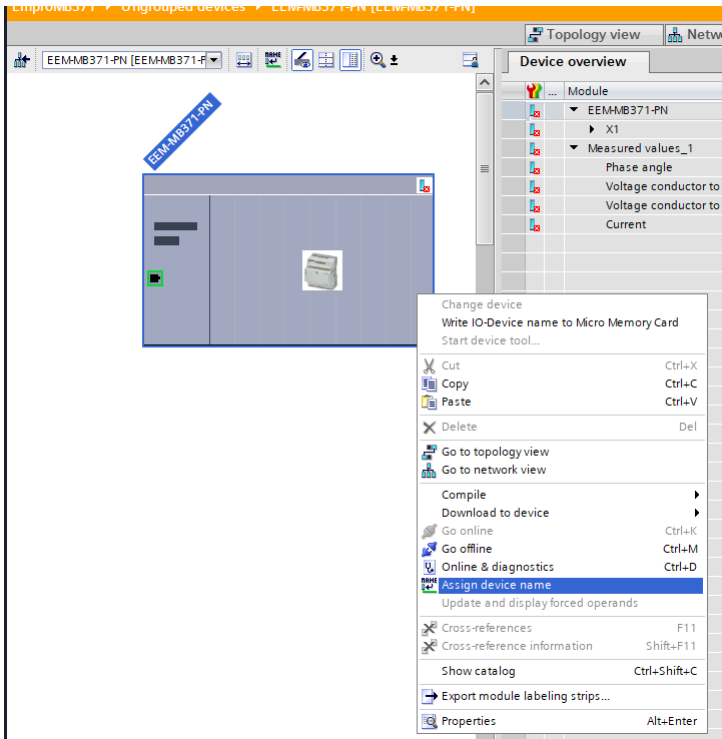


Figure 11-25 “Assign device name”

3. Click “Update list”.

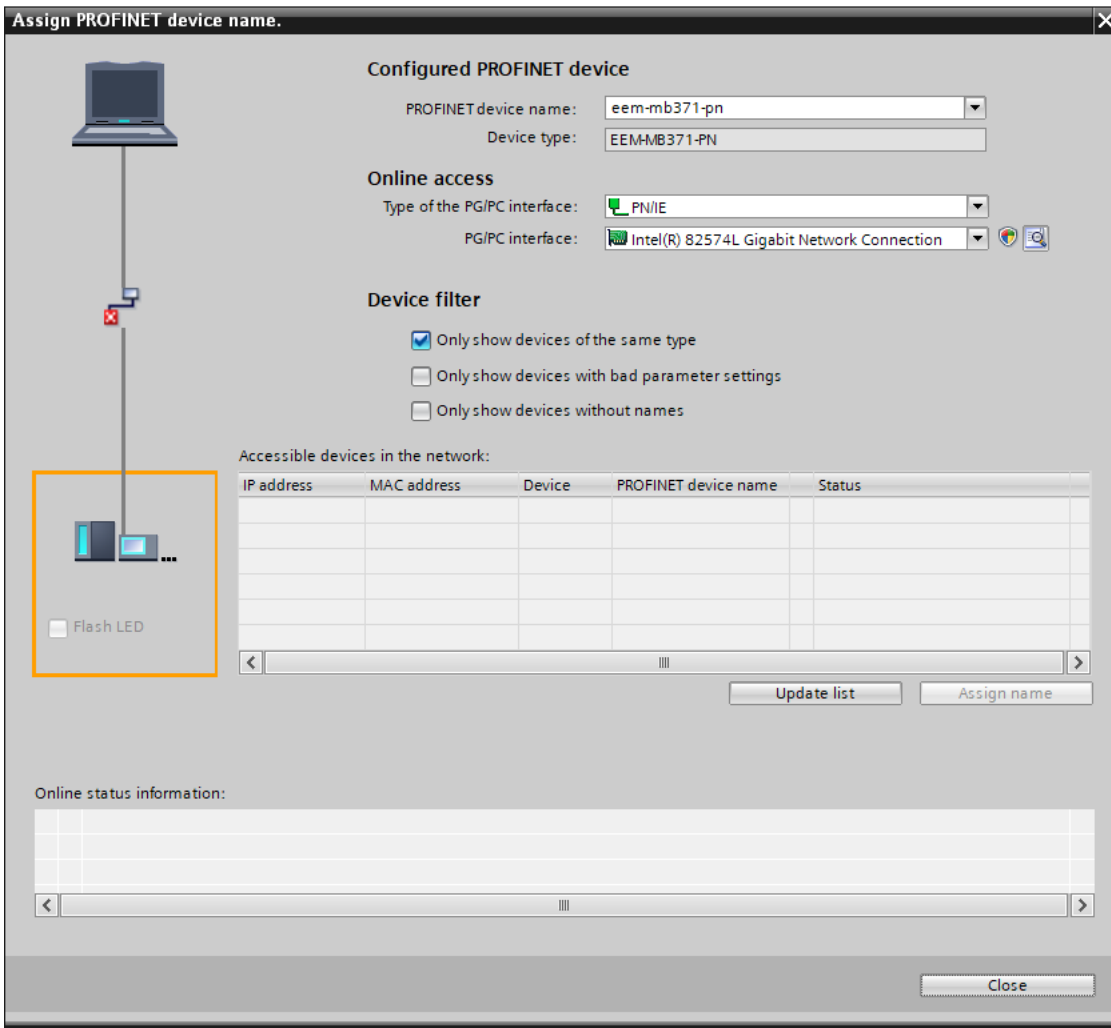


Figure 11-26 “Update list”

## EMpro - multifunctional energy measuring devices for DIN rail mounting

4. Select the device from the table.
5. Click “Assign name”.

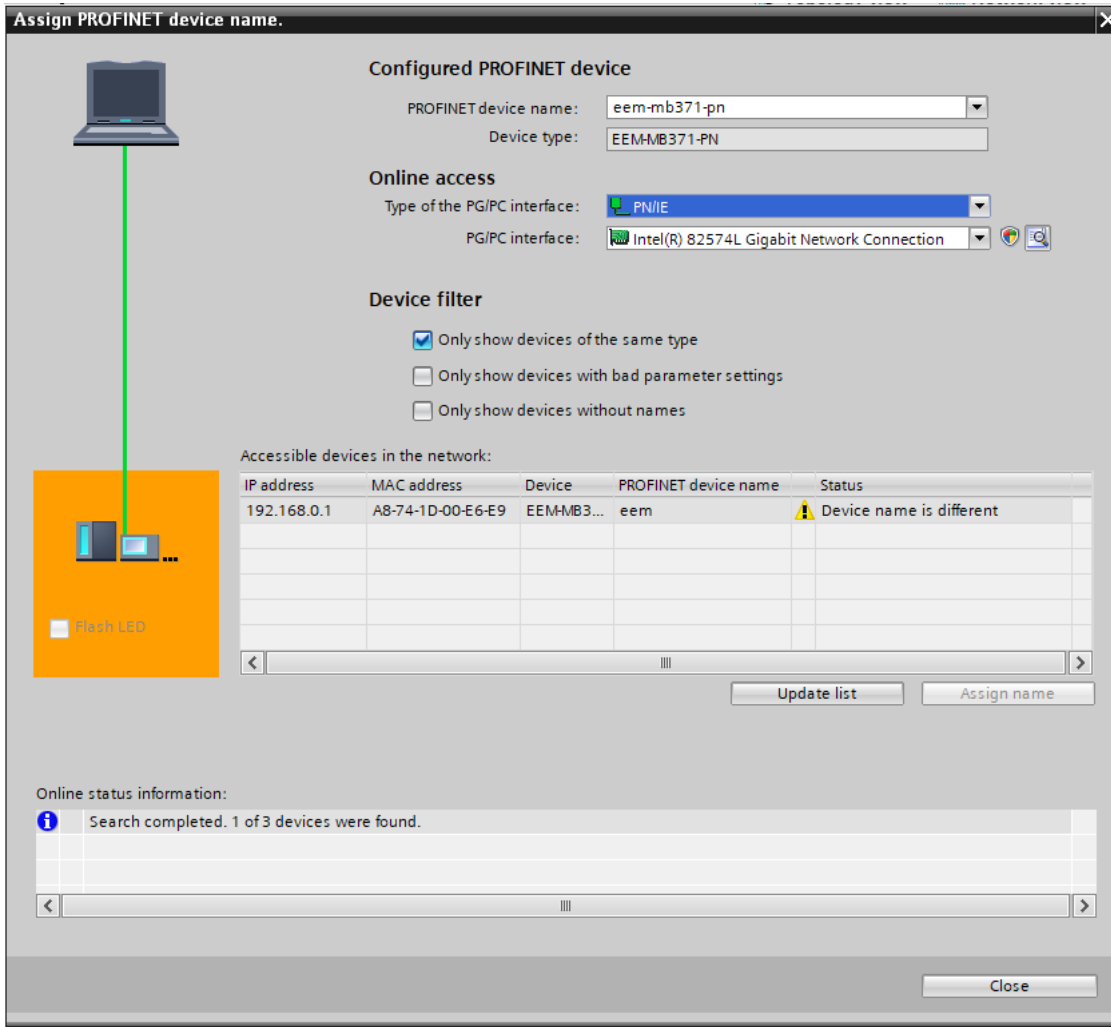


Figure 11-27 “Assign name”

The device name has been assigned successfully.

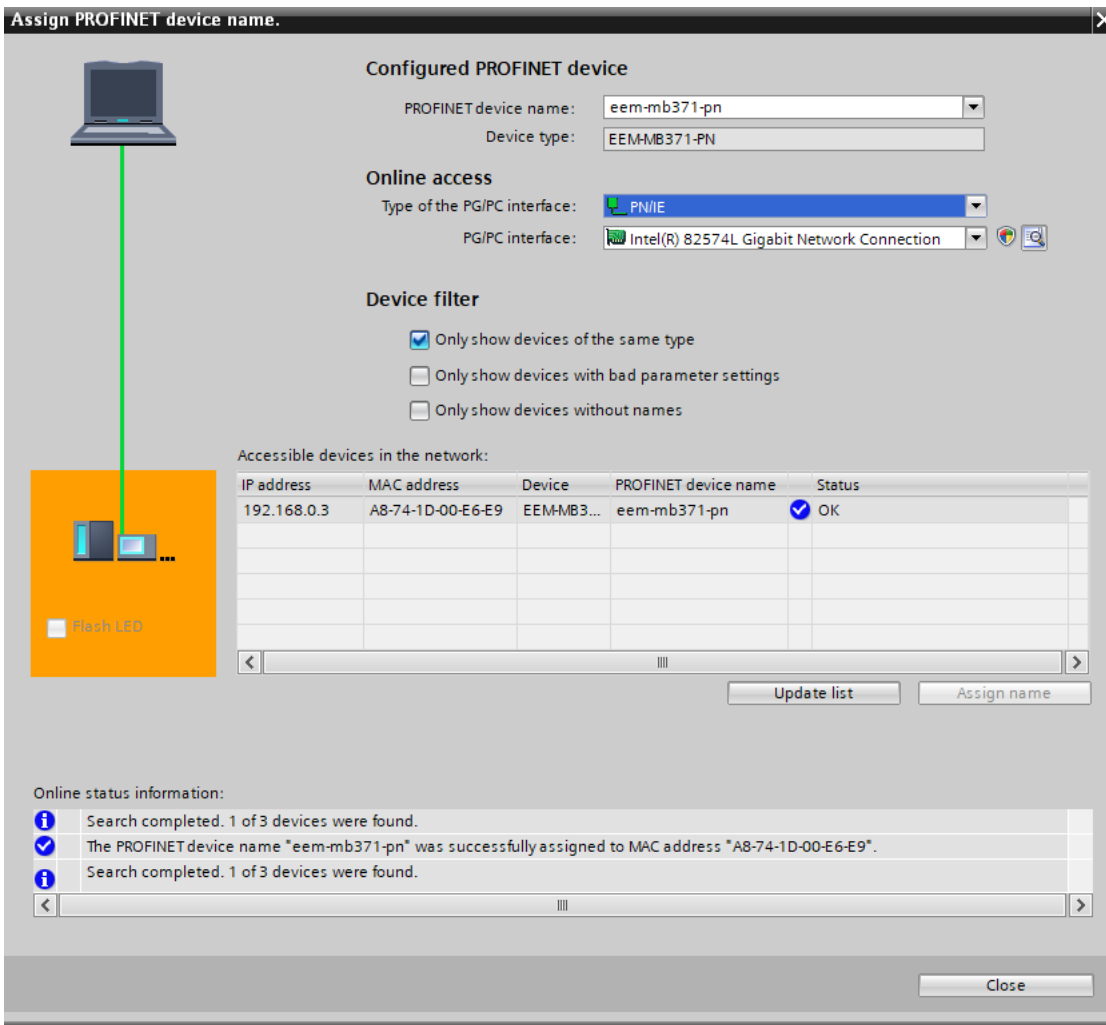


Figure 11-28 Assigning a PROFINET device name

## EMpro - multifunctional energy measuring devices for DIN rail mounting

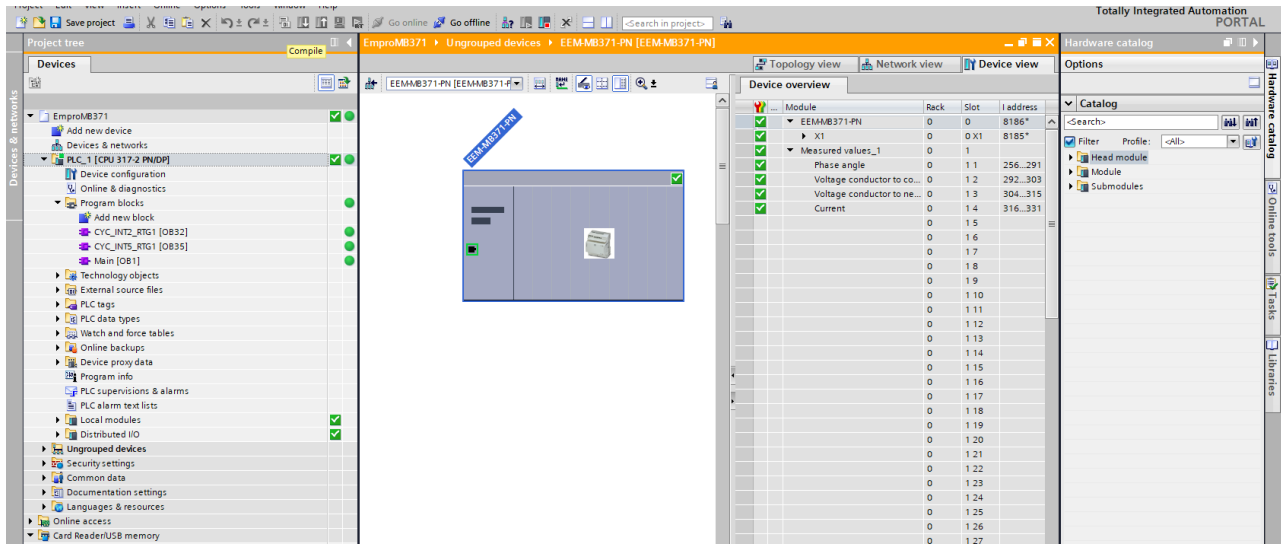


Figure 11-29 Assigning a PROFINET device name

### 11.3.8 Function check

You can perform a function check by creating a monitoring table for viewing the online values.

1. Compile the project.
2. Load it onto your controller.
3. Connect to the controller.
4. To perform a function check, switch to online mode and activate the monitoring by clicking on the glasses icon.

Name	Data type	Address	Retain	Acces...	Visibl...	Monitor value	Comment
1 Voltage_U1_N	Real	%I304		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	229.1287	Phase voltage U1
2 Voltage_U2_N	Real	%I308		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	235.4427	Phase voltage U2
3 Voltage_U3_N	Real	%I312		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	226.0541	Phase voltage U3
4 Voltage_U1_U2	Real	%I292		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	402.3425	Phase conductor voltage U12
5 Voltage_U2_U3	Real	%I296		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	399.7846	Phase conductor voltage U23
6 Voltage_U3_U1	Real	%I300		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	394.1123	Phase conductor voltage U31
7 <Add new>				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		

Figure 11-30 Monitoring table

## 11.4 Configuration

### 11.4.1 Modbus/RTU

Table 11-7

Function	Information	Web server	Display	Register
Activation of Modbus/RTU	The Modbus/RTU protocol is activated by default, but can be deactivated by the user.	x	x	x
Modbus address	The default setting is address 1.	x	x	x
Baud rate	The default setting for the RS-485 interface is 19200 bps.	x	x	x
Stop bits	The default setting for the RS-485 interface is 1 stop bit.	x	x	x
Parity	The default setting for the RS-485 interface is even parity.	x	x	x

### 11.4.2 Modbus/TCP

Table 11-8 Modbus/TCP

Function	Information	Web server	Display	Register
Activation of Modbus/TCP	The Modbus/TCP protocol is activated by default, but can be deactivated by the user.	x	x	x

### 11.4.3 Modbus gateway

Table 11-9 Modbus gateway

Function	Information	Web server	Display	Register
Activation of the gateway mode	By default, the gateway mode is deactivated.	x	x	x
Modbus gateway time-out	The default setting is address 250 ms.			



## 11.5 Safety

On most registers, write commands are PIN-protected. To change register values, the correct PIN is required. The PIN corresponds to the display PIN.

The PIN can be changed by the user.

To prevent unauthorized write access to the device, change the default PIN during initial commissioning of the device.

Table 11-10 PIN

Function	Information	Web server	Display	Register
PIN change	The default PIN is 0100.		x	x

## 11.6 Data types and registers

The Modbus specifications does not include requirements on how various data types are to be displayed on the respective register.

The specification only defines that the register has to be represented as “big endian”. This means that the high byte of a register is sent first, followed by the low byte.

8-bit integer types:

Example: Value = 1 (0x01)

Table 11-11 8-bit integer types

Register address	Register contents (hex)
n	0x0001

16-bit integer types:

Example: Value = 4660 (0x1234)

Table 11-12 16-bit integer types

Register address	Register contents (hex)
n	0x1234

32-bit integer types:

Example: Value = 305419896 (0x12345678)

Table 11-13 32-bit integer types

Register address	Register contents (hex)
n	0x5678
n +1	0x1234

32-bit IEE 754 floating point:

Example: Value = 123.456 (0x42F6E979)

Table 11-14 32-bit IEE 754 floating point

Register address	Register contents (hex)
n	0xE979
n +1	0x42F6

ASCII strings:

Example: Value = EEM-MA (0x45, 0x45, 0x4D, 0x2D, 0x4D, 0x41, 0x33, 0x37, 0x30 -> ASCII coded)

Table 11-15 ASCII strings

Register address	Register contents (hex)
n	0x4545
n +1	0x2D4D
n +2	0x414D
n +3	0x3733
n +4	0x0030

## 11.7 Register table

The register table is available for download from the Phoenix Contact website.

1. Open [phoenixcontact.net/products](http://phoenixcontact.net/products).
2. Enter the order number of your energy measuring device into the search field.
3. In the download area of the product, you will find the register table under "Miscellaneous".

## 11.8 Contents of the register table

The register table contains information that concerns the contents and functions of the communication interfaces.

The register table encompasses the entire Modbus register.

To get the PROFINET-specific register, filter the empty cells from the "GSDML Module Name" column, so that only cells that are filled with content remain.

## 11.9 Description of the register table

CH	Dec	Hex	Count	Unit	Divider	R/W	Datatype	Name (EN)	Description (EN)
<b>H1</b>	<b>0</b>	<b>0</b>						<b>Device data</b>	
<b>H2</b>	<b>256</b>	<b>100</b>						<b>Device information</b>	
R	256	100	2	-	-	R	UInt32	Firmware revision	Firmware revision as unsigned integer
R	300	012C	8	-	-	R	ASCII	Device identifier	Device identifier as NULL terminated ASCII character string
R	308	134	8	-	-	R	ASCII	Item number	Article number as NULL terminated ASCII character string
R	316	013C	9	-	-	R	ASCII	Serial number	Serial number as NULL terminated ASCII character string
R	325	145	8	-	-	R	UInt8[]	UUID	Universally Unique Identifier (UUID) consisting of 128 Bit
R	336	150	1	-	-	R	UInt16	Day of production	Production day of the device (UTC)
R	337	151	1	-	-	R	UInt16	Month of production	Production month of the device (UTC)
R	338	152	1	-	-	R	UInt16	Year of production	Production year of the device (UTC)
R	339	153	1	-	-	R	UInt16	Hour of production	Production hour of the device (UTC)
R	340	154	1	-	-	R	UInt16	Minute of production	Production minute of the device (UTC)
R	341	155	1	-	-	R	UInt16	Second of production	Production second of the device (UTC)
R	342	156	2	-	-	R	UInt32	Serial number	Serial number as unsigned integer
R	346	015A	1	-	-	R	UInt16	Hardware revision	Hardware revision, splitted in major- and minor version.
R	416	01A0	16	-	-	R	ASCII	Bootloader revision	Bootloader revision as NULL terminated ASCII character string
<b>H2</b>	<b>1024</b>	<b>400</b>						<b>Device configuration</b>	

Figure 11-31 Register table

### Content of the line (CH)

The first line of the register table contains information about the content of the respective line or column.

### H1... Hn: Heading

An "H" with a number indicates a heading. The number behind it indicates the hierarchical level.

To keep the register entries structured and readable, they are divided by headings.

**R: Register**

The “R” stands for Register and designates the lines that each describe a register.

Only lines that also contain registers are relevant for automatic processing of the register table.

**U: Unused**

The “U” describes unused entries. These can be ,e.g., address ranges that do not have a function (yet) and are reserved.

**E: End**

The “E” describes the end of the table.

**Dec: Decimal address**

The second column of the register table contains register addresses in decimal form.

**Hex: Hexadecimal address**

The third column of the register table contains register addresses in hexadecimal form.

**Count**

The “Count” column displays the number of registers required for the function described in this line. The required number is directly dependent on the data type.

**Short designation**

The “Short designation” column contains the abbreviated designations of the registers. The short designations are unique, so that all other data can be referenced using the short designations.

**Unit**

The unit for the process values is given in the “Unit” column. For example, the unit for the voltages is volt [V].

**Divider**

The “Divider” column states the divider by which the value is to be divided to get the correct value. This is necessary, e.g., if the data type is an integer value, but a decimal fraction has to be entered.

Example:

If the harmonics are specified as percentage with signed integer, but have to be output with a precision of a tenth of a percent. In this case, for example, 15.2% is used as 152 with divider 10.

**R/W: Read/write access**

This column specifies which access is permitted for the respective register.

**R: Read only**

This register can only be read. Attempting write access to this register causes an error.

### **R/W: Read and write**

It is possible to both read and write to this register.

### **W: Write only**

This register can only be written. Attempting read access to this register causes an error.

### **W/R0: Write only and read 0**

This register can only be written. Read access to this register results in a zero as response.

### **Data type**

This column contains the data type to be used for decoding the contents of each respective register.

### **ASCII**

Each register (16 Bit) contains two ASCII characters. When the number is entered, the number of individual registers contained in the character string is determined.

Example:

Dec:1234567

Hex: 0X31, 0X32, 0X33, 0X34, 0X35, 0X36, 0X37

Zero-terminated: "12345670"

Hex: 0X31, 0X32, 0X33, 0X34, 0X35, 0X36, 0X37, 0X00

Number of registers = 4: Hex: 0X3231, 0X3433, 0X3534, 0X0037

### **Bit mask**

Each bit (bit 15-bit 0) of the register (16 bit) is evaluated individually.

Example: "Resetting the tariff meter"

Bit 0: Reset tariff 1

Bit 1: Reset tariff 2

Bit 2: Reset tariff 3

Bit 3: Reset tariff 4

An individual tariff meter, or any combination of meters from all tariff meters can be reset.

### **Bool**

This data type makes a logical statement.

0: false

1: true

### **FI32**

IEEE-754-single number 1.8.23 (32 bits, two 16-bit registers):

1 sign bit: positive and negative

8 exponent bits:≈ value range of 38 decimal places

23 mantissa bits  $\approx$  precision of 6 decimal places

Decimal value range:  $\pm 1.175 \cdot 10^{-38}$  to  $3.40282 \cdot 10^{+38}$

### Register in float

32-bit value from the registers: 0X41340000 = 01000001 00110100 00000000 00000000b

Bit31 = 0: SB, sign bit. This number is positive.

Bit30 - Bit23: E, exponent. In this case: 130.

Bit22 - Bit0: M, mantissa. Here it is 3,407,872.

Z = 11.25

### Float in register

Floating-point number X = 11.25

SB, sign bit. This number is positive  $\Rightarrow$  Bit31 = 0 / 0X00 / 0b

In this case 130  $\Rightarrow$  Bit30 - Bit23 = 130 / 0X82 / 1000010b

mantissa. Here it is 3,407,872  $\Rightarrow$  Bit22 - Bit0 = 3407872 / 0x340000 / 0110100 00000000 00000000b

32-bit value for the register: 0X41340000 = 01000001 00110100 00000000 00000000b

### SInt16

Signed integer:

2 byte, 16 bit

Value range:  $-2^{15} \dots 2^{15}-1$

-32,768 ... 32,767

### UInt16

Unsigned integer:

2 byte, 16 bit

Value range:  $0 \dots 2^{16}-1$

0 ... 65,535

### UInt32

Unsigned integer:

4 byte, 32 bit

Value range:  $0 \dots 2^{32}-1$

0 ... 4294967295

### SInt32

Signed integer:

4 byte, 32 bit

Value range:  $-2^{31} \dots 2^{31}-1$

-2147483648 ... 2147483647

**UInt8**

Only the low byte of the register is evaluated.

1 byte, 8 bit

Value range:  $0 \dots 2^8-1 = 0 \dots 255$

**UInt[]**

Array of UInt8 values. Their order follows that of the ASCII registers.

These data types are used, e.g., for the MAC addresses.

Three registers are required for the six bytes.

E.g., 00:A0:45:66:4F:41

**Name**

Here, the name of the respective register is entered. It may be longer than the short designation, so that it is readable and expresses the function of the register.

**Description**

In this column, the function of the register is described in detail.



## 12 Technical data

<b>Technical data</b>	
<b>General data</b>	
Measuring principle	True r.m.s. value measurement (TRMS) up to 63rd harmonic
Measurement value	AC sine
Nominal frequency	50/60 Hz
Frequency range	45 ... 65 Hz
Sampling rate	256 times the signal frequency: 12800 Hz @ FSignal = 50 Hz 15360 Hz @ FSignal = 60 Hz
Degree of protection	IP20 (housing) IP40 (display)
<b>Dimensions</b>	
EEM-MB37x(-PN, -EIP [with PN/EIP socket]):	<b>Width / height / depth</b> 90 mm x 80 mm x 82 mm
EEM-Mx37x(-R):	90 mm x 80 mm x 64 mm
<b>Voltage measurement</b>	
Input measuring range, direct	18 V AC ... 690 V AC (Ph/Ph) 11 V AC ... 400 V AC (Ph/N)
Input measuring range using transformer	
Primary	60 V AC ... 2,000,000 V AC
Secondary	60 V AC ... 400 V AC
Power consumption	<0.5 VA
Overvoltage (permanent)	760 V AC Ph/Ph 440 V AC Ph/N
Accuracy	0.2%
<b>Current measurement, current transformer</b>	
Input current:	
Primary nominal current	1 A AC ... 20,000 A AC
Secondary	1 A AC or 5 A AC
Overload capacity	6 A AC
Short-term overload	50 A for 1 s
Power consumption	<0.5 VA
Discrimination threshold	0.05% I <sub>n</sub>
Accuracy	0.2% (10% ... 120% I <sub>n</sub> )
<b>Current measurement, Rogowski coil direct connection</b>	

## EMpro - multifunctional energy measuring devices for DIN rail mounting

<b>Technical data [...]</b>	
Input measuring range using transformer	
Primary	100 A AC ... 20,000 A AC
Secondary	40 mV AC or 400 mV AC
Secondary measuring range	0 mV AC ... 48 mV AC or 0 mV AC ... 480 mV AC
Overload capacity	1.2 x I <sub>n</sub> = 1.2 x 400 mV AC = 480 mV AC
Short-term overload	
Discrimination threshold	0.1% I <sub>n</sub>
Accuracy	0.5% (10%...120% I <sub>n</sub> )
<b>Power measurement</b>	
Accuracy, active power	
Current transformer:	0.5% (in acc. with DIN EN 61557-12)
Rogowski coil direct connection:	1% (in acc. with DIN EN 61557-12)
Precision, reactive power	
Current transformer:	1% (in acc. with DIN EN 61557-12)
Rogowski coil direct connection:	2% (in acc. with DIN EN 61557-12)
Accuracy, apparent power	
Current transformer:	0.5% (in acc. with DIN EN 61557-12)
Rogowski coil direct connection:	1% (in acc. with DIN EN 61557-12)
Active energy in accordance with 62053-22	
Current transformer:	Class 0.5 S
Active energy in accordance with 62053-21	
Rogowski coil direct connection:	Class 1
Reactive energy in accordance with EN 62053-23	
Current transformer:	Class 2
Rogowski coil direct connection:	Class 2
Pulse value, LED test output	
Current transformer:	0.1 Wh/Imp
Rogowski coil direct connection:	100 Wh/Imp
<b>Supply</b>	
Supply voltage range	80 ... 277 V AC 120 ... 300 V DC
Nominal supply voltage	100 V AC ... 230 V AC +/-20% 150 V DC ... 250 V DC +/-20%
Frequency	AC sine (50/60 Hz)
Power consumption	<4 W
<b>Digital input in accordance with 61131-2 (type 3)</b>	
Nominal voltage	24 V DC
Nominal current	-
Input voltage range	0 V DC ... 30 V DC
Signal ON time	≥30 ms

<b>Technical data [...]</b>	
Signal OFF time	≥30 ms
<b>Digital output in accordance with 61131-2 (type 3)</b>	
Nominal voltage	24 V DC
Rated output current I <sub>e</sub>	0.1 A
Output voltage range	19.2 V DC ... 30 V DC
Output current range	0 mA ... 100 mA
<b>Ethernet interface</b>	
RJ45/LAN	100Base-TX
<b>Display</b>	
Type	LCD display, two-color, backlit
Refresh	1 s, adjustable
<b>Electrical isolation</b>	
Basic insulation: housing against all potentials	IEC 61010-1
Overvoltage category III at 300 V AC	
Overvoltage category II at 600 V AC	
Reinforced insulation: supply against all other potentials	IEC 61010-1
Overvoltage category III at 300 V AC	
Overvoltage category II at 600 V AC	
Reinforced insulation: voltage measurement input against all other potentials	IEC 61010-1
Measurement category III at 300 V AC	
Measurement category II at 600 V AC	
Test voltage	4 kV AC (50 Hz, 1 min.)
Functional insulation: current measurement input against all other potentials	
Functional insulation: digital I/Os	
Functional insulation: communication interface	
Pollution degree	2
<b>Ambient conditions</b>	
Ambient temperature (operation)	-10°C...+55°C
Ambient temperature (storage/transport)	-25°C...+85°C
Permissible humidity (operation)	≤95% non-condensing
Altitude	≤2,000 m
<b>Connection data</b>	
Conductor cross section, current (rigid/flexible)	0.2 mm <sup>2</sup> ... 4 mm <sup>2</sup> / 0.2 mm <sup>2</sup> ... 6 mm <sup>2</sup>
Conductor cross section, voltage (rigid/flexible)	0.5 mm <sup>2</sup> ... 2.5 mm <sup>2</sup> / 0.5 mm <sup>2</sup> ... 4 mm <sup>2</sup>
Conductor cross section, supply (rigid/flexible)	0.14 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>
Conductor cross section, digital I/O (rigid/flexible)	0.14 mm <sup>2</sup> ... 1.5 mm <sup>2</sup> / 0.14 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>
Conductor cross section, communication (rigid/flexible)	0.14 mm <sup>2</sup> ... 2.5 mm <sup>2</sup>

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

<b>Technical data [...]</b>	
Connection method	Screw connection
Tightening torque	0.5 Nm
<b>Date and time</b>	
Precision of clock time during normal operation	±50 ppm
Precision of clock time during power reserve	±150 ppm
Duration of power reserve	<24 h
Time constant T	<1 h
<b>Fuses</b>	
DI/DO	≤50 mA
Supply	≤16 A
<b>Conformance/approvals</b>	
CE-compliant	RoHS, EMC, LVD
RoHS	EN 50581
EMC	EN 61000-6-2, EN 61000-6-3
LVD	EN 61010-1
UL, cULus-listed	UL 61010-1

# A Appendix for document lists

## A 1 List of figures

### Section 3

Figure 3-1:	Mounting .....	15
Figure 3-2:	Removal .....	15
Figure 3-3:	Pin assignment example .....	17
Figure 3-4:	Pin assignment example .....	18
Figure 3-5:	Connection L/N .....	19
Figure 3-6:	Connection L/L .....	19
Figure 3-7:	One-phase network, two conductors, one current transformer .....	20
Figure 3-8:	Two-phase network, two conductors, one current transformer .....	20
Figure 3-9:	Three-phase network, three conductors, one current transformer .....	21
Figure 3-10:	Three-phase network, three conductors, two current transformers .....	21
Figure 3-11:	Three-phase network, three conductors, three current transformers .....	21
Figure 3-12:	Three-phase network, four conductors, one current transformer .....	21
Figure 3-13:	Three-phase network, four conductors, three current transformers .....	22
Figure 3-14:	Two-phase network, three conductors, two current transformers .....	22
Figure 3-15:	One-phase network, two conductors, one Rogowski coil .....	23
Figure 3-16:	Two-phase network, two conductors, one Rogowski coil .....	23
Figure 3-17:	Three-phase network, three conductors, one Rogowski coil .....	23
Figure 3-18:	Three-phase network, three conductors, three Rogowski coils .....	24
Figure 3-19:	Three-phase network, four conductors, one Rogowski coil .....	24
Figure 3-20:	Three-phase network, four conductors, three Rogowski coils .....	24
Figure 3-21:	Two-phase network, three conductors, two Rogowski coils .....	24

### Section 4

Figure 4-1:	EEM-MB-370 .....	25
Figure 4-2:	EEM-MB-370-PN .....	26
Figure 4-3:	EEM-MB370-EIP .....	27

## Section 5

Figure 5-1:	Starting the basic device configuration .....	31
Figure 5-2:	Language selection .....	31
Figure 5-3:	Network settings .....	32
Figure 5-4:	IPv4 .....	32
Figure 5-5:	Selection of grid type with current transformers .....	33
Figure 5-6:	Selection of grid type with Rogowski coils .....	33
Figure 5-7:	Current input (energy measuring device with current transformer) .....	34
Figure 5-8:	Current input (energy measuring device with Rogowski coil) .....	35
Figure 5-9:	Voltage input .....	35
Figure 5-10:	Configuration conclusion .....	36
Figure 5-11:	Setting a personal pin .....	36
Figure 5-12:	Activating the PIN .....	36
Figure 5-13:	Network settings .....	38
Figure 5-14:	Grid type .....	39
Figure 5-15:	Current input, current transformer .....	40
Figure 5-16:	Current input (Rogowski coil) .....	41
Figure 5-17:	Voltage input .....	43
Figure 5-18:	Voltage input with voltage transducer .....	44
Figure 5-19:	Configuration overview .....	45

## Section 6

Figure 6-1:	Menu structure on the display .....	47
Figure 6-2:	Menu structure on the web server .....	48

## Section 7

Figure 7-1:	“Language” menu .....	51
Figure 7-2:	Language selection .....	51
Figure 7-3:	“Date / Time” menu .....	52
Figure 7-4:	Settings: “Date / Time” .....	52
Figure 7-5:	“Settings, Date / Time, Settings, “Manually” mode .....	53
Figure 7-6:	Menu: “Settings, Date / Time, Settings, “SNTP Server” mode .....	54
Figure 7-7:	Menu: “Settings, Date / Time, Settings, Summer time rule” .....	57
Figure 7-8:	Menu: “Display, Contrast” .....	58
Figure 7-9:	Settings: “Display, Contrast” .....	58
Figure 7-10:	Menu: “Display, Brightness” .....	59

Figure 7-11:	Settings: “Display, Brightness“ .....	59
Figure 7-12:	Menu: “Display, Permanent light“ .....	60
Figure 7-13:	Settings: “Display, Permanent light“ .....	60
Figure 7-14:	Settings: “Illumination time“ .....	61
Figure 7-15:	Menu: “Display, Standard display“ .....	62
Figure 7-16:	Settings: “Display, Standard display“ .....	62
Figure 7-17:	Menu: “Display, Alarm light“ .....	63
Figure 7-18:	Settings: “Display, Alarm light“ .....	63
Figure 7-19:	Menu: “Display, Refresh time“ .....	64
Figure 7-20:	Settings: “Display, Refresh time“ .....	64
Figure 7-21:	Web server: “Settings, Display“ .....	65
Figure 7-22:	Menu: “Device info“ .....	66
Figure 7-23:	Display: “Device info“ .....	66
Figure 7-24:	Menu: “System, Factory reset“ .....	67
Figure 7-25:	Menu: “System, Factory reset“ .....	67
Figure 0-1:	Settings: “Illumination time“ .....	69

## Section 8

Figure 8-1:	Menu: “System, PIN xxxx“ .....	72
Figure 8-2:	Settings: “System, PIN xxxx“ .....	72
Figure 8-3:	Menu: “System, User management, Change password“ .....	73
Figure 8-4:	Menu: “Settings, Display“ .....	74
Figure 8-5:	Menu: “System, PIN active/WBM active“ .....	75
Figure 8-6:	Setting: “System, WBM active“ .....	75
Figure 8-7:	Setting: “System, PIN active“ .....	75
Figure 8-8:	Menu: “System, Configuration data, Export configuration“ .....	77
Figure 8-9:	Menu: “System, Configuration data, Import configuration“ .....	78
Figure 8-10:	Menu: “System, Configuration data, Transfer configuration“ .....	79

## Section 9

Figure 9-1:	Menu: “Home, Meter readings“ .....	81
Figure 9-2:	Menu: “E, Energy total“ .....	82
Figure 9-3:	Menu: “E, Energy total“ .....	82
Figure 9-4:	Menu: “E, Energy resettable“ .....	83
Figure 9-5:	Menu: “E, Energy resettable“ .....	83
Figure 9-6:	Menu: “Tar, Tariff meter 1...4“ .....	84
Figure 9-7:	Menu: “Tar, Tariff meter 1“ .....	84

Figure 9-8:	Menu: "Device info, Operating hours/Load operation" .....	85
Figure 9-9:	Menu: "Device info, Operating hours/Load operation" .....	85
Figure 9-10:	Menu: "Settings, Average values" .....	87
Figure 9-11:	Menu: "Average values, Settings" .....	88
Figure 9-12:	AVG over fixed interval (fixed block) .....	89
Figure 9-13:	Sliding average value (sliding block) .....	89
Figure 9-14:	Rolling average value (rolling block) .....	90
Figure 9-15:	Prediction calculation (equally weighted average) .....	91
Figure 9-16:	Prediction generation (weighted average) .....	91

## Section 10

Figure 10-1:	Digital input .....	94
Figure 10-2:	Menu: "Settings, Impulse counter" .....	95
Figure 10-3:	Menu: "Settings, Tariffs, Digital input" .....	97
Figure 10-4:	Menu: "UL-L" .....	99
Figure 10-5:	Menu: "UL-L, UL-L instantaneous" (instantaneous values, instantaneous) .....	99
Figure 10-6:	Menu: "UL-L, UL-L Min" (min. values, min) .....	99
Figure 10-7:	Menu: "UL-L, UL-L Max" (max. values, max) .....	99
Figure 10-8:	Menu: "UL-L, UL-L AVG Min" (minimum average values, AVG min) .....	100
Figure 10-9:	Menu: "UL-L, UL-L AVG" (average values, AVG) .....	100
Figure 10-10:	Menu: "UL-L, UL-L AVG max" (max. average values, AVG max) .....	100
Figure 10-11:	Menu: "Settings, Average values, Status" .....	101
Figure 10-12:	Menu: "Settings, Digital output" .....	102
Figure 10-13:	Menu: "Settings, Digital output", "Impulse" function .....	104
Figure 10-14:	Menu: "Settings, Digital output", "Device state" function .....	106
Figure 10-15:	Menu: "Settings, Digital output", "Manually" function .....	108
Figure 10-16:	Menu: "Settings, Digital output", "Alarm" function .....	110
Figure 10-17:	Menu: "Settings, Alarm, Status" .....	111
Figure 10-18:	Menu: "Settings, Alarm" .....	112
Figure 10-19:	Menu: "Digital output, Settings, "Rotary field direction" .....	114
Figure 10-20:	Menu: "Digital output, Settings", "Deactivated" function .....	116
Figure 10-21:	Menu: "Tar, Tariff meter" .....	118
Figure 10-22:	Menu: "Tar, Tariff meter 1" .....	118
Figure 10-23:	Menu: "Tariffs, Settings" .....	119
Figure 10-24:	Menu: "Tariffs, Settings" .....	121



Figure 10-25:	Menu: “Settings, Digital output”, “Alarm” function .....	124
Figure 10-26:	Logic gate with AND operator .....	125
Figure 10-27:	Logic gate with NAND operator .....	125
Figure 10-28:	Logic gate with OR operator .....	126
Figure 10-29:	Logic gate with NOR operator .....	126
Figure 10-30:	Logic gate with XOR operator .....	126
Figure 10-31:	Logic gate with NXOR operator .....	127
Figure 10-32:	Menu: “Logging” .....	128
Figure 10-33:	“Menu: Logging, Settings” .....	129
Figure 10-34:	Menu: “Logging, Saved data” .....	130
Figure 10-35:	Execution of a firmware update .....	131
Figure 10-36:	Progress and state .....	132

## Section 11

Figure 11-1:	.....	135
Figure 11-2:	.....	136
Figure 11-3:	.....	136
Figure 11-4:	.....	137
Figure 11-5:	Topology .....	141
Figure 11-6:	Connections and designations .....	142
Figure 11-7:	Modbus status .....	143
Figure 11-8:	Modbus settings .....	144
Figure 11-9:	“Options, Manage general station description files (GSD)” .....	147
Figure 11-10:	Installing the station description file .....	148
Figure 11-11:	Dialog: “Manage general station description files” .....	149
Figure 11-12:	“Devices & networks” in the network view .....	150
Figure 11-13:	Selecting the EMpro from the hardware catalog .....	151
Figure 11-14:	Adding EMpro to network view .....	152
Figure 11-15:	EMpro in the network view .....	153
Figure 11-16:	Assigning an I/O controller to the EMpro .....	154
Figure 11-17:	Selecting the I/O controller .....	154
Figure 11-18:	Networking controller and energy measurement device .....	155
Figure 11-19:	Adding a module to the device overview .....	156
Figure 11-20:	Submodules in the hardware catalog .....	157
Figure 11-21:	Inserting submodules .....	158
Figure 11-22:	Available modules and submodules .....	159
Figure 11-23:	Selecting a submodule in the device overview .....	160

Figure 11-24:	Creating PLC variables and connecting them with I/O variables .....	161
Figure 11-25:	“Assign device name” .....	162
Figure 11-26:	“Update list” .....	163
Figure 11-27:	“Assign name” .....	164
Figure 11-28:	Assigning a PROFINET device name .....	165
Figure 11-29:	Assigning a PROFINET device name .....	166
Figure 11-30:	Monitoring table .....	167
Figure 11-31:	Register table .....	172

---

## A 2 List of tables

### Section 2

Table 2-1:	Product overview .....	13
------------	------------------------	----

### Section 4

Table 4-1:	.....	26
Table 4-2:	.....	27
Table 4-3:	Displaying the events.....	29
Table 4-4:	Meaning of the softkeys .....	30

### Section 11

Table 11-1:	.....	135
Table 11-2:	.....	136
Table 11-3:	.....	136
Table 11-4:	.....	137
Table 11-5:	.....	138
Table 11-6:	.....	139
Table 11-7:	.....	168
Table 11-8:	Modbus/TCP.....	168
Table 11-9:	Modbus gateway .....	168
Table 11-10:	PIN.....	169
Table 11-11:	8-bit integer types .....	170
Table 11-12:	16-bit integer types .....	170
Table 11-13:	32-bit integer types .....	170
Table 11-14:	32-bit IEE 754 floating point .....	170
Table 11-15:	ASCII strings.....	171



## A 3 Index

### Numerics

16-bit integer .....	170
1PH-2W-1CT .....	20
1PH-2W-1RC .....	23
2907944 .....	13
2907945 .....	13
2907946 .....	13
2907953 .....	13
2908285 .....	13
2908286 .....	13
2908301 .....	13
2908302 .....	13
2PH-2W-1CT .....	20
2PH-2W-1RC .....	23
2PH-3W-2CT .....	22
2PH-3W-2RC .....	24
32 bits .....	170
3PH-3W-1CT .....	21
3PH-3W-1RC .....	23
3PH-3W-2CT .....	21
3PH-3W-3CT .....	21
3PH-3W-3RC .....	24
3PH-4W-1CT .....	21
3PH-4W-1RC .....	24
3PH-4W-3CT .....	22
3PH-4W-3RC .....	24
8 bits .....	170

### A

Acknowledging alarms .....	101
Acknowledgment of alarms .....	93
Activating PIN via display .....	36
Activating voltage input via web server .....	43
Activating voltage transducer via web server .....	44
Activation of gateway mode .....	168
Activation of Modbus/RTU .....	168
Activation of Modbus/TCP .....	168
Active energy .....	82, 83, 84
Active power .....	9
Alarm	
Digital output .....	103
Web server .....	110
Alarm acknowledgment via digital input .....	112

Alarm light	
Display .....	63
Alarm setting	
Web server .....	112
Amplitude transmission factor .....	42
AND operator .....	125
Apparent energy .....	82, 83, 84
Apparent power .....	9
Assigning a PROFINET device name .....	165
Average value generation .....	86
Active power consumption, supply .....	86
Currents .....	86
Frequency .....	86
Voltages, phase to neutral conductor .....	86
Voltages, phase to phase .....	86
Average value synchronization	
Display .....	99
Web server .....	101
Average values	
Apparent power .....	86
Reactive power .....	86
Web server .....	87
AVG over fixed interval .....	87
AVG over rolling interval .....	87
AVG over sliding interval .....	87

### B

Basic device configuration .....	31
Basic device configuration via display .....	31
Basic device configuration via the web server .....	37
Brightness adjustment	
Display .....	59
Broadcast messages .....	146

### C

Change password	
Web server .....	73
Change PIN	
Display .....	72
Color change activation for alarm	
Display .....	63
Communication .....	135

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

Communication interface		Default gateway .....	37
Tariff selection .....	119	Default setting	
Configuration.....	168	Contrast of display .....	58
Modbus/RTU .....	168	Digital input.....	94
Configuration data		Digital output .....	103
Export.....	77	Display format .....	62
Configuration of digital output		Language .....	51
Modbus communication interface.....	102	Password .....	73
Web server.....	102	PIN .....	72
Configuration overview via display .....	36	Refresh time for measured value display.....	64
Configuration overview via web server .....	45	Default setting, brightness	
Configuration via display .....	71	Display .....	59
Configuration via Modbus .....	71	Default setting, illumination duration	
Configuration via web server .....	71	Display .....	61, 69
Configuring current input via web server .....	40	Device description file .....	147
Connection (L/L) .....	19	Device name assignment.....	162
Connection (L/N).....	19	Device status .....	106
Connections		Digital output .....	103
RS-485 interface .....	142	Device supply.....	19
Contrast adjustment		DHCP.....	37
Display .....	58	DHCP protocol.....	138
Contrast of display		DHCP server .....	138
Default setting .....	58	Digital input .....	93
CRC .....	141	Default setting .....	94
Current sensors		Digital output .....	102
Current transformer .....	20	Default setting .....	103
Rogowski coil .....	23	Function .....	103
Current transformer (CT).....	20	Impulse.....	104
Cyclic redundancy check .....	141	Manual .....	108
		Web server.....	102
<b>D</b>		Digital output deactivation .....	116
Data logging.....	128	DIN rail adapters .....	9
Data types .....	170	Direct transfer of configuration data .....	79
Deactivated		Directly transferring configuration data.....	79
Digital output .....	103		
Deactivating .....	116		
Deactivating configuration			
Display .....	74		
Deactivating display and web server.....	74		
Deactivating Modbus communication interface.....	75		
Deactivation			
Display and web server .....	74		
Modbus communication interface.....	75		
Deactivation of digital output			
Modbus communication interface.....	108		
Web server.....	108		

Display		EEM-MA771-EIP.....	13
Activating PIN.....	36	EEM-MA771-PN.....	13
Alarm light.....	63	EEM-MA771-R.....	13
Brightness of display.....	59	Energy meter, resettable	
Change PIN.....	72	Display.....	83
Color change activation for alarm.....	63	Reset.....	83
Configuration.....	71	Energy meter, total	
Configuration overview.....	36	Display.....	82
Contrast adjustment.....	58	Ethernet interface.....	135
Deactivating configuration.....	74	EtherNet/IP.....	11
Default setting, brightness.....	59	EtherNet/IP™.....	135
Default setting, illumination duration.....	61, 69	Exporting configuration data.....	77
Display format IEC.....	62		
Display format IEEE.....	62	<b>F</b>	
Energy meter, resettable.....	83	Firmware update.....	131
Energy meter, total.....	82	Fixed block.....	89
Event display.....	29	Format selection for standard display	
Format selection for standard display.....	62	Display.....	62
Grid type selection.....	33	Web server.....	65
Illumination duration setting for backlight.....	60	Front panel installation.....	9
Language selection.....	31, 51	Function	
Load operation.....	85	Modbus.....	140
Menu structure.....	47	Function check.....	167
Network settings.....	32	Function codes.....	140
Operating elements.....	30	Function of digital input	
Operating hours counter.....	85	Acknowledgment of alarms.....	93
Permanent light.....	61, 69	Impulse counter.....	93
Read date and time.....	52	Synchronization of average values.....	93
Refresh time selection for measured values.....	64	Tariff selection.....	93
Resetting the energy meter.....	83	Functions.....	93
Setting PIN.....	36	Functions of digital input.....	93
Synchronization of average values.....	99		
Tariff meter.....	84	<b>G</b>	
Technical data.....	28	Gateway mode	
Display format		Activation.....	168
Default setting.....	62	GSDML file.....	147
DNS server.....	37	GSDML file integration.....	147
Dynamic IP configuration.....	138		
<b>E</b>		<b>H</b>	
Editing access data.....	72	Hardware integration.....	150
EEM-MA770.....	13	Holding register.....	140
EEM-MA770-EIP.....	13		
EEM-MA770-PN.....	13	<b>I</b>	
EEM-MA770-R.....	13	I/O variable.....	161
EEM-MA771.....	13	Idle level.....	103

## EMpro - multifunctional energy measuring devices for DIN rail mounting

---

IEC display format .....	62
IEEE display format .....	62
Illumination duration setting for backlight	
Display .....	60
Importing configuration data .....	78
Impulse	
Digital output .....	103
Impulse counter .....	93
Web server .....	95
Input register .....	140
Installation location .....	9
Internal resistance .....	42
Interval with fixed measuring interval length .....	89, 91
Interval with fixed measuring period length .....	91
Interval with rolling block .....	90
Interval with sliding measuring interval length .....	89
Inversion .....	40, 42
Invert I1 .....	42
IP address	
Static .....	37
IP addressing .....	138
IPv4 .....	32, 138
<b>L</b>	
Language	
Default setting .....	51
Language selection on the web server .....	49
Language selection via display .....	31, 51
Linking process data .....	161
Load meter .....	85
Load operation	
Display .....	85
Logic gate .....	123
<b>M</b>	
Manual	
Digital output .....	103
Master/slave protocol .....	141
MBAP .....	145
Measuring technology .....	81
Menu structure on the display .....	47
Menu structure on the web server .....	48
Meter readings	
Web server .....	81

Modbus .....	140
Configuration .....	71
Function .....	140
Modbus address .....	168
Modbus communication interface	
Resetting the energy meter .....	83
Modbus gateway .....	145, 168
Time-out .....	168
Modbus/RTU .....	11, 141
Activation .....	168
Configuration .....	168
Modbus/RTU slave .....	141
Modbus/TCP .....	11, 145, 168
Activation .....	168
Modbus/TCP server .....	145
Module integration .....	156
Monitoring table .....	167
Mounting .....	15
Mounting types .....	9
Multiple registers .....	140

## N

NAND operator .....	125
NetBios name service .....	139
Network settings via display .....	32
Network settings via web server .....	38
NOR operator .....	126
NXOR operator .....	127

## O

One-phase network, two conductors, one current transformer .....	20
One-phase network, two conductors, one Rogowski coil .....	23
Operating and indication elements .....	25
Operating elements	
Display .....	30
Operating hours counter	
Display .....	85
OR operator .....	126

## P

Password	
Default setting .....	73
Permanent light	
Display .....	61, 69



PIN		RS-485 interface	
Default setting .....	72	Connections .....	142
Pin assignment		<b>S</b>	
Current transformer .....	17	Secondary current.....	40
Rogowski coil .....	18	Secondary voltage .....	44
PLC variable.....	161	Selecting grid type via web server.....	39
Prediction calculation		Selecting the grid type	
Equally weighted average .....	91	Display .....	33
Weighted average .....	91	Self-acknowledgment alarm.....	113
Primary current.....	40, 41	Set date and time manually	
Primary voltage .....	44	Web server .....	53
Product overview .....	13	Setting PIN via display .....	36
PROFINET .....	11, 135, 147	Single register .....	140
Pulse		Sliding average value .....	89
Web server.....	104	Sliding block.....	89
<b>R</b>		Sliding block.....	89
Reactive energy .....	82, 83, 84	Start screen of the web server.....	49
Reactive power .....	9	Static IP address .....	37
Read date and time		Static IP configuration .....	138
Display .....	52	Statistics.....	86
Read holding registers .....	140	Status of communication interface .....	140
Read input registers.....	140	Subinterval.....	90
Refresh time for measured value display		Submodule integration .....	156
Default setting .....	64	Subnet mask .....	37
Refresh time selection for measured values		Summer time rule .....	57
Display .....	64	Supply voltage range .....	19
Register.....	170	Switchgear and controlgear assembly .....	9
Register table.....	12, 172	Synchronization of average values.....	93
Reset		Display .....	99
Energy meter, resettable .....	83	Web server.....	101
Tariff meter .....	84	Synchronize time and date with an SNTP server	
Resetting the energy meter		Web server.....	54
Display .....	83	<b>T</b>	
Modbus communication interface.....	83	Tariff meter	
Web server.....	83	Display .....	84
RJ45 interface .....	138	Reset.....	84
RJ45 socket .....	135	Tariff selection.....	93
Rogowski coil (RCP) .....	23	Display .....	118
Rolling average value.....	90	Web server.....	97
Rolling block.....	90	Tariff selection using time schedule .....	120
Rolling block.....	90	Tariff selection via communication interface.....	119
Rotary field direction			
Digital output .....	103		
Rotary field direction detection.....	114		
RS-485.....	135		

Technical data.....	177	Two-phase network, two conductors, one current transformer.....	20
Ambient conditions.....	179	Two-phase network, two conductors, one Rogowski coil.....	23
Conformance/approvals.....	180	<b>W</b>	
Connection data.....	179	WBM active.....	75
Current measurement, current transformer.....	177	web.....	87
Current measurement, Rogowski coil direct connection.....	177	Web server	
Date and time.....	180	Activating voltage input.....	43
Digital input.....	178	Activating voltage transducer.....	44
Digital output in accordance with 61131-2 (type 3).....	179	Alarm.....	110
Dimensions.....	177	Alarm setting.....	112
Display.....	28	Average values.....	87
Fuses.....	180	Basic device configuration.....	37
Galvanic isolation.....	179	Change password.....	73
General data.....	177	Configuration.....	71
Power measurement.....	178	Configuration overview.....	45
Supply.....	178	Configuring current input.....	40
Voltage measurement.....	177	Digital output.....	102
Three-phase network, four conductors, one current transformer.....	21	Format selection for standard display.....	65
Three-phase network, four conductors, one Rogowski coil.....	24	Impulse.....	104
Three-phase network, four conductors, three current transformers.....	22	Impulse counter.....	95
Three-phase network, four conductors, three Rogowski coils.....	24	Language selection.....	49
Three-phase network, three conductors, one current transformer.....	21	Menu structure.....	48
Three-phase network, three conductors, one Rogowski coil.....	23	Meter readings.....	81
Three-phase network, three conductors, three current transformers.....	21	Network settings.....	38
Three-phase network, three conductors, three Rogowski coils.....	24	Resetting the energy meter.....	83
Three-phase network, three conductors, two current transformers.....	21	Selecting grid type.....	39
TIA portal.....	147	Set date and time manually.....	53
Time zones.....	55	Start screen.....	49
Time-out		Synchronization of average values.....	101
Modbus gateway.....	168	Synchronize time/date, with an SNTP server.....	54
Topology.....	141	Tariff selection.....	97
Transferring configuration data.....	77	Write multiple register.....	140
True r.m.s. value measurement.....	10	Write single register.....	140
Two-phase network, three conductors, two current transformers.....	22	<b>X</b>	
Two-phase network, three conductors, two Rogowski coils.....	24	XOR operator.....	126

---

## Please observe the following notes

### **General terms and conditions of use for technical documentation**

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular user documentation) does not constitute any further duty on the part of Phoenix Contact to furnish information on modifications to products and/or technical documentation. You are responsible to verify the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed.

In general, the provisions of the current standard Terms and Conditions of Phoenix Contact apply exclusively, in particular as concerns any warranty liability.

This manual, including all illustrations contained herein, is copyright protected. Any changes to the contents or the publication of extracts of this document is prohibited.

Phoenix Contact reserves the right to register its own intellectual property rights for the product identifications of Phoenix Contact products that are used here. Registration of such intellectual property rights by third parties is prohibited.

Other product identifications may be afforded legal protection, even where they may not be indicated as such.

---

## How to contact us

### Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

[phoenixcontact.com](http://phoenixcontact.com)

Make sure you always use the latest documentation.

It can be downloaded at:

[phoenixcontact.net/products](http://phoenixcontact.net/products)

### Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at [phoenixcontact.com](http://phoenixcontact.com).

### Published by

PHOENIX CONTACT GmbH & Co. KG

Flachsmarktstraße 8

32825 Blomberg

GERMANY

PHOENIX CONTACT Development and Manufacturing, Inc.

586 Fulling Mill Road

Middletown, PA 17057

USA

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to:

[tecdoc@phoenixcontact.com](mailto:tecdoc@phoenixcontact.com)



PHOENIX CONTACT GmbH & Co. KG  
Flachmarktstraße 8  
32825 Blomberg, Germany  
Phone: +49 5235 3-00  
Fax: +49 5235 3-41200  
E-mail: [info@phoenixcontact.com](mailto:info@phoenixcontact.com)  
[phoenixcontact.com](http://phoenixcontact.com)