


User Guide

EXTECH[®]
INSTRUMENTS
A FLIR COMPANY

Dual Moisture Meter Pro

Pin / Pinless Moisture Meter with remote probe

Model MO265

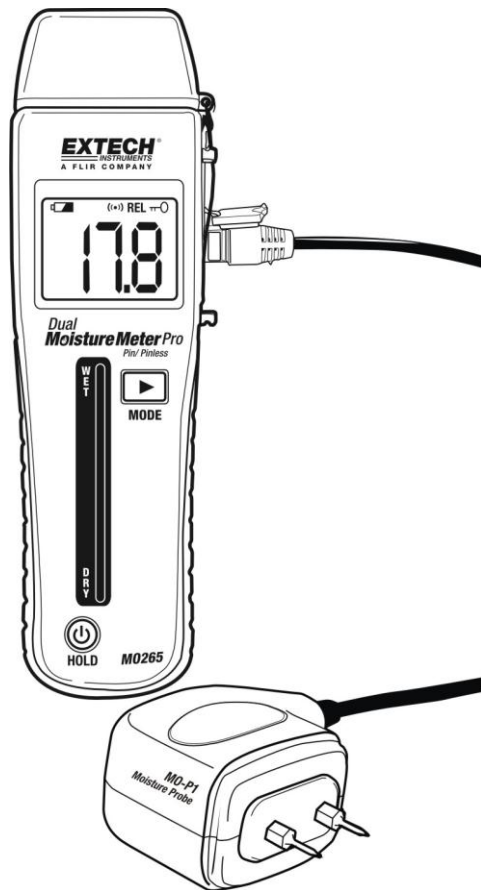

CE

Introduction

Congratulations on your purchase of the Extech MO265 Moisture Meter. The MO265 detects moisture in wood and other materials such as particle board, carpeting, and ceiling/bathroom tiles using the non-invasive method (pinless); the MO265 also measures moisture in sheet rock and other building materials using the pin method. The remote probe can also be used to make pin measurements. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.


Features

- %WME (wood moisture equivalent) pin moisture reading
- Relative (REL) pinless moisture reading for non-invasive measurement
- Remote probe measurements
- Digital LCD readout with backlighting feature and tri-color LED bargraph
- Quickly indicates the moisture content of materials
- Pinless measurement depth to 0.75" (22mm) below the surface
- Electro-magnetic sensing technology for pinless operation
- Built-in calibration check and calibration zero
- Replaceable measurement electrode pins
- Low battery indication
- Cap protects pins during storage
- Cap can be snapped onto the side of the housing during use
- Complete with 9V battery, replacement pins, protective cap, and pouch case

Description

Meter Description

1. Electrode pins protective cap (pins underneath)
2. LCD display
3. Tri-color Bargraph
4. HOLD / POWER key
5. Protective cap attachment
6. Protective cap holders
7. MODE button
8. Remote probe connector plug
9. Remote Probe
10. Measurement pins

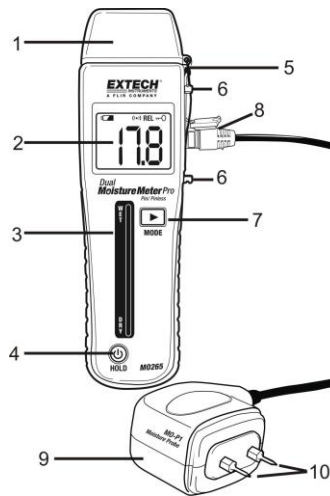


Notes:

- Battery/Spare Pin compartment located on the rear of the instrument
- Electrode pins located beneath the protective cap
- Calibration source located at the top of protective cap
- A tripod mount is located on the rear of the remote probe head

LCD Display Description

1. Measurement reading
2. Battery status
3. Audible alert icon
4. Measurement mode
5. Display HOLD icon

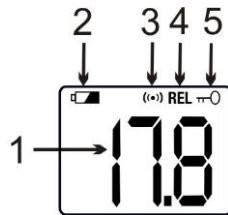

Bargraph Display Description

The bargraph indicates WET / DRY measurements using three LED colors: Green (for dry), Amber (for moderate moisture), and Red (for very moist). As the reading moves up the bargraph scale from the DRY indicator to the WET indicator, the LED color changes from green, to amber, and then to red.



Operation


Electrode Pins

CAUTION: The electrode measurement pins are extremely sharp. Use care when handling this instrument. Cover the pins with the protective cap when the instrument is not in use.


The electrode pins are replaceable. To insert or replace the pins refer to the illustration and instructions below. Replacement pins are stored in the battery compartment at the rear of the meter.

- a) Remove the protective cap at the top of the meter by pushing it toward the back of the meter.
- b) To remove the pins, loosen the locknut at the base of the electrode pins
- c) Install the new pins and tighten the locknuts
- d) Replace the protective cap


1. Electrode pins
2. Locking nuts
3. Threaded posts
4. Electrode jacks at top of meter

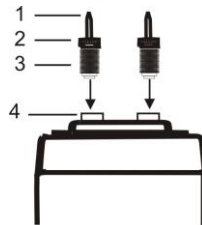


Pin Measurements

1. Remove the protective cap to expose the electrode pins. The cap snaps off easily if it is pushed towards the rear of the meter. The cap can be affixed to the side of the meter using the protective cap holders (6).
2. Press the  key to turn the meter ON / OFF.
3. Press the MODE key to select the Wood Moisture Equivalent (%WME) mode of operation.
4. Carefully push the electrode pins a minimum of 0.07" (2mm) into the material under test. Note that the pins should be inserted into wood perpendicular to the wood's fiber structure. For high moisture readings, it may take several minutes for the meter reading to stabilize.
5. Take several readings in several locations on the material for the best representation of the amount of moisture present.
6. Read the measurement values on the LCD digital display and the LED bar graph
7. Replace the protective cap when finished.


Pinless Measurements

1. Ensure that the protective cap is attached to the meter covering the pins.
2. Press the  key to turn the meter ON.
3. Press the MODE key to select the Relative (REL) mode of operation.
4. The pinless moisture detector is located at the rear of the instrument, just behind the display. Place the meter so that the sensor is touching the surface of the material under test.
5. Take several readings in several locations on the material for the best representation of the amount of moisture present.
6. Read the measurement values on the LCD digital display and the LED bar graph.

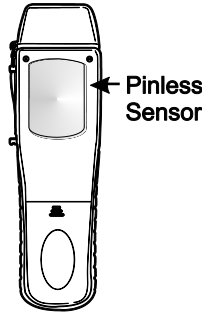

Remote Probe Pin Measurements

IMPORTANT NOTE: The Remote Probe **cannot** be used at the same time as the meter probe. Please use one probe or the other but not both at the same time.

1. Connect the Remote Probe to the right side of the meter using the RJ-11 plug at the end of the Remote Probe cable.
2. Remove the protective cap from the remote probe to expose the electrode pins. The cap snaps off easily if it is pushed long-wise to the side.
3. Press the  key to turn the meter ON / OFF.
4. Press the MODE key to select the Wood Moisture Equivalent (%WME) mode of operation.
5. Carefully push the electrode pins a minimum of 0.07" (2mm) into the material under test. Note that the pins should be inserted into wood perpendicular to the wood's fiber structure. For high moisture readings, it may take several minutes for the meter reading to stabilize.
6. Take several readings in several locations on the material for the best representation of the amount of moisture present.
7. Read the measurement values on the LCD digital display and the LED bar graph
8. Replace the protective cap and disconnect the remote probe when finished.

Calibration Zero for Pinless Mode

1. Switch the meter to the Pinless mode of operation (REL mode).
2. Ensure that the meter is not near any objects or surfaces. Hold the meter near the bottom to avoid contact with the pinless sensor.
3. Press and Hold the MODE button for 3 seconds until rEL appears in the display. Release the MODE button and the display will blink for several seconds and then switch back to the normal display mode.
4. The display should now read zero indicating that the calibration is complete.
5. If an E32 error is displayed, try the zero calibration again with the pins further away from any objects or surfaces.

Calibration Check for Pin Mode

1. Switch the meter to the Pin mode (%WME).
2. The two calibration check points are located in the holes at the top of the protective cap.
3. Insert the electrode pins into the two holes at the top of the protective cap to make contact with the test circuit.
4. The display should read between 17.5 to 18.5 %WME, indicating that the calibration is verified.

LCD Backlight ON/OFF

With the meter switched ON, pressing and holding both front panel buttons (MODE and HOLD) switches the LCD backlight ON and OFF.

Data Hold feature

The Data Hold function freezes the reading in the display. Press the HOLD key momentarily to activate the Data Hold function. The reading will freeze and the 'key' display icon will appear. Press the HOLD key again to exit the Data Hold function (the 'key' display icon will switch off).

Meter Setup

- To enter the setup mode:
With the meter switched OFF, press and hold both front panel buttons (MODE and HOLD buttons) simultaneously for two seconds. The display should now read '0 = x' where '0' is the OPTION and 'x' is the SETTING.
- Use the MODE (right arrow) button to change the SETTING.
- Use the HOLD button to scroll through the OPTIONS.
- The available OPTIONS and SETTINGS:

| OPTIONS | SETTINGS | SET-UP INFORMATION |
|---------|----------|--|
| 0 | 0 | Switches all settings to '0' (Factory Default*) |
| | 1 | Others settings can now be changed. In addition, Backlight switches ON for 30 seconds and then automatically switches OFF. |
| 1 | 0 | Audible alert beeps with increasing frequency from a nominal 17.0 (REL) or 17% (WME) measurement value upwards |
| | 1 | Audible alert divided into 3 frequency levels |
| | 2 | Audible alert beeps when user switches from one mode to another |
| | 3 | Beeper OFF. Audio alert display symbol switches OFF |
| 2 | 0 | Auto Switch OFF is not active. User must manually switch the unit OFF |
| | 1 | Auto Switch OFF active. Switches OFF after 3 minutes |
| | 2 | Auto Switch OFF active. Switches OFF after 5 minutes |
| | 3 | Auto Switch OFF active. Switches OFF after 10 minutes |
| 3 | 0 | Backlight OFF |
| | 1 | Backlight ON |

***FACTORY DEFAULT SETTINGS: 0=0, 1=0, 2=0, 3=0**

Battery Replacement

If the instrument does not switch ON or displays the low battery symbol, replace the battery as follows:

1. Slide off the rear battery compartment cover
2. Replace the 9V battery
3. Secure the battery compartment
- 4.



You, as the end user, are legally bound (**EU Battery ordinance**) to return all used batteries, **disposal in the household garbage is prohibited!** You can hand over your used batteries / accumulators at collection points in your community or wherever batteries / accumulators are sold!

Disposal: Follow the valid legal stipulations in respect of the disposal of the device at the end of its lifecycle

Maintenance

- Always keep the instrument dry
- To clean, wipe the meter with a damp cloth. Use a mild detergent if necessary but never use abrasives or solvents.
- Prevent dirt from accumulating at the electrode pins

Specifications

| | |
|------------------------|--|
| Display | Backlit LCD digital display and tri-color LED bargraph scale |
| Resolution | 0.1% |
| Accuracy | Pin mode: \pm (5% rdg + 5 digits) Pinless mode is a relative reading only |
| Measurement principle | Electrical resistance (pins) Electromagnetic sensor (pinless) |
| Range | 0.0 to 99.9 %Relative (pinless) 6.0 to 94.8 %WME (pins) |
| Electrode pin length | 0.44" (11mm) |
| Electrode pin type | Integrated, replaceable |
| Power supply | 9V alkaline battery |
| Low Battery Indication | Battery symbol displayed on LCD |
| Meter housing | Impact-proof plastic |
| Operating Temperature | 0 to 50°C (32 to 122°F) |
| Operating Humidity | 80% Relative Humidity maximum |
| Dimensions | 203 x 58 x 43mm (8 x 2.3 x 1.7"); not including remote probe |
| Weight | 204g. (7.2 oz); not including remote probe |

Warranty (English)

EXTECH INSTRUMENTS CORPORATION (A FLIR COMPANY) warrants this instrument to be free of defects in parts and workmanship for **one year** from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department at (781) 890-7440 ext. 210 for authorization or visit our website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned to Extech. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. Extech specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. Extech's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Product Support

Technical Support: support@extech.com -- Calibration and Repairs: repair@extech.com

Product specifications subject to change without notice

For the latest version of User Guides, Software updates, and other information:

www.extech.com (781) 890-7440

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

ISO9001 Certified

Copyright © 2010 Extech Instruments Corporation (a FLIR company)

All rights reserved including the right of reproduction in whole or in part in any form.

Garantía (Español)

EXTECH INSTRUMENTS CORPORATION (UNA EMPRESA FLIR) garantiza este instrumento para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada a seis meses para los cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del período de garantía, llame al Departamento de Servicio a Clientes al teléfono (781) 890-7440 ext. 210 para autorización, o visite nuestra página en Internet www.extech.com para información del contacto. Se debe otorgar un número de Autorización de Retorno (RA) antes de regresar cualquier producto a Extech. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. Extech específicamente rechaza cualesquier garantías implícitas o factibilidad de comercialización o aptitud para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de Extech está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Ayuda de producto

Soporte Técnico support@extech.com - Reparación / Retornos: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Para la última versión de esta Guía del usuario, actualizaciones de software y otra información

www.extech.com (781) 890-7440

Extech Instruments Corporation, 285 Bear Hill Road, Waltham, MA 02451

Certificado ISO9001

Copyright © 2010 Extech Instruments Corporation (una empresa FLIR)

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio.

Garantie (Français)

EXTECH APPAREILS CORPORATION (Une société FLIR) garantit que cet appareil est exempt de défauts matériels et de fabrication pendant un an à compter de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client au (781) 890-7440 poste. 210 pour autorisation ou visitez notre site Web à l'adresse www.extech.com pour obtenir nos coordonnées. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit à Extech. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur tel que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. Extech déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu et ne sera en aucun cas tenu responsable pour tout dommage conséquent direct, indirect, ou accidentel. La responsabilité totale d'Extech est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Appui de produit

Service d'assistance technique support@extech.com - Réparations et retours :repair@extech.com

Spécifications produit sujettes à modifications sans préavis

Pour obtenir la dernière version de ce manuel d'utilisation, des mises à jour logicielles et autres informations

www.extech.com -(781) 890-7440

Extech Appareils Corporation, 285 Bear Hill Road, Waltham, MA 02451

Certifié ISO 9001

Copyright © 2010 Extech Appareils Corporation (une société FLIR).

Tous droits réservés, y compris le droit de reproduction, en tout ou en partie, sous quelque forme que ce soit.