

USER MANUAL

# RND 750-00001 Multi modular cable tester



## Introduction:

This device is used for testing RJ45 cable, this device consists of a main unit and a remote unit. Operation of this device is simple and easy to use.

#### How to Use:

- Turn on power switch, the power light will flash. "ON" for normal speed test.
  "S" for low speed test.
- 2. To test twist pair cable, connect one side to the master unit and the other side to the remote unit.
- 3. For UTP cable, the main unit indicator will light up from No.1 to 8. If the cable is normal, the indicator light will light up from No.1 to 8.
- 4. for FTP cable, the main unit indicator will light from No.1 to G. If the cable is normal, the indicator light will light up from No.1 to G.

### Warning:


- 1. For safety reasons, please don't use test AC power.
- 2. Turn on the power switch, if the LED doesn't glow, then please replace the 9V battery.

## Remarks:

Please make sure a 9-volt alkaline battery has been installed in the battery compartment.

## Caution:

Don't connect cable tester to the live circuits as it may be damaged by over voltage.

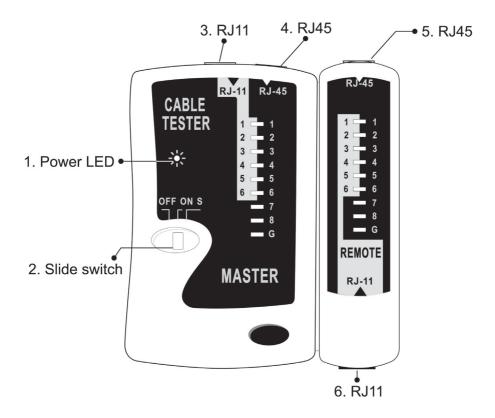

- 1. Power Led
- 2. Power Switch
- 3. RJ11 Jack Main Unit
- 4. RJ45 Jack Main Unit
- 5. RJ45 Jack Remote Unit
- 6. RJ11 Jack Remote Unit

Imported by Distrelec Group AG

c/o TeCo CDC BV De Tweeling 28 NL-5215 MC's-Hertogenbosch The Netherlands

www.distrelec.com