

Buy Canon GP-501 Glossy Photo Paper 4x6"

store.canon.co.uk/canon-gp-501-glossy-photo-paper-4x6-50-sheets/0775B081



Canon GP-501 Glossy Photo Paper 4x6" is the perfect solution for printing your holiday pictures at home. With a 200g/m² base for a photo print feel and a rich glossy finish to bring out the very best detail and colour in your photos, this pack of 50 4x6" sheets offers great value for money along with the quality you can expect direct from your Canon inkjet printer and long life ChromaLife inks.

Benefits

- Deeper black density
- Exceptional tonality in dark areas
- Photo quality feel
- Superb printed results in both colour and mono

What's in the box

Canon GP-501 Glossy Photo Paper 4x6" - 50 Sheets

Compatibility

- MAXIFY iB4040
- MAXIFY MB2350
- MAXIFY MB2750
- MAXIFY MB5140

- PIXMA E204
- PIXMA E3140
- PIXMA E404
- PIXMA E484
- PIXMA G7050
- PIXMA MG2455
- PIXMA MG2540S
- PIXMA MG2940
- PIXMA MG2950
- PIXMA MG2950S
- PIXMA MG3050
- PIXMA MG3650S
- PIXMA MG4140
- PIXMA MG6350
- PIXMA MG7751
- PIXMA MP270
- PIXMA MP540x
- PIXMA MP630
- PIXMA MP970
- PIXMA MX360
- PIXMA MX494
- PIXMA MX850
- PIXMA MX884
- PIXMA PRO-100S
- PIXMA TS304
- PIXMA TS3151
- PIXMA TS5053
- PIXMA TS5340
- PIXMA TS6140
- PIXMA TS7440
- PIXMA TS8150
- PIXMA TS8352
- PIXMA iP110
- PIXMA iP1700
- PIXMA iP2500
- PIXMA iP2600
- PIXMA iP2700
- PIXMA iP3000
- PIXMA iP4850
- PIXMA iX6550
- MAXIFY MB2140
- MAXIFY MB5050
- MAXIFY MB5340
- MAXIFY MB5440
- PIXMA E464

- PIXMA G2460
- PIXMA G3400
- PIXMA G3560
- PIXMA G5040
- PIXMA G6050
- PIXMA MG2240
- PIXMA MG3255
- PIXMA MG4150
- PIXMA MG5450S
- PIXMA MG6640
- PIXMA MG8140
- PIXMA MP170
- PIXMA MP495
- PIXMA MP540
- PIXMA MP620
- PIXMA MP760
- PIXMA MX420
- PIXMA MX474
- PIXMA MX495
- PIXMA PRO-9000 Mark II
- PIXMA TS204
- PIXMA TS205
- PIXMA TS3451
- PIXMA TS5055
- PIXMA TS5350
- PIXMA TS6251
- PIXMA TS7450
- PIXMA TS8053
- PIXMA TS8240
- PIXMA TS8251
- PIXMA TS8351
- PIXMA TS9050
- PIXMA iP2200
- PIXMA iP2702
- PIXMA iP2840
- PIXMA iP2850
- PIXMA iP3600
- PIXMA iP4000R
- PIXMA iP5200R
- PIXMA iX5000
- MAXIFY MB2755
- MAXIFY MB5155
- MAXIFY MB5450
- PIXMA G1400
- PIXMA G1520

- PIXMA G2510
- PIXMA G3510
- PIXMA G4500
- PIXMA MG2440
- PIXMA MG3240
- PIXMA MG5240
- PIXMA MG5640
- PIXMA MG6650
- PIXMA MG8240
- PIXMA MP180
- PIXMA MP210
- PIXMA MP460
- PIXMA MP470
- PIXMA MP480
- PIXMA MP530
- PIXMA MP600R
- PIXMA MP620B
- PIXMA MP640
- PIXMA MP750
- PIXMA MP780
- PIXMA MX320
- PIXMA MX375
- PIXMA MX410
- PIXMA MX514
- PIXMA MX700
- PIXMA MX714
- PIXMA MX870
- PIXMA MX925
- PIXMA PRO-100
- PIXMA TR150
- PIXMA TR7540
- PIXMA TR7550
- PIXMA TR8540
- PIXMA TS305
- PIXMA TS3355
- PIXMA TS5040
- PIXMA TS6050
- PIXMA TS6151
- PIXMA TS6351
- PIXMA TS8050
- PIXMA TS8140
- PIXMA TS8252
- PIXMA TS9055
- PIXMA TS9155
- PIXMA iP110 wb

- PIXMA iP1300
- PIXMA iP3500
- PIXMA iP4200
- PIXMA iP4500
- PIXMA iP4950
- PIXMA iX6540
- PIXMA iX6850
- MAXIFY MB5150
- PIXMA G2500
- PIXMA G3410
- PIXMA G3501
- PIXMA G4510
- PIXMA MG2250
- PIXMA MG2945
- PIXMA MG2955
- PIXMA MG3053
- PIXMA MG3550
- PIXMA MG5440
- PIXMA MG5750
- PIXMA MG5753
- PIXMA MG6440
- PIXMA MG6840
- PIXMA MG6851
- PIXMA MG6852
- PIXMA MG7140
- PIXMA MG7150
- PIXMA MG7550
- PIXMA MG7750
- PIXMA MP150
- PIXMA MP190
- PIXMA MP220
- PIXMA MP492
- PIXMA MP499
- PIXMA MP500
- PIXMA MP560
- PIXMA MP610
- PIXMA MP810
- PIXMA MX394
- PIXMA MX434
- PIXMA MX525
- PIXMA MX535
- PIXMA MX715
- PIXMA MX725
- PIXMA MX860
- PIXMA MX885

- PIXMA MX894
- PIXMA TR8550
- PIXMA TS3340
- PIXMA TS3440
- PIXMA TS6150
- PIXMA TS6240
- PIXMA TS6250
- PIXMA TS6340
- PIXMA TS7451
- PIXMA TS8051
- PIXMA TS8052
- PIXMA TS8250
- PIXMA TS8350
- PIXMA TS9541C
- PIXMA iP100 wb
- PIXMA iP1900
- PIXMA iP4000
- PIXMA iP4300
- PIXMA iP4500x
- PIXMA iP4600x
- PIXMA iP4700
- MAXIFY MB2150
- MAXIFY MB2740
- MAXIFY MB5350
- MAXIFY iB4140
- PIXMA G1410
- PIXMA G1411
- PIXMA G2400
- PIXMA G2411
- PIXMA G2501
- PIXMA G2520
- PIXMA G3420
- PIXMA G3500
- PIXMA G4400
- PIXMA MG2140
- PIXMA MG2245
- PIXMA MG2555S
- PIXMA MG3540
- PIXMA MG3640
- PIXMA MG5150
- PIXMA MG6240
- PIXMA MG6853
- PIXMA MG7540
- PIXMA MG7740
- PIXMA MG8150

- PIXMA MP140
- PIXMA MP260
- PIXMA MP550
- PIXMA MP600
- PIXMA MP980
- PIXMA MX300
- PIXMA MX350
- PIXMA TS3150
- PIXMA TS5151
- PIXMA TS5351
- PIXMA TS6051
- PIXMA iP3300
- PIXMA iP5200
- PIXMA iP6700D
- PIXMA iP7240
- PIXMA iP8750
- PIXMA iX6840
- PIXMA iX7000
- PIXMA G1510
- PIXMA G2560
- PIXMA G4410
- PIXMA G4411
- PIXMA G4511
- PIXMA G6040
- PIXMA MG2150
- PIXMA MG2545S
- PIXMA MG2550
- PIXMA MG2555
- PIXMA MG3040
- PIXMA MG3140
- PIXMA MG3150
- PIXMA MG3650
- PIXMA MG4250
- PIXMA MG5350
- PIXMA MG5450
- PIXMA MG5650
- PIXMA MG5655
- PIXMA MG6150
- PIXMA MG6250
- PIXMA MG7752
- PIXMA MG7753
- PIXMA MG8250
- PIXMA MP160
- PIXMA MP240
- PIXMA MP250

- PIXMA MP272
- PIXMA MP282
- PIXMA MP830
- PIXMA MP990
- PIXMA MX395
- PIXMA MX454
- PIXMA MX455
- PIXMA MX515
- PIXMA MX534
- PIXMA MX895
- PIXMA PRO-9000
- PIXMA TR4450
- PIXMA TR4551
- PIXMA TS5050
- PIXMA TS6040
- PIXMA TS6350
- PIXMA TS704
- PIXMA TS705
- PIXMA TS9040
- PIXMA TS9140
- PIXMA TS9551C
- PIXMA iP1600
- PIXMA iP4200x
- PIXMA iP4600
- PIXMA iP4940
- PIXMA iX4000
- MAXIFY MB2040
- MAXIFY MB2155
- MAXIFY MB2340
- MAXIFY MB5040
- MAXIFY MB5455
- MAXIFY iB4050
- MAXIFY iB4150
- PIXMA E304
- PIXMA G1420
- PIXMA G1500
- PIXMA G2410
- PIXMA G5050
- PIXMA MG2450
- PIXMA MG2540
- PIXMA MG3051
- PIXMA MG3052
- PIXMA MG3250
- PIXMA MG4240
- PIXMA MG5340

- PIXMA MG5540
- PIXMA MG5751
- PIXMA MG6450
- PIXMA MP230
- PIXMA MP450
- PIXMA MP450x
- PIXMA MP520
- PIXMA MP520x
- PIXMA MP800R
- PIXMA MX340
- PIXMA MX374
- PIXMA MX435
- PIXMA MX724
- PIXMA PRO-200
- PIXMA TR150 with battery
- PIXMA TS3351
- PIXMA TS3352
- PIXMA TS5051
- PIXMA TS5352
- PIXMA TS5353
- PIXMA TS6052
- PIXMA TS8152
- PIXMA TS8340
- PIXMA TS9150
- PIXMA TS9540
- PIXMA TS9550
- PIXMA iP100
- PIXMA iP1200
- PIXMA iP1800
- PIXMA iP5000
- PIXMA iP5300
- PIXMA iP6600D
- PIXMA iP8500
- PIXMA iP8740
- PIXMA iP90v
- MAXIFY MB2050
- PIXMA E3340
- PIXMA E414
- PIXMA E4240
- PIXMA E474
- PIXMA G2420
- PIXMA G3411
- PIXMA G3460
- PIXMA G3520
- PIXMA G7040

- PIXMA MG2255
- PIXMA MG2550S
- PIXMA MG3640S
- PIXMA MG5140
- PIXMA MG5250
- PIXMA MG5550
- PIXMA MG5740
- PIXMA MG5752
- PIXMA MG6140
- PIXMA MG6340
- PIXMA MG6850
- PIXMA MP252
- PIXMA MP280
- PIXMA MP490
- PIXMA MP510
- PIXMA MP800
- PIXMA MX310
- PIXMA MX330
- PIXMA MX475
- PIXMA MX524
- PIXMA MX924
- PIXMA TR4550
- PIXMA TS3140
- PIXMA TS3350
- PIXMA TS3450
- PIXMA TS3452
- PIXMA TS5140
- PIXMA TS5150
- PIXMA TS8040
- PIXMA TS8151
- PIXMA iP4840
- PIXMA iP7250
- PIXMA iP90
- MAXIFY GX6040
- MAXIFY GX6050
- MAXIFY GX7040
- MAXIFY GX7050
- PIXMA G650
- PIXMA G550
- PIXMA G640
- PIXMA G540
- SELPHY DS700
- SELPHY DS810