

# Buy Canon SG-201 Semi-Gloss Photo Paper Plus 4x6"

[store.canon.co.uk/canon-sg-201-semi-gloss-photo-paper-plus-4x6-50-sheets/1686B015](https://store.canon.co.uk/canon-sg-201-semi-gloss-photo-paper-plus-4x6-50-sheets/1686B015)



Canon's Photo Paper Plus Semi-gloss, is a satin finish paper with the texture of real photographic paper. This high quality paper produces brilliant photographs with reduced glossiness for a softer finish.

## Benefits

- Satin finish
- Excellent match for Canon Lucia & ChromaLife100+ inks
- Photographic paper texture
- Brilliant photographs with a soft finish

## Compatibility

- MAXIFY MB5340
- PIXMA G1410
- MAXIFY iB4050
- PIXMA iP7240
- PIXMA iP1700
- PIXMA iP3300
- PIXMA MG3140
- PIXMA MG2255
- PIXMA MG5751

- PIXMA MG3650
- PIXMA MG5250
- MAXIFY MB5040
- PIXMA G6050
- PIXMA Pro10S
- PIXMA G3400
- PIXMA G1510
- PIXMA MG3250
- PIXMA iP2702
- PIXMA MG5540
- PIXMA MG3052
- MAXIFY MB5050
- PIXMA iP4200
- PIXMA MG2250
- PIXMA Pro9500
- PIXMA iP1800
- PIXMA G3500
- PIXMA iX6840
- PIXMA iP4000
- PIXMA G5050
- PIXMA G6040
- MAXIFY MB5350
- PIXMA iP4840
- MAXIFY MB2340
- PIXMA MG5740
- PIXMA MG5752
- PIXMA MG3240
- PIXMA iP4850
- PIXMA iP4950
- PIXMA MG5450S
- PIXMA MG6350
- PIXMA MG5350
- PIXMA MG6440
- PIXMA MG6640
- PIXMA G4510
- PIXMA MG3255
- PIXMA Pro100S
- PIXMA iP1200
- PIXMA G3501
- PIXMA MG3053
- PIXMA G1500
- MAXIFY MB2740
- PIXMA G4511
- PIXMA MG3150
- PIXMA iP90v

- PIXMA iX4000
- PIXMA iX5000
- PIXMA G2501
- MAXIFY MB2140
- PIXMA MG4250
- PIXMA G2510
- PIXMA MG5753
- PIXMA iP3000
- PIXMA MG2245
- PIXMA G4500
- imagePROGRAF PRO-1000
- PIXMA iP4500
- PIXMA iP2500
- PIXMA iP4200x
- PIXMA G7040
- PIXMA iX6850
- PIXMA Pro9500 Mark II
- PIXMA MG5440
- PIXMA MG5550
- PIXMA G1400
- PIXMA MG3640
- PIXMA iP5000
- PIXMA G1411
- PIXMA G2410
- MAXIFY iB4140
- MAXIFY MB2150
- PIXMA iP1900
- PIXMA E4240
- PIXMA MG3050
- PIXMA MG3051
- PIXMA iP4940
- PIXMA Pro9000 Mark II
- PIXMA iP2600
- PIXMA iP4600x
- PIXMA Pro100
- PIXMA MG6240
- PIXMA MG6340
- PIXMA iX6550
- PIXMA iP2700
- PIXMA iX7000
- PIXMA iP4000R
- PIXMA G5040
- PIXMA Pro9000
- PIXMA G2400
- MAXIFY MB5155

- PIXMA MG6450
- PIXMA Pro1
- PIXMA MG3650S
- MAXIFY MB5440
- PIXMA MG3040
- PIXMA MG5240
- MAXIFY iB4040
- PIXMA iP4600
- PIXMA iP6700D
- PIXMA MG4150
- PIXMA G4400
- PIXMA MG5450
- PIXMA MG5655
- PIXMA MG5650
- PIXMA iP5200R
- PIXMA MG3640S
- PIXMA iP100
- PIXMA G2411
- PIXMA iP1600
- PIXMA PRO-200
- PIXMA iP1300
- PIXMA G4411
- imagePROGRAF PRO-300
- PIXMA iP8740
- PIXMA G3411
- MAXIFY MB2750
- PIXMA iP4700
- PIXMA MG6250
- PIXMA MG6140
- PIXMA iP4500x
- PIXMA MG4140
- PIXMA iP7250
- PIXMA E484
- PIXMA MG5640
- PIXMA MG5340
- MAXIFY MB5450
- MAXIFY MB5455
- PIXMA iP4300
- PIXMA MG3550
- PIXMA iP5200
- PIXMA iP8750
- MAXIFY MB2040
- PIXMA MG5150
- MAXIFY MB2755
- PIXMA iP3600

- PIXMA MG2150
- PIXMA MG2240
- PIXMA Pro10
- MAXIFY MB2050
- PIXMA iP90
- PIXMA G3410
- PIXMA G3510
- PIXMA iP3500
- MAXIFY MB5150
- PIXMA G4410
- PIXMA G7050
- PIXMA iP6600D
- PIXMA iP8500
- PIXMA G2500
- MAXIFY MB5140
- PIXMA MG4240
- PIXMA MG3540
- MAXIFY MB2155
- MAXIFY MB2350
- PIXMA MG5750
- PIXMA MG5140
- PIXMA MG6150
- PIXMA iP2200
- PIXMA iX6540
- PIXMA MG2140
- MAXIFY iB4150
- PIXMA MG6650
- PIXMA MG6840
- PIXMA MG6851
- PIXMA MG6852
- PIXMA MG6853
- PIXMA MG7140
- PIXMA MG7150
- PIXMA MG7540
- PIXMA MG7550
- PIXMA MG7740
- PIXMA MG7750
- PIXMA MG7751
- PIXMA MG7752
- PIXMA MG7753
- PIXMA MG8140
- PIXMA MG8150
- PIXMA MG8240
- PIXMA MP272
- PIXMA MP520x

- PIXMA MP540
- PIXMA MP600
- PIXMA MP760
- PIXMA MP800
- PIXMA MP810
- PIXMA MX435
- PIXMA MX850
- PIXMA MX925
- PIXMA TS5050
- PIXMA TS5351
- PIXMA TS6340
- PIXMA TS8152
- PIXMA TS8251
- PIXMA TS9050
- PIXMA MP150
- PIXMA MP450
- PIXMA MP499
- PIXMA MP560
- PIXMA MP620
- PIXMA MP630
- PIXMA MP980
- PIXMA MX340
- PIXMA MX534
- PIXMA MX7600
- PIXMA MX895
- PIXMA TR4551
- PIXMA TS6052
- PIXMA TS6250
- PIXMA TS6350
- PIXMA TS9150
- PIXMA MP160
- PIXMA MP460
- PIXMA MP540x
- PIXMA MP610
- PIXMA MP640
- PIXMA MP990
- PIXMA MX350
- PIXMA MX374
- PIXMA MX495
- PIXMA MX514
- PIXMA MX515
- PIXMA MX725
- PIXMA MX885
- PIXMA MX924
- PIXMA TR4450

- PIXMA TR4550
- PIXMA TR7540
- PIXMA TS5150
- PIXMA TS5353
- PIXMA TS6051
- PIXMA TS6351
- PIXMA TS8052
- PIXMA TS8053
- PIXMA TS8250
- PIXMA TS8352
- PIXMA TS9040
- PIXMA TS9155
- PIXMA MG8250
- PIXMA MP170
- PIXMA MP190
- PIXMA MP210
- PIXMA MP230
- PIXMA MP240
- PIXMA MP252
- PIXMA MP270
- PIXMA MP600R
- PIXMA MX320
- PIXMA MX360
- PIXMA MX375
- PIXMA MX525
- PIXMA MX535
- PIXMA MX700
- PIXMA MX870
- PIXMA MX894
- PIXMA TR8550
- PIXMA TS6040
- PIXMA TS6140
- PIXMA TS8040
- PIXMA TS8051
- PIXMA TS8140
- PIXMA TS8151
- PIXMA TS8240
- PIXMA TS8252
- PIXMA TS8340
- PIXMA MP220
- PIXMA MP250
- PIXMA MP260
- PIXMA MP450X
- PIXMA MP480
- PIXMA MP500

- PIXMA MP530
- PIXMA MP620B
- PIXMA MX310
- PIXMA MX434
- PIXMA MX860
- PIXMA MX884
- PIXMA TS5051
- PIXMA TS5055
- PIXMA TS5350
- PIXMA MP280
- PIXMA MP282
- PIXMA MX300
- PIXMA MX330
- PIXMA MX395
- PIXMA MX410
- PIXMA MX454
- PIXMA MX474
- PIXMA TS5040
- PIXMA TS5053
- PIXMA TS6050
- PIXMA TS6151
- PIXMA TS6240
- PIXMA TS704
- PIXMA TS8050
- PIXMA TS8350
- PIXMA TS9140
- PIXMA TS9541C
- PIXMA TS9551C
- PIXMA MG6850
- PIXMA MP140
- PIXMA MP470
- PIXMA MP490
- PIXMA MP492
- PIXMA MP510
- PIXMA MP520
- PIXMA MP550
- PIXMA MP750
- PIXMA MP780
- PIXMA MX394
- PIXMA MX475
- PIXMA MX494
- PIXMA MX715
- PIXMA MX724
- PIXMA TR8540
- PIXMA TS5340



- PIXMA TS5352
- PIXMA TS6150
- PIXMA TS8150
- PIXMA TS9055
- PIXMA TS9540
- PIXMA MP180
- PIXMA MP495
- PIXMA MP800R
- PIXMA MP830
- PIXMA MP970
- PIXMA MX420
- PIXMA MX455
- PIXMA MX524
- PIXMA MX714
- PIXMA TR7550
- PIXMA TS5140
- PIXMA TS5151
- PIXMA TS6251
- PIXMA TS705
- PIXMA TS8351
- PIXMA TS9550
- PIXMA TS7450
- PIXMA TS7451
- MAXIFY GX6040
- MAXIFY GX7040
- MAXIFY GX6050
- MAXIFY GX7050
- PIXMA G650
- PIXMA G550
- PIXMA G640
- PIXMA G540