

Canon PP-201 Glossy II Photo Paper Plus 5x7"

store.canon.co.uk/canon-pp-201-glossy-ii-photo-paper-plus-5x7-20-sheets/2311B018



Canon's Photo Paper Plus Glossy II is the perfect photo paper for superior quality output with a glossy finish. It provides the perfect finish for digital photographs and all your reprints.

Benefits

- High gloss finish
- Excellent match for Canon Lucia & ChromaLife100+ inks
- Real photo look and feel with saturated blacks & lively colours
- Superior quality photo printing

Compatibility

- MAXIFY MB2150
- MAXIFY MB5140
- MAXIFY iB4140
- PIXMA G2410
- PIXMA G2411
- PIXMA G4500
- PIXMA MG2240
- PIXMA MG2545S
- PIXMA MG3540

- PIXMA MG5640
- PIXMA MG5750
- PIXMA MG6450
- PIXMA MG6852
- PIXMA MP170
- PIXMA MP500
- PIXMA MP800
- PIXMA MP830
- PIXMA MX700
- PIXMA MX714
- PIXMA TS6040
- PIXMA TS6240
- PIXMA TS8052
- PIXMA iP100
- PIXMA iP6700D
- PIXMA iP90v
- PIXMA iX4000
- PIXMA iX5000
- MAXIFY MB2140
- MAXIFY MB5050
- PIXMA G2400
- PIXMA G3410
- PIXMA G4510
- PIXMA MG2140
- PIXMA MG2540S
- PIXMA MG3050
- PIXMA MG3550
- PIXMA MG5340
- PIXMA MG5751
- PIXMA MG6240
- PIXMA MG6840
- PIXMA MG7740
- PIXMA MG7750
- PIXMA MG7751
- PIXMA MP280
- PIXMA MP450x
- PIXMA MP495
- PIXMA MP540
- PIXMA MP600
- PIXMA MX375
- PIXMA MX394
- PIXMA MX410
- PIXMA MX524
- PIXMA TS205
- PIXMA TS8040

- PIXMA iP2850
- PIXMA iP4000R
- PIXMA iP4600x
- PIXMA iP5200
- PIXMA iP5300
- PIXMA iP8740
- imagePROGRAF Pro1000
- MAXIFY MB2040
- MAXIFY MB2340
- MAXIFY MB2740
- MAXIFY MB2755
- MAXIFY MB5040
- MAXIFY MB5440
- PIXMA G1411
- PIXMA G4410
- PIXMA MG2550
- PIXMA MG3040
- PIXMA MG5240
- PIXMA MG5752
- PIXMA MG6350
- PIXMA MG6851
- PIXMA MG7753
- PIXMA MP240
- PIXMA MP250
- PIXMA MP520x
- PIXMA MP550
- PIXMA MP560
- PIXMA MP610
- PIXMA MP620B
- PIXMA MP980
- PIXMA MX320
- PIXMA MX360
- PIXMA MX395
- PIXMA MX435
- PIXMA MX455
- PIXMA MX474
- PIXMA MX475
- PIXMA MX514
- PIXMA MX860
- PIXMA MX925
- PIXMA Pro1
- PIXMA Pro10S
- PIXMA TS8053
- PIXMA TS8240
- PIXMA TS8250

- PIXMA iP100 wb
- PIXMA iP110 wb
- PIXMA iP1700
- PIXMA iP1900
- PIXMA iP2500
- PIXMA iP2840
- PIXMA iP3300
- PIXMA iP4200x
- PIXMA iP4500
- PIXMA iP4950
- PIXMA iP8750
- PIXMA iX6550
- MAXIFY MB2155
- MAXIFY MB2350
- MAXIFY MB5155
- MAXIFY MB5455
- MAXIFY iB4040
- MAXIFY iB4150
- PIXMA G3411
- PIXMA G4411
- PIXMA MG2150
- PIXMA MG2250
- PIXMA MG2550S
- PIXMA MG2555S
- PIXMA MG2940
- PIXMA MG2950
- PIXMA MG3052
- PIXMA MG3240
- PIXMA MG3250
- PIXMA MG3650
- PIXMA MG6640
- PIXMA MG7752
- PIXMA MP190
- PIXMA MP260
- PIXMA MP492
- PIXMA MP510
- PIXMA MP640
- PIXMA MX340
- PIXMA MX434
- PIXMA MX494
- PIXMA MX495
- PIXMA MX850
- PIXMA MX870
- PIXMA MX895
- PIXMA Pro9500 Mark II

- PIXMA TR4541
- PIXMA TR4550
- PIXMA TS305
- PIXMA TS5055
- PIXMA TS6250
- PIXMA TS6251
- PIXMA TS8251
- PIXMA iP1600
- PIXMA iP2700
- PIXMA iP2702
- PIXMA iP3600
- PIXMA iP4000
- PIXMA iP4600
- PIXMA iP4940
- PIXMA iP7250
- MAXIFY MB2050
- PIXMA G3500
- PIXMA MG2440
- PIXMA MG3140
- PIXMA MG4150
- PIXMA MG5650
- PIXMA MG6250
- PIXMA MG6340
- PIXMA MG6853
- PIXMA MG8250
- PIXMA MP150
- PIXMA MP230
- PIXMA MP252
- PIXMA MP270
- PIXMA MP990
- PIXMA MX350
- PIXMA MX454
- PIXMA MX515
- PIXMA MX525
- PIXMA MX534
- PIXMA Pro9000 Mark II
- PIXMA Pro9500
- PIXMA TS5050
- PIXMA TS6050
- PIXMA TS8050
- PIXMA iP110
- PIXMA iP2200
- PIXMA iP2600
- PIXMA iP3000
- PIXMA iP7240

- MAXIFY MB5150
- MAXIFY MB5340
- MAXIFY iB4050
- PIXMA G2500
- PIXMA G2510
- PIXMA G3400
- PIXMA G3510
- PIXMA MG2450
- PIXMA MG2540
- PIXMA MG3150
- PIXMA MG3640
- PIXMA MG3650S
- PIXMA MG4240
- PIXMA MG5150
- PIXMA MG5440
- PIXMA MG5540
- PIXMA MG7540
- PIXMA MG8140
- PIXMA MP160
- PIXMA MP220
- PIXMA MP282
- PIXMA MP450
- PIXMA MP480
- PIXMA MP490
- PIXMA MP810
- PIXMA MX330
- PIXMA MX374
- PIXMA MX420
- PIXMA MX535
- PIXMA MX924
- PIXMA TR4540
- PIXMA TS6051
- PIXMA TS8051
- PIXMA iP1300
- PIXMA iP1800
- PIXMA iP3500
- PIXMA iP4300
- PIXMA iP5200R
- PIXMA iP90
- PIXMA iX7000
- MAXIFY MB5350
- MAXIFY MB5450
- PIXMA G1400
- PIXMA G1500
- PIXMA G1510

- PIXMA MG3051
- PIXMA MG4140
- PIXMA MG5350
- PIXMA MG5450
- PIXMA MG5550
- PIXMA MG5740
- PIXMA MG5753
- PIXMA MG6150
- PIXMA MG6440
- PIXMA MG6850
- PIXMA MG7550
- PIXMA MG8240
- PIXMA MP210
- PIXMA MP460
- PIXMA MP520
- PIXMA MP600R
- PIXMA MX715
- PIXMA MX884
- PIXMA MX885
- PIXMA MX894
- PIXMA Pro10
- PIXMA Pro100
- PIXMA Pro100S
- PIXMA TS5051
- PIXMA TS8252
- PIXMA TS9040
- PIXMA TS9050
- PIXMA TS9055
- PIXMA iP1200
- PIXMA iP4200
- PIXMA iP4500x
- PIXMA iP4840
- PIXMA iP4850
- PIXMA iP8500
- PIXMA iX6850
- MAXIFY MB2750
- PIXMA G1410
- PIXMA G4400
- PIXMA MG3053
- PIXMA MG3640S
- PIXMA MG4250
- PIXMA MG5140
- PIXMA MG5250
- PIXMA MG6140
- PIXMA MG6650

- PIXMA MG7140
- PIXMA MG7150
- PIXMA MG8150
- PIXMA MP140
- PIXMA MP180
- PIXMA MP272
- PIXMA MP470
- PIXMA MP499
- PIXMA MP530
- PIXMA MP540x
- PIXMA MP620
- PIXMA MP630
- PIXMA MP800R
- PIXMA MX725
- PIXMA Pro9000
- PIXMA TS5040
- PIXMA TS5053
- PIXMA TS6052
- PIXMA iP4700
- PIXMA iP5000
- PIXMA iP6600D
- PIXMA iX6540
- PIXMA iX6840
- PIXMA TS705
- PIXMA TS704
- PIXMA TR7540
- PIXMA TS6350
- PIXMA TS8350
- PIXMA TS8351
- PIXMA TS8352
- PIXMA TS6351
- PIXMA TS6340
- PIXMA TS3350
- PIXMA TS3351
- PIXMA TS3352
- PIXMA TS5350
- PIXMA TS5351
- PIXMA TS5352
- PIXMA TS3340
- PIXMA TS5340
- PIXMA TS6340
- PIXMA TS8340
- PIXMA G7050
- PIXMA G7040
- PIXMA TR150

- PIXMA TR150 with Battery
- ImagePROGRAF PRO-300
- PIXMA TS3450
- PIXMA TS3451
- PIXMA TS3452
- PIXMA E3440
- MAXIFY GX6040
- MAXIFY GX7040
- MAXIFY GX6050
- MAXIFY GX7050
- PIXMA G650
- PIXMA G550
- PIXMA G640
- PIXMA G540