



- Sharpen productivity in your home office and bring big ideas to life with magnetic photo paper. Create mood boards and visualise complex projects without worrying about damaging surfaces

## What's in the box

---

Canon MG-101 Magnetic Photo Paper, 4x6", 5 sheets

## Compatibility

---

- PIXMA E204
- PIXMA G2501
- PIXMA MG6852
- PIXMA TR4550
- PIXMA TS3151
- PIXMA TS9150
- PIXMA G3411
- PIXMA MG3650S
- PIXMA TR8550
- PIXMA TS3150
- PIXMA TS6052
- PIXMA TS8151
- PIXMA TS8252
- PIXMA E484
- PIXMA G1410
- PIXMA G1500
- PIXMA G2411
- PIXMA G3501
- PIXMA G4500
- PIXMA MG2550
- PIXMA MG5753
- PIXMA MG7750
- PIXMA TR4551
- PIXMA TR7550
- PIXMA TS304
- PIXMA TS6151
- PIXMA TS8051
- PIXMA TS8152
- PIXMA TS8250
- PIXMA TS9155
- PIXMA TS9550
- PIXMA TS9551C
- PIXMA MG3650
- PIXMA MG6853
- PIXMA MG7752
- PIXMA MX495
- PIXMA TS205

- PIXMA TS5051
- PIXMA TS5151
- PIXMA TS8150
- PIXMA TS8251
- PIXMA TS9055
- PIXMA G3510
- PIXMA MG2545S
- PIXMA MG6850
- PIXMA TS5150
- PIXMA TS6150
- PIXMA E304
- PIXMA E414
- PIXMA G1510
- PIXMA G2510
- PIXMA G4411
- PIXMA G4511
- PIXMA MG2555S
- PIXMA MG3052
- PIXMA MG5752
- PIXMA TS5053
- PIXMA TS6050
- PIXMA TS6251
- PIXMA TS8052
- PIXMA TS8053
- PIXMA G1411
- PIXMA G1501
- PIXMA G2500
- PIXMA G3500
- PIXMA MG3050
- PIXMA MG5750
- PIXMA MG5751
- PIXMA MG6851
- PIXMA MG7751
- PIXMA MG7753
- PIXMA TS204
- PIXMA TS5055
- PIXMA TS6051
- PIXMA E4240
- PIXMA E474
- PIXMA G4510
- PIXMA MG3051
- PIXMA MG3053
- PIXMA TS305
- PIXMA TS5050
- PIXMA TS6250

- PIXMA TS8050
- PIXMA TS9050
- PIXMA iP2850
- PIXMA TS705
- PIXMA TS704
- PIXMA TR7540
- PIXMA TS6350
- PIXMA TS8350
- PIXMA TS6351
- PIXMA TS6340
- PIXMA TS8351
- PIXMA TS8352
- PIXMA TS5350
- PIXMA TS5351
- PIXMA TS5352
- PIXMA TS8340
- PIXMA TS5340
- PIXMA G7050
- PIXMA G7040
- PIXMA TS3350
- PIXMA TS3351
- PIXMA TS3352
- PIXMA iP110 wb
- PIXMA iP110
- PIXMA MG6650
- PIXMA MX535
- PIXMA MG2550S
- PIXMA MG3550
- PIXMA MX475
- PIXMA MG2450
- PIXMA MG5650
- PIXMA MG7150
- PIXMA iP8750
- PIXMA E464
- PIXMA E404
- PIXMA iX6850
- PIXMA MG5550
- PIXMA TS3450
- PIXMA TR150
- PIXMA TR150 with Battery
- PIXMA TS7450
- PIXMA TS7451
- PIXMA TS3450
- PIXMA TS3451
- PIXMA TS3452

- PIXMA E3440
- MAXIFY GX6040
- MAXIFY GX7040
- MAXIFY GX6050
- MAXIFY GX7050