

Canon RP-101 Removable Photo Stickers, 4x6", 5 sheets — Canon UK Store

store.canon.co.uk/canon-rp-101-removable-photo-stickers-4x6-5-sheets/3635C002



Create, print, share and display your favourite photos in different ways with the restickable photo paper. Take your smartphone snaps and transform them into stickers ready to share or keep. Give your phone cover, laptop or accessories a truly personal touch with a photo sticker, or update your room and furniture with a few favourite photos. If you want to be more organised, you can even make your own labels. Best of all, if you change your mind, simply peel off the sticker and reapply it wherever you want.

Benefits

- Display your photos in new ways - turn your snaps into stickers
- Forget stuffy frames and stick your favourite photos on phone covers, laptops and notebooks to give your accessories an instant personal touch
- Try your hand at interior design and stick your snaps to walls and furniture to give them a new lease of life
- Impress your friends and family by designing your own personalised stickers for cute keepsakes or gifts
- Boost organisation by creating your own bespoke labels or drawing attention to a key date in your diary
- Peel and stick more than once - the sticky backing leaves behind no residue and can be reapplied wherever you want

What's in the box

Canon RP-101 Removable Photo Stickers, 4x6", 5 sheets

Compatibility

- PIXMA G3500
- PIXMA TS8252
- PIXMA G1410
- PIXMA E464
- PIXMA G4510
- PIXMA MG6853
- PIXMA TS8251
- PIXMA G3510
- PIXMA MG3550
- PIXMA MG3051
- PIXMA TS9050
- PIXMA G1501
- PIXMA G2411
- PIXMA TS5050
- PIXMA TS305
- PIXMA G1500
- PIXMA MX535
- PIXMA MG5550
- PIXMA MX495
- PIXMA TS8051
- PIXMA TS9155
- PIXMA E4240
- PIXMA MG7750
- PIXMA TS5051
- PIXMA MG3052
- PIXMA TS6251
- PIXMA TS5055
- PIXMA MG6852
- PIXMA TS304
- PIXMA MG7753
- PIXMA TS6051
- PIXMA TS6052
- PIXMA TS8050
- PIXMA G3411
- PIXMA G4411
- PIXMA iP110 wb
- PIXMA TS8052
- PIXMA TR8550
- PIXMA G2501
- PIXMA G1510
- PIXMA TS9551C

- PIXMA E204
- PIXMA TR7550
- PIXMA TR4550
- PIXMA MG6650
- PIXMA G2510
- PIXMA G3501
- PIXMA TS6151
- PIXMA MG5750
- PIXMA MG3650S
- PIXMA G4500
- PIXMA MG2545S
- PIXMA E404
- PIXMA E414
- PIXMA TS3150
- PIXMA MG2450
- PIXMA G2500
- PIXMA MG5650
- PIXMA TS5151
- PIXMA E304
- PIXMA MG5751
- PIXMA MG5752
- PIXMA TS3151
- PIXMA G1411
- PIXMA G4511
- PIXMA TS8151
- PIXMA TS9550
- PIXMA MG7751
- PIXMA MG3050
- PIXMA TS5150
- PIXMA TS8053
- PIXMA E484
- PIXMA TS205
- PIXMA MG2550S
- PIXMA MX475
- PIXMA MG7752
- PIXMA TS5053
- PIXMA TR4551
- PIXMA TS8152
- PIXMA MG3650
- PIXMA MG7150
- PIXMA iX6850
- PIXMA E474
- PIXMA TS9055
- PIXMA MG5450
- PIXMA MG6850

- PIXMA MG6851
- PIXMA MG5753
- PIXMA TS8250
- PIXMA iP2850
- PIXMA TS204
- PIXMA TS6250
- PIXMA TS6050
- PIXMA TS9150
- PIXMA MG2550
- PIXMA iP8750
- PIXMA TS8150
- PIXMA TS6150
- PIXMA MG3053
- PIXMA MG2555S
- PIXMA MG3640S
- PIXMA TS705
- PIXMA TS704
- PIXMA TR7540
- PIXMA TS6350
- PIXMA TS8350
- PIXMA TS3350
- PIXMA TS3351
- PIXMA TS3352
- PIXMA TS6351
- PIXMA TS6340
- PIXMA TS8351
- PIXMA TS8352
- PIXMA TS5350
- PIXMA TS5351
- PIXMA TS5352
- PIXMA TS3340
- PIXMA TS8340
- PIXMA TS5340
- PIXMA G7050
- PIXMA G7040
- PIXMA TR150
- PIXMA TR150 with Battery
- PIXMA TS7450
- PIXMA TS7451
- PIXMA TS3450
- PIXMA TS3451
- PIXMA TS3452
- PIXMA E3440
- MAXIFY GX6040
- MAXIFY GX7040

- MAXIFY GX6050
- MAXIFY GX7050
- PIXMA G650
- PIXMA G550
- PIXMA G640
- PIXMA G540