


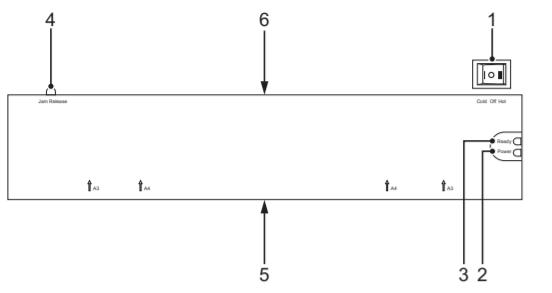

KN-LMA3 / KN-LMA4

Laminator**English****Description**

The laminator is a device used for laminating documents. The laminator can laminate documents from business-card size to A3 size (KN-LMA3) or A4 size (KN-LMA4). The device is suitable for both cold lamination and hot lamination. The minimum sheet size is 75 mic. The maximum sheet size is 125 mic.

1. Cold/heat/off switch
2. On/off indicator
3. Ready-to-use indicator
4. Jam-release button
5. Paper-infeed
6. Paper-outfeed

Safety

- Read the manual carefully before use. Keep the manual for future reference.
- The manufacturer is not liable for consequential damages or for damages to property or persons caused by non-observance of the safety instructions and improper use of the device.
- The device is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the device by a person that is responsible for their safety.
- The device shall not be used by children. Keep the device and the mains cable out of the reach of children. Children shall not play with the device.
- Only use the device for its intended purposes. Do not use the device for other purposes than described in the manual.
- Do not use the device if any part is damaged or defective. If the device is damaged or defective, replace the device immediately.
- The device is suitable for indoor use only. Do not use the device outdoors.
- The device is suitable for domestic use only. Do not use the device for commercial purposes.
- Do not expose the device to water or moisture.
- Do not use the device near bathtubs, showers, basins or other vessels containing water.
- Do not immerse the device in water or other liquids. If the device is immersed in water or other liquids, do not remove the device with your hands. Immediately remove the mains plug from the wall socket. If the device is immersed in water or other liquids, do not use the device again.
- Keep the device away from heat sources. Do not place the device on hot surfaces or near open flames.
- Beware of hot parts. Wait until the device has cooled down before touching the device. The device becomes hot during use.
- Do not cover the device.
- Do not open the device during use.
- Do not laminate documents with a thickness of more than 0.6 mm.
- Do not laminate heat-sensitive paper.
- Do not use dirty lamination sheets.

Electrical safety

- CAUTION**
RISK OF ELECTRIC SHOCK
DO NOT OPEN
- To reduce risk of electric shock, this product should only be opened by an authorized technician when service is required.
 - Disconnect the product from the mains and other equipment if a problem should occur.
 - Do not use the device if the mains cable or mains plug is damaged or defective. If the mains cable or mains plug is damaged or defective, it must be replaced by the manufacturer or an authorised repair agent.
 - Before use, always check that the mains voltage is the same as the voltage on the rating plate of the device.
 - Connect the device to an earthed wall socket. If necessary, use an earthed extension cable of a suitable diameter.
 - Always fully unwind the mains cable and the extension cable.
 - For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom with electricity. This RCD must have a rated residual operating current no higher than 30mA. Ask your installer for advice.
 - The device is not intended to be operated by means of an external timer or separate remote-control unit.
 - Do not move the device by pulling the mains cable. Make sure that the mains cable cannot become entangled. Make sure that the mains cable does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
 - Do not immerse the device, the mains cable or the mains plug in water or other liquids.
 - Do not leave the device unattended while the mains plug is connected to the mains supply.

Use

- Insert the mains plug into the wall socket.
- To switch on the device, take one of the following actions:
 - For cold lamination, set the cold/heat/off switch to the "COLD" position (""). The on/off indicator comes on.
 - For hot lamination, set the cold/heat/off switch to the "HOT" position (""). The on/off indicator comes on. The device starts heating. When the device is ready for use, the ready-for-use indicator comes on.
- Place the document in a lamination sheet.
- Insert the lamination sheet, pre-sealed end first, into the device. Make sure that the document is aligned correctly. Refer to the size markings on the device. The device starts laminating the document.
- If a lamination sheet becomes jammed, press the jam release button and remove the jammed sheet.
- To switch off the device, set the cold/heat/off switch to the "OFF" position (""). The indicators go off. Remove the mains plug from the wall socket.
- Allow the device to cool down completely.

Cleaning and maintenance

- Warning!**
- Before cleaning or maintenance, switch off the device, remove the mains plug from the wall socket and wait until the device has cooled down.
 - Do not use cleaning solvents or abrasives.
 - Do not immerse the device in water or other liquids.
 - Do not attempt to repair the device. If the device does not operate correctly, replace it with a new device.
 - Clean the outside of the device using a soft, damp cloth. If necessary, use a little neutral detergent. Thoroughly dry the outside of the device with a clean, dry cloth.
 - Clean the ventilation openings using a soft brush.

Nederlands

Het laminatorenhet is een apparaat dat wordt gebruikt voor het lamineren van documenten. Het laminerapparaat kan documenten lamineren met een omvang van visitekaartjes tot A3-formaat (KN-LMA3) of A4-formaat (KN-LMA4). Het apparaat is geschikt voor zowel koud lamineren als warm lamineren. Het minimale formaat sheet is 75 mic. Het maximale formaat sheet is 125 mic.

1. Koud/warm/uit-schakelaar
2. Aan/uit-indicator
3. Klaar-voor-gebruik-indicator
4. Vrijgaveknop bij vastlopen
5. Papierinvoer
6. Papieruitvoer

Veiligheid

- Lees voor gebruik de handleiding aandachtig door. Bewaar de handleiding voor latere raadpleging.
- De fabrikant is niet aansprakelijk voor gevolgschade of voor schade aan eigendommen of personen veroorzaakt door het niet naleven van de veiligheidsinstructies en door verkeerd gebruik van het apparaat.
- Het apparaat is niet bedoeld voor gebruik door personen (inclusief kinderen) met een lichamelijke, zintuiglijke of geestelijke beperking of onder de benodigde ervaring en kennis, tenzij ze onder toezicht staan of instructies over het gebruik van het apparaat hebben gekregen van een persoon die verantwoordelijk is voor hun veiligheid.
- Het apparaat mag niet worden gebruikt door kinderen. Houd het apparaat en het netsnoer buiten bereik van kinderen. Kinderen mogen niet met het apparaat spelen.
- Gebruik het apparaat uitsluitend voor de bedoelde doeleinden. Gebruik het apparaat niet voor andere doeleinden dan beschreven in de handleiding.
- Gebruik het apparaat niet als een onderdeel beschadigd of defect is. Vervang een beschadigd of defect apparaat onmiddellijk.
- Het apparaat is uitsluitend geschikt voor gebruik binnenshuis. Gebruik het apparaat niet buitenshuis.
- Het apparaat is uitsluitend geschikt voor huishoudelijk gebruik. Gebruik het apparaat niet voor commerciële doeleinden.

- Stel het apparaat niet bloot aan water of vocht.
- Gebruik het apparaat niet in de buurt van badkuipen, douches, wastafels of andere voorzieningen die water bevatten.
- Dompel het apparaat niet onder in water of andere vloeistoffen. Verwijder het apparaat niet met uw handen als het is ondergedompeld in water of andere vloeistoffen. Verwijder onmiddellijk de netstekker uit het stopcontact. Gebruik het apparaat niet langer als het is ondergedompeld in water of andere vloeistoffen.
- Um das Gerät ausschalten, stellen Sie den Kalt/heiß/aus-Schalter (2) auf Position "OFF" ("").
- Um das Gerät zu reinigen, entfernen Sie den Netzstecker aus der Wandsteckdose.
- Ziehen Sie den Netzstecker aus der Wandsteckdose.
- Lassen Sie das Gerät vollständig abkühlen.

Reinigung und Pflege**Warning!**

- Schalten Sie das Gerät vor der Reinigung oder Pflege aus, ziehen Sie den Netzstecker aus der Wandsteckdose und warten Sie, bis sich das Gerät abgekühlt hat.
- Verwenden Sie keine Lösung- oder Scheuermittel.
- Tauchen Sie das Gerät nicht in Wasser oder andere Flüssigkeiten ein.
- Versuchen Sie nicht, das Gerät zu reparieren. Falls das Gerät nicht einwandfrei arbeitet, tauschen Sie es gegen ein neues aus.

- Reinigen Sie das Äußere des Geräts mit einem weichen feuchten Tuch. Verwenden Sie gegebenenfalls ein wenig neutrales Reinigungsmittel. Trocken Sie das Äußere des Geräts gründlich mit einem sauberen trockenen Tuch ab.
- Reinigen Sie mit einer weichen Bürste.

Elektrische veiligheid**CAUTION**RISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPENRISK OF ELECTRIC SHOCK
DO NOT OPEN

