13/03/2012 www.crouzet.com



Level control relay - 35 mm HNM Part number 84870700



- Control of one or two levels
- Filling or emptying function
 HNM: Control by a resistive level probe
 HNE: Control by a discrete sensor

Туре	Sensing	Nominal voltage (V)
84870700 HNM	By resistive probes	24 →240 V AC/DC
84870710 HNE	By discrete sensors	24 →240 V AC/DC

-			
- 90	III	۱n	I۱
- 01	uр	ıμ	Ιy

- app.y	
Supply voltage Un	24 V →240 V AC/DC
Voltage supply tolerance	-15% / +10%
Operating range	20,4 →264 V AC/DC
Polarity with DC voltage	No
AC supply voltage frequency	50/60 Hz ± 10%
Galvanic isolation of power supply/measurement	•

Timing

Delay on thresold crossing	0,1 →5 s (0, + 10%)
Repetition accuracy with constant parameters	± 2%
Delay on pick-up	600 ms

Output

Type of contacts	No cadmium
Maximum breaking voltage	250 V AC/DC
Max. breaking current	5 A AC/DC
Min. breaking current	10 mA / 5 V DC
Electrical life (number of operations)	1 x 10 ⁵
Breaking capacity (resistive)	1 250 VA AC
Maximum rate	360 operations/hour at full load
Operating categories acc. to IEC/EN 60947-5-1	AC12, AC 13, AC 14, AC 15, DC 12, DC 13
Mechanical life (operations)	30 x 10 ⁶

Insulation

Nominal insulation voltage IEC/EN 60664-1	250 V
Insulation coordination (IEC/EN 60664-1)	Overvoltage category III: degree of pollution 3
Rated impulse withstand voltage (IEC/EN 60664-1)	4 KV (1,2 / 50 µs)
Dielectric strength (IEC/EN 60664-1)	2 KV AC 50 Hz 1 min.
Insulation resistance (IEC/EN 60664-1)	> 500 MΩ / 500 V DC

General characteristics

Display power supply	Green LED
Display relay	Yellow LED
Delay	Yellow LED
Casing	35 mm
Mounting	On 35 mm symmetrical DIN rail, IEC/EN 60715
Mounting position	All positions
Material: enclosure plastic type VO to UL94 standard	Incandescent wire test according to IEC 60695-2-11 & NF EN 60695-2-11
Protection (IEC/EN 60529)	Terminal block: IP20
	Casing: IP30
Connecting capacity IEC/EN 60947-1	Rigid: $1 \times 4^2 - 2 \times 2.5^2 \text{ mm}^2$
	1 x 11 AWG - 2 x 14 AWG
	Flexible with ferrules: 1 x 2.5 ² - 2 x 1.5 ² mm ²
	1 x 14 AWG - 2 x 16 AWG
Max. tightening torques IEC/EN 60947-1	0,6 →1 Nm / 5,3 →8,8 Lbf.In
Operating temperature IEC/EN 60068-2	-20 →+50°C
Storage temperature IEC/EN 60068-2	-40 →+70°C
Humidity IEC/EN 60068-2-30	2 x 24 hr cycle 95% RH max. without condensation 55°C
Vibrations according to IEC/EN60068-2-6	10 →150 Hz, A = 0.035 mm
Shocks IEC/EN 60068-2-6	5 g
Standards	

Standards

Marking	CE (LVD) 73/23/EEC - EMC 89/336/EEC
Product standard	NF EN 60255-6 / IEC 60255-6 / UL 508 / CSA C22.2 N°14
Electromagnetic compatibility	Immunity EN 61000-6-2/IEC 61000-6-2 Emission EN 61000-6-4 2002/EN 61000-6-3 IEC 61000-6-4/IEC 61000-6-3 Emission EN 55022 class A

13/03/2012 www.crouzet.com

Certifications	UL, CSA, GL
Conformity with environmental directives	RoHS, WEEE
Supply	
Power consumption at Un	5 VA in AC/1.5 W in DC
Immunity from micro power cuts	90 ms max. in AC/ 100 ms max. in DC
Output	
Type of output	1 double changeover relay
Timing	
Maximum reset time	4s
Inputs and measuring circuit	
Measurement range	250 Ω→1 MΩ
Low sensitivity adjustment (LS)	250 Ω→5 kΩ
Standard sensitivity adjustment St	5 kΩ→100 kΩ
High sensitivity adjustment (HS)	50 kΩ→1 MΩ
Adjustment of sensitivity	5 →100% of the selected range
Display precision	± 10% of full scale for LS and St ranges
	-40% / +10% of full scale for HS range
Measuring error with temperature drift	0.5% / °C in standardsensitivity
Measuring error with voltage drift	0%/V across the whole range
Max. voltage at probe terminals	5 V / 500 Hz ± 10%
Max. current via probes	<1 mA
Max. length of probe cables	100 m
Max. capacity of probe cable (nF)	1 nF for HS range2.2 nF for St range4.7 nF for LS range
Input circuit 3-wire sensors	No No
General characteristics	
Weight	115 g

 Description
 Code

 Removable sealable cover for 35 mm casing
 84800001

Dimension Diagram: HNM-HNE 60 44 23,2 35 00000 R

: HNM-HNE

HNM and HNE control relays are designed to monitor the levels of:

- Conductive liquid (HNM)
- Any other product (HNE)

The HNM relay takes its measurements by means of resistive probes.

The HNE relay takes its measurements by means of discrete sensors.

Both these products actuate their output relay during emptying or filling of a tank.

HNM relays control levels of conductive liquids. The principle is based on measuring the apparent resistance of the liquid between two submerged probes. When this value is below the preset threshold displayed on the front face of the unit, the relay changes state. To avoid electrolytic phenomena, an AC current runs across the probes. A rotary switch on the front face can be used to select the desired function and sensitivity range.

HNE relays control levels of products which may or may not be conductive. High and low-level data is produced by 3-wire output discrete sensors.

A green LED indicates the presence of the supply voltage.

A yellow LED indicates the status of the output relay.

A yellow LED flashes during the time delay.

A rotary switch on the front face can be used to select the sensitivity range, and the emptying or filling function.

A second switch can be used to select the number of levels (1 or 2), as well as the type of time delay in the case of 1-level mode.

The configuration of these switches is taken into account on energisation.

13/03/2012 www.crouzet.com

If the switch is set to a non-conforming position on energisation, the product goes into fault mode, the output relay stays open and the LEDs flash to signal the position error.

If the switch position changes while the unit is operating, all the LEDs flash but the product continues to work normally with the function selected on energisation prior to the change of position. The LEDs return to their normal state if the switch is reset to its initial position defined before the last energisation.

: HNM-HNE - Emptying/filling function - two levels

■ HNM-HNE - Emptying/filling function - two levels

(Level: 2LS emptying function (Low sensitivity: 250Ω to 5 k Ω), St emptying (Standard sensitivity: 5 k Ω to 100 k Ω), HS emptying (High sensitivity: 50 k Ω to 1 M Ω).

As long as the liquid level has not reached the probe maximum, the output relay stays open. Once the max. level is reached, the contact closes, thus allowing the tank to empty (valve opens, pump starts, etc). When the level drops below the min. level, the contact opens to interrupt the emptying process.

: In two-level control mode the time delay for preventing wave effect is not active.

(Level: 2, LS filling function (Low sensitivity: 250Ω to $5 \text{ k}\Omega$), St filling (Standard sensitivity: $5 \text{ k}\Omega$ to $100 \text{ k}\Omega$), HS filling (High sensitivity: $50 \text{ k}\Omega$ to $1 \text{ M}\Omega$).

As long as the liquid level has not reached the probe maximum, the output relay stays closed. Once the max. level is reached, the contact opens and pumping stops. When the level drops below the min. level, the contact closes again and pumping restarts so as to make the liquid level rise again.

: In two-level control mode the time delay for preventing wave effect is not active.

No	Legend
1	Maximum level
2	Minimum level
3	Output relay R filling function "Up"
4	Output relay R emptying function "Down"

: HNM-HNE - One-level filling function/on-delay

■ HNM-HNE - One-level filling function/on-delay

(Level: 1LS filling function (Low sensitivity: 250Ω to 5 k Ω), St filling (Standard sensitivity: 5 k Ω to 100 k Ω), HS filling (High sensitivity: 50 k Ω to 100 k Ω).

When the liquid level drops below the probe for a duration longer than the value of time delay Tt set on the front face, the relay closes and stays closed until the liquid level reaches the probe again.

If the liquid level rises back above the level set before the end of the time delay, the relay does not close.

Nº	Legend
1	Min. probe level
2	R output relay

: HNM-HNE - One-level filling function/off-delay

| HNM-HNE - One-level filling function/off-delay

(Level: 1 - off-delay, LS filling function (Low sensitivity: 250Ω to 5 k Ω) or St filling (Standard sensitivity: 5 k Ω to 100 k Ω) or HS filling (High sensitivity: 50 k Ω to 1 M Ω).

When the liquid level drops below the probe for a duration longer than the value of time delay Tt set on the front face, the relay closes instantly and stays closed until the liquid level reaches the probe again and stays above it for a duration longer than time delay Tt set on the front face.

If the liquid level drops back below the level set before the end of the time delay, the relay stays closed.

N°	Legend
1	Min. probe level
2	R output relay

: HNM-HNE - One-level emptying function/on-delay

■ HNM-HNE - One-level emptying function/on-delay

(Level: 1 - on-delay, LS emptying function (Low sensitivity: 250Ω to 5 kW Ω), St emptying (Standard sensitivity: 5 k Ω to 100 k Ω), HS emptying (High sensitivity: 50 k Ω to 1 M Ω).

When the liquid level rises above the probe for a duration longer than the value of time delay Tt set on the front face, the relay closes and stays closed until the liquid level drops back below the probe.

If the liquid level drops back below the level set before the end of the time delay, the relay does not close.

N°	Legend
1	Min. probe level R output relay
2	R output relay

: HNM-HNE - One-level emptying function/off-delay


HNM-HNE - One-level emptying function/off-delay

(Level: 1 - off-delay, LS emptying function (Low sensitivity: 250Ω to 5 k Ω), St emptying (Standard sensitivity: 5 k Ω to 100 k Ω), HS emptying (High sensitivity: 50 k Ω to 1 M Ω).

When the liquid level rises above the probe, the relay closes instantly and stays closed until the liquid level drops back below the probe for a duration longer than the value of time delay Tt set on the front face.

If the liquid level rises back above the level set before the end of the time delay, the relay stays closed.

Nº	Legend
1	Min. probe level
2	R output relay

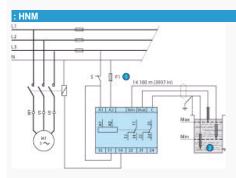

ü Legend

1 1 A fast-blow fuse or cut-out

2 Common

Special adaptations

- Customisable colours and labels
- Fixed or adjustable time delay

Adaptation dedicated to HNM:

Fixed threshold in the generic measurement range