

USB Headset with Mic and Mute Option

User Manual RND 745-00001





Contents:

Before getting started, ensure the package contains the following components:



Adjustable headband

Volume up

Microphone

Volume down

Microphone mute with red indicator

G USB-A plug

Headphone mute with green indicator

IMPORTANT SAFEGUARDS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:



To prevent possible hearing damage, do not listen at high volume levels for long periods, do not use the headphones while driving or cycling, or in any situation where you should be able to hear other sounds. As a guide to setting the volume level, check that you can still hear your own voice, when speaking normally while listening with the headphones.

Intended Use

- This product is intended for household use only. It is not intended for commercial
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or noncompliance with these instructions.

Before First Use

• Check for transport damages.



A DANGER Risk of suffocation! Keep any packaging materials away from children - these materials are a potential source of danger, e.g. suffocation.

2 3

^{*}This illustration is for reference purposes only.







Connection


- 1. Connect the product's USB plug (G) to the USB port of your computer.
- 2. Open sound settings of the computer.
- 3. Set "UC03" as the sound output and input of the computer.

For Mac-OS:





For Windows-OS:

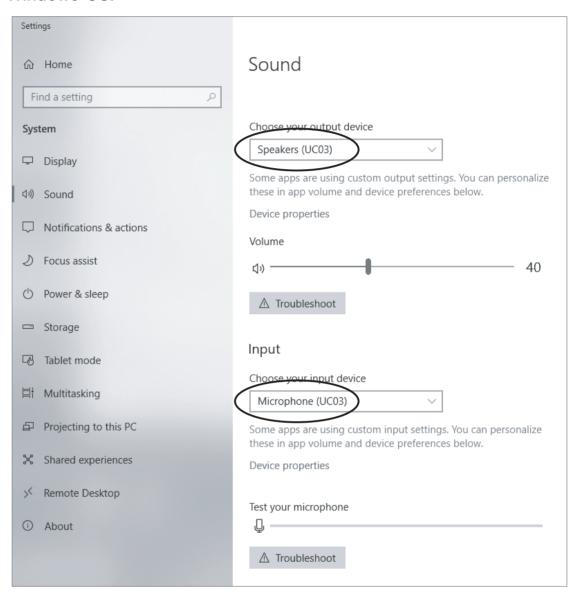

Operation

Volume control

- To turn the volume up, press the volume up button (E).
- To turn the volume down, press the volume down button (F).
- To mute/unmute the headphones, press the headphone mute button (D).

Muting the microphone

• To mute/unmute the microphone, press the microphone mute button (C). Microphone mute indicator is on, microphone is on. Microphone mute indicator is fiashes, microphone is muted.











NOTICE During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

- To clean, wipe with a soft, slightly moist cloth.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

Disposal

RND



The Waste Electrical and Electronic Equipment (WEEE) Directive aims to minimize the impact of electrical and electronic goods on the environment, by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. The symbol on this product or its packaging signifies that this product must be disposed separately from ordinary household wastes at its end of life. Be aware that this is your responsibility to dispose of electronic equipment at recycling centers in order to conserve natural resources. Each country should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your related electrical and electronic equipment waste management authority, your local city office, or your household waste disposal service.

Specifications

Item number:	RND 745-00001
Impedance:	32Ω
Headphone sensitivity:	100± 3dB / mW
Frequency response:	20 – 20,000 Hz
Maximum input power:	80 mW
Channel balance	≤ 3dB
Distortion:	Less than 5% at 1kHz
Cable length:	approx. 5.9 ft (1.8 m)
Mic sensitivity:	-42 ± 3 dB

6 7

























