

Operating instructions for the key-cabinet with electronic-lock modell KeyTronic

GB

USA

!! Attention: Please read this operating instruction carefully, **before** you operate the lock or you try to tailor a new combination of numbers. We do not undertake any liability for functional disorder because of faulty switch over or use of violence or improper use and neither for damage nor for loss of property which could be put down i.e. to the not proper closing of the safe.

GENERAL

Any button-activity is confirmed by a flashing of the yellow LED and a brief tone. The maximum distance between 2 activities may not be more than 20 seconds otherwise the former entering is deleted.

1. OPENING THE ELECTRICAL-LOCK AFTER DELIVERY

- 1.1 Remove the plastic lid below the door-handle.
- 1.2 Insert the emergency-key and turn the key to the right.
- 1.3 By turning the doorhandle to the right, the ^ cabinet will open.
- 1.4 Turn the key back in its original position and take the key out.
- 1.5 Open the plastic lid on the inside of the door to insert the batteries.
- 1.6 Insert the 4 1,5 VV AA batteries in the correct manner.

2. PROGRAMMING A NEW SECRET CODE

Out of security reasons we strongly advise you to programm your personal secret code, before you start using the key-cabinet. Start with writing down the proposed code. Never use codes like your birthday, ZIP-code etc. Keep the personal code, together with the emergency-key, in a safe place, but never store it within the key-cabinet!

Open key-cabinet as described in 1.

- 2.1 Push the red button on the inside of the door.
- 2.2 Two brief tones will be emitted and the yellow LED will flash. You will have 20 seconds to start programming the personal code.
- 2.3 Enter your personal code (min. 3 digits and a max. of 6 digits), and confirm by pushing the "START" button.
- 2.4 After you have confirmed your code, two brief tones will be emitted and the yellow LED will switch off.
- 2.5 You have now succesfully programmed your personal code.

3. OPENING OF THE KEY-CABINET

- 3.1 Enter your personal code and confirm by pushing the "START" button.
- 3.2 The green LED will be on and now you have 5 seconds to open the door.
- 3.3 Open the door by turning the door-handle to the right.

4. DELAY TIME AFTER AN INCORRECT ENTRY

In the incorrect secret code is entered, a signal tone (3) will be emitted and the yellow LED will light up. You still habe two further attempts to enter the correct secret code. If you enter the incorrect code more than three times, the incorrect entry delay time will start. During this time the lock will not react to any entries for a period of twenty seconds.

5. EMERGENCY OPENING

In case you have lost and/or forgotten your personal code, or wenn the batteries are empty, please proceed as follows:

- 5.1 Remove the plastic lid below the door-handle.
- 5.2 Insert the emergency-key and turn the key to the right.
- 5.3 By turning the doorhandle to the right, the cabinet will open.

6. CHANGING THE BATTERY

Open the plastic lid on the inside of the door to insert the batteries.

Insert the 4 1,5 VV AA batteries in the correct manner.

ATTENTION: We strongly advise you to use alkaline batteries.