

## Manual



Expert Power Control 1202  
Expert Power Control 1292



© 2021 GUDE Systems GmbH  
Manual Ver. 2.9.0  
from Firmware Ver. 1.9



# Table of contents

<b>1.</b>	<b>Device Description</b>	<b>6</b>
1.1	Security Advice .....	7
1.2	Content of Delivery .....	7
1.3	Description .....	7
1.4	Installation .....	9
1.5	Overvoltage Protection .....	11
1.6	Technical Specifications .....	12
1.6.1	Electrical Measurement .....	12
1.7	Sensor .....	13
<b>2.</b>	<b>Operating</b>	<b>15</b>
2.1	Operating the device directly .....	16
2.2	Control Panel .....	16
2.3	Maintenance .....	18
2.3.1	Maintenance Page .....	20
2.3.2	Configuration Management .....	21
2.3.3	Bootloader Activation .....	22
2.4	GSM .....	24
2.4.1	SMS .....	25
2.4.1.1	SMS Commands .....	25
2.4.1.1.1	Powerport: Query Power Port State .....	26
2.4.1.1.2	Powerport: Simple Switching .....	26
2.4.1.1.3	Powerport: Advanced Switching (Batchmode) .....	26
2.4.1.1.4	Powerport: Advanced Switching (coldstart) .....	27
2.4.1.1.5	Configuration: Read .....	27
2.4.1.1.6	Configuration: Write .....	28
2.4.1.1.7	Configuration: All Parameter .....	28
2.4.1.1.8	Sensors: Query State .....	29
2.4.1.1.9	Query Device State .....	30
2.4.1.2	SMS replies .....	30
2.4.1.2.1	SMS command replies .....	30
2.4.1.2.2	Status Change Report SMS .....	31
2.4.2	Voice Call .....	31
2.4.2.1	Menu .....	31
2.4.2.1.1	Power Port Menu .....	32
2.4.2.1.2	Status Menu .....	32
2.4.2.1.3	Parameter Description .....	33
2.4.3	Power Port Commands .....	33
2.4.4	Security .....	35
<b>3.</b>	<b>Configuration</b>	<b>37</b>
3.1	Power Ports .....	38

# Table of contents

3.1.1	Watchdog .....	39
<b>3.2</b>	<b>Ethernet .....</b>	<b>40</b>
3.2.1	IP Address .....	41
3.2.2	IP ACL .....	42
3.2.3	HTTP .....	43
<b>3.3</b>	<b>Protocols .....</b>	<b>44</b>
3.3.1	Console .....	45
3.3.2	Syslog .....	46
3.3.3	SNMP .....	46
3.3.4	Radius .....	47
3.3.5	Modbus TCP .....	49
3.3.6	MQTT .....	50
<b>3.4</b>	<b>Clock .....</b>	<b>51</b>
3.4.1	NTP .....	51
3.4.2	Timer .....	52
3.4.3	Timer Configuration .....	52
<b>3.5</b>	<b>Sensors .....</b>	<b>59</b>
3.5.1	Port Switching .....	60
<b>3.6</b>	<b>E-Mail .....</b>	<b>61</b>
<b>3.7</b>	<b>Front Panel .....</b>	<b>63</b>
<b>3.8</b>	<b>GSM .....</b>	<b>63</b>
3.8.1	GSM General .....	63
3.8.2	GSM Misc .....	64
3.8.3	GSM Phonebook .....	65
3.8.4	GSM SIM Card .....	65
3.8.5	GSM Provider .....	66
<b>4.</b>	<b>Specifications .....</b>	<b>67</b>
<b>4.1</b>	<b>Automated Access .....</b>	<b>68</b>
<b>4.2</b>	<b>Messages .....</b>	<b>68</b>
<b>4.3</b>	<b>IP ACL .....</b>	<b>70</b>
<b>4.4</b>	<b>IPv6 .....</b>	<b>71</b>
<b>4.5</b>	<b>Radius .....</b>	<b>71</b>
<b>4.6</b>	<b>SNMP .....</b>	<b>72</b>
4.6.1	Device MIB 1202 .....	74
4.6.2	Device MIB 1292 .....	76
<b>4.7</b>	<b>SSL .....</b>	<b>78</b>
<b>4.8</b>	<b>Console .....</b>	<b>79</b>
4.8.1	SSH .....	83
4.8.2	Console Cmd 1202 .....	84
4.8.3	Console Cmd 1292 .....	92
<b>4.9</b>	<b>Modbus TCP .....</b>	<b>102</b>

# Table of contents

4.10	MQTT .....	107
4.10.1	Example HiveMQ .....	109
<b>5.</b>	<b>Support .....</b>	<b>111</b>
5.1	Data Security .....	112
5.2	Contact .....	112
5.3	Declaration of Conformity .....	113
5.4	FAQ .....	113
<b>Index</b>		<b>115</b>

# Device Description

## 1 Device Description

### 1.1 Security Advice

---

- The device must be installed only by qualified personnel according to the following installation and operating instructions.
- The manufacturer does not accept responsibility in case of improper use of the device and particularly any use of equipment that may cause personal injury or material damage.
- The device contains no user-maintenable parts. All maintenance has to be performed by factory trained service personnel.
- This device contains potentially hazardous voltages and should not be opened or disassembled.
- The device can be connected only to 230V AC (50Hz or 60 Hz) power supply sockets.
- The power cords, plugs and sockets have to be in good condition. Always connect the device to properly grounded power sockets.
- The device is intended for indoor use only. Do NOT install them in an area where excessive moisture or heat is present.
- Because of safety and approval issues it is not allowed to modify the device without our permission.
- The device is NOT a toy. It has to be used or stored out of range of children.
- Care about packaging material. Plastics has to be stored out of range of children. Please recycle the packaging materials.
- In case of further questions, about installation, operation or usage of the device, which are not clear after reading the manual, please do not hesitate to ask our support team.
- Please, never leave connected equipment unattended, that can cause damage.
- Connect only electrical devices that do not have limited on-time. I.e. in case of failure, all connected appliances have to cope with a continuous on-time without causing damage.

### 1.2 Content of Delivery

---

The package includes:

- **Expert Power Control 1202 / 1292**
- GSM Antenna (**only EPC 1292**)
- Quick Start Guide

### 1.3 Description

---

The **Expert Power Control 1202 / 1292** can switch 4 different load outputs. The device has the following features:

- 4 Power Ports individually switchable directly on the device, via HTTP(S), SNMP
- Case allows mounting in 19 inch racks
- Metering of energy, current, power factor, phase angle, frequency, voltage and active/apparent/reactive power

- Two energy meters, one meters continuously, the other energy meter is resettable
- A clearly visible LED display on the device reveals total current, IP address, sensor data and error reports
- Interface for optional sensors for environmental monitoring (temperature and humidity)
- Integrated overvoltage protection prevents damage of device and of connected consumers (L-N 10 kA)
- Dedicated high-inrush relays avoid welding of relay contacts at start-up peaks
- Console commands via SSH and Telnet
- SSH support with public key and passwords
- Individually parameterisable switch-on delay of all outputs
- Programmable timetables and turn-on/turn-off sequences
- Individually adjustable watchdog for each output, which switches depending on accessibility (network ping)
- Dual TCP/IP stack with IPv4 and IPv6 support (IPv6-ready)
- Control and monitoring of the device via Ethernet with an integrated web server with SSL encryption (TLS 1.1, 1.2, 1.3)
- Control and configuration with CGI parameters and JSON messages via HTTP (REST API)
- SNMP (v1, v2c and v3, traps)
- MQTT 3.1.1 Support
- Modbus TCP support
- Radius support
- Generation of messages (e-mail, syslog and SNMP traps) and switching of relays depending on sensor measurement limits
- Firmware update during operation via Ethernet possible
- Encrypted e-mails (SSL, STARTTLS)
- Access protection through IP access control
- Low own consumption
- Developed and produced in Germany

Only **Expert Power Control 1292**:


- 4 Power Ports individually switchable via voicecall, SMS and Datacall
- GSM admin and user access for all Power Ports definable
- For pre-paid and post-paid SIM cards (SIM card not included)
- Triband network
- FreeCall: Predefined action upon toll-free incoming call from a specific number



## 1.4 Installation



1. Actual Current (7-segment display)
2. OK Button
3. Select Button
4. Signal Tower indicator LED for GSM Connection (only EPC 1292)
5. "Flash" LED Overvoltage Protection (red when inactive)
6. "S1" external sensor indicator
7. GSM signal strength (only EPC 1292)
8. 4 plain text displays (on/off) for the state of the Power Ports

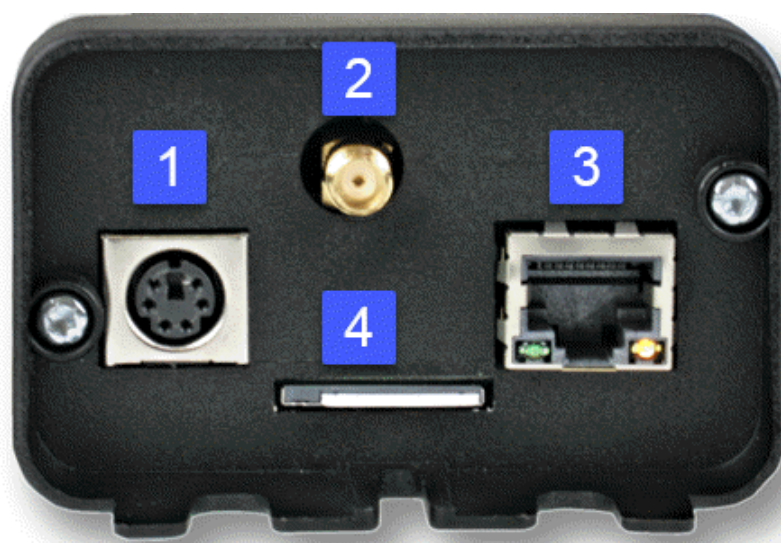

1. Sensor connector
2. Antenna terminal (only EPC 1292)
3. Ethernet connector (RJ45)
4. SIM card slot (only EPC 1292)

# Device Description




4 x Load outputs (CEE 7/3 type F, max. 16 A) for Expert Power Control 1202-1 / 1292-1



4 x Load outputs (CEE 7/3 type E, max. 16 A) for Expert Power Control 1202-2 / 1292-2



4 x Load outputs (CEE 7/3 type J, max. 10 A) for Expert Power Control 1202-3 / 1292-3

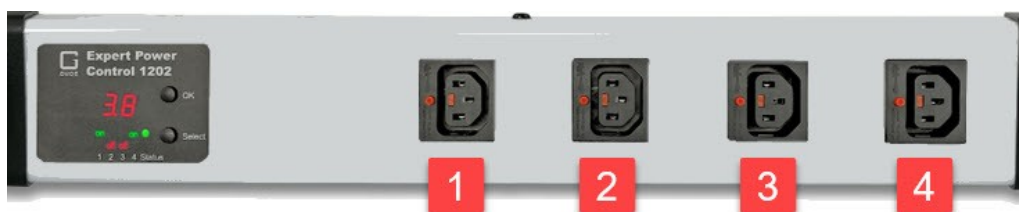

4 x Load outputs (IEC C13 Lock, max. 10 A) for Expert Power Control 1202-4 / 1292-4

## Start-up the device

- Connect the power cord of the unit to the mains supply.
- Plug the network cable into the Ethernet connector (RJ45).

- Attach the optional external sensor to the sensor connector.

---

**(EPC 1202-2 / EPC 1292-2)**

1 x Power supply (CEE 7/4 type E, max.16 A), length approx 2m

4 x Load outputs (CEE 7/3 type E, max. 16 A)

---

**(EPC 1202-3 / EPC 1292-3)**

1 x Power supply (CEE 7/4 type J, max.10 A), length approx 2m

4 x Load outputs (CEE 7/3 type J, max. 10 A)

---

**(EPC 1202-4 / EPC 1292-4)**


1 x Power supply (IEC C20, max.10 A), length approx 2m


4 x Load outputs (IEC C13 Lock, max. 10 A)

## 1.5 Overvoltage Protection

---

The device contains an overvoltage protection. The protection is based on input side varistors with thermal fuse between phase (L) and neutral (N) to protect the internal electronics and power ports with failure detection (permanently triggered thermal fuse). The state of the protection is indicated on the front panel by a red flash. A not visible flash means, that the protection is active, a red flash symbolizes that the overvoltage protection fails. In addition, the status of the overvoltage protection can be seen on the Webpage (HTTP) and acquired with SNMP. The surge protection module is designed that it can derive a practical unlimited number of voltage pulses in normal installation environments. In an environment with many energy rich surge pulses it can result in permanent loss of function due to aging of the overvoltage protection element.

 Recovering of the overvoltage protection function can only be performed by the manufacturer of the device. In the normal case, the device will continue to work even after the failure of the protective function.

 A signaling via E-Mail, Syslog or SNMP trap occurs only once during operation, exactly at the moment in which the protection fails. In addition, at the start up of the device a message is generated, when the overvoltage protection is not active.

## 1.6 Technical Specifications

Interfaces	<p>(EPC 1202-1 / EPC 1292-1) 1 x Power supply (CEE 7/4 type F, max.16 A), length approx 2m 4 x Load outputs (CEE 7/3 type F, max. 16 A)</p> <p>(EPC 1202-2 / EPC 1292-2) 1 x Power supply (CEE 7/4 type E, max.16 A), length approx 2m 4 x Load outputs (CEE 7/3 type E, max. 16 A)</p> <p>(EPC 1202-3 / EPC 1292-3) 1 x Power supply (CEE 7/4 type J, max.10 A), length approx 2m 4 x Load outputs (CEE 7/3 type J, max. 10 A)</p> <p>(EPC 1202-4 / EPC 1292-4) 1 x Power supply (IEC C20, max.10 A), length approx 2m 4 x Load outputs (IEC C13 Lock, max. 10 A)</p>
Interfaces general	<p>1 x Ethernet port (RJ45) 1 x Mini-DIN for external sensor</p>
Network connectivity	10/100 MBit/s 10baseT Ethernet
GSM Modem (only EPC 1292)	Triband GSM Module (900/1800/1900 MHz)
Sim Card (only EPC 1292)	Mini-SIM
Power Supply	internal power supply (90-265V AC / -15% / +10%)
<p>Overvoltage Protection: 20 mm/190 J varistor disk</p> <ul style="list-style-type: none"> <li>• maximum operating voltage: 300 VACrms</li> <li>• single peak current for 20/80us pulse: 10000 A</li> <li>• max. clamping voltage 20/80us pulse, Ipk = 100 A: 710 V</li> </ul>	
Environment	<ul style="list-style-type: none"> <li>• Operating temperature 0°C - 50 °C</li> <li>• Storage temperature -20°C - 70 °C</li> <li>• Humidity 0% - 95% (non-condensing)</li> </ul>
Case	Synthetic
Measurements	484mm x 46mm x 74mm (L x H x W)
Weight	approx. 1050 g

### 1.6.1 Electrical Measurement

typical fault tolerances for Ta=25°C, I=1Arms...16Arms, Un=90Vrms...265Vrms

Electrical Measurement Specification				
Category	Range	Unit	Resolution	Inaccuracy (typical)
Voltage	90-265	V	0.01	< 1%
Current	0 - 16	A	0.001	< 1.5%
Frequency	45-65	Hz	0.01	< 0.03%
Phase	-180 - +180	°	0.1	< 1%
Active power	0 - 4000	W	1	< 1.5%
Reactive power	0 - 4000	Var	1	< 1.5%
Apparent power	0 - 4000	VA	1	< 1.5%
Power factor	0 - 1	-	0.01	< 3%
Energy Counter				
Active Energy (total)	9.999.999,999	kWh	0.001	< 1.5%
Active Energy (temporary)	9.999.999,999	kWh	0.001	< 1.5%

## 1.7 Sensor

One external sensor can be connected to the **Expert Power Control 1202 / 1292**. The following sensors are currently available



Temperature-Sensor 7001	
Cable length	≈ 2m
Connector	Mini-DIN
Measurement range	-20°C to +80°C at ±2°C (maximum) and ±1°C (typical)



Humidity/Temperature-Sensor 7002	
Cable length	≈ 2m
Connector	Mini-DIN
Measurement range	Temp: -20 to +80°C, ±0,5°C (maximum) and ±0,3°C (typical) Humidity: 0-100%, ±3% (maximum) and ±2% (typical)

The sensor is automatically detected after connect. This is indicated by the green "S1" LED on the front panel. The sensor values are displayed at the "Control Panel" web page:

# Device Description

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.2	5.9	16.6	1013.8

A click on the link in the "Name" column opens the display of the Min and Max values. The values in a column can be reset using the "Reset" button. The "Reset" button in the name column deletes all stored Min and Max values.

Id	Name	Temperature °C	Humidity %	Dew Point °C	Dew Diff °C	Pressure hPa
1: 7106	<a href="#">7106</a>	22.5	34.4	6.1	16.5	1013.8
	30m min	0.0	34.1	5.9	16.4	125.0
	30m max	22.6	34.7	6.2	300.0	1013.8
	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>	<input type="button" value="Reset"/>

**Operating**

## 2 Operating

### 2.1 Operating the device directly


---

#### Port Switching

The current status of the output is indicated by the color of the LED. Red indicates that the output is off, green shows that the output is on. On the device are the buttons "select" and "ok". If you press "select", you can select the following modes one by one:

1. At first, all LEDs flash green. If you press the "Ok" button for 2.5 seconds, all ports are switched on. (If all ports are switched on, this is skipped).
2. After that, all LEDs flash red. If you hold the "Ok" button for 2.5 seconds, all ports will be switched off. (If all ports are switched off, this will be skipped).
3. If you press "Select" again, the LED for the first output starts blinking, i.e. the output is selected. Press "Select" again to select the next output. If you keep the "Ok" button pressed for one second, the state of the selected output will be toggled.



You can switch off in the front panel  configuration that all ports with the modes 1 and 2 can be switched by pushbutton.

#### Display Information

If no port is selected manually, repeatedly pressing the "ok" key will show the IP-address and the values of the external sensors on the display.

#### Status-LED

The Status LED shows the different states of the device:


- red: The device is not connected to the Ethernet.
- orange: The device is connected to the Ethernet and waits for data from the DHCP server.
- green: The device is connected to the Ethernet and the TCP/IP settings are allocated.
- periodic blinking: The device is in Bootloader mode.

### 2.2 Control Panel

---

Access the web interface: <http://IP-address> and log-in.




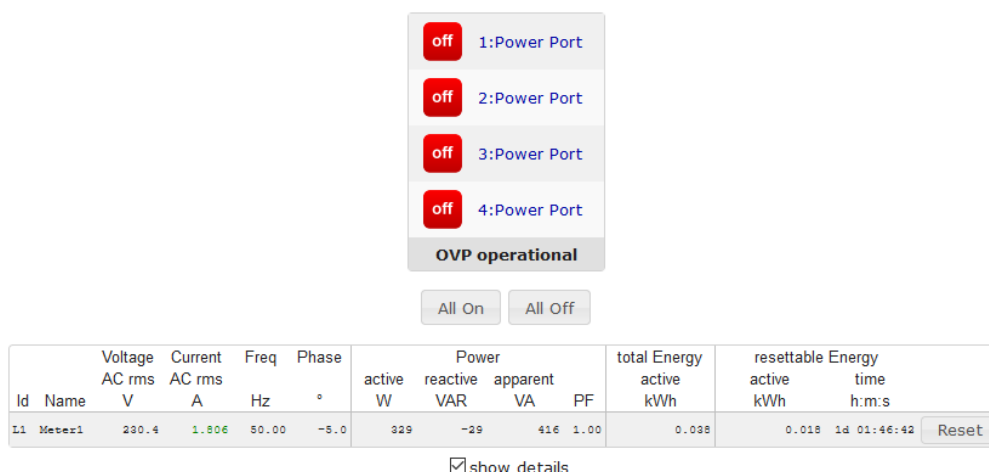

Id	Name	Voltage	Current	Freq	Phase	Power				total Energy	resettable Energy		
		AC rms V	AC rms A	Hz	°	active W	reactive VAR	apparent VA	PF	active kWh	active kWh	time h:m:s	
L1	Meter1	230.4	1.806	50.00	-5.0	329	-29	416	1.00	0.038	0.018	1d 01:46:42	Reset

☒ show details

The web page provides an overview of the switching state, energy measurement values, as well as the external sensors, provided that they are connected. When a single port is clicked at the **Expert Power Control 1202 / 1292**, a panel with buttons to control a single port appear:



The Port icon is green when the relay is closed, or red in the open state. An additional small clock icon indicates that a timer is active. Timer can be activated by delay, reset or batch mode.




An activated Watchdog is represented by an eye icon. An "X" means, that the address that should be observed, could not be resolved. Two circular arrows show a booting status.



The ports can be switched manually with the "On" and "Off" buttons. If the port is turned on, it can be turned off by pressing the "Reset" button, until after a delay it turns itself on again. The delay time is determined by the parameter Reset Duration, which is described in the chapter "Configuration - Power Ports 38". The "Close" button dissolves the panel again.

## Batchmode

Each individual port can be set for a selectable period of time to the state "switch on" or "switch off". After the selected time they are automatically switched to the second preselected state.

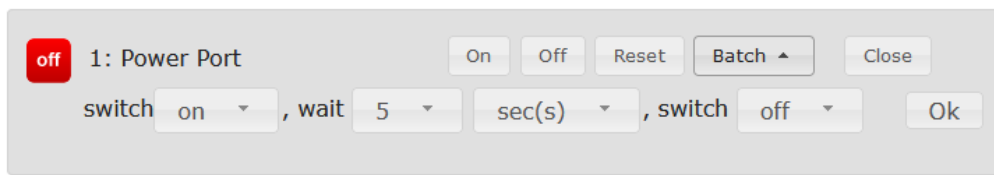

Optionally the device can be switched via a Perl script or external tools like wget. More information is available on our support wiki at [www.gude.info/wiki](http://www.gude.info/wiki).

GSM signal strength 64%, bit error (0-7) 0  
GSM prepaid sim balance : 26,12  
My Number: 015008154711  
[showhide GSM Log](#)

For devices with a GSM module (**Expert Power Control 1292**), additional reception information, the prepaid credit and the own call number are displayed. An overview of the GSM activities can be expanded.

## 2.3 Maintenance

The actual device generation with IPv6 and SSL allows all maintenance functions in the web interface to be carried out on the Maintenance Page<sup>[20]</sup>.


### Maintenance in the web interface


The following functions are available from the maintenance web page:


- Firmware Update
- Change the SSL certificate
- Load and save the configuration
- Restart the device
- Factory Reset
- Jump into the Bootloader
- Delete the DNS cache

### Upload Firmware, Certificate or Configuration

On the Maintenance Page<sup>[20]</sup>, select the required file with "Browse .." in the sections "Firmware Update", "SSL Certificate Upload" or "Config Import File Upload" and press "Upload". The file is now transferred to the update area of the device and the contents are checked. Only now, pressing the "Apply" button will permanently update the data, or abort with "Cancel".

 Only one upload function can be initiated with a reboot, eg. you cannot transmit firmware and configuration at the same time.


 If after a firmware update, the web page is not displayed correctly anymore, this may be related to the interaction of Javascript with an outdated browser cache. If a Ctrl-F5 does not help, it is recommended that you manually delete the cache in the browser options. Alternatively, you can test start the browser in "private mode".

 During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page [\[20\]](#)).


## Actions in Bootloader mode

If the web interface of the device is no longer accessible, the device can be put into Bootloader mode (see chapter Bootloader activation [\[22\]](#)). The following functions can be executed using the GBL\_Conf.exe application:

- Set IPv4 address, net-mask and gateway
- Turn HTTP password on and off
- Turn IP-ACL on and off
- Factory Reset
- Jump into the bootloader (can be switched on and off)
- Restart the device

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

The GBL\_Conf.exe program is available free of charge on our website [www.gude.info](http://www.gude.info) and can also be found on the enclosed CD-ROM.

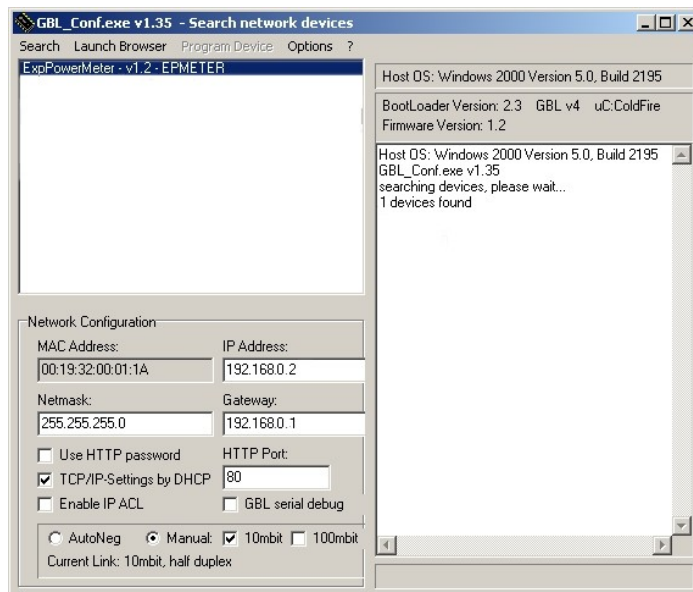

Interface GBL\_Conf

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.


- Activate the Bootloader Mode (see Chapter Bootloader Mode) and choose in menu "Search" the item "Bootloader-Mode Devices only"
- Enter the desired settings in the edit window and save them with "Save Config".
- Deactivate the boot loader mode for the changes to take effect. Select again "All

*Devices*" in the "Search" menu of GBL\_Conf.exe.

The new network configuration is now displayed.

## Factory Reset

The device can be reset to the factory default via the web interface from the Maintenance Page<sup>[20]</sup> or from the Bootloader mode (see chapter Bootloader activation<sup>[22]</sup>). All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

### 2.3.1 Maintenance Page

This section provides access to important functions such as Firmware Update or Re-start Device. It is advisable to set an HTTP password for this reason.

**Firmware Update**

**SSL Certificate Upload**

**Config Import File Upload**  
   
[Config File Export](#)

**Restart / Fab-Settings**

**Service Data**

- Config/Status View: [status.html](#)
- Config/Status Download: [export.json](#)


Firmware Update: Start a firmware update.

SSL Certificate Upload: Saves your own SSL certificate. See chapter "SSL"<sup>[78]</sup> for the generation of a certificate in the right format.


Config Import File Upload: Loads a new configuration from a text file. To apply the new


configuration, a "Restart Device" must be executed after the "Upload".

Config File Export: Saves the current configuration in a text file.

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed).

Restart Device: Restarts the device without changing the status of the relays.

 Some functions such as a firmware update or changing of the IP-address and HTTP settings require a restart of the device. A jump to the boot loader or a restart of the device lead by no means to a change of the relay states.

Restore Fab Settings and Restart Device: Performs a restart and resets the device to factory default .


Enter Bootloader Mode: Jumps into bootloader mode, where additional settings can be made with GBL\_Conf.exe.


Flush DNS Cache: All entries in the DNS cache are discarded and address resolutions are requested again.

Config/Status View: [status.html](#): Displays the status.html page with the JSON data.


Config/Status Download: [export.json](#): Direct file download of JSON data from status.html.

## 2.3.2 Configuration Management

The device configuration can be saved and restored in the maintenance area .

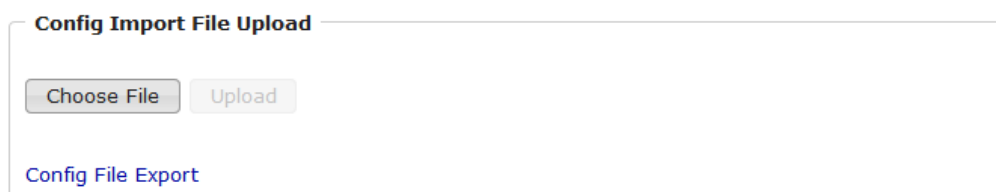

The "Config File Export" function can be used to save the current configuration as a text file. The syntax used in the configuration file corresponds to the commands of the Telnet console. If the configuration of a device is to be restored from a text file, load the file with "Upload" and restart the device with "Restart Device".

 Saving the configuration should only be carried out in an SSL connection, since it contains sensitive password information (even if it is encrypted or hashed). For the same reasons, it is advisable to carefully handle the generated configuration files when archiving.

## Editing the configuration file

It is possible to customize a saved configuration file with a text editor for your own needs. For example, one scenario would be to use a script language to automate the creation of many customized versions of a configuration, then equip a large number of devices with an individualized configuration. Also Upload and restart with CGI commands can be done in scripting languages. With use of the comment sign "#" you can

quickly hide single commands or add personal notes.

If you modify a configuration file manually, it is not always clear which limits are allowed for parameters. After uploading and restarting, commands with invalid parameters are ignored. Therefore, the generated configuration includes comments describing the boundaries of the parameters. Where "range:" refers to a numeric value, and "len:" to a text parameter. E.g:

```
email auth set 0 #range: 0..2
email user set "" #len: 0..100
```

The command "system fabsettings" from the beginning of a generated configuration file brings the device into the factory state, and then executes the individual commands that modify the configuration state. It may be desirable to make the changes relative to the current configuration, and not out of the factory state. Then the "system fabsettings" should be removed.

## No output of default values

The configuration file contains (with exceptions) only values which differ from the default. The command "system fabsettings" (go to the factory state) from the beginning of a generated configuration file should not be removed, otherwise the device can get incompletely configured.

## Configuration via Telnet

The configuration files can in principle also be transferred in a Telnet session, but then the settings are changed during operation, and not completely when restarting, as it would have been the case with an upload. It can happen that events are triggered at the same time as the device is configured. One should therefore:

- a) disable the function
- b) completely parametrize
- c) reactivate the function

An example:

```
email enabled set 0
email sender set "" #len: 0..100
email recipient set "" #len: 0..100
email server set "" #len: 0..100
email port set 25
email security set 0 #range: 0..2
email auth set 0 #range: 0..2
email user set "" #len: 0..100
email passwd hash set "" #len: 0..100
email enabled set 1 #range: 0..1
```

### 2.3.3 Bootloader Activation

The configuration of the device from the application "GBL\_Conf.exe" is only possible, if the device is in Bootloader Mode.

## Activation of the Bootloader Mode

- 1) via push button:

- Hold both buttons for 3 seconds


2) or

- Remove the power supply
- Hold down the "Select" button. If the push button is recessed, use a pin or paper clip
- Connect the operating voltage


3) by Software: (only if "Enable FW to BL" was previously activated in the "GBL\_Conf.exe" application)

- Start the "GBL\_Conf.exe" program
- Do a network search with the "Search" menu action
- Activate in menu "Program Device" the item "Enter Bootloader"

4) via web interface:

Press "Enter Bootloader Mode" on the maintenance  web page.

Whether the device is in Bootloader mode, is indicated by the flashing of the status LED, or it is shown in "GBL\_Conf.exe" application after a renewed device search (appendix "BOOT-LDR" after the device name). In Bootloader mode the program "GBL\_Conf.exe" can disable the password and the IP ACL, perform a firmware update, and restore the factory settings.

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Abandonment of the Bootloader Mode

1) via push button:


- Hold both buttons for 3 seconds (only if the device has 2 buttons)

2) or

- Remove and connect the power supply without operating a button


3) by Software:

- Start the "GBL\_Conf.exe" application
- Do a network search with the "Search" menu action
- In menu "Program Device" activate the item "Enter Firmware"

 For devices with relays, entering or exiting the bootloader mode does not change the state of the relays as long as the operating voltage is maintained.

## Factory Reset

If the device is in bootloader mode, it can always be put back to its factory default. All TCP/IP settings are reset in this operation.

 If a unit is set to factory defaults, an uploaded certificate or updated firmware will be preserved.

1) via push button:

- Activate the Bootloader Mode of the device
- Hold down the button (or the "Select" button for devices with 2 buttons) for 6 seconds. If the push button is recessed, use a pin or paper clip
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

2) by Software:

- Activate the Bootloader Mode of the device
- "Start the GBL\_Conf.exe" program
- In menu "Program Device" activate the item "Reset to Fab Settings"
- The status LED will blink in a fast rhythm, please wait until the LED blinks slowly (about 5 seconds)

## 2.4 GSM

---

To use the GSM functions, there must be an activated SIM card in the SIM card slot.

If the SIM card is inserted, and the device is enabled, the integrated GSM module searches automatically for a connection to the GSM network. If this connection works, you can control and configure the device via SMS or by call.

When operating via SMS, send defined SMS commands to the device. The device executes these commands and confirms them with reply SMS.

When operating via phone call, you can perform commands by FreeCall, that allow the unit to perform preconfigured commands, when it is called from a particular phone number. There is no connection established and there are no call charges. Another possibility is the voice call. Here, the device menu is operated using DTMF codes. This type of operation can also be carried out automatically.

### Preparing for GSM operation

If you are using a new SIM card, please take note:

#### **1. Preparing the SIM card**

- If you are using a contracted SIM card, please start with step 2
- If you are using a prepaid SIM card, please take care:
  - There has to be a positiv balance on the card
  - The card has to be activated. New prepaid cards need some manual operation at the start of usage. These requests have to be made from a user with a cellphone.

#### **2. SIM-card pin code**

- The device awaits the SIM card pin code 1234 first. Enter this PIN to the SIM card, by using a cellphone. In case you are using another pin code, you have to configure the EPC NET GSM before you activate the GSM part of the device! Otherwise this may lead to a lock of the SIM card.
- You can disable the need to enter the PIN code on the SIM card with a mobile phone. In this case the EPC NET GSM accepts the SIM card without checking the code.

#### **3. Install SIM card**

- Switch off the device or deactivate the GSM module. Alternatively, you can just turn off the GSM module in the EPC NET GSM via software.



Never install a SIM card, when GSM module is active. Otherwise the SIM card may be destroyed.

- Insert the SIM card into the Push Sim Holder.

#### 4. Connect Antenna

- Take the GSM antenna from the box and screw it to the EPC NET GSM by turning clockwise. It is enough to attract the connection hand-tight. Never use pliers to tighten or similar to the antenna, thus inevitably destroying the antenna connection.

#### 5. Activate the EPC NET GSM

- Power up the device. In factory default state, the GSM module is deactivated. This is a security setting in delivery to avoid accidentally locking a SIM card with the wrong code.
- Log in on the web interface.
- Switch to Configuration / GSM / SIM.
- Here the button "Enable GSM" is set to "No", that is the GSM module is turned off. Set the button to "yes", then press the button "Apply" to transmit the data to the EPC NET GSM.
- Wait some minutes, until the device has logged into the GSM. You can see the status change from the Signal Tower indicator LED on the display or in the web interface.

### GSM Status LED's

The GSM status LED's displays different states of the GSM module.

#### **Signal Tower indicator off**

GSM module is deactivated.

#### **Signal Tower indicator on**

GSM module activated.

#### **Signal Strength Indicator**

- 0 bars - no signal
- 2 bars - approx. 30%
- 4 bars - approx. 70%
- 6 bars - approx. 100%

## 2.4.1 SMS

### 2.4.1.1 SMS Commands

Description of the SMS format to send commands to the device:

#### **Format**

`%[cmd-name] [param 1] [...] [param N] {param 1} {...} {param N}`  
[param x] = mandatory parameter  
{param x} = optional parameter

If activated, a port code or master code will be required. Entering these codes is initiated by **p** (for Port code) or **m** (for Master code).

## 2.4.1.1.1 Powerport: Query Power Port State

### Format

`%port state [portnumber] {Portcode/Mastercode}`

### Command:

Request of status of Output Port 1, Portcode 1111

`%port state 1 p1111`

### Answer:

Hostname: ENC-2191

Output Port state: Port 1 is Off

Credit: 130.50 Eur

## 2.4.1.1.2 Powerport: Simple Switching

### Format

`%port [on, off, toggle] [portnumber] {Portcode/Mastercode}`

### Examples:

Switch off Output Port 2, Mastercode 2222

`%port off 2 m2222`

Toggle Output Port 8, Portcode 1238

`%port toggle 8 p1238`

Reset Output Port 6, Portcode 0123

`%port reset 6 p0123`

Switch on Output Port 1, without Portcode

`%port on 1`

### Answer (example):

Device name: epc007

Port switch: Port 1 off -> on

Account Credit: Credit: 130.50 Eur

## 2.4.1.1.3 Powerport: Advanced Switching (Batchmode)

### Format

`%port batchmode [portnumber] [batch-sequence-number] {Portcode/Mastercode}`

[batch-sequence-number]

'11' .. '19' off, wait [t1 .. t9]s, on

'21' .. '29' on, wait [t1 .. t9]s, off

'31' .. '39' toggle, wait [t1 .. t9]s, toggle

**Note:** Sequence numbers are identical to the DTMF codes for voice calls.

tn	Time in seconds
t1	1
t2	2
t3	5
t4	10
t5	20
t6	60
t7	120
t8	240
t9	480

**Example:**

```
%port batchmode 1 13 m0123
```

**Answer:**

Device name: epc007

Switch sequence: Port 1 off -> t3 -> on

Account Credit: Credit 130.50

#### 2.4.1.1.4 Powerport: Advanced Switching (coldstart)

The command '**coldstart**' turns off all Output Ports at once. Then it switches the ports temporally delayed on again (according to the current output port configuration), as if the device performs a cold start.

**Format**

```
%coldstart {mastercode}
```

**Example:**

```
%coldstart m0123
```

**Answer:**

Device name: epc007

Switch sequence: coldstart

Account Credit: Credit: 130.50 Eur

#### 2.4.1.1.5 Configuration: Read

**Format**

```
%config get [config-name] {mastercode}
```

[config-name<sup>28</sup>]:

- all
- code
- telbook
- gsmstatus
- response
- error
- portname
- adminnum
- gsm

**Example:**

```
%config get code m1234
```

**Answer:**

```
Config: code = on
```

**Example:**

```
%config get all
```


**Answer:**

```
Config: code = on  
telbook = off  
[...]  
adminnum = 0161123456  
gsm = on
```

## 2.4.1.1.6 Configuration: Write

**Format**

```
%config set [config-name] [config-value] {Mastercode}
```

[config-name] :

```
code  
telbook  
gsmstatus  
response  
error  
portname  
adminnum  
gsm
```

**Example:**

```
%config set code off m1234
```

**Answer:**

```
Config: code = off
```

## 2.4.1.1.7 Configuration: All Parameter

Description	SMS [config-name]	SMS [config-value]	default
Master/Port Code enabled?	code	on, off	off
Check of phone book?	telbook	on, off	off
Send GSM Status SMS to 'adminnum'	gsmstatus	on, off	off
Send SMS reply on SMS commands to recent SMS user	response	on, off	on
Send SMS reply	error	on, off	on

Description	SMS [config-name]	SMS [config-value]	default
with error message, if SMS command was malformed			
States configured Port name instead of Output Port n in SMS replies	portname	on, off	off
Allow deactivation of GSM module via SMS	gsm	on, off	off
Phone number for e-mail messages	email	max. 15 chars	
Access only for admin	mastergsm	on, off	off
Autosync	autosync	on, off	off
DTMF for VoiceCall	calltone	on, off	off
Voice for VoiceCall	callvoice	on, off	on
Phone number for SMS messages	adminnum	max. 15 chars	
Allows freecall operation	freecall	on, off	off

## 2.4.1.1.8 Sensors: Query State

### Format

`%sensor state [portnumber, all] {Mastercode}`

### Example:

Query the state of all sensors, Mastercode 0000

`%sensor state m0000`

### Answer:

Device name: epc007  
 Port: Sensor port 1  
 Sensor name: Temperature  
 Value: NC  
 Port: Sensor port 2  
 Sensor name: Temperature  
 Value: T=22.79C  
 Value: RH= 76.64%  
 Account credit: Credit: 130.50 Eur

## 2.4.1.1.9 Query Device State

### Format

%all state {Mastercode}

### Example:

Query the state of the device:

%all state

### Answer:

Device name: epc007: Status

Outputport state: outp: 1=On 2=On 3=On 4=Off

Inputport state: dinp: 1=Off 2=Off 3=Off 4=Off

Account credit: Credit: 130.50 Eur

## 2.4.1.2 SMS replies

### 2.4.1.2.1 SMS command replies

A command reply SMS looks like:

Device name: [name]	prefix
[response text]	Command specific reply
Account credit: [x]	

### [response text]

Device name: [name]

Port switch: [port] [s] -> [s]

[port] = Port 1 .. Port 99 (or Config:portname)

[s] = on .. off

Port state: [port] is [s], [...], [port] is [s]

[port] = Port 1 .. Port 99 (or Config:portname)

[s] = on .. off

Switch sequence: [s]

[s]

[port] [c] -> wait t -> [c]

[port] = 'Port 1' .. 'Port 99' (or Config:portname)

[c] = on, off, toggle, coldstart

Account credit: [x]

Config: name = value, [...], name = value

or

command parse error

## 2.4.1.2.2 Status Change Report SMS

A SMS status change request reply looks like:

Device name: [name]	Prefix
[response text]	Status change request specific reply
Account credit: [x]	

### [response text]

Device name: [name]

[port] -> [s]

[port] = 'Port 1' .. 'Port 99' (or Config:portname)

[s] = 'on' .. 'off'

[port] [s]

[port] = 'Port 1' .. 'Port 99' (or Config:portname)

[s] = batchmode, toggled, Coldstart

Temperature state: [val]

[val] = 'over the MAX limit', 'under the MIN limit'

Account credit: [x]

## 2.4.2 Voice Call

### 2.4.2.1 Menu

For operating with VoiceCall, simply call the phone number of the SIM card of the GSM module. When connection is established the device replies with the announcement: "Main menu" and a DTMF tone

In the menu the navigation works via DTMF commands.

Each command starts with # and ends with \*.

Numbers	Men
*1#	Output Port
*2#	Input Port
*8#	Status

You can combine multiple commands into a command. Just type the commands one after another and terminate it as a whole with #.

\*[Command 1][Command 2]...[Command n]#

Some commands may require the Port or MasterCode. These codes have to be added at end of the command

Example:

Navigate from Main Menu into the Status Menu using mastercode 1111

\*8# - enter Status Menu  
1111 - Mastercode

For the navigation in menus the following commands are required:

\*99# - Jump to Main Menu  
\*98# - Return to prev Menu  
\*97# - Help




## 2.4.2.1.1 Power Port Menu

Here you can choose and switch Output Ports or request the status of a Output Port.

Example:

\*1# - Switch to Output Port menu  
\*5# - Choose Output Port 5  
\*01# - Switch on

Or connected into one command: \*1501#

 For devices with more than 9 power ports, the port numbers must be entered with two digits. The previous command would then look like this: \*10501#

Example:

\*7# - Choose Output Port 7  
\*23# - Activate Batchmode No.23 for Output Port 7 - Output Port 7 on, wait t3, off

Example:

\*3# - Choose Output Port 3  
\*03# - Request state of Output Port 4

Or as one command: \*303#

Please check the Output Port commands [pc] for further information

## 2.4.2.1.2 Status Menu


Different states of the device can be requested

*00#	Value of the account of the PrePaid card
*01#	Request of an SMS with all output port information, announcement "SMS sent"
*03#	Request of an SMS with configuration information, announcement "SMS sent"
*04#	Request of actual sensor information (a sensor has to be connected)
*10#	Request of the state of all Output Ports



## 2.4.2.1.3 Parameter Description

[pn]  
Output Port Number  
- Values: '1' .. '9'

 For devices with more than 9 power ports, the port numbers must be entered with two digits - Values: '01' .. '99'

[ps]  
- Output Port State  
- Values: '0' .. '1'  
(on/off)

[pc]  
- Output Port Command  
- Values: '00' .. '89'

[in]  
- Input-Port Number  
- Values: '1' .. '9'

[is]  
- Input-Port State  
- Values: '0' .. '1'  
(on/off)

[sq]  
- Status Query  
- Values '01' .. '89'

Special Menu Commands (90 .. 00)  
- 99 : Jump to Main Menu  
- 98 : return to prev Menu

## 2.4.3 Power Port Commands

List of possible Output Port commands (pc)

Port Com- mand	Command	Description
00	off	Switch off
01	on	Switch on
02	toggle	Toggle
03	state info	Request of state of Port
04	reset	Switch off, wait 30 seconds, switch on

Port Command	Command	Description
11	Batchmode: off, wait t1, on	Port off, wait t1, Port on
12	Batchmode: off, wait t2, on	Port off, wait t2, Port on
13	Batchmode: off, wait t3, on	Port off, wait t3, Port on
14	Batchmode: off, wait t4, on	Port off, wait t4, Port on
15	Batchmode: off, wait t5, on	Port off, wait t5, Port on
16	Batchmode: off, wait t6, on	Port off, wait t6, Port on
17	Batchmode: off, wait t7, on	Port off, wait t7, Port on
18	Batchmode: off, wait t8, on	Port off, wait t8, Port on
19	Batchmode: off, wait t9, on	Port off, wait t9, Port on

Port Command	Command	Description
21	Batchmode: on, wait t1, off	Port on, wait t1, Port off
22	Batchmode: on, wait t2, off	Port on, wait t2, Port off
23	Batchmode: on, wait t3, off	Port on, wait t3, Port off
24	Batchmode: on, wait t4, off	Port on, wait t4, Port off
25	Batchmode: on, wait t5, off	Port on, wait t5, Port off
26	Batchmode: on, wait t6, off	Port on, wait t6, Port off
27	Batchmode: on, wait t7, off	Port on, wait t7, Port off
28	Batchmode: on, wait t8, off	Port on, wait t8, Port off
29	Batchmode: on, wait t9, off	Port on, wait t9, Port off

Port Command	Command	Description
31	Batchmode: toggle, wait t1, toggle	Port toggle, wait t1, Port toggle
32	Batchmode: toggle, wait t2, toggle	Port toggle, wait t2, Port toggle

Port Command	Command	Description
33	Batchmode: toggle, wait t3, toggle	Port toggle, wait t3, Port toggle
34	Batchmode: toggle, wait t4, toggle	Port toggle, wait t4, Port toggle
35	Batchmode: toggle, wait t5, toggle	Port toggle, wait t5, Port toggle
36	Batchmode: toggle, wait t6, toggle	Port toggle, wait t6, Port toggle
37	Batchmode: toggle, wait t7, toggle	Port toggle, wait t7, Port toggle
38	Batchmode: toggle, wait t8, toggle	Port toggle, wait t8, Port toggle
39	Batchmode: toggle, wait t9, toggle	Port toggle, wait t91, Port toggle

tn	Time in seconds
t1	1
t2	2
t3	5
t4	10
t5	20
t6	60
t7	120
t8	240
t9	480

## 2.4.4 Security

Please note that the device has no security options set in the delivery settings, in order to allow a quick start. For a later use we strongly recommend that you activate the phone book check and code queries. The phone book check provides pretty high security, because only phone book members can operate the device. Unfortunately, there are mobile carriers that allow to simulate any number with some technical effort. These numbers will be marked with a special bit and can only be identified by the police as forged. Unfortunately the GSM network has no possibility to identify this fake numbers. For this reason we recommend the code query.

Access	Phonebook Check	Port/MasterCode	Security
Anybody	off	off	Very low
Phonebook Check	on	off	Normal
Code Check	off	on	High
Phonebook and Code Check	on	on	Very high

# Configuration

## 3 Configuration

### TCP/IP configuration by DHCP

After switching on the device is scanning on the Ethernet for a DHCP server and requests an unused IP address. Check the IP address that has been assigned and adjust if necessary, that the same IP address is used at each restart. To turn off DHCP use the software GBL\_Conf.exe or use the configuration via the web interface.

To check the network settings with GBL\_Conf.exe, start the program and choose "All Devices" in the "Search" menu. From the list select the appropriate device. The lower part of the left half of the window now shows the current network settings of the device. If the IP address is displayed with the default settings (192.168.0.2), either no DHCP server is present on the network, or there could be no free IP address assigned to it.

### 3.1 Power Ports

**Power Ports**

Choose Power Port to configure: 1: Power Port

Label: Power Port

Initialization status (coldstart): ☐ on ☐ off ☒ remember last state

Initialization delay: 0 s

GSM Portcode: 1111

Repower delay: 0 s

Reset duration: 10 s

Enable watchdog: ☐ yes ☒ no

Apply

Choose Power Port to configure: This field is used to select the power ports to be configured.

Label: You can assign a name up to 15 characters for each of the power ports. Using the name, an identification of the the device connected to the port can be facilitated.

### Start-up Monitoring

It is important, that if necessary the condition of the power ports can be restored after a power failure. Therefore each port can be configured with Initialization status to a specific start-up state. This start-up sequence can be carried out delayed by the parameter Initialization Delay. There is in any case a minimum one-second delay between switching of ports.

Initialization status(coldstart): This is the port state (on, off, remember last state) the port should be set when the device is turned on. The setting "remember last state" saves the last manually set state of the power port in the EEPROM.

Initialization delay: Here can be configured how long the port should wait to switch to its defined state after the device is turned on. The delay may last up to 8191 seconds. This corresponds to a period of approx. two hours and 20 minutes. A value of zero means that the initialization is off.

GSM Portcode (only EPC 1292): Sets the individual port access code.

Repower delay: When this feature is enabled (value greater than 0), the power port will switch itself on again a specified time after it has been disabled. Unlike the "Reset" button this function applies to all switch actions, including SNMP, or an optional serial interface.

Reset Duration: When the "Reset" button is triggered, the device turns the power port off, waits for the time entered here (in seconds) and turns the power port on.

### 3.1.1 Watchdog

The watchdog feature enables to monitor various remote devices. Therefore either ICMP pings or TCP pings are sent to the device to be monitored. If these pings are not answered within a certain time (both the time and the number of attempts can be set), the port is reset. This allows e.g. to automatically restart not responding server or NAS systems. The mode IP master-slave port allows you to switch a port depending on the availability of a remote device.

When a watchdog is activated it presents various information in the Control Panel. The information is color-coded.

- Green text: The watchdog is active and regularly receives ping replies.
- Orange text: The watchdog is currently enabled, and waits for the first Ping response.
- Red text: The watchdog is active and receives no ping replies anymore from the configured IP address.

After the watchdog has been enabled, the display remains orange until the watchdog receives a ping response for the first time. Only then the watchdog is activated. Even after triggering a watchdog and a subsequent power port reset, the display will remain orange until the device is rebooted and responds again to ping requests. This will prevent a premature watchdog reset of the port, e.g. when a server needs a long time for a file check.

You can monitor devices on your own network, as well as devices on an external network, e.g. the operating status of a router.

Enable watchdog: ☒ yes ☐ no

Ping type: ☒ ICMP ☐ TCP

Hostname:

Ping interval:  s

Ping retries:

Watchdog mode: ☒ Reset port when host down:

- ☒ Infinite wait for booting host after reset
- ☐ Repeat reset on booting host after  ping timeouts
- ☐ Switch off once when host down
- ☐ IP Master-Slave port:
  - ☐ host comes up -> switch on, host goes down -> switch off
  - ☐ host goes down -> switch on, host comes up -> switch off
- ☐ count PING requests as unreplied when ethernet link down

Enable watchdog: Enables the watchdog function for this Power Port.

Watchdog type: Here you can choose between the monitoring by ICMP pings or TCP

pings.

- **ICMP Pings:** The classic ping (ICMP echo request). It can be used to check the accessibility of network devices (for example, a server).
- **TCP Pings:** With TCP pings, you can check if a TCP port on the target device would accept a TCP connect. Therefore a non-blocked TCP port should be selected. A good choice would be port 80 for http or port 25 for SMTP.

TCP port: Enter the TCP port to be monitored. When using ICMP pings this is not needed.

Hostname: The name or IP address of the monitored network device.

Ping interval: Select the frequency (in seconds) at which the ping packet is sent to each network device to check its operating status.

Ping retries: After this number of consecutive unanswered ping requests the device is considered inactive.

Watchdog mode: When Reset port when host down is enabled, the Power Port is turned off and switched back on after the time set in Reset Duration. In mode Switch off once when host down the Power Port remains disabled.

At the default setting (Infinite wait for booting host after reset) the watchdog monitors the connected device. When there is no longer a reply after a set time, the watchdog performs the specified action, usually a reset of the Power Port. Now the watchdog waits until the monitored device reports again on the network. This may take several minutes depending on the boot duration of the device. Only when the device is accessible from network again, the watchdog is re-armed. If the option Repeat reset on booting host after x ping timeout is enabled, this mechanism is bypassed. Now the watchdog is re-activated after N Ping intervals (input field ping timeouts).

When enabling the IP master-slave mode, the port is switched depending on the availability of a remote device. Depending on the configuration, the port is switched on when the terminal is reachable, or vice versa.



The option Repeat reset on booting host after x ping timeout has the following pitfall: If a server, that is connected to the monitored Port is in need for a long boot process (e.g. it is doing a file system check), the server would probably exceed the tripping time of the watchdog. The server would be switched off and on again, and the file system check is restarted. This would be repeated endlessly.

count PING requests as unreplied when ethernet link down: If the Ethernet link of the device is not active, watchdog monitoring is not possible and the watchdog function is not activated. If this option is activated, a watchdog is also triggered if the Ethernet link is down.

## 3.2 Ethernet

---



## 3.2.1 IP Address

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**Hostname**  
Hostname:

**IPv4**  
Use IPv4 DHCP: ☒ yes ☐ no  
IPv4 Address:   
IPv4 Netmask:   
IPv4 Gateway address:   
IPv4 DNS address:   
MAC address: 00:19:32:01:1e:52

**IPv6**  
Use IPv6 Protocol: ☐ yes ☒ no  
Use IPv6 Router Advertisement: ☐ yes ☒ no  
Use DHCP v6: ☐ yes ☒ no  
Use manual IPv6 address settings: ☐ yes ☒ no

**Hostname:** Here you can enter a name with up to 63 characters. This name will be used for registration on the DHCP server.



Special characters and umlauts can cause problems in the network.

**IPv4 Address:** The IP address of the device.

**IPv4 Netmask:** The network mask used in the network.

**IPv4 Gateway address:** The IP address of the gateway.

**IPv4 DNS address:** The IP address of the DNS server.

**Use IPv4 DHCP:** Select "yes" if the TCP/IP settings should be obtained directly from the DHCP server: When the function is selected, each time the device powers up it is checked if a DHCP server is available on the network. If not, the last used TCP/IP setting will be used further.

**Use IPv6 Protocol:** Activates IPv6 usage.

**Use IPv6 Router Advertisement:** The Router Advertisement communicates with the router to make global IPv6 addresses available.

**Use DHCP v6:** Requests from an existing DHCPv6 server addresses of the configured DNS server.

**Use manual IPv6 address settings:** Activates the entry of manual IPv6 addresses.

**IPv6 status:** Displays the IPv6 addresses over which the device can be accessed, and additionally DNS and router addresses.


**IPv6 status**

Current IPv6 status:

IPv6 Addr:  
fe80::219:32ff:fe00:996d  
2007:7dd0:ffcl:l:219:32ff:fe00:996d

IPv6 DNS Server:  
2007:7dd0:ffcl:1:20c:29ff:feaf:93c

IPv6 Router:  
fe80::20c:29ff:feaf:93c

 For IP changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

## Manual IPv6 Configuration

**IPv6 (manual)**

IPv6 Addresses:

2007:7dd0:ffc1:0:219:32ff:fe00:996d

/ 64

/ 64

/ 64

/ 64

IPv6 DNS addresses:

2007:7dd0:ffc1:0:20c:29fffeaf:93c

IPv6 Gateway address:

fe80::20c:29ff:feaf:93c

The input fields for the manual setting of IPv6 addresses allow you to configure the prefix of four additional IPv6 device addresses, and to set two DNS addresses, and a gateway.

### 3.2.2 IP ACL

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**ICMP Ping**

Reply ICMP ping requests: ☒ yes ☐ no

**IP Access Control List**

Enable IP filter: ☒ yes ☐ no

1. Grant IP access to host/net:

1234::4ef0:eec1:0:219:32ff:fe00:f124

-

+

2. Grant IP access to host/net:

192.168.1.84

-

+

3. Grant IP access to host/net:

mypc.locdom

-

+

4. Grant IP access to host/net:

192.168.1.0/24

-

+

5. Grant IP access to host/net:

1234:4ef0:eecl:0::/64


-


+

Apply

Reply ICMP ping requests: If you enable this feature, the device responds to ICMP pings from the network.

Enable IP filter: Enable or disable the IP filter here. The IP filter represents an access control for incoming IP packets.

 Please note that when IP access control is enabled HTTP and SNMP only work if the appropriate servers and clients are registered in the IP access control list.

 If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

## 3.2.3 HTTP

[IP Address](#) · [IP ACL](#) · [HTTP Server](#)

**HTTP**

HTTP Server option: ☒ HTTP + HTTPS  
☐ HTTP redirects to HTTPS  
☐ HTTPS only ☐ HTTP only

Server port HTTP:

Server port HTTPS:

Supported TLS versions:

Enable Ajax autorefresh: ☒ yes ☐ no

**HTTP Password**

Enable password protection: ☒ yes ☐ no

Use radius server passwords: ☐ yes ☒ no

Use locally stored passwords: ☒ yes ☐ no

Set new **admin** password:  (32 characters max)

Repeat **admin** password:

Set new **user** password:  (32 characters max)

Repeat **user** password:


HTTP Server option: Selects whether access is possible only with HTTP, HTTPS, or both.

Server port HTTP: Here can be set the port number of the internal HTTP. Possible values are from 1 to 65534 (default: 80). If you do not use the default port, you must append the port number to the address with a colon to address the device from a web browser. Such as: "http://192.168.0.2:800"

Server port HTTPS: The port number to connect the web server via the SSL (TLS) protocol.

Supported TLS versions: Limits the supported TLS versions.


Enable Ajax autorefresh: If this is activated, the information of the status page is automatically updated via http request (AJAX).


 For some HTTP configuration changes a firmware reset is required. This can be done in the Maintenance web page. A restart of the device leads by no means to a change of the relay states.

Enable password protection: Password access protection can be activated. If the admin password is assigned, you can only log in by entering this password to change settings. Users can log in by entering the user password in order to query the status information and initiate switching operations.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally. In this case, an admin password and a user password must be assigned. The password can have a maximum of 31 characters. The name "admin" and "user" are provided for the user name in the password entry mask of the browser. In factory settings, the password for the admin is set to "admin" or "user" for the user password.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the SHA2-256 hash. If you want to change a password, the complete password must always be re-entered.

 If you have forgotten your password, please activate the bootloader mode and then turn off the password prompt in GBL\_Conf.exe.

## 3.3 Protocols

---

## 3.3.1 Console

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**TCP/IP Console**

Enable Telnet: ☒ yes ☐ no

Telnet TCP port:

Raw mode: ☐ yes ☒ no

Active negotiation: ☐ yes ☒ no

Activate echo: ☐ yes ☒ no

Push messages: ☐ yes ☒ no

Delay after 3 failed logins: ☐ yes ☒ no

Enable SSH: ☒ yes ☐ no

SSH TCP port:

Activate echo: ☒ yes ☐ no

Push messages: ☐ yes ☒ no

Require user login (Telnet/SSH): ☒ yes ☐ no

Use radius server passwords: ☐ yes ☒ no

Use locally stored passwords: ☒ yes ☐ no

Username:

Set new password:  (32 characters max)

Repeat password:

Upload new SSH public key:

Enable Telnet: Enables Telnet console .

Telnet TCP port: Telnet sessions are accepted on this port.

Raw mode: The VT100 editing and the IAC protocol are disabled.

Activate echo: The echo setting if not changed by IAC.

Active negotiation: The IAC negotiation is initiated by the server.

Require user login: Username and password are required.

Delay after 3 failed logins: After 3 wrong entries of username or password, the next login attempt is delayed.

Use radius server passwords: Username and password are validated by a Radius Sever.

Use locally stored passwords: Username and password are stored locally

## 3.3.2 Syslog

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Syslog**

Enable Syslog: ☒ yes ☐ no

Syslog server:

Apply

Enable Syslog: Enables the usage of Syslog Messages.

Syslog Server: If you have enabled Syslog Messages, enter the IP address of the server to which the syslog information should be transmitted.

## 3.3.3 SNMP

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**SNMP**

Enable SNMP options: ☒ SNMP get ☒ SNMP set

SNMP UDP port:

sysContact:

sysName:

sysLocation:

**SNMP v2**

Enable SNMP v2: ☒ yes ☐ no

SNMP v2 public Community:  (16 char. max)

SNMP v2 private Community:  (16 char. max)

**SNMP v3**

Enable SNMP v3: ☒ yes ☐ no

SNMP v3 Username:  (32 char. max)

SNMP v3 Authorization Algorithm:

Set new **Authorization** password:  (8 char. min, 32 char. max)

Repeat **Authorization** password:

SNMP v3 Privacy Algorithm:

Set new **Privacy** password:  (8 char. min, 32 char. max)

Repeat **Privacy** password:

**SNMP Traps**

Send SNMP Traps:

SNMP trap receiver 1 :

SNMP-get: Enables the acceptance of SNMP-GET commands.

SNMP-set: Allows the reception of SNMP-SET commands.

SNMP UDP Port: Sets the UDP port where SNMP messages are received.

sysContact: Value of RFC 1213 sysContact.

sysName: Value of RFC 1213 sysName.

sysLocation: Value of RFC 1213 sysLocation.

Enable SNMP v2: Activates SNMP v2.



Because of security issues, it is advisable to use only SNMP v3, and to disable SNMP v2. Accesses to SNMP v2 are always insecure.

Community public: The community password for SNMP GET requests.

Community private: The community password for SNMP SET requests.

Enable SNMP v3: Activates SNMP v3.

SNMP v3 Username: The SNMP v3 User Name.

SNMP v3 Authorization Algorithm: The selected Authentication Algorithm.

SNMP v3 Privacy Algorithm: SNMP v3 Encryption Algorithm..



If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the device never stores the password itself, but only the key formed using the Authorization Algorithm. If you want to change a password, the complete password must always be re-entered.



The calculation of the password hashes varies with the selected algorithms. If the Authentication or Privacy algorithms are changed, the passwords must be re-entered in the configuration dialog. "SHA-384" and "SHA512" are calculated purely in software. If "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

Send SNMP traps: Here you can specify whether, and in what format the device should send SNMP traps.

SNMP trap receiver: You can insert here up to eight SNMP trap receiver.

MIB table: The download link to the text file with the MIB table for the device.

More information about SNMP settings are available from our support or can be found on the Internet at [www.gude.info/wiki](http://www.gude.info/wiki).

## 3.3.4 Radius

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Radius**

Enable Radius Client: ☒ yes ☐ no

Authentication Protocol: ☒ PAP ☐ CHAP

Use Message Authentication: ☒ yes ☐ no

Default Session Timeout:

Primary Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Use backup server: ☒ yes ☐ no

Backup Server:

Set new shared secret:

Repeat new shared secret:

Timeout:

Retries:

Enable Radius Client: Enables validation over Radius.

Use CHAP: Use CHAP password encoding.

Use Message Authentication: Adds the "Message Authentication" attribute to the Authentication Request.

Primary Server: Name or IP address of the Primary Radius server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.

Use Backup Server: Activates a Radius Backup server.

Backup Server: Name or IP address of the Radius Backup server.

Shared secret: Radius Shared Secret. For compatibility reasons, only use ASCII characters.

Timeout: How long (in seconds) will be waited for a response from an Authentication Request.

Retries: How often an authentication request is repeated after a timeout.



**Test Radius Server**

Test Username:

Test Password:

Test Username: Username input field for Radius test.

Test Password: Password input field for Radius test.

The "Test Radius Server" function allows you to check whether a combination of Username and Password is accepted by the configured Radius Servers.

### 3.3.5 Modbus TCP

[Console](#) · [Syslog](#) · [SNMP](#) · [Radius](#) · [Modbus](#) · [MQTT](#)

**Modbus TCP**

Enable Modbus TCP: ☒ yes ☐ no

Modbus TCP port:

Enable Modbus TCP: Enables Modbus TCP support.

Modbus TCP port: The TCP/IP port number for Modbus TCP.

## 3.3.6 MQTT

**MQTT**

Enable MQTT: ☒ yes ☐ no

Broker:

TLS: ☒ yes ☐ no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▼

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands: ☐ yes ☒ no

Publish device data summary interval:  s (0=disabled)

Enable MQTT: Enables MQTT support.

Broker: DNS or IP address of the MQTT broker.


TLS: Turns on TLS encryption.

Mode TCP port: The TCP/IP port number of the broker.

Username: The MQTT username.

password: The password for the username.

Client ID: The MQTT client ID.

 The client IDs of a user must be different! If two clients of a user have the same name, the connection of one client is normally terminated.

Quality of Service (QoS): Sets the QoS value (0 or 1) of the MQTT publishes.

Keep-alive ping interval: This defines the time interval in which the client sends an MQTT ping.

Topic prefix: Defines the beginning of the topic with which all messages are sent. The strings **[mac]** and **[host]** symbolize the MAC address or the hostname of the device.

Permit CLI commands: Enables the execution of console commands.

Publish device data summary interval: Time interval in which messages with the global status of the device are sent.

## MQTT Logs

- MQTT client connected
- MQTT sending client id:'client\_1641' username:'epc-user'
- MQTT broker connected
- MQTT broker DNS resolved
- MQTT broker DNS not yet resolved
- MQTT resolving host 'f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud' TCP port 8883

## MQTT Broker Status

- Broker DNS ready, connected since 71 seconds
- Last publish 11 seconds ago

MQTT Logs: Outputs individual log messages about the connection setup.

MQTT Broker Status: Time information about connection duration, the last publish and the last keep-alive.

## 3.4 Clock

### 3.4.1 NTP


[NTP](#) · [Timer](#)

#### NTP


Enable Time Synchronization: ☒ yes ☐ no

Primary NTP server:  

· reply 12s ago, 59ms signal delay  
· Mon Oct 11 2021 13:49:46 GMT+0200 (Central European Summer Time)

Backup NTP server:  

#### Timezone:

Timezone:  

Daylight Saving Time (DST): ☒ yes ☐ no

#### Clock

Current Systemtime (UTC): 11:49:59 11.10.2021 (1633952999)

Current Localtime: 13:49:59 11.10.2021

Browstime: 13:49:58 11.10.2021

Set clock:

Enable Time Synchronization: Enables the NTP protocol.

Primary NTP server: IP address of the first NTP server.

Backup NTP server: IP address of the second NTP server. Used when the first NTP server does not respond.

Timezone: The set time zone for the local time.

Daylight Saving Time: If enabled, the local time is converted to Central European Sum-

mer Time.

set manually: The user can set a time manually.

set to Browsertime: Sets the time corresponding to web browser.



If Time synchronization is enabled, a manual time will be overwritten at the next NTP synchronization.

## 3.4.2 Timer

**Timer - Basic Settings**  
Enable Timer: ☒ yes ☐ no  
Syslog verbosity level: normal

**Timer - Rules**  

New Rule: simple Timer

New Rule: advanced Timer

Enable Timer: enables or disables all timers globally.

Syslog verbosity level: Sets the verbosity level for timer syslog output.

New Rule simple Timer: Shows a dialog for a simple timer rule.

New Rule advanced Timer: Brings up the dialog for advanced timer settings.

## 3.4.3 Timer Configuration

In the timer configuration you have three options: Create a simple timer, add a complex timer, or change an existing configuration.



Timer rules are only executed if the device has a valid time. See configuration NTP 51.



This instruction chapter applies to all Gude devices. For devices without switchable ports you can only create a complex timer. For an action there is only the register "Action CLI" available, and not the register "Action PortSwitch".

**Timer - Basic Settings**

Enable Timer: ☒ yes ☐ no

Syslog verbosity level:

**Timer - Rules**

New Rule: simple Timer

New Rule: advanced Timer

## Creating a simple timer

If you activate "New Rule: simple Timer" the following dialog is displayed:

**Timer Rule**

Switch

From  :  To  :

On weekdays: ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☐ Sat ☐ Sun

Save Cancel

You set here which port should be switched for which time period, and on which days of the week the rule is active. In this example the period 9:00 to 17:00 is changed to 9:30 to 11:00 compared to the default input mask. Also, this rule should not be applied on Saturday and Sunday. The rule we have now says that every day, except Saturday and Sunday, port 1 will be switched on at 9:30 and switched off after 1.5 hours. Clicking on "Save" saves this rule.

**Timer - Rules**

🕒 Rule 1: '1: Power Port' 09:30 On

🕒 Rule 2: '1: Power Port' 11:00 Off

New Rule: simple Timer

New Rule: advanced Timer

We have now created 2 rules, one for when the port is turned on and the second for when it is turned off.

## Creating a complex timer

If you create a complex timer or change an existing timer, you will always see an extended dialog:

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Hours: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Minutes: 00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59

Days: 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31

Month: 01 02 03 04 05 06 07 08 09 10 11 12

Days of week: Mon Tue Wed Thu Fri Sat Sun

Delete Save Cancel

You can see here the extended representation of the first rule of the simple timer from the previous example. The action is started every day of every month at 9:30. The weekdays Saturday and Sunday are excluded. An existing rule can be removed with the "Delete" button.



If a rule is deleted, the following rules move up. The numbering of the following rules also changes by one. This also applies to the index in the console commands.

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name: '1: Power Port' 09:30 On

Rule Valid from: to dd.mm.yyyy

Random Trigger Probability: 100

Random Trigger Jitter: 0 secs

enable trigger: ☒ yes ☐ no

Action mode: ☒ Switch Power Ports ☐ Perform CLI Cmd

Delete Save Cancel

A simple timer is "enabled" directly, a new complex timer has to be "enabled trigger" manually. You can set a probability and a jitter for the timer rules. Here the rule is executed with 100% probability. A jitter of 0 means that the action takes place exactly at the programmed time. As normal action mode ports are switched, alternatively a console command (CLI Cmd) can be executed.

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Switch Power Ports Action1:

On	On	On	On	On	On	On	On
Off	Off	Off	Off	Off	Off	Off	Off

Switch Power Ports Action2:

On	-	-	-	-	-	-	-
Off	-	-	-	-	-	-	-

Between Action1 and Action 2 : wait 0 hour(s)

Test Action

Delete Save Cancel

The switching function can be set in more detail on the "Action PortSwitch" register. Port 1 is switched on. You could extend the rule and switch more ports on or off. Additionally you can set a time for a batchmode in the field after "Between Action1 and Action 2 : wait", which starts "Action 2" after expired time. However, the batch mode has the disadvantage that it is not automatically restarted when the device is rebooted. Also, the port is locked against manual operation on the web page as long as the batch mode is running.



The "Action PortSwitch" function is only available for devices with switchable ports.

## Extending a rule

For demonstration purposes, here is an extension to the simple timer from the previous example:

Timer - Rule 1: '1: Power Port' 09:30 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Hours:

00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Minutes:

00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59

Days:

01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Month:

01	02	03	04	05	06	07	08	09	10	11	12
----	----	----	----	----	----	----	----	----	----	----	----

Days of week:

Mon	Tue	Wed	Thu	Fri	Sat	Sun
-----	-----	-----	-----	-----	-----	-----


Delete Save Cancel


The action is now started not only at 9:30, but also at 17:30 There are other changes: The timer is only active between October and December, also the action does not take place on the first day of a month.




Since all fields in the mask are always considered, it is not possible to define the times 9:30 and 17:10 in a single timer rule. You need a second rule for this. If you set the hours 9 and 17, as well as the minutes 10 and 30, then the four times 9:10, 9:30, 17:10 and 17:30 would be programmed.

# Configuration


 To change a field in this input mask without changing the state of the other fields, the Ctrl key must be pressed during the mouse click.

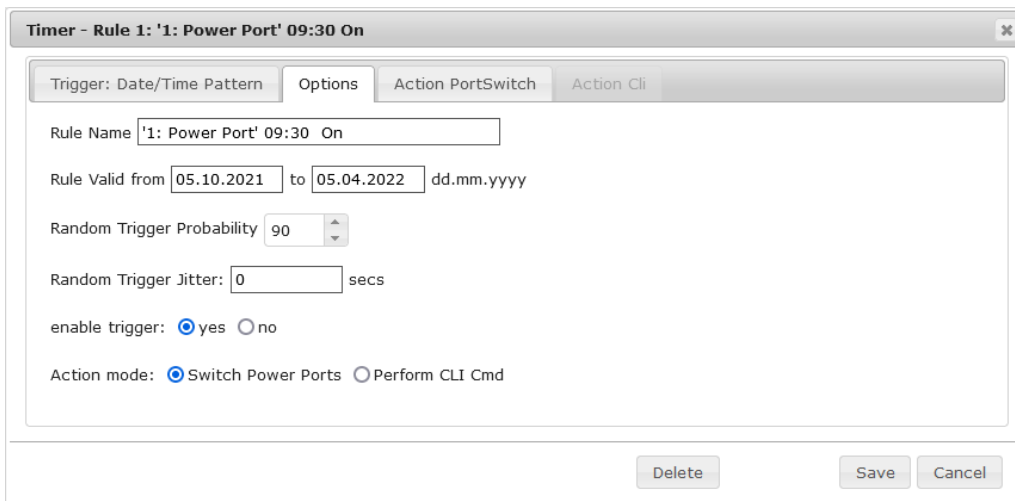

For this rule, on the "Options" tab, the time period is limited to the range between 5.10.2021 and 5.4.2022. In this example, the timer rule is only executed with a probability (Random Trigger Probability) of 90%.

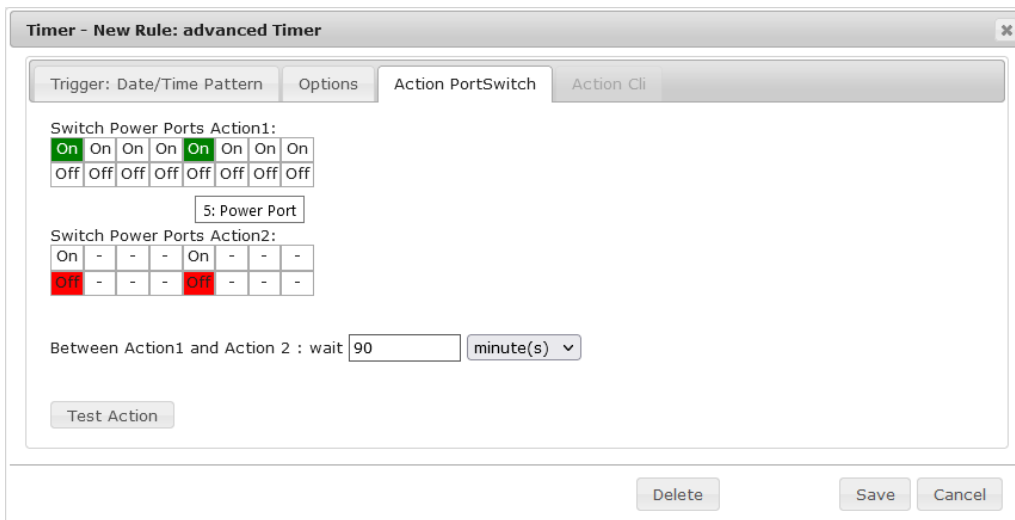

In this example, port 1 and port 5 are enabled and disabled after 90 minutes by batch mode.

 A popup on the mouse pointer shows the port number of the field.

## Console Commands



Timer - New Rule: advanced Timer

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Perform CLI Command:

```
port 1 reset
port 3 state set 1
```

31/64

Test Action

Delete Save Cancel

Instead of switching a port, one or more console commands can be executed. These commands are entered in the "Action CLI" register. The "Action Cli" tab can only be selected if the option "Perform CLI Cmd" is activated in "Options".

## Example Switching a Port on a Date

If you want to switch on a timer on a certain date at a certain time and switch it off at a later time, you cannot do it directly with a simple timer. Therefore it can be useful to create the timer as a simple timer first, and then customize it in the advanced dialog.

Timer Rule

Switch 3: Power Port On

From 09:25 To 17:30

On weekdays: ☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

Save Cancel

Switch port 3 on every day at 9:25, and off again at 17:30. You save.

Timer - Rule 4: '3: Power Port' 09:25 On

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name '3: Power Port' 09:25 On

Rule Valid from 24.10.2021 to 24.10.2021 dd.mm.yyyy

Random Trigger Probability 100

Random Trigger Jitter: 0 secs

enable trigger: ☒ yes ☐ no

Action mode: ☒ Switch Power Ports ☐ Perform CLI Cmd

Delete Save Cancel

Then call up the two timer rules you created ("On" and "Off") and enter the date on which the switching operation is to take place in the "Options" tab.

## Example blind control

Timer - New Rule: advanced Timer

Trigger: Date/Time Pattern Options Action PortSwitch Action Cli

Rule Name: Random Trigger Port 1

Rule Valid from: to: dd.mm.yyyy

Random Trigger Probability: 100

Random Trigger Jitter: 1800 secs

enable trigger: ☐ yes ☒ no

Action mode: ☒ Switch Power Ports ☐ Perform CLI Cmd

Delete Save Cancel

You can use the jitter e.g. for a shutter control. In the classic example of a shutter control, you do not always want to raise and lower the shutters at the same time in order to confuse potential burglars. The jitter of 1800 seconds means that the action is executed randomly in a period between 30 minutes before and 30 minutes after the programmed time. The probability (Random Trigger Probability) of execution here is 100%.

⚙ Further examples can be found at [www.gude.info/wiki/timer](http://www.gude.info/wiki/timer)

## 3.5 Sensors

[Power Ports](#) · [Ethernet](#) · [GSM](#) · [Protocols](#) · [Clock](#) · [Sensors](#) · [E-Mail](#) · [Front Panel](#)

**Sensors Config**

Sensor:

1: 7106 - 7106 ▾

Sensor Name:

7106

Select Sensor Field:

Temperature (°C) ▾

Enable 'Temperature' Messages:

☒ yes ☐ no

Maximum value:

30.0 °C

Minimum value:

10.0 °C

Hysteresis:

0.1 °C

Message channels:

☒ Syslog ☐ SNMP ☐ Email ☐ Console

SMS - user1: 0155555555

SMS - user2: 0155555556

☐ SMS:

☐ GSM Email ☐ Beeper:

Beeper mode : continous ▾

☐ Flashing display

When above Max value:

Switch port 1: Power Port ▾ to Off ▾

When below Max value:

Switch port 1: Power Port ▾ to On ▾

When above Min value:

Switch port 2: Power Port ▾ to On ▾

When below Min value:

Switch port 2: Power Port ▾ to Off ▾

Console push-messages:

every time interval of ▾ seconds

**Misc sensor options**

Min/Max measurement period:

24 Hours ▾

Enable beeper for AC alarms:

☒ yes ☐ no

Enable beeper for sensor alarms:

☒ yes ☐ no

**Sensor:** Selects a type of sensor to configure it. The first digit "1" indicates the number of the sensor port (only important for devices with more than one sensor port). This is followed by the sensor name, and the changeable sensor name.

**Sensor Name:** Changeable name for this sensor. Temperature and humidity can have different names, even if they are from the same sensor.

**Select Sensor Field:** Selects a data channel from a sensor.

**Enable ... Messages:** Enables the generation of sensor messages.

**Maximum/Minimum value:** Here you can choose whether, and at what Maximum/Minimum temperature or humidity measurements limits the alerts are send via SNMP traps, syslog or e-mail.

**Hysteresis:** This describes the margin of when an event is generated after the measured value has crossed the chosen limit.

**Message channels:** Enables the generation of messages on different channels. If you activate SMS messages, several recipients can be selected from the phonebook (**only EPC 1292**). In this example screenshot the recipient "user1" is enabled, SMS sending for "user2" is disabled.

With the beeper you can choose between a continuous or an intermittent tone. With Flashing Display the 7-segment display flashes. By pressing a front panel button the beeper and the flashing display will be reset.

Console push-messages: This option allows the output of sensor values on the console at a configured time interval, or when a certain threshold has been reached.

Min/Max measurement period: Selects the time range for the sensor min/max values on the overview web page.

## Hysteresis Example:

A Hysteresis value prevents that too much messages are generated, when a sensor value is jittering around a sensor limit. The following example shows the behavior for a temperature sensor and a hysteresis value of "1". An upper limit of "50 °C" is set.

Example:

49.9 °C - is below the upper limit

50.0 °C - a message is generated for reaching the upper limit

50.1 °C - is above the upper limit

...

49.1 °C - is below the upper limit, but in the hysteresis range

49.0 °C - is below the upper limit, but in the hysteresis range

48.9 °C - a message is generated for underrunning the upper limit inclusive hysteresis range


...

### 3.5.1 Port Switching

Depending on the measured Current and the measured sensor values, switching actions can be triggered. During operation, the actions configured for crossing the limits are executed. For example, when a value moves from the range "above max value" inside the range "below max value", the action defined for "below max value" is performed. In the case of device start, configuration or plug-in of the sensor, the actions corresponding to the range in which the current temperature is located are switched.

Example with "Maximum value" of 65 °C, "Minimum value" of 25 °C and hysteresis of 3 °C. The dotted line shows the hysteresis.

# Configuration

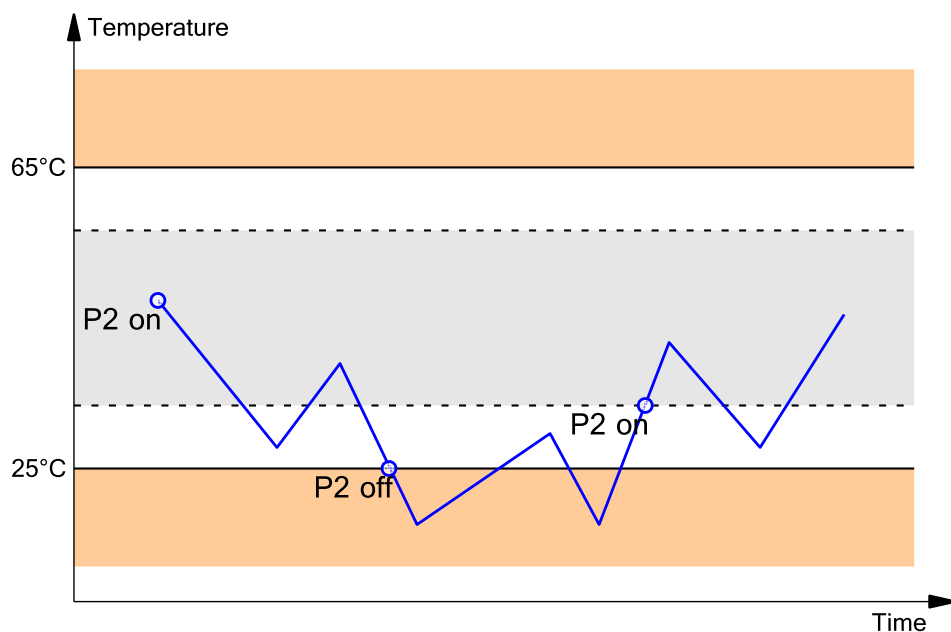

When above Max value: Switch port 1: Output Port to Off

When below Max value: Switch port 1: Output Port to On

When above Min value: Switch port 2: Output Port to On


When below Min value: Switch port 2: Output Port to Off

Actions during configuration, device start or plugging in the sensor (for given example):

actual temperature during configuration	actions
70 °C	Port 1 Off (above max) + Port 2 On (above min)
45 °C	Port 1 On (below max) + Port 2 On (above min)
20 °C	Port 1 On (below max) + Port 2 Off (below min)

Action matrix during operation when limit values are exceeded (for given example):

	to "above max"	to "below max"	to "above min"	to "below min"
from "above max"	-	P1 On	P1 On	P1 On + P2 Off
from "below max"	P1 Off	-	-	P2 Off
from "above min"	P1 Off	-	-	P2 Off
from "below min"	P1 Off + P2 On	P2 On	P2 On	-

 Only the switching operations for which actions have been defined, are triggered. If no "On" or "Off" action is defined for a port, the port can never reach this state by exceeding sensor values. Unless it is the initial state.

## 3.6 E-Mail

**E-Mail**

Enable E-Mail: ☒ yes ☐ no

Sender address:

Recipient address:

SMTP server:

SMTP server port:  (Default: 587)

SMTP Connection Security:

**Authentication**

SMTP Authentication (password):

Username:

Set new password:

Repeat password:

Enable E-Mail: Activates the E-Mail dispatch of messages.

Sender address: The E-Mail address of the sender.

Recipient address: The E-Mail address of the recipient. Additional E-Mail addresses, separated by comma, can be specified. The input limit is 100 characters.

SMTP Server: The SMTP IP-address of the E-Mail server. Either as FQDN, e.g: "mail.gmx.net", or as IP-address, e.g: "213.165.64.20". If required, attach a designated port, e.g: "mail.gmx.net:25".

SMTP server port: The port address of the E-Mail server. In the normal case this should be the same as the default, that is determined by the setting SMTP Connection Security.


SMTP Connection Security: Transmission via SSL or no encryption.

SMTP Authentication (password): Authentication method of the E-Mail Server.

Username: User name that is registered with the SMTP E-Mail server.

Set new password: Enter the password for the login to the E-Mail server.

Repeat password: Enter the password again to confirm it.

 If the password mask is redisplayed, only four "bullets" are shown as a symbolic placeholder, since for security reasons the password is never shown itself. If you want to change a password, the complete password must always be re-entered.

E-Mail Logs: Logging of E-Mail system messages.

## 3.7 Front Panel

**Front Panel**

Button Lock: ☐ yes ☒ no

Allow switching all ports: ☒ yes ☐ no

Display 1 default:

Apply

Button Lock: Disables the front buttons (activates the key lock) with the exception of the bootloader activation.

Allow switching all ports: Allows to switch all ports on or off with the front panel buttons.

Display 1 default: Selects what sensor is displayed in the display.

## 3.8 GSM

### 3.8.1 GSM General

[General](#) · [Misc](#) · [Phonebook](#) · [SIM-Card](#) · [Provider](#)

**Configuration - GSM**

Enable GSM: ☒ yes ☐ no

SIM PIN:

My phone number:

Admin SMS number:

Enable admin GSM status information: ☐ yes ☒ no

Enable admin GSM E-mail: ☒ yes ☐ no

Admin E-mail:

Enable DTMF/SMS access codes: ☒ yes ☐ no

Master code:

*Power Port individual Authentication codes*

Apply

Enable GSM: Activates the built-in GSM module

SIM PIN: Switches the PIN request of the SIM card on. A wrong Pin leads to a blocking of the SIM card. You **cannot** change the PIN of the SIM card via this menu option.

My phone number: Please enter here the phone number of the inserted SIM card

Admin SMS number: All device changes are sent via SMS to this mobile number.

Enable admin GSM status information: When active, all GSM status changes are sent via SMS to the Admin.

Enable admin GSM E-mail: When active, all GSM status changes are sent via E-Mail to the Admin. The e-mails are sent via the SMS to email gateway.

Admin E-mail: Email address to which the GSM messages are sent.

Enable DTMF/SMS access codes: When activated, the Mastercode or Portcode is needed to switch a port.

Master code: Sets the GSM Mastercode.

## 3.8.2 GSM Misc

General · Misc · Phonebook · SIM-Card · Provider

**Configuration - GSM Misc**

Enable phonebook check:

☐ yes ☒ no

Enable freecall:

☐ yes ☒ no

Enable GSM for admin only:

☐ yes ☒ no

Enable SMS response:

☒ yes ☐ no

Enable SMS errors/warning:

☒ yes ☐ no

Enable coverage messages:

☐ yes ☒ no

Enable port name indication:

☐ yes ☒ no

Enable autosync SMS:

☐ yes ☒ no

Enable voice in voice call:

☒ yes ☐ no

machine-to-machine DTMF tones:

☐ yes ☒ no

Apply

Enable phonebook check: If selected, only numbers registered to the phonebook can access the GSM module. All other numbers are ignored.

Enable freecall: When active, without accumulating phone charges, the functions assigned to a dialed number can be triggered.

Enable GSM for admin only: If enabled, the GSM functions can only be used when activated from the entered GSM Admin number.

Enable SMS response: When activated, every command SMS is acknowledged from an answer SMS.

Enable SMS errors/warning: Enables the sending of an error SMS when a defective command SMS was received.

Enable coverage messages: Sends status messages, when the signal quality is changing.

Enable port name indication: If selected, the complete portname is sent via SMS. E.g., instead of "Port 1" the name "server 1. floor". This can lead to longer SMS with higher costs.

Enable autosync SMS: When this options is enabled, the EPC tries to request date and



time information from the GSM network after power-up.

Enablevoice in voice call: If enabled, you hear voice samples when a call is coming in (Voicecall).

machine-to-machine DTMF tones: Enables DTMF tones in voice steering.

### 3.8.3 GSM Phonebook

[General](#) · [Misc](#) · [Phonebook](#) · [SIM-Card](#) · [Provider](#)

**Configuration - GSM Phonebook**

Name	Phone Number	FreeCall		
user1	0155555555		<input type="button" value="edit"/>	<input type="button" value="delete"/>
user2	0155555556		<input type="button" value="edit"/>	<input type="button" value="delete"/>
<input type="text"/>	<input type="text"/>	Powerport 1 ▾ None ▾	<input type="button" value="Ok"/>	<input type="button" value="Cancel"/>

Up to 20 telephone numbers with names can be stored in the telephone book. If the phone book is activated, only the numbers stored there can access the device.

Furthermore, the "FreeCall" option can be assigned to every number in the phone book. If this number is recognized, a preselected action is executed without accepting the call.

An active "FreeCall" number cannot activate other functions via "Voicecall". If you want to use the voice menu with a "FreeCall" number, you have to suppress the phone number.

### 3.8.4 GSM SIM Card

[General](#) · [Misc](#) · [Phonebook](#) · [SIM-Card](#) · [Provider](#)

**Configuration - SIM-Card**

The following wizard will guide you with mounting or changing the SIM-Card.

To enter a new SIM card, please press the button "Change GSM SIM-card".

## 3.8.5 GSM Provider

[General](#) · [Misc](#) · [Phonebook](#) · [SIM-Card](#) · [Provider](#)

**Configuration - GSM Provider**

IMSI:	<input type="text" value="26201"/>
SMS to Email Gateway:	<input type="text" value="8000"/>
Balance request code:	<input type="text" value="*100#"/>
Balance parsing string:	<input type="text" value="ihr guthaben"/>

Apply

This menu only appears when you insert a SIM card from a phone company that operates outside of Germany. To receive necessary information, contact your wireless service provider.

IMSI: Your IMSI number.

The International Mobile Subscriber Identity (IMSI) is used in GSM and UMTS mobile networks to uniquely identify network nodes (internal subscriber identity). Among other data, the IMSI is stored in a special smart card, the so-called SIM (Subscriber Identity Module). A worldwide unique IMSI number is awarded every customer of a mobile network. While the IMSI has nothing to do with the telephone number that is assigned to the SIM card.

SMS to Email Gateway: The number of the SMS to email gateway for your network provider.

Balance request code: Please enter the word that names the prepaid balance: e.g. "balance", "conto", "balances".

You will find this word in the news of your provider when you query your prepaid balance. The correct spelling is important to help the device recognizing whether the current balance is communicated in a message.

Balance parsing string: Enter the query that you send to your provider to access your prepaid balance: E.g. \*101#

# Specifications

## 4 Specifications

### 4.1 Automated Access

---

The device can be accessed automatically via four different interfaces, which offer different possibilities to access the configuration data and status information. Only http and the console (telnet and serial) provide full access to the device.



This chapter is general for all Gude devices. Depending on the device model are ports, certain sensors or other features not available.

List of different access options:

Interface	Scope of Access
HTTP	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
Console   79	read / write status of Power Ports (relays or eFuses) read / write all configuration data read / write all status information (full access to the device)
SNMP   72	read / write status of Power Ports (relays or eFuses) read / write names of Power Ports (relays or eFuses) read / write status of Port start configuration read / write status Buzzer read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read NTP time and status resetting the energy meters read the status of Overvoltage Protection
Modbus TCP   102	read / write status of Power Ports (relays or eFuses) read status of Inputs read / write configuration of power sources (EPC 8291) read / write fan configuration (EPC 8291) read measurement values of external sensors read measurement values of all energy sensors read the status of Overvoltage Protection
MQTT	Execute console commands

The device can be controlled via HTTP interface with CGI commands and returns the internal configuration and status in JSON format. The structure of the CGI commands and the JSON data is explained in more detail in our Wiki article:  
[http://wiki.gude.info/EPC\\_HTTP\\_Interface](http://wiki.gude.info/EPC_HTTP_Interface)

### 4.2 Messages

---

Depending on adjustable events, various messages can be sent from the device. The following message types are supported:

- Sending of e-mails
- SNMP Traps

- Syslog messages

## E-Mail messages

Email messages are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

## SNMP Traps

SNMP Traps are system messages that are sent via the SNMP protocol to different recipients. SNMP traps are triggered by the following events:

- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

## Syslog messages

Syslog messages are simple text messages that are sent via UDP to a syslog server. Under Linux, normally a syslog daemon is already running (eg. syslog-ng), for Microsoft Windows systems some freeware programs are available on the market. The syslog messages are sent for the following events:

- Turning on the device
- Enable/disable of syslog in the configuration
- Switching of the Ports
- Exceeding of the max / min values of attached sensors
- State change of digital sensor input ports

	SNMP Trap	Console	MQTT	Syslog	Email
<b>Global</b>					
Device started	x	x	x	x	x
Switch port	x	x	x	x	x
Port watchdog status	x	x	x	x	x
Syslog switched on/off				x	
MQTT connection established			x	x	
MQTT connection lost				x	
Over-Voltage-Protection Status	x	x	x	x	x
GSM network status	x	x	x	x	x
GSM incoming call	x	x	x	x	x
<b>Value-Threshold</b>					
external sensors Current	x	x	x	x	x
<b>Time-Interval</b>					
external sensors Current		x	x		
<b>Value-Delta</b>					
external sensors Current		x	x		

## SNMP traps

There are common traps for state changes of the same device resource. For example, a SwitchEvtPort trap is sent when a port is turned on or off. The state change itself is conveyed by the supplied data within the trap.

## MQTT published data

Messages on the MQTT channel are sent in JSON format.

Example switch a port: `{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}`

## Console Push Messages

Push messages can be activated on the console channels (Telnet, SSH or serial console), which output sensor values at timed intervals (every n seconds) or as of a configurable change in the magnitude of the sensor value on that channel. The generated message always starts with a "#" and ends with a CR/LF.

Example: Switch a port: `#port 2 ON`

If you open a telnet or SSH connection, the push messages are either preconfigured, or you switch on the push messages temporarily with "console telnet pushmsgs set 1" (or "console ssh pushmsgs set 1"). From now on, push messages will be sent asynchronously on this channel. The asynchronous nature of the messages can cause problems on a connection if you send commands yourself at the same time. There are then the possibilities:

- Filter all incoming characters between "#" and CR/LF
- or open a second channel (Telnet, SSH, serial) and switch on the push messages there.


## 4.3 IP ACL

### IP Access Control List

The IP Access Control List (ACL IP) is a filter for incoming IP packets. If the filter is active, only the hosts and subnets whose IP addresses are registered in the list, can contact via HTTP or SNMP, and make changes. For incoming connections from unauthorized PCs, the device is not completely transparent. Due to technical restraints, a TCP/IP connection will be accepted at first, but then rejected directly.

Examples:

Entry in the IP ACL	Meaning
192.168.0.123	the PC with IP Address "192.168.0.123" can access the device
192.168.0.1/24	all devices of subnet "192.168.0.1/24" can access the device
1234:4ef0:eec1:0::/64	all devices of subnet "1234:4ef0:eec1:0::/64" can access the device

 If you choose a wrong IP ACL setting and locked yourself out, please activate the Bootloader Mode and use GBL\_Conf.exe to deactivate the IP ACL. Alternatively, you can reset the device to factory default.

## 4.4 IPv6

---

### IPv6 Addresses

IPv6 addresses are 128 bit long and thus four times as long as IPv4 addresses. The first 64 bit form a so-called prefix, the last 64 bit designate a unique interface identifier. The prefix is composed of a routing prefix and a subnet ID. An IPv6 network interface can be reached under several IP addresses. Usually this is the case under a global address and the link local address.

### Address Notation

IPv6 addresses are noted in 8 hexadecimal blocks at 16 bit, while IPv4 normally is noted in decimal. The separator is a colon, not a period.

E.g.: 1234:4ef0:0:0:0019:32ff:fe00:0124

Leading zeros may be omitted within a block. The previous example can be rewritten as:

1234:4ef0:0:0:19:32ff:fe00:124

One may omit one or more successive blocks, if they consist of zeros. This may be done only once within an IPv6 address!

1234:4ef0::19:32ff:fe00:124

One may use the usual decimal notation of IPv4 for the last 4 bytes:

1234:4ef0::19:32ff:254.0.1.36

## 4.5 Radius

---

The passwords for HTTP, telnet, and serial console (depending on the model) can be stored locally and / or authenticated via RADIUS. The RADIUS configuration supports a primary server and a backup server. If the primary server does respond, the RADIUS request is sent to the backup server. If the local password and RADIUS are enabled at the same time, the system is first checking locally, and then in the event of a failure the RADIUS servers are contacted.

### RADIUS attributes

The following RADIUS attributes are evaluated by the client:

**Session-Timeout:** This attribute specifies (in seconds) how long an accepted RADIUS request is valid. After this time has elapsed, the RADIUS server must be prompted again. If this attribute is not returned, the default timeout entry from the configuration is used instead.

**Filter-Id:** If the value "admin" is set for this attribute, then an admin rights are assigned for the login, otherwise only user access.

**Service-Type:** This is an alternative to Filter-Id. A service type of "6" or "7" means ad-

min rights for the HTTP login, otherwise only limited user access.

## HTTP Login

The HTTP login takes place via Basic Authentication. This means that it is the responsibility of the web server, how long the login credentials are temporarily stored there. The RADIUS parameter "Session-Timeout" therefore does not determine when the user has to login again, but at what intervals the RADIUS servers are asked again.

## 4.6 SNMP

---

SNMP can be used for status information via UDP (port 161). Supported SNMP commands are:

- GET
- GETNEXT
- GETBULK
- SET

To query via SNMP you need a Network Management System, such as HP OpenView, OpenNMS, Nagios etc., or the simple command line tools of NET-SNMP software. The device supports SNMP protocols v1, v2c and v3. If traps are enabled in the configuration, the device messages are sent as notifications (traps). SNMP Informs are not supported. SNMP Requests are answered with the same version with which they were sent. The version of the sent traps can be set in the configuration.

### MIB Tables

The values that can be requested or changed by the device, the so-called "Managed Objects", are described in Management Information Bases (MIBs). These substructures are subordinate to so-called "OID" (Object Identifiers). An OID digit signifies the location of a value inside a MIB structure. Alternatively, each OID can be referred to with its symbol name (subtree name). The device's MIB table can be displayed as a text file by clicking on the link "MIB table" on the SNMP configuration page in the browser.

### SNMP v1 and v2c

SNMP v1 and v2c authenticates the network requests by so-called communities. The SNMP request has to send along the so-called community public for queries (read access) and the community private for status changes (write access). The SNMP communities are read and write passwords. In SNMP v1 and v2 the communities are transmitted unencrypted on the network and can be easily intercepted with IP sniffers within this collision domain. To enforce limited access we recommend the use of DMZ or IP-ACL.


### SNMP v3

Because the device has no multiuser management, only one user (default name "standard") is detected in SNMP v3. From the User-based Security Model (USM) MIB variables, there is a support of "usmStats ..." counter. The "usmUser ..." variables will be added with the enhancement of additional users in later firmware versions. The system has only one context. The system accepts the context "normal" or an empty context.




## Authentication

The algorithms "HMAC-MD5-96" and "HMAC-SHA-96" are available for authentication. In addition, the "HMAC-SHA-2" variants (RFC7630) "SHA-256", "SHA-384" and "SHA-512" are implemented.

 "SHA-384" and "SHA512" are calculated purely in software. If "SHA-384" or "SHA-512" is set on the configuration page, the time for the key generation may take once up to approx. 45 seconds.

## Encryption

The methods "DES", "3DES", "AES-128", "AES-192" and "AES-256" are supported in combination with "HMAC-MD5-96" and "HMAC-SHA-96." For the "HMAC-SHA-2" protocols, there is currently neither RFC nor draft that will allow for cooperation with an encryption.

 While in the settings "AES-192" and "AES256" the key calculation is based on "draft-blumenthalphoto-aes-usm-04", the methods "AES 192-3DESKey" and "AES 256-3DESKey" utilize a key generation, which is also used in the "3DES" configuration ("draft-reeder-snmpv3-usm-3desede-00"). If one is not an SNMP expert, it is recommended to try in each case the settings with and without "...- 3DESKey".

## Passwords


The passwords for authentication and encryption are stored only as computed hashes for security reasons. Thus it is, if at all, very difficult to infer the initial password. However, the hash calculation changes with the set algorithms. If the authentication or privacy algorithms are changed, the passwords must be re-entered in the configuration dialog.

## Security

The following aspects should be considered:

- If encryption or authentication is used, then SNMP v1 and v2c should be turned off. Otherwise the device could be accessed with it.
- If only authentication is used, then the new "HMAC-SHA-2" methods are superior to the MD5 or SHA-1 hashing algorithms. Since only SHA-256 is accelerated in hardware, and SHA-384 and SHA-512 are calculated purely in software, one should normally select SHA-256. From a cryptographic point of view, the security of SHA-256 is sufficient for today's usage.
- For SHA-1, there are a little less attack scenarios than MD5. If in doubt, SHA-1 is preferable.
- Encryption "DES" is considered very unsafe, use only in an emergency for reasons of compatibility!
- For cryptologists it's a debatable point whether "HMAC-MD5-96" and "HMAC-SHA-96" can muster enough entropy for key lengths of "AES-192" or "AES-256".
- From the foregoing considerations, we would recommended at present "HMAC-SHA-96" with "AES-128" as authentication and encryption method.

## Change in Trap Design

 In older MIB tables, a separate trap was defined for each combination of an event and a port number. This results in longer lists of trap definitions for the devices. For example, from **epc8221SwitchEvtPort1** to **epc8221SwitchEvtPort12**. Since new firmware versions can generate many more different events, this behavior quickly produces several hundred trap definitions. To limit this overabundance of trap definitions,

the trap design has been changed to create only one specific trap for each event type. The port or sensor number is now available in the trap as an index OID within the variable bindings.

In order to recognize this change directly, the "Notification" area in the MIB table has been moved from sysObjectID.0 to sysObjectID.3. This way, unidentified events are generated until the new MIB table is imported. For compatibility reasons, SNMP v1 traps are created in the same way as before.

## NET-SNMP

NET-SNMP provides a very widespread collection of SNMP command-line tools (snmpget, snmpset, snmpwalk etc.) NET-SNMP is among others available for Linux and Windows. After installing NET-SNMP you should create the device-specific MIB of the device in NET-SMP share directory, e.g. after

```
c:\usr\share\snmp\mibs
```

or

```
/usr/share/snmp/mibs
```

So later you can use the 'subtree names' instead of OIDs:

```
Name: snmpwalk -v2c -mALL -c public 192.168.1.232 gudeads
```

```
OID: snmpwalk -v2c -mALL -c public 192.168.1.232 1.3.6.1.4.1.28507
```

## NET-SNMP Examples

Query Power Port 1 switching state:

```
snmpget -v2c -mALL -c public 192.168.1.232 epc822XPortState.1
```

Switch on Power Port 1:

```
snmpset -v2c -mALL -c private 192.168.1.232 epc822XPortState.1 integer 1
```

### 4.6.1 Device MIB 1202

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.43.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	Description	OID	Type	Acc.
epc1202TrapCtrl	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3	.43.1.1.1.1.0	Integer32	RW
epc1202TrapIPIndex	A unique value, greater than zero, for each receiver slot.	.43.1.1.1.2.1.1.x	Integer32	RO
epc1202TrapAddr	DNS name or IP address specifying one Trap receiver slot. A port can optionally be specified: 'name:port' An empty string disables this slot.	.43.1.1.1.2.1.2.x	OCTETS	RW
epc1202portNumber	The number of Relay Ports	.43.1.3.1.1.0	Integer32	RO
epc1202PortIndex		.43.1.3.1.2.1.1.x	Integer32	RO

# Specifications

	A unique value, greater than zero, for each Relay Port.			
epc1202PortName	.43.1.3.1.2.1.2.x	OCTETS	RW	
	A textual string containing name of a Relay Port.			
epc1202PortState	.43.1.3.1.2.1.3.x	INTEGER	RW	
	current state of a Relay Port			
epc1202PortSwitchCount	.43.1.3.1.2.1.4.x	Integer32	RO	
	The total number of switch actions occurred on a Relay Port. Does not count switch commands which will not switch the relay state, so just real relay switches are displayed here.			
epc1202PortStartupMode	.43.1.3.1.2.1.5.x	INTEGER	RW	
	set Mode of startup sequence (off, on , remember last state)			
epc1202PortStartupDelay	.43.1.3.1.2.1.6.x	Integer32	RW	
	Delay in sec for startup action			
epc1202PortRepowerTime	.43.1.3.1.2.1.7.x	Integer32	RW	
	Delay in sec for repower port after switching off			
epc1202PortResetDuration	.43.1.3.1.2.1.8.x	Integer32	RW	
	Delay in sec for turning Port on again after Reset action			
epc1202ActivePowerChan	.43.1.5.1.1.0	Unsigned32	RO	
	Number of supported Power Channels.			
epc1202PowerIndex	.43.1.5.1.2.1.1.x	Integer32	RO	
	Index of Power Channel entries			
epc1202ChanStatus	.43.1.5.1.2.1.2.x	Integer32	RO	
	0 = data not active, 1 = data valid			
epc1202AbsEnergyActive	.43.1.5.1.2.1.3.x	Gauge32	RO	
	Absolute Active Energy counter.			
epc1202PowerActive	.43.1.5.1.2.1.4.x	Integer32	RO	
	Active Power			
epc1202Current	.43.1.5.1.2.1.5.x	Gauge32	RO	
	Actual Current on Power Channel.			
epc1202Voltage	.43.1.5.1.2.1.6.x	Gauge32	RO	
	Actual Voltage on Power Channel			
epc1202Frequency	.43.1.5.1.2.1.7.x	Gauge32	RO	
	Frequency of Power Channel			
epc1202PowerFactor	.43.1.5.1.2.1.8.x	Integer32	RO	
	Power Factor of Channel between -1.0 and 1.00			
epc1202Pangle	.43.1.5.1.2.1.9.x	Integer32	RO	
	Phase Angle between Voltage and L Line Current between -180.0 and 180.0			
epc1202PowerApparent	.43.1.5.1.2.1.10.x	Integer32	RO	
	L Line Mean Apparent Power			
epc1202PowerReactive	.43.1.5.1.2.1.11.x	Integer32	RO	
	L Line Mean Reactive Power			
epc1202AbsEnergyReactive	.43.1.5.1.2.1.12.x	Gauge32	RO	
	Absolute Reactive Energy counter.			
epc1202AbsEnergyActiveResettable	.43.1.5.1.2.1.13.x	Gauge32	RW	
	Resettable Absolute Active Energy counter. Writing '0' resets all resettable counter.			
epc1202AbsEnergyReactiveResettable	.43.1.5.1.2.1.14.x	Gauge32	RO	
	Resettable Absolute Reactive Energy counter.			
epc1202ResetTime	.43.1.5.1.2.1.15.x	Gauge32	RO	
	Time in seconds since last Energy Counter reset.			
epc1202ForwEnergyActive	.43.1.5.1.2.1.16.x	Gauge32	RO	
	Forward Active Energy counter.			
epc1202ForwEnergyReactive	.43.1.5.1.2.1.17.x	Gauge32	RO	
	Forward Reactive Energy counter.			
epc1202ForwEnergyActiveResettable	.43.1.5.1.2.1.18.x	Gauge32	RO	
	Resettable Forward Active Energy counter.			
epc1202ForwEnergyReactiveResettable	.43.1.5.1.2.1.19.x	Gauge32	RO	
	Resettable Forward Reactive Energy counter.			
epc1202RevEnergyActive	.43.1.5.1.2.1.20.x	Gauge32	RO	
	Reverse Active Energy counter.			
epc1202RevEnergyReactive	.43.1.5.1.2.1.21.x	Gauge32	RO	
	Reverse Reactive Energy counter.			
epc1202RevEnergyActiveResettable	.43.1.5.1.2.1.22.x	Gauge32	RO	
	Resettable Reverse Active Energy counter.			
epc1202RevEnergyReactiveResettable	.43.1.5.1.2.1.23.x	Gauge32	RO	
	Resettable Reverse Reactive Energy counter.			
epc1202LineSensorName	.43.1.5.1.2.1.100.x	OCTETS	RW	
	A textual string containing name of a Line Sensor			
epc1202OVPIIndex	.43.1.5.2.1.1.x	Integer32	RO	
	None			

# Specifications

epc1202OVPSStatus	shows the status of the built-in Overvoltage Protection	.43.1.5.2.1.2.x	INTEGER	RO
epc1202NTPTimeValid	Show if valid Time is received	.43.1.5.15.1.0	INTEGER	RO
epc1202NTPUnixTime	show received NTP time as unixtime (secs since 1 January 1970)	.43.1.5.15.2.0	Unsigned32	RO
epc1202NTPLastValidTimestamp	show seconds since last valid NTP timestamp received	.43.1.5.15.3.0	Unsigned32	RO
epc1202SensorIndex	None	.43.1.6.1.1.1.x	Integer32	RO
epc1202TempSensor	actual temperature	.43.1.6.1.1.2.x	Integer32	RO
epc1202HygroSensor	actual humidity	.43.1.6.1.1.3.x	Integer32	RO
epc1202InputSensor	logical state of input sensor	.43.1.6.1.1.4.x	INTEGER	RO
epc1202AirPressure	actual air pressure	.43.1.6.1.1.5.x	Integer32	RO
epc1202DewPoint	dew point for actual temperature and humidity	.43.1.6.1.1.6.x	Integer32	RO
epc1202DewPointDiff	difference between dew point and actual temperature (Temp - DewPoint)	.43.1.6.1.1.7.x	Integer32	RO
epc1202ExtSensorName	A textual string containing name of a external Sensor	.43.1.6.1.1.32.x	OCTETS	RW

## 4.6.2 Device MIB 1292

Below is a table of all device-specific OID 's which can be accessed via SNMP. In the numerical representation of the OID the prefix " 1.3.6.1.4.1.28507 " (Gude Enterprise OID) was omitted at each entry in the table to preserve space. The example for a complete OID would be "1.3.6.1.4.1.28507.50.1.1.1.1". A distinction is made in SNMP OID 's in between tables and scalars. OID scalar have the extension ".0" and only specify a value. In SNMP tables the "x" is replaced by an index (1 or greater) to address a value from the table.

Name	Description	OID	Type	Acc.
epc1292TrapCtrl	0 = off 1 = Ver. 1 2 = Ver. 2c 3 = Ver. 3	.50.1.1.1.1.0	Integer32	RW
epc1292TrapIPIndex	A unique value, greater than zero, for each receiver slot.	.50.1.1.1.2.1.1.x	Integer32	RO
epc1292TrapAddr	DNS name or IP address specifying one Trap receiver slot. A port can optionally be specified: 'name:port' An empty string disables this slot.	.50.1.1.1.2.1.2.x	OCTETS	RW
epc1292portNumber	The number of Relay Ports	.50.1.3.1.1.0	Integer32	RO
epc1292PortIndex	A unique value, greater than zero, for each Relay Port.	.50.1.3.1.2.1.1.x	Integer32	RO
epc1292PortName	A textual string containing name of a Relay Port.	.50.1.3.1.2.1.2.x	OCTETS	RW
epc1292PortState	current state of a Relay Port	.50.1.3.1.2.1.3.x	INTEGER	RW
epc1292PortSwitchCount	The total number of switch actions occurred on a Relay Port. Does not count switch commands which will not switch the relay state, so just real relay switches are displayed here.	.50.1.3.1.2.1.4.x	Integer32	RO
epc1292PortStartupMode	set Mode of startup sequence (off, on , remember last state)	.50.1.3.1.2.1.5.x	INTEGER	RW
epc1292PortStartupDelay	Delay in sec for startup action	.50.1.3.1.2.1.6.x	Integer32	RW
epc1292PortRepowerTime	Delay in sec for repower port after switching off	.50.1.3.1.2.1.7.x	Integer32	RW
epc1292PortResetDuration	Delay in sec for turning Port on again after Reset action	.50.1.3.1.2.1.8.x	Integer32	RW
epc1292ActivePowerChan	Number of supported Power Channels.	.50.1.5.1.1.0	Unsigned32	RO
epc1292PowerIndex	Index of Power Channel entries	.50.1.5.1.2.1.1.x	Integer32	RO
epc1292ChanStatus		.50.1.5.1.2.1.2.x	Integer32	RO

# Specifications

	0 = data not active, 1 = data valid			
epc1292AbsEnergyActive	Absolute Active Energy counter.	.50.1.5.1.2.1.3.x	Gauge32	RO
epc1292PowerActive	Active Power	.50.1.5.1.2.1.4.x	Integer32	RO
epc1292Current	Actual Current on Power Channel.	.50.1.5.1.2.1.5.x	Gauge32	RO
epc1292Voltage	Actual Voltage on Power Channel	.50.1.5.1.2.1.6.x	Gauge32	RO
epc1292Frequency	Frequency of Power Channel	.50.1.5.1.2.1.7.x	Gauge32	RO
epc1292PowerFactor	Power Factor of Channel between -1.0 and 1.00	.50.1.5.1.2.1.8.x	Integer32	RO
epc1292Pangle	Phase Angle between Voltage and L Line Current between -180.0 and 180.0	.50.1.5.1.2.1.9.x	Integer32	RO
epc1292PowerApparent	L Line Mean Apparent Power	.50.1.5.1.2.1.10.x	Integer32	RO
epc1292PowerReactive	L Line Mean Reactive Power	.50.1.5.1.2.1.11.x	Integer32	RO
epc1292AbsEnergyReactive	Absolute Reactive Energy counter.	.50.1.5.1.2.1.12.x	Gauge32	RO
epc1292AbsEnergyActiveResettable	Resettable Absolute Active Energy counter. Writing '0' resets all resettable counter.	.50.1.5.1.2.1.13.x	Gauge32	RW
epc1292AbsEnergyReactiveResettable	Resettable Absolute Reactive Energy counter.	.50.1.5.1.2.1.14.x	Gauge32	RO
epc1292ResetTime	Time in seconds since last Energy Counter reset.	.50.1.5.1.2.1.15.x	Gauge32	RO
epc1292ForwEnergyActive	Forward Active Energy counter.	.50.1.5.1.2.1.16.x	Gauge32	RO
epc1292ForwEnergyReactive	Forward Reactive Energy counter.	.50.1.5.1.2.1.17.x	Gauge32	RO
epc1292ForwEnergyActiveResettable	Resettable Forward Active Energy counter.	.50.1.5.1.2.1.18.x	Gauge32	RO
epc1292ForwEnergyReactiveResettable	Resettable Forward Reactive Energy counter.	.50.1.5.1.2.1.19.x	Gauge32	RO
epc1292RevEnergyActive	Reverse Active Energy counter.	.50.1.5.1.2.1.20.x	Gauge32	RO
epc1292RevEnergyReactive	Reverse Reactive Energy counter.	.50.1.5.1.2.1.21.x	Gauge32	RO
epc1292RevEnergyActiveResettable	Resettable Reverse Active Energy counter.	.50.1.5.1.2.1.22.x	Gauge32	RO
epc1292RevEnergyReactiveResettable	Resettable Reverse Reactive Energy counter.	.50.1.5.1.2.1.23.x	Gauge32	RO
epc1292LineSensorName	A textual string containing name of a Line Sensor	.50.1.5.1.2.1.100.x	OCTETS	RW
epc1292OVPIIndex	None	.50.1.5.2.1.1.x	Integer32	RO
epc1292OVPIStatus	shows the status of the built-in Overvoltage Protection	.50.1.5.2.1.2.x	INTEGER	RO
epc1292NTPTimeValid	Show if valid Time is received	.50.1.5.15.1.0	INTEGER	RO
epc1292NTPUnixTime	show received NTP time as unixtime (secs since 1 January 1970)	.50.1.5.15.2.0	Unsigned32	RO
epc1292NTPLastValidTimestamp	show seconds since last valid NTP timestamp received	.50.1.5.15.3.0	Unsigned32	RO
epc1292SensorIndex	None	.50.1.6.1.1.1.x	Integer32	RO
epc1292TempSensor	actual temperature	.50.1.6.1.1.2.x	Integer32	RO
epc1292HygroSensor	actual humidity	.50.1.6.1.1.3.x	Integer32	RO
epc1292InputSensor	logical state of input sensor	.50.1.6.1.1.4.x	INTEGER	RO
epc1292AirPressure	actual air pressure	.50.1.6.1.1.5.x	Integer32	RO
epc1292DewPoint	dew point for actual temperature and humidity	.50.1.6.1.1.6.x	Integer32	RO
epc1292DewPointDiff	difference between dew point and actual temperature (Temp -	.50.1.6.1.1.7.x	Integer32	RO

	DewPoint)			
epc1292ExtSensorName	.50.1.6.1.1.32.x	OCTETS	RW	
A textual string containing name of a external Sensor				

## 4.7 SSL

### TLS Standard

The device is compatible with TLS v1.1 to TLS v1.3 standards, but due to lack of security, SSL v3.0, TLS 1.0, and RC4, MD5, SHA1, and DES encryption are disabled. All ciphers use Diffie-Hellman key exchange (Perfect Forward Secrecy).

### TLS 1.3 performance

The interaction of TLS 1.3 and unsecure certificates and a web browser with Chromium Engine (Google Chrome or MS Edge) can lead to performance losses, and thus longer loading times. In this constellation, the Chromium Engine does not correctly support the SSL Session Cache (Session Tickets) and the math unit of the embedded CPU may be overwhelmed with continuous RSA operations. There are some possible workarounds:

- Use secure certificates (official certificate authority or marked as secure in the OS)
- or use of the Firefox browser
- or use of ECC 256 (no RSA) certificates
- or configure to "TLS v1.2 only"

### Creating your own Certificates

The SSL stack is supplied with a specially newly generated self-signed certificate. There is no function to generate the local certificate anew at the touch of a button, since the required random numbers in an embedded device are usually not independent enough. However, you can create new certificates and import them to the device. The server accepts RSA (2048/4096) and ECC (Elliptic Curve Cryptography) certificates.

Usually OpenSSL is used to create an SSL certificate. For Windows for example, there is the light version of Shining Light Productions. There you open a command prompt, change to the directory "C:\OpenSSL-Win32\bin" and set these environment variables:

```
set openssl_conf=C:\OpenSSL-Win32\bin\openssl.cfg
set RANDFILE=C:\OpenSSL-Win32\bin\.rnd
```

Here are some examples for the generation with OpenSSL:

#### Creation of a self-signed RSA 2048-bit certificate

```
openssl genrsa -out server.key 2048
openssl req -new -x509 -days 365 -key server.key -out server.crt
```

#### RSA 2048-bit certificate with Sign Request:

```
openssl genrsa -out server.key 2048
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```



The server keys should be created with "openssl genrsa". The Gude device processes keys in the traditional PKCS#1 format. This can be recognized by the fact that

the generated key file starts with "-----BEGIN RSA PRIVATE KEY-----". If the file starts with "-----BEGIN PRIVATE KEY-----", the file is in PKCS#8 format and the key is not recognized. If you have only a key in PKCS#8 format, you can convert it to PKCS#1 with openssl: "**openssl rsa -in pkcs8.key -out pkcs1.key**".

## ECC Certificate with Sign Request:

```
openssl ecparam -genkey -name prime256v1 -out server.key
openssl req -new -key server.key -out server.csr
openssl req -x509 -days 365 -key server.key -in server.csr -out server.crt
```

If you have created your key and certificate, both files are concatenated to one file:


Linux:

```
cat server.crt server.key > server.pem
```


Windows:

```
copy server.crt + server.key server.pem
```

The created server.pem can only be uploaded in the maintenance section of the device.

 If several certificates (Intermediate CRT's) should also be uploaded to the device, one should make sure, that firstly the server certificate and secondly the Intermediates are assembled , e.g:

```
cat server.crt IM1.crt IM2.crt server.key > server.pem
```

 An uploaded certificate will be preserved, when a device is put back to factory defaults<sup>23</sup>.

## Performance Considerations

If RSA 4096 certificates are used, the first access to the web server can take 8-10 seconds, because the math unit of the embedded CPU is highly demanded. After that, the parameters are in the SSL session cache, so all other requests are just as fast as with other certificate lengths. For a quick response even on the first access, we recommend RSA 2048-bit certificates that offer adequate security, too.

## 4.8 Console

---

For the configuration and control of the device, there is a set of commands with parameters that can be entered through a console. The console is available via Telnet, or for devices with RS232 port through using a serial terminal. It is not necessary to use Telnet, in **Raw Mode** a simple TCP/IP connection is sufficient to send commands. The communication can also be performed automated (e.g. via scripting languages). The console features are configured through the web interface<sup>45</sup>.

### Command Set

There are several command levels. The following commands are usable from each



level:

back	go back one level
help	all commands of the actual level
help all	show all commands
logout	logout (only when login required)
quit	quit console

The "help" command returns all the commands of the current level. If "help" is called from the top level, e.g. the line "http [subtopics]" appears. This means that there is another level for "http". With the command "http help" all commands below "http" are shown. Alternatively, with entering "http" you can select the http level, and "help" shows all the commands on the selected level. The command "back" again selects the top level. It is possible to use "help" at any position: "http passwd help" provides all commands that have the prefix "http passwd".

You will find a complete list of all possible device commands in the chapter "Cmd Overview".

## Parameter

If parameters are expected for the command, the parameter may be passed as numeric or constant. If e.g. you get the following line as help:

```
http server set {http_both=0|https_only=1|http_only=2}
```

the following instruction pairs are equivalent:

```
http server set https_only
http server set 1
```

or

```
http server set https_both
http server set 0
```

Numerical parameters can be entered with different bases. Here is an example of the decimal value 11:

Base	Input
decimal (10)	11
hexadecimal (16)	0xb
octal (8)	013
binary (2)	0b1011

## Bit Field Parameter

Some parameters can take several values at the same time. In the following example, all values between 0 and 5 can be set. In the help, this can be recognized by the fact that the values are not separated by the "|" character, but by commas.

```
"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"
```

To set EVT\_SYSLOG and EVT\_EMAIL in a command, you can use the following syntax:

```
>extsensor 1 2 0 events type set "EVT_SYSLOG,EVT_EMAIL"
OK.
```



or numeric

```
>extsensor 1 2 0 events type set "0,2"  
OK.
```

Additionally you can set all values with "ALLSET" or encode any bit pattern as hexadecimal with a syntax like "#7f1a".

## Return Values

If a command is unknown or a parameter is incorrect, the output "ERR." is given at the beginning of the line, followed by a description of the fault. Successful instructions without special return value will be acknowledged by "OK.". All other return values are output within a single line. There are of two exceptions:

1. Some configuration changes, that affect TCP / IP and UDP, need a restart to be applied. These parameters are output on two lines. In the first line the current value is shown, on the second row the value after a restart. In the "Cmd Overview" table this is marked with "Note 2".
2. Other configurations (such as the assigned IPv6 addresses) have several values that can change dynamically. This is marked with "Note 3" in the "Cmd Overview" table.

## Numerical Returns

For parameters that support constants, these constants are output as return values. To better deal with scripting languages, it may be easier to work only with numerical returns. The command "`vt100 numeric set ON`" enables that only numerical values appear.

## Comments


If you use a tool to send an entire file of commands via Telnet, it is helpful, if you can place comments in there. Beginning with the comment character "#", the remaining contents of a line is ignored.

## Telnet

If the configuration "Raw Mode" is turned off, it is tried to negotiate the Telnet configuration between client and server using IAC commands. If this fails, the editing functions are not active, and the "Activate echo" option determines whether the characters sent to the Telnet server will be returned. Normally the client begins with the IAC negotiation. If this is not the case with the client, the device configuration "Active negotiation" should be turned on.

## Raw Mode

If you want to use the console only automated, it may be advantageous to set the configuration "Raw mode" to "yes" and "Activate echo" to "no" to. Then there is no interfering interaction with the editor functions and there is no need to filter the sent characters to process the return values.

 If in the console "Raw mode" is activated but not in the used Telnet client, the IAC commands sent at the beginning can appear as interfering characters in the command

line (partially invisible).

## Editing

The following edit functions are available when the terminal supports VT100, and Raw Mode is deactivated. Entered characters are inserted at the cursor position.

Keys	Function
Left, Right	moves cursor left or right
Pos1, End	moves cursor to the beginning or end of line
Del	deletes character under the cursor
Backspace	deletes character left of cursor
Up, Down	shows input lines history
Tab, Ctrl-Tab	completes the word at cursor
Ctrl-C	clears the line

## Sensor Examples

### a) External Sensors

```
>extsensor all show
E=1,L="7106",0="21.3°C",1="35.1%",3="1013hPa",4="5.2°C",5="16.0°C"
E=2,L="7102",0="21.2°C",1="35.4%",4="5.3°C",5="15.9°C"
```

The command lists one connected external sensor per line, and the individual measured values are separated by commas after the label name. The digit before the equal sign corresponds to the Index field in the External Sensor Table.

```
>extsensor 1 0 value show
```

Displays temperature of the sensor at Port 1

### b) Line Sensors

```
>linesensor all "0,1,2,3,12" show
L=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
L=2,L="Power Port",0="13000Wh",1="0W",2="223V",3="0A",12="996199s"
```

This command outputs all line sensor values in one line. A list of all fields (according to the energy sensor table) is transferred as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>linesensor 1 "0,1,2,3,12" show
>linesensor 1 1 show
```

These variants give the sensor values of the field list or of a sensor at Line-In 1.



For devices with Overvoltage Protection, the "linesensor all" command also outputs the state of the protection ("OVP=x"). A "1" means ok, a "0" a failure of the protection.

### c) Port Sensors

```
>portsensor all "0,1,2,3,12" show
P=1,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
P=2,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="996199s"
```

```
...  
P=12,L="Power Port",0="13000Wh",1="0W",2="225V",3="0A",12="998218s"
```

This command outputs all port sensor values in one line. A list of all fields (according to the energy sensor table) is passed as parameter. In this example these are the fields Absolute Active Energy (0), Power Active (1), Voltage (2), Current (3) and Reset Time (12).

```
>portsensor 2 "0,1,2,3,12" show  
>portsensor 2 1 show
```

These variants give the sensor values of the field list or a sensor to at Outlet Port 2.

## d) Displaying Port Relays

```
>port all state 1 show  
P1=ON,P2=OFF,P3=ON,P4=OFF,P5=OFF,P6=OFF,P7=OFF,P8=ON
```

The command "port all state {MODE0=0|MODE1=1|MODE2=2} show" returns the switching state of all relays in 3 possible formats.

## e) Switching Port Relays

```
#port all state set "1,2,12" 1  
OK.
```

The command syntax "port all state set "{port\_list}" {OFF=0|ON=1}" sets a list of ports to ON=1 or OFF=0.

### 4.8.1 SSH

The device supports SSH-2 connections with either public key authentication or user name and password. The "login" must be enabled for SSH. Users and passwords can be stored locally or retrieved via a radius server. If you want to use SSH in a terminal, Activate echo should be enabled.

## Public Keys

RSA and ECDSA public keys are accepted.

# Specifications

Key

Public key for pasting into OpenSSH authorized\_keys file:

ssh-rsa AAAAB3NzaC1yc2EAAAABJQAAQEAKA926b1dwfApsq1ra3Hzw  
+tLSmdXuqglDgQ1Db7KLm16mqmzGoVBX6kmVWmx2XRucTUQohrVzvqAUp  
+38VtDLcTIXbtZS7i7WrqDdougl28k5Jx7JORpMuNGBLOsdPK5KNeYm9SPo8wltmD  
pc04U3r9unNjqTar2cXqui4XHdvFr0dByaaeR3yBWjv46uuXaia2T4p6Ou4Pkys0/b  
/AnBVSw2SeRNiVVoEAUx8eXrIRkvhrXZtzGaxK2xDE3l9Ziz//xt79o6V7yihO0ROuf1bit

Key fingerprint: ssh-rsa 2048 4b:4b:f9:b3:5f:9b:b7:f3:e5:40:cd:7c:70:df:af:86

Key comment: rsa-key-20201011

Key passphrase:

Confirm passphrase:

Actions

Generate a public/private key pair 

Generate

Load an existing private key file 

Load

Save the generated key 

Save public key

Save private key

Generated keys can be copied directly from e.g. putty gen,

Upload SSH public rsa key: 

ssh-rsa  
AAAAB3NzaC1yc2EAAA  
ABJQAAQEAKA926b1d

☐ Delete public key

and inserted into the Configuration - Console input field. Public keys are accepted in SSH2 or OpenSSH format.

## 4.8.2 Console Cmd 1202

Command	Description	Note
logout	go to login prompt when enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	shows if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	shows timezone	
clock dst enabled set {OFF=0 ON=1}	enables dst	
clock dst enabled show	shows if dst is enabled	
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually	
clock show	shows actual time and date	
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns_name}"	sets ntp server name	
clock ntp server {PRIMARY=0 BACKUP=1} show	shows ntp server name	
console	enters cmd group "console"	
console version	shows unique console version number	
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off	
console telnet enabled show	shows if telnet enabled	
console telnet port set {ip_port}	sets telnet port	
console telnet port show	shows telnet port	
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off	

# Specifications

console telnet raw show	shows if raw mode enabled	
console telnet echo set {OFF=0 ON=1}	enables echo on/off	
console telnet echo show	shows if echo enabled	
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off	
console telnet activeneg show	shows if active negotiation enabled	
console telnet login set {OFF=0 ON=1}	enables login on/off	
console telnet login show	shows if login enabled	
console telnet login local set {OFF=0 ON=1}	enables local login on/off	
console telnet login local show	shows if local login enabled	
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
console telnet login radius show	shows if RADIUS login enabled	
console telnet login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off	
console telnet login delay show	shows if login delay enabled	
console telnet pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console telnet pushmsgs config show	shows if persistent push msgs are enabled	
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console telnet pushmsgs show	shows if temporary push msgs are enabled	
console telnet user set "{username}"	sets login user name	
console telnet user show	shows login user name	
console telnet passwd set "{passwd}"	sets login password	
console telnet passwd hash set "{passwd}"	sets login hashed password	
console ssh enabled set {OFF=0 ON=1}	enables SSH	
console ssh enabled show	shows if SSH enabled	
console ssh port set {ip_port}	sets SSH port	
console ssh port show	shows SSH port	
console ssh echo set {OFF=0 ON=1}	enables echo on/off	
console ssh echo show	shows if echo enabled	
console ssh pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs	
console ssh pushmsgs config show	shows if persistent push msgs are enabled	
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs	
console ssh pushmsgs show	shows if temporary push msgs are enabled	
console ssh public hash set "{passwd}"	sets hash of SSH public key	
console ssh public hash show	shows hash of SSH public key	
email	enters cmd group "email"	
email enabled set {OFF=0 ON=1}	enables email on/off	
email enabled show	shows if email is enabled	
email sender set "{email_addr}"	sets email sender address	
email sender show	shows email sender address	
email recipient set "{email_addr}"	sets email recipient address	
email recipient show	shows email recipient address	
email server set "{dns_name}"	sets email SMTP server address	
email server show	shows email SMTP server address	
email port set {ip_port}	sets email SMTP port	
email port show	shows email SMTP port	
email security set {NONE=0 STARTTLS=1 SSL=2}	sets SMTP connection security	
email security show	shows SMTP connection security	
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication	
email auth show	show email authentication	
email user set "{username}"	sets SMTP username	
email user show	shows SMTP username	
email passwd set "{passwd}"	sets SMTP password	
email passwd hash set "{passwd}"	sets crypted SMTP password	
email testmail	send test email	
ethernet	enters cmd group "ethernet"	
ethernet mac show	shows MAC address	
ethernet link show	shows ethernet link state	
ethernet phyprefer set {10MBIT_HD=0 10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3}	sets preferred speed for PHY Auto Negotiation	
ethernet phyprefer show	shows preferred speed for PHY Auto Negotiation	
extsensor	enters cmd group "extsensor"	
extsensor all show	shows all values from connected external sensors	
extsensor all show	shows all plugged sensors and fields	
extsensor {port_num} {sen_field} value show	shows sensor value	6
extsensor {port_num} {sen_type} label set "{name}"	sets sensor name to label	6
extsensor {port_num} {sen_type} label show	shows label of sensor	6
extsensor {port_num} type show	shows type of sensor	
extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1}	enables sensor events on/off	6
extsensor {port_num} {sen_type} {sen_field} events show	shows if sensor events are enabled	6
extsensor {port_num} {sen_type} {sen_field}	enables different event types	6

# Specifications

events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2 ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"		
extsensor {port_num} {sen_type} {sen_field}	shows what event types are enabled	6
events type show		
extsensor {port_num} {sen_type} {sen_field}	sets maximum value for sensor	6
maxval set {num}		
extsensor {port_num} {sen_type} {sen_field}	shows maximum value for sensor	6
maxval show		
extsensor {port_num} {sen_type} {sen_field}	sets minimum value for sensor	6
minval set {num}		
extsensor {port_num} {sen_type} {sen_field}	shows minimum value for sensor	6
minval show		
extsensor {port_num} {sen_type} {sen_field} hyst set {num}	sets hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst show	shows hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field}	sets publish mode	
publish mode set {NONE=0 INTERVAL=1  DELTA=2 INTERV_DELTA=3}		
extsensor {port_num} {sen_type} {sen_field}	shows publish mode	
publish mode show		
extsensor {port_num} {sen_type} {sen_field}	sets mqtt retain	
publish mqtt retain set {OFF=0 ON=1}		
extsensor {port_num} {sen_type} {sen_field}	shows if mqtt retain set	
publish mqtt retain show		
extsensor {port_num} {sen_type} {sen_field}	sets publish time interval	
publish timer set {num_secs}		
extsensor {port_num} {sen_type} {sen_field}	shows publish time interval	
publish timer show		
extsensor {port_num} {sen_type} {sen_field}	sets publish delta value	
publish delta set {float}		
extsensor {port_num} {sen_type} {sen_field}	shows publish delta value	
publish delta show		
extsensor {port_num} {sen_type} {sen_field}	sets Port for Power Port Switching actions	6
{BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port set {port_num}		
extsensor {port_num} {sen_type} {sen_field}	shows Port for Power Port Switching actions	6
{BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port show		
extsensor {port_num} {sen_type} {sen_field}	sets Port state for Power Port Switching actions	6
{BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state set {OFF=0 ON=1  DISABLED=2}		
extsensor {port_num} {sen_type} {sen_field}	shows Port state for Power Port Switching actions	6
{BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state show		
extsensor period set {24H=0 12H=1 2H=2 1H=3  30MIN=4}	sets sensor Min/Max measurement period	
extsensor period show	shows sensor Min/Max measurement period	
http	enters cmd group "http"	
http server set {HTTP_BOTH=0 HTTPS_ONLY=1  HTTP_ONLY=2 HTTPS_REDIR=3}	sets accepted connection types	
http server show	shows accepted connection types	
http port set {ip_port}	sets http port	
http port show	shows http port	
http portssl set {ip_port}	sets https port	
http portssl show	shows https port	
http tls mode set {TLS12=0 TLS13_12=1  TLS13=2 TLS13_12_11=3}	restricts TLS mode	
http tls mode show	shows TLS mode restriction	
http ajax enabled set {OFF=0 ON=1}	enables ajax autorefresh on/off	
http ajax enabled show	shows if ajax autorefresh enabled	
http passwd enabled set {OFF=0 ON=1}	enables http password on/off	
http passwd enabled show	shows if http password enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	shows if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show	shows if RADIUS login enabled	
http passwd user set "{passwd}"	sets http user password	
http passwd admin set "{passwd}"	sets http admin password	
http passwd hash user set "{passwd}"	sets hashed http user password	
http passwd hash admin set "{passwd}"	sets hashed http admin password	

# Specifications

ip4	enters cmd group "ip4"	
ip4 hostname set "{name}"	sets device hostname	
ip4 hostname show	shows device hostname	3
ip4 address set "{ip_address}"	sets IPv4 address	
ip4 address show	shows IPv4 address	3
ip4 netmask set "{ip_address}"	sets IPv4 netmask	
ip4 netmask show	shows IPv4 netmask	3
ip4 gateway set "{ip_address}"	sets IPv4 gateway address	
ip4 gateway show	shows IPv4 gateway address	3
ip4 dns set "{ip_address}"	sets IPv4 DNS server address	
ip4 dns show	shows IPv4 DNS server address	3
ip4 dhcp enabled set {OFF=0 ON=1}	enables IPv4 DHCP on/off	
ip4 dhcp enabled show	shows IPv4 DHCP state	3
ip6	enters cmd group "ip6"	
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	shows if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1}	enables IPv6 router advertisement	
ip6 routadv enabled show	shows IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1}	enables IPv6 DHCP on/off	
ip6 dhcp enabled show	shows if IPv6 DHCP is enabled	3
ip6 address show	show all IPv6 addresses	4
ip6 gateway show	show all IPv6 gateways	4
ip6 dns show	show all IPv6 DNS server	4
ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	
ip6 manual enabled show	shows if manual IPv6 addresses are enabled	3
ip6 manual address {1..4} set "{ip_address}"	sets manual IPv6 address	
ip6 manual address {1..4} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}"	sets manual IPv6 gateway address	
ip6 manual gateway show	shows manual IPv6 gateway address	3
ip6 manual dns {1..2} set "{ip_address}"	sets manual IPv6 DNS server address	
ip6 manual dns {1..2} show	shows manual IPv6 DNS server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter {ipacl_num} set "{dns_name}"	sets IP filter {ipacl_num}	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
linesensor	enters cmd group "linesensor"	
linesensor all {field_list} show	shows energy sensors according field list of all line sensors	5
linesensor {line_num} {field_list} show	shows energy sensors according field list of one line sensor	5
linesensor {line_num} {energy_sensor} value show	shows energy sensor of given line	5
linesensor {line_num} ovp show	show state of Overvoltage Protection	
linesensor {line_num} counter reset	resets energy metering counter	
linesensor {line_num} label set "{name}"	sets line meter to label	
linesensor {line_num} label show	shows label of line meter	
linesensor {line_num} {energy_sensor} events set {OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events show	shows if events are enabled	
linesensor {line_num} {energy_sensor} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}"	enables different event types	
linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
linesensor {line_num} {energy_sensor} maxval set {float}	sets maximum value for line meter	
linesensor {line_num} {energy_sensor} maxval show	shows maximum value for line meter	
linesensor {line_num} {energy_sensor} minval set {float}	sets minimum value for line meter	
linesensor {line_num} {energy_sensor} minval show	shows minimum value for line meter	
linesensor {line_num} {energy_sensor} hyst set {float}	sets hysteresis value for line meter	
linesensor {line_num} {energy_sensor} hyst show	shows hysteresis value for line meter	
linesensor {line_num} {energy_sensor} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish	shows publish mode	



# Specifications

mode show		
linesensor {line_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
linesensor {line_num} {energy_sensor} publish mqtt retain show	shows if mqtt retain set	
linesensor {line_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	shows publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish delta show	shows publish delta value	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port show	shows Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state show	shows Port state for Power Port Switching actions	
linesensor {line_num} events set {OFF=0 ON=1}	LEGACY - enables events on/off	L
linesensor {line_num} events show	LEGACY - shows if events are enabled	L
linesensor {line_num} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8}"	LEGACY - enables different event types	L
linesensor {line_num} events type show	LEGACY - shows what event types are enabled	L
linesensor {line_num} maxval set {float}	LEGACY - sets maximum value for line meter	L
linesensor {line_num} maxval show	LEGACY - shows maximum value for line meter	L
linesensor {line_num} minval set {float}	LEGACY - sets minimum value for line meter	L
linesensor {line_num} minval show	LEGACY - shows minimum value for line meter	L
linesensor {line_num} hyst set {float}	LEGACY - sets hysteresis value for line meter	L
linesensor {line_num} hyst show	LEGACY - shows hysteresis value for line meter	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port set {port_num}	LEGACY - sets Port for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} port show	LEGACY - shows Port for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	LEGACY - sets Port state for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2 BELOWMAX=3} state show	LEGACY - shows Port state for Power Port Switching actions	L
modbus	enters cmd group "modbus"	
modbus enabled set <off=0/on=1>	enables Modbus TCP support	
modbus enabled show	shows if Modbus is enabled	
modbus port set <ip_port>	sets Modbus TCP port	
modbus port show	shows Modbus TCP port	
mqtt	enters cmd group "mqtt"	
mqtt {broker_idx} enabled set {OFF=0 ON=1}	enable mqtt	
mqtt {broker_idx} enabled show	shows if mqtt enabled	
mqtt {broker_idx} server set "{dns_name}"	sets broker name	
mqtt {broker_idx} server show	shows broker name	
mqtt {broker_idx} tls enabled set {OFF=0 ON=1}	enable TLS	
mqtt {broker_idx} tls enabled show	shows if TLS enabled	
mqtt {broker_idx} port set {ip_port}	set broker TCP/IP port	
mqtt {broker_idx} port show	shows broker TCP/IP port	
mqtt {broker_idx} user set "{username}"	sets username	
mqtt {broker_idx} user show	shows username	
mqtt {broker_idx} passwd set "{passwd}"	sets password	
mqtt {broker_idx} passwd hash set "{passwd}"	sets hashed passwd	
mqtt {broker_idx} client set "{name}"	sets client name	
mqtt {broker_idx} client show	shows client name	
mqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level	
mqtt {broker_idx} qos show	shows QoS level	
mqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time	



# Specifications

mqtt {broker_idx} keepalive show	shows keep-alive time
mqtt {broker_idx} topic set "{name}"	sets topic prefix
mqtt {broker_idx} topic show	shows topic prefix
mqtt {broker_idx} console enabled set {OFF=0 ON=1}	permit console cmds
mqtt {broker_idx} console enabled show	shows if console cmds allowed
mqtt {broker_idx} device data timer set {num_secs}	sets telemetry interval
mqtt {broker_idx} device data timer show	shows telemetry interval
port	enters cmd group "port"
port {port_num} state set {OFF=0 ON=1}	sets port to new state
port {port_num} state show	shows port state
port all state set "{port_list}" {OFF=0 ON=1}	sets several ports in one cmd - e.g. port all state set "1,3,5" 1
port all state {MODE0=0 MODE1=1 MODE2=2} show	shows all port states in 3 different view modes 4
port all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	switch all ports on/off forward or reverse
port restart all set {REINIT=0 OFF_REV_REINIT=1,OFF_REINIT=2}	reinit coldstart sequence (optional first all off)
port {port_num} reset	start reset sequence for port
port {port_num} toggle	toggles port
port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1}	starts batch mode for port
port {port_num} batch cancel	cancels batch mode
port {port_num} label set "{name}"	sets port label name
port {port_num} label show	shows port label name
port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2}	sets port coldstart initialization
port {port_num} initstate coldstart show	shows port coldstart initialization
port {port_num} initstate delay set {num}	sets port init delay
port {port_num} initstate delay show	shows port init delay
port {port_num} repowerdelay set {num}	sets port repower delay
port {port_num} repowerdelay show	shows port repower delay
port {port_num} resettime set {num}	sets port reset duration
port {port_num} resettime show	shows port reset duration
port {port_num} watchdog enabled set {OFF=0 ON=1}	sets port watchdog to on/off
port {port_num} watchdog enabled show	shows port watchdog state
port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3}	sets port watchdog mode
port {port_num} watchdog mode show	shows port watchdog mode
port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1}	sets port watchdog type
port {port_num} watchdog type show	shows port watchdog type
port {port_num} watchdog link down set {OFF=0 ON=1}	sets if watchdog active when eth link down
port {port_num} watchdog link down show	shows if watchdog active when eth link down
port {port_num} watchdog host set "{dns_name}"	sets port watchdog host target
port {port_num} watchdog host show	shows port watchdog host target
port {port_num} watchdog port set {ip_port}	sets port watchdog TCP port
port {port_num} watchdog port show	shows port watchdog TCP port
port {port_num} watchdog pinginterval set {num}	sets port watchdog ping interval
port {port_num} watchdog pinginterval show	shows port watchdog ping interval
port {port_num} watchdog pingretries set {num}	sets port watchdog ping retries
port {port_num} watchdog pingretries show	shows port watchdog ping retries
port {port_num} watchdog retrybooting set {OFF=0 ON=1}	sets port watchdog retry booting to on/off
port {port_num} watchdog retrybooting show	shows port watchdog retry booting state
port {port_num} watchdog bootretries set {num}	sets port watchdog retry boot timeout
port {port_num} watchdog bootretries show	shows port watchdog retry boot timeout
radius	enters cmd group "radius"
radius {PRIMARY=0 SECONDARY=1} enabled set <off=0/on=1>	enables radius client
radius {PRIMARY=0 SECONDARY=1} enabled show	show if radius client enabled
radius {PRIMARY=0 SECONDARY=1} server set "<dns_name>"	sets radius server address
radius {PRIMARY=0 SECONDARY=1} server show	shows radius server address
radius {PRIMARY=0 SECONDARY=1} password set "{passwd}"	sets radius server shared secret
radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}"	sets radius server crypted shared secret
radius {PRIMARY=0 SECONDARY=1} auth	sets server request timeout

# Specifications

timeout set {num_secs}	
radius {PRIMARY=0 SECONDARY=1} auth	shows server request timeout
timeout show	
radius {PRIMARY=0 SECONDARY=1} retries set {0..99}	sets server number of retries
radius {PRIMARY=0 SECONDARY=1} retries show	shows server number of retries
radius chap enabled set <off=0/on=1>	enables CHAP
radius chap enabled show	shows if CHAP is enabled
radius message auth set <off=0/on=1>	enables request message authentication
radius message auth show	shows if request message authentication is enabled
radius default timeout set {num_secs}	sets default session timeout (when not returned as Session-Timeout Attribute)
radius default timeout show	shows default session timeout
snmp	enters cmd group "snmp"
snmp port set {ip_port}	sets SNMP UDP port
snmp port show	shows SNMP UDP port
snmp snmpget enabled set {OFF=0 ON=1}	enables SNMP GET cmds on/off
snmp snmpget enabled show	show if SNMP GET cmds are enabled
snmp snmpset enabled set {OFF=0 ON=1}	enables SNMP SET cmds on/off
snmp snmpset enabled show	show if SNMP SET cmds are enabled
snmp snmpv2 enabled set {OFF=0 ON=1}	enables SNMP v2 on/off
snmp snmpv2 enabled show	show if SNMP v2 is enabled
snmp snmpv2 public set "{text}"	enables SNMP v3 on/off
snmp snmpv2 public show	show if SNMP v3 is enabled
snmp snmpv2 private set "{text}"	sets SNMP v2 public community
snmp snmpv2 private show	shows SNMP v2 public community
snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	sets sysLocation/sysName/sysContact
snmp system {CONTACT=0 NAME=1 LOCATION=2} show	gets sysLocation/sysName/sysContact
snmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community
snmp snmpv3 enabled show	shows SNMP v2 private community
snmp snmpv3 username set "{text}"	sets SNMP v3 username
snmp snmpv3 username show	shows SNMP v3 username
snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5}	sets SNMP v3 authentication
snmp snmpv3 authalg show	show SNMP v3 authentication algorithm
snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm
snmp snmpv3 authpasswd set "{passwd}"	sets SNMP v3 authentication password
snmp snmpv3 privpasswd set "{passwd}"	sets SNMP v3 privacy password
snmp snmpv3 authpasswd hash set "{passwd}"	sets SNMP v3 authentication hashed password
snmp snmpv3 privpasswd hash set "{passwd}"	sets SNMP v3 privacy hashed password
snmp trap type set {NONE=0 V1=1 V2=2 V3=3}	sets type of SNMP traps
snmp trap type show	show SNMP trap type
snmp trap receiver {trap_num} set "{dns_name}"	sets address and port of SNMP trap receiver {trap_num}
snmp trap receiver {trap_num} show	show address and port of SNMP trap receiver {trap_num}
syslog	enters cmd group "syslog"
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off
syslog enabled show	show if syslog enabled
syslog server set "{dns_name}"	sets address of syslog server
syslog server show	shows address of syslog server
system	enters cmd group "system"
system restart	restarts device
system fabsettings	restore fab settings and restart device
system bootloader	enters bootloader mode
system flushdns	flush DNS cache
system uptime	number of seconds the device is running
system name show	shows device name
system version show	shows actual firmware version
system display {disp_num} default extsensor {port_num} {sen_type} set {sen_field}	shows external sensor
system display {disp_num} default linesensor {line_num} set {sen_field}	shows energy line sensor
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	shows other contents
system display {disp_num} default show	shows default setting for display
system display default hash set "{data}"	sets hashed display setting

# Specifications

system display default hash show	shows hashed display setting
system panel enabled set {OFF=0 ON=1}	blocks panel buttons when not enabled
system panel enabled show	shows if panel buttons are enabled
system panel port all set {OFF=0 ON=1}	enable siwtch all relays from panel buttons
system panel port all show	shows if siwtch all relays from panel buttons enabled
timer	enters cmd group "timer"
timer enabled set {OFF=0 ON=1}	enables timer functions
timer enabled show	shows if timer a enabled
timer syslog facility set {0..23}	sets facility level for timer syslog
timer syslog facility show	shows facility level for timer syslog
timer syslog verbose set {0..7}	sets verbose level for timer syslog
timer syslog verbose show	shows verbose level for timer syslog
timer {rule_num} enabled set {OFF=0 ON=1}	enables rule
timer {rule_num} enabled show	shows if rule is enabled
timer {rule_num} name set "{name}"	sets name of rule
timer {rule_num} name show	shows name of rule
timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-mm-dd}"	sets date range of rule
timer {rule_num} {FROM=0 UNTIL=1} show	shows date range of rule
timer {rule_num} trigger jitter set {0..65535}	sets jitter for rule
timer {rule_num} trigger jitter show	show jitter of rule
timer {rule_num} trigger random set {0..100}	sets probability for rule
timer {rule_num} trigger random show	shows rule probability
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	shows time date list
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets switch or cli cmd
timer {rule_num} action mode show	shows if switch or cli cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for switch cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	shows port list for switch cmd
timer {rule_num} action delay set {0..65535}	delay between cmds
timer {rule_num} action delay show	shows delay between cmds
timer {rule_num} action console set "{cmd}"	sets cmd string
timer {rule_num} action console show	shows cmd string
timer {rule_num} action hash set "{data}"	sets action binary form
timer {rule_num} action hash show	shows action binary form
timer {rule_num} delete	delete one timer
timer delete all	delete all timer
vt100	enters cmd group "vt100"
vt100 echo set {OFF=0 ON=1}	sets console echo state
vt100 echo show	shows console echo state
vt100 numeric set {OFF=0 ON=1}	sets numeric mode
vt100 numeric show	shows numeric mode state
vt100 reset	resets terminal

## Notes

1. Legacy - The command has been replaced by a newer version
2. Command can be entered on any level
3. The output may show 2 lines - the 1st line shows the actual state, the 2nd line the status after reboot
4. The output may show several lines
5. Please see the **Energy Sensor Table** for the right energy index
6. Please see the **External Type and External Sensor Field Tables** for the correct sensor index

## Energy Sensor Table "{energy\_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V

# Specifications

3	Current	A
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh
15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	A



Dependent on the device model Residual Current may not be supported

## External Sensor Type Table "{sen\_type}"

Constants "{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206

## External Sensor Field Table "{sen\_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

### 4.8.3 Console Cmd 1292

Command	Description	Note
logout	go to login prompt when enabled	2
quit	quits telnet session - nothing in serial console	2
back	back one cmd level	2
help	show all cmds from this level	2
help all	show all cmds	2
clock	enters cmd group "clock"	
clock ntp enabled set {OFF=0 ON=1}	enables ntp	
clock ntp enabled show	shows if ntp enabled	
clock timezone set {minutes}	sets timezone	
clock timezone show	shows timezone	

# Specifications

clock dst enabled set {OFF=0 ON=1}	enables dst
clock dst enabled show	shows if dst is enabled
clock manual set "{hh:mm:ss yyyy-mm-dd}"	sets time and date manually
clock show	shows actual time and date
clock ntp server {PRIMARY=0 BACKUP=1} set "{dns_name}"	sets ntp server name
clock ntp server {PRIMARY=0 BACKUP=1} show	shows ntp server name
console	enters cmd group "console"
console version	shows unique console version number
console telnet enabled set {OFF=0 ON=1}	enables telnet on/off
console telnet enabled show	shows if telnet enabled
console telnet port set {ip_port}	sets telnet port
console telnet port show	shows telnet port
console telnet raw set {OFF=0 ON=1}	sets raw mode (disables editing) on/off
console telnet raw show	shows if raw mode enabled
console telnet echo set {OFF=0 ON=1}	enables echo on/off
console telnet echo show	shows if echo enabled
console telnet activeneg set {OFF=0 ON=1}	enables telnet active negotiation (IAC) on/off
console telnet activeneg show	shows if active negotiation enabled
console telnet login set {OFF=0 ON=1}	enables login on/off
console telnet login show	shows if login enabled
console telnet login local set {OFF=0 ON=1}	enables local login on/off
console telnet login local show	shows if local login enabled
console telnet login radius set {OFF=0 ON=1}	enables login for RADIUS on/off
console telnet login radius show	shows if RADIUS login enabled
console telnet login delay set {OFF=0 ON=1}	enables delay (after 3 login fails) on/off
console telnet login delay show	shows if login delay enabled
console telnet pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs
console telnet pushmsgs config show	shows if persistent push msgs are enabled
console telnet pushmsgs set {OFF=0 ON=1}	enables temporary push msgs
console telnet pushmsgs show	shows if temporary push msgs are enabled
console telnet user set "{username}"	sets login user name
console telnet user show	shows login user name
console telnet passwd set "{passwd}"	sets login password
console telnet passwd hash set "{passwd}"	sets login hashed password
console ssh enabled set {OFF=0 ON=1}	enables SSH
console ssh enabled show	shows if SSH enabled
console ssh port set {ip_port}	sets SSH port
console ssh port show	shows SSH port
console ssh echo set {OFF=0 ON=1}	enables echo on/off
console ssh echo show	shows if echo enabled
console ssh pushmsgs config set {OFF=0 ON=1}	enables persistent push msgs
console ssh pushmsgs config show	shows if persistent push msgs are enabled
console ssh pushmsgs set {OFF=0 ON=1}	enables temporary push msgs
console ssh pushmsgs show	shows if temporary push msgs are enabled
console ssh public hash set "{passwd}"	sets hash of SSH public key
console ssh public hash show	shows hash of SSH public key
email	enters cmd group "email"
email enabled set {OFF=0 ON=1}	enables email on/off
email enabled show	shows if email is enabled
email sender set "{email_addr}"	sets email sender address
email sender show	shows email sender address
email recipient set "{email_addr}"	sets email recipient address
email recipient show	shows email recipient address
email server set "{dns_name}"	sets email SMTP server address
email server show	shows email SMTP server address
email port set {ip_port}	sets email SMTP port
email port show	shows email SMTP port
email security set {NONE=0 STARTTLS=1 SSL=2}	sets SMTP connection security
email security show	shows SMTP connection security
email auth set {NONE=0 PLAIN=1 LOGIN=2}	sets email authentication
email auth show	show email authentication
email user set "{username}"	sets SMTP username
email user show	shows SMTP username
email passwd set "{passwd}"	sets SMTP password
email passwd hash set "{passwd}"	sets crypted SMTP password
email testmail	send test email
ethernet	enters cmd group "ethernet"
ethernet mac show	shows MAC address
ethernet link show	shows ethernet link state
ethernet phyprefer set {10MBIT_HD=0 10MBIT_FD=1 100MBIT_HD=2 100MBIT_FD=3}	sets preferred speed for PHY Auto Negotiation

# Specifications

ethernet phyprefer show	shows preferred speed for PHY Auto Negotiation	
extsensor	enters cmd group "extsensor"	
extsensor all show	shows all values from connected external sensors	
extsensor all show	shows all plugged sensors and fields	
extsensor {port_num} {sen_field} value show	shows sensor value	6
extsensor {port_num} {sen_type} label set "{name}"	sets sensor name to label	6
extsensor {port_num} {sen_type} label show	shows label of sensor	6
extsensor {port_num} type show	shows type of sensor	
extsensor {port_num} {sen_type} {sen_field} events set {off=0 on=1}	enables sensor events on/off	6
extsensor {port_num} {sen_type} {sen_field} events show	shows if sensor events are enabled	6
extsensor {port_num} {sen_type} {sen_field} events type set "{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2 ,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER =5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_M QTT=8}"	enables different event types	6
extsensor {port_num} {sen_type} {sen_field} events type show	shows what event types are enabled	6
extsensor {port_num} {sen_type} {sen_field} phonebook sms events set "{1..20}"	sets for what phonebook entries SMS are sent	6
extsensor {port_num} {sen_type} {sen_field} phonebook sms events show	shows for what phonebook entries SMS are sent	6
extsensor {port_num} {sen_type} {sen_field} maxval set {num}	sets maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} maxval show	shows maximum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval set {num}	sets minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} minval show	shows minimum value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst set {num}	sets hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} hyst show	shows hysteresis value for sensor	6
extsensor {port_num} {sen_type} {sen_field} publish mode set {NONE=0 INTERVAL=1  DELTA=2 INTERV_DELTA=3}	sets publish mode	
extsensor {port_num} {sen_type} {sen_field} publish mode show	shows publish mode	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
extsensor {port_num} {sen_type} {sen_field} publish mqtt retain show	shows if mqtt retain set	
extsensor {port_num} {sen_type} {sen_field} publish timer set {num_secs}	sets publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish timer show	shows publish time interval	
extsensor {port_num} {sen_type} {sen_field} publish delta set {float}	sets publish delta value	
extsensor {port_num} {sen_type} {sen_field} publish delta show	shows publish delta value	
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} port show	shows Port for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state set {OFF=0 ON=1  DISABLED=2}	sets Port state for Power Port Switching actions	6
extsensor {port_num} {sen_type} {sen_field} {BELOWMIN=0 ABOVEMIN=1 ABOVEMAX=2  BELOWMAX=3} state show	shows Port state for Power Port Switching actions	6
extsensor period set {24H=0 12H=1 2H=2 1H=3  30MIN=4}	sets sensor Min/Max measurement period	
extsensor period show	shows sensor Min/Max measurement period	
gsm	enters cmd group "gsm"	
gsm enabled set {OFF=0 ON=1}	activates the built-in GSM module	
gsm enabled show	shows if the built-in GSM module is enabled	
gsm pin set "{pin_num}"	sets PIN and switches the PIN request on	
gsm pin show	shows the PIN of the SIM card	



# Specifications

gsm phonenum set "{phone_num}"	sets the phone number of the SIM card
gsm phonenum show	shows the phone number of the SIM card
gsm admin sms set "{phone_num}"	sets phone number for SMS status changes
gsm admin sms show	shows phone number for SMS status changes
gsm admin sms enabled set {OFF=0 ON=1}	enables status changes sent via SMS
gsm admin sms enabled show	shows if status changes via SMS are enabled
gsm admin email enabled set {OFF=0 ON=1}	enables status changes sent via email
gsm admin email enabled show	shows if status changes via email are enabled
gsm admin email set "{email_addr}"	sets status email recipient address
gsm admin email show	shows status email recipient address
gsm dtmf sms pin enabled set {OFF=0 ON=1}	enables necessary pin for port changes
gsm dtmf sms pin enabled show	shows if pin is needed for port changes
gsm dtmf sms master pin set "{pin_num}"	sets master pin for port changes
gsm dtmf sms master pin show	shows master pin for port changes
gsm phonebook check set {OFF=0 ON=1}	only allow access to calls that correspond to phonebook entries
gsm phonebook check show	shows if phonebook change enabled
gsm freecall enabled set {OFF=0 ON=1}	enable functions associated with incoming phone numbers
gsm freecall enabled show	show if freecall enabled
gsm admin only set {OFF=0 ON=1}	only allow caller actions from the admin phonenum
gsm admin only show	show if caller actions limited to admin phonenum
gsm sms response set {OFF=0 ON=1}	send a SMS response for every SMS cmd
gsm sms response show	show if a SMS response is sent for every SMS cmd
gsm sms error set {OFF=0 ON=1}	send a error SMS for a defective incoming SMS
gsm sms error show	show if error SMS are sent for defective incoming SMS
gsm sms signal set {OFF=0 ON=1}	send status messages when signal quality changes
gsm sms signal show	shows if status messages are sent for signal quality changes
gsm port name set {OFF=0 ON=1}	enable that complete port names are sent via SMS
gsm port name show	show if complete port names are sent
gsm sms autosync set {OFF=0 ON=1}	get date and time from GSM after power-up
gsm sms autosync show	show if autosync is enabled
gsm call voice enabled set {OFF=0 ON=1}	enable voice samples when a call is coming in
gsm call voice enabled show	show if voice samples are enabled
gsm call dtmf enabled set {OFF=0 ON=1}	allow DTMF tones in voice steering
gsm call dtmf enabled show	show if DTM tones are enabled
gsm phonebook {1..20} name set "{name}"	set name for phonebook entry
gsm phonebook {1..20} name show	show name for phonebook entry
gsm phonebook {1..20} phonenum set "{phone_num}"	set number for phonebook entry
gsm phonebook {1..20} phonenum show	show number for phonebook entry
gsm phonebook {1..20} port set {port_num}	set power port num for freecall actions
gsm phonebook {1..20} port show	set power port num for freecall actions
gsm phonebook {1..20} action set {NONE=0 GSM_TOGGLE=1 GSM_ON=2 GSM_OFF=3 GSM_RESET=4 GSM_ONOFF1S=5 GSM_ONOFF5S=6 GSM_OFFON1S=7 GSM_OFFON5S=8}	set freecall action
gsm phonebook {1..20} action show	show freecall action
gsm imsi set "{num}"	enter your IMSI number
gsm imsi show	show entered IMSI number
gsm sms email gateway set "{phone_num}"	set number of SMS to email gateway
gsm sms email gateway show	show number of SMS to email gateway
gsm balance name set "{name}"	enter word that names prepaid balance
gsm balance name show	show prepaid balance string
gsm balance action set "{text}"	enter provider query for prepaid balance
gsm balance action show	show prepaid balance provider query
http	enters cmd group "http"
http server set {HTTP_BOTH=0 HTTPS_ONLY=1 HTTP_ONLY=2 HTTPS_REDIR=3}	sets accepted connection types
http server show	shows accepted connection types
http port set {ip_port}	sets http port
http port show	shows http port
http portssl set {ip_port}	sets https port
http portssl show	shows https port
http tls mode set {TLS12=0 TLS13_12=1 TLS13=2 TLS13_12_11=3}	restricts TLS mode
http tls mode show	shows TLS mode restriction
http ajax enabled set {OFF=0 ON=1}	enables ajax autorefresh on/off
http ajax enabled show	shows if ajax autorefresh enabled
http passwd enabled set {OFF=0 ON=1}	enables http password on/off

# Specifications

http passwd enabled show	shows if http password enabled	
http passwd local set {OFF=0 ON=1}	enables local login on/off	
http passwd local show	shows if local login enabled	
http passwd radius set {OFF=0 ON=1}	enables login for RADIUS on/off	
http passwd radius show	shows if RADIUS login enabled	
http passwd user set "{passwd}"	sets http user password	
http passwd admin set "{passwd}"	sets http admin password	
http passwd hash user set "{passwd}"	sets hashed http user password	
http passwd hash admin set "{passwd}"	sets hashed http admin password	
ip4	enters cmd group "ip4"	
ip4 hostname set "{name}"	sets device hostname	
ip4 hostname show	shows device hostname	3
ip4 address set "{ip_address}"	sets IPv4 address	
ip4 address show	shows IPv4 address	3
ip4 netmask set "{ip_address}"	sets IPv4 netmask	
ip4 netmask show	shows IPv4 netmask	3
ip4 gateway set "{ip_address}"	sets IPv4 gateway address	
ip4 gateway show	shows IPv4 gateway address	3
ip4 dns set "{ip_address}"	sets IPv4 DNS server address	
ip4 dns show	shows IPv4 DNS server address	3
ip4 dhcp enabled set {OFF=0 ON=1}	enables IPv4 DHCP on/off	
ip4 dhcp enabled show	shows IPv4 DHCP state	3
ip6	enters cmd group "ip6"	
ip6 enabled set {OFF=0 ON=1}	enables IPv6 on/off	
ip6 enabled show	shows if IPv6 is enabled	3
ip6 routadv enabled set {OFF=0 ON=1}	enables IPv6 router advertisement	
ip6 routadv enabled show	shows IPv6 router advertisement state	3
ip6 dhcp enabled set {OFF=0 ON=1}	enables IPv6 DHCP on/off	
ip6 dhcp enabled show	shows if IPv6 DHCP is enabled	3
ip6 address show	show all IPv6 addresses	4
ip6 gateway show	show all IPv6 gateways	4
ip6 dns show	show all IPv6 DNS server	4
ip6 manual enabled set {OFF=0 ON=1}	enables manual IPv6 addresses	
ip6 manual enabled show	shows if manual IPv6 addresses are enabled	3
ip6 manual address {1..4} set "{ip_address}"	sets manual IPv6 address	
ip6 manual address {1..4} show	shows manual IPv6 address	3
ip6 manual gateway set "{ip_address}"	sets manual IPv6 gateway address	
ip6 manual gateway show	shows manual IPv6 gateway address	3
ip6 manual dns {1..2} set "{ip_address}"	sets manual IPv6 DNS server address	
ip6 manual dns {1..2} show	shows manual IPv6 DNS server address	3
ipacl	enters cmd group "ipacl"	
ipacl ping enabled set {OFF=0 ON=1}	enables ICMP ping on/off	
ipacl ping enabled show	shows if ICMP ping enabled	
ipacl enabled set {OFF=0 ON=1}	enable IP filter on/off	
ipacl enabled show	shows if IP filter enabled	
ipacl filter {ipacl_num} set "{dns_name}"	sets IP filter {ipacl_num}	
ipacl filter {ipacl_num} show	shows IP filter {ipacl_num}	
linesensor	enters cmd group "linesensor"	
linesensor all {field_list} show	shows energy sensors according field list of all line sensors	5
linesensor {line_num} {field_list} show	shows energy sensors according field list of one line sensor	5
linesensor {line_num} {energy_sensor} value show	shows energy sensor of given line	5
linesensor {line_num} ov protection show	show state of Overvoltage Protection	
linesensor {line_num} counter reset	resets energy metering counter	
linesensor {line_num} label set "{name}"	sets line meter to label	
linesensor {line_num} label show	shows label of line meter	
linesensor {line_num} {energy_sensor} events set {OFF=0 ON=1}	enables events on/off	
linesensor {line_num} {energy_sensor} events show	shows if events are enabled	
linesensor {line_num} {energy_sensor} events type set	"{EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5}" enables different event types	
linesensor {line_num} {energy_sensor} events type show	shows what event types are enabled	
linesensor {line_num} {energy_sensor} phonebook sms events set "{1..20}"	sets for what phonebook entries SMS are sent	
linesensor {line_num} {energy_sensor} phonebook sms events show	shows for what phonebook entries SMS are sent	
linesensor {line_num} {energy_sensor} maxval set	sets maximum value for line meter	



# Specifications

{float}		
linesensor {line_num} {energy_sensor} maxval show	shows maximum value for line meter	
linesensor {line_num} {energy_sensor} minval set {float}	sets minimum value for line meter	
linesensor {line_num} {energy_sensor} minval show	shows minimum value for line meter	
linesensor {line_num} {energy_sensor} hyst set {float}	sets hysteresis value for line meter	
linesensor {line_num} {energy_sensor} hyst show	shows hysteresis value for line meter	
linesensor {line_num} {energy_sensor} publish mode set {NONE=0 INTERVAL=1 DELTA=2 INTERV_DELTA=3}	sets publish mode	
linesensor {line_num} {energy_sensor} publish mode show	shows publish mode	
linesensor {line_num} {energy_sensor} publish mqtt retain set {OFF=0 ON=1}	sets mqtt retain	
linesensor {line_num} {energy_sensor} publish mqtt retain show	shows if mqtt retain set	
linesensor {line_num} {energy_sensor} publish timer set {num_secs}	sets publish time interval	
linesensor {line_num} {energy_sensor} publish timer show	shows publish time interval	
linesensor {line_num} {energy_sensor} publish delta set {float}	sets publish delta value	
linesensor {line_num} {energy_sensor} publish delta show	shows publish delta value	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} port set {port_num}	sets Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} port show	shows Port for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	sets Port state for Power Port Switching actions	
linesensor {line_num} {energy_sensor} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} state show	shows Port state for Power Port Switching actions	
linesensor {line_num} events set {OFF=0 ON=1}	LEGACY - enables events on/off	L
linesensor {line_num} events show	LEGACY - shows if events are enabled	L
linesensor {line_num} events type set "EVT_SYSLOG=0,EVT_SNMP=1,EVT_EMAIL=2,EVT_SMS=3,EVT_GSMEMAIL=4,EVT_BEEPER=5,EVT_DISPLAY=6,EVT_CONSOLE=7,EVT_MQTT=8"	LEGACY - enables different event types	L
linesensor {line_num} events type show	LEGACY - shows what event types are enabled	L
linesensor {line_num} maxval set {float}	LEGACY - sets maximum value for line meter	L
linesensor {line_num} maxval show	LEGACY - shows maximum value for line meter	L
linesensor {line_num} minval set {float}	LEGACY - sets minimum value for line meter	L
linesensor {line_num} minval show	LEGACY - shows minimum value for line meter	L
linesensor {line_num} hyst set {float}	LEGACY - sets hysteresis value for line meter	L
linesensor {line_num} hyst show	LEGACY - shows hysteresis value for line meter	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} port set {port_num}	LEGACY - sets Port for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} port show	LEGACY - shows Port for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} state set {OFF=0 ON=1 DISABLED=2}	LEGACY - sets Port state for Power Port Switching actions	L
linesensor {line_num} {BELOWMIN=0 ABOVEMIN=1 ABOVMAX=2 BELOWMAX=3} state show	LEGACY - shows Port state for Power Port Switching actions	L
modbus	enters cmd group "modbus"	
modbus enabled set <off=0/on=1>	enables Modbus TCP support	
modbus enabled show	shows if Modbus is enabled	
modbus port set <ip_port>	sets Modbus TCP port	
modbus port show	shows Modbus TCP port	
mqtt	enters cmd group "mqtt"	
mqtt {broker_idx} enabled set {OFF=0 ON=1}	enable mqtt	
mqtt {broker_idx} enabled show	shows if mqtt enabled	
mqtt {broker_idx} server set "{dns_name}"	sets broker name	

# Specifications

mqtt {broker_idx} server show	shows broker name
mqtt {broker_idx} tls enabled set {OFF=0 ON=1}	enable TLS
mqtt {broker_idx} tls enabled show	shows if TLS enabled
mqtt {broker_idx} port set {ip_port}	set broker TCP/IP port
mqtt {broker_idx} port show	shows broker TCP/IP port
mqtt {broker_idx} user set "{username}"	sets username
mqtt {broker_idx} user show	shows username
mqtt {broker_idx} passwd set "{passwd}"	sets password
mqtt {broker_idx} passwd hash set "{passwd}"	sets hashed passwd
mqtt {broker_idx} client set "{name}"	sets client name
mqtt {broker_idx} client show	shows client name
mqtt {broker_idx} qos set {QOS0=0 QOS1=1}	sets QoS level
mqtt {broker_idx} qos show	shows QoS level
mqtt {broker_idx} keepalive set {num_secs}	sets keep-alive time
mqtt {broker_idx} keepalive show	shows keep-alive time
mqtt {broker_idx} topic set "{name}"	sets topic prefix
mqtt {broker_idx} topic show	shows topic prefix
mqtt {broker_idx} console enabled set {OFF=0 ON=1}	permit console cmds
mqtt {broker_idx} console enabled show	shows if console cmds allowed
mqtt {broker_idx} device data timer set {num_secs}	sets telemetry interval
mqtt {broker_idx} device data timer show	shows telemetry interval
port	enters cmd group "port"
port {port_num} state set {OFF=0 ON=1}	sets port to new state
port {port_num} state show	shows port state
port all state set "{port_list}" {OFF=0 ON=1}	sets several ports in one cmd - e.g. port all state set "1,3,5" 1
port all state {MODE0=0 MODE1=1 MODE2=2} show	shows all port states in 3 different view modes
port all set {OFF=0 ON=1 OFF_REV=2 ON_REV=3}	switch all ports on/off forward or reverse
port restart all set {REINIT=0 OFF_REV_REINIT=1 OFF_REINIT=2}	reinit coldstart sequence (optional first all off)
port {port_num} reset	start reset sequence for port
port {port_num} toggle	toggles port
port {port_num} batch set {OFF=0 ON=1} wait {num_secs} {OFF=0 ON=1}	starts batch mode for port
port {port_num} batch cancel	cancels batch mode
port {port_num} label set "{name}"	sets port label name
port {port_num} label show	shows port label name
port {port_num} initstate coldstart set {OFF=0 ON=1 REMEMBER=2}	sets port coldstart initialization
port {port_num} initstate coldstart show	shows port coldstart initialization
port {port_num} initstate delay set {num}	sets port init delay
port {port_num} initstate delay show	shows port init delay
port {port_num} gsm pin set "{pin_num}"	sets the individual port access code
port {port_num} gsm pin show	shows the individual port access code
port {port_num} repowerdelay set {num}	sets port repower delay
port {port_num} repowerdelay show	shows port repower delay
port {port_num} resettime set {num}	sets port reset duration
port {port_num} resettime show	shows port reset duration
port {port_num} watchdog enabled set {OFF=0 ON=1}	sets port watchdog to on/off
port {port_num} watchdog enabled show	shows port watchdog state
port {port_num} watchdog mode set {OFF=0 PORT_RESET=1 IP_MS=2 IP_MS_INV=3}	sets port watchdog mode
port {port_num} watchdog mode show	shows port watchdog mode
port {port_num} watchdog type set {WD_ICMP=0 WD_TCP=1}	sets port watchdog type
port {port_num} watchdog type show	shows port watchdog type
port {port_num} watchdog link down set {OFF=0 ON=1}	sets if watchdog active when eth link down
port {port_num} watchdog link down show	shows if watchdog active when eth link down
port {port_num} watchdog host set "{dns_name}"	sets port watchdog host target
port {port_num} watchdog host show	shows port watchdog host target
port {port_num} watchdog port set {ip_port}	sets port watchdog TCP port
port {port_num} watchdog port show	shows port watchdog TCP port
port {port_num} watchdog pinginterval set {num}	sets port watchdog ping interval
port {port_num} watchdog pinginterval show	shows port watchdog ping interval
port {port_num} watchdog pingretries set {num}	sets port watchdog ping retries
port {port_num} watchdog pingretries show	shows port watchdog ping retries
port {port_num} watchdog retrybooting set {OFF=0 ON=1}	sets port watchdog retry booting to on/off
port {port_num} watchdog retrybooting show	shows port watchdog retry booting state
port {port_num} watchdog bootretries set {num}	sets port watchdog retry boot timeout

# Specifications

port {port_num} watchdog bootretries show	shows port watchdog retry boot timeout
radius	enters cmd group "radius"
radius {PRIMARY=0 SECONDARY=1} enabled set <off=0/on=1>	enables radius client
radius {PRIMARY=0 SECONDARY=1} enabled show	show if radius client enabled
radius {PRIMARY=0 SECONDARY=1} server set "<dns_name>"	sets radius server address
radius {PRIMARY=0 SECONDARY=1} server show	shows radius server address
radius {PRIMARY=0 SECONDARY=1} password set "{passwd}"	sets radius server shared secret
radius {PRIMARY=0 SECONDARY=1} password hash set "{passwd}"	sets radius server crypted shared secret
radius {PRIMARY=0 SECONDARY=1} auth timeout set {num_secs}	sets server request timeout
radius {PRIMARY=0 SECONDARY=1} auth timeout show	shows server request timeout
radius {PRIMARY=0 SECONDARY=1} retries set {0..99}	sets server number of retries
radius {PRIMARY=0 SECONDARY=1} retries show	shows server number of retries
radius chap enabled set <off=0/on=1>	enables CHAP
radius chap enabled show	shows if CHAP is enabled
radius message auth set <off=0/on=1>	enables request message authentication
radius message auth show	shows if request message authentication is enabled
radius default timeout set {num_secs}	sets default session timeout (when not returned as Session-Timeout Attribute)
radius default timeout show	shows default session timeout
snmp	enters cmd group "snmp"
snmp port set {ip_port}	sets SNMP UDP port
snmp port show	shows SNMP UDP port
snmp snmpget enabled set {OFF=0 ON=1}	enables SNMP GET cmds on/off
snmp snmpget enabled show	show if SNMP GET cmds are enabled
snmp snmpset enabled set {OFF=0 ON=1}	enables SNMP SET cmds on/off
snmp snmpset enabled show	show if SNMP SET cmds are enabled
snmp snmpv2 enabled set {OFF=0 ON=1}	enables SNMP v2 on/off
snmp snmpv2 enabled show	show if SNMP v2 is enabled
snmp snmpv2 public set "{text}"	enables SNMP v3 on/off
snmp snmpv2 public show	show if SNMP v3 is enabled
snmp snmpv2 private set "{text}"	sets SNMP v2 public community
snmp snmpv2 private show	shows SNMP v2 public community
snmp system {CONTACT=0 NAME=1 LOCATION=2} set "{text}"	sets sysLocation/sysName/sysContact
snmp system {CONTACT=0 NAME=1 LOCATION=2} show	gets sysLocation/sysName/sysContact
snmp snmpv3 enabled set {OFF=0 ON=1}	sets SNMP v2 private community
snmp snmpv3 enabled show	shows SNMP v2 private community
snmp snmpv3 username set "{text}"	sets SNMP v3 username
snmp snmpv3 username show	shows SNMP v3 username
snmp snmpv3 authalg set {NONE=0 MD5=1 SHA1=2 SHA256=3 SHA384=4 SHA512=5}	sets SNMP v3 authentication
snmp snmpv3 authalg show	show SNMP v3 authentication algorithm
snmp snmpv3 privalg set {NONE=0 DES=1 3DES=2 AES128=3 AES192=4 AES256=5 AES192*=6 AES256*=7}	sets SNMP v3 privacy algorithm
snmp snmpv3 privalg show	show SNMP v3 privacy algorithm
snmp snmpv3 authpasswd set "{passwd}"	sets SNMP v3 authentication password
snmp snmpv3 privpasswd set "{passwd}"	sets SNMP v3 privacy password
snmp snmpv3 authpasswd hash set "{passwd}"	sets SNMP v3 authentication hashed password
snmp snmpv3 privpasswd hash set "{passwd}"	sets SNMP v3 privacy hashed password
snmp trap type set {NONE=0 V1=1 V2=2 V3=3}	sets type of SNMP traps
snmp trap type show	show SNMP trap type
snmp trap receiver {trap_num} set "{dns_name}"	sets address and port of SNMP trap receiver {trap_num}
snmp trap receiver {trap_num} show	show address and port of SNMP trap receiver {trap_num}
syslog	enters cmd group "syslog"
syslog enabled set {OFF=0 ON=1}	enables syslog msgs on/off
syslog enabled show	show if syslog enabled
syslog server set "{dns_name}"	sets address of syslog server
syslog server show	shows address of syslog server

# Specifications

system	enters cmd group "system"
system restart	restarts device
system fabsettings	restore fab settings and restart device
system bootloader	enters bootloader mode
system flushdns	flush DNS cache
system uptime	number of seconds the device is running
system name show	shows device name
system version show	shows actual firmware version
system display {disp_num} default extsensor {port_num} {sen_type} set {sen_field}	shows external sensor
system display {disp_num} default linesensor {line_num} set {sen_field}	shows energy line sensor
system display {disp_num} default set {BLANK=0,LOCAL_TIME=1,UTC_TIME=2}	shows other contents
system display {disp_num} default show	shows default setting for display
system display default hash set "{data}"	sets hashed display setting
system display default hash show	shows hashed display setting
system panel enabled set {OFF=0 ON=1}	blocks panel buttons when not enabled
system panel enabled show	shows if panel buttons are enabled
system panel port all set {OFF=0 ON=1}	enable siwtch all relays from panel buttons
system panel port all show	shows if siwtch all relays from panel buttons enabled
timer	enters cmd group "timer"
timer enabled set {OFF=0 ON=1}	enables timer functions
timer enabled show	shows if timer a enabled
timer syslog facility set {0..23}	sets facility level for timer syslog
timer syslog facility show	shows facility level for timer syslog
timer syslog verbose set {0..7}	sets verbose level for timer syslog
timer syslog verbose show	shows verbose level for timer syslog
timer {rule_num} enabled set {OFF=0 ON=1}	enables rule
timer {rule_num} enabled show	shows if rule is enabled
timer {rule_num} name set "{name}"	sets name of rule
timer {rule_num} name show	shows name of rule
timer {rule_num} {FROM=0 UNTIL=1} set "{yyyy-mm-dd}"	sets date range of rule
timer {rule_num} {FROM=0 UNTIL=1} show	shows date range of rule
timer {rule_num} trigger jitter set {0..65535}	sets jitter for rule
timer {rule_num} trigger jitter show	show jitter of rule
timer {rule_num} trigger random set {0..100}	sets probability for rule
timer {rule_num} trigger random show	shows rule probability
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} set "{time_date_list}"	sets time date list
timer {rule_num} trigger {HOUR=0 MIN=1 SEC=2 DAY=3 MON=4 DOW=5} show	shows time date list
timer {rule_num} action mode set {SWITCH=1 CLI=2}	sets switch or cli cmd
timer {rule_num} action mode show	shows if switch or cli cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} set "{port_list}"	sets port list for switch cmd
timer {rule_num} action {SWITCH1=0 SWITCH2=1} {OFF=0 ON=1} show	shows port list for switch cmd
timer {rule_num} action delay set {0..65535}	delay between cmds
timer {rule_num} action delay show	shows delay between cmds
timer {rule_num} action console set "{cmd}"	sets cmd string
timer {rule_num} action console show	shows cmd string
timer {rule_num} action hash set "{data}"	sets action binary form
timer {rule_num} action hash show	shows action binary form
timer {rule_num} delete	delete one timer
timer delete all	delete all timer
vt100	enters cmd group "vt100"
vt100 echo set {OFF=0 ON=1}	sets console echo state
vt100 echo show	shows console echo state
vt100 numeric set {OFF=0 ON=1}	sets numeric mode
vt100 numeric show	shows numeric mode state
vt100 reset	resets terminal

## Notes

1. Legacy - The command has been replaced by a newer version
2. Command can be entered on any level

3. The output may show 2 lines - the 1st line shows the actual state, the 2nd line the status after reboot
4. The output may show several lines
5. Please see the **Energy Sensor Table** for the right energy index
6. Please see the **External Type and External Sensor Field Tables** for the correct sensor index

## Energy Sensor Table "{energy\_sensor}"

Index	Description	Unit
0	Forward Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	A
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Forward Active Energy Resettable	Wh
10	Forward Reactive Energy	VARh
11	Forward Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Reverse Active Energy	Wh
14	Reverse Reactive Energy	VARh
15	Reverse Active Energy Resettable	Wh
16	Reverse Reactive Energy Resettable	VARh
17	Absolute Active Energy	Wh
18	Absolute Reactive Energy	VARh
19	Absolute Active Energy Resettable	Wh
20	Absolute Reactive Energy Resettable	VARh
21	Residual Current	A



Dependent on the device model Residual Current may not be supported

## External Sensor Type Table "{sen\_type}"

Constants "{7x01=0|7x04=0|7x02=1|7x05=1|7x06=2}"

Index	Description	Products
0	Temperature	7001, 7101, 7201
0	Temperature	7004, 7104, 7204
1	Temperature, Humidity	7002, 7102, 7202
1	Temperature, Humidity	7005, 7105, 7205
2	Temperature, Humidity, Air Pressure	7006, 7106, 7206

## External Sensor Field Table "{sen\_field}"

Index	Description	Unit
0	Temperature	°C
1	Humidity	%
2	Digital Input	bool
3	Air Pressure	hPa
4	Dew Point	°C
5	Dew Point Temperature Difference	°C

## 4.9 Modbus TCP

If Modbus TCP is activated in the configuration, the ports (relays, outputs, eFuses) can be switched and the following data is callable:

### Address range overview:

Device Resource	Start	End	Modbus Data Type
Power/Output/eFuse Ports	0x000	0x3ff	Coils
DC Inputs	0x400	0x7ff	Discrete Inputs
Stop Condition active	0x800	0x800	Discrete Inputs
POE active	0x801	0x801	Discrete Inputs
Status Power Sources	0x1000	0x100f	Discrete Inputs
OVP active (Line-Ins)	0x1010	0x101f	Discrete Inputs
eFuse Errors	0x1100	0x11ff	Discrete Inputs
Info Area	0x000	0x005	Input Registers
CPU Sensor values	0x080	0x083	Input Registers
External Sensors	0x100	0x1ff	Input Registers
Fan Level	0x200	0x20f	Input Registers
Line Energy Sensors	0x400	0x39ff	Input Registers
Port Energy Sensors	0x3a00	0x81ff	Input Registers
Bank Energy Sensors	0x8200	0x823f	Input Registers
Power Source Sensors	0x8240	0x827f	Input Registers
Residual Current Monitor	0x8280	0x82cf	Input Registers
Bank Power Source Select	0x000	0x00f	Holding Registers
Fan Mode	0x010	0x01f	Holding Registers



This chapter is general for all Gude devices. Depending on the device type, some ports or certain sensors are not available.



All calculations in this chapter are based on addresses starting at "0". For some Modbus TCP Utilities, however, the addresses start at 1, in which case a 1 must be added to the addresses in this chapter. Please try both possibilities for tests!

The Unit-ID is ignored because the device is uniquely identified by its IP address.

### Supported Modbus TCP Functions

Function	Request Code
Read Coils	0x01
Read Discrete Inputs	0x02
Write Single Coil	0x05
Write Multiple Coils	0x0f
Read Input Registers	0x04
Read Holding Registers	0x03
Write Holding Register	0x06
Write Multiple Holding Registers	0x10
Read Device Identification	0x2B / 0x0E

## Coils

Device Resource	Start	End	Device Function
Power/Output/eFuse	0x000	0x3ff	Coil represents Port State

## Discrete Inputs

Device Resource	Start	End	Function when set
DC Inputs	0x400	0x7ff	Input logically 1
Stop Condition active	0x800	0x800	Stop Input active
POE active	0x801	0x801	POE active
Status Power Sources	0x1000	0x100f	Power Source active
OVP active (Line-Ins)	0x1010	0x101f	OVP active
eFuse Error	0x1100	0x11ff	eFuse Error

Status Power Sources	Offset
EPC 8221 / 8226	0 = Bank A, 1 = Bank B
ENC 2111 / 2191	0 = Pwr1, 1 = Pwr2
ESB 7213 / 7214	0 = Pwr1, 1 = Pwr2 (only 7214)

## Input Registers

Device Resource	Start	End	Function
Info Bereich	0x000	0x005	see table
CPU Sensor values	0x080	0x083	see table
Externe Sensoren	0x100	0x1ff	see table
Fan Level	0x200	0x20f	0 (aus) bis 3 (maximal)
Line Energy Sensors	0x400	0x39ff	see table
Port Energy Sensors	0x3a00	0x81ff	see table
Bank Energy Sensors	0x8200	0x823f	see table
Power Source Sensors	0x8240	0x827f	see table
Residual Current Monitor	0x8280	0x82cf	see table

## Info Area

Address	Width	Information
0	16-bit	Number of Ports (Relay)
1	16-bit	Number of Ports (Outlets) with Energy Measurement
2	16-bit	Number of Banks
3	16-bit	Number of Line-In
4	16-bit	Phases per line
5	16-bit	Number of Inputs

## Sensor Type Description

Address	Width	Information
---------	-------	-------------



0x080 to 0x083	16-bit (signed)	CPU Sensor values
0x100 to 0x1ff	16-bit (signed)	external Sensors
0x400 to 0x39ff	32-bit (signed)	Line Energy Sensors
0x3a00 to 0x81ff	32-bit (signed)	Port Energy Sensors
0x8200 to 0x823f	16-bit (signed)	Bank Energy Sensors
0x8240 to 0x827f	16-bit (signed)	Power Source Energy Sensors
0x8280 to 0x82cf	16-bit (signed)	Residual Current Monitor


## CPU Sensor Values

Offset	Sensor Field	Unit
0	Vsystem	0.01 V
1	Vaux	0.01 V
2	Vmain	0.01 V
3	CPU Temperature	0.1 °C

## External Sensors:

The measured value of the external sensors are coded as fixed point arithmetic. For a factor of e.g. 0.1 in the unit the value must be divided by 10 in order to reach the real measured value. A value of 0x8000 means that no sensor is plugged into the corresponding port, or the corresponding field in the sensor is not available. The formula for the address is (the port numbers start at zero):

$$0x100 + \text{Port} * 8 + \text{Offset}$$

 In the Expert Sensor Box 7213 / 7214 the internal sensor corresponds to the value Port = 0, and is coded Port = 1 for Sensor 2 and Port = 2 for Sensor 3.

Offset	Sensor Field	Unit
0	Temperature	0.1 °C
1	Humidity	0.1 %
2	Digital Input	bool
3	Air Pressure	1 hPa (millibar)
4	Dew Point	0.1 °C
5	Dew Point Difference	0.1 °C


For example, the humidity of the second port has the address:  $0x100 + 1 * 8 + 1 = 0x109$

## Energy Sensors:

We distinguish the line sensors (which correspond to the input circuits) and the port sensors, which measure the energy that is passed over the switched port. The measured values of the energy sensors are returned as signed 32-bit integers. The high-order 16-bits are starting on the even address, followed by the low-order 16-bits on the odd address. To calculate the address, there are the following formulas (the values for line, port and phase start at zero):

$$\text{Line: } 0x0400 + \text{Line} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$$

$$\text{Port: } 0x3a00 + \text{Port} * 0x120 + \text{Phase} * 0x60 + \text{Offset} * 2$$

 For devices with only one phase, the phase is set to zero in the formula.




## Examples:

"Power Active" for 1st line sensor and 3rd phase:  $0x400 + 0 * 0x120 + 2 * 0x60 + 1 * 2 = 0x4C2$

"Voltage" for 2nd line sensor and single phase device:  $0x400 + 1 * 0x120 + 2 * 2 = 0x524$

"Power Angle" for 4th port sensor and single phase device:  $0x3a00 + 3 * 0x120 + 6 * 2 = 0x3d6c$

Offset	Sensor Field	Unit
0	Absolute Active Energy	Wh
1	Power Active	W
2	Voltage	V
3	Current	mA
4	Frequency	0.01 hz
5	Power Factor	0.001
6	Power Angle	0.1 degree
7	Power Apparent	VA
8	Power Reactive	VAR
9	Absolute Active Energy Resettable	Wh
10	Absolute Reactive Energy	VARh
11	Absolute Reactive Energy Resettable	VARh
12	Reset Time - sec. since last Energy Counter Reset	s
13	Forward Active Energy	Wh
14	Forward Reactive Energy	VARh
15	Forward Active Energy Resettable	Wh
16	Forward Reactive Energy Resettable	VARh
17	Reverse Active Energy	Wh
18	Reverse Reactive Energy	VARh
19	Reverse Active Energy Resettable	Wh
20	Reverse Reactive Energy Resettable	VARh
21	Residual Current Type A	mA
22	Neutral Current	mA

 Whether the measured values "Residual Current" and "Neutral Current" are supported depends on the respective device model. For measured values such as "Neutral Current", which are independent of the phase, the same value is returned for all phases.

## DC Energy Sensors:

With the EPC 8291 / 8290 devices, the voltage and current of the individual banks and voltage sources can be read out. The measured values of the energy sensors are returned as signed 16-bit integers. The following formulas are available for the address (the values for Bank and PowerSrc start at zero):

Bank:  $0x8200 + \text{Bank} * 2 + \text{Offset}$

Power Source:  $0x8240 + \text{PowerSrc} * 2 + \text{Offset}$

## Examples:

"Voltage" at third bank:  $0x8200 + 2 * 2 + 0 = 0x8204$

"Current" at first PowerSrc:  $0x8240 + 0 * 2 + 1 = 0x8241$

Offset	Sensor Field	Unit
0	Voltage	0.01 V
1	Current	mA

## Residual Current Monitor Type B (RCMB):

Devices with a Residual Current Monitor Type B (RCMB) module separately measure the RMS and DC fault current components of the input supply. The values are returned as signed 16-bit integers. The following formulas are used for the address (the module number starts at zero):

Bank:  $0x8280 + \text{ModuleNo} * 8 + \text{Offset}$ .

### Examples:

"Residual Current DC" at first module:  $0x8280 + 0 * 8 + 1 = 0x8281$ .

"Output DC" for second module:  $0x8280 + 1 * 8 + 3 = 0x828b$

Offset	Sensor Field	Unit
0	Residual Current RMS Type B	0.1 mA
1	Residual Current DC Type B	0.1 mA
2	Output RMS	bool
3	Output DC	bool
4	Module State	



Whether a Residual Current Monitor Type B (RCMB) module is present depends on the particular device model.

## Holding Registers

Device Resource	Start	End	Function
Bank Power Source	0x000	0x00f	Sets Power Source for Bank
Fan Mode	0x010	0x01f	0 = Automatic / 1 = Maximum

## Device Identification

Returns manufacturer name and device identification:

Request Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Object Id	1 Byte	0x00

Response Code	1 Byte	0x2b
MEI Type	1 Byte	0x0e
Read Dev ID code	1 Byte	0x01
Conformity Level	1 Byte	0x01
More Follows	1 Byte	0x00

NextObjectID	1 Byte	0x00
Number of Objects	1 Byte	0x03
Object ID	1 Byte	0x00
Object Length	1 Byte	n1
Object Value	n1 Bytes	"Company Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n2
Object Value	n2 Bytes	"Product Id"
Object ID	1 Byte	0x00
Object Length	1 Byte	n3
Object Value	n3 Bytes	"Product Version"

## 4.10 MQTT

This device supports MQTT 3.1.1 to send configured messages and also to receive commands. This chapter is general for all Gude devices, some Gude models do not have switchable ports.

- Default port for an unencrypted connection is port 1883.
- Default port for a TLS secured connection is port 8883.
- If the broker allows anonymous login, username and password are arbitrary, but a username must be specified.
- If multiple MQTT clients are connected to a broker, the names of the clients must be different. For this reason, "client\_xxxx" is generated as the default name. Here "xxxx" are the last 4 digits of the MAC address.

### Message format

The MQTT messages of the device are always sent in JSON format. E.G..

```
{"type": "portswitch", "idx": 2, "port": "2", "state": 1, "cause": {"id": 2, "txt": "http"}, "ts": 1632}
```

This is a switching of the second port to the state on. The source of the switching command is CGI ("http"). The index is always numeric, "port" can also be alphanumeric for devices with multiple banks, e.g. "A2". At the end follows a timestamp ("ts"), which indicates the number of seconds the device is on, or unixtime if the device has synchronized with an NTP server.

### MQTT Topic Prefix

The topic prefix for the messages can be set in the MQTT configuration. A default would be e.g. "de/gudesystems/epc/[mac]". Here "[mac]" is a placeholder for the MAC address of the device, another possible placeholder is "[host]", which contains the host name. An example topic for a switching message of the second port would then be:

```
"de/gudesystems/epc/00:19:32:01:16:41/switch/2".
```

### Executing console commands

The device can be controlled remotely via MQTT using console commands. A list of all commands can be found in the [Console](#) chapter. Depending on the topic, the commands are accepted in different formats.



As default the execution of commands is not allowed, but must be enabled in the MQTT configuration! ("Permit CLI commands")

## Format 1: Command in JSON Syntax

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd"

Publish Message: '{"type": "cli", "cmd": "port 2 state set 1", "id": 10}'

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres"

'{"type": "cli", "cmdres": ["OK."], "result": {"num": 0, "hint": "ok"}, "id": 10}'



The JSON object "result" returns whether the command was valid. The object "id" in the command is optional and is passed through in the response from the device. The passed number can help to establish a synchronicity between command and response via the broker.

## Format 2: Raw Text

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/cli"

Publish Message: "port 2 state set 1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/cli"

"OK."

## Format 3: Simplified port switching

Publish Topic: "de/gudesystems/epc/00:19:32:01:16:41/cmd/port/2"

Publish Message: "0" or "1".

Response from device to "de/gudesystems/epc/00:19:32:01:16:41/cmdres/port/2"

"0" or "1"



This special form exists only for the port switching commands.

## Device Data Summary

In the **Device Data Summary** the most important data of the device are summarized in a JSON object and sent periodically in a configurable time interval. This summary depends on the properties of the device and the connected sensors, and could look like this:

Topic: en/gudesystems/epc/00:19:32:01:16:41/device/telemetry

Message:


```
{
  "type": "telemetry",
  "portstates": [{
    "port": "1",
    "name": "Power Port",
    "state": 1
  }, {
    "port": "2",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "3",
    "name": "Power Port",
    "state": 0
  }, {
    "port": "4",
```

# Specifications

```
        "name": "Power Port",
        "state": 0
    }},
    "line_in": [{
        "voltage": 242.48,
        "current": 0.000
    }],
    "sensors": [{
        "idx": 1,
        "name": "7105",
        "data": [{
            "field": "temperature",
            "v": 21.1,
            "unit": "deg C"
        }, {
            "field": "humidity",
            "v": 71.9,
            "unit": "%"
        }, {
            "field": "dew_point",
            "v": 15.8,
            "unit": "deg C"
        }, {
            "field": "dew_diff",
            "v": 5.3,
            "unit": "deg C"
        }
    ]
    },
    "ts": 210520
}
```

## 4.10.1 Example HiveMQ

What does an MQTT configuration look like using HiveMQ as an example?

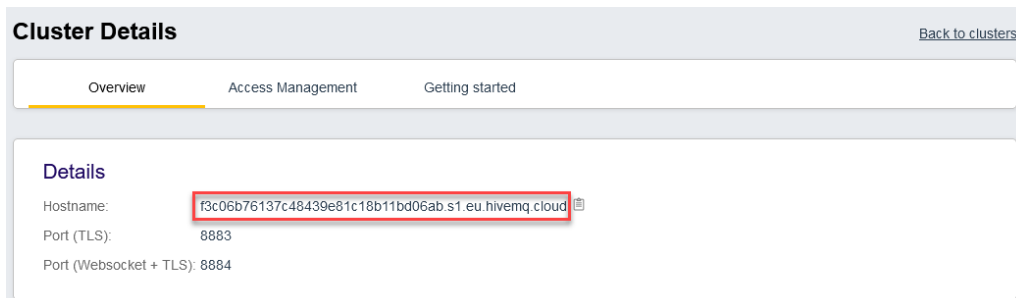

**Cluster Details** [Back to clusters](#)

Overview Access Management Getting started


**Details**

Hostname: f3c06b76137c48439e81c18b11bd06ab.s1.eu.hivemq.cloud

Port (TLS): 8883

Port (Websocket + TLS): 8884

Create a free or commercial account at [www.hivemq.com](http://www.hivemq.com) and create a new cluster.

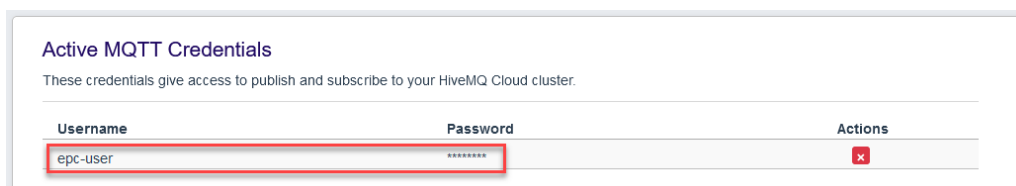

**Active MQTT Credentials**

These credentials give access to publish and subscribe to your HiveMQ Cloud cluster.

Username	Password	Actions
epc-user	*****	<span style="color: red;">✖</span>

In the "Manage Clusters" section, go to "Access Management" and add an MQTT user with name and password.

**MQTT**

Enable MQTT: ☒ yes ☐ no

Broker:

TLS: ☒ yes ☐ no

TCP Port:  (Default: 8883)

Username:

Set new password:

Repeat password:

Client ID:

Quality of Service (QoS):  ▼

Keep-alive ping interval:  s (minimum 10s)

Topic Prefix:   
de/gudesystems/epc/00:19:32:01:16:41

Permit CLI commands: ☒ yes ☐ no

Publish device data summary interval:  s (0=disabled)

In the MQTT configuration of the Gude device, transfer the hostname of the HiveMQ broker, as well as username and password. Additionally activate TLS and set the correct port.

**Support**

## 5 Support

You will find the latest product software on our website at [www.gude.info](http://www.gude.info) available for download. If you have further questions about installation or operation of the unit, please contact our support team. Furthermore, we present in our support wiki at [www.gude.info/wiki](http://www.gude.info/wiki) FAQs and configuration examples.

### 5.1 Data Security

---

To provide the device with a high level of data security, we recommend the following measures:

- Check that the HTTP password is switched on.
- Set up your own HTTP password.
- Allow access to HTTP via SSL (TLS) only.
- Use TLS 1.3 if possible and avoid TLS 1.1.
- Enable authentication and encryption in SNMPv3.
- Disable SNMP v2 access.
- Enable STARTTLS or SSL in the e-mail configuration.
- Archive configuration files securely, they contain sensitive information.
- In the IP ACL, enter only the devices that require access to HTTP or SNMP.
- Use SSH if possible, since Telnet is not encrypted.
- Set login for telnet or serial console.
- Use MQTT 3.1.1 only with TLS and password.
- Only permit MQTT CLI commands when the broker is trustworthy.
- Modbus TCP is not encrypted, only activate it in a secure environment.
- Activate "Message Authentication" in RADIUS.

#### When accessed from the Internet

- Use a randomized password with at least 32 characters.
- If possible, place the device behind a firewall.

### 5.2 Contact

---

GUDE Systems GmbH  
Von-der-Wettern-Straße 23  
51149 Cologne  
Germany

Phone: +49-221-912 90 97  
Fax: +49-221-912 90 98  
E-Mail: [mail@gude.info](mailto:mail@gude.info)  
Internet: [www.gude.info](http://www.gude.info)  
[shop.gude.info](http://shop.gude.info)

Managing Director: Dr.-Ing. Michael Gude

District Court: Köln, HRB-Nr. 17 7 84



WEEE-number: DE 58173350

Value added tax identification number (VAT): DE 122778228

## 5.3 Declaration of Conformity

---

This product from the **Expert Power Control 1202 / 1292** series is in conformity with the European directives for CE marking applicable to this product. The complete CE declaration of conformity for this product can be found on the website [www.gude.info](http://www.gude.info) in the download section of the product.

## 5.4 FAQ

---

### 1. What can I do if the device is no longer accessible?

- If the Status LED is red, the device has no connection to the switch. Unplug and plug the Ethernet cable. If the Status LED is still red, try other switches. If one uses no switch, but connects e.g. a laptop directly to the device, make sure you are using a crossover Ethernet cable.
- If the status LED is orange for a longer time after unplugging and plugging the Ethernet cable, then DHCP is configured, but no DHCP server was found in the network. After a timeout, the last IP address is configured manually.
- If there is a physical link (status LED is green) to the device, but you can not access the web server, bring the device into bootloader mode and search for it with GBL\_Conf.exe<sup>[18]</sup>. Then check the TCP-IP parameters and change them if necessary.
- If the device is not found by GBL\_Conf.exe in bootloader mode, you can reset the settings to factory defaults<sup>[23]</sup> as the last option.

### 2. What can be done if the device is no longer accessible, but the buttons still respond?

- Entering or leaving the bootloader mode does not change the state of the relays. In the chapter Maintenance<sup>[22]</sup> there is a description how to activate the bootloader by pressing the buttons and how to exit the bootloader afterwards. This will restart the firmware without switching relays. However, this procedure does not help if the network itself is incorrectly configured.

### 3. Where is the serial number stored in the device?

The serial number is not stored in the device, but only visible on the device label. However, you can display the MAC address in the IP address configuration<sup>[41]</sup>. If you contact Gude Systems Support with the MAC address, we will be happy to give you the corresponding serial number.

### 4. Why does it sometimes take so long to configure new SNMPv3 passwords on the website?

The authentication methods "SHA-384" and "SHA-512" are calculated purely in software, and can not use the crypto hardware. On the configuration page, e.g. "SHA-512", needs up to 45 seconds to calculate the key.

## 5. Can you enter multiple e-mail recipients?

- Yes. In the E-Mail configuration in the Recipient Address field, it is possible to enter multiple e-mail addresses separated by commas. The input limit is 100 characters.

## 6. Why did the MIB tables change after the firmware update?

- Since the number of possible event types was increased, the previous trap design resulted in an excess of trap definitions: See Change in Trap Design [73](#).

## 7. Importing an older firmware

- During a firmware update, old data formats are sometimes converted to new structures. If an older firmware is newly installed, the configuration data and the energy meters may be lost! If the device then does not run correctly, please restore the factory settings (e.g. from the Maintenance Page [20](#)).

## 8. Disable switching events

- You can set the sending of syslog, emails etc. when switching ports (only concerns Gude devices with relays) under "System" in the sensor configuration [59](#).

## - A -

Antenna terminal 9  
automated Access 68

## - B -

Bootloader Mode 18, 22  
Button Lock 63

## - C -

Certificate-Upload 18, 20  
clear DNS-Cache 20  
Configuration Management 21  
Content of Delivery 7  
creating certificates 78

## - D -

Data Security 112  
Declaration of Conformity 113  
Default Display 63  
Description 7  
device MIB 74

## - E -

Electrical Measurement 12  
E-Mail 61  
Ethernet connector 9

## - F -

Factory Reset 18  
FAQ 113  
Firmware Upload 18  
Firmware-Update 20

## - G -

GBL\_Conf.exe 18  
GSM 24  
GSM General 63  
GSM Misc 64  
GSM Phone 65  
GSM Provider 66  
GSM SIM Card 65

## - H -

HTTP 43  
HTTPS 43

## - I -

Installation 9  
IP-ACL 42, 70  
IP-Address 41  
IPv6 71

## - L -

load Configuration 20

## - M -

Maintenance 18  
messages 68  
Modbus TCP 102  
MQTT 50, 107

## - N -

NTP 51

## - O -

Ok button 9  
Operating the device directly 16  
Overvoltage Protection 11

## - P -

Power Ports 38

## - R -

Radius 71  
Restart 20  
RS232 connector 9

## - S -

Security Advice 7  
Select button 9

Sensors 13, 59  
signal strength 9  
SIM card slot 9  
SMS Commands 25  
SMS replies 30  
SNMP 46, 72  
SSH 83  
SSL 78  
Start-up the device 9  
Status LED 9  
Status-LED 16  
syslog 46

## - T -

Technical Specifications 12  
Timer 52  
Timer Configuration 52  
TLS 78

## - V -

Voice Call 31

## - W -

Watchdog 39



Expert Power Control 1202/1292  
© 2021 GUDE Systems GmbH  
11/18/2021