


1427DINCLIP **ASSEMBLY INSTRUCTIONS**

www.hammondmfg.com

Tools Required

- #25, 0.15", or 3.8mm drill bit.
- Drill.
- Phillips #2 screw driver.

Assembly Instructions

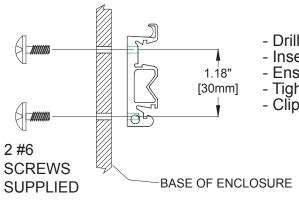

- Drill 2 holes per clip 30mm apart.Insert screws from inside of Box.
- Ensure clips face same direction
- Tighten screws.
- Clip enclosure to Din Rail

