





## Thermal Consideration - Derating vs ambient temperature


### **TDN 5-2410WI(SM)**

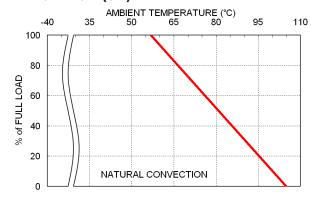


## **TDN 5-2412WI(SM)**

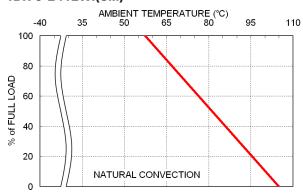


# **TDN 5-2415WI(SM)**

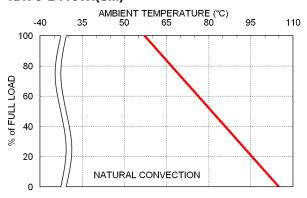


#### **TDN 5-2422WI(SM)**

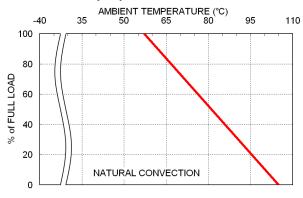


### TDN 5-2411WI(SM)

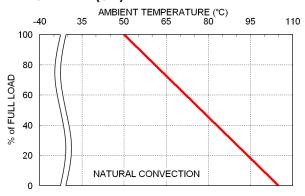


## TDN 5-2413WI(SM)

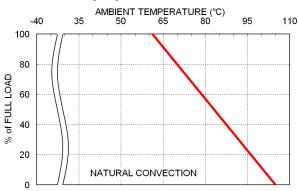

# TDN 5-2421WI(SM)

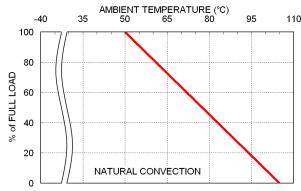


#### TDN 5-2423WI(SM)

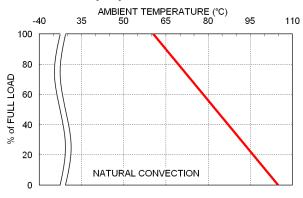




## Thermal Consideration - Derating vs ambient temperature


### **TDN 5-4810WI(SM)**

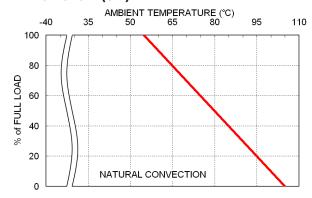


## **TDN 5-4812WI(SM)**

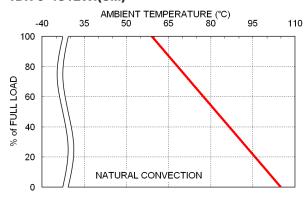


# **TDN 5-4815WI(SM)**

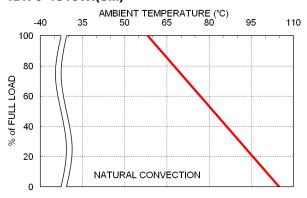


#### **TDN 5-4822WI(SM)**

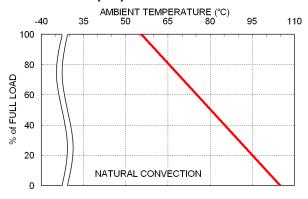


### TDN 5-4811WI(SM)

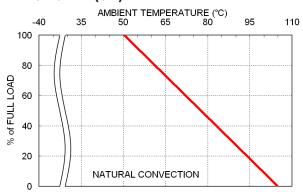

## TDN 5-4813WI(SM)

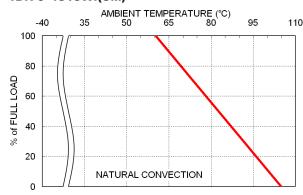

# TDN 5-4821WI(SM)

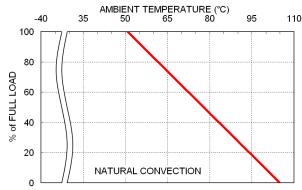

#### TDN 5-4823WI(SM)

