nRF52805

Product Specification

v1.4



Feature list

Features:

- Bluetooth 5.0, 2.4 GHz transceiver
 - -97 dBm sensitivity in 1 Mbps *Bluetooth*[®] Low Energy mode
 - -20 to +4 dBm TX power, configurable in 4 dB steps
 - On-air compatible with nRF52, nRF51, nRF24L, and nRF24AP Series
 - Supported data rates:
 - Bluetooth[®] 5.0 2 Mbps, 1 Mbps
 - Proprietary 2.4 GHz 2 Mbps, 1 Mbps
 - Single-ended antenna output (on-chip balun)
 - 4.6 mA peak current in TX (0 dBm)
 - 4.6 mA peak current in RX
 - RSSI (1 dB resolution)
- Arm[®] Cortex[®]-M4 32-bit processor, 64 MHz
 - 144 EEMBC CoreMark[®] score running from flash memory
 - 34.4 μA/MHz running CoreMark from flash memory
 - 32.8 μA/MHz running CoreMark from RAM
 - Serial wire debug (SWD)
- Flexible power management
 - 1.7 V to 3.6 V supply voltage range
 - On-chip DC/DC and LDO regulators with automated low current modes
 - Fast wake-up using 64 MHz internal oscillator
 - 0.3 µA at 3 V in System OFF mode, no RAM retention
 - 0.5 μA at 3 V in System OFF mode with full 24 kB RAM retention
 - 1.1 μA at 3 V in System ON mode, with full 24 kB RAM retention, wake on RTC (running from LFXO clock)
 - 1.0 μA at 3 V in System ON mode, no RAM retention, wake on RTC (running from LFXO clock)

- 192 kB flash and 24 kB RAM
 - Advanced on-chip interfaces
 - Programmable peripheral interconnect (PPI)
 - 10 general purpose I/O pins
 - EasyDMA automated data transfer between memory and peripherals
 - Nordic SoftDevice ready with support for concurrent multiprotocol
- Temperature sensor
- 12-bit, 200 ksps ADC 2 configurable channels with programmable gain
- 3x 32-bit timer with Counter mode
- SPI master/slave with EasyDMA
- I²C compatible two-wire master/slave
- UART (CTS/RTS) with EasyDMA
- Quadrature decoder (QDEC)
- AES HW encryption with EasyDMA
- 2x real-time counter (RTC)
- Single crystal operation
- Package variants
 - WLCSP package, 2.482 x 2.464 mm

- Applications:
- Proprietary protocol devices
- Network processor
- Beacons
- Smart Home sensors
- Presenters/Stylus

- Health monitoring
- Drug delivery
- Asset tags
- Toys
- Retail tags and labels



Contents

	Feature list.	ii
1	Revision history	9
2	About this document.	0
	2.2 Peripheral chapters	L0 L0 L0
	2.3.2 Permissions	L1 L1 L1
	-	1
3	Block diagram	3
4		4
		14
		L4 L4
		L4 L5
		16
		16
		16
	4.2.4 Instantiation	L7
	4.3 NVMC — Non-volatile memory controller	18
	4.3.1 Writing to flash	18
	4.3.2 Erasing a page in flash	18
		19
		19 19
		19
		19
		23
		23
	4.4.1 Registers	23
	4.5 UICR — User information configuration registers	31
	4.5.1 Registers	31
		34
	, 5	36
		36
		37
		37
		88
		38
		11
		13
	4.8.5 Real-time debug	13

5 Power and clock management. 44



5.1 Power management unit (PMU)	. 44
5.2 Current consumption	
5.2.1 Electrical specification	
5.3 POWER — Power supply	. 49
5.3.1 Regulators	50
5.3.2 System OFF mode	. 51
5.3.3 System ON mode	
5.3.4 Power supply supervisor	
5.3.5 RAM power control	
5.3.6 Reset	54
5.3.7 Retained registers	. 55
5.3.8 Reset behavior	55
5.3.9 Registers	
5.3.10 Electrical specification	
5.4 CLOCK — Clock control	
5.4.1 HFCLK clock controller	
5.4.2 LFCLK clock controller	
5.4.3 Registers	
5.4.4 Electrical specification	
Peripherals.	76
•	-
6.1 Peripheral interface	
6.1.1 Peripheral ID	
6.1.2 Peripherals with shared ID	
6.1.3 Peripheral registers	
6.1.4 Bit set and clear	
6.1.5 Tasks	
6.1.6 Events	
6.1.7 Shortcuts	
6.1.8 Interrupts	
6.2 AAR — Accelerated address resolver	
6.2.1 EasyDMA	
6.2.2 Resolving a resolvable address	
6.2.3 Use case example for chaining RADIO packet reception with address resolution using AAR .	
6.2.4 IRK data structure	
6.2.5 Registers	
6.2.6 Electrical specification	
6.3 BPROT — Block protection	
6.3.1 Registers	
6.4 CCM — AES CCM mode encryption	87
6.4.1 Keystream generation	87
6.4.2 Encryption	
6.4.3 Decryption	
6.4.4 AES CCM and RADIO concurrent operation	
6.4.5 Encrypting packets on-the-fly in radio transmit mode	89
6.4.6 Decrypting packets on-the-fly in RADIO receive mode	
6.4.7 CCM data structure	
6.4.8 EasyDMA and ERROR event	
6.4.9 Registers	
6.4.10 Electrical specification	. 99
6.5 ECB — AES electronic codebook mode encryption	99
6.5.1 Shared resources	99
6.5.2 EasyDMA	100
6.5.3 ECB data structure	100



6

6.5.4 Registers	100
6.5.5 Electrical specification	103
6.6 EGU — Event generator unit	103
6.6.1 Registers	103
6.6.2 Electrical specification	105
6.7 GPIO — General purpose input/output	105
6.7.1 Pin configuration	106
6.7.2 Registers	108
6.7.3 Electrical specification	113
6.8 GPIOTE — GPIO tasks and events	113
6.8.1 Pin events and tasks	114
6.8.2 Port event	
6.8.3 Tasks and events pin configuration	115
6.8.4 Registers	115
-	119
6.8.5 Electrical specification	119
6.9 PPI — Programmable peripheral interconnect	
6.9.1 Pre-programmed channels	121
6.9.2 Registers	121
6.10 QDEC — Quadrature decoder	125
6.10.1 Sampling and decoding	126
6.10.2 LED output	127
6.10.3 Debounce filters	127
6.10.4 Accumulators	127
6.10.5 Output/input pins	128
6.10.6 Pin configuration	128
6.10.7 Registers	129
6.10.8 Electrical specification	140
6.11 RADIO — 2.4 GHz radio	140
6.11.1 Packet configuration	140
6.11.2 Address configuration	141
6.11.3 Data whitening	142
6.11.4 CRC	142
6.11.5 Radio states	143
6.11.6 Transmit sequence	144
6.11.7 Receive sequence	145
6.11.8 Received signal strength indicator (RSSI)	147
6.11.9 Interframe spacing (IFS)	147
6.11.10 Device address match	148
6.11.11 Bit counter	148
6.11.12 EasyDMA	149
6.11.13 Registers	150
6.11.14 Electrical specification	171
6.12 RNG — Random number generator	176
6.12.1 Bias correction	176
6.12.2 Speed	176
6.12.3 Registers	177
6.12.4 Electrical specification	179
6.13 RTC — Real-time counter	179
6.13.1 Clock source	180
6.13.2 Resolution versus overflow and the PRESCALER	180
	180
6.13.3 COUNTER register	
6.13.4 Overflow features	181
6.13.5 TICK event	181
6.13.6 Event control feature	182



	400
	182
, , , , , , , , , , , , , , , , , , ,	184
5 5	186 187
5	
	192
	192
	192
	193
	194
	194
	196
	197
	198
	198
6	199
0	200
	214
	215
	215
	216
6	219
6.15.3 Electrical specification	222
	223
6.16.1 SPI master transaction sequence	224
6.16.2 Master mode pin configuration	225
6.16.3 EasyDMA	226
6.16.4 Low power	226
6.16.5 Registers	226
	235
	236
6.17.1 Shared resources	237
6.17.2 EasyDMA	237
6.17.3 SPI slave operation	237
6.17.4 Pin configuration	239
	240
	250
6.18 SWI — Software interrupts	252
	252
	252
6.19.1 Registers	253
	259
	259
	259
	260
	260
	261
	261
	262
	263
	263
	205
	272
	272
	273
	_, J



6.21.3 Task delays	273
6.21.4 Task priority	273
6.21.5 Registers	273
6.21.6 Electrical specification	278
$6.22 \text{ TWIM} - \text{I}^2\text{C}$ compatible two-wire interface master with EasyDMA	278
6.22.1 EasyDMA	280
6.22.2 Master write sequence	280
	280
6.22.3 Master read sequence	281
6.22.4 Master repeated start sequence	
6.22.5 Low power	283
6.22.6 Master mode pin configuration	283
6.22.7 Registers	283
6.22.8 Electrical specification	294
6.22.9 Pullup resistor	295
6.23 TWIS — I ² C compatible two-wire interface slave with EasyDMA \ldots \ldots \ldots \ldots	295
6.23.1 EasyDMA	297
6.23.2 TWI slave responding to a read command	297
6.23.3 TWI slave responding to a write command	299
6.23.4 Master repeated start sequence	300
6.23.5 Terminating an ongoing TWI transaction	300
6.23.6 Low power	301
6.23.7 Slave mode pin configuration	301
6.23.8 Registers	301
6.23.9 Electrical specification	311
6.24 UART — Universal asynchronous receiver/transmitter	312
6.24.1 Functional description	312
6.24.2 Pin configuration	312
6.24.3 Shared resources	313
6.24.4 Transmission	313
6.24.5 Reception	314
6.24.6 Suspending the UART	314
	314
6.24.7 Error conditions	315
6.24.8 Using the UART without flow control	
6.24.9 Parity and stop bit configuration	315
6.24.10 Registers	315
6.24.11 Electrical specification	324
6.25 UARTE — Universal asynchronous receiver/transmitter with EasyDMA	324
6.25.1 EasyDMA	325
6.25.2 Transmission	325
6.25.3 Reception	326
6.25.4 Error conditions	327
6.25.5 Using the UARTE without flow control	327
6.25.6 Parity and stop bit configuration	328
6.25.7 Low power	328
6.25.8 Pin configuration	328
6.25.9 Registers	328
6.25.10 Electrical specification	341
6.26 WDT — Watchdog timer	341
6.26.1 Reload criteria	342
6.26.2 Temporarily pausing the watchdog	342
6.26.3 Watchdog reset	342
6.26.4 Registers	342
6.26.5 Electrical specification	345
	2.0



7	Hardware and layout	346
	7.1 Pin assignments	346
	7.1.1 WLCSP ball assignments	346
	7.2 Mechanical specifications	347
	7.2.1 WLCSP 2.482 x 2.464 mm package	348
	7.3 Reference circuitry	348
	7.3.1 Schematic CAAA WLCSP with internal LDO regulator setup	
	7.3.2 Schematic CAAA WLCSP with DC/DC regulator setup	349
	7.3.3 PCB guidelines	351
	7.3.4 PCB layout example	
	7.3.5 PMIC support	353
8	Recommended operating conditions	354
	8.1 WLCSP light sensitivity	354
9	Absolute maximum ratings	355
10	Ordering information	356
	10.1 IC marking	356
	10.2 Box labels	356
	10.3 Order code	357
	10.4 Code ranges and values	358
	10.5 Product options	359
11	Legal notices	361



1 Revision history

Date	Version	Description
December 2023	1.4	 The following content has been added or updated: Reference circuitry on page 348 - Added PMIC support section.
November 2021	1.3	 The following content has been added or updated: UICR - Added NRFMDK registers and updated access port protection Debug on page 37 - Updated access port protection Mechanical specifications on page 347 - Updated WLCSP mechanical specification Editorial
July 2020	1.2	The following content has been added or updated:QDEC - Added peripheral information
June 2020	1.1	 The following content has been added or updated: Current consumption on page 44 - Updated parameters graphs Corrected minimum valid value for EasyDMA registers MAXCNT and AMOUNT in the following chapters: SPIM SPIS TWIM TWIS UARTE RADIO - Updated output power and sensitivity figures, parameters C/I_{2MBLE,+2MHz}, and register EDSAMPLE to read-only; radio Timing parameters set to Typical SPIS - Updated parameter t_{SPIS,HCSN} TWIM - Updated parameter t_{TWIM,HD_STA}
August 2019	1.0	First release



2 About this document

This document is organized into chapters that are based on the modules and peripherals available in the IC.

2.1 Document status

The document status reflects the level of maturity of the document.

Document name	Description
Objective Product Specification (OPS)	Applies to document versions up to 1.0. This document contains target specifications for product development.
Product Specification (PS)	Applies to document versions 1.0 and higher. This document contains final product specifications. Nordic Semiconductor ASA reserves the right to make changes at any time without notice in order to improve design and supply the best possible product.

Table 1: Defined document names

2.2 Peripheral chapters

Every peripheral has a unique capitalized name or an abbreviation of its name, e.g. TIMER, used for identification and reference. This name is used in chapter headings and references, and it will appear in the ARM[®] Cortex[®] Microcontroller Software Interface Standard (CMSIS) hardware abstraction layer to identify the peripheral.

The peripheral instance name, which is different from the peripheral name, is constructed using the peripheral name followed by a numbered postfix, starting with 0, for example, TIMERO. A postfix is normally only used if a peripheral can be instantiated more than once. The peripheral instance name is also used in the CMSIS to identify the peripheral instance.

The chapters describing peripherals may include the following information:

- A detailed functional description of the peripheral
- Register configuration for the peripheral
- Electrical specification tables, containing performance data which apply for the operating conditions described in Recommended operating conditions on page 354.

2.3 Register tables

Individual registers are described using register tables. These tables are built up of two sections. The first three colored rows describe the position and size of the different fields in the register. The following rows describe the fields in more detail.



2.3.1 Fields and values

The **Id** (Field Id) row specifies the bits that belong to the different fields in the register. If a field has enumerated values, then every value will be identified with a unique value id in the Value Id column.

A blank space means that the field is reserved and read as undefined, and it also must be written as 0 to secure forward compatibility. If a register is divided into more than one field, a unique field name is specified for each field in the **Field** column. The **Value Id** may be omitted in the single-bit bit fields when values can be substituted with a Boolean type enumerator range, e.g. true/false, disable(d)/enable(d), on/ off, and so on.

Values are usually provided as decimal or hexadecimal. Hexadecimal values have a $0 \times$ prefix, decimal values have no prefix.

The **Value** column can be populated in the following ways:

- Individual enumerated values, for example 1, 3, 9.
- Range of values, e.g. [0..4], indicating all values from and including 0 and 4.
- Implicit values. If no values are indicated in the **Value** column, all bit combinations are supported, or alternatively the field's translation and limitations are described in the text instead.

If two or more fields are closely related, the **Value Id**, **Value**, and **Description** may be omitted for all but the first field. Subsequent fields will indicate inheritance with '..'.

A feature marked **Deprecated** should not be used for new designs.

2.3.2 Permissions

Different fields in a register might have different access permissions enforced by hardware.

The access permission for each register field is documented in the Access column in the following ways:

Access	Description	Hardware behavior
RO	Read-only	Field can only be read. A write will be ignored.
WO	Write-only	Field can only be written. A read will return an undefined value.
RW	Read-write	Field can be read and written multiple times.
W1	Write-once	Field can only be written once per reset. Any subsequent write will be ignored. A read will return an undefined value.
RW1	Read-write-once	Field can be read multiple times, but only written once per reset. Any subsequent write will be ignored.

Table 2: Register field permission schemes

2.4 Registers

Register	Offset	Description
DUMMY	0x514	Example of a register controlling a dummy feature
		Table 3: Register overview

2.4.1 DUMMY

Address offset: 0x514

Example of a register controlling a dummy feature



Bit number		31 30 29 28 27 26 25 24 23 22 2	1 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	5 4 3 2 1 0
ID		DDDD	C C C B	A A
Reset 0x00050002		0 0 0 0 0 0 0 0 0 0	0 0 1 0 1 0 0 0 0 0 0 0 0 0 0	0 0 0 0 1 0
ID Acce Field				
A RW FIELD_A		Example	e of a read-write field with several enumerated	
		values		
	Disabled	0 The exa	ample feature is disabled	
	NormalMode	1 The exa	ample feature is enabled in normal mode	
	ExtendedMode	2 The exa	ample feature is enabled along with extra	
		function	nality	
B RW FIELD_B		Example	e of a deprecated read-write field	Deprecated
	Disabled	0 The ove	erride feature is disabled	
	Enabled	1 The ove	erride feature is enabled	
C RW FIELD_C		Example	e of a read-write field with a valid range of value	es
	ValidRange	[27] Example	e of allowed values for this field	
D RW FIELD_D		Example	e of a read-write field with no restriction on the	2
		values		



3 Block diagram

This block diagram illustrates the overall system. Arrows with white heads indicate signals that share physical pins with other signals.

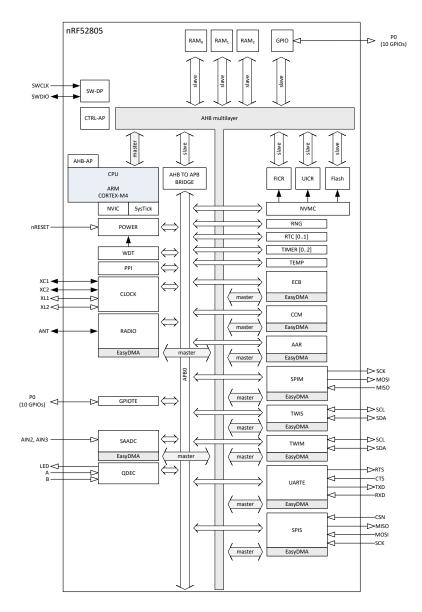


Figure 1: Block diagram



4 Core components

4.1 CPU

The ARM[®] Cortex[®]-M4 processor has a 32-bit instruction set (Thumb[®]-2 technology) that implements a superset of 16- and 32-bit instructions to maximize code density and performance.

This processor implements several features that enable energy-efficient arithmetic and high-performance signal processing including:

- Digital signal processing (DSP) instructions
- Single-cycle multiply and accumulate (MAC) instructions
- Hardware divide
- 8- and 16-bit single instruction multiple data (SIMD) instructions

The ARM Cortex Microcontroller Software Interface Standard (CMSIS) hardware abstraction layer for the ARM Cortex processor series is implemented and available for the M4 CPU.

Real-time execution is highly deterministic in thread mode, to and from sleep modes, and when handling events at configurable priority levels via the nested vectored interrupt controller (NVIC).

Executing code from flash will have a wait state penalty on the nRF52 Series. The section Electrical specification on page 14 shows CPU performance parameters including wait states in different modes, CPU current and efficiency, and processing power and efficiency based on the CoreMark[®] benchmark.

The ARM System Timer (SysTick) is present on the device. The SysTick's clock will only tick when the CPU is running or when the system is in debug interface mode.

4.1.1 Electrical specification

4.1.1.1 CPU performance

The CPU clock speed is 64 MHz. Current and efficiency data is taken when in System ON and the CPU is executing the CoreMark[®] benchmark. It includes power regulator and clock base currents. All other blocks are IDLE.

Symbol	Description	Min.	Тур.	Max.	Units
W _{FLASH}	CPU wait states, running from flash	0		2	
W _{RAM}	CPU wait states, running from RAM			0	
CM _{FLASH}	CoreMark ¹ , running from flash		144		CoreMark
CM _{FLASH/MHz}	CoreMark per MHz, running from flash		2.25		Corel
					MHz
CM _{FLASH/mA}	CoreMark per mA, running from flash, DCDC 3V		65		CoreMark/
					mA

4.1.2 CPU and support module configuration

The ARM[®] Cortex[®]-M4 processor has a number of CPU options and support modules implemented on the device.

¹ Using IAR v6.50.1.4452 with flags --endian=little --cpu=Cortex-M4 -e --fpu=VFPv4_sp –Ohs -no_size_constraints



Option / Module	Description	Implemented
Core options		
NVIC	Nested vector interrupt controller	30 vectors
PRIORITIES	Priority bits	3
WIC	Wakeup interrupt controller	NO
Endianness	Memory system endianness	Little endian
Bit-banding	Bit banded memory	NO
DWT	Data watchpoint and trace	NO
SysTick	System tick timer	YES
Modules		
MPU	Memory protection unit	YES
FPU	Floating-point unit	NO
DAP	Debug access port	YES
ETM	Embedded trace macrocell	NO
ITM	Instrumentation trace macrocell	NO
TPIU	Trace port interface unit	NO
ETB	Embedded trace buffer	NO
FPB	Flash patch and breakpoint unit	YES
HTM	AMBA [®] AHB trace macrocell	NO

4.2 Memory

The nRF52805 contains flash and RAM that can be used for code and data storage.

The amount of RAM and flash differs depending on variant, see Memory variants on page 15.

Device name	RAM	Flash
nRF52805-CAAA	24 kB	192 kB

Table 4: Memory variants

The CPU and peripherals with EasyDMA can access memory via the AHB multilayer interconnect. The CPU is also able to access peripherals via the AHB multilayer interconnect, as illustrated in Memory layout on page 16.



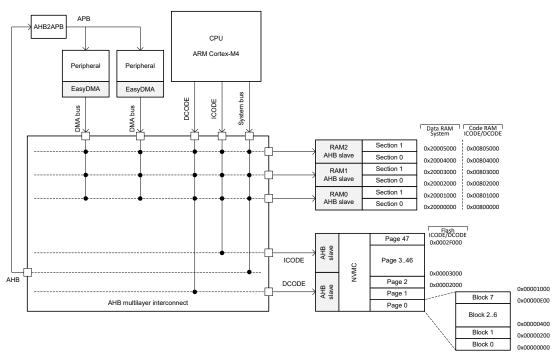


Figure 2: Memory layout

See AHB multilayer on page 37 and EasyDMA on page 34 for more information about the AHB multilayer interconnect and the EasyDMA.

The same physical RAM is mapped to both the Data RAM region and the Code RAM region. It is up to the application to partition the RAM within these regions so that one does not corrupt the other.

4.2.1 RAM - Random access memory

The RAM interface is divided into three RAM AHB slaves.

RAM AHB slaves 0 to 2 are connected to two 4 kB RAM sections each, as shown in Memory layout on page 16.

Each RAM section has separate power control for System ON and System OFF mode operation, which is configured via RAM register (see the POWER — Power supply on page 49).

4.2.2 Flash - Non-volatile memory

The flash can be read an unlimited number of times by the CPU, but it has restrictions on the number of times it can be written and erased, and also on how it can be written.

Writing to flash is managed by the non-volatile memory controller (NVMC), see NVMC — Non-volatile memory controller on page 18.

The flash is divided into multiple 4 kB pages that can be accessed by the CPU via both the ICODE and DCODE buses as shown in, Memory layout on page 16. Each page is divided into 8 blocks.

4.2.3 Memory map

The complete memory map is shown in Memory map on page 17. As described in Memory on page 15, Code RAM and Data RAM are the same physical RAM.



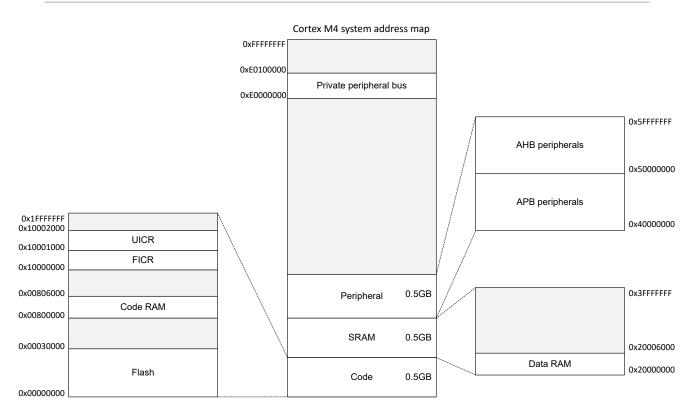


Figure 3: Memory map

4.2.4 Instantiation

ID	Base address	Peripheral	Instance	Description
0	0x4000000	APPROTECT	APPROTECT	APPROTECT control
0	0x4000000	BPROT	BPROT	Block protect
0	0x4000000	CLOCK	CLOCK	Clock control
0	0x40000000	POWER	POWER	Power control
0	0x5000000	GPIO	P0	General purpose input and output
1	0x40001000	RADIO	RADIO	2.4 GHz radio
2	0x40002000	UART	UARTO	Universal asynchronous receiver/transmitter Deprecated
2	0x40002000	UARTE	UARTE0	Universal asynchronous receiver/transmitter with EasyDMA
3	0x40003000	TWI	TWI0	Two-wire interface master Deprecated
3	0x40003000	TWIM	TWIM0	Two-wire interface master
3	0x40003000	TWIS	TWIS0	Two-wire interface slave
4	0x40004000	SPI	SPI0	SPI master Deprecated
4	0x40004000	SPIM	SPIM0	SPI master
4	0x40004000	SPIS	SPISO	SPI slave
6	0x40006000	GPIOTE	GPIOTE	GPIO tasks and events
7	0x40007000	SAADC	SAADC	Analog-to-digital converter
8	0x40008000	TIMER	TIMER0	Timer 0
9	0x40009000	TIMER	TIMER1	Timer 1
10	0x4000A000	TIMER	TIMER2	Timer 2
11	0x4000B000	RTC	RTC0	Real-time counter 0
12	0x4000C000	TEMP	TEMP	Temperature sensor
13	0x4000D000	RNG	RNG	Random number generator
14	0x4000E000	ECB	ECB	AES Electronic Codebook (ECB) mode block encryption
15	0x4000F000	ССМ	ССМ	AES CCM mode encryption
15	0x4000F000	AAR	AAR	Accelerated address resolver
16	0x40010000	WDT	WDT	Watchdog timer



ID	Base address	Peripheral	Instance	Description
17	0x40011000	RTC	RTC1	Real-time counter 1
18	0x40012000	QDEC	QDEC	Quadrature decoder
20	0x40014000	EGU	EGU0	Event generator unit 0
20	0x40014000	SWI	SWIO	Software interrupt 0
21	0x40015000	EGU	EGU1	Event generator unit 1
21	0x40015000	SWI	SWI1	Software interrupt 1
22	0x40016000	SWI	SWI2	Software interrupt 2
23	0x40017000	SWI	SWI3	Software interrupt 3
24	0x40018000	SWI	SWI4	Software interrupt 4
25	0x40019000	SWI	SWI5	Software interrupt 5
30	0x4001E000	NVMC	NVMC	Non-volatile memory controller
31	0x4001F000	PPI	PPI	Programmable peripheral interconnect
N/A	0x1000000	FICR	FICR	Factory information configuration
N/A	0x10001000	UICR	UICR	User information configuration

Table 5: Instantiation table

4.3 NVMC — Non-volatile memory controller

The non-volatile memory controller (NVMC) is used for writing and erasing of the internal flash memory and the UICR (user information configuration registers).

The CONFIG on page 20 is used to enable the NVMC for writing (CONFIG.WEN = Wen) and erasing (CONFIG.WEN = Een).

The CPU must be halted before initiating a NVMC operation from the debug system.

4.3.1 Writing to flash

When write is enabled, full 32-bit words can be written to word-aligned addresses in flash memory.

As illustrated in Memory on page 15, the flash is divided into multiple pages. The same 32-bit word in flash memory can only be written n _{WRITE} number of times before a page erase must be performed.

The NVMC is only able to write 0 to bits in flash memory that are erased (set to 1). It cannot rewrite a bit back to 1. Only full 32-bit words can be written to flash memory using the NVMC interface. To write less than 32 bits, write the data as a full 32-bit word and set all the bits that should remain unchanged in the word to 1. The restriction on the number of writes (n_{WRITE}) still applies in this case.

Only word-aligned writes are allowed. Byte or half-word-aligned writes will result in a hard fault.

The time it takes to write a word to flash is specified by t_{WRITE} . The CPU is halted while the NVMC is writing to the flash.

4.3.2 Erasing a page in flash

When erase is enabled, the flash memory can be erased page by page using the ERASEPAGE on page 20.

After erasing a flash page, all bits in the page are set to 1. The time it takes to erase a page is specified by $t_{ERASEPAGE}$. The CPU is halted if the CPU executes code from the flash while the NVMC is writing to the flash.

See Partial erase of a page in flash on page 19 for information on dividing the page erase time into shorter chunks.



4.3.3 Writing to user information configuration registers (UICR)

User information configuration registers (UICR) are written in the same way as flash. After UICR has been written, the new UICR configuration will only take effect after a reset.

UICR can only be written n_{WRITE} number of times before an erase must be performed using ERASEUICR on page 21 or ERASEALL on page 21. The time it takes to write a word to UICR is specified by t_{WRITE} . The CPU is halted while the NVMC is writing to the UICR.

4.3.4 Erasing user information configuration registers (UICR)

When erase is enabled, UICR can be erased using the ERASEUICR on page 21.

After erasing UICR, all bits in UICR are set to 1. The time it takes to erase UICR is specified by $t_{\text{ERASEPAGE}}$. The CPU is halted if the CPU executes code from the flash while the NVMC performs the erase operation.

4.3.5 Erase all

When erase is enabled, flash and UICR can be erased completely in one operation by using the ERASEALL on page 21. This operation will not erase the factory information configuration registers (FICR).

The time it takes to perform an ERASEALL command is specified by $t_{ERASEALL}$. The CPU is halted if the CPU executes code from the flash while the NVMC performs the erase operation.

4.3.6 Partial erase of a page in flash

Partial erase is a feature in the NVMC to split a page erase time into shorter chunks to prevent longer CPU stalls in time-critical applications. Partial erase is only applicable to the code area in flash memory and does not work with UICR.

When erase is enabled, the partial erase of a flash page can be started by writing to ERASEPAGEPARTIAL on page 22. The duration of a partial erase can be configured in ERASEPAGEPARTIALCFG on page 22. A flash page is erased when its erase time reaches $t_{ERASEPAGE}$. Use ERASEPAGEPARTIAL N number of times so that N * ERASEPAGEPARTIALCFG $\geq t_{ERASEPAGE}$, where N * ERASEPAGEPARTIALCFG gives the cumulative (total) erase time. Every time the cumulative erase time reaches $t_{ERASEPAGE}$, it counts as one erase cycle.

After the erase is complete, all bits in the page are set to 1. The CPU is halted if the CPU executes code from the flash while the NVMC performs the partial erase operation.

The bits in the page are undefined if the flash page erase is incomplete, i.e. if a partial erase has started but the total erase time is less than $t_{ERASEPAGE}$.

4.3.7 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4001E000	NVMC	NVMC	Non-volatile memory controller	

Table 6: Instances

Register	Offset	Description	
READY	0x400	Ready flag	
CONFIG	0x504	Configuration register	
ERASEPAGE	0x508	Register for erasing a page in code area	
ERASEPCR1	0x508	Register for erasing a page in code area, equivalent to ERASEPAGE	Deprecated
ERASEALL	0x50C	Register for erasing all non-volatile user memory	
ERASEPCR0	0x510	Register for erasing a page in code area, equivalent to ERASEPAGE	Deprecated
ERASEUICR	0x514	Register for erasing user information configuration registers	



Register	Offset	Description
ERASEPAGEPARTIAL	0x518	Register for partial erase of a page in code area
ERASEPAGEPARTIALCFG	0x51C	Register for partial erase configuration

Table 7: Register overview

4.3.7.1 READY

Address offset: 0x400

Ready flag

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x0000001	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A R READY		NVMC is ready or busy
Busy	0	NVMC is busy (on-going write or erase operation)
Ready	1	NVMC is ready

4.3.7.2 CONFIG

Address offset: 0x504

Configuration register

31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
	A A
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
	Description
	Program memory access mode. It is strongly recommended
	to only activate erase and write modes when they are
	actively used.
0	Read only access
1	Write enabled
2	Erase enabled
	0 0 0 0 0 0 0 0 0 Value

4.3.7.3 ERASEPAGE

Address offset: 0x508

Register for erasing a page in code area

Bit nu	ımber	r	31	130	29	28 2	27	262	25	24	23	222	212	20	19 :	18	17 :	16	15	14	13	12	11	10	9	87	' 6	5 5	54	3	2	1	0
ID			А	А	A	A	A	A	A	А	А	А	A	A	A	A	A	A	A	А	А	A	A	A	A.	A A	A	A	A	A	А	А	A
Reset	t 0x00	000000	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0) () (0 (0	0	0	0
											Des																						
А	W	ERASEPAGE									Reg	giste	er f	or s	star	tin	g e	ras	e o	fa	pag	ge ii	n co	ode	are	ea							
											The	e va	lue	is	the	ad	ldre	ss	to t	the	pa	ge t	to t	oe e	ras	ed.							
											(Ad	ldre	esse	es c	of fi	rst	wo	rd	in p	bag	e). ⁻	The	e er	ase	mι	ust k	e						
											ena	able	ed u	isin	ng C	٥N	IFIC	i.W	/EN	be	for	e tł	ne p	bag	e ca	an b	e e	ras	ed.				
											Atte	em	pts	to	era	se	рае	ges	tha	at a	re o	out	side	e th	e c	ode	are	ea r	nay				
											res	ulti	in u	ind	esi	rab	le k	beh	avi	or,	e.g	. th	e v	ror	ng p	bage	e m	ay I	be				
											ora	sed																					



4.3.7.4 ERASEPCR1 (Deprecated)

Address offset: 0x508

Register for erasing a page in code area, equivalent to ERASEPAGE

Bit n	un	nber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 1	7 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A	
Rese	et C)x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	١	W ERASEPCR1	Register for erasing	a page in code area, equivalent to
			ERASEPAGE	

4.3.7.5 ERASEALL

Address offset: 0x50C

Register for erasing all non-volatile user memory

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A W ERASEALL		Erase all non-volatile memory including UICR registers. The
		erase must be enabled using CONFIG.WEN before the non-
		volatile memory can be erased.
NoOperation	0	No operation
Erase	1	Start chip erase

4.3.7.6 ERASEPCR0 (Deprecated)

Address offset: 0x510

Register for erasing a page in code area, equivalent to ERASEPAGE

Bit n	un	nbe	r	31	30 2	29 2	28 2	27 2	62	5 24	123	3 2 2	21	20	19 :	18 1	7 10	5 15	14	13	12	11	10	9	8	7	6	5	4	3	2	1)
ID				А	A	A	A	A A	A	A A	A	А	А	А	A	A A	A	A	A	А	A	A	A	A	A	А	А	А	A	A	A	A	4
Rese	et (0x0	000000	0	0	0	0	0 0) (0 (0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0)
ID																																	
А	١	w	ERASEPCR0								Re	egist	ter	for	star	ting	era	ise (of a	pag	ge i	n co	bde	e ar	ea	, eq	Juiv	ale	nt				
											to	ER	ASE	PAG	iΕ																		

4.3.7.7 ERASEUICR

Address offset: 0x514

Register for erasing user information configuration registers



Bit n	umber		31 30 29 28 27 3	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	210
ID					А
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0
А	W ERASEUICR			Register starting erase of all user information configuration	
				registers. The erase must be enabled using CONFIG.WEN	
				before the UICR can be erased.	
		NoOperation	0	No operation	
		Erase	1	Start erase of UICR	

4.3.7.8 ERASEPAGEPARTIAL

Address offset: 0x518

Register for partial erase of a page in code area

Bit n	umbei	r	313	30 2	9 2	8 2	72	6 2	52	4 2	3 2	2 2 1	1 20) 19	18	17	16	15	14 1	.3 1	21	1 10	9	8	7	6	5	4 3	2	1	. 0
ID			А	A A	A	A A	4 <i>4</i>	A A	. 4	Δ,	A A	A	A	A	A	А	А	А	A	4 /	A A	A	А	А	А	А	А	A A	A	A	A
Rese	t 0x00	000000	0	0 0) (D 0) (0) (0 (0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0	0 0	0	0	0
ID																															
Α	W	ERASEPAGEPARTIAL								F	egi	ster	for	r sta	rti	ng p	bart	ial (eras	e o	faı	bage	e in	co	de a	area	1				
										т	he	valu	ie is	s th	e a	ddr	ess	to t	he	pag	e to	be	ра	rtia	lly e	eras	ed				
										(add	ress	s of	the	e fir	st v	vor	d in	pag	ge).	The	e era	ase	mu	ıst k	be					
										e	nat	led	us	ing	со	NFI	G.W	/EN	bet	ore	ev	ery	era	se p	bag	e pa	artia	I			
										а	nd	disa	ble	ed u	sin	g C(DNF	IG.	WEI	N at	ter	eve	ery e	eras	se p	age	2				
										p	arti	al. /	Atte	emp	ots	to e	ras	e p	age	s th	at a	re c	outs	side	the	e co	de				
										а	rea	ma	y re	esul	t in	un	des	irat	ole l	beh	avio	or, e	.g. 1	the	wr	ong					
										p	age	ma	ay b	be e	ras	ed.															

4.3.7.9 ERASEPAGEPARTIALCFG

Address offset: 0x51C

Register for partial erase configuration

^	RW DURATION		Duration of the partial erase in milliseconds
ID			
Rese	et 0x0000000A	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			АААААА
Bit r	umber	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

The user must ensure that the total erase time is long enough for a complete erase of the flash page.



4.3.8 Electrical specification

4.3.8.1 Flash programming

Symbol	Description	Min.	Тур.	Max.	Units
n _{WRITE}	Number of times a 32-bit word can be written before erase			2	
NENDURANCE	Erase cycles per page	10000			
t _{WRITE}	Time to write one 32-bit word			41 ²	μs
t _{ERASEPAGE}	Time to erase one page			85 ²	ms
t _{ERASEALL}	Time to erase all flash			169 ²	ms
t _{ERASEPAGEPARTIAL, acc}	Accuracy of the partial page erase duration. Total			1.05 ²	
	execution time for one partial page erase is defined as				
	ERASEPAGEPARTIALCFG * t _{erasepagepartial,acc} .				

4.4 FICR — Factory information configuration registers

Factory information configuration registers (FICR) are pre-programmed in factory and cannot be erased by the user. These registers contain chip-specific information and configuration.

4.4.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x1000000	FICR	FICR	Factory information configur	ration
			Table 8: Instance	25
Register	Offset	Descrip	tion	
CODEPAGESIZE	0x010	Code m	emory page size	
CODESIZE	0x014	Code m	emory size	
DEVICEID[0]	0x060	Device	identifier	
DEVICEID[1]	0x064	Device	identifier	
ER[0]	0x080	Encrypt	ion root, word 0	
ER[1]	0x084	Encrypt	ion root, word 1	
ER[2]	0x088	Encrypt	ion root, word 2	
ER[3]	0x08C	Encrypt	ion root, word 3	
IR[0]	0x090	Identity	root, word 0	
IR[1]	0x094	Identity	root, word 1	
IR[2]	0x098	Identity	root, word 2	
IR[3]	0x09C	Identity	root, word 3	
DEVICEADDRTYPE	0x0A0	Device	address type	
DEVICEADDR[0]	0x0A4	Device	address 0	
DEVICEADDR[1]	0x0A8	Device	address 1	
INFO.PART	0x100	Part co	de	
INFO.VARIANT	0x104	Part var	iant, hardware version and product	tion configuration
INFO.PACKAGE	0x108	Package	e option	
INFO.RAM	0x10C	RAM va	iriant	
INFO.FLASH	0x110	Flash va	ariant	
INFO.UNUSED8[0]	0x114			Reserved

² HFXO is used here

Core components

Register	Offset	Description	
INFO.UNUSED8[1]	0x118		Reserved
INFO.UNUSED8[2]	0x11C		Reserved
TEMP.A0	0x404	Slope definition A0	
TEMP.A1	0x408	Slope definition A1	
TEMP.A2	0x40C	Slope definition A2	
TEMP.A3	0x410	Slope definition A3	
TEMP.A4	0x414	Slope definition A4	
TEMP.A5	0x418	Slope definition A5	
TEMP.B0	0x41C	Y-intercept B0	
TEMP.B1	0x420	Y-intercept B1	
TEMP.B2	0x424	Y-intercept B2	
TEMP.B3	0x428	Y-intercept B3	
TEMP.B4	0x42C	Y-intercept B4	
TEMP.B5	0x430	Y-intercept B5	
TEMP.T0	0x434	Segment end T0	
TEMP.T1	0x438	Segment end T1	
TEMP.T2	0x43C	Segment end T2	
TEMP.T3	0x440	Segment end T3	
TEMP.T4	0x444	Segment end T4	

Table 9: Register overview

4.4.1.1 CODEPAGESIZE

Address offset: 0x010

Code memory page size

Bit n	umb	ber		31	30	29	28	27	26	25	24	23 :	222	212	20 1	9 18	8 17	16	15	14	13 1	12 1	111) 9	8	7	6	5	4	3	2 1	L O
ID				А	А	А	A	A	А	А	А	A	A	A	A A	A A	A	А	А	А	A	A.	ΑΑ	A	А	А	А	А	А	A,	4 <i>4</i>	A A
Rese	et Ox	00	001000	0	0	0	0	0	0	0	0	0	0	0	0 0	0 (0	0	0	0	0	1	0 0	0	0	0	0	0	0	0) () ()
ID												Des																				
А	R		CODEPAGESIZE									Сос	le n	nen	nor	y pa	ige s	size														

4.4.1.2 CODESIZE

Address offset: 0x014

Code memory size

Bit n	num	nber			3	1 30	29	28	27	26	25	24	23	22	212	20 1	.9 1	8 17	7 16	5 15	14	13	12	11 :	10	9	8	7	6 5	54	3	2	1	D
ID					A	А	А	А	А	А	А	А	A	А	A	A	A A	A	A	А	A	А	A	A	A	A	A.	A	A A	A	А	А	А	4
Rese	et O	x000	00030		0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0 (0	0	0	0	0	0	0	0	0	0	0 1	1	0	0	0	D
ID																																		
A	R	2 0	CODESIZE										Cod	de r	ner	nor	v si	ze ir	า ทเ	umb	ber	ofp	age	es										

Total code space is: CODEPAGESIZE * CODESIZE

4.4.1.3 DEVICEID[n] (n=0..1)

Address offset: $0x060 + (n \times 0x4)$

Device identifier



		DEVICEIDIAL contains the least significant hits of the device
A R DEVICEID		64 bit unique device identifier
Reset 0xFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID	A A A A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

DEVICEID[0] contains the least significant bits of the device identifier. DEVICEID[1] contains the most significant bits of the device identifier.

4.4.1.4 ER[n] (n=0..3)

Address offset: 0x080 + (n × 0x4)

Encryption root, word n

Bit n	umł	ber					З	13	0 29	28	27	26	25	24	23 2	22.2	21 2	0 19	18	17	16 1	5 14	13	12	11 1	0 9	8	7	6	5	4	3	2	1 0
ID							A	A	AA	A	A	А	А	A	А	A	A A	A A	А	А	A	A A	А	А	A	A A	A	A	A	А	А	A	A	A A
Rese	t Ox	FFF	FFFFF	•			1	. 1	1	1	1	1	1	1	1	1	1 1	L 1	1	1	1	1 1	1	1	1	L 1	. 1	1	1	1	1	1	1	1 1
ID															Des																			
A	R	1	R												Enc	ryp	tior	n roc	ot, v	vorc	١n													

4.4.1.5 IR[n] (n=0..3)

Address offset: 0x090 + (n × 0x4)

Identity root, word n

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field	Value Description
A R IR	Identity root, word n

4.4.1.6 DEVICEADDRTYPE

Address offset: 0x0A0

Device address type

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0xFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field			
A R DEVICEADDRTYPE			Device address type
	Public	0	Public address
	Random	1	Random address

4.4.1.7 DEVICEADDR[n] (n=0..1)

Address offset: $0x0A4 + (n \times 0x4)$

Device address n



Bit n	um	be	r	31 3	80 2	9 28	8 2	7 26	5 25	5 24	23	22	21	20 2	19 1	.8 1	7 1	5 15	14	13	12 1	11	0 9	8	7	6	5	4	3	2	1 0
ID				A	A A	A	A	A	A	A	А	А	А	А	A	A A	A	A	А	А	A	A A	A	A	A	A	А	А	A	A	A A
Rese	et O	xFF	FFFFFF	1 :	1 1	1	. 1	. 1	1	1	1	1	1	1	1	1 1	. 1	1	1	1	1	1 1	1	. 1	1	1	1	1	1	1	1 1
ID																															
А	R	ł	DEVICEADDR								48	bit	de	vice	ad	dres	s														
														DDR	101	cor	tai	nc +	hol	0.261	cia	nifi		- hii		f					

the device address. DEVICEADDR[1] contains the most significant bits of the device address. Only bits [15:0] of DEVICEADDR[1] are used.

4.4.1.8 INFO.PART

Address offset: 0x100

Part code

Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	АААААА	A A A A A A A A A A A A A A A A A A A
Reset 0x00052805	0 0 0 0 0 0	0 0 0 0 0 0 0 1 0 1 0 1 0 1 0 1 0 0 0 0
ID Acce Field Value ID		
A R PART		Part code
N52805	0x52805	nRF52805
N52810	0x52810	nRF52810
N52811	0x52811	nRF52811
N52832	0x52832	nRF52832
Unspecified	OxFFFFFFF	Unspecified

4.4.1.9 INFO.VARIANT

Address offset: 0x104

Part variant, hardware version and production configuration

Bit r	numbe	er		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ΑΑΑΑΑΑ	A A A A A A A A A A A A A A A A A A A
Res	et OxF	FFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
A	R	VARIANT			Part variant, hardware version and production
					configuration, encoded as ASCII
			AAAA	0x41414141	АААА
			AAA0	0x41414130	AAAO
			AABA	0x41414241	AABA
			AABB	0x41414242	AABB
			AAB0	0x41414230	AABO
			AAB1	0x41414231	AAB1
			AACA	0x41414341	AACA
			AACB	0x41414342	AACB
			AAC0	0x41414330	AAC0
			Unspecified	OxFFFFFFF	Unspecified

4.4.1.10 INFO.PACKAGE

Address offset: 0x108

Package option



Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААААА	
Reset 0xFFFFFFF		1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field			
A R PACKAGE			Package option
	CA	0x2004	CAxx - WLCSP
	Unspecified	0xFFFFFFF	Unspecified

4.4.1.11 INFO.RAM

Address offset: 0x10C

RAM variant

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A	A A A A A A
Reset 0x00000018	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 1 1 0 0 0
ID Acce Field Value ID		
A R RAM	RAM variant	
К24	0x18 24 kByte RAM	
Unspecified	0xFFFFFFFF Unspecified	

4.4.1.12 INFO.FLASH

Address offset: 0x110

Flash variant

Bit number		31 30 29 28 27 26 25 24	2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A	A A A A A A A A A A A A A A A A A A A
Reset 0x000000C0		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R FLASH			Flash variant
	К192	0xC0	192 kByte flash
	Unspecified	OxFFFFFFF	Unspecified

4.4.1.13 TEMP.A0

Address offset: 0x404

Slope definition A0

Bit number	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18	17 16 15 14 13 12	11 10 9	87	6	54	32	1 0
ID				AAA	A A	A A	A A	A A	ΑΑ
Reset 0xFFFFFFFF	1 1 1 1 1	1 1 1 1 1 1 1 1 1	1 1 1 1 1 1	1 1 1	1 1	. 1	1 1	1 1	1 1
ARA		A (slope definitior	n) register						

4.4.1.14 TEMP.A1

Address offset: 0x408

Slope definition A1



ID Acce Field	Value ID	Value	Descrip	otion e definiti											
Reset 0xFFFFFFF		1 1 1 1 1 1	1111:	1 1 1	11	1 1	1 1	1 1	1 1	1	1	1	1 1	1 :	11
ID								А	A A	A	А	A	A A	A	A A
Bit number		31 30 29 28 27 26	25 24 23 22 2	1 20 19 1	18 17 1	l6 15	14 13	12 11	10 9	8	7	6	54	3	21

4.4.1.15 TEMP.A2

Address offset: 0x40C

Slope definition A2

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12	11 10 9 8 7 6	5 4 3 2 1 0
ID			A A A A A A	АААААА
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1 1 1
ID Acce Field Value ID				
A R A		A (slope definition) register		

4.4.1.16 TEMP.A3

Address offset: 0x410

Slope definition A3

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID	
A R A	A (slope definition) register

4.4.1.17 TEMP.A4

Address offset: 0x414

Slope definition A4

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18	8 17 16 15 14 13 12	11 10	98	76	5 4	13	210
ID				A A	A A	A A	A	A A	ΑΑΑ
Reset 0xFFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1	1 1 1 1 1 1	1 1	1 1	1 1	1 :	ι 1	1 1 1
ID Acce Field									
A R A		A (slope definitio	n) register						

4.4.1.18 TEMP.A5

Address offset: 0x418

Slope definition A5

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14	13 12 11 10 9 8	376543210
ID			АААА	A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1	. 1 1 1 1 1 1 1 1
ID Acce Field Value ID				
A R A		A (slope definition) register		



4.4.1.19 TEMP.B0

Address offset: 0x41C

Y-intercept B0

A R B		B (y-inter	cent)										
ID Acce Field													
Reset 0xFFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1	1 1	1 1	1 1	1 1	1	1 :	1 1	1	1 1	1 1
ID					А	A A	A A	А	A	A A	А	A A	A A
Bit number	31 30 29 28 27 2	26 25 24 23 22 21 2	20 19 18 17	16 15 1	.4 13	12 11	10 9	8	7 (55	4	32	1 0

4.4.1.20 TEMP.B1

Address offset: 0x420

Y-intercept B1

Bit number	31 30 29 28 27 26 25 24 23 22	2 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	5 4 3 2 1 0
ID		ААААААА	AAAAAA
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1
ID Acce Field Value ID			
A R B	В (у-і	intercept)	

4.4.1.21 TEMP.B2

Address offset: 0x424

Y-intercept B2

Bit number 31 30 29 28 27 26 25 24 23 22 1 20 19 18 17 16 15 14 13 12 11 0 8 8 7 6 5 4 3 2 1 0 ID A A A A A A A A A A A A A A A A A A A	A R B		B (y-inte	rcept)										
	ID Acce Field													
	Reset 0xFFFFFFF	1 1 1 1 1 1	. 1 1 1 1 1	1 1 1 1	. 1 1 :	11	1 1 1	L 1	1 1	1	1 1	. 1	1 1	1
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	ID					A	AAA	A A	A A	AA	A A	A	A A	А
	Bit number	31 30 29 28 27 2	6 25 24 23 22 21	. 20 19 18 1	7 16 15 1	4 13 1	2 11 1	09	87	6	5 4	3	2 1	0

4.4.1.22 TEMP.B3

Address offset: 0x428

Y-intercept B3

ARB		B (y-interc	ept)										
ID Acce Field													
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1	1 1 1	L 1	1 1	1 1	1	1	1 1	1	1 1	11
ID					А	A A	A A	A	А	A A	А	A A	A A A
Bit number	31 30 29 28 27 2	6 25 24 23 22 21 2	0 19 18 17	' 16 15 1	4 13 3	12 11	10 9	8	7	65	4	3 2	2 1 0

4.4.1.23 TEMP.B4

Address offset: 0x42C

Y-intercept B4



ID Acce Field										
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1	1 1 1	1 1 1	1 1	. 1	1 1	1 :	111	1 1
ID			А	AAA	AA	A	A A	AA	A A A	A A
Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16	5 15 14 13	12 11 1	98	3 7	6 5	5 4 3	321	1 0

4.4.1.24 TEMP.B5

Address offset: 0x430

Y-intercept B5

A R B		B (y-in	tercept)												
ID Acce Field															
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1	1 1 1	11:	L 1	11	1 1	1	1 :	1 1	1	1	1 1	. 1	1 1
ID						А	A A	А	AA	A A	A	А	A A	A	A A
Bit number	31 30 29 28 27 26	25 24 23 22 2	21 20 19	18 17 1	6 15 1	4 13	12 11	. 10	9 8	87	6	5	4 3	2	1 0

4.4.1.25 TEMP.TO

Address offset: 0x434

Segment end TO

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID	
A R T	T (segment end) register

A R T

4.4.1.26 TEMP.T1

Address offset: 0x438

Segment end T1

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17	16 15 14 13 12 11 10 9	8 7 6 5 4 3 2 1 0
ID				АААААААА
Reset 0xFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1
ID Acce Field				
A R T		T (segment end) regis	ster	

4.4.1.27 TEMP.T2

Address offset: 0x43C

Segment end T2

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field Value ID		
A R T		T (segment end) register



4.4.1.28 TEMP.T3

Address offset: 0x440

Segment end T3

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field	
A R T	T (segment end) register
ART	T (segment end) register

4.4.1.29 TEMP.T4

Address offset: 0x444

Segment end T4

Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18	8 17 16 15 14 13 12	11 10 9 8	76	54	3 2	1 0
ID					A A	A A	A A	A A
Reset 0xFFFFFFFF	1 1 1 1 1	1 1 1 1 1 1 1 1 1	1 1 1 1 1 1	1 1 1 1	1 1	1 1	1 1	1 1
ID Acce Field								
A R T		T (segment end)	register					

4.5 UICR — User information configuration registers

The user information configuration registers (UICRs) are non-volatile memory (NVM) registers for configuring user-specific settings.

For information on writing UICR registers, see the NVMC — Non-volatile memory controller on page 18 and Memory on page 15 chapters.

4.5.1 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x10001000	UICR	UICR	User information configuration		
			Table 10: Instances		
Register	Offset	: Descrip	otion		
UNUSED0	0x000				Reserved
UNUSED1	0x004				Reserved
UNUSED2	0x008				Reserved
UNUSED3	0x010				Reserved
NRFFW[0]	0x014	Reserve	ed for Nordic firmware design		
NRFFW[1]	0x018	Reserve	ed for Nordic firmware design		
NRFFW[2]	0x01C	Reserve	ed for Nordic firmware design		
NRFFW[3]	0x020	Reserve	ed for Nordic firmware design		
NRFFW[4]	0x024	Reserve	ed for Nordic firmware design		
NRFFW[5]	0x028	Reserve	ed for Nordic firmware design		
NRFFW[6]	0x02C	Reserve	ed for Nordic firmware design		
NRFFW[7]	0x030	Reserve	ed for Nordic firmware design		



Register	Offset	Description
NRFFW[8]	0x034	Reserved for Nordic firmware design
NRFFW[9]	0x038	Reserved for Nordic firmware design
NRFFW[10]	0x03C	Reserved for Nordic firmware design
NRFFW[11]	0x040	Reserved for Nordic firmware design
NRFFW[12]	0x044	Reserved for Nordic firmware design
NRFHW[0]	0x050	Reserved for Nordic hardware design
NRFHW[1]	0x054	Reserved for Nordic hardware design
NRFHW[2]	0x058	Reserved for Nordic hardware design
NRFHW[3]	0x05C	Reserved for Nordic hardware design
NRFHW[4]	0x060	Reserved for Nordic hardware design
NRFHW[5]	0x064	Reserved for Nordic hardware design
NRFHW[6]	0x068	Reserved for Nordic hardware design
NRFHW[7]	0x06C	Reserved for Nordic hardware design
NRFHW[8]	0x070	Reserved for Nordic hardware design
NRFHW[9]	0x074	Reserved for Nordic hardware design
NRFHW[10]	0x078	Reserved for Nordic hardware design
NRFHW[11]	0x07C	Reserved for Nordic hardware design
CUSTOMER[0]	0x080	Reserved for customer
CUSTOMER[1]	0x084	Reserved for customer
CUSTOMER[2]	0x088	Reserved for customer
CUSTOMER[3]	0x08C	Reserved for customer
CUSTOMER[4]	0x090	Reserved for customer
CUSTOMER[5]	0x094	Reserved for customer
CUSTOMER[6]	0x098	Reserved for customer
CUSTOMER[7]	0x09C	Reserved for customer
CUSTOMER[8]	0x0A0	Reserved for customer
CUSTOMER[9]	0x0A4	Reserved for customer
CUSTOMER[10]	0x0A8	Reserved for customer
CUSTOMER[11]	0x0AC	Reserved for customer
CUSTOMER[12]	0x0B0	Reserved for customer
CUSTOMER[13]	0x0B4	Reserved for customer
CUSTOMER[14]	0x0B8	Reserved for customer
CUSTOMER[15]	0x0BC	Reserved for customer
CUSTOMER[16]	0x0C0	Reserved for customer
CUSTOMER[17]	0x0C4	Reserved for customer
CUSTOMER[18]	0x0C8	Reserved for customer
CUSTOMER[19]	0x0CC	Reserved for customer
CUSTOMER[20]	0x0D0	Reserved for customer
CUSTOMER[21]	0x0D4	Reserved for customer
CUSTOMER[22]	0x0D8	Reserved for customer
CUSTOMER[23]	0x0DC	Reserved for customer
CUSTOMER[24]	0x0E0	Reserved for customer
CUSTOMER[25]	0x0E4	Reserved for customer
CUSTOMER[26]	0x0E4	Reserved for customer
CUSTOMER[27]	0x0EC	Reserved for customer
CUSTOMER[28]	0x0EC	Reserved for customer
CUSTOMER[29]	0x0F4	Reserved for customer
CUSTOMER[30]	0x0F8	Reserved for customer
CUSTOMER[31]	0x0F8	Reserved for customer
NRFMDK[0]	0x0FC	Reserved for Nordic MDK
		Reserved for Nordic MDK
NRFMDK[1]	0x104	
NRFMDK[2]	0x108	Reserved for Nordic MDK
NRFMDK[3]	0x10C	Reserved for Nordic MDK



Register	Offset	Description
NRFMDK[4]	0x110	Reserved for Nordic MDK
NRFMDK[5]	0x114	Reserved for Nordic MDK
NRFMDK[6]	0x118	Reserved for Nordic MDK
NRFMDK[7]	0x11C	Reserved for Nordic MDK
PSELRESET[0]	0x200	Mapping of the nRESET function (see POWER chapter for details)
PSELRESET[1]	0x204	Mapping of the nRESET function (see POWER chapter for details)
APPROTECT	0x208	Access port protection

Table 11: Register overview

4.5.1.1 NRFFW[n] (n=0..12)

Address offset: $0x014 + (n \times 0x4)$

Reserved for Nordic firmware design

Bit n	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	543210
ID				
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1
ID				
А	RW NRFFW Reserved for Nordic firmware design			

4.5.1.2 NRFHW[n] (n=0..11)

Address offset: $0x050 + (n \times 0x4)$

Reserved for Nordic hardware design

Bit number	31 30 29 28 27 26 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	АААААА	A A A A A A A A A A A A A A A A A A A
Reset 0xFFFFFFFF	1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID Acce Field		Description

A RW NRFHW

Reserved for Nordic hardware design

4.5.1.3 CUSTOMER[n] (n=0..31)

Address offset: $0x080 + (n \times 0x4)$

Reserved for customer

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18	3 17 16 15 14 13 1	12 11 10 9 8	7654	3210
ID	ΑΑΑΑΑ	A A A A A A A A	AAAAA	ААААА	AAAA	
Reset 0xFFFFFFFF	1 1 1 1 1 1	1 1 1 1 1 1 1 1	1 1 1 1 1	1 1 1 1 1	1 1 1 1	. 1 1 1 1
ID Acce Field						

A RW CUSTOMER

Reserved for customer

4.5.1.4 NRFMDK[n] (n=0..7)

Address offset: 0x100 + (n × 0x4)

Reserved for Nordic MDK



A RW NREMDK	Reserved for Nordic MDK
Reset 0xFFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID	
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

4.5.1.5 PSELRESET[n] (n=0..1)

Address offset: $0x200 + (n \times 0x4)$

Mapping of the nRESET function (see POWER chapter for details)

All PSELRESET registers have to contain the same value for a pin mapping to be valid. If values are not the same, there will be no nRESET function exposed on a GPIO. As a result, the device will always start independently of the levels present on any of the GPIOs.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		21	GPIO pin number onto which nRESET is exposed
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

4.5.1.6 APPROTECT

Address offset: 0x208

Access port protection

	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0		
ID		АААААААА		
	1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
		Enable or disable access port protection.		
		See Debug on page 37 for more information.		
Disabled	0xFF	Hardware disable of access port protection for devices		
		where access port protection is controlled by hardware		
HwDisabled	0x5A	Hardware disable of access port protection for devices		
		where access port protection is controlled by hardware and		
		software		
Enabled		Enable		
	Disabled HwDisabled	Disabled OxFF HwDisabled Ox5A		

4.6 EasyDMA

EasyDMA is a module implemented by some peripherals to gain direct access to Data RAM.

EasyDMA is an AHB bus master similar to CPU and is connected to the AHB multilayer interconnect for direct access to Data RAM. EasyDMA is not able to access flash.

A peripheral can implement multiple EasyDMA instances to provide dedicated channels. For example, for reading and writing of data between the peripheral and RAM. This concept is illustrated in EasyDMA example on page 35.



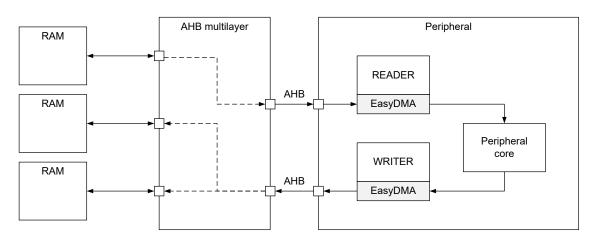


Figure 4: EasyDMA example

An EasyDMA channel is implemented in the following way, but some variations may occur:

```
READERBUFFER_SIZE 5
WRITERBUFFER_SIZE 6
uint8_t readerBuffer[READERBUFFER_SIZE] __at__ 0x20000000;
uint8_t writerBuffer[WRITERBUFFER_SIZE] __at__ 0x20000005;
// Configuring the READER channel
MYPERIPHERAL->READER.MAXCNT = READERBUFFER_SIZE;
MYPERIPHERAL->READER.PTR = &readerBuffer;
// Configure the WRITER channel
MYPERIPHERAL->WRITER.MAXCNT = WRITEERBUFFER_SIZE;
MYPERIPHERAL->WRITER.MAXCNT = WRITEERBUFFER_SIZE;
MYPERIPHERAL->WRITER.PTR = &writerBuffer;
```

This example shows a peripheral called MYPERIPHERAL that implements two EasyDMA channels - one for reading called READER, and one for writing called WRITER. When the peripheral is started, it is assumed that the peripheral will perform the following tasks:

- Read 5 bytes from the readerBuffer located in RAM at address 0x20000000
- Process the data
- Write no more than 6 bytes back to the writerBuffer located in RAM at address 0x20000005

The memory layout of these buffers is illustrated in EasyDMA memory layout on page 35.

0x20000000	readerBuffer[0]	readerBuffer[1]	readerBuffer[2]	readerBuffer[3]
0x20000004	readerBuffer[4]	writerBuffer[0]	writerBuffer[1]	writerBuffer[2]
0x20000008	writerBuffer[3]	writerBuffer[4]	writerBuffer[5]	

Figure 5: EasyDMA memory layout

The WRITER.MAXCNT register should not be specified larger than the actual size of the buffer (writerBuffer). Otherwise, the channel would overflow the writerBuffer.



Once an EasyDMA transfer is completed, the AMOUNT register can be read by the CPU to see how many bytes were transferred. For example, CPU can read MYPERIPHERAL->WRITER.AMOUNT register to see how many bytes WRITER wrote to RAM.

Note: The PTR register of a READER or WRITER must point to a valid memory region before use. The reset value of a PTR register is not guaranteed to point to valid memory. See Memory on page 15 for more information about the different memory regions and EasyDMA connectivity.

4.6.1 EasyDMA error handling

Some errors may occur during DMA handling.

If READER.PTR or WRITER.PTR is not pointing to a valid memory region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

If several AHB bus masters try to access the same AHB slave at the same time, AHB bus congestion might occur. An EasyDMA channel is an AHB master. Depending on the peripheral, the peripheral may either stall and wait for access to be granted, or lose data.

4.6.2 EasyDMA array list

EasyDMA is able to operate in Array List mode.

The Array List mode is implemented in channels where the LIST register is available.

The array list does not provide a mechanism to explicitly specify where the next item in the list is located. Instead, it assumes that the list is organized as a linear array where items are located one after the other in RAM.

The EasyDMA Array List can be implemented by using the data structure ArrayList_type as illustrated in the code example below using a READER EasyDMA channel as an example:

```
#define BUFFER_SIZE 4

typedef struct ArrayList
{
    uint8_t buffer[BUFFER_SIZE];
} ArrayList_type;

ArrayList_type ReaderList[3] __at__ 0x20000000;

MYPERIPHERAL->READER.MAXCNT = BUFFER_SIZE;
MYPERIPHERAL->READER.PTR = &ReaderList;
MYPERIPHERAL->READER.LIST = MYPERIPHERAL_READER_LIST_ArrayList;
```

The data structure only includes a buffer with size equal to the size of READER.MAXCNT register. EasyDMA uses the READER.MAXCNT register to determine when the buffer is full.



READER.PTR = &ReaderList

0x20000000 : ReaderList[0]	buffer[0]	buffer[1]	buffer[2]	buffer[3]
0x20000004 : ReaderList[1]	buffer[0]	buffer[1]	buffer[2]	buffer[3]
0x20000008 : ReaderList[2]	buffer[0]	buffer[1]	buffer[2]	buffer[3]

Figure 6: EasyDMA array list

4.7 AHB multilayer

AHB multilayer enables parallel access paths between multiple masters and slaves in a system. Access is resolved using priorities.

Each bus master is connected to the slave devices using an interconnection matrix. The bus masters are assigned priorities. Priorities are used to resolve access when two (or more) bus masters request access to the same slave device. The following applies:

- If two (or more) bus masters request access to the same slave device, the master with the highest priority is granted the access first.
- Bus masters with lower priority are stalled until the higher priority master has completed its transaction.
- If the higher priority master pauses at any point during its transaction, the lower priority master in queue is temporarily granted access to the slave device until the higher priority master resumes its activity.
- Bus masters that have the same priority are mutually exclusive, thus cannot be used concurrently.

Below is a list of bus masters in the system and their priorities.

Bus master name	Description
CPU	
SPIM0/SPIS0	Same priority and mutually exclusive
RADIO	
CCM/ECB/AAR	Same priority and mutually exclusive
SAADC	
UARTEO	
TWIM0/TWIS0	Same priority and mutually exclusive



Defined bus masters are the CPU and the peripherals with implemented EasyDMA, and the available slaves are RAM AHB slaves. How the bus masters and slaves are connected using the interconnection matrix is illustrated in Memory on page 15.

4.8 Debug

The debug system offers a flexible and powerful mechanism for non-intrusive debugging.



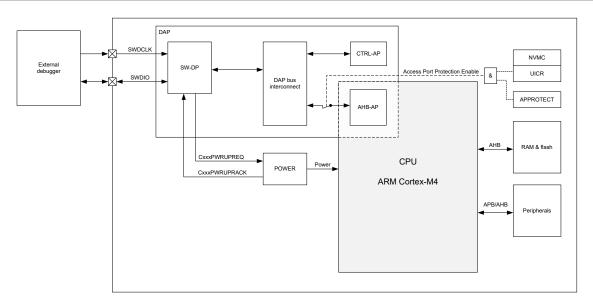


Figure 7: Debug overview

The main features of the debug system are the following:

- Two-pin serial wire debug (SWD) interface
- Flash patch and breakpoint (FPB) unit that supports the following comparators:
 - Two literal comparators
 - Six instruction comparators

4.8.1 DAP - Debug access port

An external debugger can access the device via the DAP.

The debug access port (DAP) implements a standard ARM[®] CoreSight[™] serial wire debug port (SW-DP), which implements the serial wire debug protocol (SWD). SWD is a two-pin serial interface, see SWDCLK and SWDIO in Debug overview on page 38.

In addition to the default access port in CPU (AHB-AP), the DAP includes a custom control access port (CTRL-AP). The CTRL-AP is described in more detail in CTRL-AP - Control access port on page 41.

Note:

- The SWDIO line has an internal pull-up resistor.
- The SWDCLK line has an internal pull-down resistor.

4.8.2 Access port protection

Access port protection blocks the debugger from read and write access to all CPU registers and memorymapped addresses when enabled.

Access port protection is enabled and disabled differently depending on the build code of the device.

Access port protection controlled by hardware

This information refers to build codes Axx and earlier.

By default, access port protection is disabled.

Access port protection is enabled by writing UICR.APPROTECT to Enabled and performing any reset. See Reset on page 54 for more information.



Access port protection is disabled by issuing an ERASEALL command via CTRL-AP. This command will erase the flash, UICR, and RAM, including UICR.APPROTECT. Erasing UICR will set UICR.APPROTECT value to Disabled. CTRL-AP is described in more detail in CTRL-AP - Control access port on page 41.

Access port protection controlled by hardware and software

This information refers to build codes Bxx and later.

By default, access port protection is enabled.

Access port protection is disabled by issuing an ERASEALL command via CTRL-AP. Read CTRL-AP.APPROTECTSTATUS to ensure that access port protection is disabled, and repeat the ERASEALL command if needed. This command will erase the flash, UICR, and RAM. CTRL-AP is described in more detail in CTRL-AP - Control access port on page 41. Access port protection will remain disabled until one of the following occurs:

- Pin reset
- Power or brownout reset
- Watchdog reset if not in Debug Interface Mode, see Debug Interface mode on page 43
- Wake from System OFF if not in Emulated System OFF

To keep access port protection disabled, the following actions must be performed:

- Program UICR.APPROTECT to HwDisabled. This disables the hardware part of the access port protection scheme after the first reset of any type. The hardware part of the access port protection will stay disabled as long as UICR.APPROTECT is not overwritten.
- Firmware must write APPROTECT.DISABLE to SwDisable. This disables the software part of the access port protection scheme.

Note: Register APPROTECT.DISABLE is reset after pin reset, power or brownout reset, watchdog reset, or wake from System OFF as mentioned above.

The following figure is an example on how a device with access port protection enabled can be erased, programmed, and configured to allow debugging. Operations sent from debugger as well as registers written by firmware will affect the access port state.


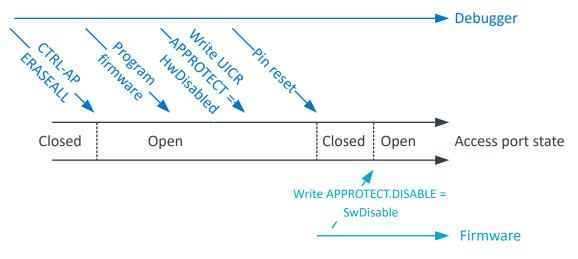


Figure 8: Access port unlocking

Access port protection is enabled when the disabling conditions are not present. For additional security, it is recommended to write Enabled to UICR.APPROTECT, and have firmware write Force to APPROTECT.FORCEPROTECT. This is illustrated in the following figure.

Note: Register APPROTECT.FORCEPROTECT is reset after any reset.



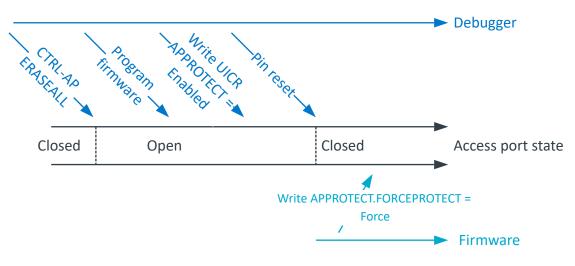



4.8.2.1 Registers

Base address	Peripheral	ripheral Instance Description		Configuration	
0x40000000	APPROTECT	APPROTECT	APPROTECT control		
			Table 13: Instances		
Register	Offset	Descriptio	n		
FORCEPROTECT	0x550	Software f	orce enable APPROTECT mechanisr	n until next reset	

Register	Unset	Description
FORCEPROTECT	0x550	Software force enable APPROTECT mechanism until next reset.
DISABLE	0x558	Software disable APPROTECT mechanism

Table 14: Register overview

4.8.2.1.1 FORCEPROTECT

Address offset: 0x550

Software force enable APPROTECT mechanism until next reset.

		Force	0x0	Software force enable APPROTECT mechanism
A	RW1 FORCEPROTECT			Write 0x0 to force enable APPROTECT mechanism
ID				Description
Res	et OxFFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				A A A A A A A A A A A A A A A A A A A
Bit r	umber		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

4.8.2.1.2 DISABLE

Address offset: 0x558

Software disable APPROTECT mechanism



	SwDisable	0x5A Software disable APPROTECT mechanism									
A RW DISABLE		Software disable APPROTECT mechanism									
ID Acce Field											
Reset 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0									
ID		A A A A A A									
Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2									

4.8.3 CTRL-AP - Control access port

The control access port (CTRL-AP) is a custom access port that enables control of the device when other access ports in the DAP are disabled by the access port protection.

Access port protection is described in more detail in Access port protection on page 38.

Control access port has the following features:

- Soft reset see Reset on page 54 for more information
- Disabling of access port protection device control is allowed through CTRL-AP even when all other access ports in DAP are disabled by access port protection

4.8.3.1 Registers

Register	Offset	Description
RESET	0x000	Soft reset triggered through CTRL-AP
ERASEALL	0x004	Erase all
ERASEALLSTATUS	0x008	Status register for the ERASEALL operation
APPROTECTSTATUS	0x00C	Status register for access port protection
IDR	0x0FC	CTRL-AP identification register, IDR

Table 15: Register overview

4.8.3.1.1 RESET

Address offset: 0x000

Soft reset triggered through CTRL-AP

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW RESET			Soft reset triggered through CTRL-AP. See Reset behavior in
			POWER chapter for more details.
	NoReset	0	Reset is not active
	Reset	1	Reset is active. Device is held in reset.

4.8.3.1.2 ERASEALL

Address offset: 0x004

Erase all



Bit number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W ERASEALL			Erase all flash and RAM
	NoOperation	0	No operation
	Erase	1	Erase all flash and RAM

4.8.3.1.3 ERASEALLSTATUS

Address offset: 0x008

Status register for the ERASEALL operation

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R ERASEALLSTATUS			Status register for the ERASEALL operation
	Ready	0	ERASEALL is ready
	Busy	1	ERASEALL is busy (on-going)

4.8.3.1.4 APPROTECTSTATUS

Address offset: 0x00C

Status register for access port protection

Bit nu	ımber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Reset	: 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	R APPROTECTSTATUS			Status register for access port protection
		Enabled	0	Access port protection enabled
		Disabled	1	Access port protection not enabled

4.8.3.1.5 IDR

Address offset: 0x0FC

CTRL-AP identification register, IDR

Bit n	umbe	r		31	30 2	29	28 2	72	6 25	5 24	23	22	212	20 3	19 1	8 17	16	15	14 1	3 12	11	10	98	37	6	5	4	3	2	1 0
ID				Е	Е	E	ΕC		D	D	С	С	С	С	сс	C	В	В	В	3				Д	A	А	А	A	Α.	A A
Rese	t 0x0	2880000		0	0	0	0 () () 1	0	1	0	0	0	1 (0	0	0	0	0 0	0	0	0 (0 0	0	0	0	0	0	0 0
ID																														
А	R	APID									AP	'ide	entif	ica	tion															
В	R	CLASS									Ac	ces	s po	rt ((AP)	clas	s													
			NotDefined	0x	0						No	o de	fine	d c	lass															
			MEMAP	0x	8						M	emo	ory a	acc	ess	oort														
С	R	JEP106ID									JEI	DEC	JEP	10	6 ide	entit	у со	ode												
D	R	JEP106CONT									JEI	DEC	JEP	10	6 co	ntin	uati	ion	cod	5										
Е	R	REVISION									Re	visi	on																	



4.8.3.2 Electrical specification

4.8.3.2.1 Control access port

Symbol	Description	Min.	Тур.	Max.	Units
R _{pull}	Internal SWDIO and SWDCLK pull up/down resistance		13		kΩ
f _{SWDCLK}	SWDCLK frequency	0.125		8	MHz

4.8.4 Debug Interface mode

Before an external debugger can access either CPU's access port (AHB-AP) or the control access port (CTRL-AP), the debugger must first request the device to power up via CxxxPWRUPREQ in the SWJ-DP.

If the device is in System OFF when power is requested via CxxxPWRUPREQ, the system will wake up and the DIF flag in RESETREAS on page 59 will be set. The device is in the Debug Interface mode as long as the debugger is requesting power via CxxxPWRUPREQ. Once the debugger stops requesting power via CxxxPWRUPREQ, the device is back in normal mode. Some peripherals behave differently in Debug Interface mode compared to normal mode. These differences are described in more detail in the chapters of the peripherals that are affected.

When a debug session is over, the external debugger must make sure to put the device back into normal mode since the overall power consumption is higher in Debug Interface mode than in normal mode.

For details on how to use the debug capabilities, read the debug documentation of your IDE.

4.8.5 Real-time debug

The nRF52805 supports real-time debugging.

Real-time debugging allows interrupts to execute to completion in real time when breakpoints are set in Thread mode or lower priority interrupts. This enables developers to set breakpoints and single-step through the code without the risk of real-time event-driven threads running at higher priority failing. For example, this enables the device to continue to service the high-priority interrupts of an external controller or sensor without failure or loss of state synchronization while the developer steps through code in a low-priority thread.



Power and clock management

5.1 Power management unit (PMU)

Power and clock management in nRF52805 is designed to automatically ensure maximum power efficiency.

The core of the power and clock management system is the power management unit (PMU) illustrated in Power management unit on page 44.

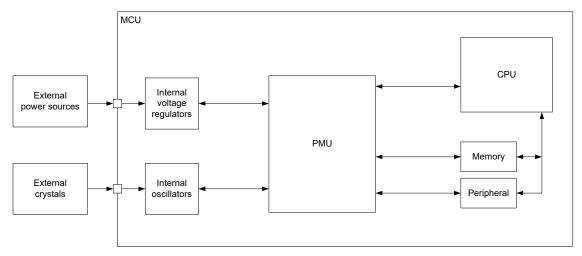


Figure 10: Power management unit

The PMU automatically detects which power and clock resources are required by the different components in the system at any given time. It will then start/stop and choose operation modes in supply regulators and clock sources, without user interaction, to achieve the lowest power consumption possible.

5.2 Current consumption

Because the system is continually being tuned by the Power management unit (PMU) on page 44, estimating an application's current consumption can be challenging when measurements cannot be directly performed on the hardware. To facilitate the estimation process, a set of current consumption scenarios are provided to show the typical current drawn from the VDD supply.

Each scenario specifies a set of operations and conditions applying to the given scenario. The following table shows a set of common conditions used in all scenarios, unless otherwise stated in the description of a given scenario. All scenarios are listed in Electrical specification on page 45.



Condition	Value
VDD	3 V
Temperature	25°C
CPU	WFI (wait for interrupt)/WFE (wait for event) sleep
Peripherals	All idle
Clock	Not running
Regulator	LDO
RAM	In System ON, full 24 kB powered. In System OFF or System ON Idle, full 24 kB retention.
Compiler ³	GCC v4.9.3 20150529 (arm-none-eabi-gcc). Compiler flags: -O0 -falign- functions=16 -fno-strict-aliasing -mcpu=cortex-m4 -mfloat-abi=soft -msoft- float -mthumb.
32 MHz crystal ⁴	SMD 2520, 32 MHz, 10 pF +/- 10 ppm

Table 16: Current consumption scenarios, common conditions

5.2.1 Electrical specification

5.2.1.1 Sleep

Symbol	Description	Min.	Тур.	Max.	Units
ION_RAMOFF_EVENT	System ON, no RAM retention, wake on any event		0.6		μA
ION_RAMON_EVENT	System ON, full 24 kB RAM retention, wake on any event		0.8		μΑ
ION_RAMON_POF	System ON, full 24 kB RAM retention, wake on any event,		0.8		μΑ
	power-fail comparator enabled				
ION_RAMON_GPIOTE	System ON, full 24 kB RAM retention, wake on GPIOTE input		3.3		μΑ
	(event mode)				
ION_RAMON_GPIOTEPOP	TSystem ON, full 24 kB RAM retention, wake on GPIOTE PORT		0.8		μΑ
	event				
ION_RAMOFF_RTC	System ON, no RAM retention, wake on RTC (running from		1.4		μΑ
	LFRC clock)				
ION_RAMON_RTC	System ON, full 24 kB RAM retention, wake on RTC (running		1.5		μΑ
	from LFRC clock)				
I _{OFF_RAMOFF_RESET}	System OFF, no RAM retention, wake on reset		0.3		μΑ
IOFF_RAMON_RESET	System OFF, full 24 kB RAM retention, wake on reset		0.5		μΑ
ION_RAMON_RTC_LFXO	System ON, full 24 kB RAM retention, wake on RTC (running		1.1		μΑ
	from LFXO clock)				
ION_RAMOFF_RTC_LEXO	System ON, no RAM retention, wake on RTC (running from		1.0		μΑ
	LFXO clock)				

 ³ Applying only when CPU is running
 ⁴ Applying only when HFXO is running

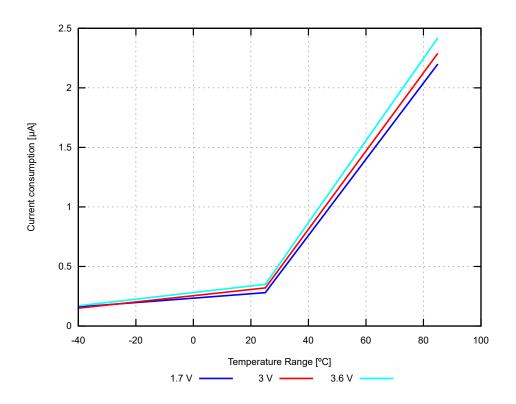


Figure 11: System OFF, no RAM retention, wake on reset (typical values)

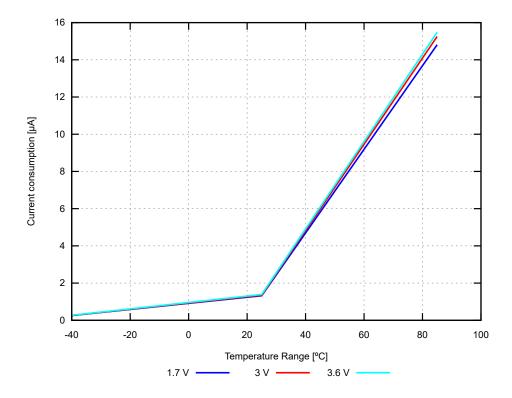


Figure 12: System ON, full 24 kB RAM retention, wake on any event (typical values)



5.2.1.2 CPU running

Symbol	Description	Min.	Тур.	Max.	Units
I _{CPU0}	CPU running CoreMark @64 MHz from flash, Clock = HFXO,		2.2		mA
	Regulator = DC/DC				
I _{CPU1}	CPU running CoreMark @64 MHz from flash, Clock = HFXO		4.2		mA
I _{CPU2}	CPU running CoreMark @64 MHz from RAM, Clock = HFXO,		2.1		mA
	Regulator = DC/DC				
I _{CPU3}	CPU running CoreMark @64 MHz from RAM, Clock = HFXO		4		mA
I _{CPU4}	CPU running CoreMark @64 MHz from flash, Clock = HFINT,		2		mA
	Regulator = DC/DC				

5.2.1.3 Radio transmitting/receiving

Symbol	Description	Min.	Тур.	Max.	Units
I _{RADIO_TX0}	Radio transmitting @ 4 dBm output power, 1 Mbps		8		mA
	Bluetooth [®] Low Energy (BLE) mode, Clock = HFXO, Regulator				
	= DC/DC				
IRADIO_TX1	Radio transmitting @ 0 dBm output power, 1 Mbps BLE		5.8		mA
	mode, Clock = HFXO, Regulator = DC/DC				
I _{RADIO_TX2}	Radio transmitting @ -40 dBm output power, 1 Mbps BLE		3.4		mA
	mode, Clock = HFXO, Regulator = DC/DC				
I _{RADIO_TX3}	Radio transmitting @ 0 dBm output power, 1 Mbps BLE		10.5		mA
	mode, Clock = HFXO				
I _{RADIO_TX4}	Radio transmitting @ -40 dBm output power, 1 Mbps BLE		5.1		mA
	mode, Clock = HFXO				
I _{RADIO_RX0}	Radio receiving @ 1 Mbps BLE mode, Clock = HFXO,		6.1		mA
	Regulator = DC/DC				
IRADIO_RX1	Radio receiving @ 1 Mbps BLE mode, Clock = HFXO		10.8		mA



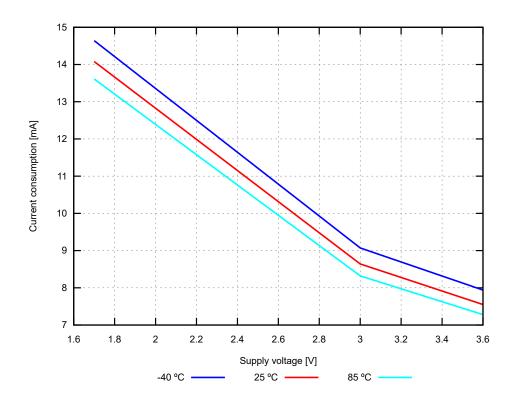


Figure 13: Radio transmitting @ 4 dBm output power, 1 Mbps BLE mode, Clock = HFXO, Regulator = DC/DC (typical values)

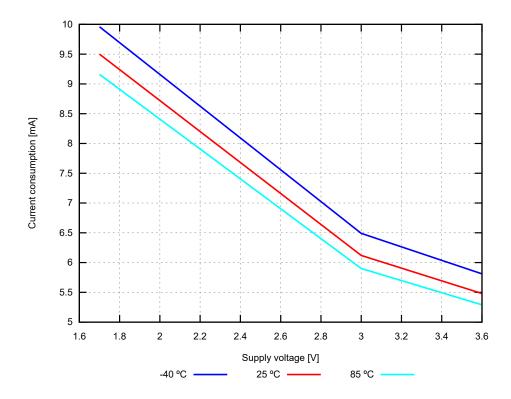


Figure 14: Radio transmitting @ 0 dBm output power, 1 Mbps BLE mode, Clock = HFXO, Regulator = DC/DC (typical values)



5.2.1.4 RNG active

Symbol	Description	Min.	Тур.	Max.	Units
I _{RNG0}	RNG running		539		μΑ

5.2.1.5 TEMP active

Symbol	Description	Min.	Тур.	Max.	Units
I _{TEMP0}	TEMP started		1.0		mA

5.2.1.6 TIMER running

Symbol	Description	Min.	Тур.	Max.	Units
I _{TIMERO}	One TIMER instance running @ 1 MHz, Clock = HFINT		432		μΑ
I _{TIMER1}	Two TIMER instances running @ 1 MHz, Clock = HFINT		432		μΑ
I _{TIMER2}	One TIMER instance running @ 1 MHz, Clock = HFXO		730		μA
I _{TIMER3}	One TIMER instance running @ 16 MHz, Clock = HFINT		495		μΑ
I _{TIMER4}	One TIMER instance running @ 16 MHz, Clock = HFXO		792		μΑ

5.2.1.7 SAADC active

Symbol	Description	Min.	Тур.	Max.	Units
I _{SAADC,RUN}	SAADC sampling @ 16 ksps, Acquisition time = 20 μ s, Clock =		1.1		mA
	HFXO, Regulator = DCDC				

5.2.1.8 WDT active

Symbol	Description	Min.	Тур.	Max.	Units
I _{WDT,STARTED}	WDT started		1.3		μΑ

5.2.1.9 Compounded

Symbol	Description	Min.	Тур.	Max.	Units
I _{SO}	CPU running CoreMark from flash, Radio transmitting @ 0		7.4		mA
	dBm output power, 1 Mbps <i>Bluetooth</i> [®] Low Energy (BLE)				
	mode, Clock = HFXO, Regulator = DC/DC				
I _{S1}	CPU running CoreMark from flash, Radio receiving @ 1		7.6		mA
	Mbps BLE mode, Clock = HFXO, Regulator = DC/DC				
I _{S2}	CPU running CoreMark from flash, Radio transmitting @ 0		13.8		mA
	dBm output power, 1 Mbps BLE mode, Clock = HFXO				
I _{S3}	CPU running CoreMark from flash, Radio receiving @ 1		14.2		mA
	Mbps BLE mode, Clock = HFXO				

5.3 POWER — Power supply

This device has the following power supply features:

- On-chip LDO and DC/DC regulators
- Global System ON/OFF modes with individual RAM section power control



- Analog or digital pin wakeup from System OFF
- Supervisor HW to manage power on reset, brownout, and power fail
- Auto-controlled refresh modes for LDO and DC/DC regulators to maximize efficiency
- Automatic switching between LDO and DC/DC regulator based on load to maximize efficiency

Note: Two additional external passive components are required to use the DC/DC regulator.

5.3.1 Regulators

The following internal power regulator alternatives are supported:

- Internal LDO regulator
- Internal DC/DC regulator

The LDO is the default regulator.

The DC/DC regulator can be used as an alternative to the LDO regulator and is enabled through the DCDCEN on page 61 register. Using the DC/DC regulator will reduce current consumption compared to when using the LDO regulator, but the DC/DC regulator requires an external LC filter to be connected, as shown in DC/DC regulator setup on page 51.

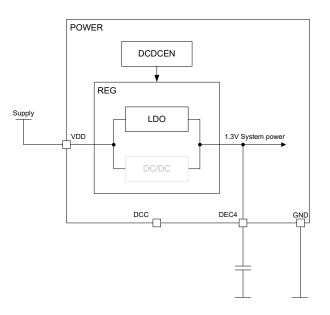


Figure 15: LDO regulator setup



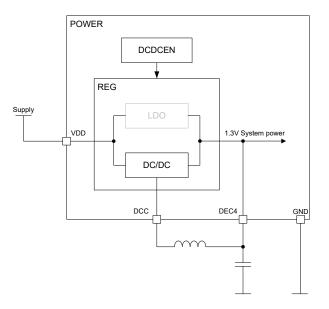


Figure 16: DC/DC regulator setup

5.3.2 System OFF mode

System OFF is the deepest power saving mode the system can enter. In this mode, the system's core functionality is powered down and all ongoing tasks are terminated.

The device can be put into System OFF mode using the register SYSTEMOFF on page 59. When in System OFF mode, the device can be woken up through one of the following signals:

- The DETECT signal, optionally generated by the GPIO peripheral
- A reset

When the system wakes up from System OFF mode, it gets reset. For more details, see Reset behavior on page 55.

One or more RAM sections can be retained in System OFF mode, depending on the settings in the RAM[n].POWER registers.

RAM[n].POWER are retained registers, see Reset behavior. These registers are usually overwritten by the startup code provided with the nRF application examples.

Before entering System OFF mode, the user must make sure that all on-going EasyDMA transactions have been completed. This is usually accomplished by making sure that the EasyDMA enabled peripheral is not active when entering System OFF.

5.3.2.1 Emulated System OFF mode

If the device is in debug interface mode, System OFF will be emulated to secure that all required resources needed for debugging are available during System OFF.

See Debug on page 37 for more information. Required resources needed for debugging include the following key components:

- Debug on page 37
- CLOCK Clock control on page 63
- POWER Power supply on page 49
- NVMC Non-volatile memory controller on page 18
- CPU
- Flash



RAM

Since the CPU is kept on in an emulated System OFF mode, it is recommended to add an infinite loop directly after entering System OFF, to prevent the CPU from executing code that normally should not be executed.

5.3.3 System ON mode

System ON is the default state after power-on reset. In System ON, all functional blocks such as the CPU or peripherals can be in IDLE or RUN mode, depending on the configuration set by the software and the state of the application executing.

Register **RESETREAS** on page 59 provides information about the source causing the wakeup or reset.

The system can switch the appropriate internal power sources on and off, depending on how much power is needed at any given time. The power requirement of a peripheral is directly related to its activity level, and the activity level of a peripheral is usually raised and lowered when specific tasks are triggered or events are generated.

5.3.3.1 Sub power modes

In System ON mode, when both the CPU and all the peripherals are in IDLE mode, the system can reside in one of the two sub power modes.

The sub power modes are:

- Constant Latency
- Low-power

In Constant Latency mode, the CPU wakeup latency and the PPI task response are constant and kept at a minimum. This is secured by forcing a set of basic resources to be turned on while in sleep. Having a constant and predictable latency is at the cost of having increased power consumption. The Constant Latency mode is selected by triggering the CONSTLAT task.

In Low-power mode, the automatic power management system described in System ON mode on page 52 ensures that the most efficient supply option is chosen to save most power. Having the lowest power possible is at the cost of having a varying CPU wakeup latency and PPI task response. The Low-power mode is selected by triggering the LOWPWR task.

When the system enters System ON mode, it is by default in Low-power sub power mode.

5.3.4 Power supply supervisor

The power supply supervisor initializes the system at power-on and provides an early warning of impending power failure.

In addition, the power supply supervisor puts the system in a reset state if the supply voltage is too low for safe operation (brownout). The power supply supervisor is illustrated in Power supply supervisor on page 53.



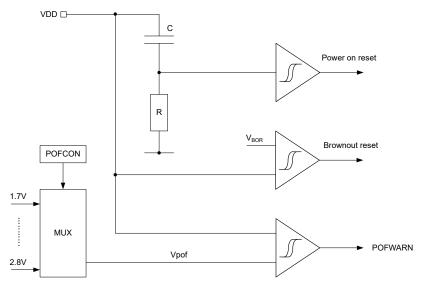


Figure 17: Power supply supervisor

5.3.4.1 Power-fail comparator

The power-fail comparator (POF) can provide the CPU with an early warning of impending power failure. It will not reset the system, but give the CPU time to prepare for an orderly power-down.

The comparator features a hysteresis of V_{HYST} , as illustrated in Power-fail comparator (BOR = Brownout reset) on page 53. The threshold V_{POF} is set in register POFCON on page 60. If the POF is enabled and the supply voltage falls below V_{POF} , the POFWARN event will be generated. This event will also be generated if the supply voltage is already below V_{POF} at the time the POF is enabled, or if V_{POF} is reconfigured to a level above the supply voltage.

If power-fail warning is enabled and the supply voltage is below V_{POF} the power-fail comparator will prevent the NVMC from performing write operations to the NVM. See NVMC — Non-volatile memory controller on page 18 for more information about the NVMC.

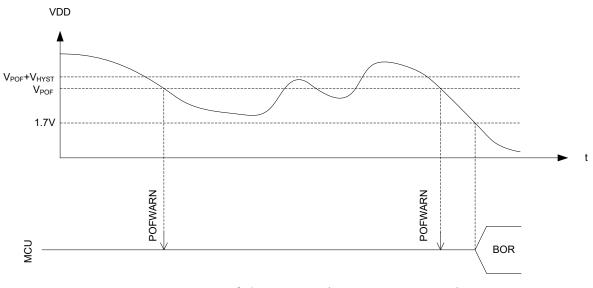


Figure 18: Power-fail comparator (BOR = Brownout reset)

To save power, the power-fail comparator is not active in System OFF or in System ON when HFCLK is not running.



5.3.5 RAM power control

The RAM power control registers are used for configuring the following:

- The RAM sections to be retained during System OFF
- The RAM sections to be retained and accessible during System ON

In System OFF, retention of a RAM section is configured in the RETENTION field of the corresponding RAM[n] register.

In System ON, retention and accessibility for a RAM section is configured in the RETENTION and POWER fields of the corresponding RAM[n] register.

The following table summarizes the behavior of these registers.

Configuration		RAM section status		
System on/off	RAM[n].POWER.POWER	RAM[n].POWER.RETENTION	Accessible	Retained
Off	х	Off	No	No
Off	х	On	No	Yes
On	Off	Off	No	No
On	Off ¹	On	No	Yes
On	On	х	Yes	Yes

Table 17: RAM section configuration

The advantage of not retaining RAM contents is that the overall current consumption is reduced.

See chapter Memory on page 15 for more information on RAM sections.

5.3.6 Reset

There are multiple sources that may trigger a reset.

After a reset has occurred, register **RESETREAS** can be read to determine which source generated the reset.

5.3.6.1 Power-on reset

The power-on reset generator initializes the system at power-on.

The system is held in reset state until the supply has reached the minimum operating voltage and the internal voltage regulators have started.

A step increase in supply voltage of 300 mV or more, with rise time of 300 ms or less, within the valid supply range, may result in a system reset.

5.3.6.2 Pin reset

A pin reset is generated when the physical reset pin on the device is asserted.

Pin reset is configured via the PSELRESET[n] registers.

Note: Pin reset is not available on all pins.

5.3.6.3 Wakeup from System OFF mode reset

The device is reset when it wakes up from System OFF mode.

¹ Not useful setting. RAM section power off gives negligible reduction in current consumption when retention is on.



The debug access port (DAP) is not reset following a wake up from System OFF mode if the device is in Debug Interface mode. See chapter Debug on page 37 for more information.

5.3.6.4 Soft reset

A soft reset is generated when the SYSRESETREQ bit of the Application Interrupt and Reset Control Register (AIRCR register) in the ARM[®] core is set.

Refer to ARM documentation for more details.

A soft reset can also be generated via the RESET on page 41 register in the CTRL-AP.

5.3.6.5 Watchdog reset

A Watchdog reset is generated when the watchdog times out.

See chapter WDT — Watchdog timer on page 341 for more information.

5.3.6.6 Brown-out reset

The brown-out reset generator puts the system in reset state if the supply voltage drops below the brownout reset (BOR) threshold.

Refer to section Power fail comparator on page 63 for more information.

5.3.7 Retained registers

A retained register is a register that will retain its value in System OFF mode and through a reset, depending on reset source. See individual peripheral chapters for information of which registers are retained for the various peripherals.

5.3.8 Reset behavior

Reset source	Reset target	t							
	CPU	Peripherals	GPIO	Debug ^a	SWJ-DP	RAM	WDT	Retained	RESETREAS
								registers	
CPU lockup ⁵	x	x	x						
Soft reset	x	х	х						
Wakeup from System OFF	x	х		x ⁶		x ⁷	x		
mode reset									
Watchdog reset ⁸	x	х	х	х		х	х	x	
Pin reset	x	x	х	x		x	x	x	
Brownout reset	x	х	х	x	x	х	x	x	x
Power on reset	x	x	x	x	x	x	x	x	x

Note: The RAM is never reset, but depending on reset source, RAM content may be corrupted.



^a All debug components excluding SWJ-DP. See Debug on page 37 for more information about the different debug components in the system.

⁵ Reset from CPU lockup is disabled if the device is in debug interface mode. CPU lockup is not possible in System OFF.

⁶ The Debug components will not be reset if the device is in debug interface mode.

⁷ RAM is not reset on wakeup from System OFF mode, but depending on settings in the RAM registers, parts, or the whole RAM may not be retained after the device has entered System OFF mode.

⁸ Watchdog reset is not available in System OFF.

5.3.9 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40000000	POWER	POWER	Power control	For 24 kB RAM variant, only RAM[0].x to
				RAM[2].x registers are in use.
			Table 18: Instan	ces
Register	Offse	: Descrip	otion	
TASKS_CONSTLAT	0x078	Enable	Constant Latency mode	
TASKS_LOWPWR	0x070	Enable	Low-power mode (variable latence	cy)
EVENTS_POFWAF	N 0x108	Power	failure warning	
EVENTS_SLEEPEN	ITER 0x114	CPU en	tered WFI/WFE sleep	
EVENTS_SLEEPEX	IT 0x118	CPU ex	ited WFI/WFE sleep	
INTENSET	0x304	Enable	interrupt	
INTENCLR	0x308	Disable	interrupt	
RESETREAS	0x400	Reset r	eason	
SYSTEMOFF	0x500	System	OFF register	
POFCON	0x510	Power	failure comparator configuration	
GPREGRET	0x510	Genera	l purpose retention register	
GPREGRET2	0x520	Genera	l purpose retention register	
DCDCEN	0x578	DC/DC	enable register	
RAM[0].POWER	0x900	RAM0 p	power control register. The RAM s	ize will vary depending on product variant, and the
		RAM0 r	register will only be present if the	corresponding RAM AHB slave is present on the
		device.		
RAM[0].POWERS	ET 0x904	RAM0 p	oower control set register	
RAM[0].POWERC	LR 0x908	RAM0 p	power control clear register	
RAM[1].POWER	0x910	RAM1 p	power control register. The RAM s	ize will vary depending on product variant, and the
		RAM1 r	register will only be present if the	corresponding RAM AHB slave is present on the
		device.		
RAM[1].POWERS	ET 0x914	RAM1 p	power control set register	
RAM[1].POWERC	LR 0x918	RAM1 p	power control clear register	
RAM[2].POWER	0x920	RAM2 p	power control register. The RAM s	ize will vary depending on product variant, and the
		RAM2 r	register will only be present if the	corresponding RAM AHB slave is present on the
		device.		
RAM[2].POWERS	ET 0x924	RAM2	power control set register	
RAM[2].POWERC	LR 0x928	RAM2 p	power control clear register	
RAM[3].POWER	0x930	RAM3 p	power control register. The RAM s	ize will vary depending on product variant, and the
		RAM3 r	register will only be present if the	corresponding RAM AHB slave is present on the
		device.		
RAM[3].POWERS			power control set register	
RAM[3].POWERC	LR 0x938	RAM3 p	power control clear register	
RAM[4].POWER	0x940		-	ize will vary depending on product variant, and the
				corresponding RAM AHB slave is present on the
		device.		
RAM[4].POWERS			power control set register	
RAM[4].POWERC			power control clear register	
RAM[5].POWER	0x950		-	ize will vary depending on product variant, and the
				corresponding RAM AHB slave is present on the
		device.		
RAM[5].POWERS			power control set register	
RAM[5].POWERC	LR 0x958	RAM5 p	power control clear register	



Register	Offset	Description
RAM[6].POWER	0x960	RAM6 power control register. The RAM size will vary depending on product variant, and the
		RAM6 register will only be present if the corresponding RAM AHB slave is present on the
		device.
RAM[6].POWERSET	0x964	RAM6 power control set register
RAM[6].POWERCLR	0x968	RAM6 power control clear register
RAM[7].POWER	0x970	RAM7 power control register. The RAM size will vary depending on product variant, and the
		RAM7 register will only be present if the corresponding RAM AHB slave is present on the
		device.
RAM[7].POWERSET	0x974	RAM7 power control set register
RAM[7].POWERCLR	0x978	RAM7 power control clear register

Table 19: Register overview

5.3.9.1 TASKS_CONSTLAT

Address offset: 0x078

Enable Constant Latency mode

Bit n	number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_CONSTLAT			Enable Constant Latency mode
		Trigger	1	Trigger task

5.3.9.2 TASKS_LOWPWR

Address offset: 0x07C

Enable Low-power mode (variable latency)

Bit n	umł	ber		31	30 29	9 28	27	262	25 24	42	3 2 2	221	L 20	19	18 1	17 :	16 1	5 1	4 13	3 12	11	10	9	8	76	65	4	3	2	1 0
ID																														А
Rese	t Ox	0000000		0	0 0	0	0	0	0 0) (0 0	0	0	0	0	0	0 () (D 0	0	0	0	0	0	0 (0 0	0	0	0	0 0
ID																														
А	W	TASKS_LOWPWR								E	nab	le L	.ow-	ро	wer	mo	ode	(va	riab	le la	ater	icy)								
			Trigger	1						Т	rigg	er t	ask																	

5.3.9.3 EVENTS_POFWARN

Address offset: 0x108

Power failure warning

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_POFWARN			Power failure warning
	NotGenerated	0	Event not generated
	Generated	1	Event generated



5.3.9.4 EVENTS_SLEEPENTER

Address offset: 0x114

CPU entered WFI/WFE sleep

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_SLEEPENTER			CPU entered WFI/WFE sleep
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.3.9.5 EVENTS_SLEEPEXIT

Address offset: 0x118

CPU exited WFI/WFE sleep

Bit number			31 30	29 28	27	26 25	5 24	23 2	22 2	1 20	19 1	.8 17	7 16	15 3	14 13	12 1	1 10	9	8 7	6	5	4 3	2	1 0
ID																								А
Reset 0x00000	00		0 0	0 0	0	0 0	0	0	0 0	0 0	0	0 0	0	0	0 0	0	0 0	0	0 0	0	0	0 (0	0 0
ID Acce Field																								
A RW EVE	NTS_SLEEPEXIT							CPL	J exi	ited	WFI/	WFI	E sle	ep										
	Not	Generated	0					Eve	nt n	ot g	ener	ated												
	Ger	nerated	1					Eve	nt g	ener	ated													

5.3.9.6 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW POFWARN			Write '1' to enable interrupt for event POFWARN
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW SLEEPENTER			Write '1' to enable interrupt for event SLEEPENTER
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW SLEEPEXIT			Write '1' to enable interrupt for event SLEEPEXIT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

5.3.9.7 INTENCLR

Address of	offset:	0x308
------------	---------	-------

Disable interrupt



Bit r	number		31 30 29 28 27 3	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				С В А
Res	et 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW POFWARN			Write '1' to disable interrupt for event POFWARN
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW SLEEPENTER			Write '1' to disable interrupt for event SLEEPENTER
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW SLEEPEXIT			Write '1' to disable interrupt for event SLEEPEXIT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

5.3.9.8 RESETREAS

Address offset: 0x400

Reset reason

Unless cleared, the RESETREAS register will be cumulative. A field is cleared by writing '1' to it. If none of the reset sources are flagged, this indicates that the chip was reset from the on-chip reset generator, which will indicate a power-on-reset or a brownout reset.

Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
А	RW RESETPIN			Reset from pin-reset detected
		NotDetected	0	Not detected
		Detected	1	Detected
В	RW DOG			Reset from watchdog detected
		NotDetected	0	Not detected
		Detected	1	Detected
С	RW SREQ			Reset from soft reset detected
		NotDetected	0	Not detected
		Detected	1	Detected
D	RW LOCKUP			Reset from CPU lock-up detected
		NotDetected	0	Not detected
		Detected	1	Detected
Е	RW OFF			Reset due to wake up from System OFF mode when wakeup
				is triggered from DETECT signal from GPIO
		NotDetected	0	Not detected
		Detected	1	Detected
F	RW DIF			Reset due to wake up from System OFF mode when wakeup
				is triggered from entering into debug interface mode
		NotDetected	0	Not detected
		Detected	1	Detected

5.3.9.9 SYSTEMOFF

Address offset: 0x500



System OFF register

Bit nu	Imber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Reset	0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
A	W SYSTEMOFF			Enable System OFF mode
		Enter	1	Enable System OFF mode

5.3.9.10 POFCON

Address offset: 0x510

Power failure comparator configuration

Bit r	umber		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B B B A
Res	et 0x0000000		0 0 0 0	
A	RW POF			Enable or disable power failure comparator
		Disabled	0	Disable
		Enabled	1	Enable
В	RW THRESHOLD			Power failure comparator threshold setting
		V17	4	Set threshold to 1.7 V
		V18	5	Set threshold to 1.8 V
		V19	6	Set threshold to 1.9 V
		V20	7	Set threshold to 2.0 V
		V21	8	Set threshold to 2.1 V
		V22	9	Set threshold to 2.2 V
		V23	10	Set threshold to 2.3 V
		V24	11	Set threshold to 2.4 V
		V25	12	Set threshold to 2.5 V
		V26	13	Set threshold to 2.6 V
		V27	14	Set threshold to 2.7 V
		V28	15	Set threshold to 2.8 V

5.3.9.11 GPREGRET

Address offset: 0x51C

General purpose retention register

Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		ААААААААА
Rese	et 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW GPREGRET	General purpose retention register
		This register is a retained register

5.3.9.12 GPREGRET2

Address offset: 0x520

General purpose retention register



Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value Description
A RW GPREGRET	General purpose retention register

This register is a retained register

5.3.9.13 DCDCEN

Address offset: 0x578

DC/DC enable register

Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW DCDCEN		Enable or disable DC/DC converter
Disabled	0	Disable
Enabled	1	Enable

5.3.9.14 RAM[n].POWER (n=0..7)

Address offset: 0x900 + (n × 0x10)

RAMn power control register. The RAM size will vary depending on product variant, and the RAMn register will only be present if the corresponding RAM AHB slave is present on the device.

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	D C B A
Reset 0x0000FFFF	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 1 1 1 1
ID Acce Field Value ID	Value Description
A-B RW S[i]POWER (i=01)	Keep RAM section Si ON or OFF in System ON mode.
	RAM sections are always retained when ON, but can
	also be retained when OFF dependent on the settings in
	SiRETENTION. All RAM sections will be OFF in System OFF
	mode.
Off	0 Off
On	1 On
C-D RW S[i]RETENTION (i=01)	Keep retention on RAM section Si when RAM section is in
	OFF
Off	0 Off
On	1 On

5.3.9.15 RAM[n].POWERSET (n=0..7)

Address offset: 0x904 + (n × 0x10)

RAMn power control set register

When read, this register will return the value of the POWER register.



Bit n	umbe	r		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					D C B A
Rese	t 0x0	000FFFF		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1 1
ID					
A-B	w	S[i]POWER (i=01)			Keep RAM section Si of RAMn on or off in System ON mode
			On	1	On
C-D	W	S[i]RETENTION (i=01)			Keep retention on RAM section Si when RAM section is
					switched off
			On	1	On

5.3.9.16 RAM[n].POWERCLR (n=0..7)

Address offset: 0x908 + (n × 0x10)

RAMn power control clear register

When read, this register will return the value of the POWER register.

Bit n	umbe	er		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	LO
ID					D C E	3 A
Rese	t 0x0	000FFFF		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 1 1 1 1 1 1 1 1 1 1 1 1	ι 1
ID						
A-B	W	S[i]POWER (i=01)			Keep RAM section Si of RAMn on or off in System ON mode	
			Off	1	Off	
C-D	W	S[i]RETENTION (i=01)			Keep retention on RAM section Si when RAM section is	
					switched off	
			Off	1	Off	

5.3.10 Electrical specification

5.3.10.1 Device startup times

Symbol	Description	Min.	Tun	Max.	Units
•	-	win.	Тур.	IVIAX.	Units
t _{POR}	Time in Power on Reset after VDD reaches 1.7 V for all				
	supply voltages and temperatures. Dependent on supply rise				
	time. ⁹				
t _{POR,10us}	VDD rise time 10 µs		1		ms
t _{POR,10ms}	VDD rise time 10 ms		9		ms
t _{POR,60ms}	VDD rise time 60 ms		23		ms
t _{PINR}	If a GPIO pin is configured as reset, the maximum time taken				
	to pull up the pin and release reset after power on reset.				
	Dependent on the pin capacitive load (C) 10 : t=5RC, R = 13 k Ω				
t _{PINR,500nF}	C = 500 nF			32.5	ms
t _{PINR,10uF}	C = 10 µF			650	ms
t _{R2ON}	Time from reset to ON (CPU execute)				
t _{R2ON,NOTCONF}	If reset pin not configured	tPOR			ms
t _{R2ON,CONF}	If reset pin configured	tPOR +			ms
		tPINR			
t _{OFF2ON}	Time from OFF to CPU execute		16.5		μs

⁹ A step increase in supply voltage of 300 mV or more, with rise time of 300 ms or less, within the valid supply range, may result in a system reset.

¹⁰ To decrease maximum time a device could hold in reset, a strong external pullup resistor can be used.



Symbol	Description	Min.	Тур.	Max.	Units
t _{IDLE2CPU}	Time from IDLE to CPU execute		3.0		μs
t _{EVTSET,CL1}	Time from HW event to PPI event in Constant Latency		0.0625		μs
	System ON mode				
t _{EVTSET,CL0}	Time from HW event to PPI event in Low Power System ON		0.0625		μs
	mode				

5.3.10.2 Power fail comparator

Symbol	Description	Min.	Тур.	Max.	Units
V _{POF}	Nominal power level warning thresholds (falling supply	1.7		2.8	V
	voltage). Levels are configurable between Min. and Max. in				
	100 mV increments.				
VPOFTOL	Threshold voltage tolerance		±1	±5	%
V _{POFHYST}	Threshold voltage hysteresis		50		mV
V _{BOR,OFF}	Brown out reset voltage range SYSTEM OFF mode	1.2		1.7	V
V _{BOR,ON}	Brown out reset voltage range SYSTEM ON mode	1.48		1.7	V

5.4 CLOCK — Clock control

The clock control system can source the system clocks from a range of internal or external high and low frequency oscillators and distribute them to modules based upon a module's individual requirements. Clock distribution is automated and grouped independently by module to limit current consumption in unused branches of the clock tree.

Listed here are the main features for CLOCK:

- 64 MHz on-chip oscillator
- 64 MHz crystal oscillator, using external 32 MHz crystal
- 32.768 kHz +/-500 ppm RC oscillator
- 32.768 kHz crystal oscillator, using external 32.768 kHz crystal
- 32.768 kHz oscillator synthesized from 64 MHz oscillator
- Firmware (FW) override control of oscillator activity for low latency start up
- Automatic oscillator and clock control, and distribution for ultra-low power



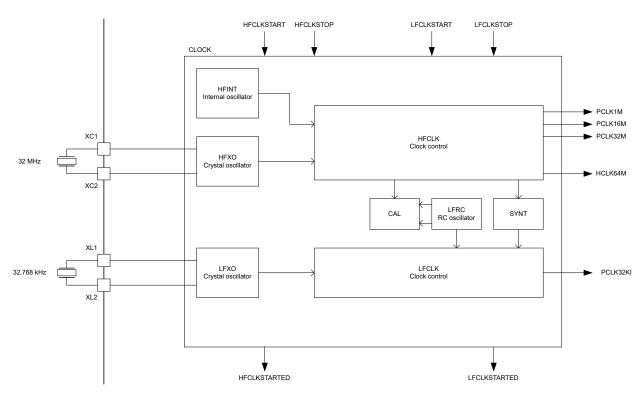


Figure 19: Clock control

5.4.1 HFCLK clock controller

The HFCLK clock controller provides the following clocks to the system.

- HCLK64M: 64 MHz CPU clock
- PCLK1M: 1 MHz peripheral clock
- PCLK16M: 16 MHz peripheral clock
- PCLK32M: 32 MHz peripheral clock

The HFCLK controller supports the following high frequency clock (HFCLK) sources:

- 64 MHz internal oscillator (HFINT)
- 64 MHz crystal oscillator (HFXO)

For illustration, see Clock control on page 64.

When the system requests one or more clocks from the HFCLK controller, the HFCLK controller will automatically provide them. If the system does not request any clocks provided by the HFCLK controller, the controller will enter a power saving mode.

These clocks are only available when the system is in ON mode. When the system enters ON mode, the internal oscillator (HFINT) clock source will automatically start to be able to provide the required HFCLK clock(s) for the system.

The HFINT will be used when HFCLK is requested and HFXO has not been started. The HFXO is started by triggering the HFCLKSTART task and stopped using the HFCLKSTOP task. A HFCLKSTARTED event will be generated when the HFXO has started and its frequency is stable.

The HFXO must be running to use the RADIO or the calibration mechanism associated with the 32.768 kHz RC oscillator.

5.4.1.1 64 MHz crystal oscillator (HFXO)

The 64 MHz crystal oscillator (HFXO) is controlled by a 32 MHz external crystal



The crystal oscillator is designed for use with an AT-cut quartz crystal in parallel resonant mode. To achieve correct oscillation frequency, the load capacitance must match the specification in the crystal data sheet.

Circuit diagram of the 64 MHz crystal oscillator on page 65 shows how the 32 MHz crystal is connected to the 64 MHz crystal oscillator.

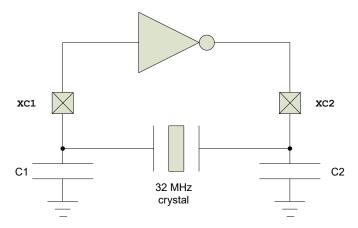


Figure 20: Circuit diagram of the 64 MHz crystal oscillator

The load capacitance (CL) is the total capacitance seen by the crystal across its terminals and is given by:

$$CL = \frac{\left(C1' \cdot C2'\right)}{\left(C1' + C2'\right)}$$

$$C1' = C1 + C_{pcb1} + C_{pin}$$
$$C2' = C2 + C_{pcb2} + C_{pin}$$

C1 and C2 are ceramic SMD capacitors connected between each crystal terminal and ground. For more information, see Reference circuitry on page 348. C_{pcb1} and C_{pcb2} are stray capacitances on the PCB. C_{pin} is the pin input capacitance on the XC1 and XC2 pins. See table 64 MHz crystal oscillator (HFXO) on page 74. The load capacitors C1 and C2 should have the same value.

For reliable operation, the crystal load capacitance, shunt capacitance, equivalent series resistance, and drive level must comply with the specifications in table 64 MHz crystal oscillator (HFXO) on page 74. It is recommended to use a crystal with lower than maximum load capacitance and/or shunt capacitance. A low load capacitance will reduce both start up time and current consumption.

5.4.2 LFCLK clock controller

The system supports several low frequency clock sources.

As illustrated in Clock control on page 64, the system supports the following low frequency clock sources:

- 32.768 kHz RC oscillator (LFRC)
- 32.768 kHz crystal oscillator (LFXO)
- 32.768 kHz synthesized from HFCLK (LFSYNT)

The LFCLK clock is started by first selecting the preferred clock source in register LFCLKSRC on page 73 and then triggering the LFCLKSTART task. If the LFXO is selected as the clock source, the LFCLK will initially start running from the 32.768 kHz LFRC while the LFXO is starting up and automatically switch to using the LFXO once this oscillator is running. The LFCLKSTARTED event will be generated when the LFXO has been started.



The LFCLK clock is stopped by triggering the LFCLKSTOP task.

It is not allowed to write to register LFCLKSRC on page 73 when the LFCLK is running.

A LFCLKSTOP task will stop the LFCLK oscillator. However, the LFCLKSTOP task can only be triggered after the STATE field in register LFCLKSTAT on page 73 indicates a 'LFCLK running' state.

The LFCLK clock controller and all of the LFCLK clock sources are always switched off when in OFF mode.

5.4.2.1 32.768 kHz RC oscillator (LFRC)

The default source of the low frequency clock (LFCLK) is the 32.768 kHz RC oscillator (LFRC).

The LFRC frequency will be affected by variation in temperature. The LFRC oscillator can be calibrated to improve accuracy by using the HFXO as a reference oscillator during calibration. See Table 32.768 kHz RC oscillator (LFRC) on page 75 for details on the default and calibrated accuracy of the LFRC oscillator. The LFRC oscillator does not require additional external components.

5.4.2.2 Calibrating the 32.768 kHz RC oscillator

After the 32.768 kHz RC oscillator is started and running, it can be calibrated by triggering the CAL task. In this case, the HFCLK will be temporarily switched on and used as a reference.

A DONE event will be generated when calibration has finished. The calibration mechanism will only work as long as HFCLK is generated from the HFCLK crystal oscillator, it is therefore necessary to explicitly start this crystal oscillator before calibration can be started, see HFCLKSTART task.

It is not allowed to stop the LFRC during an ongoing calibration.

5.4.2.3 Calibration timer

The calibration timer can be used to time the calibration interval of the 32.768 kHz RC oscillator.

The calibration timer is started by triggering the CTSTART task and stopped by triggering the CTSTOP task. The calibration timer will always start counting down from the value specified in CTIV and generate a CTTO timeout event when it reaches 0. The Calibration timer will stop by itself when it reaches 0.

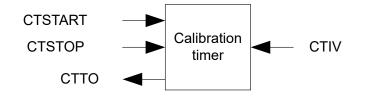


Figure 21: Calibration timer

Due to limitations in the calibration timer, only one task related to calibration, that is, CAL, CTSTART and CTSTOP, can be triggered for every period of LFCLK.

5.4.2.4 32.768 kHz crystal oscillator (LFXO)

For higher LFCLK accuracy the low frequency crystal oscillator (LFXO) must be used.

The following external clock sources are supported:

- Low swing clock signal applied to the *XL1* pin. The *XL2* pin shall then be grounded.
- Rail-to-rail clock signal applied to the XL1 pin. The XL2 pin shall then be grounded or left unconnected.

The LFCLKSRC on page 73 register controls the clock source, and its allowed swing. The truth table for various situations is as follows:



SRC	EXTERNAL	BYPASS	Comment
0	0	0	Normal operation, RC is source
0	0	1	DO NOT USE
0	1	Х	DO NOT USE
1	0	0	Normal XTAL operation
1	1	0	Apply external low swing signal to XL1, ground XL2
1	1	1	Apply external full swing signal to XL1, leave XL2 grounded or unconnected
1	0	1	DO NOT USE
2	0	0	Normal operation, synth is source
2	0	1	DO NOT USE
2	1	Х	DO NOT USE

Table 20: LFCLKSRC configuration depending on clock source

To achieve correct oscillation frequency, the load capacitance must match the specification in the crystal data sheet. Circuit diagram of the 32.768 kHz crystal oscillator on page 67 shows the LFXO circuitry.

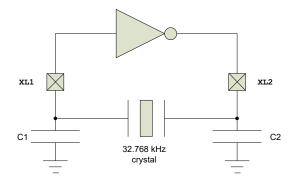


Figure 22: Circuit diagram of the 32.768 kHz crystal oscillator

The load capacitance (CL) is the total capacitance seen by the crystal across its terminals and is given by:

$$CL = \frac{\left(C1' \cdot C2'\right)}{\left(C1' + C2'\right)}$$

$$C1' = C1 + C_{pcb1} + C_{pin}$$
$$C2' = C2 + C_{pcb2} + C_{pin}$$

C1 and C2 are ceramic SMD capacitors connected between each crystal terminal and ground. C_{pcb1} and C_{pcb2} are stray capacitances on the PCB. C_{pin} is the pin input capacitance on the XC1 and XC2 pins (see 32.768 kHz crystal oscillator (LFXO) on page 75). The load capacitors C1 and C2 should have the same value.

For more information, see Reference circuitry on page 348.

5.4.2.5 32.768 kHz synthesized from HFCLK (LFSYNT)

LFCLK can also be synthesized from the HFCLK clock source. The accuracy of LFCLK will then be the accuracy of the HFCLK.

Using the LFSYNT clock avoids the requirement for a 32.768 kHz crystal, but increases average power consumption as the HFCLK will need to be requested in the system.



5.4.3 Registers

Dx4000000 CLOCK CLOCK Clock control Table 21: Instances Table 21: Instances TASKS_HFCLKSTART 0x000 Start HFCLK crystal oscillator TASKS_HFCLKSTOP 0x004 Stop HFCLK crystal oscillator TASKS_LFCLKSTOP 0x008 Start LFCLK source TASKS_LFCLKSTOP 0x000 Start calibration of LFRC oscillator TASKS_CAL 0x010 Start calibration of LFRC oscillator TASKS_CTSTOP 0x014 Start calibration of LFRC oscillator TASKS_CTSTOP 0x010 Start calibration timer TASKS_CTSTOP 0x010 HFCLK oscillator started EVENTS_HFCLKSTARTED 0x104 LFCLK started EVENTS_LFCLKSTARTED 0x104 LFCLK started EVENTS_LONE 0x100 Calibration timer timeout EVENTS_CTTO 0x100 Calibration timer timeout INTENSET 0x304 Enable interrupt	
RegisterOffsetDescriptionTASKS_HFCLKSTART0x000Start HFCLK crystal oscillatorTASKS_HFCLKSTOP0x004Stop HFCLK crystal oscillatorTASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x104LFCLK socillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x100Calibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
RegisterOffsetDescriptionTASKS_HFCLKSTART0x000Start HFCLK crystal oscillatorTASKS_HFCLKSTOP0x004Stop HFCLK crystal oscillatorTASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x104LFCLK socillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x100Calibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_HFCLKSTART0x000Start HFCLK crystal oscillatorTASKS_HFCLKSTOP0x004Stop HFCLK crystal oscillatorTASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x100Calibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_HFCLKSTART0x000Start HFCLK crystal oscillatorTASKS_HFCLKSTOP0x004Stop HFCLK crystal oscillatorTASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x100Calibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_HFCLKSTOP0x004Stop HFCLK crystal oscillatorTASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x100Calibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_LFCLKSTART0x008Start LFCLK sourceTASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x10CCalibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_LFCLKSTOP0x00CStop LFCLK sourceTASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x10CCalibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_CAL0x010Start calibration of LFRC oscillatorTASKS_CAL0x014Start calibration timerTASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x10CCalibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_CTSTART0x014Start calibration timerTASKS_CTSTOP0x018Stop calibration timerEVENTS_HFCLKSTARTED0x100HFCLK oscillator startedEVENTS_LFCLKSTARTED0x104LFCLK startedEVENTS_DONE0x10CCalibration of LFCLK RC oscillator complete eventEVENTS_CTTO0x110Calibration timer timeout	
TASKS_CTSTOP 0x018 Stop calibration timer EVENTS_HFCLKSTARTED 0x100 HFCLK oscillator started EVENTS_LFCLKSTARTED 0x104 LFCLK started EVENTS_DONE 0x10C Calibration of LFCLK RC oscillator complete event EVENTS_CTTO 0x100 Calibration timer timeout	
EVENTS_HFCLKSTARTED 0x100 HFCLK oscillator started EVENTS_LFCLKSTARTED 0x104 LFCLK started EVENTS_DONE 0x10C Calibration of LFCLK RC oscillator complete event EVENTS_CTTO 0x110 Calibration timer timeout	
EVENTS_LFCLKSTARTED 0x104 LFCLK started EVENTS_DONE 0x10C Calibration of LFCLK RC oscillator complete event EVENTS_CTTO 0x110 Calibration timer timeout	
EVENTS_CTTO 0x110 Calibration timer timeout	
-	
INTENSET 0x204 Eachlo interrupt	
ווערבווזטבו טאסטיי בוומטוב ווונבורעין.	
INTENCLR 0x308 Disable interrupt	
HFCLKRUN 0x408 Status indicating that HFCLKSTART task has been triggered	
HFCLKSTAT 0x40C HFCLK status	
LFCLKRUN 0x414 Status indicating that LFCLKSTART task has been triggered	
LFCLKSTAT 0x418 LFCLK status	
LFCLKSRCCOPY 0x41C Copy of LFCLKSRC register, set when LFCLKSTART task was triggered	
LFCLKSRC 0x518 Clock source for the LFCLK	
CTIV 0x538 Calibration timer interval Reta	

Table 22: Register overview

5.4.3.1 TASKS_HFCLKSTART

Address offset: 0x000

Start HFCLK crystal oscillator

Bit n	umb	ber		31 30 29 28	27 26 3	25 24	23 22	2 2 1	20 1	9 18	8 17	16	15 3	14 1	3 12	2 11	10	98	5 7	6	5 4	3	2	1 0
ID																								A
Rese	et Ox	0000000		0 0 0 0	0 0	0 0	0 0	0	0 0	0 0	0	0	0	0 0	0 0	0	0	0 0	0	0	0 0	0	0	0 0
ID																								
А	W	TASKS_HFCLKSTART					Start	HFC	CLK c	ryst	al o	scill	atoı	r										
			Trigger	1			Trigg	er ta	ask															

5.4.3.2 TASKS_HFCLKSTOP

Address offset: 0x004

Stop HFCLK crystal oscillator



Bit n	umbe	er		313	30 29	9 28	3 27	26	25	5 24	23	3 2 2	21	l 20	19	18	17	16	15	14	13 :	12	11 :	10	9	8	7	6	5 4	+ 3	2	1	0
ID																																	А
Rese	t OxO	0000000		0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0
ID																																	
А	w	TASKS_HFCLKSTOP									St	ор	HF	CLK	cry	sta	los	cill	ato	r													
			Trigger	1							Tr	igge	er t	ask																			

5.4.3.3 TASKS_LFCLKSTART

Address offset: 0x008

Start LFCLK source

Bit n	uml	ber		31 30	29 28	3 27 3	26 2	25 24	23	3 2 2	21	20	19	18 1	71	6 15	14	13	12 1	L 10	9	8	7	6	5 4	13	2	1 0
ID																												А
Rese	et O	«0000000		0 0	0 0	0	0	0 0	0	0	0	0	0	0 0) (0	0	0	0 0	0	0	0	0	0	0 () (0	0 0
ID																												
А	W	TASKS_LFCLKSTART							St	art	LFC	CLK s	sou	rce														
			Trigger	1					Tr	igge	er t	ask																

5.4.3.4 TASKS_LFCLKSTOP

Address offset: 0x00C

Stop LFCLK source

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_LFCLKSTOP			Stop LFCLK source
		Trigger	1	Trigger task

5.4.3.5 TASKS_CAL

Address offset: 0x010

Start calibration of LFRC oscillator

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_CAL			Start calibration of LFRC oscillator
		Trigger	1	Trigger task

5.4.3.6 TASKS_CTSTART

Address offset: 0x014

Start calibration timer



Bit n	umber		31 30 29 28 27 20	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	W TASKS_CTSTART			Start calibration timer
		Trigger	1	Trigger task

5.4.3.7 TASKS_CTSTOP

Address offset: 0x018

Stop calibration timer

Bit n	umber		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_CTSTOP			Stop calibration timer
		Trigger	1	Trigger task

5.4.3.8 EVENTS_HFCLKSTARTED

Address offset: 0x100

HFCLK oscillator started

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_HFCLKSTARTED	•		HFCLK oscillator started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

5.4.3.9 EVENTS_LFCLKSTARTED

Address offset: 0x104

LFCLK started

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_LFCLKSTARTED			LFCLK started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

5.4.3.10 EVENTS_DONE

Address offset: 0x10C

Calibration of LFCLK RC oscillator complete event



Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_DONE			Calibration of LFCLK RC oscillator complete event
	NotGenerated	0	Event not generated
	Generated	1	Event generated

5.4.3.11 EVENTS_CTTO

Address offset: 0x110

Calibration timer timeout

Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_CTTO		Calibration timer timeout
NotGenerated	0	Event not generated
Generated	1	Event generated

5.4.3.12 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B A
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW HFCLKSTARTED			Write '1' to enable interrupt for event HFCLKSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW LFCLKSTARTED			Write '1' to enable interrupt for event LFCLKSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW DONE			Write '1' to enable interrupt for event DONE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW CTTO			Write '1' to enable interrupt for event CTTO
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

5.4.3.13 INTENCLR

Address offset: 0x308

Disable interrupt



Bit r	umber		31	L 30 2	29 2	8 27	26	25	24	23 2	22 2	1 20	0 19	9 18	17	16	15 1	.4 1	3 1	2 11	10	9	8	7	6	5	4 3	2	1	0
ID																											DC		В	А
Reset 0x00000000			0	0	0 0	0 0	0	0	0	0 (0 0	0 0	0	0	0	0	0	0 0) () 0	0	0	0	0	0	0	0 0	0	0	0
ID																														
А	RW HFCLKSTARTED									Writ	ite '1	1' to	o dis	abl	e in	ter	rupt	for	eve	ent	HFC	LKS	TAI	RTE	D					_
		Clear	1							Disa	able																			
		Disabled	0							Rea	nd: D	Disat	blec	ł																
		Enabled	1							Rea	nd: E	inab	led																	
В	RW LFCLKSTARTED									Writ	ite '1	1' to	o dis	abl	e in	ter	rupt	for	eve	ent	LFC	_KS	TAR	TEI	C					
		Clear	1							Disa	able																			
		Disabled	0							Rea	nd: D	Disal	blec	ł																
		Enabled	1							Rea	nd: E	inab	led																	
С	RW DONE									Writ	ite '1	1' to	o dis	abl	e in	ter	rupt	for	eve	ent	DOI	١E								
		Clear	1							Disa	able																			
		Disabled	0							Rea	nd: D	Disal	blec	ł																
		Enabled	1							Rea	nd: E	inab	led																	
D	RW CTTO									Writ	ite '1	1' to	o dis	abl	e in	ter	rupt	for	eve	ent	стт	0								
		Clear	1							Disa	able																			
		Disabled	0							Rea	nd: D	Disat	blec	ł																
		Enabled	1							Rea	nd: E	inab	led																	

5.4.3.14 HFCLKRUN

Address offset: 0x408

Status indicating that HFCLKSTART task has been triggered

Bit number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R STATUS			HFCLKSTART task triggered or not
	NotTriggered	0	Task not triggered
	Triggered	1	Task triggered

5.4.3.15 HFCLKSTAT

Address offset: 0x40C

HFCLK status

Bit nu	mbe	r		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					В А
Reset	0x0(000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	R	SRC			Source of HFCLK
			RC	0	64 MHz internal oscillator (HFINT)
			Xtal	1	64 MHz crystal oscillator (HFXO)
В	R	STATE			HFCLK state
			NotRunning	0	HFCLK not running
			Running	1	HFCLK running

5.4.3.16 LFCLKRUN

Address offset: 0x414



Status indicating that LFCLKSTART task has been triggered

Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R STATUS			LFCLKSTART task triggered or not
	NotTriggered	0	Task not triggered
	Triggered	1	Task triggered

5.4.3.17 LFCLKSTAT

Address offset: 0x418

LFCLK status

Bit nur	mbei	r		31 3	0 29	28 2	7 26	25 2	24 2	23 2	22 22	1 20	0 19	18	17	16 1	5 14	4 13	12	11 10) 9	8	7	6	5	4	32	1	0
ID				В						А	А																		
Reset	0x00	000000		0 0	0 0	0 (0 0	0	0	0	0 0	0	0	0	0	0 (0 0	0	0	0 0	0	0	0	0	0	0	0 0	0	0
ID																													
А	R	SRC							9	Sou	urce	of L	FCL	К															
			RC	0					3	32.	768 I	кНz	2 RC	osc	illat	or													
			Xtal	1					3	32.	768 I	кНz	z cry	stal	osc	illat	or												
			Synth	2					3	32.	768 I	кНz	z syn	the	esize	d fr	om	HFC	LK										
В	R	STATE							l	LFC	CLK st	ate	9																
			NotRunning	0					l	LFC	CLK n	ot r	runn	ing															
			Running	1					I	LFC	CLK ru	ınn	ning																

5.4.3.18 LFCLKSRCCOPY

Address offset: 0x41C

Copy of LFCLKSRC register, set when LFCLKSTART task was triggered

Bit number		31 30 29 28 27 20	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A R SRC			Clock source
	RC	0	32.768 kHz RC oscillator
	Xtal	1	32.768 kHz crystal oscillator

5.4.3.19 LFCLKSRC

Address offset: 0x518 Clock source for the LFCLK



Bit n	umber		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				С В АА
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
А	RW SRC			Clock source
		RC	0	32.768 kHz RC oscillator
		Xtal	1	32.768 kHz crystal oscillator
		Synth	2	32.768 kHz synthesized from HFCLK
В	RW BYPASS			Enable or disable bypass of LFCLK crystal oscillator with
				external clock source
		Disabled	0	Disable (use with Xtal or low-swing external source)
		Enabled	1	Enable (use with rail-to-rail external source)
С	RW EXTERNAL			Enable or disable external source for LFCLK
		Disabled	0	Disable external source (use with Xtal)
		Enabled	1	Enable use of external source instead of Xtal (SRC needs to
				be set to Xtal)

5.4.3.20 CTIV (Retained)

Address offset: 0x538

This register is a retained register

Calibration timer interval

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value Description
A RW CTIV	Calibration timer interval in multiple of 0.25 seconds.

Range: 0.25 seconds to 31.75 seconds.

5.4.4 Electrical specification

5.4.4.1 64 MHz internal oscillator (HFINT)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_HFINT}	Nominal output frequency		64		MHz
f _{TOL_HFINT}	Frequency tolerance		<±1.5	<±8	%
t _{start_hfint}	Startup time		3		us

5.4.4.2 64 MHz crystal oscillator (HFXO)

Description	Min.	Тур.	Max.	Units
Nominal output frequency		64		MHz
External crystal frequency		32		MHz
Frequency tolerance requirement for 2.4 GHz proprietary			±60	ppm
radio applications				
Frequency tolerance requirement, Bluetooth low energy			±40	ppm
applications				
Load capacitance			12	pF
Shunt capacitance			7	pF
	Nominal output frequency External crystal frequency Frequency tolerance requirement for 2.4 GHz proprietary radio applications Frequency tolerance requirement, Bluetooth low energy applications Load capacitance	Nominal output frequency External crystal frequency Frequency tolerance requirement for 2.4 GHz proprietary radio applications Frequency tolerance requirement, Bluetooth low energy applications Load capacitance	Nominal output frequency 64 External crystal frequency 32 Frequency tolerance requirement for 2.4 GHz proprietary 32 radio applications 5 Frequency tolerance requirement, Bluetooth low energy 5 applications 5 Load capacitance 5	Nominal output frequency 64 External crystal frequency 32 Frequency tolerance requirement for 2.4 GHz proprietary ±60 radio applications ±40 applications ±40 Load capacitance 12



Symbol	Description	Min.	Тур.	Max.	Units
R _{S_HFXO_7PF}	Equivalent series resistance C0 = 7 pF			60	ohm
R _{S_HFXO_5PF}	Equivalent series resistance C0 = 5 pF			60	ohm
R _{S_HFXO_3PF}	Equivalent series resistance C0 = 3 pF			100	ohm
P _{D_HFXO}	Drive level			100	uW
C _{PIN_HFXO}	Input capacitance XC1 and XC2		4		pF
t _{START_HFXO}	Startup time		0.36		ms

5.4.4.3 32.768 kHz RC oscillator (LFRC)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFRC}	Nominal frequency		32.768		kHz
f _{TOL_LFRC}	Frequency tolerance			±2	%
$f_{\text{TOL_CAL_LFRC}}$	Frequency tolerance for LFRC after calibration ¹¹			±500	ppm
t _{START_LFRC}	Startup time for 32.768 kHz RC oscillator		600		us

5.4.4.4 32.768 kHz crystal oscillator (LFXO)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFXO}	Crystal frequency		32.768		kHz
f _{TOL_LFXO_BLE}	Frequency tolerance requirement for BLE stack			±250	ppm
$f_{\text{TOL_LFXO_ANT}}$	Frequency tolerance requirement for ANT stack			±50	ppm
C _{L_LFXO}	Load capacitance			12.5	pF
C _{0_LFXO}	Shunt capacitance			2	pF
R _{S_LFXO}	Equivalent series resistance			100	kohm
P _{D_LFXO}	Drive level			0.5	uW
C _{pin}	Input capacitance on XL1 and XL2 pads		4		pF
t _{START_LFXO}	Startup time for 32.768 kHz crystal oscillator		0.25		S
V _{AMP_IN_XO_LOW}	Peak to peak amplitude for external low swing clock. Input	200		1000	mV
	signal must not swing outside supply rails.				

5.4.4.5 32.768 kHz synthesized from HFCLK (LFSYNT)

Symbol	Description	Min.	Тур.	Max.	Units
f _{NOM_LFSYNT}	Nominal frequency		32.768		kHz
f _{TOL_LFSYNT}	Frequency tolerance in addition to HFLCK tolerance ¹²		8		ppm
t _{start_lfsynt}	Startup time for synthesized 32.768 kHz		100		us



¹¹ Constant temperature within ±0.5 °C and calibration performed at least every 8 seconds, defined as 3 sigma ¹² Frequency tolerance will be derived from the HFCLK source clock plus the LFSYNT tolerance

6.1 Peripheral interface

Peripherals are controlled by the CPU by writing to configuration registers and task registers. Peripheral events are indicated to the CPU by event registers and interrupts if they are configured for a given event.

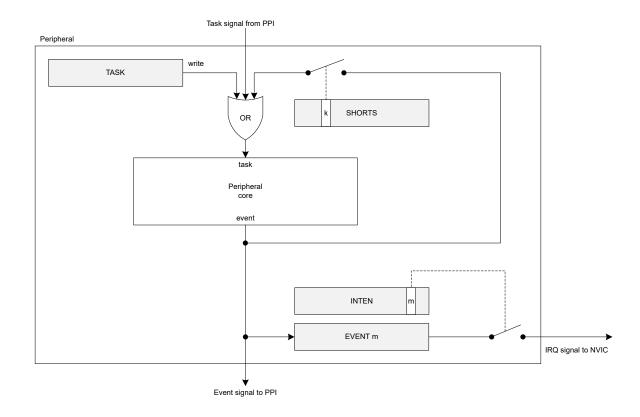


Figure 23: Tasks, events, shortcuts, and interrupts

6.1.1 Peripheral ID

Every peripheral is assigned a fixed block of 0x1000 bytes of address space, which is equal to 1024 x 32 bit registers.

See Instantiation on page 17 for more information about which peripherals are available and where they are located in the address map.

There is a direct relationship between peripheral ID and base address. For example, a peripheral with base address 0x40000000 is assigned ID=0, a peripheral with base address 0x40001000 is assigned ID=1, and a peripheral with base address 0x4001F000 is assigned ID=31.

Peripherals may share the same ID, which may impose one or more of the following limitations:

- Some peripherals share some registers or other common resources.
- Operation is mutually exclusive. Only one of the peripherals can be used at a time.
- Switching from one peripheral to another must follow a specific pattern (disable the first, then enable the second peripheral).



6.1.2 Peripherals with shared ID

In general (with the exception of ID 0), peripherals sharing an ID and base address may not be used simultaneously. The user can only enable one peripheral at the time on this specific ID.

When switching between two peripherals sharing an ID, the user should do the following to prevent unwanted behavior:

- **1.** Disable the previously used peripheral.
- 2. Remove any programmable peripheral interconnect (PPI) connections set up for the peripheral that is being disabled.
- 3. Clear all bits in the INTEN register, i.e. INTENCLR = 0xFFFFFFFF.
- **4.** Explicitly configure the peripheral that you are about to enable and do not rely on configuration values that may be inherited from the peripheral that was disabled.
- 5. Enable the now configured peripheral.

See which peripherals are sharing ID in Instantiation on page 17.

6.1.3 Peripheral registers

Most peripherals feature an ENABLE register. Unless otherwise specified in the relevant chapter, the peripheral registers (in particular the PSEL registers) must be configured before enabling the peripheral.

The peripheral must be enabled before tasks and events can be used.

6.1.4 Bit set and clear

Registers with multiple single-bit bit fields may implement the set-and-clear pattern. This pattern enables firmware to set and clear individual bits in a register without having to perform a read-modify-write operation on the main register.

This pattern is implemented using three consecutive addresses in the register map, where the main register is followed by dedicated SET and CLR registers (in that exact order).

The SET register is used to set individual bits in the main register while the CLR register is used to clear individual bits in the main register. Writing 1 to a bit in SET or CLR register will set or clear the same bit in the main register respectively. Writing 0 to a bit in SET or CLR register has no effect. Reading the SET or CLR register returns the value of the main register.

Note: The main register may not be visible and hence not directly accessible in all cases.

6.1.5 Tasks

Tasks are used to trigger actions in a peripheral, for example to start a particular behavior. A peripheral can implement multiple tasks with each task having a separate register in that peripheral's task register group.

A task is triggered when firmware writes 1 to the task register, or when the peripheral itself or another peripheral toggles the corresponding task signal. See Tasks, events, shortcuts, and interrupts on page 76.

6.1.6 Events

Events are used to notify peripherals and the CPU about events that have happened, for example a state change in a peripheral. A peripheral may generate multiple events with each event having a separate register in that peripheral's event register group.

An event is generated when the peripheral itself toggles the corresponding event signal, and the event register is updated to reflect that the event has been generated. See Tasks, events, shortcuts, and interrupts on page 76. An event register is only cleared when firmware writes 0 to it.



Events can be generated by the peripheral even when the event register is set to 1.

6.1.7 Shortcuts

A shortcut is a direct connection between an event and a task within the same peripheral. If a shortcut is enabled, the associated task is automatically triggered when its associated event is generated.

Using a shortcut is the equivalent to making the same connection outside the peripheral and through the PPI. However, the propagation delay through the shortcut is usually shorter than the propagation delay through the PPI.

Shortcuts are predefined, which means their connections cannot be configured by firmware. Each shortcut can be individually enabled or disabled through the shortcut register, one bit per shortcut, giving a maximum of 32 shortcuts for each peripheral.

6.1.8 Interrupts

All peripherals support interrupts. Interrupts are generated by events.

A peripheral only occupies one interrupt, and the interrupt number follows the peripheral ID. For example, the peripheral with ID=4 is connected to interrupt number 4 in the nested vectored interrupt controller (NVIC).

Using the INTEN, INTENSET, and INTENCLR registers, every event generated by a peripheral can be configured to generate that peripheral's interrupt. Multiple events can be enabled to generate interrupts simultaneously. To resolve the correct interrupt source, the event registers in the event group of peripheral registers will indicate the source.

Some peripherals implement only INTENSET and INTENCLR registers, and the INTEN register is not available on those peripherals. See the individual peripheral chapters for details. In all cases, reading back the INTENSET or INTENCLR register returns the same information as in INTEN.

Each event implemented in the peripheral is associated with a specific bit position in the INTEN, INTENSET, and INTENCLR registers.

The relationship between tasks, events, shortcuts, and interrupts is shown in Tasks, events, shortcuts, and interrupts on page 76.

Interrupt clearing

Clearing an interrupt by writing 0 to an event register, or disabling an interrupt using the INTENCLR register, can take up to four CPU clock cycles to take effect. This means that an interrupt may reoccur immediately, even if a new event has not come, if the program exits an interrupt handler after the interrupt is cleared or disabled but before four clock cycles have passed.

Note: To avoid an interrupt reoccurring before a new event has come, the program should perform a read from one of the peripheral registers. For example, the event register that has been cleared, or the INTENCLR register that has been used to disable the interrupt. This will cause a one to three-cycle delay and ensure the interrupt is cleared before exiting the interrupt handler.

Care should be taken to ensure the compiler does not remove the read operation as an optimization. If the program can guarantee a four-cycle delay after an event is cleared or an interrupt is disabled, then a read of a register is not required.



6.2 AAR — Accelerated address resolver

Accelerated address resolver is a cryptographic support function for implementing the Resolvable Private Address Resolution Procedure described in the *Bluetooth Core specification* v4.0. Resolvable Private Address generation should be achieved using ECB and is not supported by AAR.

The procedure allows two devices that share a secret key to generate and resolve a hash based on their device address. The AAR block enables real-time address resolution on incoming packets when configured as described in this chapter. This allows real-time packet filtering (whitelisting) using a list of known shared keys (Identity Resolving Keys (IRK) in *Bluetooth*).

6.2.1 EasyDMA

AAR implements EasyDMA for reading and writing to RAM. EasyDMA will have finished accessing RAM when the END, RESOLVED, and NOTRESOLVED events are generated.

If the IRKPTR on page 84, ADDRPTR on page 84, and the SCRATCHPTR on page 84 is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

6.2.2 Resolving a resolvable address

As per *Bluetooth* specification, a private resolvable address is composed of six bytes.

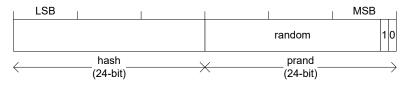


Figure 24: Resolvable address

To resolve an address the register ADDRPTR on page 84 must point to the start of the packet. The resolver is started by triggering the START task. A RESOLVED event is generated when AAR manages to resolve the address using one of the Identity Resolving Keys (IRK) found in the IRK data structure. AAR will use the IRK specified in the register IRK0 to IRK15 starting from IRK0. The register NIRK on page 83 specifies how many IRKs should be used. The AAR module will generate a NOTRESOLVED event if it is not able to resolve the address using the specified list of IRKs.

AAR will go through the list of available IRKs in the IRK data structure and for each IRK try to resolve the address according to the Resolvable Private Address Resolution Procedure described in the *Bluetooth Core specification* v4.0 [Vol 3] chapter 10.8.2.3. The time it takes to resolve an address varies due to the location in the list of the resolvable address. The resolution time will also be affected by RAM accesses performed by other peripherals and the CPU. See the Electrical specifications for more information about resolution time.

AAR only compares the received address to those programmed in the module without checking the address type.

AAR will stop as soon as it has managed to resolve the address, or after trying to resolve the address using NIRK number of IRKs from the IRK data structure. AAR will generate an END event after it has stopped.



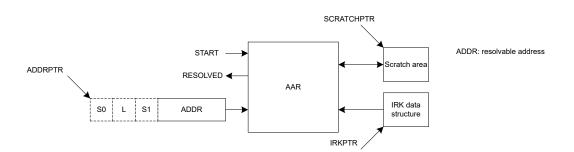


Figure 25: Address resolution with packet preloaded into RAM

6.2.3 Use case example for chaining RADIO packet reception with address resolution using AAR

AAR may be started as soon as the 6 bytes required by AAR have been received by RADIO and stored in RAM. The ADDRPTR pointer must point to the start of packet.

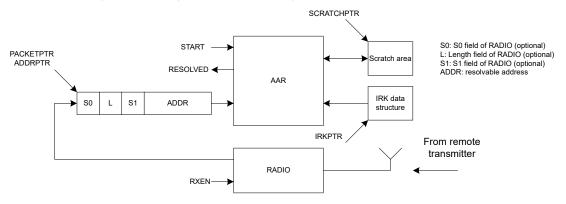


Figure 26: Address resolution with packet loaded into RAM by RADIO

6.2.4 IRK data structure

The IRK data structure is located in RAM at the memory location specified by the IRKPTR register.

Property	Address offset	Description
IRKO	0	IRK number 0 (16 bytes)
IRK1	16	IRK number 1 (16 bytes)
IRK15	240	IRK number 15 (16 bytes)

Table 23: IRK data structure overview

6.2.5 Registers

Base address	Peripheral	Instance	Description	Configuration			
0x4000F000	AAR	AAR	Accelerated address resolver				
			Table 24. Instances				

Table 24: Instances

Register	Offset	Description
TASKS_START	0x000	Start resolving addresses based on IRKs specified in the IRK data structure
TASKS_STOP	0x008	Stop resolving addresses
EVENTS_END	0x100	Address resolution procedure complete



Register	Offset	Description	
EVENTS_RESOLVED	0x104	Address resolved	
EVENTS_NOTRESOLVED	0x108	Address not resolved	
INTENSET	0x304	Enable interrupt	
INTENCLR	0x308	Disable interrupt	
STATUS	0x400	Resolution status	
ENABLE	0x500	Enable AAR	
NIRK	0x504	Number of IRKs	
IRKPTR	0x508	Pointer to IRK data structure	
ADDRPTR	0x510	Pointer to the resolvable address	
SCRATCHPTR	0x514	Pointer to data area used for temporary storage	

Table 25: Register overview

6.2.5.1 TASKS_START

Address offset: 0x000

Start resolving addresses based on IRKs specified in the IRK data structure

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_START			Start resolving addresses based on IRKs specified in the IRK
			data structure
	Trigger	1	Trigger task

6.2.5.2 TASKS_STOP

Address offset: 0x008

Stop resolving addresses

Bit n	umb	er		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					A
Rese	t OxC	0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	W	TASKS_STOP			Stop resolving addresses
			Trigger	1	Trigger task

6.2.5.3 EVENTS_END

Address offset: 0x100

Address resolution procedure complete

Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_END			Address resolution procedure complete
	NotGenerated	0	Event not generated
	Generated	1	Event generated



6.2.5.4 EVENTS_RESOLVED

Address offset: 0x104

Address resolved

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_RESOLVED			Address resolved
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.2.5.5 EVENTS_NOTRESOLVED

Address offset: 0x108

Address not resolved

Bit number	31 30 2	29 28 27 26 25 24	23 22 21 20 19 1	8 17 16 15	14 13 12 1	1 10 9	87	65	43	2 1 0
ID										А
Reset 0x0000000	0 0	0 0 0 0 0 0	0 0 0 0 0	000	0000	000	0 0	0 0	0 0	000
ID Acce Field Value										
A RW EVENTS_NOTRESOLVED			Address not resc	lved						
NotGe	enerated 0		Event not genera	ited						
Gener	ated 1		Event generated							

6.2.5.6 INTENSET

Address offset: 0x304

Enable interrupt

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW END			Write '1' to enable interrupt for event END
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RESOLVED			Write '1' to enable interrupt for event RESOLVED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW NOTRESOLVED			Write '1' to enable interrupt for event NOTRESOLVED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.2.5.7 INTENCLR

Address	offset:	0x308
---------	---------	-------

Disable interrupt



Bit r	number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	ID			СВА
Res	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RESOLVED			Write '1' to disable interrupt for event RESOLVED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW NOTRESOLVED			Write '1' to disable interrupt for event NOTRESOLVED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.2.5.8 STATUS

Address offset: 0x400

Resolution status

A R STATUS	[015]	The IRK that was used last time an address was resolved
ID Acce Field		Description
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A
Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.2.5.9 ENABLE

Address offset: 0x500

Enable AAR

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW ENABLE		Enable or disable AAR
Disabled	0	Disable
Enabled	3	Enable

6.2.5.10 NIRK

Address offset: 0x504

Number of IRKs

Bit r	number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			ААААА
Res	et 0x00000001	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
А	RW NIRK	[116]	Number of Identity root keys available in the IRK data
			structure



6.2.5.11 IRKPTR

Address offset: 0x508

Pointer to IRK data structure

A RW IRKPTR	Pointer to the IRK data structure
ID Acce Field	Value Description
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.2.5.12 ADDRPTR

Address offset: 0x510

Pointer to the resolvable address

Bit n	umber		313	80 29	9 28	3 27	26	25	24	23	222	212	0 19	18	17	16	15	14 :	13 1	12 1	11	0 9	8	7	6	5	4	3	2	1 0
ID			А	A A	A	A	А	А	А	A	А	A A	A A	А	А	A	А	A	A	A	A A	A	A	А	A	A	А	A	A	A A
Rese	t 0x00	000000	0	0 0	0	0	0	0	0	0	0	0 0	0 0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0 0
ID																														
А	RW	ADDRPTR								Poi	nte	r to	the	res	olva	ble	ad	dre	ss (6-b	yte	5)								

6.2.5.13 SCRATCHPTR

Address offset: 0x514

Pointer to data area used for temporary storage

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW SCRATCHPTR	Pointer to a scratch data area used for temporary storage
		during resolution. A space of minimum 3 bytes must be
		reserved.

6.2.6 Electrical specification

6.2.6.1 AAR Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{AAR}	Address resolution time per IRK. Total time for several IRKs				μs
	is given as (1 μs + n * t_AAR), where n is the number of IRKs.				
	(Given priority to the actual destination RAM block).				
t _{AAR,8}	Time for address resolution of 8 IRKs. (Given priority to the		48		μs
	actual destination RAM block).				

6.3 BPROT — Block protection

The mechanism for protecting non-volatile memory can be used to prevent erroneous application code from erasing or writing to protected blocks.




Non-volatile memory can be protected from erases and writes depending on the settings in the CONFIG registers. One bit in a CONFIG register represents one protected block of 4 kB. There are multiple CONFIG registers to cover the whole range of the flash. Protected regions of program memory on page 85 illustrates how the CONFIG bits map to the program memory space.

Important: If an erase or write to a protected block is detected, the CPU will hard fault. If an ERASEALL operation is attempted from the CPU while any block is protected, it will be blocked and the CPU will hard fault.

On reset, all the protection bits are cleared. To ensure safe operation, the first task after reset must be to set the protection bits. The only way of clearing protection bits is by resetting the device from any reset source.

The protection mechanism is turned off when in debug mode (when a debugger is connected) and the DISABLEINDEBUG register is set to disabled.

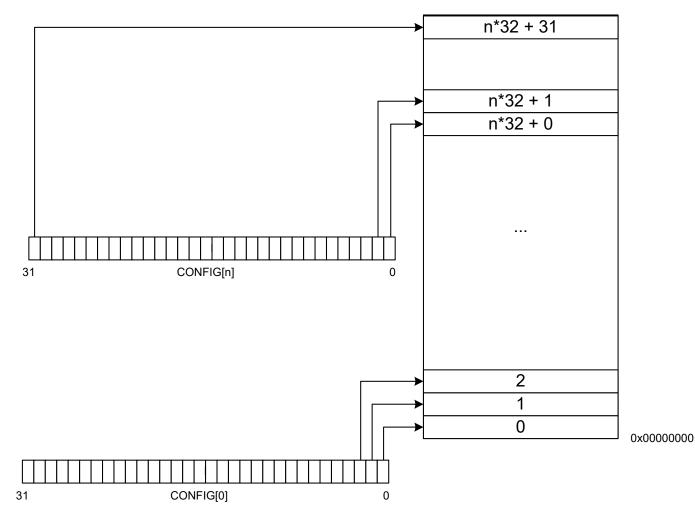

Program memory

Figure 27: Protected regions of program memory



6.3.1 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40000000	BPROT	BPROT	Block protect		
			Table 26: Instances		
Register	Offset	Description			
CONFIG0	0x600	Block protec	t configuration register 0		
CONFIG1	0x604	Block protec	t configuration register 1		
DISABLEINDEBUG	0x608	Disable prot	ection mechanism in debug mode		
UNUSED0	0x60C				Reserved

Table 27: Register overview

6.3.1.1 CONFIG0

Address offset: 0x600

Block protect configuration register 0

Bit nun	nber		313	30 2	9 28	8 27	7 26	25	24	23 2	22 2	1 20) 19	18	17	16 1	.5 1	4 13	3 12	11	10	9 8	37	6	5	4	3	2 1	0
ID			f	e c	l c	: b	а	Ζ	Y	X	w١	v u	Т	S	R	Q	ΡC	D N	М	L	К	J	н	G	F	E	D	СВ	А
Reset 0)x0000000		0	0 0	0	0	0	0	0	0	0 (0 0	0	0	0	0	0 (0 0	0	0	0	0 () O	0	0	0	0	0 0	0
ID #										Des																			
A-f I	RW REGION[i] (i=031)									Ena	ble	pro	tect	ion	for	reg	ion	i. W	rite	'0' I	has	no	effe	ct.					
		Disabled	0							Pro	tect	ion	disa	ble	d														
		Enabled	1							Pro	tect	ion	ena	bled	d														

6.3.1.2 CONFIG1

Address offset: 0x604

Block protect configuration register 1

Bit number	31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		P O N M L K J I H G F E D C B A
Reset 0x0000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-P RW REGION[i+32] (i=015)		Enable protection for region i+32. Write '0' has no effect.
Disabled	0	Protection disabled
Enabled	1	Protection enabled

6.3.1.3 DISABLEINDEBUG

Address offset: 0x608

Disable protection mechanism in debug mode



Bit r	umber		31 30 29 28	27 26	25 24	1 23 2	22 2	1 20) 19	18	17	16	15 1	14 1	13 1	.2 1	1 10	9 כ	8	7	6	5	4	3	2 1	LQ
ID																										ļ
Rese	et 0x0000001		0 0 0 0	0 0	0 0	0	0 0	0 0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0 0) :
A	RW DISABLEINDEBUG					Dis	able	the	pro	otec	tior	n m	ech	nani	ism	for	NV	M r	egi	ons	wh	ile	in			
						deb	oug	mod	le. T	his	reg	iste	er w	/ill o	only	/ dis	abl	e th	ne p	rot	ecti	on				
						me	chai	nism	n if t	he	dev	ice	is ir	n de	ebu	g m	ode	э.								
		Disabled	1			Dis	able	d in	det	bug																
		Enabled	0			Ena	able	d in	deb	ug																

6.4 CCM — AES CCM mode encryption

Cipher block chaining - message authentication code (CCM) mode is an authenticated encryption algorithm designed to provide both authentication and confidentiality during data transfer. CCM combines counter mode encryption and CBC-MAC authentication. The CCM terminology "Message authentication code (MAC)" is called the "Message integrity check (MIC)" in *Bluetooth* terminology and also in this document.

The CCM block generates an encrypted keystream that is applied to input data using the XOR operation and generates the four byte MIC field in one operation. CCM and RADIO can be configured to work synchronously. CCM will encrypt in time for transmission and decrypt after receiving bytes into memory from the radio. All operations can complete within the packet RX or TX time. CCM on this device is implemented according to *Bluetooth* requirements and the algorithm as defined in IETF RFC3610, and depends on the AES-128 block cipher. A description of the CCM algorithm can also be found in NIST **Special Publication 800-38C**. The *Bluetooth* specification describes the configuration of counter mode blocks and encryption blocks to implement compliant encryption for Bluetooth Low Energy.

The CCM block uses EasyDMA to load key counter mode blocks (including the nonce required), and to read/write plain text and cipher text.

The AES CCM peripheral supports three operations: keystream generation, packet encryption, and packet decryption. These operations are performed in compliance with the *Bluetooth* AES CCM 128 bit block encryption, see *Bluetooth Core specification Version 4.0*.

The following figure illustrates keystream generation followed by encryption or decryption. The shortcut is

encryption / decryption

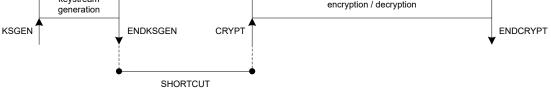


Figure 28: Keystream generation

6.4.1 Keystream generation

A new keystream needs to be generated before a new packet encryption or packet decryption operation can start.

A keystream is generated by triggering the KSGEN task. An ENDKSGEN event is generated after the keystream has been generated.

Keystream generation, packet encryption, and packet decryption operations utilize the configuration specified in the data structure pointed to by CNFPTR on page 97. It is necessary to configure this



pointer and its underlying data structure, and register MODE on page 97 before the KSGEN task is triggered.

The keystream will be stored in the AES CCM peripheral's temporary memory area, specified by the SCRATCHPTR on page 98, where it will be used in subsequent encryption and decryption operations.

For default length packets (MODE.LENGTH = Default), the size of the generated keystream is 27 bytes. When using extended length packets (MODE.LENGTH = Extended), register MAXPACKETSIZE on page 98 specifies the length of the keystream to be generated. The length of the generated keystream must be greater or equal to the length of the subsequent packet payload to be encrypted or decrypted. The maximum length of the keystream in extended mode is 251 bytes, which means that the maximum packet payload size is 251.

If a shortcut is used between the ENDKSGEN event and CRYPT task, pointer INPTR on page 97 and the pointers OUTPTR on page 98 must also be configured before the KSGEN task is triggered.

6.4.2 Encryption

The AES CCM periheral is able to read an unencrypted packet, encrypt it, and append a four byte MIC field to the packet.

During packet encryption, the AES CCM peripheral performs the following:


- Reads the unencrypted packet located in RAM address specified in the INPTR pointer
- Encrypts the packet
- Appends a four byte long Message Integrity Check (MIC) field to the packet

Encryption is started by triggering the CRYPT task with register MODE on page 97 set to ENCRYPTION. An ENDCRYPT event is generated when packet encryption is completed.

The AES CCM peripheral will also modify the length field of the packet to adjust for the appended MIC field. It adds four bytes to the length and stores the resulting packet in RAM at the address specified in pointer OUTPTR on page 98, see Encryption on page 88.

Empty packets (length field is set to 0) will not be encrypted but instead moved unmodified through the AES CCM peripheral.

AES CCM supports different widths of the LENGTH field in the data structure for encrypted packets. This is configured in register MODE on page 97.

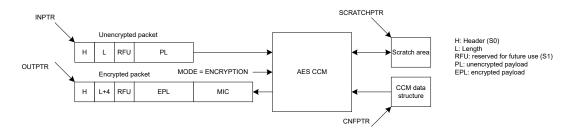



6.4.3 Decryption

The AES CCM peripheral is able to read an encrypted packet, decrypt it, authenticate the MIC field, and generate an appropriate MIC status.

During packet decryption, the AES CCM peripheral performs the following:

- Reads the encrypted packet located in RAM at the address specified in the INPTR pointer
- Decrypts the packet
- Authenticates the packet's MIC field
- Generates the appropriate MIC status




Decryption is started by triggering the CRYPT task with register MODE on page 97 set to DECRYPTION. An ENDCRYPT event is generated when packet decryption is completed.

The AES CCM peripheral modifies the length field of the packet to adjust for the MIC field. It subtracts four bytes from the length and stores the decrypted packet in RAM at the address specified in the pointer OUTPTR, see Decryption on page 89.

CCM is only able to decrypt packet payloads that are at least five bytes long (one byte or more encrypted payload (EPL) and four bytes of MIC). CCM will therefore generate a MIC error for packets where the length field is set to 1, 2, 3, or 4.

Empty packets (length field is set to 0) will not be decrypted but instead moved unmodified through the AES CCM peripheral. These packets will always pass the MIC check.

CCM supports different widths of the LENGTH field in the data structure for decrypted packets. This is configured in register MODE on page 97.

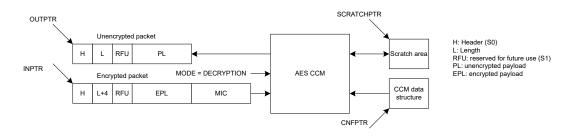



6.4.4 AES CCM and RADIO concurrent operation

The CCM peripheral is able to encrypt/decrypt data synchronously to data being transmitted or received on the radio.

In order for CCM to run synchronously with the radio, the data rate setting in register MODE on page 97 needs to match the radio data rate. The settings in this register apply whenever either the KSGEN or CRYPT tasks are triggered.

The data rate setting of register MODE on page 97 can also be overridden on-the-fly during an ongoing encrypt/decrypt operation by the contents of register RATEOVERRIDE on page 99. The data rate setting in this register applies whenever the RATEOVERRIDE task is triggered. This feature can be useful in cases where the radio data rate is changed during an ongoing packet transaction.

6.4.5 Encrypting packets on-the-fly in radio transmit mode

When the AES CCM peripheral encrypts a packet on-the-fly while RADIO is transmitting it, RADIO must read the encrypted packet from the same memory location that the AES CCM peripheral is writing to.

The OUTPTR on page 98 pointer in the AES CCM must point to the same memory location as the PACKETPTR pointer in the radio, see Configuration of on-the-fly encryption on page 90.



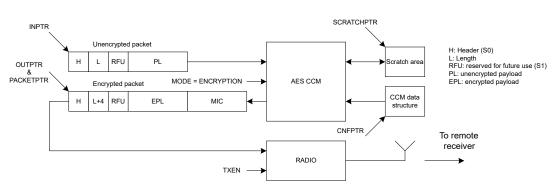


Figure 31: Configuration of on-the-fly encryption

In order to match RADIO's timing, the KSGEN task must be triggered early enough to allow the keystream generation to complete before packet encryption begins.

For short packets (MODE.LENGTH = Default), the KSGEN task must be triggered before or at the same time as the START task in RADIO is triggered. In addition, the shortcut between the ENDKSGEN event and the CRYPT task must be enabled. This use-case is illustrated in On-the-fly encryption of short packets (MODE.LENGTH = Default) using a PPI connection on page 90. It uses a PPI connection between the READY event in RADIO and the KSGEN task in the AES CCM peripheral.

For long packets (MODE.LENGTH = Extended), the keystream generation needs to start earlier, such as when the TXEN task in RADIO is triggered.

Refer to Timing specification on page 99 for information about the time needed for generating a keystream.

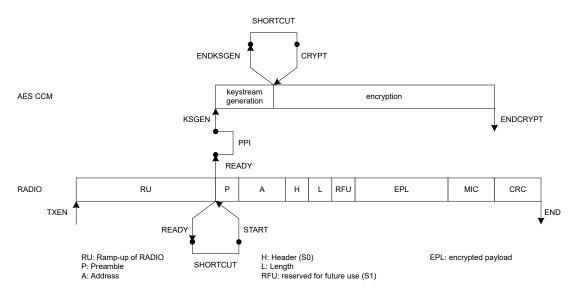


Figure 32: On-the-fly encryption of short packets (MODE.LENGTH = Default) using a PPI connection

6.4.6 Decrypting packets on-the-fly in RADIO receive mode

When the AES CCM peripheral decrypts a packet on-the-fly while RADIO is receiving it, the AES CCM peripheral must read the encrypted packet from the same memory location that RADIO is writing to.

The INPTR on page 97 pointer in the AES CCM must point to the same memory location as the PACKETPTR pointer in RADIO, see Configuration of on-the-fly decryption on page 91.



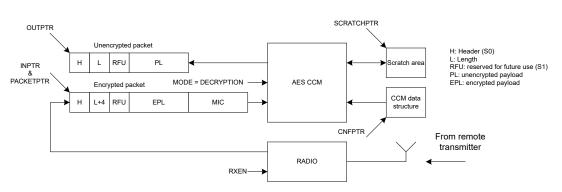


Figure 33: Configuration of on-the-fly decryption

In order to match RADIO's timing, the KSGEN task must be triggered early enough to allow the keystream generation to complete before the decryption of the packet shall start.

For short packets (MODE.LENGTH = Default) the KSGEN task must be triggered no later than when the START task in RADIO is triggered. In addition, the CRYPT task must be triggered no earlier than when the ADDRESS event is generated by RADIO.

If the CRYPT task is triggered exactly at the same time as the ADDRESS event is generated by RADIO, the AES CCM peripheral will guarantee that the decryption is completed no later than when the END event in RADIO is generated.

This use-case is illustrated in On-the-fly decryption of short packets (MODE.LENGTH = Default) using a PPI connection on page 91 using a PPI connection between the ADDRESS event in RADIO and the CRYPT task in the AES CCM peripheral. The KSGEN task is triggered from the READY event in RADIO through a PPI connection.

For long packets (MODE.LENGTH = Extended) the keystream generation will need to start even earlier, such as when the RXEN task in RADIO is triggered.

Refer to Timing specification on page 99 for information about the time needed for generating a keystream.

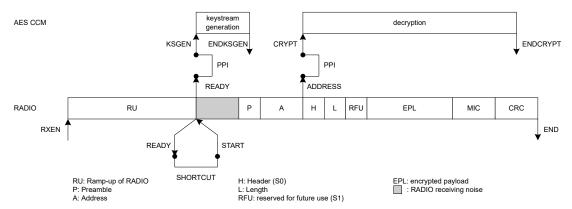


Figure 34: On-the-fly decryption of short packets (MODE.LENGTH = Default) using a PPI connection

6.4.7 CCM data structure

The CCM data structure is located in Data RAM at the memory location specified by the CNFPTR pointer register.



Property	Address offset	Description
KEY	0	16 byte AES key
PKTCTR	16	Octet0 (LSO) of packet counter
	17	Octet1 of packet counter
	18	Octet2 of packet counter
	19	Octet3 of packet counter
	20	Bit 6 – Bit 0: Octet4 (7 most significant bits of packet counter, with Bit 6 being the most
		significant bit) Bit7: Ignored
	21	Ignored
	22	Ignored
	23	Ignored
	24	Bit 0: Direction bit Bit 7 – Bit 1: Zero padded
IV	25	8 byte initialization vector (IV) Octet0 (LSO) of IV, Octet1 of IV, , Octet7 (MSO) of IV

Table 28: CCM data structure overview

The NONCE vector (as specified by the *Bluetooth* Core Specification) will be generated by hardware based on the information specified in the CCM data structure from CCM data structure overview on page 92.

Property	Address offset	Description
HEADER	0	Packet Header
LENGTH	1	Number of bytes in unencrypted payload
RFU	2	Reserved Future Use
PAYLOAD	3	Unencrypted payload

Table 29: Data structure for unencrypted packet

Property	Address offset	Description
HEADER	0	Packet Header
LENGTH	1	Number of bytes in encrypted payload including length of MIC LENGTH will be 0 for empty packets since the MIC is not added to empty packets
RFU	2	Reserved Future Use
PAYLOAD	3	Encrypted payload
MIC	3 + payload length	ENCRYPT: 4 bytes encrypted MIC

MIC is not added to empty packets

Table 30: Data structure for encrypted packet

6.4.8 EasyDMA and ERROR event

CCM implements an EasyDMA mechanism for reading and writing to RAM.

When the CPU and EasyDMA enabled peripherals access the same RAM block at the same time, increased bus collisions might disrupt on-the-fly encryption. This will generate an ERROR event.

EasyDMA stops accessing RAM when the ENDKSGEN and ENDCRYPT events are generated.

If the CNFPTR, SCRATCHPTR, INPTR, and the OUTPTR are not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.



6.4.9 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x4000F000	ССМ	ССМ	AES CCM mode encryption		
			Table 31: Instance	25	
Register	Offset	Descriptio	n		
TASKS_KSGEN	0x000	Start gene	ration of keystream. This operation	on will stop by itself when completed.	
TASKS_CRYPT	0x004	Start encry	yption/decryption. This operatior	n will stop by itself when completed.	
TASKS_STOP	0x008	Stop encry	ption/decryption		
TASKS_RATEOVER	RIDE 0x00C	Override D	DATARATE setting in MODE registe	er with the contents of the RATEOVERRIDE register	
		for any on	going encryption/decryption		
EVENTS_ENDKSG	EN 0x100	Keystream	generation complete		
EVENTS_ENDCRY	PT 0x104	Encrypt/de	ecrypt complete		
EVENTS_ERROR	0x108	CCM error	event		Deprecated
SHORTS	0x200	Shortcuts	between local events and tasks		
INTENSET	0x304	Enable inte	errupt		
INTENCLR	0x308	Disable int	terrupt		
MICSTATUS	0x400	MIC check	result		
ENABLE	0x500	Enable			
MODE	0x504	Operation	mode		
CNFPTR	0x508	Pointer to	data structure holding AES key a	nd NONCE vector	
INPTR	0x50C	Input poin	ter		
OUTPTR	0x510	Output po	inter		
SCRATCHPTR	0x514	Pointer to	data area used for temporary sto	orage	
MAXPACKETSIZE	0x518	Length of	keystream generated when MOD	E.LENGTH = Extended.	
RATEOVERRIDE	0x51C	Data rate o	override setting.		

Table 32: Register overview

6.4.9.1 TASKS_KSGEN

Address offset: 0x000

Start generation of keystream. This operation will stop by itself when completed.

Bit number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A W TASKS_KSGEN			Start generation of keystream. This operation will stop by
			itself when completed.
	Trigger	1	Trigger task

6.4.9.2 TASKS_CRYPT

Address offset: 0x004

Start encryption/decryption. This operation will stop by itself when completed.



Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_CRYPT			Start encryption/decryption. This operation will stop by
			itself when completed.
	Trigger		Trigger task

6.4.9.3 TASKS_STOP

Address offset: 0x008

Stop encryption/decryption

Bit n	um	nbei	r		31 30 29 28 27 26 2	24	23 22	2 2 1	1 20	0 19	91	81	71	16 1	.5 1	14 :	13 :	12	11	10	9	8	7	6	5	4	3	2	1	0
ID																														А
Rese	et O)x00	000000		0 0 0 0 0 0	0	0 0	0	0	0) () (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ID							Desc																							
A	١	N	TASKS_STOP				Stop	en	cry	ptio	on,	/de	cry	/pti	on															
				Trigger	1		Trigg	er t	tasł	ĸ																				

6.4.9.4 TASKS_RATEOVERRIDE

Address offset: 0x00C

Override DATARATE setting in MODE register with the contents of the RATEOVERRIDE register for any ongoing encryption/decryption

Bit num	ber		31 30 29	28 2	7 26	5 25	24	23 2	22.2	212	0 19	9 18	17	16	15 1	4 13	3 12	11	10	98	37	6	5 4	13	2	1 0
ID																										А
Reset 0	x0000000		0 0 0	0 0	0 0	0	0	0	0	0 0	0 0	0	0	0	0	0 0	0	0	0	0 0	0 0	0	0	0 0	0	0 0
ID A																										
A W	TASKS_RATEOVERRIDE							Ove	errio	de D	ATA	RAT	re s	etti	ng i	n M	ODE	E re	giste	r w	ith t	he				
								con	ten	ts o	f th	e R/	ATEC	OVE	RRI	DE r	egis	ster	for a	any	ong	oing	ţ.			
								enc	ryp	tion	n/de	cry	ptio	n												
		Trigger	1					Trig	ger	tas	k															

6.4.9.5 EVENTS_ENDKSGEN

Address offset: 0x100

Keystream generation complete

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_ENDKSGEN			Keystream generation complete
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.4.9.6 EVENTS_ENDCRYPT

Address offset: 0x104

Encrypt/decrypt complete



Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	RW EVENTS_ENDCRYPT			Encrypt/decrypt complete
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.4.9.7 EVENTS_ERROR (Deprecated)

Address offset: 0x108

CCM error event

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0
ID			А
Reset 0x0000000	0 0 0 0 0 0 0		0000
A RW EVENTS_ERROR		CCM error event	Deprecated
NotGenerated	0	Event not generated	
Generated	1	Event generated	

6.4.9.8 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW ENDKSGEN_CRYPT			Shortcut between event ENDKSGEN and task CRYPT
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.4.9.9 INTENSET

Address offset: 0x304

Enable interrupt

Bit r	number		31 30 29 28 27	26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					СВА
Res	et 0x0000000		0 0 0 0 0	000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	RW ENDKSGEN				Write '1' to enable interrupt for event ENDKSGEN
		Set	1		Enable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
В	RW ENDCRYPT				Write '1' to enable interrupt for event ENDCRYPT
		Set	1		Enable
		Disabled	0		Read: Disabled
		Enabled	1		Read: Enabled
С	RW ERROR				Write '1' to enable interrupt for event ERROR Deprecated



Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			СВА
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.4.9.10 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				C B A
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW ENDKSGEN			Write '1' to disable interrupt for event ENDKSGEN
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDCRYPT			Write '1' to disable interrupt for event ENDCRYPT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ERROR			Write '1' to disable interrupt for event ERROR Deprecated
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.4.9.11 MICSTATUS

Address offset: 0x400

MIC check result

Bit n	umbe	er		31 3	0 29	28	27	262	25 2	24 23	3 2	2 2	1 2(0 19	9 18	3 17	16	15	14	13	12	11	10	9	8	7 (5 5	54	3	2	1 0
ID																															A
Rese	t 0x0	000000		0 0	0 0	0	0	0	0 (0 0) () (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0 0	0	0	0 0
ID																															
А	R	MICSTATUS								Т	he	res	ult	of t	he	MIC	C ch	nec	k pe	erfo	rm	ed	dur	ing	the	pre	evio	us			
										d	ecr	yp	tion	ор	era	tior	n														
			CheckFailed	0						N	1IC	ch	eck	fail	ed																
			CheckPassed	1						N	1IC	ch	eck	pas	sec	ł															

6.4.9.12 ENABLE

Address offset: 0x500

Enable



Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW ENABLE			Enable or disable CCM
	Disabled	0	Disable
	Enabled	2	Enable

6.4.9.13 MODE

Address	offset:	0x504
---------	---------	-------

Operation mode

Bit num	nber		31	30 29	9 28	27	26 2	25 24	1 23 2	22 2	1 20	0 19	9 18	17	16 3	15 1	.4 1	3 12	11	10	9	87	6	5	4	3	2	1 0
ID								С						В	В													А
Reset 0	x0000001		0	0 0	0	0	0 (0 0	0	0 0	0 0	0	0	0	0	0 (0 0	0	0	0	0	0 0) ()	0	0	0	0	01
ID A																												
A F	W MODE								The	e mo	de (of o	per	atio	n to	o be	e us	ed. '	The	sett	ing	s in	this	;				
									regi	ister	rapı	ply	whe	enev	ver	eith	ner t	he l	KSG	EN d	or C	RYP	T ta	sks				
									are	trig	gere	ed.																
		Encryption	0						AES	S CCI	Мp	ack	et e	ncr	ypti	on	mo	de										
		Decryption	1						AES	S CCI	Мp	ack	et d	ecr	ypti	on	mo	de										
B F	RW DATARATE								Rad	lio d	lata	rate	e th	at t	he (CCN	1 sh	all r	un	sync	hro	nou	is w	ith				
		1Mbit	0						1 M	1bps	;																	
		2Mbit	1						2 M	1bps	;																	
		125Kbps	2						125	6 Kbp	ps																	
		500Kbps	3						500) Kbp	ps																	
C F	RW LENGTH								Pac	ket l	leng	gth (con	figu	rati	on												
		Default	0						Def	ault	len	gth	. Eff	ecti	ve l	eng	gth o	of LE	ENG	ith f	ielc	l in						
									enc	rypt	ted/	/dec	cryp	ted	pad	ket	is 5	5 bit	s. A	key	stre	am	for					
									рас	ket	pay	load	ds u	p to	27	byt	tes	will	be a	gene	rate	ed.						
		Extended	1						Exte	ende	ed le	eng	th. I	Effe	ctiv	e le	ngt	h of	LEN	IGTI	H fie	eld i	n					
									enc	rypt	ted/	/dec	cryp	ted	pad	ket	is 8	8 bit	s. A	key	stre	am	for					
									рас	ket	pay	load	ds u	p to	M	AXP	ACK	ETS	IZE	byte	es w	vill k	be					
									gen	erat	ted.																	

6.4.9.14 CNFPTR

Address offset: 0x508

Pointer to data structure holding AES key and NONCE vector

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field	
A RW CNFPTR	Pointer to the data structure holding the AES key and
	the CCM NONCE vector (see Table 1 CCM data structure
	overview)

6.4.9.15 INPTR

Address offset: 0x50C



Input pointer

	Input pointer
ID Acce Field	Value Description
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.4.9.16 OUTPTR

Address offset: 0x510

Output pointer

Bit n	umber	31	30	29	28	27	26	25	24	23	22	21	20	19 1	18 1	.7 1	6 1	5 14	13	12	11 :	LO 9	9	87	76	5 5	5 4	3	2	1 0
ID		А	А	A	А	А	А	A	A	А	A	А	A	A	A	A /	A A	A	A	А	А	A	Α,	4 <i>4</i>	A 4	A	A	А	A	A A
Rese	t 0x0000000	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0 0	0	0	0	0	0 (0	0 0) () (0	0	0	0 0
ID																														
A	RW OUTPTR									Οι	itpu	ıt p	oin	ter																

6.4.9.17 SCRATCHPTR

Address offset: 0x514

Pointer to data area used for temporary storage

Bit n	umber	31 30) 29	28	27	26	25	24 2	23 22	2 2 1	. 20	19	18	17 :	l6 1	.5 14	13	12	11	10	9	8	7	6	5 4	43	2	1	0
ID		A A	A	A	А	А	А	А	A A	A	A	А	A	А	A	A A	А	А	А	A	A	A	A	A	A	A A	A	A	A
Rese	t 0x0000000	0 0	0	0	0	0	0	0	0 0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	0	0	0 () () 0	0	0
ID																													
А	RW SCRATCHPTR							F	Point	ter t	to a	scr	atc	h da	ita a	area	use	ed fo	or t	em	por	rary	sto	orag	ge				
								C	durir	ng k	eyst	trea	m	gen	erat	ion,	MI	Cge	ene	rati	on	and	b						
								e	encr	ypti	on/	/dec	ryp	otior	۱.														
								٦	The s	scra	tch	are	a is	use	ed f	or te	emp	ora	ry s	stor	age	e of	da	ta					
								c	durir	ng k	eyst	trea	m	gen	erat	ion	and	en	cry	ptic	n.								
								,	Nho	n M	חחו		ENIC	стн	- r	efau	ult :	a cr	200	a of	13	hv	toc						
																rary													
																СКЕТ		-											
									equ			(10	• •				5,21	-, 0	,	5 01	50	0.0	901	5					
									cqu	ii cu																			

6.4.9.18 MAXPACKETSIZE

Address offset: 0x518

Length of keystream generated when MODE.LENGTH = Extended.

Bit r	umber	31	30 2	29 28	8 27	26	25 2	4 2	23 2	22 2	212	0 19	Ə 18	17	16	15	14 1	31	2 11	l 10	9	8	7	5 5	5 4	3	2	1 0
ID																						,	Δ.	4 Δ	A	Α	А	A A
Res	et 0x000000FB	0	0	0 0	0	0	0 0) (0	0 (0 0	0 0	0	0	0	0	0 0	0 (0 0	0	0	0	1	1 1	. 1	1	0	1 1
ID																												
А	RW MAXPACKETSIZE	[0x	001	.B0	x00	FB]		L	.en	gth	of I	keys	stre	am	gen	nera	ted	wh	en l	ИОГ	DE.L	ENG	бΤН					
								=	= Ex	kter	ndeo	d. T	his v	/alu	e m	nust	be	gre	atei	or	equ	al to	b th	е				
								s	ub	seq	uer	nt pa	acke	et pa	aylo	bad	to b	e e	ncr	/pte	d/d	ecry	/pt	ed.				



6.4.9.19 RATEOVERRIDE

Address offset: 0x51C

Data rate override setting.

Override value to be used instead of the setting of MODE.DATARATE. This override value applies when the RATEOVERRIDE task is triggered.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW RATEOVERRIDE			Data rate override setting.
		1Mbit	0	1 Mbps
		2Mbit	1	2 Mbps
		125Kbps	2	125 Kbps
		500Kbps	3	500 Kbps

6.4.10 Electrical specification

6.4.10.1 Timing specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{kgen}	Time needed for keystream generation (given priority access				μs
	to destination RAM block).				

6.5 ECB — AES electronic codebook mode encryption

The AES electronic codebook mode encryption (ECB) can be used for a range of cryptographic functions like hash generation, digital signatures, and keystream generation for data encryption/decryption. The ECB encryption block supports 128 bit AES encryption (encryption only, not decryption).

AES ECB operates with EasyDMA access to system Data RAM for in-place operations on cleartext and ciphertext during encryption. ECB uses the same AES core as the CCM and AAR blocks, and is an asynchronous operation which may not complete if the AES core is busy.

AES ECB features:

- 128 bit AES encryption
- Supports standard AES ECB block encryption
- Memory pointer support
- DMA data transfer

AES ECB performs a 128 bit AES block encrypt. At the STARTECB task, data and key is loaded into the algorithm by EasyDMA. When output data has been written back to memory, the ENDECB event is triggered.

AES ECB can be stopped by triggering the STOPECB task.

6.5.1 Shared resources

The ECB, CCM, and AAR share the same AES module. The ECB will always have lowest priority, and if there is a sharing conflict during encryption, the ECB operation will be aborted and an ERRORECB event will be generated.



6.5.2 EasyDMA

The ECB implements an EasyDMA mechanism for reading and writing to the Data RAM. This DMA cannot access the program memory or any other parts of the memory area except RAM.

If the ECBDATAPTR is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The EasyDMA will have finished accessing the Data RAM when the ENDECB or ERRORECB is generated.

6.5.3 ECB data structure

Block encrypt input and output is stored in the same data structure. ECBDATAPTR should point to this data structure before STARTECB is initiated.

Property	Address offset	Description
KEY	0	16 byte AES key
CLEARTEXT	16	16 byte AES cleartext input block
CIPHERTEXT	32	16 byte AES ciphertext output block

Table 33: ECB data structure overview

6.5.4 Registers

Base address	Peripheral	Instance	Description	Configuration		
0x4000E000	ECB	ECB	AES Electronic Codebook (ECB) mode			
			block encryption			

Table 34: Instances

Register	Offset	Description
TASKS_STARTECB	0x000	Start ECB block encrypt
TASKS_STOPECB	0x004	Abort a possible executing ECB operation
EVENTS_ENDECB	0x100	ECB block encrypt complete
EVENTS_ERRORECB	0x104	ECB block encrypt aborted because of a STOPECB task or due to an error
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ECBDATAPTR	0x504	ECB block encrypt memory pointers

Table 35: Register overview

6.5.4.1 TASKS_STARTECB

Address offset: 0x000

Start ECB block encrypt

If a crypto operation is already running in the AES core, the STARTECB task will not start a new encryption and an ERRORECB event will be triggered.



Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A W TASKS_STARTECB		Start ECB block encrypt
		If a crypto operation is already running in the AES core,
		the STARTECB task will not start a new encryption and an
		ERRORECB event will be triggered.
Trigger	1	Trigger task

6.5.4.2 TASKS_STOPECB

Address offset: 0x004

Abort a possible executing ECB operation

If a running ECB operation is aborted by STOPECB, the ERRORECB event is triggered.

Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STOPECB			Abort a possible executing ECB operation
				If a running ECB operation is aborted by STOPECB, the
				ERRORECB event is triggered.
		Trigger	1	Trigger task

6.5.4.3 EVENTS_ENDECB

Address offset: 0x100

ECB block encrypt complete

Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_ENDECB		ECB block encrypt complete
NotGene	rated 0	Event not generated
Generate	d 1	Event generated

6.5.4.4 EVENTS_ERRORECB

Address offset: 0x104

ECB block encrypt aborted because of a STOPECB task or due to an error

Bit n	umber		31 30 29 28 27 26 25	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_ERRORECB			ECB block encrypt aborted because of a STOPECB task or
				due to an error
		NotGenerated	0	Event not generated
		Generated	1	Event generated



6.5.4.5 INTENSET

Address offset: 0x304

Enable interrupt

Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			B A
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENDECB			Write '1' to enable interrupt for event ENDECB
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
B RW ERRORECB			Write '1' to enable interrupt for event ERRORECB
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.5.4.6 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			B A
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENDECB			Write '1' to disable interrupt for event ENDECB
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
B RW ERRORECB			Write '1' to disable interrupt for event ERRORECB
	Clear	1	Disable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.5.4.7 ECBDATAPTR

Address offset: 0x504

ECB block encrypt memory pointers

ID	Acce Field	Value ID	Value	Description Pointer to t												
Rese	t 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0	0 0	000	0 0	0 0	0 0	0 0	0	0	0 0	0	0	0 0
ID			ААААААА	ААААА	A A	ААА	A A	A A	A A	AA	А	A	A A	А	A	A A
Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20) 19 18 1	17 16 15	14 13	12 11	10 9	8	7	6 !	54	3	2	1 0

structure overview)



6.5.5 Electrical specification

6.5.5.1 ECB Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{ECB}	Run time per 16 byte block in all modes		6		μs

6.6 EGU — Event generator unit

Event generator unit (EGU) provides support for interlayer signaling. This means providing support for atomic triggering of both CPU execution and hardware tasks, from both firmware (by CPU) and hardware (by PPI). This feature can be used for triggering CPU execution at a lower priority execution from a higher priority execution, or to handle a peripheral's interrupt service routine (ISR) execution at a lower priority for some of its events. However, triggering any priority from any priority is possible.

Listed here are the main EGU features:

- Software-enabled interrupt triggering
- Separate interrupt vectors for every EGU instance
- Up to 16 separate event flags per interrupt for multiplexing

Each instance of EGU implements a set of tasks which can individually be triggered to generate the corresponding event. For example, the corresponding event for TASKS_TRIGGER[n] is EVENTS_TRIGGERED[n]. See Instances on page 103 for a list of EGU instances.

6.6.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40014000	EGU	EGU0	Event generator unit 0	
0x40015000	EGU	EGU1	Event generator unit 1	

Table 36: Instances

Register	Offset	Description
TASKS_TRIGGER[0]	0x000	Trigger 0 for triggering the corresponding TRIGGERED[0] event
TASKS_TRIGGER[1]	0x004	Trigger 1 for triggering the corresponding TRIGGERED[1] event
TASKS_TRIGGER[2]	0x008	Trigger 2 for triggering the corresponding TRIGGERED[2] event
TASKS_TRIGGER[3]	0x00C	Trigger 3 for triggering the corresponding TRIGGERED[3] event
TASKS_TRIGGER[4]	0x010	Trigger 4 for triggering the corresponding TRIGGERED[4] event
TASKS_TRIGGER[5]	0x014	Trigger 5 for triggering the corresponding TRIGGERED[5] event
TASKS_TRIGGER[6]	0x018	Trigger 6 for triggering the corresponding TRIGGERED[6] event
TASKS_TRIGGER[7]	0x01C	Trigger 7 for triggering the corresponding TRIGGERED[7] event
TASKS_TRIGGER[8]	0x020	Trigger 8 for triggering the corresponding TRIGGERED[8] event
TASKS_TRIGGER[9]	0x024	Trigger 9 for triggering the corresponding TRIGGERED[9] event
TASKS_TRIGGER[10]	0x028	Trigger 10 for triggering the corresponding TRIGGERED[10] event
TASKS_TRIGGER[11]	0x02C	Trigger 11 for triggering the corresponding TRIGGERED[11] event
TASKS_TRIGGER[12]	0x030	Trigger 12 for triggering the corresponding TRIGGERED[12] event
TASKS_TRIGGER[13]	0x034	Trigger 13 for triggering the corresponding TRIGGERED[13] event
TASKS_TRIGGER[14]	0x038	Trigger 14 for triggering the corresponding TRIGGERED[14] event
TASKS_TRIGGER[15]	0x03C	Trigger 15 for triggering the corresponding TRIGGERED[15] event
EVENTS_TRIGGERED[0]	0x100	Event number 0 generated by triggering the corresponding TRIGGER[0] task
EVENTS_TRIGGERED[1]	0x104	Event number 1 generated by triggering the corresponding TRIGGER[1] task



Register	Offset	Description
EVENTS_TRIGGERED[2]	0x108	Event number 2 generated by triggering the corresponding TRIGGER[2] task
EVENTS_TRIGGERED[3]	0x10C	Event number 3 generated by triggering the corresponding TRIGGER[3] task
EVENTS_TRIGGERED[4]	0x110	Event number 4 generated by triggering the corresponding TRIGGER[4] task
EVENTS_TRIGGERED[5]	0x114	Event number 5 generated by triggering the corresponding TRIGGER[5] task
EVENTS_TRIGGERED[6]	0x118	Event number 6 generated by triggering the corresponding TRIGGER[6] task
EVENTS_TRIGGERED[7]	0x11C	Event number 7 generated by triggering the corresponding TRIGGER[7] task
EVENTS_TRIGGERED[8]	0x120	Event number 8 generated by triggering the corresponding TRIGGER[8] task
EVENTS_TRIGGERED[9]	0x124	Event number 9 generated by triggering the corresponding TRIGGER[9] task
EVENTS_TRIGGERED[10]	0x128	Event number 10 generated by triggering the corresponding TRIGGER[10] task
EVENTS_TRIGGERED[11]	0x12C	Event number 11 generated by triggering the corresponding TRIGGER[11] task
EVENTS_TRIGGERED[12]	0x130	Event number 12 generated by triggering the corresponding TRIGGER[12] task
EVENTS_TRIGGERED[13]	0x134	Event number 13 generated by triggering the corresponding TRIGGER[13] task
EVENTS_TRIGGERED[14]	0x138	Event number 14 generated by triggering the corresponding TRIGGER[14] task
EVENTS_TRIGGERED[15]	0x13C	Event number 15 generated by triggering the corresponding TRIGGER[15] task
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt

Table 37: Register overview

6.6.1.1 TASKS_TRIGGER[n] (n=0..15)

Address offset: $0x000 + (n \times 0x4)$

Trigger n for triggering the corresponding TRIGGERED[n] event

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_TRIGGER			Trigger n for triggering the corresponding TRIGGERED[n]
			event
	Trigger	1	Trigger task

6.6.1.2 EVENTS_TRIGGERED[n] (n=0..15)

Address offset: $0x100 + (n \times 0x4)$

Event number n generated by triggering the corresponding TRIGGER[n] task

Bit n	umber		31 30	29 2	28 2	27 2	6 2	5 24	4 23	3 2	2 2	12	01	91	81	71	6 1	5 14	4 13	3 12	2 1 1	10	9	8	7	6	5	4	3	2	1 0
ID																															А
Rese	et 0x0000000		0 0	0	0 (0 (0 0	0 (0	0) (0 () () () () () () () 0	0	0	0	0	0	0	0	0	0	0	0	0 O
ID																															
А	RW EVENTS_TRIGGERED								E١	/en	nt r	num	be	r n	ger	nera	ateo	d by	y tri	igge	erin	g tł	ne o	corr	esp	on	ding	g			
									TF	RIG	GGE	ER[r	n] ta	ask																	
		NotGenerated	0						E٧	/en	nt r	not	ger	nera	teo	b															
		Generated	1						E٧	/en	nt g	gen	erat	ted																	

6.6.1.3 INTEN

Address offset: 0x300

Enable or disable interrupt



Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11	10 9 8 7 6 5 4 3 2 1 0
ID			PONML	K J I H G F E D C B A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0
A-P RW TRIGGERED[i] (i=015)			Enable or disable interrupt for event TR	RIGGERED[i]
	Disabled	0	Disable	
	Enabled	1	Enable	

6.6.1.4 INTENSET

Address offset: 0x304

Enable interrupt

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			PONMLKJIHGFEDCBA
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-P RW TRIGGERED[i] (i=015)			Write '1' to enable interrupt for event TRIGGERED[i]
	Set	1	Enable
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled

6.6.1.5 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		P O N M L K J I H G F E D C B A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A-P RW TRIGGERED[i] (i=015)		Write '1' to disable interrupt for event TRIGGERED[i]
Clear	1	Disable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.6.2 Electrical specification

6.6.2.1 EGU Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{EGU,EVT}	Latency between setting an EGU event flag and the system		1		cycles
	setting an interrupt				

6.7 GPIO — General purpose input/output

The general purpose input/output pins (GPIOs) are grouped as one or more ports, with each port having up to 32 GPIOs.



The number of ports and GPIOs per port varies with product variant and package. Refer to Registers on page 108 and Pin assignments on page 346 for more information about the number of GPIOs that are supported.

GPIO has the following user-configurable features:

- Up to 32 GPIO pins per GPIO port
- Output drive strength
- Internal pull-up and pull-down resistors
- Wake-up from high or low level triggers on all pins
- Trigger interrupt on state changes on any pin
- All pins can be used by the PPI task/event system
- One or more GPIO outputs can be controlled through the PPI and GPIOTE channels
- Any pin can be mapped to a peripheral for layout flexibility
- GPIO state changes captured on the SENSE signal can be stored by the LATCH register

The GPIO port peripheral implements up to 32 pins, PIN0 through PIN31. Each of these pins can be individually configured in the PIN_CNF[n] registers (n=0..31).

The following parameters can be configured through these registers:

- Direction
- Drive strength
- Enabling of pull-up and pull-down resistors
- Pin sensing
- Input buffer disconnect
- Analog input (for selected pins)

The PIN_CNF registers are retained registers. See POWER — Power supply on page 49 for more information about retained registers.

6.7.1 Pin configuration

Pins can be individually configured through the SENSE field in the PIN_CNF[n] register to detect either a high or low level input.

When the correct level is detected on a configured pin, the sense mechanism will set the DETECT signal high. Each pin has a separate DETECT signal. Default behavior, defined by the DETECTMODE register, combines all DETECT signals from the pins in the GPIO port into one common DETECT signal and routes it through the system to be utilized by other peripherals. This mechanism is functional in both System ON and System OFF mode. See GPIO port and the GPIO pin details on page 107.

The following figure illustrates the GPIO port containing 32 individual pins, where PINO is shown in more detail for reference. All signals on the left side of the illustration are used by other peripherals in the system and therefore not directly available to the CPU.



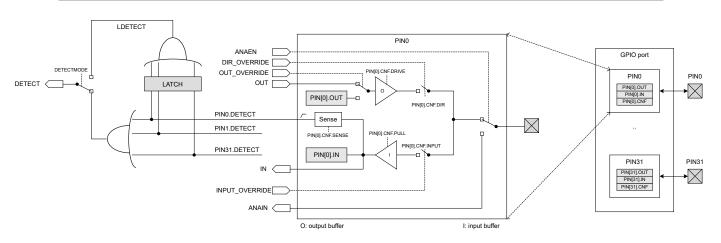


Figure 35: GPIO port and the GPIO pin details

Pins should be in a level that cannot trigger the sense mechanism before being enabled. If the SENSE condition configured in the PIN_CNF registers is met when the sense mechanism is enabled, the DETECT signal will immediately go high. A PORT event is triggered if the DETECT signal was low before enabling the sense mechanism. See GPIOTE — GPIO tasks and events on page 113.

See the following peripherals for more information about how the DETECT signal is used:

- POWER Power supply on page 49 uses the DETECT signal to exit from System OFF mode.
- GPIOTE GPIO tasks and events on page 113 uses the DETECT signal to generate the PORT event.

When a pin's PINx.DETECT signal goes high, a flag is set in the LATCH register. For example, when the PIN0.DETECT signal goes high, bit 0 in the LATCH register is set to 1. If the CPU performs a clear operation on a bit in the LATCH register when the associated PINx.DETECT signal is high, the bit in the LATCH register will not be cleared. The LATCH register will only be cleared if the CPU explicitly clears it by writing a 1 to the bit that shall be cleared, i.e. the LATCH register will not be affected by a PINx.DETECT signal being set low.

The LDETECT signal will be set high when one or more bits in the LATCH register are 1. The LDETECT signal will be set low when all bits in the LATCH register are successfully cleared to 0.

If one or more bits in the LATCH register are 1 after the CPU has performed a clear operation on the LATCH register, a rising edge will be generated on the LDETECT signal. This is illustrated in DETECT signal behavior on page 108.

Note: The CPU can read the LATCH register at any time to check if a SENSE condition has been met on any of the GPIO pins. This is still valid if that condition is no longer met at the time the CPU queries the LATCH register. This mechanism will work even if the LDETECT signal is not used as the DETECT signal.

The LDETECT signal is by default not connected to the GPIO port's DETECT signal, but via the DETECTMODE register. It is possible to change from default behavior to the DETECT signal that is derived directly from the LDETECT signal. See GPIO port and the GPIO pin details on page 107. The following figure illustrates the DETECT signal behavior for these two alternatives.



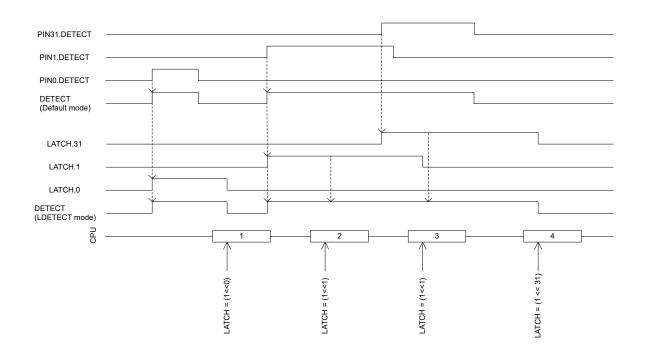


Figure 36: DETECT signal behavior

A GPIO pin input buffer can be disconnected from the pin to enable power savings when the pin is not used as an input, see GPIO port and the GPIO pin details on page 107. Input buffers must be connected to get a valid input value in the IN register, and for the sense mechanism to get access to the pin.

Other peripherals in the system can connect to GPIO pins and override their output value and configuration, or read their analog or digital input value. See GPIO port and the GPIO pin details on page 107.

Selected pins also support analog input signals, see ANAIN in GPIO port and the GPIO pin details on page 107. The assignment of the analog pins can be found in Pin assignments on page 346.

Note: When a pin is configured as digital input, increased current consumption occurs when the input voltage is between V_{IL} and V_{IH} . It is good practice to ensure that the external circuitry does not drive that pin to levels between V_{IL} and V_{IH} for a long period of time.

6.7.2 Registers

Base address	Peripheral	Instance	Description	Configuration
0x50000000	GPIO	P0	General purpose input and output	

Table 38: Instances

Register	Offset	Description
OUT	0x504	Write GPIO port
OUTSET	0x508	Set individual bits in GPIO port
OUTCLR	0x50C	Clear individual bits in GPIO port
IN	0x510	Read GPIO port
DIR	0x514	Direction of GPIO pins
DIRSET	0x518	DIR set register



Register	Offset	Description
DIRCLR	0x51C	DIR clear register
LATCH	0x520	Latch register indicating what GPIO pins that have met the criteria set in the PIN_CNF[n].SENSE registers
DETECTMODE	0x524	Select between default DETECT signal behavior and LDETECT mode
PIN_CNF[0]	0x700	Configuration of GPIO pins
PIN_CNF[1]	0x704	Configuration of GPIO pins
PIN_CNF[2]	0x708	Configuration of GPIO pins
PIN_CNF[3]	0x70C	Configuration of GPIO pins
PIN_CNF[4]	0x710	Configuration of GPIO pins
PIN_CNF[5]	0x714	Configuration of GPIO pins
PIN_CNF[6]	0x718	Configuration of GPIO pins
PIN_CNF[7]	0x71C	Configuration of GPIO pins
PIN_CNF[8]	0x720	Configuration of GPIO pins
PIN_CNF[9]	0x724	Configuration of GPIO pins
PIN_CNF[10]	0x728	Configuration of GPIO pins
PIN_CNF[11]	0x72C	Configuration of GPIO pins
PIN_CNF[12]	0x730	Configuration of GPIO pins
PIN_CNF[13]	0x734	Configuration of GPIO pins
PIN_CNF[14]	0x738	Configuration of GPIO pins
PIN_CNF[15]	0x73C	Configuration of GPIO pins
PIN_CNF[16]	0x740	Configuration of GPIO pins
PIN_CNF[17]	0x744	Configuration of GPIO pins
PIN_CNF[18]	0x748	Configuration of GPIO pins
PIN_CNF[19]	0x74C	Configuration of GPIO pins
PIN_CNF[20]	0x750	Configuration of GPIO pins
PIN_CNF[21]	0x754	Configuration of GPIO pins
PIN_CNF[22]	0x758	Configuration of GPIO pins
PIN_CNF[23]	0x75C	Configuration of GPIO pins
PIN_CNF[24]	0x760	Configuration of GPIO pins
PIN_CNF[25]	0x764	Configuration of GPIO pins
PIN_CNF[26]	0x768	Configuration of GPIO pins
PIN_CNF[27]	0x76C	Configuration of GPIO pins
PIN_CNF[28]	0x770	Configuration of GPIO pins
PIN_CNF[29]	0x774	Configuration of GPIO pins
PIN_CNF[30]	0x778	Configuration of GPIO pins
PIN_CNF[31]	0x77C	Configuration of GPIO pins

Table 39: Register overview

6.7.2.1 OUT

Address offset: 0x504 Write GPIO port

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A-f RW PIN[i] (i=031)		Pin i
	Low	0 Pin driver is low
	High	1 Pin driver is high



6.7.2.2 OUTSET

Address offset: 0x508

Set individual bits in GPIO port

Read: reads value of OUT register.

t number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
	fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
eset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
f RW PIN[i] (i=031)	Pin i
Low	0 Read: pin driver is low
High	1 Read: pin driver is high
Set	1 Write: a '1' sets the pin high; a '0' has no effect

6.7.2.3 OUTCLR

Address offset: 0x50C

Clear individual bits in GPIO port

Read: reads value of OUT register.

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcbaZY	X W V U T S R Q P O N M L K J I H G F E D C B A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-f RW PIN[i] (i=031)			Pin i
	Low	0	Read: pin driver is low
	High	1	Read: pin driver is high

6.7.2.4 IN

Address offset: 0x510

Read GPIO port

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A-f R PIN[i] (i=031)		Pin i
	Low	0 Pin input is low
	High	1 Pin input is high

6.7.2.5 DIR

Address offset: 0x514

Direction of GPIO pins



Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x00000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A-f RW PIN[i] (i=031)		Pin i
	Input	0 Pin set as input

6.7.2.6 DIRSET

Address offset: 0x518

DIR set register

Read: reads value of DIR register.

Bit number	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	fedcb	aZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x0000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A-f RW PIN[i] (i=031)		Set as output pin i
Input	0	Read: pin set as input
Output	1	Read: pin set as output
Set	1	Write: a '1' sets pin to output; a '0' has no effect

6.7.2.7 DIRCLR

Address offset: 0x51C

DIR clear register

Read: reads value of DIR register.

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15	14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
D	fedcbaZYXWVUTSRQP	O N M L K J I H G F E D C B A
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
D Acce Field Value ID		
A-f RW PIN[i] (i=031)	Set as input pin i	
Input	0 Read: pin set as input	
Output	1 Read: pin set as output	
Clear	1 Write: a '1' sets pin to inpu	tua '0' has no offect

6.7.2.8 LATCH

Address offset: 0x520

Latch register indicating what GPIO pins that have met the criteria set in the PIN_CNF[n].SENSE registers

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	fedcbaZYXWVUTSRQPONMLKJIHGFEDCBA
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value Description
A-f RW PIN[i] (i=031)	Status on whether PINi has met criteria set in
	PIN_CNFi.SENSE register. Write '1' to clear.
NotLatched	0 Criteria has not been met
Latched	1 Criteria has been met



6.7.2.9 DETECTMODE

Address offset: 0x524

Select between default DETECT signal behavior and LDETECT mode

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW DETECTMODE		Select between default DETECT signal behavior and
		LDETECT mode
Default	0	DETECT directly connected to PIN DETECT signals
LDETECT	1	Use the latched LDETECT behavior

6.7.2.10 PIN_CNF[n] (n=0..31)

Address offset: 0x700 + (n × 0x4)

Configuration of GPIO pins

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				EE DDD CCBA
Rese	et 0x00000002		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
А	RW DIR			Pin direction. Same physical register as DIR register
		Input	0	Configure pin as an input pin
		Output	1	Configure pin as an output pin
В	RW INPUT			Connect or disconnect input buffer
		Connect	0	Connect input buffer
		Disconnect	1	Disconnect input buffer
С	RW PULL			Pull configuration
		Disabled	0	No pull
		Pulldown	1	Pull down on pin
		Pullup	3	Pull up on pin
D	RW DRIVE			Drive configuration
		SOS1	0	Standard '0', standard '1'
		HOS1	1	High drive '0', standard '1'
		SOH1	2	Standard '0', high drive '1'
		H0H1	3	High drive '0', high 'drive '1"
		D0S1	4	Disconnect '0' standard '1' (normally used for wired-or
				connections)
		D0H1	5	Disconnect '0', high drive '1' (normally used for wired-or
				connections)
		SOD1	6	Standard '0'. disconnect '1' (normally used for wired-and
				connections)
		H0D1	7	High drive '0', disconnect '1' (normally used for wired-and
				connections)
E	RW SENSE			Pin sensing mechanism
		Disabled	0	Disabled
		High	2	Sense for high level
		Low	3	Sense for low level



6.7.3 Electrical specification

6.7.3.1 GPIO Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
V _{IH}	Input high voltage	0.7 x		VDD	V
		VDD			
VIL	Input low voltage	VSS		0.3 x	V
				VDD	
V _{OH,SD}	Output high voltage, standard drive, 0.5 mA, VDD \ge 1.7	VDD-0.4	ļ	VDD	V
V _{OH,HDH}	Output high voltage, high drive, 5 mA, VDD \ge 2.7 V	VDD-0.4	Ļ	VDD	V
V _{OH,HDL}	Output high voltage, high drive, 3 mA, VDD \ge 1.7 V	VDD-0.4	ļ	VDD	V
V _{OL,SD}	Output low voltage, standard drive, 0.5 mA, VDD \ge 1.7	VSS		VSS+0.4	V
V _{OL,HDH}	Output low voltage, high drive, 5 mA, VDD \ge 2.7 V	VSS		VSS+0.4	V
V _{OL,HDL}	Output low voltage, high drive, 3 mA, VDD \geq 1.7 V	VSS		VSS+0.4	V
I _{OL,SD}	Current at VSS+0.4 V, output set low, standard drive, VDD \geq	1	2	4	mA
	1.7				
I _{OL,HDH}	Current at VSS+0.4 V, output set low, high drive, VDD \geq 2.7 V	6	10	15	mA
I _{OL,HDL}	Current at VSS+0.4 V, output set low, high drive, VDD \geq 1.7 V	3			mA
I _{OH,SD}	Current at VDD-0.4 V, output set high, standard drive, VDD	1	2	4	mA
	≥ 1.7				
I _{OH,HDH}	Current at VDD-0.4 V, output set high, high drive, VDD \ge 2.7	6	9	14	mA
	V				
I _{OH,HDL}	Current at VDD-0.4 V, output set high, high drive, VDD \ge 1.7	3			mA
	V				
t _{RF,15pF}	Rise/fall time, standard drive mode, 10-90%, 15 pF load ¹³		9		ns
t _{RF,25pF}	Rise/fall time, standard drive mode, 10-90%, 25 pF load ¹³		13		ns
t _{RF,50pF}	Rise/fall time, standard drive mode, 10-90%, 50 pF load ¹³		25		ns
t _{HRF,15pF}	Rise/Fall time, high drive mode, 10-90%, 15 pF load ¹³		4		ns
t _{HRF,25pF}	Rise/Fall time, high drive mode, 10-90%, 25 pF load ¹³		5		ns
t _{HRF,50pF}	Rise/Fall time, high drive mode, 10-90%, 50 pF load ¹³		8		ns
R _{PU}	Pull-up resistance	11	13	16	kΩ
R _{PD}	Pull-down resistance	11	13	16	kΩ
C _{PAD}	Pad capacitance		3		pF

6.8 GPIOTE — GPIO tasks and events

The GPIO tasks and events (GPIOTE) module provides functionality for accessing GPIO pins using tasks and events. Each GPIOTE channel can be assigned to one pin.

A GPIOTE block enables GPIOs to generate events on pin state change which can be used to carry out tasks through the PPI system. A GPIO can also be driven to change state on system events using the PPI system. Tasks and events are briefly introduced in Peripheral interface on page 76, and GPIO is described in more detail in GPIO — General purpose input/output on page 105.

Low power detection of pin state changes is possible when in System ON or System OFF.

¹³ Rise and fall times based on simulations

Instance	Number of GPIOTE channels
GPIOTE	8

Table 40: GPIOTE properties

Up to three tasks can be used in each GPIOTE channel for performing write operations to a pin. Two tasks are fixed (SET and CLR), and one (OUT) is configurable to perform following operations:

- Set
- Clear
- Toggle

An event can be generated in each GPIOTE channel from one of the following input conditions:

- Rising edge
- Falling edge
- Any change

6.8.1 Pin events and tasks

The GPIOTE module has a number of tasks and events that can be configured to operate on individual GPIO pins.

The tasks SET[n], CLR[n], and OUT[n] can write to individual pins, and events IN[n] can be generated from input changes of individual pins.

The SET task will set the pin selected in GPIOTE.CONFIG[n].PSEL to high. The CLR task will set the pin low.

The effect of the OUT task on the pin is configurable in CONFIG[n].POLARITY. It can set the pin high, set it low, or toggle it.

Tasks and events are configured using the CONFIG[n] registers. One CONFIG[n] register is associated with a set of SET[n], CLR[n], and OUT[n] tasks and IN[n] events.

As long as a SET[n], CLR[n], and OUT[n] task or an IN[n] event is configured to control pin **n**, the pin's output value will only be updated by the GPIOTE module. The pin's output value, as specified in the GPIO, will be ignored as long as the pin is controlled by GPIOTE. Attempting to write to the pin as a normal GPIO pin will have no effect. When the GPIOTE is disconnected from a pin, the associated pin gets the output and configuration values specified in the GPIO module, see MODE field in CONFIG[n] register.

When conflicting tasks are triggered simultaneously (i.e. during the same clock cycle) in one channel, the priority of the tasks is as described in the following table.

Priority	Task
1	оит
2	CLR
3	SET

Table 41: Task priorities

When setting the CONFIG[n] registers, MODE=Disabled does not have the same effect as MODE=Task and POLARITY=None. In the latter case, a CLR or SET task occurring at the exact same time as OUT will end up with no change on the pin, based on the priorities described in the table above.

When a GPIOTE channel is configured to operate on a pin as a task, the initial value of that pin is configured in the OUTINIT field of CONFIG[n].

6.8.2 Port event

PORT is an event that can be generated from multiple input pins using the GPIO DETECT signal.



The event will be generated on the rising edge of the DETECT signal. See GPIO — General purpose input/ output on page 105 for more information about the DETECT signal.

The GPIO DETECT signal will not wake the system up again if the system is put into System ON IDLE while the DETECT signal is high. Clear all DETECT sources before entering sleep. If the LATCH register is used as a source, a new rising edge will be generated on DETECT if any bit in LATCH is still high after clearing all or part of the register. This could occur if one of the PINx.DETECT signals is still high, for example. See Pin configuration on page 106 for more information.

Setting the system to System OFF while DETECT is high will cause a wakeup from System OFF reset.

This feature is always enabled even if the peripheral itself appears to be IDLE, meaning no clocks or other power intensive infrastructure have to be requested to keep this feature enabled. This feature can therefore be used to wake up the CPU from a WFI or WFE type sleep in System ON when all peripherals and the CPU are idle, meaning the lowest power consumption in System ON mode.

In order to prevent spurious interrupts from the PORT event while configuring the sources, the following must be performed:

- 1. Disable interrupts on the PORT event (through INTENCLR.PORT).
- 2. Configure the sources (PIN_CNF[n].SENSE).
- 3. Clear any potential event that could have occurred during configuration (write '0' to EVENTS_PORT).
- **4.** Enable interrupts (through INTENSET.PORT).

6.8.3 Tasks and events pin configuration

Each GPIOTE channel is associated with one physical GPIO pin through the CONFIG.PSEL field.

When Event mode is selected in CONFIG.MODE, the pin specified by CONFIG.PSEL will be configured as an input, overriding the DIR setting in GPIO. Similarly, when Task mode is selected in CONFIG.MODE, the pin specified by CONFIG.PSEL will be configured as an output overriding the DIR setting and OUT value in GPIO. When Disabled is selected in CONFIG.MODE, the pin specified by CONFIG.PSEL will use its configuration from the PIN[n].CNF registers in GPIO.

Note: A pin can only be assigned to one GPIOTE channel at a time. Failing to do so may result in unpredictable behavior.

6.8.4 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40006000	GPIOTE	GPIOTE	GPIO tasks and events	
			Table 42: Insta	nces
Register	Offset	Descrip	tion	
TASKS_OUT[0]	0x000	Task for	writing to pin specified in CON	FIG[0].PSEL. Action on pin is configured in
		CONFIG	[0].POLARITY.	
TASKS_OUT[1]	0x004	Task for	writing to pin specified in CON	FIG[1].PSEL. Action on pin is configured in
		CONFIG	[1].POLARITY.	
TASKS_OUT[2]	0x008	Task for	writing to pin specified in CON	FIG[2].PSEL. Action on pin is configured in
		CONFIG	[2].POLARITY.	
TASKS_OUT[3]	0x00C	Task for	writing to pin specified in CON	FIG[3].PSEL. Action on pin is configured in
		CONFIG	[3].POLARITY.	
TASKS_OUT[4]	0x010	Task for	writing to pin specified in CON	FIG[4].PSEL. Action on pin is configured in
		CONFIG	[4].POLARITY.	



Register	Offset	Description
TASKS_OUT[5]	0x014	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is configured in
		CONFIG[5].POLARITY.
TASKS_OUT[6]	0x018	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is configured in
		CONFIG[6].POLARITY.
TASKS_OUT[7]	0x01C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is configured in
		CONFIG[7].POLARITY.
TASKS_SET[0]	0x030	Task for writing to pin specified in CONFIG[0].PSEL. Action on pin is to set it high.
TASKS_SET[1]	0x034	Task for writing to pin specified in CONFIG[1].PSEL. Action on pin is to set it high.
TASKS_SET[2]	0x038	Task for writing to pin specified in CONFIG[2].PSEL. Action on pin is to set it high.
TASKS_SET[3]	0x03C	Task for writing to pin specified in CONFIG[3].PSEL. Action on pin is to set it high.
TASKS_SET[4]	0x040	Task for writing to pin specified in CONFIG[4].PSEL. Action on pin is to set it high.
TASKS_SET[5]	0x044	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is to set it high.
TASKS_SET[6]	0x048	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is to set it high.
TASKS_SET[7]	0x04C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is to set it high.
TASKS_CLR[0]	0x060	Task for writing to pin specified in CONFIG[0].PSEL. Action on pin is to set it low.
TASKS_CLR[1]	0x064	Task for writing to pin specified in CONFIG[1].PSEL. Action on pin is to set it low.
TASKS_CLR[2]	0x068	Task for writing to pin specified in CONFIG[2].PSEL. Action on pin is to set it low.
TASKS_CLR[3]	0x06C	Task for writing to pin specified in CONFIG[3].PSEL. Action on pin is to set it low.
TASKS_CLR[4]	0x070	Task for writing to pin specified in CONFIG[4].PSEL. Action on pin is to set it low.
TASKS_CLR[5]	0x074	Task for writing to pin specified in CONFIG[5].PSEL. Action on pin is to set it low.
TASKS_CLR[6]	0x078	Task for writing to pin specified in CONFIG[6].PSEL. Action on pin is to set it low.
TASKS_CLR[7]	0x07C	Task for writing to pin specified in CONFIG[7].PSEL. Action on pin is to set it low.
EVENTS_IN[0]	0x100	Event generated from pin specified in CONFIG[0].PSEL
EVENTS_IN[1]	0x104	Event generated from pin specified in CONFIG[1].PSEL
EVENTS_IN[2]	0x108	Event generated from pin specified in CONFIG[2].PSEL
EVENTS_IN[3]	0x10C	Event generated from pin specified in CONFIG[3].PSEL
EVENTS_IN[4]	0x110	Event generated from pin specified in CONFIG[4].PSEL
EVENTS_IN[5]	0x114	Event generated from pin specified in CONFIG[5].PSEL
EVENTS_IN[6]	0x118	Event generated from pin specified in CONFIG[6].PSEL
EVENTS_IN[7]	0x11C	Event generated from pin specified in CONFIG[7].PSEL
EVENTS_PORT	0x17C	Event generated from multiple input GPIO pins with SENSE mechanism enabled
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
CONFIG[0]	0x510	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[1]	0x514	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[2]	0x518	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[3]	0x51C	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[4]	0x520	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[5]	0x524	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[6]	0x528	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event
CONFIG[7]	0x52C	Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event

Table 43: Register overview

6.8.4.1 TASKS_OUT[n] (n=0..7)

Address offset: 0x000 + (n × 0x4)

Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is configured in CONFIG[n].POLARITY.



Bit number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A W TASKS_OUT			Task for writing to pin specified in CONFIG[n].PSEL. Action
			on pin is configured in CONFIG[n].POLARITY.
	Trigger	1	Trigger task

6.8.4.2 TASKS_SET[n] (n=0..7)

Address offset: $0x030 + (n \times 0x4)$

Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is to set it high.

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_SET			Task for writing to pin specified in CONFIG[n].PSEL. Action
			on pin is to set it high.
	Trigger	1	Trigger task

6.8.4.3 TASKS_CLR[n] (n=0..7)

Address offset: 0x060 + (n × 0x4)

Task for writing to pin specified in CONFIG[n].PSEL. Action on pin is to set it low.

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_CLR			Task for writing to pin specified in CONFIG[n].PSEL. Action
			on pin is to set it low.
	Trigger	1	Trigger task

6.8.4.4 EVENTS_IN[n] (n=0..7)

Address offset: 0x100 + (n × 0x4)

Event generated from pin specified in CONFIG[n].PSEL

Bit n	umber		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_IN			Event generated from pin specified in CONFIG[n].PSEL
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.8.4.5 EVENTS_PORT

Address offset: 0x17C

Event generated from multiple input GPIO pins with SENSE mechanism enabled



Bit n	umber		31 30	29	28	27	26	25	24	23 2	22	21	20	19 :	18	17	16	15	14	13	12	11	. 10	9	8	7	6	5	4	3	2	1 (
ID																																A
Rese	t 0x0000000		0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID										Des																						
А	RW EVENTS_PORT									Evei	nt	gen	era	teo	l fr	om	m	ult	ipl	e ir	npu	t G	PIC	pir	ns v	vith	SE	NSI	E			
										med	cha	anis	m	ena	ble	d																
		N 10	•							Evei	nt i	not	~~		-+-																	
		NotGenerated	0							Evei	iit	ποι	ge	nei	alt	a																

6.8.4.6 INTENSET

Address offset: 0x304

Enable interrupt

Bit number			31 30 2	9 28	27 2	6 25	24	23 22	2 2 1	20	19 1	18 17	7 16	15 1	.4 13	3 12	11 1	10 9	8	7	6	5 4	13	2	1	0
ID			I.																	Н	G	FE	E D	С	В	A
Reset 0x000	00000		000	0	0	0 0	0	0 0	0	0	0	0 0	0	0	0 0	0	0	0 0	0 0	0	0	0 0	0 0	0	0	0
ID Acce																										
A-H RW	IN[i] (i=07)							Write	e '1'	to e	enat	ole ir	nter	rupt	for	ever	nt IN	[i]								
		Set	1					Enab	le																	
		Disabled	0					Read	l: Dis	sabl	ed															
		Enabled	1					Read	l: En	able	ed															
I RW	PORT							Write	e '1'	to e	enak	ole ir	nter	rupt	for	ever	nt PC	ORT								
		Set	1					Enab	le																	
		Disabled	0					Read	l: Dis	sabl	ed															
		Enabled	1					Read	l: En	able	ed															
		Disabled	0					Read	l: Dis																	

6.8.4.7 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number	31	. 30 29 28 27 26 25 24 :	2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID	1		H G F E D C B A
Reset 0x0000000	0	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Val			Description
A-H RW IN[i] (i=07)		,	Write '1' to disable interrupt for event IN[i]
Cle	ear 1	l	Disable
Dis	abled 0	l	Read: Disabled
Ena	abled 1	I	Read: Enabled
I RW PORT		,	Write '1' to disable interrupt for event PORT
Cle	ear 1	I	Disable
Dis	abled 0	I	Read: Disabled
En	abled 1	I	Read: Enabled

6.8.4.8 CONFIG[n] (n=0..7)

Address offset: 0x510 + (n × 0x4)

Configuration for OUT[n], SET[n], and CLR[n] tasks and IN[n] event



Bit ı	number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				E D D B B B B B A
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW MODE			Mode
		Disabled	0	Disabled. Pin specified by PSEL will not be acquired by the
				GPIOTE module.
		Event	1	Event mode
				The pin specified by PSEL will be configured as an input and
				the IN[n] event will be generated if operation specified in
				POLARITY occurs on the pin.
		Task	3	Task mode
				The GPIO specified by PSEL will be configured as an output
				and triggering the SET[n], CLR[n] or OUT[n] task will perform the operation specified by POLARITY on the pin.
				When enabled as a task the GPIOTE module will acquire the
				pin and the pin can no longer be written as a regular output
				pin from the GPIO module.
в	RW PSEL		[031]	GPIO number associated with SET[n], CLR[n], and OUT[n]
			[0]	tasks and IN[n] event
D	RW POLARITY			When In task mode: Operation to be performed on output
				when OUT[n] task is triggered. When In event mode:
				Operation on input that shall trigger IN[n] event.
		None	0	Task mode: No effect on pin from OUT[n] task. Event mode:
				no IN[n] event generated on pin activity.
		LoToHi	1	Task mode: Set pin from OUT[n] task. Event mode: Generate
				IN[n] event when rising edge on pin.
		HiToLo	2	Task mode: Clear pin from OUT[n] task. Event mode:
				Generate IN[n] event when falling edge on pin.
		Toggle	3	Task mode: Toggle pin from OUT[n]. Event mode: Generate
				IN[n] when any change on pin.
E	RW OUTINIT			When in task mode: Initial value of the output when the
				GPIOTE channel is configured. When in event mode: No
				effect.
		Low	0	Task mode: Initial value of pin before task triggering is low
		High	1	Task mode: Initial value of pin before task triggering is high

6.8.5 Electrical specification

6.9 PPI — Programmable peripheral interconnect

The programmable peripheral interconnect (PPI) enables peripherals to interact autonomously with each other using tasks and events independent of the CPU. The PPI allows precise synchronization between peripherals when real-time application constraints exist and eliminates the need for CPU activity to implement behavior which can be predefined using PPI.



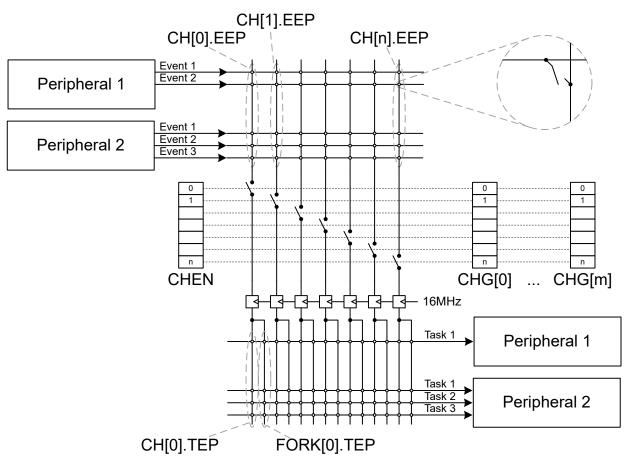


Figure 37: PPI block diagram

The PPI system has, in addition to the fully programmable peripheral interconnections, a set of channels where the event end point (EEP) and task end points (TEP) are fixed in hardware. These fixed channels can be individually enabled, disabled, or added to PPI channel groups (see CHG[n] registers), in the same way as ordinary PPI channels.

Instance	Channel	Number of channels
PPI	0-9	10
PPI (fixed)	20-31	12

Table 44: Configurable and fixed PPI channels

The PPI provides a mechanism to automatically trigger a task in one peripheral as a result of an event occurring in another peripheral. A task is connected to an event through a PPI channel. The PPI channel is composed of three end point registers, one EEP, and two TEPs. A peripheral task is connected to a TEP using the address of the task register associated with the task. Similarly, a peripheral event is connected to an EEP using the address of the event register associated with the event.

On each PPI channel, the signals are synchronized to the 16 MHz clock to avoid any internal violation of setup and hold timings. As a consequence, events that are synchronous to the 16 MHz clock will be delayed by one clock period, while other asynchronous events will be delayed by up to one 16 MHz clock period.

Note: Shortcuts (as defined in the SHORTS register in each peripheral) are not affected by this 16 MHz synchronization, and are therefore not delayed.



Each TEP implements a fork mechanism that enables a second task to be triggered at the same time as the task specified in the TEP is triggered. This second task is configured in the task end point register in the FORK registers groups, e.g. FORK.TEP[0] is associated with PPI channel CH[0].

There are two ways of enabling and disabling PPI channels:

- Enable or disable PPI channels individually using the CHEN, CHENSET, and CHENCLR registers.
- Enable or disable PPI channels in PPI channel groups through the groups' ENABLE and DISABLE tasks. Prior to these tasks being triggered, the PPI channel group must be configured to define which PPI channels belong to which groups.

Note: When a channel belongs to two groups m and n, and the tasks CHG[m].EN and CHG[n].DIS occur simultaneously (m and n can be equal or different), the CHG[m].EN on that channel has priority.

PPI tasks (for example, CHG[0].EN) can be triggered through the PPI like any other task, which means they can be hooked to a PPI channel as a TEP. One event can trigger multiple tasks by using multiple channels and one task can be triggered by multiple events in the same way.

6.9.1 Pre-programmed channels

Some of the PPI channels are pre-programmed. These channels cannot be configured by the CPU, but can be added to groups and enabled and disabled like the general purpose PPI channels. The FORK TEP for these channels are still programmable and can be used by the application.

Channel	EEP	ТЕР
20	TIMER0->EVENTS_COMPARE[0]	RADIO->TASKS_TXEN
21	TIMER0->EVENTS_COMPARE[0]	RADIO->TASKS_RXEN
22	TIMER0->EVENTS_COMPARE[1]	RADIO->TASKS_DISABLE
23	RADIO->EVENTS_BCMATCH	AAR->TASKS_START
24	RADIO->EVENTS_READY	CCM->TASKS_KSGEN
25	RADIO->EVENTS_ADDRESS	CCM->TASKS_CRYPT
26	RADIO->EVENTS_ADDRESS	TIMER0->TASKS_CAPTURE[1]
27	RADIO->EVENTS_END	TIMER0->TASKS_CAPTURE[2]
28	RTC0->EVENTS_COMPARE[0]	RADIO->TASKS_TXEN
29	RTC0->EVENTS_COMPARE[0]	RADIO->TASKS_RXEN
30	RTC0->EVENTS_COMPARE[0]	TIMER0->TASKS_CLEAR
31	RTC0->EVENTS_COMPARE[0]	TIMERO->TASKS_START

For a list of pre-programmed PPI channels, see the following table.

Table 45: Pre-programmed channels

6.9.2 Registers

Base address	Peripheral	Instance	Description	Configuration			
0x4001F000	PPI	PPI	Programmable peripheral interconnect				

Table 46: Instances

Register	Offset	Description
TASKS_CHG[0].EN	0x000	Enable channel group 0
TASKS_CHG[0].DIS	0x004	Disable channel group 0
TASKS_CHG[1].EN	0x008	Enable channel group 1
TASKS_CHG[1].DIS	0x00C	Disable channel group 1



Register	Offset	Description
TASKS_CHG[2].EN	0x010	Enable channel group 2
TASKS_CHG[2].DIS	0x014	Disable channel group 2
TASKS_CHG[3].EN	0x018	Enable channel group 3
TASKS_CHG[3].DIS	0x01C	Disable channel group 3
TASKS_CHG[4].EN	0x020	Enable channel group 4
TASKS_CHG[4].DIS	0x024	Disable channel group 4
TASKS_CHG[5].EN	0x028	Enable channel group 5
TASKS_CHG[5].DIS	0x02C	Disable channel group 5
CHEN	0x500	Channel enable register
CHENSET	0x504	Channel enable set register
CHENCLR	0x508	Channel enable clear register
CH[0].EEP	0x510	Channel 0 event endpoint
CH[0].TEP	0x510	Channel 0 task endpoint
	0x514	
CH[1].EEP		Channel 1 teck and point
CH[1].TEP	0x51C	Channel 1 task endpoint
CH[2].EEP	0x520	Channel 2 event endpoint
CH[2].TEP	0x524	Channel 2 task endpoint
CH[3].EEP	0x528	Channel 3 event endpoint
CH[3].TEP	0x52C	Channel 3 task endpoint
CH[4].EEP	0x530	Channel 4 event endpoint
CH[4].TEP	0x534	Channel 4 task endpoint
CH[5].EEP	0x538	Channel 5 event endpoint
CH[5].TEP	0x53C	Channel 5 task endpoint
CH[6].EEP	0x540	Channel 6 event endpoint
CH[6].TEP	0x544	Channel 6 task endpoint
CH[7].EEP	0x548	Channel 7 event endpoint
CH[7].TEP	0x54C	Channel 7 task endpoint
CH[8].EEP	0x550	Channel 8 event endpoint
CH[8].TEP	0x554	Channel 8 task endpoint
CH[9].EEP	0x558	Channel 9 event endpoint
CH[9].TEP	0x55C	Channel 9 task endpoint
CHG[0]	0x800	Channel group 0
CHG[1]	0x804	Channel group 1
CHG[2]	0x808	Channel group 2
CHG[3]	0x80C	Channel group 3
CHG[4]	0x810	Channel group 4
CHG[5]	0x814	Channel group 5
FORK[0].TEP	0x910	Channel 0 task endpoint
FORK[1].TEP	0x914	Channel 1 task endpoint
FORK[2].TEP	0x918	Channel 2 task endpoint
FORK[3].TEP	0x91C	Channel 3 task endpoint
FORK[4].TEP	0x920	Channel 4 task endpoint
FORK[5].TEP	0x924	Channel 5 task endpoint
FORK[6].TEP	0x928	Channel 6 task endpoint
FORK[7].TEP	0x92C	Channel 7 task endpoint
FORK[8].TEP	0x930	Channel 8 task endpoint
FORK[9].TEP	0x934	Channel 9 task endpoint
FORK[20].TEP	0x960	Channel 20 task endpoint
FORK[21].TEP	0x964	Channel 21 task endpoint
FORK[22].TEP	0x968	Channel 22 task endpoint
FORK[23].TEP	0x96C	Channel 23 task endpoint
- ennieel (en	0,000	
FORK[24].TEP	0x970	Channel 24 task endpoint



Register	Offset	Description
FORK[26].TEP	0x978	Channel 26 task endpoint
FORK[27].TEP	0x97C	Channel 27 task endpoint
FORK[28].TEP	0x980	Channel 28 task endpoint
FORK[29].TEP	0x984	Channel 29 task endpoint
FORK[30].TEP	0x988	Channel 30 task endpoint
FORK[31].TEP	0x98C	Channel 31 task endpoint

Table 47: Register overview

6.9.2.1 TASKS_CHG[n].EN (n=0..5)

Address offset: 0x000 + (n × 0x8)

Enable channel group n

Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W EN			Enable channel group n
	Trigger	1	Trigger task

6.9.2.2 TASKS_CHG[n].DIS (n=0..5)

Address offset: 0x004 + (n × 0x8)

Disable channel group n

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W DIS			Disable channel group n
	Trigger	1	Trigger task

6.9.2.3 CHEN

Address offset: 0x500

Channel enable register

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	VUTSRQPO	NMLK JIHGFEDCBA
Reset 0x0000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-J RW CH[i] (i=09)		Enable or disable channel i
Disabled	0	Disable channel
Enabled	1	Enable channel
K-V RW CH[i] (i=2031)		Enable or disable channel i
Disabled	0	Disable channel
Enabled	1	Enable channel

6.9.2.4 CHENSET

Address offset: 0x504

Channel enable set register

Read: reads value of CH{i} field in CHEN register.

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	VUTSRQPC	DNMLK JIHGFEDCBA
Reset 0x00000000	0 0 0 0 0 0 0	
ID Acce Field Value ID		Description
A-J RW CH[i] (i=09)		Channel i enable set register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Set	1	Write: Enable channel
K-V RW CH[i] (i=2031)		Channel i enable set register. Writing '0' has no effect.
Disabled	0	Read: channel disabled
Enabled	1	Read: channel enabled
Set	1	Write: Enable channel

6.9.2.5 CHENCLR

Address offset: 0x508

Channel enable clear register

Read: reads value of CH{i} field in CHEN register.

Bit number	3	31 30 29	28	27 2	26 25	5 24	23 2	2 2 1	. 20	19 1	8 17	16	15 1	4 13	12 1	111	09	8	7	6	5 4	4 3	2	1	0
ID	N	νυт	S	R	Q P	0	NN	ЛL	К								J	Т	Н	G	FE	D	С	В	A
Reset 0x0000000	(000	0	0	0 0	0	0 0	0 0	0	0 0	0 0	0	0 0	0 0	0	0 0	0	0	0	0	0 0	0	0	0	0
ID Acce Field Val																									
A-J RW CH[i] (i=09)							Chai	nnel	i en	nable	clea	ar re	giste	er. W	ritin	g '0	' has	s no	eff	ect.					
Dis	abled (0					Read	d: ch	ann	nel di	sabl	ed													
Ena	abled 1	1					Read	d: ch	ann	nel er	nabl	ed													
Cle	ar 1	1					Writ	e: di	isab	le ch	ann	el													
K-V RW CH[i] (i=2031)							Chai	nnel	i en	nable	clea	ar re	giste	er. W	ritin	g '0	' has	s no	eff	ect.					
Dis	abled (0					Read	d: ch	ann	nel di	sabl	ed													
Ena	abled 1	1					Read	d: ch	ann	nel er	nabl	ed													
Cle	ar 1	1					Writ	e: di	isab	le ch	ann	el													

6.9.2.6 CH[n].EEP (n=0..9)

Address offset: 0x510 + (n × 0x8)

Channel n event endpoint

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A	
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value	Description

A RW EEP

Pointer to event register. Accepts only addresses to registers from the Event group.

6.9.2.7 CH[n].TEP (n=0..9)

Address offset: 0x514 + (n × 0x8) Channel n task endpoint



Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW TEP	Pointer to task register. Accepts only addresses to registers

from the Task group.

6.9.2.8 CHG[n] (n=0..5)

Address offset: 0x800 + (n × 0x4)

Channel group n

Bit number			31	30 2	9 28	27	26 2	5 24	123	22	21 2	0 19	9 18	17 1	6 15	14	13 12	2 11	10 9	8	7	6	5 4	‡3	2	1 0
ID			V	υT	S	R	QP	, o	Ν	М	Lŀ	<							J	T	Н	G	FE	D	С	ΒA
Reset 0x0000	0000		0	0 0	0	0	0 0	0 (0	0	0 0) (0	0 (0 0	0	0 0	0	0 0	0	0	0	0 0	0 0	0	0 0
ID Acce Fie																										
A-J RW CH	[i] (i=09)								Inc	clud	e or	exc	lude	cha	nnel	i										
		Excluded	0						Ex	clud	le															
		Included	1						Inc	clud	e															
K-V RW CH	[i] (i=2031)								Inc	clud	e or	exc	lude	cha	nnel	i										
		Excluded	0						Ex	clud	le															
		Included	1						Inc	clud	e															

6.9.2.9 FORK[n].TEP (n=0..9, 20..31)

Address offset: 0x910 + (n × 0x4)

Channel n task endpoint

ID A	
ID A A A A A A A A A A A A A A A A A A A	0 0
	АА
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3	1 0

A RW TEP

Pointer to task register

6.10 QDEC — Quadrature decoder

The Quadrature decoder (QDEC) provides buffered decoding of quadrature-encoded sensor signals. It is suitable for mechanical and optical sensors.

The sample period and accumulation are configurable to match application requirements. The QDEC provides the following:

- Digital waveform decoding from off-chip quadrature encoder
- Sample accumulation eliminating hard real-time requirements to be enforced on application
- Optional input de-bounce filters.
- Optional LED output signal for optical encoders



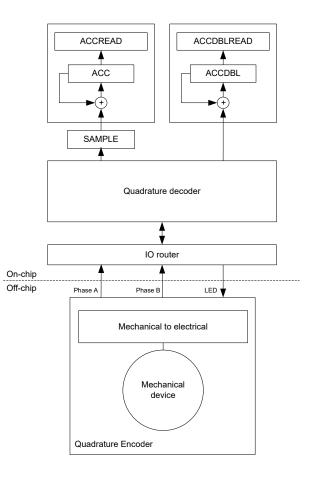


Figure 38: Quadrature decoder configuration

6.10.1 Sampling and decoding

The QDEC decodes the output from an incremental motion encoder by sampling the QDEC phase input pins (A and B).

The off-chip quadrature encoder is an incremental motion encoder outputting two waveforms, phase A and phase B. The two output waveforms are always 90 degrees out of phase, meaning that one always changes level before the other. The direction of movement is indicated by the waveform that changes level first. Invalid transitions may occur, meaning the two waveforms simultaneously switch. This may occur if the wheel rotates too fast relative to the sample rate set for the decoder.

The QDEC decodes the output from the off-chip encoder by sampling the QDEC phase input pins (A and B) at a fixed rate as specified in the SAMPLEPER register.

If the SAMPLEPER value needs to be changed, the QDEC shall be stopped using the STOP task. SAMPLEPER can be then changed upon receiving the STOPPED event, and QDEC can be restarted using the START task. Failing to do so may result in unpredictable behavior.

It is good practice to only change registers LEDPOL, REPORTPER, DBFEN, and LEDPRE when the QDEC is stopped.

When started, the decoder continuously samples the two input waveforms and decodes these by comparing the current sample pair (n) with the previous sample pair (n-1).

The decoding of the sample pairs is described in the table below.



Previ	ous	Curre	nt	SAMPLE	ACC operation	ACCDBL	Description
samp	le pair(n	samp	les	register		operation	
- 1)		pair(n)				
A	В	Α	В				
0	0	0	0	0	No change	No change	No movement
0	0	0	1	1	Increment	No change	Movement in positive direction
0	0	1	0	-1	Decrement	No change	Movement in negative direction
0	0	1	1	2	No change	Increment	Error: Double transition
0	1	0	0	-1	Decrement	No change	Movement in negative direction
0	1	0	1	0	No change	No change	No movement
0	1	1	0	2	No change	Increment	Error: Double transition
0	1	1	1	1	Increment	No change	Movement in positive direction
1	0	0	0	1	Increment	No change	Movement in positive direction
1	0	0	1	2	No change	Increment	Error: Double transition
1	0	1	0	0	No change	No change	No movement
1	0	1	1	-1	Decrement	No change	Movement in negative direction
1	1	0	0	2	No change	Increment	Error: Double transition
1	1	0	1	-1	Decrement	No change	Movement in negative direction
1	1	1	0	1	Increment	No change	Movement in positive direction
1	1	1	1	0	No change	No change	No movement

Table 48: Sampled value encoding

6.10.2 LED output

The LED output follows the sample period. The LED is switched on for a set period before sampling and then switched off immediately after. The period the LED is switched on before sampling is given in the LEDPRE register.

The LED output pin polarity is specified in the LEDPOL register.

When using off-chip mechanical encoders not requiring an LED, the LED output can be disabled by writing value 'Disconnected' to the CONNECT field of the PSEL.LED register. In this case, the QDEC will not acquire access to a pin for the LED output.

6.10.3 Debounce filters

Each of the two-phase inputs have digital debounce filters.

When enabled through the DBFEN register, the filter inputs are sampled at a fixed 1 MHz frequency during the entire sample period (which is specified in the SAMPLEPER register). The filters require all of the samples within this sample period to equal before the input signal is accepted and transferred to the output of the filter.

As a result, only input signal with a steady state longer than twice the period specified in SAMPLEPER are guaranteed to pass through the filter. Any signal with a steady state shorter than SAMPLEPER will always be suppressed by the filter. It is assumed that the frequency during the debounce period never exceeds 500 kHz (as required by the Nyquist theorem when using a 1 MHz sample frequency).

The LED will always be ON when the debounce filters are enabled, as the inputs in this case will be sampled continuously.

When the debounce filters are enabled, displacements reported by the QDEC peripheral are delayed by one SAMPLEPER period.

6.10.4 Accumulators

The quadrature decoder contains two accumulator registers, ACC and ACCDBL. These registers accumulate valid motion sample values and the number of detected invalid samples (double transitions), respectively.



The ACC register accumulates all valid values (1/-1) written to the SAMPLE register. This can be useful for preventing hard real-time requirements from being enforced on the application. When using the ACC register, the application can fetch data when necessary instead of reading all SAMPLE register output. The ACC register holds the relative movement of the external mechanical device from the previous clearing of the ACC register. Sample values indicating a double transition (2) will not be accumulated in the ACC register.

An ACCOF event is generated if the ACC receives a SAMPLE value that would cause the register to overflow or underflow. Any SAMPLE value that would cause an ACC overflow or underflow will be discarded, but any samples that do not cause the ACC to overflow or underflow will still be accepted.

The accumulator ACCDBL accumulates the number of detected double transitions since the previous clearing of the ACCDBL register.

The ACC and ACCDBL registers can be cleared by the READCLRACC and subsequently read using the ACCREAD and ACCDBLREAD registers.

The ACC register can be separately cleared by the RDCLRACC and subsequently read using the ACCREAD registers.

The ACCDBL register can be separately cleared by the RDCLRDBL and subsequently read using the ACCDBLREAD registers.

The REPORTPER register allows automated capture of multiple samples before sending an event. When a non-null displacement is captured and accumulated, a REPORTRDY event is sent. When one or more double-displacements are captured and accumulated, a DBLRDY event is sent. The REPORTPER field in this register determines how many samples must be accumulated before the contents are evaluated and a REPORTRDY or DBLRDY event is sent.

Using the RDCLRACC task (manually sent upon receiving the event, or using the DBLRDY_RDCLRACC shortcut), ACCREAD can then be read.

When a double transition has been captured and accumulated, a DBLRDY event is sent. Using the RDCLRDBL task (manually sent upon receiving the event, or using the DBLRDY_RDCLRDBL shortcut), ACCDBLREAD can then be read.

6.10.5 Output/input pins

The QDEC uses a three-pin interface to the off-chip quadrature encoder.

These pins are acquired when the QDEC is enabled in the ENABLE register. The pins acquired by the QDEC cannot be written by the CPU, but they can still be read by the CPU.

The pin numbers used for the QDEC are selected using the PSEL.n registers.

6.10.6 Pin configuration

The Phase A, Phase B, and LED signals are mapped to physical pins according to the configuration specified in the PSEL.A, PSEL.B, and PSEL.LED registers respectively.

If the CONNECT field value 'Disconnected' is specified in any of these registers, the associated signal will not be connected to any physical pin. The PSEL.A, PSEL.B, and PSEL.LED registers and their configurations are only used as long as the QDEC is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN_CNF[n] register.

To secure correct behavior in the QDEC, the pins used by the QDEC must be configured in the GPIO peripheral as described in GPIO configuration before enabling peripheral on page 129 before enabling the QDEC. This configuration must be retained in the GPIO for the selected I/Os as long as the QDEC is enabled.



Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

QDEC signal	QDEC pin	Direction	Output value	Comment
Phase A	As specified in PSEL.A	Input	Not applicable	
Phase B	As specified in PSEL.B	Input	Not applicable	
LED	As specified in PSEL.LED	Input	Not applicable	

Table 49: GPIO configuration before enabling peripheral

6.10.7 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40012000	QDEC	QDEC	Quadrature decoder		

Table 50: Instances

Register	Offset	Description
TASKS_START	0x000	Task starting the quadrature decoder
TASKS_STOP	0x004	Task stopping the quadrature decoder
TASKS_READCLRACC	0x008	Read and clear ACC and ACCDBL
TASKS_RDCLRACC	0x00C	Read and clear ACC
TASKS_RDCLRDBL	0x010	Read and clear ACCDBL
EVENTS_SAMPLERDY	0x100	Event being generated for every new sample value written to the SAMPLE register
EVENTS_REPORTRDY	0x104	Non-null report ready
EVENTS_ACCOF	0x108	ACC or ACCDBL register overflow
EVENTS_DBLRDY	0x10C	Double displacement(s) detected
EVENTS_STOPPED	0x110	QDEC has been stopped
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ENABLE	0x500	Enable the quadrature decoder
LEDPOL	0x504	LED output pin polarity
SAMPLEPER	0x508	Sample period
SAMPLE	0x50C	Motion sample value
REPORTPER	0x510	Number of samples to be taken before REPORTRDY and DBLRDY events can be generated
ACC	0x514	Register accumulating the valid transitions
ACCREAD	0x518	Snapshot of the ACC register, updated by the READCLRACC or RDCLRACC task
PSEL.LED	0x51C	Pin select for LED signal
PSEL.A	0x520	Pin select for A signal
PSEL.B	0x524	Pin select for B signal
DBFEN	0x528	Enable input debounce filters
LEDPRE	0x540	Time period the LED is switched ON prior to sampling
ACCDBL	0x544	Register accumulating the number of detected double transitions
ACCDBLREAD	0x548	Snapshot of the ACCDBL, updated by the READCLRACC or RDCLRDBL task

Table 51: Register overview

6.10.7.1 TASKS_START

Address offset: 0x000

Task starting the quadrature decoder



When started, the SAMPLE register will be continuously updated at the rate given in the SAMPLEPER register.

Bit number		31 30 2	29 28 27 26 25 24 23 22	2 21 20 19 18	17 16 15 1	.4 13 12 1	1 10 9	87	6	54	3 2	1 0
ID												А
Reset 0x00000	000	0 0	0 0 0 0 0 0 0 0	0000	0000	000	000	0 0	0 (0 0	0 0	0 0
ID Acce Fiel												
A W TAS	KS_START		Task	starting the q	quadrature	decoder						
			Whe	n started, the	SAMPLE r	egister w	ill be co	ntinuo	ously			
			upda	ted at the rat	te given in	the SAMI	PLEPER	egiste	er.			
	Trigg	er 1	Trigg	er task								

6.10.7.2 TASKS_STOP

Address offset: 0x004

Task stopping the quadrature decoder

Bit n	umb	per		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					A
Rese	t Ox	0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	W	TASKS_STOP			Task stopping the quadrature decoder
			Trigger	1	Trigger task

6.10.7.3 TASKS_READCLRACC

Address offset: 0x008

Read and clear ACC and ACCDBL

Task transferring the content of ACC to ACCREAD and the content of ACCDBL to ACCDBLREAD, and then clearing the ACC and ACCDBL registers. These read-and-clear operations will be done atomically.

Bit n	umber		31 30 29	28 27	7 26 2	5 24	23 2	2 2 1	20	19	18	17 1	.6 1	.5 1	41	3 12	11	10	9	8	7	55	54	- 3	2	1	0
ID																											А
Rese	t 0x0000000		000	0 0	0 0	0 (0 0	0 0	0	0	0	0 (D	0 0) (0	0	0	0	0	0	0 () (0	0	0	0
А	W TASKS_READCLRACC						Read	d and	d cl	ear	AC	C an	d A	CCI	DBL												
							Task	tran	nsfe	errin	g tl	ne co	ont	ent	of	ACC	to	ACO	CRE	AD a	and	the	e				
							cont	ent	of A	ACCI	DBI	to .	AC	CDB	LR	EAD	, an	d th	ien	clea	arin	g tł	ne				
							ACC	and	AC	CDE	BL r	egis	ter	s. Tl	hes	e re	ad-	and	-cle	ear c	ppe	rati	ons				
							will I	be d	one	e ato	omi	cally	y.														
		Trigger	1				Trigg	er ta	ask																		
							00																				

6.10.7.4 TASKS_RDCLRACC

Address offset: 0x00C

Read and clear ACC

Task transferring the content of ACC to ACCREAD, and then clearing the ACC register. This read-and-clear operation will be done atomically.



Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A W TASKS_RDCLRACC		Read and clear ACC
		Task transferring the content of ACC to ACCREAD, and then
		clearing the ACC register. This read-and-clear operation will
		be done atomically.
Trig	ger 1	Trigger task

6.10.7.5 TASKS_RDCLRDBL

Address offset: 0x010

Read and clear ACCDBL

Task transferring the content of ACCDBL to ACCDBLREAD, and then clearing the ACCDBL register. This readand-clear operation will be done atomically.

Bit n	umbe	r		31 30) 29	28	27	26	25	24	23 2	22	21	20	19	18	17	16	15	14	13	12	11	10	9	87	7 6	5 5	4	3	2	1 0
ID																																А
Rese	t 0x0(000000		0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0) () (0	0	0	0 0
ID																																
А	W	TASKS_RDCLRDBL									Rea	d a	and	l cl	ear	AC	CD	BL														
											Tasl	k tr	ran	sfe	rri	ng t	he	cor	ntei	nt c	of A	CCE	DBL	to	ACC	CDB	LRE	AD	,			
											and	l th	nen	cle	ear	ing	the	A	CCC	BL	reg	iste	er. T	his	rea	id-a	nd-	cle	ar			
											ope	erat	tior	n w	/ill	be	dor	e a	tor	nic	ally.											
			Trigger	1							Trig	gei	r ta	sk																		

6.10.7.6 EVENTS_SAMPLERDY

Address offset: 0x100

Event being generated for every new sample value written to the SAMPLE register

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	RW EVENTS_SAMPLERDY			Event being generated for every new sample value written
				to the SAMPLE register
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.10.7.7 EVENTS_REPORTRDY

Address offset: 0x104

Non-null report ready

Event generated when REPORTPER number of samples has been accumulated in the ACC register and the content of the ACC register is not equal to 0. (Thus, this event is only generated if a motion is detected since the previous clearing of the ACC register).



Bit n	umber		31 30	D 29	28	27 2	26 2	5 24	123	22	21	. 20) 19	18	17	16	15	14	13	12	11 1	10	98	37	6	5	4	3	2	1 (
ID																														1
Rese	t 0x0000000		0 0	0	0	0	0 0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0 (
А	RW EVENTS_REPORTRDY								No	on-n	ull	l re	por	t re	ead	у														
									Ev	ent	ge	nei	rate	ed ۱	whe	en F	REP	OR'	ГРЕ	Rn	uml	ber	of	sam	ples	s ha	IS			
									be	en a	acc	cun	nula	ate	d in	th	e A	СС	regi	ste	r ar	ıd t	he d	cont	ent	of				
									th	e AC	CC	reg	giste	er i	s no	ot e	qua	al to	o 0.	(Th	us,	thi	s ev	ent	is o	only				
									ge	nera	ate	ed i	fa	mo	tio	n is	de	tec	ted	sin	ce t	he	pre	viou	s cl	ear	ing			
									of	the	A	CC	reg	iste	er).															
		NotGenerated	0						Εv	ent	no	ot g	ene	erat	ed															
		Generated	1						Εv	ent	ge	nei	rate	ed																

6.10.7.8 EVENTS_ACCOF

Address offset: 0x108

ACC or ACCDBL register overflow

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_ACCOF			ACC or ACCDBL register overflow
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.10.7.9 EVENTS_DBLRDY

Address offset: 0x10C

Double displacement(s) detected

Event generated when REPORTPER number of samples has been accumulated and the content of the ACCDBL register is not equal to 0. (Thus, this event is only generated if a double transition is detected since the previous clearing of the ACCDBL register).

Bit n	umber		3	L 30 2	29	28 2	27 2	26 2	5 2	4 23	3 2 2	21	L 20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
ID																																
Rese	et 0x0000000		0	0	0	0	0	0	0 0	0 (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
А	RW EVENTS_DBLRDY									D	oub	le	disp	olac	em	ent	t(s)	de	tec	ted												_
										E١	/ent	: ge	enei	rate	ed v	vhe	en F	EP	OR'	ГРЕ	Rn	um	ıbe	r of	f sa	mp	les	ha	S			
										be	een	ас	cun	nula	ate	d ar	nd t	he	соі	nter	nt o	of th	he /	400	CDB	sL re	egis	ster				
										is	not	ec	qual	to	0.	Th	us,	this	s ev	ent	is	onl	y g	ene	erat	ed	if a	I				
										do	bubl	le 1	tran	siti	on	is d	lete	ecte	d s	inc	e th	ne p	ore	vio	us c	lea	rin	g o	f			
										th	ie A	CC	DBI	. re	gist	er)																
		NotGenerated	0							E١	/ent	: no	ot g	ene	erat	ed																
		Generated	1							E١	/ent	: ge	enei	rate	d																	

6.10.7.10 EVENTS_STOPPED

Address offset: 0x110

QDEC has been stopped



Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_STOPPED			QDEC has been stopped
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.10.7.11 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	umber		31 30 29 28 27 2	26 25 24	4 23 22 21	20 19 1	.8 17 :	16 15	5 14 3	13 12	2 11	10 9	8	7	6	5 4	13	2	1	0
ID															G	FE	D	С	в	A
Rese	et 0x0000000		0 0 0 0 0	000	0 0 0	000	0 0	0 0	0	0 0	0	0 0	0	0	0	0 0	0 0	0	0	0
A	RW REPORTRDY_READCLR	ACC			Shortcut	betwee	en eve	ent R	EPOF	RTRD	Y an	d tas	sk RI	EAD	CLR	ACC				
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
В	RW SAMPLERDY_STOP				Shortcut	betwee	en eve	ent <mark>S</mark> /	AMP	LERD	Y an	id ta	sk <mark>S</mark> T	ГОР						
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
С	RW REPORTRDY_RDCLRAC	с			Shortcut	betwee	en eve	ent R	EPOF	RTRD	Y an	d tas	k RI	DCL	RAC	С				
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
D	RW REPORTRDY_STOP				Shortcut	betwee	en eve	ent <mark>R</mark> l	EPOF	RTRD	Y an	d tas	sk ST	ОР						
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
E	RW DBLRDY_RDCLRDBL				Shortcut	betwee	en eve	ent D	BLRC)Y an	id ta	sk R[DCLF	RDB	L					
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
F	RW DBLRDY_STOP				Shortcut	betwee	en eve	ent D	BLRC)Y an	id ta	sk <mark>ST</mark>	OP							
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														
G	RW SAMPLERDY_READCLR	ACC			Shortcut	betwee	en eve	ent <mark>S</mark> /	AMP	LERD	Y an	id ta	sk RI	EAC	CLF	ACC	2			
		Disabled	0		Disable s	shortcut														
		Enabled	1		Enable s	hortcut														

6.10.7.12 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27	2 6 2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID		EDCBA
Reset 0x0000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value		Description
A RW SAMPLERDY		Write '1' to enable interrupt for event SAMPLERDY
Set	1	Enable
Set Disabl	1 ed 0	·



Bit r	number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ЕДСВА
Res	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
В	RW REPORTRDY			Write '1' to enable interrupt for event REPORTRDY
				Event generated when REPORTPER number of samples has
				been accumulated in the ACC register and the content of
				the ACC register is not equal to 0. (Thus, this event is only
				generated if a motion is detected since the previous clearing
				of the ACC register).
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACCOF			Write '1' to enable interrupt for event ACCOF
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW DBLRDY			Write '1' to enable interrupt for event DBLRDY
				Event generated when REPORTPER number of samples has
				been accumulated and the content of the ACCDBL register
				is not equal to 0. (Thus, this event is only generated if a
				double transition is detected since the previous clearing of
				the ACCDBL register).
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.10.7.13 INTENCLR

Address offset: 0x308

Disable interrupt

Bit r	number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				EDCBA
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW SAMPLERDY			Write '1' to disable interrupt for event SAMPLERDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW REPORTRDY			Write '1' to disable interrupt for event REPORTRDY
				Event generated when REPORTPER number of samples has
				been accumulated in the ACC register and the content of
				the ACC register is not equal to 0. (Thus, this event is only
				generated if a motion is detected since the previous clearing
				of the ACC register).
		Clear	1	Disable
		Disabled	0	Read: Disabled



Bit r	number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ЕДСВИ
Res	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Enabled	1	Read: Enabled
С	RW ACCOF			Write '1' to disable interrupt for event ACCOF
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW DBLRDY			Write '1' to disable interrupt for event DBLRDY
				Event generated when REPORTPER number of samples has
				been accumulated and the content of the ACCDBL register
				is not equal to 0. (Thus, this event is only generated if a
				double transition is detected since the previous clearing of
				the ACCDBL register).
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.10.7.14 ENABLE

Address offset: 0x500

Enable the quadrature decoder

Bit number		31 30 29 28 23	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENABLE			Enable or disable the quadrature decoder
			When enabled the decoder pins will be active. When
			disabled the quadrature decoder pins are not active and can
			be used as GPIO .
	Disabled	0	Disable
	Enabled	1	Enable
		1	

6.10.7.15 LEDPOL

Address offset: 0x504

LED output pin polarity

Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW LEDPOL			LED output pin polarity
	ActiveLow	0	Led active on output pin low
	ActiveHigh	1	Led active on output pin high



6.10.7.16 SAMPLEPER

Address offset: 0x508

Sample period

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW SAMPLEPER			Sample period. The SAMPLE register will be updated for
			every new sample
	128us	0	128 μs
	256us	1	256 µs
	512us	2	512 μs
	1024us	3	1024 µs
	2048us	4	2048 μs
	4096us	5	4096 μs
	8192us	6	8192 μs
	16384us	7	16384 μs
	32ms	8	32768 μs
	65ms	9	65536 μs
	131ms	10	131072 μs

6.10.7.17 SAMPLE

Address offset: 0x50C

Motion sample value

Bit nu	umbe	r	33	1 30	29	9 2	8 2	72	62	5 2	24 2	23 2	22 3	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5 4	4 3	32	1	0
ID			A	A	A	A A	4	4 <i>4</i>	4	Δ.	A	A	A	A	A	А	A	А	А	А	A	А	А	А	А	A	A	A	Α.	A	A A	A A	A	A
Rese	t 0x00	000000	0	0	0) () () () (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0 0	0	0
ID																																		
А	R	SAMPLE	[-	12	2]						l	Last	t m	oti	on	sar	mp	le																
											٦	The	e va	lue	is	a 2	!'s (con	nple	em	ent	va	ue,	an	d tł	ne s	ign	giv	es	the				
											0	dire	ecti	ion	of	the	e m	oti	on.	Th	e v	alu	e '2	' in	dica	tes	sao	dou	ble					
													nsit																					

6.10.7.18 REPORTPER

Address offset: 0x510

Number of samples to be taken before REPORTRDY and DBLRDY events can be generated



3it number		31 30 29 28 2	7 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
D				АААА
Reset 0x00000000		0 0 0 0	000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW REPORTPER				Specifies the number of samples to be accumulated in the
				ACC register before the REPORTRDY and DBLRDY events can
				be generated.
				The report period in [μ s] is given as: RPUS = SP * RP Where
				RPUS is the report period in [μ s/report], SP is the sample
				period in [μ s/sample] specified in SAMPLEPER, and RP is the
				report period in [samples/report] specified in REPORTPER .
	10Smpl	0		10 samples/report
	40Smpl	1		40 samples/report
	80Smpl	2		80 samples/report
	120Smpl	3		120 samples/report
	160Smpl	4		160 samples/report
	200Smpl	5		200 samples/report
	240Smpl	6		240 samples/report
	280Smpl	7		280 samples/report
	1Smpl	8		1 sample/report

6.10.7.19 ACC

Address offset: 0x514

Register accumulating the valid transitions

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A R ACC	[-10241023] Register accumulating all valid samples (not double
	transition) read from the SAMPLE register.
	Double transitions (SAMPLE = 2) will not be accumulated
	in this register. The value is a 32 bit 2's complement value.
	If a sample that would cause this register to overflow or
	underflow is received, the sample will be ignored and
	an overflow event (ACCOF) will be generated. The ACC
	register is cleared by triggering the READCLRACC or the
	RDCLRACC task.

6.10.7.20 ACCREAD

Address offset: 0x518

Snapshot of the ACC register, updated by the READCLRACC or RDCLRACC task

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A R ACCREAD	[-10241023] Snapshot of the ACC register.
A A ACCREAD	
A R ACCALAD	The ACCREAD register is updated when the READCLRACC or



6.10.7.21 PSEL.LED

Address offset: 0x51C

Pin select for LED signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
A C	RW PIN RW CONNECT		[031]	Pin number Connection
A C		Disconnected	[031] 1	

6.10.7.22 PSEL.A

Address offset: 0x520

Pin select for A signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				
A	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.10.7.23 PSEL.B

Address offset: 0x524

Pin select for B signal

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.10.7.24 DBFEN

Address offset: 0x528

Enable input debounce filters



Bit number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW DBFEN			Enable input debounce filters
	Disabled	0	Debounce input filters disabled
	Enabled	1	Debounce input filters enabled

6.10.7.25 LEDPRE

Address offset: 0x540

Time period the LED is switched ON prior to sampling

Bit n	umber	313	0 29	28 2	27 2	6 25	5 24	23 2	2 2 1	L 20 :	19 1	8 17	16	15 1	14 13	3 12	11 1	09	8	7	6	5 4	43	2	1 0
ID																			А	А	А	A	A A	А	A A
Rese	t 0x00000010	0	0 0	0	0 0	0	0	0 (0 0	0	0 0	0	0	0	0 0	0	0 0	0	0	0	0	0 :	1 0	0	0 0
ID																									
А	RW LEDPRE	[15	11]					Peri	ni bc	n µs	the l	ED i	s sv	vitc	hed	on p	rior	to sa	amp	lin	3				

6.10.7.26 ACCDBL

Address offset: 0x544

Register accumulating the number of detected double transitions

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID Reset 0x0000000	A A A A O O O O O O O O O O O O O O O O
ID Acce Field	Value Description
A R ACCDBL	[015] Register accumulating the number of detected double or illegal transitions. (SAMPLE = 2). When this register has reached its maximum value, the accumulation of double/illegal transitions will stop. An overflow event (ACCOF) will be generated if any double or illegal transitions are detected after the maximum value was reached. This field is cleared by triggering the READCLRACC or RDCLRDBL task.

6.10.7.27 ACCDBLREAD

Address offset: 0x548

Snapshot of the ACCDBL, updated by the READCLRACC or RDCLRDBL task

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID		A A A
Reset 0x00000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A R ACCDBLRE	AD	[015] Snapshot of the ACCDBL register. This field is updated when
		the READCLRACC or RDCLRDBL task is triggered.



6.10.8 Electrical specification

6.10.8.1 QDEC Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{SAMPLE}	Time between sampling signals from quadrature decoder	128		131072	μs
t _{LED}	Time from LED is turned on to signals are sampled	0		511	μs

6.11 RADIO — 2.4 GHz radio

The 2.4 GHz radio transceiver is compatible with multiple radio standards such as 1 Mbps and 2 Mbps *Bluetooth*[®] Low Energy modes, as well as Nordic's proprietary 1 Mbps and 2 Mbps modes.

The main features of RADIO are:

- Multidomain 2.4 GHz radio transceiver, with
 - 1 Mbps and 2 Mbps *Bluetooth*[®] Low Energy modes
 - 1 Mbps and 2 Mbps Nordic proprietary modes
- Best in class link budget and low power operation
- Efficient data interface with EasyDMA support
- Automatic address filtering and pattern matching

EasyDMA, in combination with an automated packet assembler, packet disassembler, automated CRC generator and CRC checker, makes it easy to configure and use RADIO. See the following figure for details.

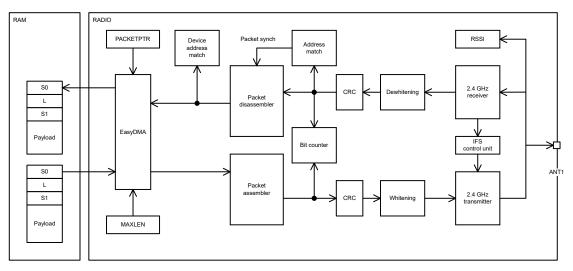


Figure 39: RADIO block diagram

RADIO includes a device address match unit and an interframe spacing control unit that can be utilized to simplify address whitelisting and interframe spacing respectively in *Bluetooth*[®] Low Energy and similar applications.


RADIO also includes a received signal strength indicator (RSSI) and a bit counter. The bit counter generates events when a preconfigured number of bits are sent or received by RADIO.

6.11.1 Packet configuration

A RADIO packet contains the fields PREAMBLE, ADDRESS, S0, LENGTH, S1, PAYLOAD, and CRC.



The content of a RADIO packet is illustrated in the following figure. RADIO sends the fields in the packet according to the sequence shown in the figure, starting on the left.

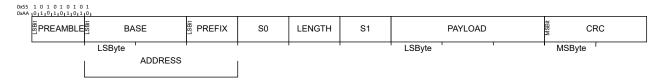



Not shown in the figure is the static payload add-on (the length of which is defined in PCNF1.STATLEN, and which is 0 bytes in a standard BLE packet). The static payload add-on is sent between PAYLOAD and CRC fields. RADIO sends the different fields in the packet in the order they are illustrated above, from left to right.

PREAMBLE is sent with least significant bit first on air. The size of the PREAMBLE depends on the mode selected in the MODE register:

- The PREAMBLE is one byte for MODE = Ble_1Mbit as well as all Nordic proprietary operating modes (MODE = Nrf_1Mbit and MODE = Nrf_2Mbit), and PCNF0.PLEN has to be set accordingly. If the first bit of the ADDRESS is 0, the preamble will be set to 0xAA. Otherwise the PREAMBLE will be set to 0x55.
- For MODE = Ble_2Mbit, the PREAMBLE must be set to 2 bytes through PCNF0.PLEN. If the first bit of
 the ADDRESS is 0, the preamble will be set to 0xAAAA. Otherwise the PREAMBLE will be set to 0x5555.

Radio packets are stored in memory inside instances of a RADIO packet data structure as illustrated below. The PREAMBLE, ADDRESS and CRC fields are omitted in this data structure. Fields SO, LENGTH, and S1 are optional.

S0	LENGTH	S1		PAYLOAD	
0	1		LSByte	1	n

Figure 41: Representation of a RADIO packet in RAM

The byte ordering on air is always least significant byte first for the ADDRESS and PAYLOAD fields, and most significant byte first for the CRC field. The ADDRESS fields are always transmitted and received least significant bit first. The CRC field is always transmitted and received most significant bit first. The endianness, i.e. the order in which the bits are sent and received, of the S0, LENGTH, S1, and PAYLOAD fields can be configured via PCNF1.ENDIAN.

The sizes of the S0, LENGTH, and S1 fields can be individually configured via S0LEN, LFLEN, and S1LEN in PCNF0 respectively. If any of these fields are configured to be less than 8 bits, the least significant bits of the fields are used.

If SO, LENGTH, or S1 are specified with zero length, their fields will be omitted in memory. Otherwise each field will be represented as a separate byte, regardless of the number of bits in their on-air counterpart.

Independent of the configuration of PCNF1.MAXLEN, the combined length of S0, LENGTH, S1, and PAYLOAD cannot exceed 258 bytes.

6.11.2 Address configuration

The on-air radio ADDRESS field is composed of two parts, the base address field and the address prefix field.

The size of the base address field is configurable via PCNF1.BALEN. The base address is truncated from the least significant byte if the PCNF1.BALEN is less than 4. See Definition of logical addresses on page 142.



The on-air addresses are defined in the BASEO/BASE1 and PREFIXO/PREFIX1 registers. It is only when writing these registers that the user must relate to the actual on-air addresses. For other radio address registers, such as the TXADDRESS, RXADDRESSES, and RXMATCH registers, logical radio addresses ranging from 0 to 7 are being used. The relationship between the on-air radio addresses and the logical addresses is described in the following table.

Logical address	Base address	Prefix byte
0	BASEO	PREFIX0.AP0
1	BASE1	PREFIX0.AP1
2	BASE1	PREFIX0.AP2
3	BASE1	PREFIX0.AP3
4	BASE1	PREFIX1.AP4
5	BASE1	PREFIX1.AP5
6	BASE1	PREFIX1.AP6
7	BASE1	PREFIX1.AP7

Table 52: Definition of logical addresses

6.11.3 Data whitening

RADIO can do packet whitening and de-whitening which is enabled in PCNF1.WHITEEN. When enabled, whitening and de-whitening will be handled by RADIO automatically as packets are sent and received.

The whitening word is generated using polynomial $g(D) = D^7 + D^4 + 1$, which then is XORed with the data packet that is to be whitened, or de-whitened. The linear feedback shift register is initialized via DATAWHITEIV. See the following figure.

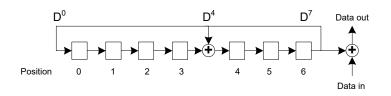


Figure 42: Data whitening and de-whitening

Whitening and de-whitening will be performed over the whole packet except for the preamble and the address fields.

6.11.4 CRC

The CRC generator in RADIO calculates the CRC over the whole packet excluding the preamble.

If useful, the address field can be excluded from the CRC calculation as well. See the CRCCNF register for more information.

The CRC polynomial is configurable as illustrated in the following figure, where bit 0 in the CRCPOLY register corresponds to X^0 and bit 1 corresponds to X^1 etc. See CRCPOLY on page 166 for more information.



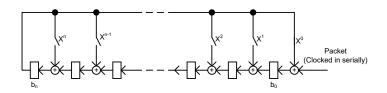


Figure 43: CRC generation of an n bit CRC

The figure shows that the CRC is calculated by feeding the packet serially through the CRC generator. Before the packet is clocked through the CRC generator, the CRC generator's latches b_0 through b_n will be initialized with a predefined value specified in the CRCINIT register. After the whole packet has been clocked through the CRC generator, b_0 through b_n will hold the resulting CRC. This value will be used by RADIO during both transmission and reception. Latches b_0 through b_n are not available to be read by the CPU at any time. However, a received CRC can be read by the CPU via the RXCRC register.

The length (n) of the CRC is configurable, see CRCCNF for more information.

Once the entire packet, including the CRC, has been received and no errors were detected, RADIO generates a CRCOK event. If CRC errors were detected, a CRCERROR event is generated.

The status of the CRC check can be read from the CRCSTATUS register after a packet has been received.

6.11.5 Radio states

Tasks and events are used to control the operating state of RADIO.

RADIO can enter the states described in the following table.

State	Description	
DISABLED	No operations are going on inside RADIO and the power consumption is at a minimum	
RXRU	RADIO is ramping up and preparing for reception	
RXIDLE	RADIO is ready for reception to start	
RX	Reception has been started and the addresses enabled in the RXADDRESSES register are being monitored	
TXRU	RADIO is ramping up and preparing for transmission	
TXIDLE	RADIO is ready for transmission to start	
ТХ	RADIO is transmitting a packet	
RXDISABLE	RADIO is disabling the receiver	
TXDISABLE	RADIO is disabling the transmitter	

Table 53: RADIO state diagram

A state diagram showing an overview of RADIO is shown in the following figure.



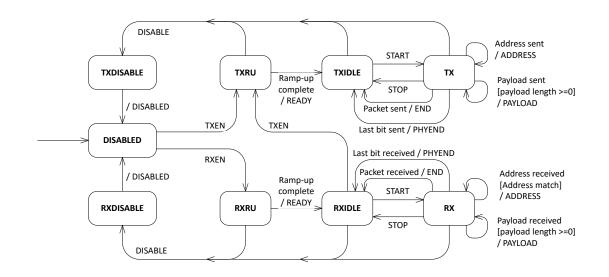


Figure 44: Radio states

This figure shows how the tasks and events relate to RADIO's operation. RADIO does not prevent a task from being triggered from the wrong state. If a task is triggered from the wrong state, for example if the RXEN task is triggered from the RXDISABLE state, this may lead to incorrect behavior. The PAYLOAD event is always generated even if the payload is zero.

6.11.6 Transmit sequence

Before RADIO can transmit a packet, it must first ramp-up in TX mode. See TXRU in Radio states on page 144 and Transmit sequence on page 144. A TXRU ramp-up sequence is initiated when the TXEN task is triggered. After RADIO has successfully ramped up it will generate the READY event indicating that a packet transmission can be initiated. A packet transmission is initiated by triggering the START task. The START task can first be triggered after RADIO has entered into the TXIDLE state.

The following figure illustrates a single packet transmission where the CPU manually triggers the different tasks needed to control the flow of RADIO, i.e. no shortcuts are used. If shortcuts are not used, a certain amount of delay caused by CPU execution is expected between READY and START, and between END and DISABLE. As illustrated in the following figure, RADIO will by default transmit 1s between READY and START, and between END and DISABLED. What is transmitted can be programmed through the DTX field in the MODECNFO register.

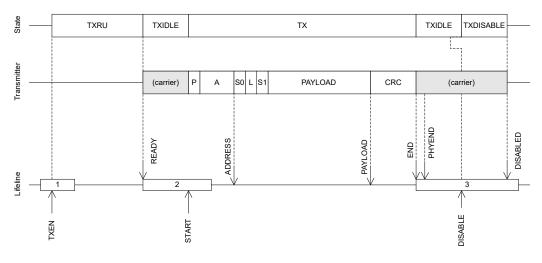


Figure 45: Transmit sequence



The following figure shows a slightly modified version of the transmit sequence where RADIO is configured to use shortcuts between READY and START, and between END and DISABLE, which means that no delay is introduced.

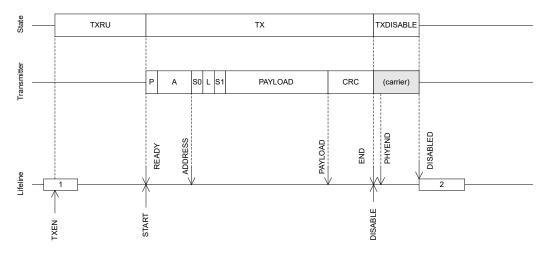


Figure 46: Transmit sequence using shortcuts to avoid delays

RADIO is able to send multiple packets one after the other without having to disable and re-enable RADIO between packets, as illustrated in the following figure.

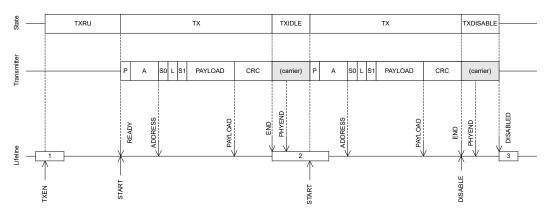


Figure 47: Transmission of multiple packets

6.11.7 Receive sequence

Before RADIO is able to receive a packet, it must first ramp up in RX mode. See RXRU in Radio states on page 144 and Receive sequence on page 146 for more information.

An RXRU ramp up sequence is initiated when the RXEN task is triggered. After RADIO has successfully ramped up it will generate the READY event indicating that a packet reception can be initiated. A packet reception is initiated by triggering the START task. As illustrated in Radio states on page 144, the START task can first be triggered after RADIO has entered into the RXIDLE state.

The following figure shows a single packet reception where the CPU manually triggers the different tasks needed to control the flow of RADIO, i.e. no shortcuts are used. If shortcuts are not used, a certain amount of delay caused by CPU execution is expected between READY and START, and between END and DISABLE. RADIO will be listening and possibly receiving undefined data, represented with an 'X', from START and until a packet with valid preamble (P) is received.



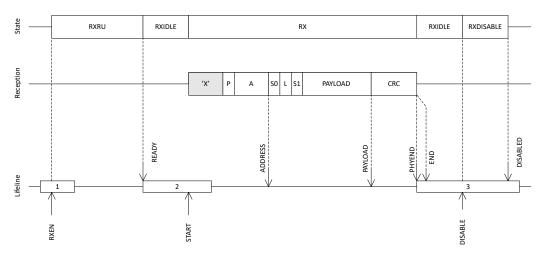


Figure 48: Receive sequence

The following figure shows a modified version of the receive sequence, where RADIO is configured to use shortcuts between READY and START, and between END and DISABLE, which means that no delay is introduced.

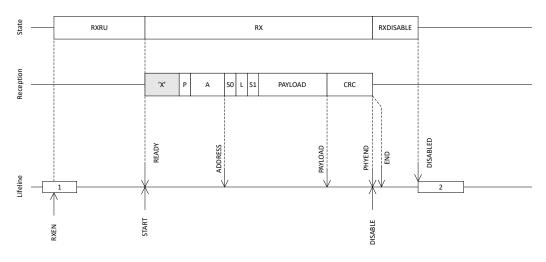


Figure 49: Receive sequence using shortcuts to avoid delays

RADIO can receive consecutive packets without having to disable and re-enable RADIO between packets, as illustrated in the following figure.

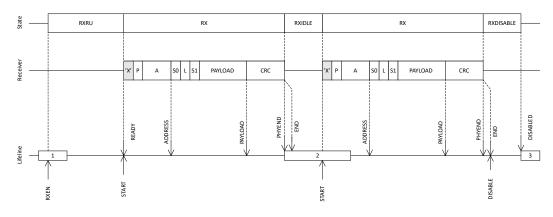


Figure 50: Reception of multiple packets



6.11.8 Received signal strength indicator (RSSI)

RADIO implements a mechanism for measuring the power in the received signal. This feature is called received signal strength indicator (RSSI).

The RSSI is measured continuously and the value filtered using a single-pole IIR filter. After a signal level change, the RSSI will settle after approximately RSSI_{SETTLE}.

Sampling of the received signal strength is started by using the RSSISTART task. The sample can be read from the RSSISAMPLE register.

The sample period of the RSSI is defined by RSSI_{PERIOD}. The RSSISAMPLE will hold the filtered received signal strength after this sample period.

For the RSSI sample to be valid, RADIO has to be enabled in receive mode (RXEN task) and the reception has to be started (READY event followed by START task).

6.11.9 Interframe spacing (IFS)

Interframe spacing (IFS) is defined as the time, in microseconds, between two consecutive packets, starting from when the end of the last bit of the previous packet is received, to the beginning of the first bit of the subsequent packet that is transmitted.

RADIO can enforce this interval, as specified in the TIFS register, as long as the TIFS register is not specified to be shorter than RADIO's turnaround time (i.e. the time needed to switch off the receiver, and then switch the transmitter back on). The TIFS register can be written any time before the last bit on air is received.

This timing is illustrated in the following figure.

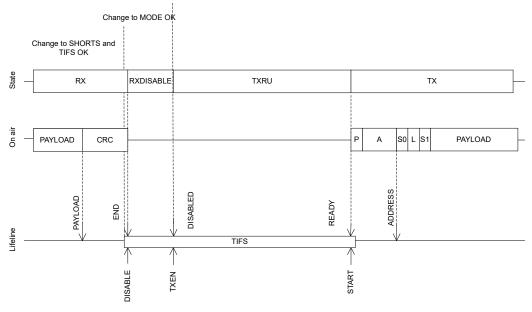


Figure 51: IFS timing detail

The TIFS duration starts after the last bit on air (just before the END event), and elapses with first bit being transmitted on air (just after READY event).

TIFS is only enforced if the shortcuts END to DISABLE and DISABLED to TXEN or END to DISABLE and DISABLED to RXEN are enabled.

TIFS is qualified for use in 1 Mbps and 2 Mbps *Bluetooth*[®] Low Energy modes, using the default ramp-up mode.

SHORTS and TIFS registers are not double-buffered, and can be updated at any point before the last bit on air is received. The MODE register is double-buffered and sampled at the TXEN or RXEN task.



6.11.10 Device address match

The device address match feature is tailored for address whitelisting in *Bluetooth*[®] Low Energy and similar implementations.

This feature enables on-the-fly device address matching while receiving a packet on air. This feature only works in receive mode and when RADIO is configured for little endian, see PCNF1.ENDIAN for more information.

The device address match unit assumes that the first 48 bits of the payload are the device address and that bit number 6 in S0 is the TxAdd bit. See the *Bluetooth*[®] *Core Specification* for more information about device addresses, TxAdd, and whitelisting.

RADIO is able to listen for eight different device addresses at the same time. These addresses are specified in a DAB/DAP register pair, one pair per address, in addition to a TxAdd bit configured in the DACNF register. The DAB register specifies the 32 least significant bits of the device address, while the DAP register specifies the 16 most significant bits of the device address.

Each of the device addresses can be individually included or excluded from the matching mechanism. This is configured in the DACNF register.

6.11.11 Bit counter

RADIO implements a simple counter that can be configured to generate an event after a specific number of bits have been transmitted or received.

By using shortcuts, this counter can be started from different events generated by RADIO and count relative to these.

The bit counter is started by triggering the BCSTART task, and stopped by triggering the BCSTOP task. A BCMATCH event will be generated when the bit counter has counted the number of bits specified in the BCC register. The bit counter will continue to count bits until the DISABLED event is generated or until the BCSTOP task is triggered. After a BCMATCH event, the CPU can reconfigure the BCC value for new BCMATCH events within the same packet.

The bit counter can only be started after RADIO has received the ADDRESS event.

The bit counter will stop and reset on either the BCSTOP, STOP, or DISABLE task, or the END event.

The following figure shows how the bit counter can be used to generate a BCMATCH event in the beginning of the packet payload, and again generate a second BCMATCH event after sending 2 bytes (16 bits) of the payload.

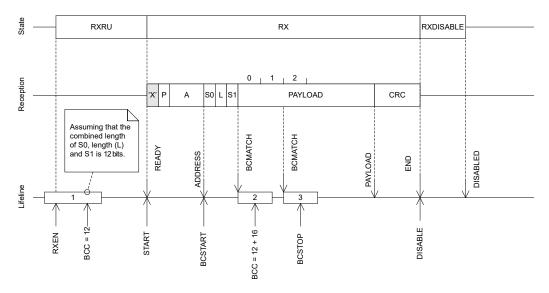


Figure 52: Bit counter example



6.11.12 EasyDMA

RADIO uses EasyDMA to read and write packets to RAM without CPU involvement.

As illustrated in RADIO block diagram on page 140, RADIO's EasyDMA utilizes the same PACKETPTR for receiving and transmitting packets. This pointer should be reconfigured by the CPU each time before RADIO is started by the START task. The PACKETPTR register is double-buffered, meaning that it can be updated and prepared for the next transmission.

The END event indicates that the last bit has been processed by RADIO. The DISABLED event is issued to acknowledge that a DISABLE task is done.

The structure of a packet is described in detail in Packet configuration on page 140. The data that is stored in Data RAM and transported by EasyDMA consists of the following fields:

- SO
- LENGTH
- S1
- PAYLOAD

In addition, a static add-on is sent immediately after the payload.

The size of each of the above fields in the frame is configurable (see Packet configuration on page 140), and the space occupied in RAM depends on these settings. The size of the field can be zero, as long as the resulting frame complies with the chosen RF protocol.

All fields are extended in size to align with a byte boundary in RAM. For instance, a 3-bit long field on air will occupy 1 byte in RAM while a 9-bit long field will be extended to 2 bytes.

The packet's elements can be configured as follows:

- S0 is configured through the PCNF0.SOLEN field
- LENGTH is configured through the PCNFO.LFLEN field
- S1 is configured through the PCNF0.S1LEN field
- Payload size is configured through the value in RAM corresponding to the LENGTH field
- Static add-on size is configured through the PCNF1.STATLEN field

The PCNF1.MAXLEN field configures the maximum packet payload plus add-on size in number of bytes that can be transmitted or received by RADIO. This feature can be used to ensure that RADIO does not overwrite, or read beyond, the RAM assigned to the packet payload. This means that if the LENGTH field of the packet payload exceedes PCNF1.STATLEN, and the LENGTH field in the packet specifies a packet larger than configured in PCNF1.MAXLEN, the payload will be truncated to the length specified in PCNF1.MAXLEN.

Note: The PCNF1.MAXLEN field includes the payload and the add-on, but excludes the size occupied by the S0, LENGTH, and S1 fields. This has to be taken into account when allocating RAM.

If the payload and add-on length is specified larger than PCNF1.MAXLEN, RADIO will still transmit or receive in the same way as before, except the payload is now truncated to PCNF1.MAXLEN. The packet's LENGTH field will not be altered when the payload is truncated. RADIO will calculate CRC as if the packet length is equal to PCNF1.MAXLEN.

Note: If PACKETPTR is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The END event indicates that the last bit has been processed by RADIO. The DISABLED event is issued to acknowledge that an DISABLE task is done.



6.11.13 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40001000	RADIO	RADIO	2.4 GHz radio	
			Table 54: Instance	25
Register	Offset	Descrip	tion	
TASKS_TXEN	0x000		RADIO in TX mode	
TASKS_RXEN	0x004	Enable	RADIO in RX mode	
TASKS_START	0x008	Start RA	ADIO	
TASKS_STOP	0x00C	Stop RA	DIO	
TASKS_DISABLE	0x010	Disable	RADIO	
TASKS_RSSISTART	0x014	Start th	e RSSI and take one single sample o	f the receive signal strength
TASKS_RSSISTOP	0x018	Stop the	e RSSI measurement	
TASKS_BCSTART	0x01C	Start th	e bit counter	
TASKS_BCSTOP	0x020	Stop the	e bit counter	
EVENTS_READY	0x100	RADIO I	has ramped up and is ready to be sta	arted
EVENTS_ADDRESS	0x104	Address	s sent or received	
EVENTS_PAYLOAD	0x108	Packet	payload sent or received	
EVENTS_END	0x10C	Packet	sent or received	
EVENTS_DISABLED	0x110	RADIO	has been disabled	
EVENTS_DEVMATCH	0x114	A devic	e address match occurred on the las	st received packet
EVENTS_DEVMISS	0x118	No devi	ce address match occurred on the la	ast received packet
EVENTS_RSSIEND	0x11C	Samplir	ng of receive signal strength complet	te
EVENTS_BCMATCH	0x128	Bit cour	nter reached bit count value	
EVENTS_CRCOK	0x130	Packet i	received with CRC ok	
EVENTS_CRCERROR	0x134	Packet i	received with CRC error	
EVENTS_TXREADY	0x154	RADIO I	has ramped up and is ready to be sta	arted TX path
EVENTS_RXREADY	0x158	RADIO I	has ramped up and is ready to be sta	arted RX path
EVENTS_PHYEND	0x16C	Genera	ted when last bit is sent on air, or re	ceived from air
SHORTS	0x200	Shortcu	ts between local events and tasks	
INTENSET	0x304	Enable	interrupt	
INTENCLR	0x308	Disable	interrupt	
CRCSTATUS	0x400	CRC sta	tus	
RXMATCH	0x408	Receive	d address	
RXCRC	0x40C	CRC fiel	d of previously received packet	
DAI	0x410	Device	address match index	
PDUSTAT	0x414	Payload	status	
PACKETPTR	0x504	Packet	pointer	
FREQUENCY	0x508	Freque	ncy	
TXPOWER	0x50C	Output	power	
MODE	0x510	Data ra	te and modulation	
PCNF0	0x514	Packet	configuration register 0	
PCNF1	0x518	Packet	configuration register 1	
BASEO	0x51C	Base ad	dress 0	
BASE1	0x520	Base ad	dress 1	
PREFIXO	0x524	Prefixes	bytes for logical addresses 0-3	
PREFIX1	0x528	Prefixes	bytes for logical addresses 4-7	
TXADDRESS	0x52C	Transm	it address select	
RXADDRESSES	0x530	Receive	address select	
CRCCNF	0x534	CRC cor	nfiguration	
CRCPOLY	0x538	CRC pol	ynomial	



Register	Offset	Description
CRCINIT	0x53C	CRC initial value
TIFS	0x544	Interframe spacing in µs
RSSISAMPLE	0x548	RSSI sample
STATE	0x550	Current radio state
DATAWHITEIV	0x554	Data whitening initial value
BCC	0x560	Bit counter compare
DAB[n]	0x600	Device address base segment n
DAP[n]	0x620	Device address prefix n
DACNF	0x640	Device address match configuration
MODECNF0	0x650	Radio mode configuration register 0
POWER	0xFFC	Peripheral power control

Table 55: Register overview

6.11.13.1 TASKS_TXEN

Address offset: 0x000

Enable RADIO in TX mode

Bit n	uml	ber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID					
Rese	et O	«0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					
А	W	TASKS_TXEN			Enable RADIO in TX mode
			Trigger	1	Trigger task

6.11.13.2 TASKS_RXEN

Address offset: 0x004

Enable RADIO in RX mode

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_RXEN			Enable RADIO in RX mode
		Trigger	1	Trigger task

6.11.13.3 TASKS_START

Address offset: 0x008

Start RADIO

Bit n	umber		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_START			Start RADIO
		Trigger	1	Trigger task



6.11.13.4 TASKS_STOP

Address offset: 0x00C

Stop RADIO

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOP			Stop RADIO
	Trigger	1	Trigger task

6.11.13.5 TASKS_DISABLE

Address offset: 0x010

Disable RADIO

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_DISABLE			Disable RADIO
		Trigger	1	Trigger task

6.11.13.6 TASKS_RSSISTART

Address offset: 0x014

Start the RSSI and take one single sample of the receive signal strength

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8	7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A W TASKS_RSSISTART	Start the RSSI and take one single sample of the r	eceive
	signal strength	
Trigger	1 Trigger task	

6.11.13.7 TASKS_RSSISTOP

Address offset: 0x018

Stop the RSSI measurement

Bit n	un	nbe	r		31 30	29	28 2	27 26	5 2 5	5 24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6 !	54	- 3	2	1	0
ID																																	A
Rese	et C	0x0	000000		0 0	0	0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0	0	0	o
ID																																	
А	١	w	TASKS_RSSISTOP								St	op t	the	RS	SI n	nea	sur	em	nen	t													
				Trigger	1						Tri	igge	er ta	ask																			



6.11.13.8 TASKS_BCSTART

Address offset: 0x01C

Start the bit counter

Bit n	umber		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_BCSTART			Start the bit counter
		Trigger	1	Trigger task

6.11.13.9 TASKS_BCSTOP

Address offset: 0x020

Stop the bit counter

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_BCSTOP			Stop the bit counter
		Trigger	1	Trigger task

6.11.13.10 EVENTS_READY

Address offset: 0x100

RADIO has ramped up and is ready to be started

Bit number		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	
ID Acce Field			Description
A RW EVENTS_READY			RADIO has ramped up and is ready to be started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.11.13.11 EVENTS_ADDRESS

Address offset: 0x104

Address sent or received

Bit n	umber		31 30 2	29 28	3 27 3	26 2	5 24	4 23	22	212	0 1	.9 18	8 17	7 16	15	14 1	.3 1	2 11	. 10	9	8	7	6	5	4 3	32	1	С
ID																												4
Rese	t 0x0000000		0 0	0 0	0	0	0 0	0	0	0	0 (0 0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 (0 0	0	ð
ID																												
А	RW EVENTS_ADDRESS							Ad	ldre	ess se	ent	or r	ece	iveo	ł													
		NotGenerated	0					Εv	ent	not	ger	nera	ted															
		Generated	1					Εv	ent	gen	era	ted																



6.11.13.12 EVENTS_PAYLOAD

Address offset: 0x108

Packet payload sent or received

Bit n	umber		31 30 29 28 27 26 25 24	2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_PAYLOAD			Packet payload sent or received
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.13 EVENTS_END

Address offset: 0x10C

Packet sent or received

Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_END			Packet sent or received
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.11.13.14 EVENTS_DISABLED

Address offset: 0x110

RADIO has been disabled

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_DISABLED			RADIO has been disabled
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.15 EVENTS_DEVMATCH

Address offset: 0x114

A device address match occurred on the last received packet



Bit number			31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Reset 0x00	000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW	EVENTS_DEVMATCH			A device address match occurred on the last received
				packet
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.16 EVENTS_DEVMISS

Address offset: 0x118

No device address match occurred on the last received packet

Bit n	umber		31 30 2	9 28	27	26	25	24 2	23 2	22	212	20 1	19 1	18 1	17 1	16 3	15 3	14 :	13	12	11 :	10	9	8	7	6	5	4 3	2	1	0
ID																															А
Rese	t 0x0000000		0 0 0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () 0	0	0
ID																															
А	RW EVENTS_DEVMISS							١	No	de	vice	ad	dre	ess	ma	tch	ос	cur	ree	d oı	n th	e la	əst	rec	eiv	ed					
								F	bac	ket																					
		NotGenerated	0					E	Eve	nt	not	gei	ner	ate	d																
		Generated	1					E	Eve	nt	gen	era	ted	I																	

6.11.13.17 EVENTS_RSSIEND

Address offset: 0x11C

Sampling of receive signal strength complete

A new RSSI sample is ready for readout from the RADIO.RSSISAMPLE register

Bit n	umber		31 3	0 29	9 2	8 27	72	6 2	5 24	1 23	22	2 2 1	L 20	0 1	91	81	71	61	.5 1	14 :	13 :	12 :	11	10	9	8	7	6	5	4	3	2	1 0
ID																																	A
Rese	t 0x0000000		0 0) 0	0	0 () (0 0	0	0	0	0	0) () () () ()	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																																	
А	RW EVENTS_RSSIEND									Sa	mp	olin	g o	of re	ece	ive	sig	na	l st	rer	ıgtł	n co	om	ple	te								
												w R								for	rea	do	ut f	froi	n t	he							
										R/	۱DA	O.R	SS	ISA	M	PLE	reg	gist	ter														
		NotGenerated	0							Εv	en	t no	ot g	gen	era	te	d																
		Generated	1							Εv	en	t ge	ene	erat	ted																		

6.11.13.18 EVENTS_BCMATCH

Address offset: 0x128

Bit counter reached bit count value

Bit counter value is specified in the RADIO.BCC register



Bit n	umber		313	0 29	28	27	26	25	24 2	23 2	222	212	01	9 1	8 1 [°]	7 1	5 1!	514	4 1	31	2 1:	1 10	9 (8	7	6	5	4	3 2	2 :	1 (
ID																															A
Rese	t 0x0000000		0 (0 0	0	0	0	0	0	0	0	0 0) () (0) (0	0) () () 0	0	0	0	0	0	0	0	0 () (0 0
ID																															
А	RW EVENTS_BCMATCH								I	Bit o	τοι	unte	r re	ach	ed	bit	со	unt	t va	lue											
									I	Bit o	τοι	unte	r va	lue	is	spe	cifi	ed	in t	he	RA	DIC).BC	CC r	egis	ter					
		NotGenerated	0						I	Eve	nt i	not	ger	era	tec	ł															
		Generated	1						I	Eve	nt g	gene	erat	ed																	

6.11.13.19 EVENTS_CRCOK

Address offset: 0x130

Packet received with CRC ok

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_CRCOK			Packet received with CRC ok
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.20 EVENTS_CRCERROR

Address offset: 0x134

Packet received with CRC error

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_CRCERROR			Packet received with CRC error
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.21 EVENTS_TXREADY

Address offset: 0x154

RADIO has ramped up and is ready to be started TX path

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_TXREADY			RADIO has ramped up and is ready to be started TX path
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.22 EVENTS_RXREADY

Address offset: 0x158



RADIO has ramped up and is ready to be started RX path

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_RXREADY			RADIO has ramped up and is ready to be started RX path
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.11.13.23 EVENTS_PHYEND

Address offset: 0x16C

Generated when last bit is sent on air, or received from air

Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_PHYEND			Generated when last bit is sent on air, or received from air
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.11.13.24 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				UTSR H GFEDCBA
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
A	RW READY_START			Shortcut between event READY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW END_DISABLE			Shortcut between event END and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
С	RW DISABLED_TXEN			Shortcut between event DISABLED and task TXEN
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
D	RW DISABLED_RXEN			Shortcut between event DISABLED and task RXEN
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Е	RW ADDRESS_RSSISTART			Shortcut between event ADDRESS and task RSSISTART
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
F	RW END_START			Shortcut between event END and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
G	RW ADDRESS_BCSTART			Shortcut between event ADDRESS and task BCSTART
		Disabled	0	Disable shortcut



Bit r	number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				UTSR H GFEDCBA
Res	et 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Enabled	1	Enable shortcut
н	RW DISABLED_RSSISTOP			Shortcut between event DISABLED and task RSSISTOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
R	RW TXREADY_START			Shortcut between event TXREADY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
S	RW RXREADY_START			Shortcut between event RXREADY and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Т	RW PHYEND_DISABLE			Shortcut between event PHYEND and task DISABLE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
U	RW PHYEND_START			Shortcut between event PHYEND and task START
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.11.13.25 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31	30 2	29 2	28 2	72	6 2!	5 2	24 2	3	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3 2	2 1	LO
ID						Z	2					U	т								L	K		I.			н	G	F	E	D	CE	3 A
Rese	et 0x0000000		0	0	0	0 0) () () (0 (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0
А	RW READY									٧	Vri	ite	'1' t	:0 6	ena	ble	e int	er	up	: fo	r ev	ven	t R	EAC	ΟY								
		Set	1							E	ina	able	e																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		
		Enabled	1							F	Rea	ad:	Ena	ble	ed																		
В	RW ADDRESS									٧	Vri	ite	'1' t	:0 6	ena	ble	e int	er	up	: fo	re	ven	t A	DD	RES	SS							
		Set	1							E	ina	able	е																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		
		Enabled	1							F	Rea	ad:	Ena	ble	ed																		
С	RW PAYLOAD									٧	Vri	ite	'1' t	:0 @	ena	ble	int	er	up	fo	re	ven	t P/	AYL	OA	D							
		Set	1							E	ina	able	е																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		
		Enabled	1							F	Rea	ad:	Ena	ble	ed																		
D	RW END									٧	Vri	ite	'1' t	:0 6	ena	ble	int	er	up	fo	re	ven	t El	ND									
		Set	1							E	ina	able	е																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		
		Enabled	1							F	Rea	ad:	Ena	ble	ed																		
Е	RW DISABLED									۷	Vri	ite	'1' t	:0 6	ena	ble	int	er	up	fo	re	ven	t D	ISA	BLI	ED							
		Set	1							E	ina	able	e																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		
		Enabled	1							F	Rea	ad:	Ena	ble	ed																		
F	RW DEVMATCH									٧	Vri	ite	'1' t	:0 6	ena	ble	int	er	up	fo	re	ven	t D	EVI	MA	TCI	H						
		Set	1							E	ina	able	е																				
		Disabled	0							F	Rea	ad:	Dis	abl	led																		



Bit r	number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			Z	UT LKIHGFEDCBA
Res	et 0x0000000		0 0 0 0 0	
		Enabled	1	Read: Enabled
G	RW DEVMISS			Write '1' to enable interrupt for event DEVMISS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW RSSIEND			Write '1' to enable interrupt for event RSSIEND
				A new RSSI sample is ready for readout from the
				RADIO.RSSISAMPLE register
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW BCMATCH			Write '1' to enable interrupt for event BCMATCH
				Bit counter value is specified in the RADIO.BCC register
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
к	RW CRCOK			Write '1' to enable interrupt for event CRCOK
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW CRCERROR			Write '1' to enable interrupt for event CRCERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
т	RW TXREADY			Write '1' to enable interrupt for event TXREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
U	RW RXREADY			Write '1' to enable interrupt for event RXREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Z	RW PHYEND			Write '1' to enable interrupt for event PHYEND
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.11.13.26 INTENCLR

Address offset: 0x308

Disable interrupt

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	2 1 0
ID	Z UT LKIHGFEDO	СВА
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	000
ID Acce Field Value ID		
A RW READY	Write '1' to disable interrupt for event READY	
Clear	1 Disable	



Bit n	umber		31 30 29 28 2	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				ZUT LKIHGFEDCB
Rese	et 0x0000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
D	Acce Field	Value ID	Value	Description
		Enabled	1	Read: Enabled
3	RW ADDRESS			Write '1' to disable interrupt for event ADDRESS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
2	RW PAYLOAD			Write '1' to disable interrupt for event PAYLOAD
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ξ	RW DISABLED			Write '1' to disable interrupt for event DISABLED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW DEVMATCH			Write '1' to disable interrupt for event DEVMATCH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
3	RW DEVMISS			Write '1' to disable interrupt for event DEVMISS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW RSSIEND			Write '1' to disable interrupt for event RSSIEND
				A new RSSI sample is ready for readout from the
				RADIO.RSSISAMPLE register
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
	RW BCMATCH	Endored	-	Write '1' to disable interrupt for event BCMATCH
	Itw beinaren			when I to disable methop: for event between
				Bit counter value is specified in the RADIO.BCC register
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
K	RW CRCOK			Write '1' to disable interrupt for event CRCOK
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
-	RW CRCERROR			Write '1' to disable interrupt for event CRCERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Г	RW TXREADY			Write '1' to disable interrupt for event TXREADY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW RXREADY			Write '1' to disable interrupt for event RXREADY



Bit number		31 30 29 28 27	7 26 25 24 23 22 21	L 20 19 18 17	7 16 15 14	13 12 1	1 10 9	₹8	76	54	3 2	2 1 0
ID		Z	2 U T			LΚ	T		ΗG	FΕ	DO	ВΑ
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0	0000	000	000	0 0 0	0 0	0 0	0 0	0 0	000
ID Acce Field												
	Disabled	0	Read: D	isabled								
	Enabled	1	Read: Er	nabled								
Z RW PHYEND			Write '1	' to disable i	nterrupt fo	r event	PHYE	ND				
	Clear	1	Disable									
	Disabled	0	Read: D	isabled								
	Enabled	1	Read: Er	nabled								

6.11.13.27 CRCSTATUS

Address offset: 0x400

CRC status

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A R CRCSTATUS		CRC status of packet received
CRCError	0	Packet received with CRC error
CRCOk	1	Packet received with CRC ok

6.11.13.28 RXMATCH

Address offset: 0x408

Received address

Bit n	umbe	er	31 30 2	9 28 2	7 26 2	25 24	1 23 2	22 23	1 20	19 1	.8 17	7 16	15 1	14 1	3 12	11	10 9	8	7	6	5 4	43	2	1 0
ID																							А	A A
Rese	et OxO	0000000	000	000	0 0	0 0	0	0 0	0	0	0 0	0	0	0 0	0	0	0 0	0	0	0	0 0	0 0	0	0 0
ID																								
А	R	RXMATCH					Rec	eive	d ad	dres	is													

Logical address of which previous packet was received

6.11.13.29 RXCRC

Address offset: 0x40C

CRC field of previously received packet

Bit n	umb	er				31	30 29	9 28	27	26 2	5 24	23	22 2	21 2	0 19	18	17 1	16 1	5 14	13	12	11 1	.0 9	8	7	6	5	4	3 2	2 1	1 0
ID												А	A,	A A	A A	А	A	ΑА	A	А	А	A.	4 Α	A	A	А	А	A	A	4 A	A A
Rese	t Ox	000	00000			0	0 0	0	0	0 0	0	0	0	0 0	0 0	0	0	0 0	0	0	0	0	0 0	0	0	0	0	0	0 0) (0 0
ID																															
А	R	F	XCRC									CR	C fie	ld c	of pro	evio	usly	rec	eive	ed p	ack	et									

CRC field of previously received packet

6.11.13.30 DAI

Address offset: 0x410



Device address match index

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field	Value Description
A R DAI	Device address match index

Index (n) of device address, see DAB[n] and DAP[n], that got an address match

6.11.13.31 PDUSTAT

Address offset: 0x414

Payload status

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A R PDUSTAT		Status on payload length vs. PCNF1.MAXLEN
LessThan	0	Payload less than PCNF1.MAXLEN
GreaterThan	1	Payload greater than PCNF1.MAXLEN

6.11.13.32 PACKETPTR

Address offset: 0x504

Packet pointer

Bit n	umber	Imber			0 29	9 28	8 27	7 26	5 25	5 24	1 23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
ID			A	4	A A	A	A	A	А	А	A	А	A	A	А	A	А	A	А	А	А	А	A	А	А	А	A	А	А	A	А	A	A	A
Rese	t 0x0000000		C) (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ID																																		
А	RW PACKETPTR										Pa	cke	et p	oin	ter																			
											Pa	cke	et a	ddr	ress	to	be	use	ed f	or	the	nex	kt t	ran	sm	issi	on	or						
											re	сер	tio	n. \	Wh	ent	trar	nsm	nitti	ng,	the	e pa	ick	et p	oir	nteo	d to	o by	,					
											th	is a	ddı	ress	s wi	ill b	e ti	ran	smi	tte	d ai	nd ۱	wh	en r	rec	eivi	ng,	, th	e					
											re	ceiv	ved	ра	cke	t w	/ill k	oe v	writ	ter	t to	thi	s a	ddr	ess	. Tł	nis	adc	Ires	SS				
											is	a b	yte	ali	gne	d F	RAN	1 a d	ddre	ess.	Se	e tł	ne i	mer	no	ry c	ha	pte	r fo	or				
											de	tai	ls a	bοι	ut v	vhi	ch r	ner	nor	ies	are	e av	ilal	ble	for	Eas	syD	MA	۹.					

6.11.13.33 FREQUENCY

Address offset: 0x508 Frequency



																				_
Bit r	number		31 30 29 28 27 2	26 25 24	4 23 22 21 20	0 19 1	8 17 1	6 15 :	14 13	3 12	11 10	09	8	7	6	54	3	2	1	C
ID													В		A	A A	A	А	А	A
Res	et 0x00000002		0 0 0 0 0	000	0000	000	00	0 0	0 0	0	0 0	0	0	0	0	0 0	0	0	1	C
ID																				
A	RW FREQUENCY		[0100]		Radio chan	nnel fre	equen	су												
					Frequency	= 240	0 + FR	EQUE	ENCY	(Mł	Hz)									
в	RW MAP				Channel m	ap sel	ection	1												
		Default	0		Channel m	ap bet	tween	2400) MH	Z 2	2500	MH	z							
					Frequency	= 240	0 + FR	EQUE	ENCY	(Mł	Hz)									
		Low	1		Channel m	ap bet	tween	2360	MH	Z 2	2460	MH	z							
					Frequency	= 236	0 + FR	EQUE	ENCY	(Mł	⊣z)									

6.11.13.34 TXPOWER

Address offset: 0x50C

Output power

Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	4 3 2 1 0
ID				АААА	ААААА
Res	et 0x0000000		0 0 0 0 0 0 0		0 0 0 0
ID					
А	RW TXPOWER			RADIO output power	
				Output power in number of dBm, i.e. if the value -20 is	
				specified the output power will be set to -20 dBm.	
		Pos4dBm	0x4	+4 dBm	
		Pos3dBm	0x3	+3 dBm	
		0dBm	0x0	0 dBm	
		Neg4dBm	0xFC	-4 dBm	
		Neg8dBm	0xF8	-8 dBm	
		Neg12dBm	0xF4	-12 dBm	
		Neg16dBm	0xF0	-16 dBm	
		Neg20dBm	0xEC	-20 dBm	
		Neg30dBm	0xE2	-40 dBm	Deprecated
		Neg40dBm	0xD8	-40 dBm	

6.11.13.35 MODE

Address offset: 0x510

Data rate and modulation

Bit number		31 30 29 28 27	26 25 2	24 23	22 21	. 20	19 1	181	71	6 15	5 14	13	12	11	10	9 E	37	6	5	4	3	2	1 0
ID																					А	A	A A
Reset 0x0000000		0 0 0 0 0	0 0	0 0	0 0	0	0	0 (0 0) 0	0	0	0	0	0	0 0) ()	0	0	0	0	0	0 0
A RW MODE				Ra	dio da	ata r	rate	and	lmo	odul	lati	on s	etti	ing.	The	rac	dio	sup	por	ts			
				fre	quen	cy-s	hift	key	ing	(FSł	K) n	nod	ulat	ion	ı.								
	Nrf_1Mbit	0		11	/bps	Nor	dic p	orop	orie	tary	/ ra	dio	moo	de									
	Nrf_2Mbit	1		21	/bps	Nor	dic p	orop	orie	tary	/ ra	dio	moo	de									
	Ble_1Mbit	3		11	/bps	BLE																	
	Ble_2Mbit	4		21	/bps	BLE																	



6.11.13.36 PCNF0

Address offset: 0x514

Packet configuration register 0

Bit n	umber		33	1 30 2	29	28 2	27 2	26 2	52	24	23 2	22	21	20	19	18	17	16	5 15	51	4 13	3 12	11	10	9	8	7	6	54	3	2	1	0
ID								I I	H	н				F	E	E	E	E								С				А	А	А	А
Rese	et 0x0000000		0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0	0	0	C	0	0	0	0	0	0	0	0	0 0	0	0	0	0
ID											Des																						
А	RW LFLEN										Len	gtł	n or	n ai	ir o	of L	EN	GTI	H fi	elc	l in	nun	nbe	er o	f bi	ts							
С	RW SOLEN										Len	gtł	וס ר	n ai	ir o	of S	0 fi	eld	in	nu	mb	er c	of b	yte	S								
Е	RW S1LEN										Len	gtł	וס ר	n ai	ir o	of S	1 fi	eld	in	nu	mb	er c	of b	its									
F	RW S1INCL										Incl	ud	e o	r e	xcl	ude	e Si	1 fi	eld	in	RA	M											
		Automatic	0								Incl	ud	e S	1 fi	ielo	d in	RA	M	on	ly i	f S1	LEN	>	0									
		Include	1								Alw	ay	s in	clu	ıde	S1	fie	ld	in I	RAI	ni N	nde	pen	ıde	nt c	of S	1LE	N					
н	RW PLEN										Len	gtł	n of	pr	ea	mb	le (on	air.	De	ecis	ion	poi	nt:	TAS	SKS	_ST/	ART	task				
		8bit	0								8-bi	it p	orea	am	ble	•																	
		16bit	1								16-l	bit	pre	ear	nbl	le																	
L	RW CRCINC										Indi	ica	tes	if l	LEN	IGT	'H f	fiel	d c	on	tain	s CF	RC	or r	ot								
		Exclude	0								LEN	IG1	ΓH (doe	es r	not	со	nta	in	CR	С												
		Include	1								LEN	IG1	rH i	ncl	lud	es	CR	С															

6.11.13.37 PCNF1

Address offset: 0x518

Packet configuration register 1

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			E	
	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW MAXLEN		[0255]	Maximum length of packet payload. If the packet payload is
				larger than MAXLEN, the radio will truncate the payload to
				MAXLEN.
В	RW STATLEN		[0255]	Static length in number of bytes
				The static length parameter is added to the total length
				of the payload when sending and receiving packets, e.g. if
				the static length is set to N the radio will receive or send N
				bytes more than what is defined in the LENGTH field of the
				packet.
С	RW BALEN		[24]	Base address length in number of bytes
				The address field is composed of the base address and the
				one byte long address prefix, e.g. set BALEN=2 to get a total
				address of 3 bytes.
D	RW ENDIAN			On-air endianness of packet, this applies to the S0, LENGTH,
				S1, and the PAYLOAD fields.
		Little	0	Least significant bit on air first
		Big	1	Most significant bit on air first
Е	RW WHITEEN			Enable or disable packet whitening
		Disabled	0	Disable
		Enabled	1	Enable



6.11.13.38 BASE0

Address offset: 0x51C

Base address 0

ID A	
ID A A A A A A A A A A A A A A A A A A A	00000
	AAAAA
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	543210

6.11.13.39 BASE1

Address offset: 0x520

Base address 1

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
A	RW BASE1	Base address 1

6.11.13.40 PREFIX0

Address offset: 0x524

Prefixes bytes for logical addresses 0-3

ID D <thd< th=""> <thd< th=""> <thd< th=""></thd<></thd<></thd<>	
ID D D D D D D D D C C C C C C B B B B B	0 0 0 0 0 0 0 0
	ВААААААА
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9	87654321

6.11.13.41 PREFIX1

Address offset: 0x528

Prefixes bytes for logical addresses 4-7

Reset 0x00000000 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Reset 0x0000000 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID D D D D D D	D D C C C C C C C C B B B B B B B A A A A A
Bit number 31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

A-D RW AP[i] (i=4..7)

Address prefix i.

6.11.13.42 TXADDRESS

Address offset: 0x52C

Transmit address select



Bit n	umber	31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID			A A
Rese	t 0x0000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
A	RW TXADDRESS		Transmit address select

Logical address to be used when transmitting a packet

6.11.13.43 RXADDRESSES

Address offset: 0x530

Receive address select

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		Н G F E D C B A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A-H RW ADDR[i] (i=07)		Enable or disable reception on logical address i.
Disabled	0	Disable
Enabled	1	Enable

6.11.13.44 CRCCNF

Address offset: 0x534

CRC configuration

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				В В АА
Res	et 0x0000000		0 0 0 0 0 0 0	
ID				Description
А	RW LEN		[13]	CRC length in number of bytes
		Disabled	0	CRC length is zero and CRC calculation is disabled
		One	1	CRC length is one byte and CRC calculation is enabled
		Тwo	2	CRC length is two bytes and CRC calculation is enabled
		Three	3	CRC length is three bytes and CRC calculation is enabled
В	RW SKIPADDR			Include or exclude packet address field out of CRC
				calculation.
		Include	0	CRC calculation includes address field
		Skip	1	CRC calculation does not include address field. The CRC
				calculation will start at the first byte after the address.

6.11.13.45 CRCPOLY

Address offset: 0x538 CRC polynomial



Bit number		31 30 2	29 28	8 27	26 2	5 24	23 :	22 2	1 2	0 19	18	17 1	.6 1	5 14	13 3	L2 1	1 10	9	8	7	6 !	54	3	2	1
ID							A	A A	A A	A	А	A	Α Α	A	А	A A	A	А	А	A	A	A A	A	A	A
Reset 0x00000	00	0 0	0 0	0	0 0	0 (0	0 (0	0	0	0	0 0	0	0	0 0	0 (0	0	0	0	0 0	0	0	0
ID Acce Field																									
A RW CRC	POLY						CRO	Сро	lynd	omia	al														

Each term in the CRC polynomial is mapped to a bit in this register which index corresponds to the term's exponent. The least significant term/bit is hardwired internally to 1, and bit number 0 of the register content is ignored by the hardware. The following example is for an 8 bit CRC polynomial: $x8 + x7 + x3 + x2 + 1 = 1\ 1000\ 1101$.

6.11.13.46 CRCINIT

Address offset: 0x53C

CRC initial value

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value Description
A RW CRCINIT	CRC initial value

Initial value for CRC calculation

6.11.13.47 TIFS

Address offset: 0x544

Interframe spacing in μ s

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW TIFS	Interframe spacing in μ s.

Interframe space is the time interval between two consecutive packets. It is defined as the time, in microseconds, from the end of the last bit of the previous

packet to the start of the first bit of the subsequent packet.

6.11.13.48 RSSISAMPLE

Address offset: 0x548 RSSI sample



Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A R RSSISAMPLE	[0127]	RSSI sample.
		RSSI sample result. The value of this register is read as a

positive value while the actual received signal strength is a negative value. Actual received signal strength is therefore as follows: received signal strength = -A dBm.

6.11.13.49 STATE

Address offset: 0x550

Current radio state

Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			АААА
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R STATE			Current radio state
	Disabled	0	RADIO is in the Disabled state
	RxRu	1	RADIO is in the RXRU state
	RxIdle	2	RADIO is in the RXIDLE state
	Rx	3	RADIO is in the RX state
	RxDisable	4	RADIO is in the RXDISABLED state
	TxRu	9	RADIO is in the TXRU state
	TxIdle	10	RADIO is in the TXIDLE state
	Тх	11	RADIO is in the TX state
	TxDisable	12	RADIO is in the TXDISABLED state

6.11.13.50 DATAWHITEIV

Address offset: 0x554

Data whitening initial value

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A
Rese	t 0x00000040	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW DATAWHITEIV	Data whitening initial value. Bit 6 is hardwired to '1', writing
		'0' to it has no effect, and it will always be read back and
		used by the device as '1'.
		Bit 0 corresponds to Position 6 of the LSFR, Bit 1 to Position
		5, etc.

6.11.13.51 BCC

Address offset: 0x560 Bit counter compare



ID Reset 0x0000000		A A A A A A A A A A A A A A A A A A A
ID Acce Field	Value ID	Value Description

Bit counter compare register

6.11.13.52 DAB[n] (n=0..7)

Address offset: $0x600 + (n \times 0x4)$

Device address base segment n

Bit n	umber	31	30	29	28	27 :	26	25	24	23	22	21	20 1	91	8 17	16	15	14	13	12 1	11 10) 9	8	7	6	5	4	3	2 1	L O
ID		А	А	A	А	A	A	А	А	A	A	А	A	4 <i>4</i>	A A	А	А	А	A	A	A A	A	А	A	А	А	А	A	4 <i>4</i>	A A
Rese	t 0x0000000	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0 () (0 0
ID										De																				
A	RW DAB									De	vice	e ad	dre	ss b	ase	seg	me	nt r	۱											

6.11.13.53 DAP[n] (n=0..7)

Address offset: 0x620 + (n × 0x4)

Device address prefix n

A RW DAP		Device address prefix r	n		
ID Acce Field					
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0	0 0 0 0 0 0		0 0 0 0 0 0
ID			ААААА	АААААА	A A A A A A
Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 1	.6 15 14 13 12 1	1109876	5 4 3 2 1 0

А RW DAP

6.11.13.54 DACNF

Address offset: 0x640

Device address match configuration

Bit n	umber		31 30 29 28 27	26 25 24	23 22 23	1 20	19 18	3 17 3	16 1	L5 14	131	2 11	1 10	9	8	7	6	54	3	2	1 C
ID										ΡO	N	ЛL	K	J	T	н	G	FΕ	D	С	ΒA
Rese	t 0x0000000		0 0 0 0 0	0 0 0	000	0	0 0	0	0	0 0	0	0 0	0	0	0	0	0	0 0	0	0	0 0
ID					Descript																
A-H	RW ENA[i] (i=07)				Enable o	or di	sable	devi	ice a	addr	ess n	atcl	hing	usi	ing	dev	ice				
					address	i															
		Disabled	0		Disable	d															
		Enabled	1		Enabled	ł															
I-P	RW TXADD[i] (i=07)				TxAdd fo	or de	evice	addr	ress	i											

6.11.13.55 MODECNF0

Address offset: 0x650

Radio mode configuration register 0



Bit nu	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СС А
Reset	t 0x00000200		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 0 0 0
A	RW RU			Radio ramp-up time
		Default	0	Default ramp-up time (tRXEN and tTXEN), compatible with
				firmware written for nRF51
		Fast	1	Fast ramp-up (tRXEN, FAST and tTXEN, FAST), see electrical
				specifications for more information
				When enabled, TIFS is not enforced by hardware and
				software needs to control when to turn on the Radio
С	RW DTX			Default TX value
				Specifies what the RADIO will transmit when it is not
				started, i.e. between:
				RADIO.EVENTS_READY and RADIO.TASKS_START
				RADIO.EVENTS_END and RADIO.TASKS_START
				RADIO.EVENTS_END and RADIO.EVENTS_DISABLED
		B1	0	Transmit '1'
		BO	1	Transmit '0'
		Center	2	Transmit center frequency
				When tuning the crystal for center frequency, the RADIO
				must be set in DTX = Center mode to be able to achieve the
				expected accuracy

6.11.13.56 POWER

Address offset: 0xFFC

Peripheral power control

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0			
ID		А			
Reset 0x0000001	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0			
ID Acce Field Value ID		Description			
A RW POWER	Peripheral power control. The peripheral and its registers				
		will be reset to its initial state by switching the peripheral			
		off and then back on again.			
Disabled	0	Peripheral is powered off			
Enabled	1 Peripheral is powered on				



6.11.14 Electrical specification

6.11.14.1 General radio characteristics

Symbol	Description	Min.	Тур.	Max.	Units
f _{OP}	Operating frequencies	2360		2500	MHz
f _{PLL,CH,SP}	PLL channel spacing		1		MHz
f _{DELTA,1M}	Frequency deviation @ 1 Mbps		±170		kHz
f _{DELTA,BLE,1M}	Frequency deviation @ BLE 1 Mbps		±250		kHz
f _{DELTA,2M}	Frequency deviation @ 2 Mbps		±320		kHz
f _{DELTA,BLE,2M}	Frequency deviation @ BLE 2 Mbps		±500		kHz
fsk _{BPS}	On-the-air data rate	1000		2000	kbps

6.11.14.2 Radio current consumption (transmitter)

K,PLUS4dBM,DCDCTX only run current (DC/DC, 3 V) P_{RF} = +4 dBmK,PLUS4dBMTX only run current P_{RF} = +4 dBmX,0dBM,DCDCTX only run current (DC/DC, 3 V) P_{RF} = 0 dBmX,0dBMTX only run current P_{RF} = 0 dBmX,0dBM,DCDCTX only run current DC/DC, 3 V P_{RF} = -4 dBmX,MINUS4dBM,DCDCTX only run current P_{RF} = -4 dBmX,MINUS4dBM,DCDCTX only run current P_{RF} = -4 dBmX,MINUS4dBM,DCDCTX only run current DC/DC, 3 V P_{RF} = -8 dBm	7.0	mA
X,OdBM,DCDC TX only run current (DC/DC, 3 V)P _{RF} = 0 dBm X,OdBM TX only run current P _{RF} = 0 dBm X,MINUS4dBM,DCDC TX only run current DC/DC, 3 V P _{RF} = -4 dBm TX only run current P _{RF} = -4 dBm	15.4	IIIA
X,OdBM TX only run current P _{RF} = 0 dBm X,MINUS4dBM,DCDC TX only run current DC/DC, 3 V P _{RF} = -4 dBm X,MINUS4dBM TX only run current P _{RF} = -4 dBm	15.4	mA
x,MINUS4dBM,DCDC TX only run current DC/DC, 3 V P _{RF} = -4 dBm x,MINUS4dBM TX only run current P _{RF} = -4 dBm	4.6	mA
$X_{X,MINUS4dBM}$ TX only run current P _{RF} = -4 dBm	10.1	mA
	3.6	mA
$_{\rm X,MINUS8dBM,DCDC}$ TX only run current DC/DC, 3 V P _{RF} = -8 dBm	7.8	mA
	3.2	mA
_{X,MINUS8dBM} TX only run current P _{RF} = -8 dBm	6.8	mA
$_{X,MINUS12dBM,DCDC}$ TX only run current DC/DC, 3 V P _{RF} = -12 dBm	2.9	mA
x,MINUS12dBM TX only run current P _{RF} = -12 dBm	6.2	mA
$_{X,MINUS16dBM,DCDC}$ TX only run current DC/DC, 3 V P _{RF} = -16 dBm	2.7	mA
X,MINUS16dBM TX only run current P _{RF} = -16 dBm	5.7	mA
$_{X,MINUS20dBM,DCDC}$ TX only run current DC/DC, 3 V P_{RF} = -20 dBm	2.5	mA
x,MINUS20dBM TX only run current P _{RF} = -20 dBm	5.4	mA
$_{X,MINUS40dBM,DCDC}$ TX only run current DC/DC, 3 V P _{RF} = -40 dBm	2.1	mA
x,MINUS40dBM TX only run current P _{RF} = -40 dBm	4.3	mA
TX start-up current DC/DC, 3 V, P _{RF} = 4 dBm		 mA
TART,TX TX start-up current, P _{RF} = 4 dBm		

6.11.14.3 Radio current consumption (Receiver)

Symbol	Description	Min.	Тур.	Max.	Units
I _{RX,1M,DCDC}	RX only run current (DC/DC, 3 V) 1 Mbps/1 Mbps BLE		4.6		mA
I _{RX,1M}	RX only run current (LDO, 3 V) 1 Mbps/1 Mbps BLE		10.0		mA
I _{RX,2M,DCDC}	RX only run current (DC/DC, 3 V) 2 Mbps/2 Mbps BLE		5.2		mA
I _{RX,2M}	RX only run current (LDO, 3 V) 2 Mbps/2 Mbps BLE		11.2		mA
ISTART, RX, 1M, DCDC	RX start-up current (DC/DC, 3 V) 1 Mbps/1 Mbps BLE		3.5		mA
I _{START,RX,1M}	RX start-up current 1 Mbps/1 Mbps BLE		6.7		mA

6.11.14.4 Transmitter specification

Symbol	Description	Min.	Тур.	Max.	Units
P _{RF}	Maximum output power		4.0		dBm
P _{RFC}	RF power control range		24		dB
P _{RFCR}	RF power accuracy			±4	dB



Symbol	Description	Min.	Тур.	Max.	Units
P _{RF1,1}	1st Adjacent Channel Transmit Power 1 MHz (1 Mbps)		-25		dBc
P _{RF2,1}	2nd Adjacent Channel Transmit Power 2 MHz (1 Mbps)		-50		dBc
P _{RF1,2}	1st Adjacent Channel Transmit Power 2 MHz (2 Mbps)		-25		dBc
P _{RF2,2}	2nd Adjacent Channel Transmit Power 4 MHz (2 Mbps)		-50		dBc

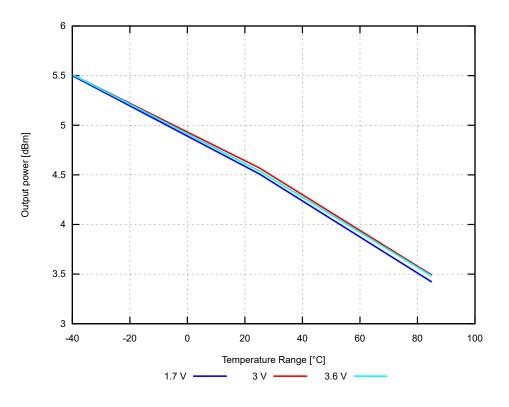


Figure 53: Output power, 1 Mbps Bluetooth low energy mode, at maximum TXPOWER setting (typical values)



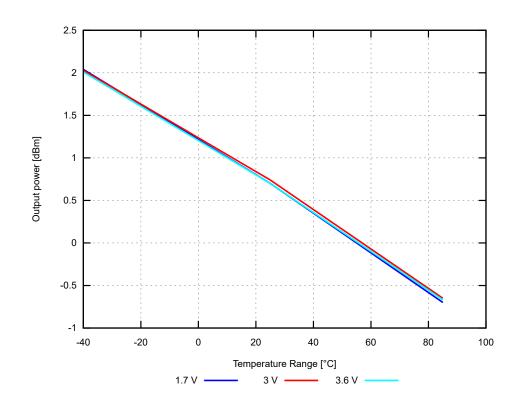


Figure 54: Output power, 1 Mbps Bluetooth low energy mode, at 0 dBm TXPOWER setting (typical values)

6.11.14.5 Receiver operation


Symbol	Description	Min.	Тур.	Max.	Units
P _{RX,MAX}	Maximum received signal strength at < 0.1% PER		0		dBm
P _{SENS,IT,1M}	Sensitivity, 1 Mbps nRF mode ideal transmitter ¹⁴		-94		dBm
P _{SENS,IT,2M}	Sensitivity, 2 Mbps nRF mode ideal transmitter ¹⁴		-91		dBm
P _{SENS,IT,SP,1M,BLE}	Sensitivity, 1 Mbps BLE ideal transmitter, packet length \leq 37		-97		dBm
	bytes BER=1E-3 ¹⁵				
P _{SENS,IT,LP,1M,BLE}	Sensitivity, 1 Mbps BLE ideal transmitter, packet length \ge 128		-96		dBm
	bytes BER=1E-4 ¹⁶				
P _{SENS,IT,SP,2M,BLE}	Sensitivity, 2 Mbps BLE ideal transmitter, packet length \leq 37		-94		dBm
	bytes				



¹⁴ Typical sensitivity applies when ADDR0 is used for receiver address correlation. When ADDR[1...7] are used for receiver address correlation, the typical sensitivity for this mode is degraded by 3 dB.

 ¹⁵ As defined in the Bluetooth Core Specification v4.0 Volume 6: Core System Package (Low Energy Controller Volume).

¹⁶ Equivalent BER limit < 10E-04.

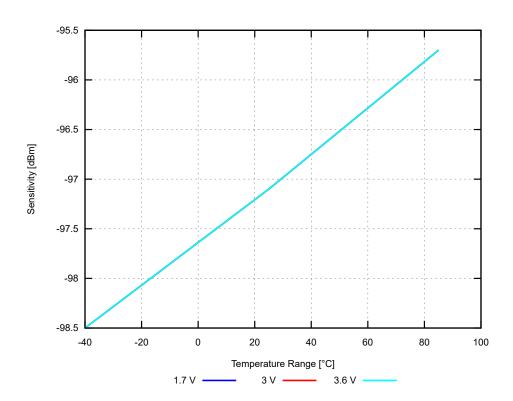



6.11.14.6 RX selectivity

RX selectivity with equal modulation on interfering signal¹⁷

Symbol	Description	Min.	Тур.	Max.	Units
C/I _{1M,co-channel}	1Mbps mode, co-channel interference		9		dB
C/I _{1M,-1MHz}	1 Mbps mode, Adjacent (-1 MHz) interference		-2		dB
C/I _{1M,+1MHz}	1 Mbps mode, Adjacent (+1 MHz) interference		-10		dB
C/I _{1M,-2MHz}	1 Mbps mode, Adjacent (-2 MHz) interference		-19		dB
C/I _{1M,+2MHz}	1 Mbps mode, Adjacent (+2 MHz) interference		-42		dB
C/I _{1M,-3MHz}	1 Mbps mode, Adjacent (-3 MHz) interference		-38		dB
C/I _{1M,+3MHz}	1 Mbps mode, Adjacent (+3 MHz) interference		-48		dB
C/I _{1M,±6MHz}	1 Mbps mode, Adjacent (≥6 MHz) interference		-50		dB
C/I _{1MBLE,co-channel}	1 Mbps BLE mode, co-channel interference		6		dB
C/I _{1MBLE,-1MHz}	1 Mbps BLE mode, Adjacent (-1 MHz) interference		-2		dB
C/I _{1MBLE,+1MHz}	1 Mbps BLE mode, Adjacent (+1 MHz) interference		-9		dB
C/I _{1MBLE,-2MHz}	1 Mbps BLE mode, Adjacent (-2 MHz) interference		-22		dB
C/I _{1MBLE,+2MHz}	1 Mbps BLE mode, Adjacent (+2 MHz) interference		-46		dB
C/I _{1MBLE,>3MHz}	1 Mbps BLE mode, Adjacent (≥3 MHz) interference		-50		dB
C/I _{1MBLE,image}	Image frequency interference		-22		dB
C/I _{1MBLE,image,1MHz}	Adjacent (1 MHz) interference to in-band image frequency		-35		dB
C/I _{2M,co-channel}	2 Mbps mode, co-channel interference		10		dB
C/I _{2M,-2MHz}	2 Mbps mode, Adjacent (-2 MHz) interference		6		dB
C/I _{2M,+2MHz}	2 Mbps mode, Adjacent (+2 MHz) interference		-14		dB
C/I _{2M,-4MHz}	2 Mbps mode, Adjacent (-4 MHz) interference		-20		dB
C/I _{2M,+4MHz}	2 Mbps mode, Adjacent (+4 MHz) interference		-44		dB

¹⁷ Desired signal level at PIN = -67 dBm. One interferer is used, having equal modulation as the desired signal. The input power of the interferer where the sensitivity equals BER = 0.1% is presented.



Symbol	Description	Min.	Тур.	Max.	Units
C/I _{2M,-6MHz}	2 Mbps mode, Adjacent (-6 MHz) interference		-42		dB
C/I _{2M,+6MHz}	2 Mbps mode, Adjacent (+6 MHz) interference		-47		dB
C/I _{2M,≥12MHz}	2 Mbps mode, Adjacent (≥12 MHz) interference		-52		dB
C/I _{2MBLE,co-channel}	2 Mbps BLE mode, co-channel interference		6		dB
C/I _{2MBLE,-2MHz}	2 Mbps BLE mode, Adjacent (-2 MHz) interference		-2		dB
C/I _{2MBLE,+2MHz}	2 Mbps BLE mode, Adjacent (+2 MHz) interference		-12		dB
C/I _{2MBLE,-4MHz}	2 Mbps BLE mode, Adjacent (-4 MHz) interference		-22		dB
C/I _{2MBLE,+4MHz}	2 Mbps BLE mode, Adjacent (+4 MHz) interference		-46		dB
C/I _{2MBLE,≥6MHz}	2 Mbps BLE mode, Adjacent (≥6 MHz) interference		-50		dB
C/I _{2MBLE,image}	Image frequency interference		-29		dB
C/I _{2MBLE,image, 2MHz}	Adjacent (2 MHz) interference to in-band image frequency		-44		dB

6.11.14.7 RX intermodulation

RX intermodulation. Desired signal level at PIN = -64 dBm. Two interferers with equal input power are used. The interferer closest in frequency is not modulated, the other interferer is modulated equal with the desired signal. The input power of the interferers where the sensitivity equals BER = 0.1% is presented.

Symbol	Description	Min.	Тур.	Max.	Units
P _{IMD,5TH,1M}	IMD performance, 1 Mbps, 5th offset channel, packet length		-33		dBm
	≤ 37 bytes				
PIMD,5TH,1M,BLE	IMD performance, BLE 1 Mbps, 5th offset channel, packet		-30		dBm
	length ≤ 37 bytes				
PIMD,5TH,2M	IMD performance, 2 Mbps, 5th offset channel, packet length		-33		dBm
	≤ 37 bytes				
PIMD,5TH,2M,BLE	IMD performance, BLE 2 Mbps, 5th offset channel, packet		-31		dBm
	length ≤ 37 bytes				

6.11.14.8 Radio timing

Symbol	Description	Min.	Тур.	Max.	Units
t _{TXEN,BLE,1M}	Time between TXEN task and READY event after channel		140		μs
t _{TXEN,BLE,1M} t _{TXEN,FAST,BLE,1M} t _{TXEN,FAST,BLE,1M} t _{TXDIS,BLE,1M} t _{TXDIS,BLE,1M} t _{RXEN,FAST,BLE,1M} t _{RXEN,FAST,BLE,1M} t _{RXDIS,BLE,1M} t _{RXDIS,BLE,2M}	FREQUENCY configured (1 Mbps BLE and 150 µs TIFS)				
t _{TXEN,FAST,BLE,1M}	Time between TXEN task and READY event after channel		40		μs
	FREQUENCY configured (1 Mbps BLE with fast ramp-up and				
	150 μs TIFS)				
t _{TXDIS,BLE,1M}	When in TX, delay between DISABLE task and DISABLED		6		μs
	event for MODE = Nrf_1Mbit and MODE = Ble_1Mbit				
t _{RXEN,BLE,1M}	Time between the RXEN task and READY event after channel		140		μs
	FREQUENCY configured (1 Mbps BLE)				
t _{RXEN,FAST,BLE,1M}	Time between the RXEN task and READY event after channel		40		μs
	FREQUENCY configured (1 Mbps BLE with fast ramp-up)				
t _{RXDIS,BLE,1M}	When in RX, delay between DISABLE task and DISABLED		0		μs
	event for MODE = Nrf_1Mbit and MODE = Ble_1Mbit				
t _{TXDIS,BLE,2M}	When in TX, delay between DISABLE task and DISABLED		4		μs
	event for MODE = Nrf_2Mbit and MODE = Ble_2Mbit				
t _{RXDIS,BLE,2M}	When in RX, delay between DISABLE task and DISABLED		0		μs
	event for MODE = Nrf_2Mbit and MODE = Ble_2Mbit				



6.11.14.9 Received signal strength indicator (RSSI) specifications

Symbol	Description	Min.	Тур.	Max.	Units
RSSI _{ACC}	RSSI accuracy ¹⁸		±2		dB
RSSI _{RESOLUTION}	RSSI resolution		1		dB
RSSI _{PERIOD}	RSSI sampling time from RSSI_START task		0.25		μs
RSSI _{SETTLE}	RSSI settling time after signal level change		15		μs

6.11.14.10 Jitter

Symbol	Description	Min.	Тур.	Max.	Units
t _{DISABLEDJITTER}	Jitter on DISABLED event relative to END event when		0.25		μs
	shortcut between END and DISABLE is enabled				
t _{READYJITTER}	Jitter on READY event relative to TXEN and RXEN task		0.25		μs

6.12 RNG — Random number generator

The Random number generator (RNG) generates true non-deterministic random numbers based on internal thermal noise that are suitable for cryptographic purposes. The RNG does not require a seed value.

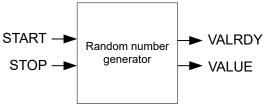


Figure 56: Random number generator

The RNG is started by triggering the START task and stopped by triggering the STOP task. When started, new random numbers are generated continuously and written to the VALUE register when ready. A VALRDY event is generated for every new random number that is written to the VALUE register. This means that after a VALRDY event is generated the CPU has the time until the next VALRDY event to read out the random number from the VALUE register before it is overwritten by a new random number.

6.12.1 Bias correction

A bias correction algorithm is employed on the internal bit stream to remove any bias toward '1' or '0'. The bits are then queued into an eight-bit register for parallel readout from the VALUE register.

It is possible to enable bias correction in the CONFIG register. This will result in slower value generation, but will ensure a statistically uniform distribution of the random values.

6.12.2 Speed

The time needed to generate one random byte of data is unpredictable, and may vary from one byte to the next. This is especially true when bias correction is enabled.

¹⁸ Valid range -90 to -20 dBm

6.12.3 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000D000	RNG	RNG	Random number genera	tor
			Table 56: Insta	nces
Register	Offset	Descrip	otion	
TASKS_START	0x000	Task sta	arting the random number gene	rator
TASKS_STOP	0x004	Task sto	opping the random number gen	erator
EVENTS_VALRDY	0x100	Event b	eing generated for every new ra	andom number written to the VALUE register
SHORTS	0x200	Shortcu	uts between local events and tas	iks
INTENSET	0x304	Enable	interrupt	
INTENCLR	0x308	Disable	interrupt	
CONFIG	0x504	Configu	uration register	
VALUE	0x508	Output	random number	

Table 57: Register overview

6.12.3.1 TASKS_START

Address offset: 0x000

Task starting the random number generator

Bit n	umber		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_START			Task starting the random number generator
		Trigger	1	Trigger task

6.12.3.2 TASKS_STOP

Address offset: 0x004

Task stopping the random number generator

Bit n	umber		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STOP			Task stopping the random number generator
		Trigger	1	Trigger task

6.12.3.3 EVENTS_VALRDY

Address offset: 0x100

Event being generated for every new random number written to the VALUE register



Bit n	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 1	6 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID				
А	RW EVENTS_VALRDY		Event being generated	for every new random number
			written to the VALUE r	egister
		NotGenerated	0 Event not generated	
		Generated	1 Event generated	

6.12.3.4 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW VALRDY_STOP			Shortcut between event VALRDY and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.12.3.5 INTENSET

Address offset: 0x304

Enable interrupt

	31 30 29	28 2	27 2	26 2	5 24	23	22	21	20 1	9 18	8 17	16	5 15	14	13 3	12 1	1 10	9	8	7	6	5 4	13	2	1 0
																									А
	0 0 0	0	0	0 0	0 0	0	0	0	0 0	0 0	0	0	0	0	0	0 0	0 0	0	0	0	0	0 (0 0	0	0 0
						W	rite	'1' 1	o ei	nab	le ir	nter	rup	t fo	r ev	ent	VAL	RDY	(
Set	1					En	abl	e																	
Disabled	0					Re	ad:	Dis	able	d															
Enabled	1					Re	ad:	Ena	ble	b															
	et Disabled	/alue ID Value iet 1 bisabled 0	/alue ID Value iet 1 bisabled 0	/alue ID Value iet 1 bisabled 0	/alue ID Value iet 1 Disabled O	/alue ID Value iet 1 Disabled O	/alue ID Value De V	/alue ID Value Descr Write iet 1 Enabl Disabled O Read:	/alue ID Value Description value 10 Value Enable 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Value ID Value Description Write '1' to en Disabled O Read: Disable	/alue ID Value Description Write '1' to enable Disabled O Read: Disabled	/alue ID Value Description iet 1 Enable Disabled O Read: Disabled	Value Description vialue 1 ret 1 Disabled 0	Value Description vialue 1 Enable 0 O 0 O 0 Value Enable Disabled 0	/alue ID Value Description Write '1' to enable interrupt for iet 1 Enable Disabled 0 Read: Disabled	/alue ID Value Description Write '1' to enable interrupt for evolution Disabled O Read: Disabled	/alue ID Value Description Write '1' to enable interrupt for event iet 1 Enable Disabled 0 Read: Disabled	/alue ID Value Description Write '1' to enable interrupt for event VAL Disabled 0 Read: Disabled	/alue ID Value Description Write '1' to enable interrupt for event VALRDY iet 1 Enable Disabled 0 Read: Disabled	Value Description virite<'1' to enable interrupt for event VALRDY	Value Description visual 10 Value Description Value Description visual 10 Value Read: Disabled 0	Value Description virite '1' to enable interrupt for event VALRDY iet 1 Enable 0 0 0 Read: Disabled	<pre>// Alue ID Value Description</pre>	Value Description Write '1' to enable interrupt for event VALRDY iet 1 Disabled 0	Write '1' to enable interrupt for event VALRDY iet 1 Disabled 0 Read: Disabled

6.12.3.6 INTENCLR

Address offset: 0x308

Disable interrupt

Bit nu	mber		31 30	0 29	28	27	26	25	24	23 2	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3 2	2 1	0
ID																																А
Reset	0x0000000		0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0
ID																																
А	RW VALRDY									Wri	te	'1' t	to c	disa	ble	e in	ter	ru	ot f	or e	eve	nt ۱	/AL	RD	Y							
		Clear	1							Disa	abl	e																				
		Disabled	0							Rea	d:	Dis	abl	ed																		
		Enabled								Rea		-																				



6.12.3.7 CONFIG

Address offset: 0x504

Configuration register

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW DERCEN			Bias correction
	Disabled	0	Disabled
	Enabled	1	Enabled

6.12.3.8 VALUE

Address offset: 0x508

Output random number

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Description
A R VALUE	[0255]	Generated random number

6.12.4 Electrical specification

6.12.4.1 RNG Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{rng,start}	Time from setting the START task to generation begins.		128		μs
	This is a one-time delay on START signal and does not apply				
	between samples.				
t _{RNG,RAW}	Run time per byte without bias correction. Uniform		30		μs
	distribution of 0 and 1 is not guaranteed.				
t _{RNG,BC}	Run time per byte with bias correction. Uniform distribution		120		μs
	of 0 and 1 is guaranteed. Time to generate a byte cannot be				
	guaranteed.				

6.13 RTC — Real-time counter

The Real-time counter (RTC) module provides a generic, low power timer on the low-frequency clock source (LFCLK).



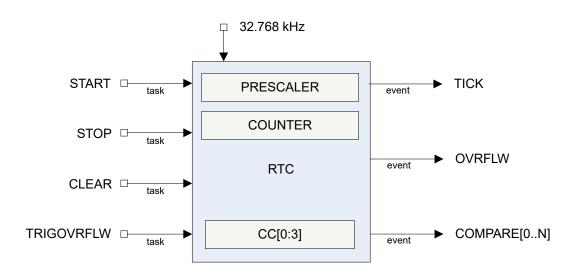


Figure 57: RTC block schematic

The RTC module features a 24-bit COUNTER, a 12-bit (1/X) prescaler, capture/compare registers, and a tick event generator for low power, tickless RTOS implementation.

6.13.1 Clock source

The RTC will run off the LFCLK.

The COUNTER resolution will therefore be $30.517 \ \mu$ s. Depending on the source, the RTC is able to run while the HFCLK is OFF and PCLK16M is not available.

The software has to explicitely start LFCLK before using the RTC.

See CLOCK — Clock control on page 63 for more information about clock sources.

6.13.2 Resolution versus overflow and the PRESCALER

Counter increment frequency:

```
f_{RTC} [kHz] = 32.768 / (PRESCALER + 1 )
```

The PRESCALER register is read/write when the RTC is stopped. The PRESCALER register is read-only once the RTC is STARTed. Writing to the PRESCALER register when the RTC is started has no effect.

The PRESCALER is restarted on START, CLEAR and TRIGOVRFLW, that is, the prescaler value is latched to an internal register (<<PRESC>>) on these tasks.

Examples:

1. Desired COUNTER frequency 100 Hz (10 ms counter period)

PRESCALER = round(32.768 kHz / 100 Hz) - 1 = 327

f_{RTC} = 99.9 Hz

10009.576 µs counter period

2. Desired COUNTER frequency 8 Hz (125 ms counter period)

PRESCALER = round(32.768 kHz / 8 Hz) – 1 = 4095

 $f_{RTC} = 8 Hz$




125 ms counter period

Prescaler	Counter resolution	Overflow
0	30.517 μs	512 seconds
2 ⁸ -1	7812.5 μs	131072 seconds
2 ¹² -1	125 ms	582.542 hours

Table 58: RTC resolution versus overflow

6.13.3 COUNTER register

The COUNTER increments on LFCLK when the internal PRESCALER register (<<PRESC>>) is 0x00. <<PRESC>> is reloaded from the PRESCALER register. If enabled, the TICK event occurs on each increment of the COUNTER. The TICK event is disabled by default.

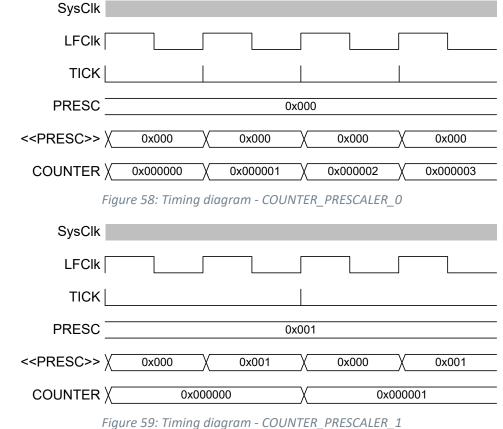

6.13.4 Overflow features

The TRIGOVRFLW task sets the COUNTER value to 0xFFFFF0 to allow SW test of the overflow condition. OVRFLW occurs when COUNTER overflows from 0xFFFFFF to 0.

Important: The OVRFLW event is disabled by default.

6.13.5 TICK event

The TICK event enables low power "tick-less" RTOS implementation as it optionally provides a regular interrupt source for a RTOS without the need to use the ARM[®] SysTick feature.

Using the RTC TICK event rather than the SysTick allows the CPU to be powered down while still keeping RTOS scheduling active.



Important: The TICK event is disabled by default.

6.13.6 Event control feature

To optimize RTC power consumption, events in the RTC can be individually disabled to prevent PCLK16M and HFCLK being requested when those events are triggered. This is managed using the EVTEN register.

For example, if the TICK event is not required for an application, this event should be disabled as it is frequently occurring and may increase power consumption if HFCLK otherwise could be powered down for long durations.

This means that the RTC implements a slightly different task and event system compared to the standard system described in Peripheral interface on page 76. The RTC task and event system is illustrated in Tasks, events and interrupts in the RTC on page 182.

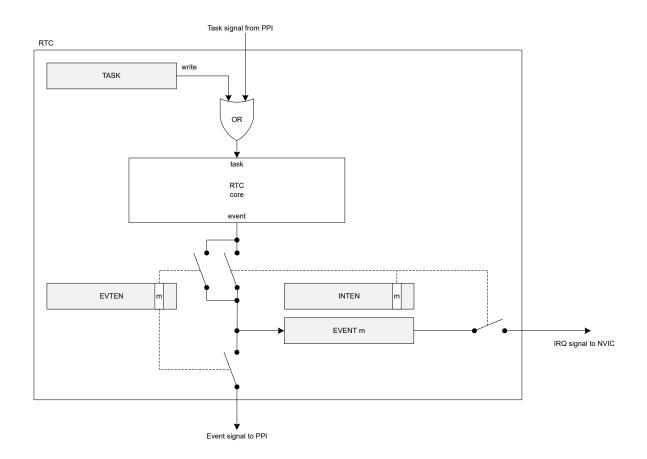


Figure 60: Tasks, events and interrupts in the RTC

6.13.7 Compare feature

There are a number of Compare registers.

For more information, see Registers on page 187.

When setting a compare register, the following behavior of the RTC compare event should be noted:

• If a CC register value is 0 when a CLEAR task is set, this will not trigger a COMPARE event.



	SysClk		
	LFCIk		
	PRESC	0x000	
		Х Х 0х00000	
	CLEAR _		
	CC[0] _	0x000000	
	COMPARE[0]	0	
•	If a CC register is N and the COMPARE event. SysClk	Figure 61: Timing diagram - COMPARE_CLEAR COUNTER value is N when the START task is set, this will no	ot trigger a
	LFCIk		
	PRESC _	0x000	
	COUNTER	N-1 X N X N	l +1
	START _		
	CC[0]	Ν	
	COMPARE[0]	0	
•	COMPARE occurs when a C SysClk	Figure 62: Timing diagram - COMPARE_START C register is N and the COUNTER value transitions from N-1	to N.
	LFClk		
	PRESC	0x000	
	COUNTER	N-2 X N-1 X N X N	l +1
	CC[0] _	Ν	
	COMPARE[0]	0 X 1	

Figure 63: Timing diagram - COMPARE

• If the COUNTER is N, writing N+2 to a CC register is guaranteed to trigger a COMPARE event at N+2.



SysClk						
LFCIk						
PRESC				0x000		
COUNTER X	N-1	_X	Ν	> 62.5 ns	I X	N+2
CC[0]		Х		_X	N+2	
COMPARE[0]			0		X	1
• If the COUNTER is N, writing SysClk	-	-	-	- COMPARE_N ay not trigger a		event.
LFClk						
PRESC				0x000		
COUNTER X	N-2	_X	N-1	>= 0	X	N+1
CC[0]		Х		/	N+1	
COMPARE[0]				0		

• If the COUNTER is N and the current CC register value is N+1 or N+2 when a new CC value is written, a match may trigger on the previous CC value before the new value takes effect. If the current CC value greater than N+2 when the new value is written, there will be no event due to the old value.

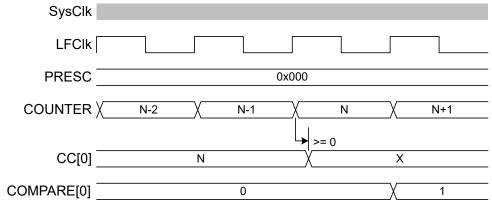


Figure 66: Timing diagram - COMPARE_N-1

6.13.8 TASK and EVENT jitter/delay

Jitter or delay in the RTC is due to the peripheral clock being a low frequency clock (LFCLK) which is not synchronous to the faster PCLK16M.

Registers in the peripheral interface, part of the PCLK16M domain, have a set of mirrored registers in the LFCLK domain. For example, the COUNTER value accessible from the CPU is in the PCLK16M domain and is latched on read from an internal register called COUNTER in the LFCLK domain. COUNTER is the register which is actually modified each time the RTC ticks. These registers must be synchronised between clock domains (PCLK16M and LFCLK).



Figure 65: Timing diagram - COMPARE_N+1


The following is a summary of the jitter introduced on tasks and events. Figures illustrating jitter follow.

Task	Delay	
CLEAR, STOP, START, TRIGOVRFLOW		+15 to 46 μs
	Table 59: RTC jitter magnitudes on tasks	

Operation/Function	Jitter
START to COUNTER increment	+/- 15 μs
COMPARE to COMPARE ¹⁹	+/- 62.5 ns

Table 60: RTC jitter magnitudes on events

 CLEAR and STOP (and TRIGOVRFLW; not shown) will be delayed as long as it takes for the peripheral to clock a falling edge and rising of the LFCLK. This is between 15.2585 μs and 45.7755 μs – rounded to 15 μs and 46 μs for the remainder of the section.

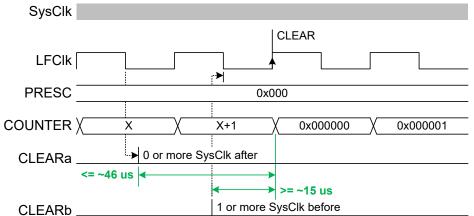



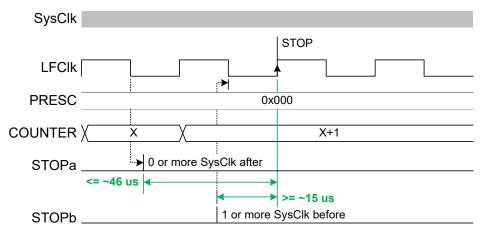


Figure 68: Timing diagram - DELAY_STOP


2. The START task will start the RTC. Assuming that the LFCLK was previously running and stable, the first increment of COUNTER (and instance of TICK event) will be typically after 30.5 μs +/-15 μs. In some cases, in particular if the RTC is STARTed before the LFCLK is running, that timing can be up to ~250 μs. The software should therefore wait for the first TICK if it has to make sure the RTC is running.

¹⁹ Assumes RTC runs continuously between these events.

Note: 32.768 kHz clock jitter is additional to the numbers provided above.



Sending a TRIGOVRFLW task sets the COUNTER to a value close to overflow. However, since the update of COUNTER relies on a stable LFCLK, sending this task while LFCLK is not running will start LFCLK, but the update will then be delayed by the same amount of time of up to ~250 us. The figures show the smallest and largest delays to on the START task which appears as a +/-15 μ s jitter on the first COUNTER increment.

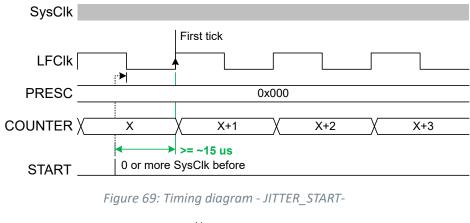

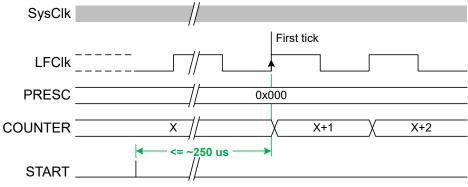


Figure 70: Timing diagram - JITTER_START+

6.13.9 Reading the COUNTER register

To read the COUNTER register, the internal <<COUNTER>> value is sampled.

To ensure that the <<COUNTER>> is safely sampled (considering an LFCLK transition may occur during a read), the CPU and core memory bus are halted for three cycles by lowering the core PREADY signal. The Read takes the CPU 2 cycles in addition resulting in the COUNTER register read taking a fixed five PCLK16M clock cycles.

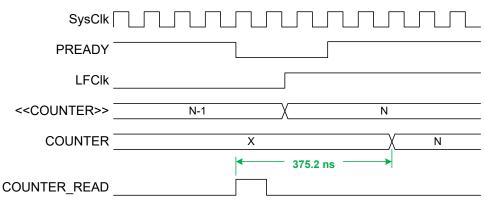


Figure 71: Timing diagram - COUNTER_READ



6.13.10 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000B000	RTC	RTC0	Real-time counter 0	CC[02] implemented, CC[3] not
				implemented
0x40011000	RTC	RTC1	Real-time counter 1	CC[03] implemented

Table 61: Instances

Degister	Offset	Description
Register		
TASKS_START	0x000	Start RTC COUNTER
TASKS_STOP	0x004	Stop RTC COUNTER
TASKS_CLEAR	0x008	Clear RTC COUNTER
TASKS_TRIGOVRFLW	0x00C	Set COUNTER to 0xFFFFF0
EVENTS_TICK	0x100	Event on COUNTER increment
EVENTS_OVRFLW	0x104	Event on COUNTER overflow
EVENTS_COMPARE[0]	0x140	Compare event on CC[0] match
EVENTS_COMPARE[1]	0x144	Compare event on CC[1] match
EVENTS_COMPARE[2]	0x148	Compare event on CC[2] match
EVENTS_COMPARE[3]	0x14C	Compare event on CC[3] match
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
EVTEN	0x340	Enable or disable event routing
EVTENSET	0x344	Enable event routing
EVTENCLR	0x348	Disable event routing
COUNTER	0x504	Current COUNTER value
PRESCALER	0x508	12 bit prescaler for COUNTER frequency (32768/(PRESCALER+1)).Must be written when RTC is
		stopped
CC[0]	0x540	Compare register 0
CC[1]	0x544	Compare register 1
CC[2]	0x548	Compare register 2
CC[3]	0x54C	Compare register 3

Table 62: Register overview

6.13.10.1 TASKS_START

Address offset: 0x000 Start RTC COUNTER

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_START			Start RTC COUNTER
		Trigger	1	Trigger task

6.13.10.2 TASKS_STOP

Address offset: 0x004 Stop RTC COUNTER



Bit n	umber		31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				4
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	W TASKS_STOP			Stop RTC COUNTER
		Trigger	1	Trigger task

6.13.10.3 TASKS_CLEAR

Address offset: 0x008

Clear RTC COUNTER

Bit nu	imber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Reset	0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_CLEAR			Clear RTC COUNTER
		Trigger	1	Trigger task

6.13.10.4 TASKS_TRIGOVRFLW

Address offset: 0x00C

Set COUNTER to 0xFFFFF0

Bit n	umber			31 30	29 2	8 27	26	25 2	42	3 22	21	20	19 :	18 1	71	6 15	14	13	12 1	1 10	9	8	7	6	54	3	2	1 0
ID																												А
Rese	t 0x000	00000		0 0	0	0 0	0	0 0) (0 0	0	0	0	0 0) (0	0	0	0 0	0 0	0	0	0	0	0 0	0	0	0 0
ID																												
А	wт	ASKS_TRIGOVRFLW							S	et C	OUI	NTE	R to	o Oxl	FFF	FF0												
			Trigger	1					Т	rigge	er ta	ask																

6.13.10.5 EVENTS_TICK

Address offset: 0x100

Event on COUNTER increment

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_TICK			Event on COUNTER increment
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.13.10.6 EVENTS_OVRFLW

Address offset: 0x104

Event on COUNTER overflow



Bit n	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	RW EVENTS_OVRFLW			Event on COUNTER overflow
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.13.10.7 EVENTS_COMPARE[n] (n=0..3)

Address offset: $0x140 + (n \times 0x4)$

Compare event on CC[n] match

Bit number	31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_COMPARE		Compare event on CC[n] match
NotGen	erated 0	Event not generated
Generat	ed 1	Event generated

6.13.10.8 INTENSET

Address offset: 0x304

Enable interrupt

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		F E D C B A
Reset 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Value Description
A RW TICK		Write '1' to enable interrupt for event TICK
	Set	1 Enable
	Disabled	0 Read: Disabled
	Enabled	1 Read: Enabled
B RW OVRFLW	I	Write '1' to enable interrupt for event OVRFLW
	Set	1 Enable
	Disabled	0 Read: Disabled
	Enabled	1 Read: Enabled
C-F RW COMPA	RE[i] (i=03)	Write '1' to enable interrupt for event COMPARE[i]
	Set	1 Enable
	Disabled	0 Read: Disabled
	Enabled	1 Read: Enabled

6.13.10.9 INTENCLR

Address offset: 0x308

Disable interrupt



Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW TICK			Write '1' to disable interrupt for event TICK
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW OVRFLW			Write '1' to disable interrupt for event OVRFLW
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
C-F	RW COMPARE[i] (i=03)			Write '1' to disable interrupt for event COMPARE[i]
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.13.10.10 EVTEN

Address offset: 0x340

Enable or disable event routing

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			FEDC BA
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
			Description
A RW TICK			Enable or disable event routing for event TICK
	Disabled	0	Disable
	Enabled	1	Disable
B RW OVRFLW			Enable or disable event routing for event OVRFLW
	Disabled	0	Disable
	Enabled	1	Disable
C-F RW COMPARE[i] (i=03)			Enable or disable event routing for event COMPARE[i]
	Disabled	0	Disable
	Enabled	1	Disable

6.13.10.11 EVTENSET

Address offset: 0x344

Enable event routing

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			F E D C B A
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW TICK			Write '1' to enable event routing for event TICK
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
	Set	1	Enable
B RW OVRFLW			Write '1' to enable event routing for event OVRFLW
	Disabled	0	Read: Disabled
	Enabled	1	Read: Enabled
	Set	1	Enable



Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID		F E D C B
Reset 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
C-F RW COMPARE[i] (i=03)		Write '1' to enable event routing for event COMPARE[i]
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled
Set	1	Enable

6.13.10.12 EVTENCLR

Address o	ffset:	0x348
-----------	--------	-------

Disable event routing

Bit n	umber		31	. 30 2	9 2	28 2	7 2	6 25	5 24	4 23 2	222	212	0 1	191	8 1	71	61	5 1	.4 1	31	2 1:	11	09	8	7	6	5	4	3	2	1 0
ID														FE	E) (2													1	3 A
Rese	t 0x0000000		0	0	0	0 (0 0	0	0	0	0	0 0)	0 0)	0 0) (D	0	0 0) () () (0	0	0	0	0	0) (0 0
ID																															
А	RW TICK									Wri	te '	'1' to	b d	isat	ole	eve	nt	ro	utin	g fo	or e	ver	nt T	СК							
		Disabled	0							Rea	d: I	Disa	ble	ed																	
		Enabled	1							Rea	d: I	Enal	ble	d																	
		Clear	1							Disa	able	е																			
В	RW OVRFLW									Wri	te '	'1' to	b d	isab	ble	eve	nt	ro	utin	g fo	or e	ver	nt O	VRI	FLW	/					
		Disabled	0							Rea	d: I	Disa	ble	ed																	
		Enabled	1							Rea	d: I	Enal	ole	d																	
		Clear	1							Disa	able	е																			
C-F	RW COMPARE[i] (i=03)									Wri	te '	'1' to	b d	isab	ole	eve	nt	ro	utin	g fo	or e	ver	nt <mark>C</mark>	ом	IPA	RE[i]				
		Disabled	0							Rea	d: I	Disa	ble	ed																	
		Enabled	1							Rea	d: I	Enal	ble	d																	
		Clear	1							Disa	able	e																			

6.13.10.13 COUNTER

Address offset: 0x504

Current COUNTER value

A B COUNTER		Counter value
ID Acce Field		Description
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
Bit number	31 30 29 28 27 26 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.13.10.14 PRESCALER

Address offset: 0x508

12 bit prescaler for COUNTER frequency (32768/(PRESCALER+1)).Must be written when RTC is stopped

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Rese	t 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
A	RW PRESCALER	Prescaler value



6.13.10.15 CC[n] (n=0..3)

Address offset: 0x540 + (n × 0x4)

Compare register n

Bit n	umber	31 30 29 28 27 26 25 24	1 23 22 2	1 20 19	9 18 17	/ 16 15	5 14 1	3 12 3	L1 10	9	87	6	5	4 3	32	1 C
ID			ААА	AAA	. A A	A A	A A	Α	A A	А	A A	A	А	A	A A	AA
Rese	et 0x0000000	0 0 0 0 0 0 0 0	000	000	0 0	0 0	0 0	0	0 0	0	0 0	0 0	0	0 (0 0	0 0
ID																
А	RW COMPARE		Compar	re valu	e											

6.13.11 Electrical specification

6.14 SAADC — Successive approximation analog-todigital converter

The ADC is a differential successive approximation register (SAR) analog-to-digital converter.

Listed here are the main features of SAADC:

- 8/10/12-bit resolution, 14-bit resolution with oversampling
- Up to eight input channels
 - One channel per single-ended input and two channels per differential input
 - Scan mode can be configured with both single-ended channels and differential channels.
- Full scale input range (0 to VDD)
- Sampling triggered via a task from software or a PPI channel for full flexibility on sample frequency source from low power 32.768kHz RTC or more accurate 1/16MHz Timers
- One-shot conversion mode to sample a single channel
- Scan mode to sample a series of channels in sequence. Sample delay between channels is $t_{ack} + t_{conv}$ which may vary between channels according to user configuration of t_{ack} .
- Support for direct sample transfer to RAM using EasyDMA
- Interrupts on single sample and full buffer events
- Samples stored as 16-bit 2's complement values for differential and single-ended sampling
- Continuous sampling without the need of an external timer
- Internal resistor string
- Limit checking on the fly

6.14.1 Overview

The ADC supports up to eight external analog input channels, depending on package variant. It can be operated in a one-shot mode with sampling under software control, or a continuous conversion mode with a programmable sampling rate.

The analog inputs can be configured as eight single-ended inputs, four differential inputs or a combination of these. Each channel can be configured to select AINO to AIN7 pins, or the VDD pin. Channels can be sampled individually in one-shot or continuous sampling modes, or, using scan mode, multiple channels can be sampled in sequence. Channels can also be oversampled to improve noise performance.



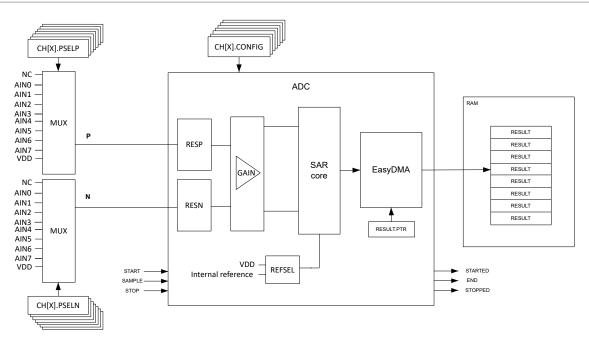


Figure 72: Simplified ADC block diagram

Internally, the ADC is always a differential analog-to-digital converter, but by default it is configured with single-ended input in the MODE field of the CH[n].CONFIG register. In single-ended mode, the negative input will be shorted to ground internally.

The assumption in single-ended mode is that the internal ground of the ADC is the same as the external ground that the measured voltage is referred to. The ADC is thus sensitive to ground bounce on the PCB in single-ended mode. If this is a concern we recommend using differential measurement.

6.14.2 Digital output

The output result of the ADC depends on the settings in the CH[n].CONFIG and RESOLUTION registers as follows:

```
RESULT = [V(P) - V(N)] * GAIN/REFERENCE * 2^{(RESOLUTION - m)}
```

where

V(P)

is the voltage at input P

V(N)

is the voltage at input N

GAIN

is the selected gain setting

REFERENCE

is the selected reference voltage

and m=0 if CONFIG.MODE=SE, or m=1 if CONFIG.MODE=Diff.

The result generated by the ADC will deviate from the expected due DC errors like offset, gain, differential non-linearity (DNL), and integral non-linearity (INL). See Electrical specification for details on these parameters. The result can also vary due to AC errors like non-linearities in the GAIN block, settling errors due to high source impedance and sampling jitter. For battery measurement the DC errors are most noticeable.



The ADC has a wide selection of gains controlled in the GAIN field of the CH[n].CONFIG register. If CH[n].CONFIG.REFSEL=0, the input range of the ADC core is nominally ± 0.6 V differential and the input must be scaled accordingly.

The ADC has a temperature dependent offset. If the ADC is to operate over a large temperature range, we recommend running CALIBRATEOFFSET at regular intervals, a CALIBRATEDONE event will be fired when the calibration is complete

6.14.3 Analog inputs and channels

Up to eight analog input channels, CH[n](n=0..7), can be configured.

Any one of the available channels can be enabled for the ADC to operate in one-shot mode. If more than one CH[n] is configured, the ADC enters scan mode.

An analog input is selected as a positive converter input if CH[n].PSELP is set, setting CH[n].PSELP also enables the particular channel.

An analog input is selected as a negative converter input if CH[n].PSELN is set. The CH[n].PSELN register will have no effect unless differential mode is enabled, see MODE field in CH[n].CONFIG register.

If more than one of the CH[n].PSELP registers is set, the device enters scan mode. Input selections in scan mode are controlled by the CH[n].PSELP and CH[n].PSELN registers, where CH[n].PSELN is only used if the particular scan channel is specified as differential, see MODE field in CH[n].CONFIG register.

Channel input	Source	Connectivity
CH[n].PSELP	AINOAIN7	Yes(any)
CH[n].PSELP	VDD	Yes
CH[n].PSELN	AINOAIN7	Yes(any)
CH[n].PSELN	VDD	Yes

Table 63: Legal connectivity CH[n] vs. analog input

6.14.4 Operation modes

The ADC input configuration supports one-shot mode, continuous mode and scan mode.

Scan mode and oversampling cannot be combined.

6.14.4.1 One-shot mode

One-shot operation is configured by enabling only one of the available channels defined by CH[n].PSELP, CH[n].PSELN, and CH[n].CONFIG registers.

Upon a SAMPLE task, the ADC starts to sample the input voltage. The CH[n].CONFIG.TACQ controls the acquisition time.

A DONE event signals that one sample has been taken.

In this mode, the RESULTDONE event has the same meaning as DONE when no oversampling takes place. Note that both events may occur before the actual value has been transferred into RAM by EasyDMA. For more information, see EasyDMA on page 196.

6.14.4.2 Continuous mode

Continuous sampling can be achieved by using the internal timer in the ADC, or triggering the SAMPLE task from one of the general purpose timers through the PPI.

Care shall be taken to ensure that the sample rate fulfils the following criteria, depending on how many channels are active:

 $f_{SAMPLE} < 1/[t_{ACQ} + t_{conv}]$



The SAMPLERATE register can be used as a local timer instead of triggering individual SAMPLE tasks. When SAMPLERATE.MODE is set to Timers, it is sufficient to trigger SAMPLE task only once in order to start the SAADC and triggering the STOP task will stop sampling. The SAMPLERATE.CC field controls the sample rate.

The SAMPLERATE timer mode cannot be combined with SCAN mode, and only one channel can be enabled in this mode.

A DONE event signals that one sample has been taken.

In this mode, the RESULTDONE event has the same meaning as DONE when no oversampling takes place. Note that both events may occur before the actual value has been transferred into RAM by EasyDMA.

6.14.4.3 Oversampling

An accumulator in the ADC can be used to average noise on the analog input. In general, oversampling improves the signal-to-noise ratio (SNR). Oversampling, however, does not improve the integral non-linearity (INL), or differential non-linearity (DNL).

Oversampling and scan should not be combined, since oversampling and scan will average over input channels.

The accumulator is controlled in the OVERSAMPLE register. The SAMPLE task must be set 2^{OVERSAMPLE} number of times before the result is written to RAM. This can be achieved by:

- Configuring a fixed sampling rate using the local timer or a general purpose timer and PPI to trigger a SAMPLE task
- Triggering SAMPLE 2^{OVERSAMPLE} times from software
- Enabling BURST mode

CH[n].CONFIG.BURST can be enabled to avoid setting SAMPLE task $2^{OVERSAMPLE}$ times. With BURST = 1 the ADC will sample the input $2^{OVERSAMPLE}$ times as fast as it can (actual timing: $<(t_{ACQ}+t_{CONV})\times 2^{OVERSAMPLE})$). Thus, for the user it will just appear like the conversion took a bit longer time, but other than that, it is similar to one-shot mode. Scan mode can be combined with BURST=1, if burst is enabled on all channels.

A DONE event signals that one sample has been taken.

In this mode, the RESULTDONE event signals that enough conversions have taken place for an oversampled result to get transferred into RAM. Note that both events may occur before the actual value has been transferred into RAM by EasyDMA.

6.14.4.4 Scan mode

A channel is considered enabled if CH[n].PSELP is set. If more than one channel, CH[n], is enabled, the ADC enters scan mode.

In scan mode, one SAMPLE task will trigger one conversion per enabled channel. The time it takes to sample all channels is:

Total time < Sum(CH[x].t_{ACQ}+t_{CONV}), x=0..enabled channels

A DONE event signals that one sample has been taken.

In this mode, the RESULTDONE event signals has the same meaning as DONE when no oversampling takes place. Note that both events may occur before the actual values have been transferred into RAM by EasyDMA.

Example of RAM placement (even RESULT.MAXCNT), channels 1, 2 and 5 enabled on page 196 provides an example of results placement in Data RAM, with an even RESULT.MAXCNT. In this example, channels 1, 2 and 5 are enabled, all others are disabled.



	31 16	15 0
RESULT.PTR	CH[2] 1 st result	CH[1] 1 st result
RESULT.PTR + 4	CH[1] 2 nd result	CH[5] 1 st result
RESULT.PTR + 8	CH[5] 2 nd result	CH[2] 2 nd result
	(.)
RESULT.PTR + 2*(RESULT.MAXCNT – 2)	CH[5] last result	CH[2] last result

Figure 73: Example of RAM placement (even RESULT.MAXCNT), channels 1, 2 and 5 enabled

Example of RAM placement (odd RESULT.MAXCNT), channels 1, 2 and 5 enabled on page 196 provides an example of results placement in Data RAM, with an odd RESULT.MAXCNT. In this example, channels 1, 2 and 5 are enabled, all others are disabled. The last 32-bit word is populated only with one 16-bit result.

	31 16	15 0
RESULT.PTR	CH[2] 1 st result	CH[1] 1 st result
RESULT.PTR + 4	CH[1] 2 nd result	CH[5] 1 st result
RESULT.PTR + 8	CH[5] 2 nd result	CH[2] 2 nd result
	(.)
RESULT.PTR + 2*(RESULT.MAXCNT – 1)		CH[5] last result

Figure 74: Example of RAM placement (odd RESULT.MAXCNT), channels 1, 2 and 5 enabled

6.14.5 EasyDMA

After configuring RESULT.PTR and RESULT.MAXCNT, the ADC resources are started by triggering the START task. The ADC is using EasyDMA to store results in a Result buffer in RAM.

The Result buffer is located at the address specified in the RESULT.PTR register. The RESULT.PTR register is double-buffered and it can be updated and prepared for the next START task immediately after the STARTED event is generated. The size of the Result buffer is specified in the RESULT.MAXCNT register and the ADC will generate an END event when it has filled up the Result buffer, see ADC on page 197. Results are stored in little-endian byte order in Data RAM. Every sample will be sign extended to 16 bit before stored in the Result buffer.

The ADC is stopped by triggering the STOP task. The STOP task will terminate an ongoing sampling. The ADC will generate a STOPPED event when it has stopped. If the ADC is already stopped when the STOP task is triggered, the STOPPED event will still be generated.



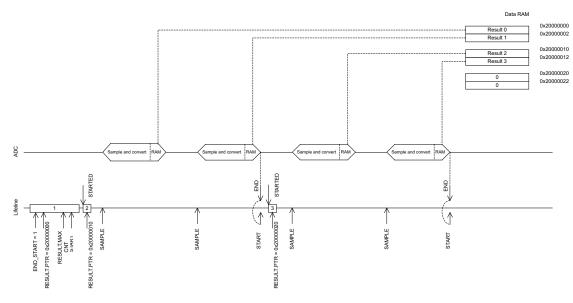


Figure 75: ADC

If the RESULT.PTR is not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The EasyDMA will have finished accessing the RAM when the END or STOPPED event has been generated.

The RESULT.AMOUNT register can be read following an END event or a STOPPED event to see how many results have been transferred to the Result buffer in RAM since the START task was triggered.

In scan mode, SAMPLE tasks can be triggered once the START task is triggered. The END event is generated when the number of samples transferred to memory reaches the value specified by RESULT.MAXCNT. After an END event, the START task needs to be triggered again before new samples can be taken. Also make sure that the size of the Result buffer is large enough to have space for minimum one result from each of the enabled channels, by specifying RESULT.MAXCNT >= number of channels enabled. For more information about the scan mode, see Scan mode on page 195.

6.14.6 Resistor ladder

The ADC has an internal resistor string for positive and negative input.

See Resistor ladder for positive input (negative input is equivalent, using RESN instead of RESP) on page 198. The resistors are controlled in the CH[n].CONFIG.RESP and CH[n].CONFIG.RESN registers.



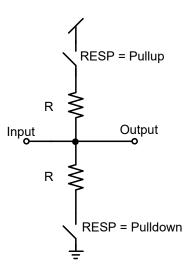


Figure 76: Resistor ladder for positive input (negative input is equivalent, using RESN instead of RESP)

6.14.7 Reference

The ADC can use two different references, controlled in the REFSEL field of the CH[n].CONFIG register.

These are:

- Internal reference
- VDD as reference

The internal reference results in an input range of ± 0.6 V on the ADC core. VDD as reference results in an input range of \pm VDD/4 on the ADC core. The gain block can be used to change the effective input range of the ADC.

Input range = (+- 0.6 V or +-VDD/4)/Gain

For example, choosing VDD as reference, single ended input (grounded negative input), and a gain of 1/4 the input range will be:

Input range = (VDD/4)/(1/4) = VDD

With internal reference, single ended input (grounded negative input), and a gain of 1/6 the input range will be:

Input range = (0.6 V) / (1/6) = 3.6 V

The AINO-AIN7 inputs cannot exceed VDD, or be lower than VSS.

6.14.8 Acquisition time

To sample the input voltage, the ADC connects a capacitor to the input.

For illustration, see Simplified ADC sample network on page 199. The acquisition time indicates how long the capacitor is connected, see TACQ field in CH[n].CONFIG register. The required acquisition time depends on the source (R_{source}) resistance. For high source resistance the acquisition time should be increased, see Acquisition time on page 199.



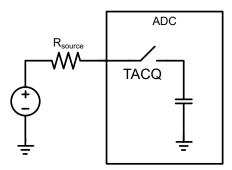


Figure 77: Simplified ADC sample network

TACQ [μs]	Maximum source resistance [kOhm]
3	10
5	40
10	100
15	200
20	400
40	800

Table 64: Acquisition time

6.14.9 Limits event monitoring

A channel can be event monitored by configuring limit register CH[n].LIMIT.

If the conversion result is higher than the defined high limit, or lower than the defined low limit, the appropriate event will get fired.

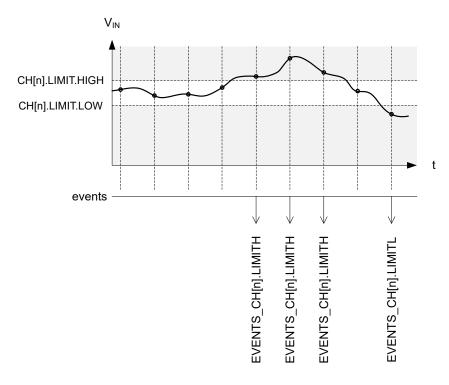


Figure 78: Example of limits monitoring on channel 'n'



Note that when setting the limits, CH[n].LIMIT.HIGH shall always be higher than or equal to CH[n].LIMIT.LOW . In other words, an event can be fired only when the input signal has been sampled outside of the defined limits. It is not possible to fire an event when the input signal is inside a defined range by swapping high and low limits.

The comparison to limits always takes place, there is no need to enable it. If comparison is not required on a channel, the software shall simply ignore the related events. In that situation, the value of the limits registers is irrelevant, so it does not matter if CH[n].LIMIT.LOW is lower than CH[n].LIMIT.HIGH or not.

6.14.10 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40007000	SAADC	SAADC	Analog-to-digital converter	
			Table 65: Instances	c.
			Table 65: Instances	S
Register	Offset	Descript	ion	
TASKS_START	0x000	Start the	ADC and prepare the result buffer i	n RAM
TASKS_SAMPLE	0x004	Take one	ADC sample, if scan is enabled all cl	hannels are sampled
TASKS_STOP	0x008	Stop the	ADC and terminate any on-going co	nversion
TASKS_CALIBRATE	OFFSET 0x00C	Starts of	fset auto-calibration	
EVENTS_STARTED	0x100	The ADC	has started	
EVENTS_END	0x104	The ADC	has filled up the Result buffer	
EVENTS_DONE	0x108	A conver	sion task has been completed. Depe	ending on the mode, multiple conversions might be
		needed	for a result to be transferred to RAM	l
EVENTS_RESULTDO	ONE 0x10C		is ready to get transferred to RAM.	
EVENTS_CALIBRAT	EDONE 0x110	Calibrati	on is complete	
EVENTS_STOPPED	0x114	The ADC	has stopped	
EVENTS_CH[0].LIN	AITH 0x118	Last resu	Its is equal or above CH[0].LIMIT.HIC	GH
EVENTS_CH[0].LIN	AITL 0x11C	Last resu	Its is equal or below CH[0].LIMIT.LO	W
EVENTS_CH[1].LIM	AITH 0x120	Last resu	Its is equal or above CH[1].LIMIT.HIC	GH
EVENTS_CH[1].LIM	MITL 0x124	Last resu	Its is equal or below CH[1].LIMIT.LO	W
EVENTS_CH[2].LIM	AITH 0x128	Last resu	Its is equal or above CH[2].LIMIT.HIC	GH
EVENTS_CH[2].LIN	AITL 0x12C	Last resu	Its is equal or below CH[2].LIMIT.LO	W
EVENTS_CH[3].LIN	MITH 0x130	Last resu	Its is equal or above CH[3].LIMIT.HIC	GH
EVENTS_CH[3].LIM	AITL 0x134	Last resu	lts is equal or below CH[3].LIMIT.LO	W
EVENTS_CH[4].LIN	MITH 0x138	Last resu	Its is equal or above CH[4].LIMIT.HIC	GH
EVENTS_CH[4].LIN	AITL 0x13C	Last resu	lts is equal or below CH[4].LIMIT.LO	W
EVENTS_CH[5].LIM	AITH 0x140	Last resu	lts is equal or above CH[5].LIMIT.HIC	GH
EVENTS_CH[5].LIM	AITL 0x144	Last resu	lts is equal or below CH[5].LIMIT.LO	W
EVENTS_CH[6].LIN	AITH 0x148	Last resu	lts is equal or above CH[6].LIMIT.HIC	GH
EVENTS_CH[6].LIN	AITL 0x14C	Last resu	lts is equal or below CH[6].LIMIT.LO	W
EVENTS_CH[7].LIM	AITH 0x150	Last resu	lts is equal or above CH[7].LIMIT.HIC	GH
EVENTS_CH[7].LIM	AITL 0x154	Last resu	lts is equal or below CH[7].LIMIT.LO	W
INTEN	0x300	Enable o	r disable interrupt	
INTENSET	0x304	Enable ir	nterrupt	
INTENCLR	0x308	Disable i	nterrupt	
STATUS	0x400	Status		
ENABLE	0x500	Enable o	r disable ADC	
CH[0].PSELP	0x510	Input po	sitive pin selection for CH[0]	
CH[0].PSELN	0x514	Input ne	gative pin selection for CH[0]	
CH[0].CONFIG	0x518	Input co	nfiguration for CH[0]	
CH[0].LIMIT	0x51C	High/low	Imits for event monitoring a channel	nel
CH[1].PSELP	0x520		sitive pin selection for CH[1]	



Register	Offset	Description
CH[1].PSELN	0x524	Input negative pin selection for CH[1]
CH[1].CONFIG	0x528	Input configuration for CH[1]
CH[1].LIMIT	0x52C	High/low limits for event monitoring a channel
CH[2].PSELP	0x530	Input positive pin selection for CH[2]
CH[2].PSELN	0x534	Input negative pin selection for CH[2]
CH[2].CONFIG	0x538	Input configuration for CH[2]
CH[2].LIMIT	0x53C	High/low limits for event monitoring a channel
CH[3].PSELP	0x540	Input positive pin selection for CH[3]
CH[3].PSELN	0x544	Input negative pin selection for CH[3]
CH[3].CONFIG	0x548	Input configuration for CH[3]
CH[3].LIMIT	0x54C	High/low limits for event monitoring a channel
CH[4].PSELP	0x550	Input positive pin selection for CH[4]
CH[4].PSELN	0x554	Input negative pin selection for CH[4]
CH[4].CONFIG	0x558	Input configuration for CH[4]
CH[4].LIMIT	0x55C	High/low limits for event monitoring a channel
CH[5].PSELP	0x560	Input positive pin selection for CH[5]
CH[5].PSELN	0x564	Input negative pin selection for CH[5]
CH[5].CONFIG	0x568	Input configuration for CH[5]
CH[5].LIMIT	0x56C	High/low limits for event monitoring a channel
CH[6].PSELP	0x570	Input positive pin selection for CH[6]
CH[6].PSELN	0x574	Input negative pin selection for CH[6]
CH[6].CONFIG	0x578	Input configuration for CH[6]
CH[6].LIMIT	0x57C	High/low limits for event monitoring a channel
CH[7].PSELP	0x580	Input positive pin selection for CH[7]
CH[7].PSELN	0x584	Input negative pin selection for CH[7]
CH[7].CONFIG	0x588	Input configuration for CH[7]
CH[7].LIMIT	0x58C	High/low limits for event monitoring a channel
RESOLUTION	0x5F0	Resolution configuration
OVERSAMPLE	0x5F4	Oversampling configuration. OVERSAMPLE should not be combined with SCAN. The
		RESOLUTION is applied before averaging, thus for high OVERSAMPLE a higher RESOLUTION
		should be used.
SAMPLERATE	0x5F8	Controls normal or continuous sample rate
RESULT.PTR	0x62C	Data pointer
RESULT.MAXCNT	0x630	Maximum number of buffer words to transfer
RESULT.AMOUNT	0x634	Number of buffer words transferred since last START

Table 66: Register overview

6.14.10.1 TASKS_START

Address offset: 0x000

Start the ADC and prepare the result buffer in RAM

Bit n	um	per		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3	2 1 0
ID					А
Rese	t 0)	0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	000
ID					
A	W	TASKS_START		Start the ADC and prepare the result buffer in RAM	
			Trigger	1 Trigger task	

6.14.10.2 TASKS_SAMPLE

Address offset: 0x004



Take one ADC sample, if scan is enabled all channels are sampled

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_SAMPLE			Take one ADC sample, if scan is enabled all channels are
			sampled
	Trigger	1	Trigger task

6.14.10.3 TASKS_STOP

Address offset: 0x008

Stop the ADC and terminate any on-going conversion

Bit n	um	nber		31 30 29 28 27 26 2	5 24	23 2	22	1 2	0 19	Э1	81	71	61	.5 1	.4 1	.3 1	12 1	.1 1	.0 9	9	8	7	6	5	4	3	2	1 0
ID																												А
Rese	et O	x0000000		0 0 0 0 0 0	0 0	0 () (0 0) (0) () () (D	0	0	0	0 (D (0	0	D	0	0	0	0 () (0 0
ID																												
А	١	N TASKS_STOP				Stop	b th	e A	DC	an	d te	ern	nina	ate	an	y o	n-g	oin	g co	onv	ers	ior	I					
			Trigger	1		Trig	ger	tas	k																			

6.14.10.4 TASKS_CALIBRATEOFFSET

Address offset: 0x00C

Starts offset auto-calibration

Bit n	um	nber	r				31	30 29	28	27 26	5 25	24	23 2	2 2 2	1 20	19	18 1	7 16	5 15	14 1	.3 1	2 11	10	98	3 7	6	5	43	2	1 0
ID																														А
Rese	et O)x00	000000)			0	0 0	0	0 0	0	0	0 0	0	0 (0	0 0	0	0	0	0 0	0	0	0 0	0	0	0	0 0	0	0 0
ID													Desc																	
А	١	N	TASKS_	CALIBRA	ATEOFFSET								Star	s o	ffset	t aut	to-ca	libr	atio	n										
						Trigger	1						Trigg	er 1	task															

6.14.10.5 EVENTS_STARTED

Address offset: 0x100

The ADC has started

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
A	RW EVENTS_STARTED			The ADC has started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.14.10.6 EVENTS_END

Address offset: 0x104

The ADC has filled up the Result buffer



Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_END			The ADC has filled up the Result buffer
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.14.10.7 EVENTS_DONE

Address offset: 0x108

A conversion task has been completed. Depending on the mode, multiple conversions might be needed for a result to be transferred to RAM.

Bit n	umber		313	0 29	28	27	26	25 2	24 :	23 2	2 2	212	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID																																А
Rese	t 0x0000000		0 0	0	0	0	0	0	0	0 (0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0
ID																																
А	RW EVENTS_DONE									A co	onv	ers	ior	n ta	sk	has	be	en	00	np	ete	ed.	De	per	ndir	ng c	on t	he				
									1	moc	de,	mι	ulti	ple	со	nve	rsio	ons	mi	ghi	: be	e ne	eed	ed	for	a r	esu	lt t	0			
									I	be t	rar	nsfe	erre	ed 1	to F	RAN	1.															
		NotGenerated	0						I	Ever	nt r	not	ge	ene	rate	ed																
		Generated	1						I	Ever	nt g	gen	era	ate	d																	

6.14.10.8 EVENTS_RESULTDONE

Address offset: 0x10C

A result is ready to get transferred to RAM.

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
Α	RW EVENTS_RESULTDONE			A result is ready to get transferred to RAM.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.14.10.9 EVENTS_CALIBRATEDONE

Address offset: 0x110

Calibration is complete

Bit n	umber		31 30 29 28 2	27 26 25 24	23 22 21 3	20 19 1	18 17	16 1	5 14	13 12	11 1	LO 9	8	7	6	54	3	2	1 0
ID																			А
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0	000	00	0 0	0 0	0	0 0	0	0 0	0	0	0	0 0	0	0	0 0
ID					Descriptio														
А	RW EVENTS_CALIBRATE	DONE			Calibratio	n is co	mple	ete											
		NotGenerated	0		Event not	gener	ated												
		Generated	1		Event ger	erated	I												



6.14.10.10 EVENTS_STOPPED

Address offset: 0x114

The ADC has stopped

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_STOPPED			The ADC has stopped
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.14.10.11 EVENTS_CH[n].LIMITH (n=0..7)

Address offset: 0x118 + (n × 0x8)

Last results is equal or above CH[n].LIMIT.HIGH

Bit number	31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW LIMITH		Last results is equal or above CH[n].LIMIT.HIGH
NotGenerated	0	Event not generated
Generated	1	Event generated

6.14.10.12 EVENTS_CH[n].LIMITL (n=0..7)

Address offset: $0x11C + (n \times 0x8)$

Last results is equal or below CH[n].LIMIT.LOW

Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW LIMITL		Last results is equal or below CH[n].LIMIT.LOW
NotGenerated	0	Event not generated
Generated	1	Event generated

6.14.10.13 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			VUTSRQPONMLKJIHGFEDCBA
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW STARTED			Enable or disable interrupt for event STARTED
	Disabled	0	Disable
	Enabled	1	Enable



Bit r	number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				V U T S R Q P O N M L K J I H G F E D C B A
	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	Acce Field	Value ID	Value	Description
В	RW END	~		Enable or disable interrupt for event END
		Disabled	0	Disable
		Enabled	1	Enable
С	RW DONE			Enable or disable interrupt for event DONE
		Disabled	0	Disable
		Enabled	1	Enable
D	RW RESULTDONE			Enable or disable interrupt for event RESULTDONE
		Disabled	0	Disable
		Enabled	1	Enable
E	RW CALIBRATEDONE			Enable or disable interrupt for event CALIBRATEDONE
		Disabled	0	Disable
		Enabled	1	Enable
F	RW STOPPED			Enable or disable interrupt for event STOPPED
		Disabled	0	Disable
		Enabled	1	Enable
c	RW CHOLIMITH	Enabled	1	
G		~		Enable or disable interrupt for event CHOLIMITH
		Disabled	0	Disable
		Enabled	1	Enable
Н	RW CHOLIMITL			Enable or disable interrupt for event CH0LIMITL
		Disabled	0	Disable
		Enabled	1	Enable
I	RW CH1LIMITH			Enable or disable interrupt for event CH1LIMITH
		Disabled	0	Disable
		Enabled	1	Enable
J	RW CH1LIMITL			Enable or disable interrupt for event CH1LIMITL
		Disabled	0	Disable
		Enabled	1	Enable
к	RW CH2LIMITH			Enable or disable interrupt for event CH2LIMITH
		Disabled	0	Disable
		Enabled		Enable
	RW CH2LIMITL	Lilableu	1	Enable or disable interrupt for event CH2LIMITL
L	KW CHZLIWITL	Dischlad	0	
		Disabled	0	Disable
		Enabled	1	Enable
Μ	RW CH3LIMITH			Enable or disable interrupt for event CH3LIMITH
		Disabled	0	Disable
		Enabled	1	Enable
N	RW CH3LIMITL			Enable or disable interrupt for event CH3LIMITL
		Disabled	0	Disable
		Enabled	1	Enable
0	RW CH4LIMITH			Enable or disable interrupt for event CH4LIMITH
		Disabled	0	Disable
		Enabled	1	Enable
Р	RW CH4LIMITL			Enable or disable interrupt for event CH4LIMITL
		Disabled	0	Disable
		Enabled	1	Enable
0		Enabled	1	
Q	RW CH5LIMITH		0	Enable or disable interrupt for event CH5LIMITH
		Disabled	0	Disable
		Enabled	1	Enable
R	RW CH5LIMITL			Enable or disable interrupt for event CH5LIMITL
		Disabled	0	Disable



Dite	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ысп			51 50 29 28 27 20 25 24 25 22 21 20 19 18 17 10 15 14 15 12 11 10 9 8 7 6 5 4 5 2 1
ID			V U T S R Q P O N M L K J I H G F E D C B
Rese	t 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Enabled	1 Enable
S	RW CH6LIMITH		Enable or disable interrupt for event CH6LIMITH
		Disabled	0 Disable
		Enabled	1 Enable
т	RW CH6LIMITL		Enable or disable interrupt for event CH6LIMITL
		Disabled	0 Disable
		Enabled	1 Enable
U	RW CH7LIMITH		Enable or disable interrupt for event CH7LIMITH
		Disabled	0 Disable
		Enabled	1 Enable
V	RW CH7LIMITL		Enable or disable interrupt for event CH7LIMITL
		Disabled	0 Disable
		Enabled	1 Enable

6.14.10.14 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				V U T S R Q P O N M L K J I H G F E D C B A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	
				Description
А	RW STARTED			Write '1' to enable interrupt for event STARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW END			Write '1' to enable interrupt for event END
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW DONE			Write '1' to enable interrupt for event DONE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW RESULTDONE			Write '1' to enable interrupt for event RESULTDONE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW CALIBRATEDONE			Write '1' to enable interrupt for event CALIBRATEDONE
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW CHOLIMITH			Write '1' to enable interrupt for event CHOLIMITH
		Set	1	Enable



Bit r	number		31 30 29 28	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				V U T S R Q P O N M L K J I H G F E D C B A
Res	et 0x0000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW CHOLIMITL			Write '1' to enable interrupt for event CHOLIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
	RW CH1LIMITH	Endored	-	Write '1' to enable interrupt for event CH1LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW CH1LIMITL	Lilableu	1	Write '1' to enable interrupt for event CH1LIMITL
J	KW CHILIWITE	Set	1	Enable
		Disabled	0	Read: Disabled
v	RW CH2LIMITH	Enabled	1	Read: Enabled
К	RW CHZLIWITH	C-+	4	Write '1' to enable interrupt for event CH2LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW CH2LIMITL			Write '1' to enable interrupt for event CH2LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
М	RW CH3LIMITH			Write '1' to enable interrupt for event CH3LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
N	RW CH3LIMITL			Write '1' to enable interrupt for event CH3LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
0	RW CH4LIMITH			Write '1' to enable interrupt for event CH4LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Ρ	RW CH4LIMITL			Write '1' to enable interrupt for event CH4LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Q	RW CH5LIMITH			Write '1' to enable interrupt for event CH5LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
R	RW CH5LIMITL			Write '1' to enable interrupt for event CH5LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
s	RW CH6LIMITH			Write '1' to enable interrupt for event CH6LIMITH
-		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
		LIIduleu	T	Neau, Lilableu



Biti	number		31 30 29 28 27 26 .	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				V U T S R Q P O N M L K J I H G F E D C B A
Res	et 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
т	RW CH6LIMITL			Write '1' to enable interrupt for event CH6LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
U	RW CH7LIMITH			Write '1' to enable interrupt for event CH7LIMITH
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
V	RW CH7LIMITL			Write '1' to enable interrupt for event CH7LIMITL
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.14.10.15 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				V U T S R Q P O N M L K J I H G F E D C B A
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STARTED			Write '1' to disable interrupt for event STARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW DONE			Write '1' to disable interrupt for event DONE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW RESULTDONE			Write '1' to disable interrupt for event RESULTDONE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW CALIBRATEDONE			Write '1' to disable interrupt for event CALIBRATEDONE
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW CHOLIMITH			Write '1' to disable interrupt for event CH0LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled



Bit n	umber		31 30 29 28 3	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 (
ID				V U T S R Q P O N M L K J I H G F E D C B A
Rese	et 0x0000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Enabled	1	Read: Enabled
н	RW CHOLIMITL			Write '1' to disable interrupt for event CH0LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
1	RW CH1LIMITH	Lindoled	-	Write '1' to disable interrupt for event CH1LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW CH1LIMITL	Enabled	Ŧ	Write '1' to disable interrupt for event CH1LIMITL
,		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled		
		Enabled	1	Read: Enabled
K	RW CH2LIMITH			Write '1' to disable interrupt for event CH2LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW CH2LIMITL			Write '1' to disable interrupt for event CH2LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
M	RW CH3LIMITH			Write '1' to disable interrupt for event CH3LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
N	RW CH3LIMITL			Write '1' to disable interrupt for event CH3LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
0	RW CH4LIMITH			Write '1' to disable interrupt for event CH4LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Р	RW CH4LIMITL			Write '1' to disable interrupt for event CH4LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Q	RW CH5LIMITH			Write '1' to disable interrupt for event CH5LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
R	RW CH5LIMITL			Write '1' to disable interrupt for event CH5LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
S	RW CH6LIMITH		_	Write '1' to disable interrupt for event CH6LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
T		Enabled	1	Read: Enabled
Г	RW CH6LIMITL			Write '1' to disable interrupt for event CH6LIMITL



Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				VUTSRQPONMLKJIHGFEDCBA
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
U	RW CH7LIMITH			Write '1' to disable interrupt for event CH7LIMITH
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
V	RW CH7LIMITL			Write '1' to disable interrupt for event CH7LIMITL
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.14.10.16 STATUS

Address offset: 0x400

Status

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A R STATUS		Status
Ready	0	ADC is ready. No on-going conversion.
Busy	1	ADC is busy. Conversion in progress.

6.14.10.17 ENABLE

Address offset: 0x500

Enable or disable ADC

Bit number		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12	11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW ENABLE		Enable or disable ADC	
	Disabled	0 Disable ADC	
	Enabled	1 Enable ADC	
		When enabled, the ADC will acquire	access to the analog
		input pins specified in the CH[n].PSE	LP and CH[n].PSELN
		registers.	

6.14.10.18 CH[n].PSELP (n=0..7)

Address offset: $0x510 + (n \times 0x10)$

Input positive pin selection for CH[n]



Bit r	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				АААА
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW PSELP			Analog positive input channel
		NC	0	Not connected
		AnalogInput0	1	AINO
		AnalogInput1	2	AIN1
		AnalogInput2	3	AIN2
		AnalogInput3	4	AIN3
		AnalogInput4	5	AIN4
		AnalogInput5	6	AIN5
		AnalogInput6	7	AIN6
		AnalogInput7	8	AIN7
		VDD	9	VDD

6.14.10.19 CH[n].PSELN (n=0..7)

Address offset: 0x514 + (n × 0x10)

Input negative pin selection for CH[n]

Bit r	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				ААААА
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
А	RW PSELN			Analog negative input, enables differential channel
		NC	0	Not connected
		AnalogInput0	1	AINO
		AnalogInput1	2	AIN1
		AnalogInput2	3	AIN2
		AnalogInput3	4	AIN3
		AnalogInput4	5	AIN4
		AnalogInput5	6	AIN5
		AnalogInput6	7	AIN6
		AnalogInput7	8	AIN7
		VDD	9	VDD

6.14.10.20 CH[n].CONFIG (n=0..7)

Address offset: 0x518 + (n × 0x10)

Input configuration for CH[n]

Bit number	31 30 2	29 28 27 26 25 24	23 22 21 20 19 18	3 17 16 15	5 14 13 1	2 11 1	9	87	6	54	3 2	1 0	
ID		G	FΕ	ΕE	[) (С	С		ВB		A A	
Reset 0x00020000	0 0 0	0 0 0 0 0 0	0 0 0 0 0 0	100	000	000	0	0 0	0	0 0	0 0	00	
ID Acce Field Valu													
A RW RESP			Positive channel resistor control										
Вур	ass O		Bypass resistor ladder										
Pull	down 1		Pull-down to GNI)									
Pull	up 2		Pull-up to VDD										
VDD	01_2 3		Set input at VDD/	2									
B RW RESN			Negative channel	resistor o	control								
Вур	ass 0		Bypass resistor la	dder									

Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			G F E E E D C C C B B A A
Reset 0x00020000		0 0 0 0 0 0	0 0 0 0 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0
	Pulldown	1	Pull-down to GND
	Pullup	2	Pull-up to VDD
	VDD1_2	3	Set input at VDD/2
C RW GAIN			Gain control
	Gain1_6	0	1/6
	Gain1_5	1	1/5
	Gain1_4	2	1/4
	Gain1_3	3	1/3
	Gain1_2	4	1/2
	Gain1	5	1
	Gain2	6	2
	Gain4	7	4
D RW REFSEL			Reference control
	Internal	0	Internal reference (0.6 V)
	VDD1_4	1	VDD/4 as reference
E RW TACQ			Acquisition time, the time the ADC uses to sample the input
			voltage
	3us	0	3 us
	5us	1	5 us
	10us	2	10 us
	15us	3	15 us
	20us	4	20 us
	40us	5	40 us
F RW MODE			Enable differential mode
	SE	0	Single ended, PSELN will be ignored, negative input to ADC
			shorted to GND
	Diff	1	Differential
G RW BURST			Enable burst mode
	Disabled	0	Burst mode is disabled (normal operation)
	Enabled	1	Burst mode is enabled. SAADC takes 2^OVERSAMPLE
			number of samples as fast as it can, and sends the average

6.14.10.21 CH[n].LIMIT (n=0..7)

Address offset: 0x51C + (n × 0x10)

High/low limits for event monitoring a channel

Bit n	Bit number ID		313	30 29	9 28	8 27	7 26	25	24	23 2	2 2 1	. 20	19	18 1	71	6 15	5 14	413	12	11 10	9 כ	8	7	6	5	4	3	21	0
ID			В	ВВ	3 B	B B	В	В	В	ΒI	3 B	В	В	ΒI	ΒE	3 A	A	A	А	A A	A	А	А	А	А	А	A	A A	A
Rese	Reset 0x7FFF8000			1 1	. 1	. 1	1	1	1	1 :	11	1	1	1	1 1	11	. 0	0	0	0 0	0	0	0	0	0	0	0	0 0	0
ID																													
שר										Des																			
A	Acce Field RW LOW	Value ID	Valu [-32		to	+32	2767	7]			cript leve		nit																

to Data RAM.

6.14.10.22 RESOLUTION

Address offset: 0x5F0

Resolution configuration



Bit n	number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A A A
Rese	et 0x00000001		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	RW VAL			Set the resolution
		8bit	0	8 bit
		10bit	1	10 bit
		12bit	2	12 bit
		14bit	3	14 bit

6.14.10.23 OVERSAMPLE

Address offset: 0x5F4

Oversampling configuration. OVERSAMPLE should not be combined with SCAN. The RESOLUTION is applied before averaging, thus for high OVERSAMPLE a higher RESOLUTION should be used.

Bit number			31 30) 29	28 27	7 26 2	5 24	23 22	2 2 1 2	20 :	19 1	8 17	7 16	15 3	14 13	3 12	11	10 9	8	7	6	5 4	ł 3	2	1	0
ID																							А	А	А	A
Reset 0x0000	00000		0 0	0	0 0	0 (0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0									0 0) 0	0	0	O					
ID Acce Fi																										
A RW O	VERSAMPLE							Over	samp	ole	con	trol														
		Bypass	0					Вура	ss ov	ers	am	pling	3													
		Over2x	1					Oversample 2x																		
		Over4x	2					Over	samp	ole	4x															
		Over8x	3					Over	samp	ole	8x															
		Over16x	4					Over	samp	ole	16x															
		Over32x	5					Over	samp	ole	32x															
		Over64x	6					Over	samp	ole	64x															
		Over128x	7					Over	samp	ole	128	x														
		Over256x	8					Over	samp	ole	256	x														

6.14.10.24 SAMPLERATE

Address offset: 0x5F8

Controls normal or continuous sample rate

Bit n	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0	
ID				в аааааааааа	
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID					
А	RW CC		[802047]	Capture and compare value. Sample rate is 16 MHz/CC	
В	RW MODE			Select mode for sample rate control	
		Task	0	Rate is controlled from SAMPLE task	
		Timers	1	Rate is controlled from local timer (use CC to control the	
				rate)	

6.14.10.25 RESULT.PTR

Address offset: 0x62C

Data pointer



A RW PTR	Data pointer
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 (

6.14.10.26 RESULT.MAXCNT

Address offset: 0x630

Maximum number of buffer words to transfer

^	A RW MAXCNT			Maximum number of buffer words to transfer
ID				
Res	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				A A A A A A A A A A A A A A A A A A A
Bit r	number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

6.14.10.27 RESULT.AMOUNT

Address offset: 0x634

Number of buffer words transferred since last START

A B AMOUNT		Number of buffer words transferred since last START. This			
ID Acce Field					
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0	0000
ID				A A A A A A A A A A A	ΑΑΑΑ
Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 1	15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0

register can be read after an END or STOPPED event.

6.14.11 Electrical specification

6.14.11.1 SAADC Electrical Specification

Symbol	Description	Min.	Tun	Max.	Units
Symbol	•	IVIIII.	Тур.	IVIdX.	Units
DNL ₁₀	Differential non-linearity, 10-bit resolution	-0.95	<1		LSB10b
INL ₁₀	Integral non-linearity, 10-bit resolution		1		LSB1(
V _{OS}	Differential offset error (calibrated), 10-bit resolution ^a		+-2		LSB10b
DNL ₁₂	Differential non-linearity, 12-bit resolution	-0.95	1.3		LSB12
INL ₁₂	Integral non-linearity, 12-bit resolution		4.7		LSB12b
C _{EG}	Gain error temperature coefficient		0.02		%/°C
f _{SAMPLE}	Maximum sampling rate			200	kHz
t _{ACQ,10k}	Acquisition time (configurable), source Resistance <=		3		μs
	10kOhm				
t _{ACQ,40k}	Acquisition time (configurable), source Resistance <=		5		μs
	40kOhm				
t _{ACQ,100k}	Acquisition time (configurable), source Resistance <=		10		μs
	100kOhm				
t _{ACQ,200k}	Acquisition time (configurable), source Resistance <=		15		μs
	200kOhm				

^a Digital output code at zero volt differential input.



Symbol	Description	Min.	Тур.	Max.	Units
t _{ACQ,400k}	Acquisition time (configurable), source Resistance <=		20		μs
	400kOhm				
t _{ACQ,800k}	Acquisition time (configurable), source Resistance <=		40		μs
	800kOhm				
t _{CONV}	Conversion time		<2		μs
E _{G1/6}	Error ^b for Gain = 1/6	-3		3	%
E _{G1/4}	Error ^b for Gain = 1/4	-3		3	%
E _{G1/2}	Error ^b for Gain = 1/2	-3		4	%
E _{G1}	Error ^b for Gain = 1	-3		4	%
CSAMPLE	Sample and hold capacitance at maximum gain ²⁰		2.5		pF
R _{INPUT}	Input resistance		>1		MΩ
E _{NOB}	Effective number of bits, differential mode, 12-bit		9		Bit
	resolution, 1/1 gain, 3 μs acquisition time, crystal HFCLK,				
	200 ksps				
S _{NDR}	Peak signal to noise and distortion ratio, differential mode,		56		dB
	12-bit resolution, 1/1 gain, 3 μs acquisition time, crystal				
	HFCLK, 200 ksps				
S _{FDR}	Spurious free dynamic range, differential mode, 12-bit		70		dBc
	resolution, 1/1 gain, 3 μs acquisition time, crystal HFCLK,				
	200 ksps				
R _{LADDER}	Ladder resistance		160		kΩ

6.14.12 Performance factors

Clock jitter, affecting sample timing accuracy, and circuit noise can affect ADC performance.

Jitter can be between START tasks or from START task to acquisition. START timer accuracy and startup times of regulators and references will contribute to variability. Sources of circuit noise may include CPU activity and the DC/DC regulator. Best ADC performance is achieved using START timing based on the TIMER module, HFXO clock source, and Constant Latency mode.

6.15 SPI — Serial peripheral interface master

The SPI master provides a simple CPU interface which includes a TXD register for sending data and an RXD register for receiving data. This section is added for legacy support for now.

^b Does not include temperature drift

²⁰ Maximum gain corresponds to highest capacitance.

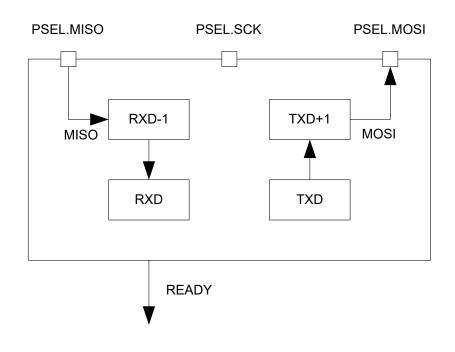


Figure 79: SPI master

RXD-1 and TXD+1 illustrate the double buffered version of RXD and TXD respectively.

6.15.1 Functional description

The TXD and RXD registers are double-buffered to enable some degree of uninterrupted data flow in and out of the SPI master.

The SPI master does not implement support for chip select directly. Therefore, the CPU must use available GPIOs to select the correct slave and control this independently of the SPI master. The SPI master supports SPI modes 0 through 3.

Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Leading)	0 (Active high)
SPI_MODE1	0 (Leading)	1 (Active low)
SPI_MODE2	1 (Trailing)	0 (Active high)
SPI_MODE3	1 (Trailing)	1 (Active low)

Table 67: SPI modes

6.15.1.1 SPI master mode pin configuration

The different signals SCK, MOSI, and MISO associated with the SPI master are mapped to physical pins.

This mapping is according to the configuration specified in the PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers respectively. If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated SPI master signal is not connected to any physical pin. The PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers and their configurations are only used as long as the SPI master is enabled, and retained only as long as the device is in ON mode. PSEL.SCK, PSEL.MOSI, and PSEL.MISO must only be configured when the SPI master is disabled.

To secure correct behavior in the SPI, the pins used by the SPI must be configured in the GPIO peripheral as described in GPIO configuration on page 217 prior to enabling the SPI. The SCK must always be connected to a pin, and that pin's input buffer must always be connected for the SPI to work. This configuration must be retained in the GPIO for the selected I/Os as long as the SPI is enabled.



Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI master signal	SPI master pin	Direction	Output value
SCK	As specified in PSEL.SCK	Output	Same as CONFIG.CPOL
MOSI	As specified in PSEL.MOSI	Output	0
MISO	As specified in PSEL.MISO	Input	Not applicable

Table 68: GPIO configuration

6.15.1.2 Shared resources

The SPI shares registers and other resources with other peripherals that have the same ID as the SPI. Therefore, the user must disable all peripherals that have the same ID as the SPI before the SPI can be configured and used.

Disabling a peripheral that has the same ID as the SPI will not reset any of the registers that are shared with the SPI. It is therefore important to configure all relevant SPI registers explicitly to secure that it operates correctly.

See the Instantiation table in Instantiation on page 17 for details on peripherals and their IDs.

6.15.1.3 SPI master transaction sequence

An SPI master transaction is started by writing the first byte, which is to be transmitted by the SPI master, to the TXD register.

Since the transmitter is double buffered, the second byte can be written to the TXD register immediately after the first one. The SPI master will then send these bytes in the order they are written to the TXD register.

The SPI master is a synchronous interface, and for every byte that is sent, a different byte will be received at the same time. This is illustrated in SPI master transaction on page 218. Bytes that are received will be moved to the RXD register where the CPU can extract them by reading the register. The RXD register is double buffered in the same way as the TXD register, and a second byte can therefore be received at the same time as the first byte is being extracted from RXD by the CPU. The SPI master will generate a READY event every time a new byte is moved to the RXD register. The double buffered byte will be moved from RXD-1 to RXD as soon as the first byte is extracted from RXD. The SPI master will stop when there are no more bytes to send in TXD and TXD+1.



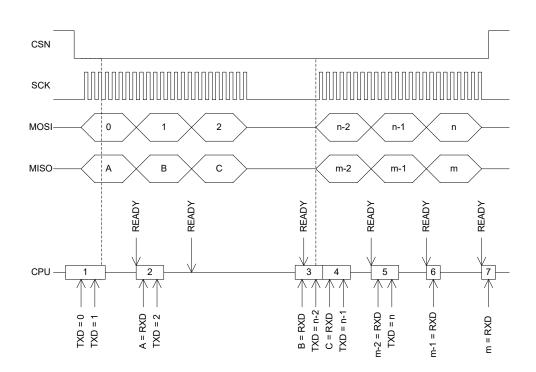


Figure 80: SPI master transaction

The READY event of the third byte transaction is delayed until B is extracted from RXD in occurrence number 3 on the horizontal lifeline. The reason for this is that the third event is generated first when C is moved from RXD-1 to RXD after B is read.

The SPI master will move the incoming byte to the RXD register after a short delay following the SCK clock period of the last bit in the byte. This also means that the READY event will be delayed accordingly, see SPI master transaction on page 218. Therefore, it is important that you always clear the READY event, even if the RXD register and the data that is being received is not used.

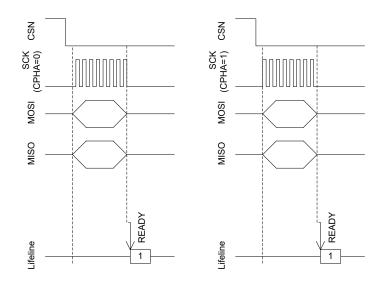


Figure 81: SPI master transaction



6.15.2 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40004000	SPI	SPIO	SPI master		Deprecated
			Table 69: Inst	ances	
Register	Offset	Descript	tion		
EVENTS_READY	0x108	TXD byt	e sent and RXD byte received		
INTENSET	0x304	Enable i	nterrupt		
INTENCLR	0x308	Disable	interrupt		
ENABLE	0x500	Enable	SPI		
PSEL.SCK	0x508	Pin sele	ct for SCK		
PSEL.MOSI	0x50C	Pin sele	ct for MOSI signal		
PSEL.MISO	0x510	Pin sele	ct for MISO signal		
RXD	0x518	RXD reg	ister		
TXD	0x51C	TXD reg	ister		
FREQUENCY	0x524	SPI freq	uency. Accuracy depends on t	he HFCLK source selected.	
CONFIG	0x554	Configu	ration register		

Table 70: Register overview

6.15.2.1 EVENTS_READY

Address offset: 0x108

TXD byte sent and RXD byte received

Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW EVENTS_READY		TXD byte sent and RXD byte received
NotGenerated	0	Event not generated
Generated	1	Event generated

6.15.2.2 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28	8 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x0000000	0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value		Description
A RW READY		Write '1' to enable interrupt for event READY
A RW READY Set	1	Enable
	1 Died 0	

6.15.2.3 INTENCLR

Address offset: 0x308



Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW READY			Write '1' to disable interrupt for event READY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled		Read: Enabled

6.15.2.4 ENABLE

Address offset: 0x500

Enable SPI

Bit number	31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААА
Reset 0x0000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW ENABLE		Enable or disable SPI
Disabled	0	Disable SPI
Enabled	1	Enable SPI

6.15.2.5 PSEL.SCK

Address offset: 0x508

Pin select for SCK

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.15.2.6 PSEL.MOSI

Address offset: 0x50C

Pin select for MOSI signal

Bit n	umber		313	80 29	28	27	26	25	24	23 2	22	21	20 1	19 1	18 :	17 :	16	15	14	13	12	11 :	10 9	Э	87	6	5	4	3	2	1)
ID			С																									А	А	А	A	Å
Rese	t OxFFFFFFFF		1	1 1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1 :	1 :	1 1	1	1	1	1	1	1	L
ID																																
А	RW PIN		[03	31]						Pin	nu	mb	er																			
С	RW CONNECT									Cor	nne	ctio	on																			
		Disconnected	1							Dise	cor	nne	ct																			
		Connected	0							Cor	nne	ect																				



6.15.2.7 PSEL.MISO

Address offset: 0x510

Pin select for MISO signal

Bit n	umber		31 30 29 28 27 26 25 24	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ΑΑΑΑΑ
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
A C	RW PIN RW CONNECT		[031]	Pin number Connection
A C		Disconnected	[031]	

6.15.2.8 RXD

Address offset: 0x518

RXD register

ID Reset 0x00000000 Value ID Value ID Value Description Value Value	
ID Reset 0x00000000 0	
	ΑΑΑΑΑΑΑ
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 1	10 9 8 7 6 5 4 3 2 1

6.15.2.9 TXD

Address offset: 0x51C

TXD register

A	RW TXD							T	X da	ata f	to se	nd.	Dou	ble	buf	fer	ed.										
ID																											
Rese	t 0x0000000	0	0 (0 0	0	0	0 0) (0 0	0	0	0 0	0	0	0	0	0 0	0 0	0	0	0	0	0 () (0	0	0 0
ID																					,	Д	A	A	A	А	A A
Bit r	umber	31	30 2	9 2	8 27	262	25 2	4 2	3 22	2 2 1	20	19 1	8 17	16	15	14 :	.3 1	2 11	10	9	8	7	6 5	5 4	3	2	1 0

6.15.2.10 FREQUENCY

Address offset: 0x524

SPI frequency. Accuracy depends on the HFCLK source selected.



Bit n	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			AAAAAA	A A A A A A A A A A A A A A A A A A A
Rese	t 0x04000000		0 0 0 0 0 1 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
А	RW FREQUENCY			SPI master data rate
		K125	0x02000000	125 kbps
		K250	0x04000000	250 kbps
		K500	0x08000000	500 kbps
		M1	0x10000000	1 Mbps
		M2	0x20000000	2 Mbps
		M4	0x40000000	4 Mbps
		M8	0x8000000	8 Mbps

6.15.2.11 CONFIG

Address offset: 0x554

Configuration register

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0									
ID				C B A									
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0									
ID				Description									
А	RW ORDER			Bit order									
		MsbFirst	0	Most significant bit shifted out first									
		LsbFirst	1	Least significant bit shifted out first									
В	RW CPHA			Serial clock (SCK) phase									
		Leading	0	Sample on leading edge of clock, shift serial data on trailing									
				edge									
		Trailing	1	Sample on trailing edge of clock, shift serial data on leading									
				edge									
С	RW CPOL			Serial clock (SCK) polarity									
		ActiveHigh	0	Active high									
		ActiveLow	1	Active low									

6.15.3 Electrical specification

6.15.3.1 SPI master interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPI}	Bit rates for SPI ²¹			8 ²²	Mbps
t _{spi,start}	Time from writing TXD register to transmission started		1		μs

6.15.3.2 Serial Peripheral Interface (SPI) Master timing specifications


Symbol	Description	Min.	Тур.	Max.	Units
t _{SPI,CSCK}	SCK period	125			ns
t _{SPI,RSCK,LD}	SCK rise time, standard drive ²³			t _{RF,25pF}	

²¹ High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.



²² The actual maximum data rate depends on the slave's CLK to MISO and MOSI setup and hold timings.

²³ At 25 pF load, including GPIO capacitance, see GPIO electrical specification.

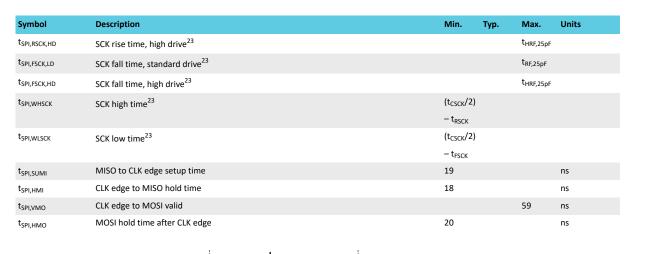

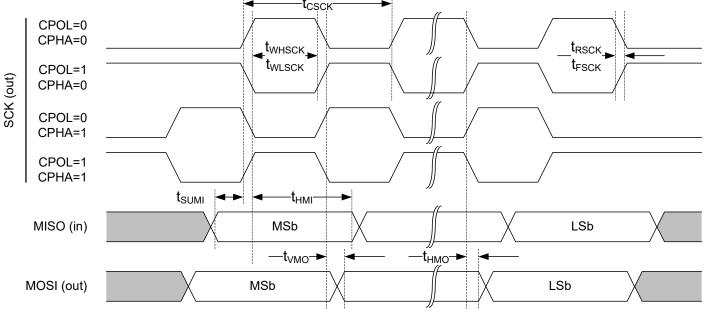


Figure 82: SPI master timing diagram

6.16 SPIM — Serial peripheral interface master with EasyDMA

The SPI master can communicate with multiple slaves using individual chip select signals for each of the slave devices attached to a bus.

Listed here are the main features for the SPIM

- SPI mode 0-3
- EasyDMA direct transfer to/from RAM for both SPI Slave and SPI Master
- Individual selection of IO pin for each SPI signal



4454_187 v1.4

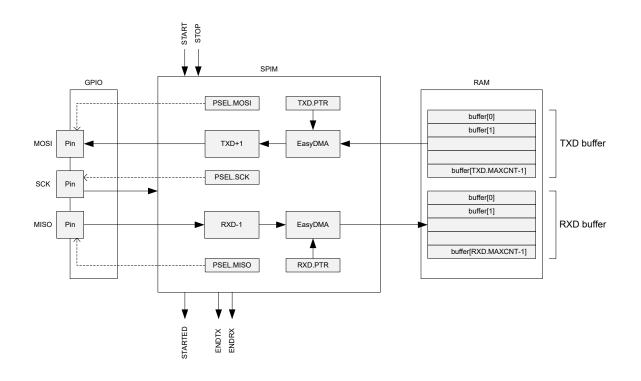


Figure 83: SPIM — SPI master with EasyDMA

The SPIM does not implement support for chip select directly. Therefore, the CPU must use available GPIOs to select the correct slave and control this independently of the SPI master. The SPIM supports SPI modes 0 through 3. The CONFIG register allows setting CPOL and CPHA appropriately.

Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Active High)	0 (Leading)
SPI_MODE1	0 (Active High)	1 (Trailing)
SPI_MODE2	1 (Active Low)	0 (Leading)
SPI_MODE3	1 (Active Low)	1 (Trailing)

Table 71: SPI modes

6.16.1 SPI master transaction sequence

An SPI master transaction consists of a sequence started by the START task followed by a number of events, and finally the STOP task.

An SPI master transaction is started by triggering the START task. The ENDTX event will be generated when the transmitter has transmitted all bytes in the TXD buffer as specified in the TXD.MAXCNT register. The ENDRX event will be generated when the receiver has filled the RXD buffer, i.e. received the last possible byte as specified in the RXD.MAXCNT register.

Following a START task, the SPI master will generate an END event when both ENDRX and ENDTX have been generated.


The SPI master is stopped by triggering the STOP task. A STOPPED event is generated when the SPI master has stopped.

If the ENDRX event has not already been generated when the SPI master has come to a stop, the SPI master will generate the ENDRX event explicitly even though the RX buffer is not full.



If the ENDTX event has not already been generated when the SPI master has come to a stop, the SPI master will generate the ENDTX event explicitly even though all bytes in the TXD buffer, as specified in the TXD.MAXCNT register, have not been transmitted.

The SPI master is a synchronous interface, and for every byte that is sent, a different byte will be received at the same time; this is illustrated in SPI master transaction on page 225.

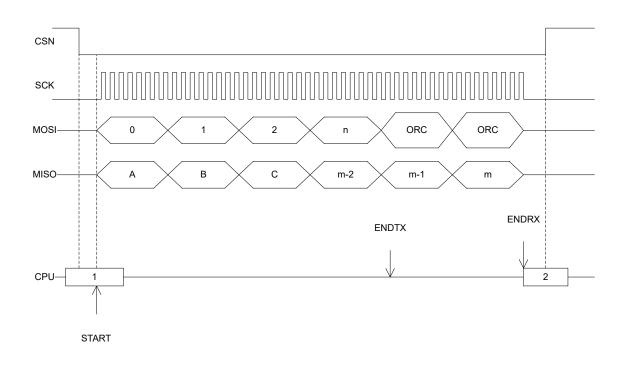



6.16.2 Master mode pin configuration

The SCK, MOSI, and MISO signals associated with the SPI master are mapped to physical pins according to the configuration specified in the PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers respectively.

The PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers and their configurations are only used as long as the SPI master is enabled, and retained only as long as the device is in ON mode. PSEL.SCK, PSEL.MOSI and PSEL.MISO must only be configured when the SPI master is disabled.

To secure correct behavior in the SPI, the pins used by the SPI must be configured in the GPIO peripheral as described in GPIO configuration on page 225 prior to enabling the SPI. This configuration must be retained in the GPIO for the selected IOs as long as the SPI is enabled.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI master signal	SPI master pin	Direction	Output value
SCK	As specified in PSEL.SCK	Output	Same as CONFIG.CPOL
MOSI	As specified in PSEL.MOSI	Output	0
MISO	As specified in PSEL.MISO	Input	Not applicable

Table 72: GPIO configuration



6.16.3 EasyDMA

The SPIM implements EasyDMA for accessing RAM without CPU involvement.

The SPIM peripheral implements the following EasyDMA channels:

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 73: SPIM EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 34.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next transmission immediately after having received the STARTED event.

The SPI master will automatically stop transmitting after TXD.MAXCNT bytes have been transmitted and RXD.MAXCNT bytes have been received. If RXD.MAXCNT is larger than TXD.MAXCNT, the remaining transmitted bytes will contain the value defined in the ORC register. If TXD.MAXCNT is larger than RXD.MAXCNT, the superfluous received bytes will be discarded.

The ENDRX/ENDTX event indicate that EasyDMA has finished accessing respectively the RX/TX buffer in RAM. The END event gets generated when both RX and TX are finished accessing the buffers in RAM.

In the case of bus congestion as described in , data loss may occur.

6.16.4 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task may not be always needed (the peripheral might already be stopped), but if it is sent, software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.16.5 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40004000	SPIM	SPIM0	SPI master		
			Table 74: Ins	tances	
Register	Offset	Descript	tion		
TASKS_START	0x010	Start SPI	l transaction		
TASKS_STOP	0x014	Stop SPI	transaction		
TASKS_SUSPEND	0x01C	Suspend	SPI transaction		
TASKS_RESUME	0x020	Resume	SPI transaction		
EVENTS_STOPPED	0x104	SPI trans	saction has stopped		
EVENTS_ENDRX	0x110	End of R	XD buffer reached		
EVENTS_END	0x118	End of R	XD buffer and TXD buffer re	ached	
EVENTS_ENDTX	0x120	End of T	XD buffer reached		
EVENTS_STARTED	0x14C	Transact	ion started		
SHORTS	0x200	Shortcut	ts between local events and	tasks	
INTENSET	0x304	Enable i	nterrupt		



Register	Offset	Description
INTENCLR	0x308	Disable interrupt
ENABLE	0x500	Enable SPIM
PSEL.SCK	0x508	Pin select for SCK
PSEL.MOSI	0x50C	Pin select for MOSI signal
PSEL.MISO	0x510	Pin select for MISO signal
FREQUENCY	0x524	SPI frequency. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
TXD.LIST	0x550	EasyDMA list type
CONFIG	0x554	Configuration register
ORC	0x5C0	Over-read character. Character clocked out in case and over-read of the TXD buffer.

Table 75: Register overview

6.16.5.1 TASKS_START

Address offset: 0x010

Start SPI transaction

Bit number 3			31 30	0 29	28 2	7 26	25 2	24 2	23 2	2 2	12	0 1	9 1	8 17	16	15	14	13	12 1	1 10	9	8	7	6	5 4	13	2	1 0
ID																												А
Reset 0x00	Reset 0x00000000				0 0	0 0	0 (0	0 0) (0	0 0) (0	0	0	0	0	0	0 0	0	0	0	0	0 (0 0	0	0 0
ID Acce																												
A W	TASKS_START							9	Star	t SF	PI t	rans	act	ion														
		Trigger	1				Trigger task																					

6.16.5.2 TASKS_STOP

Address offset: 0x014

Stop SPI transaction

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOP			Stop SPI transaction
	Trigger	1	Trigger task

6.16.5.3 TASKS_SUSPEND

Address offset: 0x01C

Suspend SPI transaction



	Trigger	1	Trigger task
A W TASKS_SUSPEND			Suspend SPI transaction
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			А
Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.16.5.4 TASKS_RESUME

Address offset: 0x020

Resume SPI transaction

Bit n	umber		31 30	29 28 27	26 25 24	23 22	21 20 1	9 18 1	7 16 19	5 14 1	3 12 11	10 9	8	76	5	43	2	1 0
ID																		А
Rese	t 0x0000000	0	0 0	0 0 0	000	0 0	0 0 0	00	0 0	0 0	0 0	0 0	0	0 0	0	0 0	0	0 0
ID																		
А	A W TASKS_RESUME							Resume SPI transaction										
		Trig	ger 1			Trigger task												

6.16.5.5 EVENTS_STOPPED

Address offset: 0x104

SPI transaction has stopped

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_STOPPED			SPI transaction has stopped
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.16.5.6 EVENTS_ENDRX

Address offset: 0x110

End of RXD buffer reached

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_ENDRX			End of RXD buffer reached
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.16.5.7 EVENTS_END

Address offset: 0x118

End of RXD buffer and TXD buffer reached



Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_END			End of RXD buffer and TXD buffer reached
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.16.5.8 EVENTS_ENDTX

Address offset: 0x120

End of TXD buffer reached

Bit number	31 30 29 28 27 26 25 24 23	22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW EVENTS_ENDTX	En	d of TXD buffer reached
NotGenerated	0 Eve	ent not generated
Generated	1 Eve	ent generated

6.16.5.9 EVENTS_STARTED

Address offset: 0x14C

Transaction started

Bit number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_STARTED			Transaction started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.16.5.10 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit number	31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW END_START		Shortcut between event END and task START
Disabled	0	Disable shortcut
Enabled	1	Enable shortcut

6.16.5.11 INTENSET

Address offset: 0x304

Enable interrupt



Bit r	umber		31 30 29 28 27	26 25 24	23 22 2	21 20	19 1	18 1	17 1	61	5 14	4 1 3	3 12	11	10	9	8	7	6	54	3	2	1	0
ID							Е										D		С	E			А	
Rese	et 0x0000000		0 0 0 0 0	000	00	0 0	0	0	0 0) (0 0	0	0	0	0	0	0	0	0	0 0	0	0	0	c
A	RW STOPPED				Write '	'1' to	enat	ble	inte	erru	ıpt f	or e	ever	nt S	TOI	PPE	D							Ī
		Set	1		Enable	2																		
		Disabled	0		Read: [Disab	led																	
		Enabled	1		Read: E	Enabl	ed																	
В	RW ENDRX				Write '	'1' to	enat	ble	inte	erru	ıpt f	ore	ever	nt E	ND	RX								
		Set	1		Enable	2																		
		Disabled	0		Read: [Disab	led																	
		Enabled	1		Read: E	Enabl	ed																	
С	RW END				Write '	'1' to	enat	ble	inte	erru	ıpt f	or e	ever	nt E	ND									
		Set	1		Enable	9																		
		Disabled	0		Read: [Disab	led																	
		Enabled	1		Read: E	Enabl	ed																	
D	RW ENDTX				Write '	'1' to	enat	ble	inte	erru	ıpt f	or e	ever	nt E	ND	тх								
		Set	1		Enable	9																		
		Disabled	0		Read: [Disab	led																	
		Enabled	1		Read: E	Enabl	ed																	
E	RW STARTED				Write '	'1' to	enat	ble	inte	erru	ıpt f	or e	ever	nt S	TAF	RTE	D							
		Set	1		Enable	9																		
		Disabled	0		Read: [Disab	led																	
		Enabled	1		Read: E	Enabl	ed																	

6.16.5.12 INTENCLR

Address offset: 0x308

Disable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				E D C B A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	
А	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDRX			Write '1' to disable interrupt for event ENDRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ENDTX			Write '1' to disable interrupt for event ENDTX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Е	RW STARTED			Write '1' to disable interrupt for event STARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled



	Enabled		Read: Enabled				
ID Acce Field							
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	000	00	000	0 0 0
ID			E	D	С	В	А
Bit number		31 30 29 28 27 2	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10	987	65	5432	2 1 0

6.16.5.13 ENABLE

Address offset: 0x500

Enable SPIM

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW ENABLE		Enable or disable SPIM
Disabled	0	Disable SPIM
Enabled	7	Enable SPIM

6.16.5.14 PSEL.SCK

Address offset: 0x508

Pin select for SCK

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	
ID				Description
А	RW PIN		[031]	Pin number
			[051]	Fill humber
С	RW CONNECT		[051]	Connection
С		Disconnected	1	

6.16.5.15 PSEL.MOSI

Address offset: 0x50C

Pin select for MOSI signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.16.5.16 PSEL.MISO

Address offset: 0x510

Pin select for MISO signal



Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	$1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \$
ID				Description
Α	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.16.5.17 FREQUENCY

Address offset: 0x524

SPI frequency. Accuracy depends on the HFCLK source selected.

Bit number		313	30 29	9 28	3 27	26	25	24	23	22 2	21 2	0 1	9 18	8 17	16	15	14 1	.3 12	11	10	9	8	7	6	5 4	43	2	1	0
ID		А	A A	A	A	А	А	A	А	A	A A	A A	A	A	А	А	A	A A	А	А	A	A	A	A	A	Δ A	A	А	А
Reset 0x04000000		0	0 0	0	0	1	0	0	0	0	0 (0 0	0	0	0	0	0	0 0	0	0	0	0	0	0	0 (0 0	0	0	0
ID Acce Field V																													
A RW FREQUENCY									SPI	ma	ster	r da	ta r	ate															
к	(125	0x0	2000	000	0				125	5 kb	ps																		
к	(250	0x0	4000	000	0				250) kb	ps																		
к	(500	0x0	8000	000	0				500) kb	ps																		
Ν	M1	0x1	0000	000	0				1 N	1bp:	5																		
Ν	V12	0x2	0000	000	0				2 N	1bp:	S																		
Ν	VI4	0x4	0000	000	0				4 N	1bp:	S																		
Ν	V18	0x8	0000	000	0				8 N	1bp:	S																		

6.16.5.18 RXD.PTR

Address offset: 0x534

Data pointer

А	RW PTR	Data pointer
ID		Value Description
Rese	et 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

Note: See the memory chapter for details about which memories are available for EasyDMA.

6.16.5.19 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer

Reset 0x00000000 0	
· · · · · · · · · · · · · · · · · · ·	0 0 0 0 0 0 0 0 0 0
	A A A A A A A A A
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 1	9876543210



6.16.5.20 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction

ID Acce Field		
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.16.5.21 RXD.LIST

Address offset: 0x540

EasyDMA list type

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.16.5.22 TXD.PTR

Address offset: 0x544

Data pointer

A RW PTR	Data pointer	
ID Acce Field		
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0
ID	A A A A A A A A A A A A A A A A A A A	A A A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7	6 5 4 3 2 1 0

Note: See the memory chapter for details about which memories are available for EasyDMA.

6.16.5.23 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

	RW MAXCNT	[00x3FFF]	Maximum number of bytes in transmit buffer
ID			
Rese	et 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 29	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0



6.16.5.24 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction

A R AMOUNT	[00x3FFF]	Number of bytes transferred in the last transaction
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.16.5.25 TXD.LIST

Address offset: 0x550

EasyDMA list type

Bit number	31 30 29 28 27 26 25 24	2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.16.5.26 CONFIG

Address offset: 0x554

Configuration register

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW ORDER			Bit order
		MsbFirst	0	Most significant bit shifted out first
		LsbFirst	1	Least significant bit shifted out first
В	RW CPHA			Serial clock (SCK) phase
		Leading	0	Sample on leading edge of clock, shift serial data on trailing
				edge
		Trailing	1	Sample on trailing edge of clock, shift serial data on leading
				edge
С	RW CPOL			Serial clock (SCK) polarity
		ActiveHigh	0	Active high
		ActiveLow	1	Active low

6.16.5.27 ORC

Address offset: 0x5C0

Over-read character. Character clocked out in case and over-read of the TXD buffer.



Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A
Res	et 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
А	RW ORC	Over-read character. Character clocked out in case and over-
		read of the TXD buffer.

6.16.6 Electrical specification

6.16.6.1 SPIM master interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPIM}	Bit rates for SPIM ²⁴			8 ²⁵	Mbps
t _{spim,start}	Time from START task to transmission started				μs

6.16.6.2 Serial Peripheral Interface Master (SPIM) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{SPIM,CSCK}	SCK period				ns
t _{SPIM,RSCK,LD}	SCK rise time, standard drive ^a			t _{RF,25pF}	
t _{SPIM,RSCK,HD}	SCK rise time, high drive ^a			t _{HRF,25pF}	
t _{SPIM,FSCK,LD}	SCK fall time, standard drive ^a			t _{RF,25pF}	
t _{SPIM,FSCK,HD}	SCK fall time, high drive ^a			t _{HRF,25pF}	
t _{SPIM,WHSCK}	SCK high time ^a	(0.5*t _{CS0}	СК		
		- t _{RSCK}			
t _{SPIM,WLSCK}	SCK low time ^a	(0.5*t _{CS0}	_{ск})		
		$-t_{FSCK}$			
t _{SPIM,SUMI}	MISO to CLK edge setup time	19			ns
t _{spim,HMI}	CLK edge to MISO hold time	18			ns
t _{SPIM,VMO}	CLK edge to MOSI valid			59	ns
t _{SPIM,HMO}	MOSI hold time after CLK edge	20			ns



 ²⁴ High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.
 ²⁵ The actual maximum data rate depends on the slave's CLK to MISO and MOSI setup and hold timings.

^a At 25pF load, including GPIO pin capacitance, see GPIO spec.

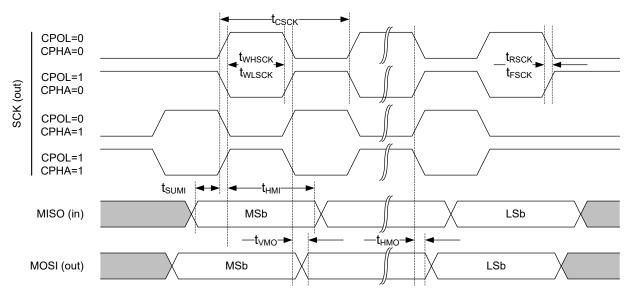


Figure 85: SPIM timing diagram

6.17 SPIS — Serial peripheral interface slave with EasyDMA

SPI slave (SPIS) is implemented with EasyDMA support for ultra-low power serial communication from an external SPI master. EasyDMA, in conjunction with hardware-based semaphore mechanisms, removes all real-time requirements associated with controlling the SPI slave from a low priority CPU execution context.

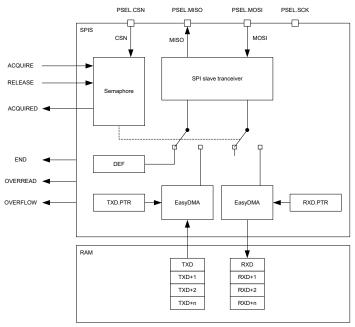


Figure 86: SPI slave

The SPIS supports SPI modes 0 through 3. The CONFIG register allows setting CPOL and CPHA appropriately.



Mode	Clock polarity	Clock phase
	CPOL	СРНА
SPI_MODE0	0 (Active High)	0 (Trailing Edge)
SPI_MODE1	0 (Active High)	1 (Leading Edge)
SPI_MODE2	1 (Active Low)	0 (Trailing Edge)
SPI_MODE3	1 (Active Low)	1 (Leading Edge)

Table 76: SPI modes

6.17.1 Shared resources

The SPI slave shares registers and other resources with other peripherals that have the same ID as the SPI slave. Therefore, you must disable all peripherals that have the same ID as the SPI slave before the SPI slave can be configured and used.

Disabling a peripheral that has the same ID as the SPI slave will not reset any of the registers that are shared with the SPI slave. It is important to configure all relevant SPI slave registers explicitly to secure that it operates correctly.

The Instantiation table in Instantiation on page 17 shows which peripherals have the same ID as the SPI slave.

6.17.2 EasyDMA

The SPIS implements EasyDMA for accessing RAM without CPU involvement.

The SPIS peripheral implements the following EasyDMA channels.

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 77: SPIS EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 34.

If RXD.MAXCNT is larger than TXD.MAXCNT, the remaining transmitted bytes will contain the value defined in the ORC register.

The END event indicates that EasyDMA has finished accessing the buffer in RAM.

6.17.3 SPI slave operation

SPI slave uses two memory pointers, RXD.PTR and TXD.PTR, that point to the RXD buffer (receive buffer) and TXD buffer (transmit buffer) respectively. Since these buffers are located in RAM, which can be accessed by both the SPI slave and the CPU, a hardware based semaphore mechanism is implemented to enable safe sharing.

See SPI transaction when shortcut between END and ACQUIRE is enabled on page 239.

Before the CPU can safely update the RXD.PTR and TXD.PTR pointers, it must first acquire the SPI semaphore. The CPU can acquire the semaphore by triggering the ACQUIRE task and then receiving the ACQUIRED event. When the CPU has updated the RXD.PTR and TXD.PTR pointers the CPU must release the semaphore before the SPI slave will be able to acquire it. The CPU releases the semaphore by triggering the RELEASE task. This is illustrated in SPI transaction when shortcut between END and ACQUIRE is enabled on page 239. Triggering the RELEASE task when the semaphore is not granted to the CPU will have no effect.



The semaphore mechanism does not, at any time, prevent the CPU from performing read or write access to the RXD.PTR register, the TXD.PTR registers, or the RAM that these pointers are pointing to. The semaphore is only telling when these can be updated by the CPU so that safe sharing is achieved.

The semaphore is by default assigned to the CPU after the SPI slave is enabled. No ACQUIRED event will be generated for this initial semaphore handover. An ACQUIRED event will be generated immediately if the ACQUIRE task is triggered while the semaphore is assigned to the CPU.

The SPI slave will try to acquire the semaphore when CSN goes low. If the SPI slave does not manage to acquire the semaphore at this point, the transaction will be ignored. This means that all incoming data on MOSI will be discarded, and the DEF (default) character will be clocked out on the MISO line throughout the whole transaction. This will also be the case even if the semaphore is released by the CPU during the transaction. In case of a race condition where the CPU and the SPI slave try to acquire the semaphore at the same time, as illustrated in lifeline item 2 in SPI transaction when shortcut between END and ACQUIRE is enabled on page 239, the semaphore will be granted to the CPU.

If the SPI slave acquires the semaphore, the transaction will be granted. The incoming data on MOSI will be stored in the RXD buffer and the data in the TXD buffer will be clocked out on MISO.

When a granted transaction is completed and CSN goes high, the SPI slave will automatically release the semaphore and generate the END event.

As long as the semaphore is available, the SPI slave can be granted multiple transactions one after the other. If the CPU is not able to reconfigure the TXD.PTR and RXD.PTR between granted transactions, the same TX data will be clocked out and the RX buffers will be overwritten. To prevent this from happening, the END_ACQUIRE shortcut can be used. With this shortcut enabled, the semaphore will be handed over to the CPU automatically after the granted transaction has completed. This enables the CPU to update the TXPTR and RXPTR between every granted transaction.

If the CPU tries to acquire the semaphore while it is assigned to the SPI slave, an immediate handover will not be granted. However, the semaphore will be handed over to the CPU as soon as the SPI slave has released the semaphore after the granted transaction is completed. If the END_ACQUIRE shortcut is enabled and the CPU has triggered the ACQUIRE task during a granted transaction, only one ACQUIRE request will be served following the END event.

The MAXRX register specifies the maximum number of bytes the SPI slave can receive in one granted transaction. If the SPI slave receives more than MAXRX number of bytes, an OVERFLOW will be indicated in the STATUS register and the incoming bytes will be discarded.

The MAXTX parameter specifies the maximum number of bytes the SPI slave can transmit in one granted transaction. If the SPI slave is forced to transmit more than MAXTX number of bytes, an OVERREAD will be indicated in the STATUS register and the ORC character will be clocked out.

The RXD.AMOUNT and TXD.AMOUNT registers are updated when a granted transaction is completed. The TXD.AMOUNT register indicates how many bytes were read from the TX buffer in the last transaction. This does not include the ORC (over-read) characters. Similarly, the RXD.AMOUNT register indicates how many bytes were written into the RX buffer in the last transaction.

The ENDRX event is generated when the RX buffer has been filled.



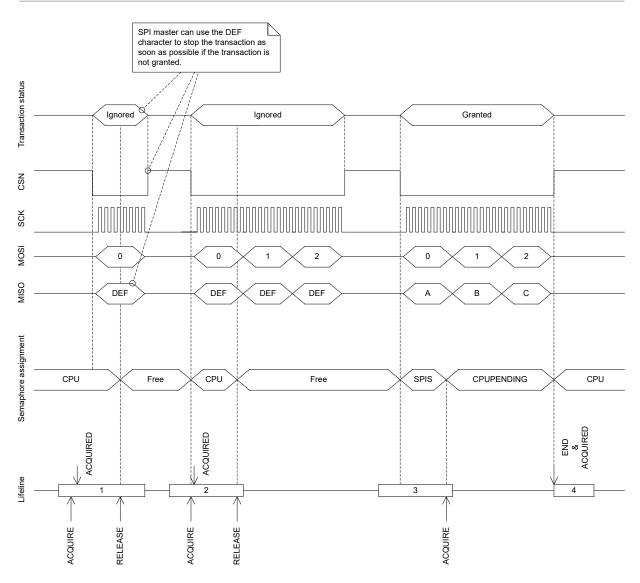


Figure 87: SPI transaction when shortcut between END and ACQUIRE is enabled

6.17.4 Pin configuration

The CSN, SCK, MOSI, and MISO signals associated with the SPI slave are mapped to physical pins according to the configuration specified in the PSEL.CSN, PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers respectively. If the CONNECT field of any of these registers is set to Disconnected, the associated SPI slave signal will not be connected to any physical pins.

The PSEL.CSN, PSEL.SCK, PSEL.MOSI, and PSEL.MISO registers and their configurations are only used as long as the SPI slave is enabled, and retained only as long as the device is in System ON mode. See POWER — Power supply on page 49 chapter for more information about power modes. When the peripheral is disabled, the pins will behave as regular GPIOs and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.CSN, PSEL.SCK, PSEL.MOSI, and PSEL.MISO must only be configured when the SPI slave is disabled.

To secure correct behavior in the SPI slave, the pins used by the SPI slave must be configured in the GPIO peripheral as described in GPIO configuration before enabling peripheral on page 240 before enabling the SPI slave. This is to secure that the pins used by the SPI slave are driven correctly if the SPI slave itself is temporarily disabled, or if the device temporarily enters System OFF. This configuration must be retained in the GPIO for the selected I/Os as long as the SPI slave is to be recognized by an external SPI master.

The MISO line is set in high impedance as long as the SPI slave is not selected with CSN.



Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

SPI signal	SPI pin	Direction	Output value Comment
CSN	As specified in PSEL.CSN	Input	Not applicable
SCK	As specified in PSEL.SCK	Input	Not applicable
MOSI	As specified in PSEL.MOSI	Input	Not applicable
MISO	As specified in PSEL.MISO	Input	Not applicable Emulates that the SPI slave is not selected.

Table 78: GPIO configuration before enabling peripheral

6.17.5 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40004000	SPIS	SPISO	SPI slave	

Table 79: Instances

Register	Offset	Description	
TASKS_ACQUIRE	0x024	Acquire SPI semaphore	
TASKS_RELEASE	0x028	Release SPI semaphore, enabling the SPI slave to acquire it	
EVENTS_END	0x104	Granted transaction completed	
EVENTS_ENDRX	0x110	End of RXD buffer reached	
EVENTS_ACQUIRED	0x128	Semaphore acquired	
SHORTS	0x200	Shortcuts between local events and tasks	
INTENSET	0x304	Enable interrupt	
INTENCLR	0x308	Disable interrupt	
SEMSTAT	0x400	Semaphore status register	
STATUS	0x440	Status from last transaction	
ENABLE	0x500	Enable SPI slave	
PSEL.SCK	0x508	Pin select for SCK	
PSEL.MISO	0x50C	Pin select for MISO signal	
PSEL.MOSI	0x510	Pin select for MOSI signal	
PSEL.CSN	0x514	Pin select for CSN signal	
PSELSCK	0x508	Pin select for SCK	Deprecated
PSELMISO	0x50C	Pin select for MISO	Deprecated
PSELMOSI	0x510	Pin select for MOSI	Deprecated
PSELCSN	0x514	Pin select for CSN	Deprecated
RXDPTR	0x534	RXD data pointer	Deprecated
MAXRX	0x538	Maximum number of bytes in receive buffer	Deprecated
AMOUNTRX	0x53C	Number of bytes received in last granted transaction	Deprecated
RXD.PTR	0x534	RXD data pointer	
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer	
RXD.AMOUNT	0x53C	Number of bytes received in last granted transaction	
RXD.LIST	0x540	EasyDMA list type	
TXDPTR	0x544	TXD data pointer	Deprecated
MAXTX	0x548	Maximum number of bytes in transmit buffer	Deprecated
AMOUNTTX	0x54C	Number of bytes transmitted in last granted transaction	Deprecated
TXD.PTR	0x544	TXD data pointer	
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer	
TXD.AMOUNT	0x54C	Number of bytes transmitted in last granted transaction	
TXD.LIST	0x550	EasyDMA list type	
CONFIG	0x554	Configuration register	



Register	Offset	Description
DEF	0x55C	Default character. Character clocked out in case of an ignored transaction.
ORC	0x5C0	Over-read character

Table 80: Register overview

6.17.5.1 TASKS_ACQUIRE

Address offset: 0x024

Acquire SPI semaphore

Bit numbe	er		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Reset 0x0	0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acc				Description
A W	TASKS_ACQUIRE			Acquire SPI semaphore
		Trigger	1	Trigger task

6.17.5.2 TASKS_RELEASE

Address offset: 0x028

Release SPI semaphore, enabling the SPI slave to acquire it

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_RELEASE			Release SPI semaphore, enabling the SPI slave to acquire it
		Trigger	1	Trigger task

6.17.5.3 EVENTS_END

Address offset: 0x104

Granted transaction completed

Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_END			Granted transaction completed
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.17.5.4 EVENTS_ENDRX

Address offset: 0x110

End of RXD buffer reached



Bit number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_ENDRX			End of RXD buffer reached
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.17.5.5 EVENTS_ACQUIRED

Address offset: 0x128

Semaphore acquired

Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_ACQUIF	RED		Semaphore acquired
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.17.5.6 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW END_ACQUIRE			Shortcut between event END and task ACQUIRE
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.17.5.7 INTENSET

Address offset: 0x304

Enable interrupt

Bit nur	nber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				C B A
Reset	0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID ,				
A	RW END			Write '1' to enable interrupt for event END
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDRX			Write '1' to enable interrupt for event ENDRX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACQUIRED			Write '1' to enable interrupt for event ACQUIRED



Bit number	31 30 29 28 2	7 26 25 24 23 22 21 20	19 18 17 16 15	14 13 12 11 10	9876	54	32	1 0
ID				C		В		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0	0 0 0 0 0	0 0 0 0 0	0000	0 0	0 0	0 0
ID Acce Field Value I	D Value							
Set	1	Enable						
Disable	ed 0	Read: Disab	oled					

6.17.5.8 INTENCLR

Address offset: 0x308

Disable interrupt

Bit r	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				С В А
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW END			Write '1' to disable interrupt for event END
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW ENDRX			Write '1' to disable interrupt for event ENDRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW ACQUIRED			Write '1' to disable interrupt for event ACQUIRED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.17.5.9 SEMSTAT

Address offset: 0x400

Semaphore status register

Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x0000001		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A R SEMSTAT			Semaphore status
	Free	0	Semaphore is free
	CPU	1	Semaphore is assigned to CPU
	SPIS	2	Semaphore is assigned to SPI slave
	CPUPending	3	Semaphore is assigned to SPI but a handover to the CPU is
			pending

6.17.5.10 STATUS

Address offset: 0x440

Status from last transaction

Individual bits are cleared by writing a $1\ \mbox{to the bits that shall be cleared}$



Bit number		31 30 29 28 27 2	6 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B A
Reset 0x0000000		0 0 0 0 0) 0 (
ID Acce Field				Description
A RW OVERREAD				TX buffer over-read detected, and prevented
	NotPresent	0		Read: error not present
	Present	1		Read: error present
	Clear	1		Write: clear error on writing '1'
B RW OVERFLOW				RX buffer overflow detected, and prevented
	NotPresent	0		Read: error not present
	Present	1		Read: error present
	Clear	1		Write: clear error on writing '1'

6.17.5.11 ENABLE

Address offset: 0x500

Enable SPI slave

Bit number	31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A
Reset 0x0000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW ENABLE		Enable or disable SPI slave
Disabled	0	Disable SPI slave
Enabled	2	Enable SPI slave

6.17.5.12 PSEL.SCK

Address offset: 0x508

Pin select for SCK

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	et OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.13 PSEL.MISO

Address offset: 0x50C

Pin select for MISO signal



Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	$1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \$
ID				Description
A	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.14 PSEL.MOSI

Address offset: 0x510

Pin select for MOSI signal

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.15 PSEL.CSN

Address offset: 0x514

Pin select for CSN signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.17.5.16 PSELSCK (Deprecated)

Address offset: 0x508

Pin select for SCK

~	NW TSELSER	Disconnected	0xFFFFFFF	Disconnect
Α	RW PSELSCK		[031]	Pin number configuration for SPI SCK signal
ID				Description
Rese	t OxFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			A A A A A A A	A A A A A A A A A A A A A A A A A A A
Bit n	umber		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.17 PSELMISO (Deprecated)

Address offset: 0x50C



Pin select for MISO

Bit n	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	1 0
ID				A A
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1
ID				
А	RW PSELMISO		[031] Pin number configuration for SPI MISO signal	
		Disconnected	0xFFFFFFF Disconnect	

6.17.5.18 PSELMOSI (Deprecated)

Address offset: 0x510

Pin select for MOSI

		Disconnected	OxFFFFFFF	Disconnect
А	RW PSELMOSI		[031]	Pin number configuration for SPI MOSI signal
ID				Description
Res	et OxFFFFFFF		1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID			ААААААА	A A A A A A A A A A A A A A A A A A A
Bit r	number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.19 PSELCSN (Deprecated)

Address offset: 0x514

Pin select for CSN

Bit n	umber		31 30 2	9 28	27 :	262	25 24	1 23	22	212	0 19	18	17 :	16 1	5 14	13	12 1	1 10	9	8	7	6	5	4 3	32	1	0
ID			AAA	A A	А	A	A A	A	А	A	A A	А	A	A A	A	А	A	A A	А	А	А	А	A	A A	A A	А	A
Rese	et OxFFFFFFF		1 1 3	11	1	1	1 1	1	1	1 :	1 1	1	1	1 1	. 1	1	1	1 1	1	1	1	1	1	1 1	L 1	1	1
ID																											
А	RW PSELCSN		[031]					Pir	n nu	mbe	er co	nfig	ura	tion	for	SPI	CSN	sign	al								
		Disconnected	0xFFFF	FFFF				Di	scor	nnec	t																

6.17.5.20 RXDPTR (Deprecated)

Address offset: 0x534

RXD data pointer

Bit n	umber		31	. 30	29	28	27 2	6 2	5 24	4 23	22	21	20 1	.9 1	8 17	16	15	14 1	13 1	2 1	1 10	9	8	7	6	5	4 3	3 2	1	0
ID			А	А	A	А	A	4 ۸	Α Α	A	А	A	A	A A	A A	A	А	A	AA	AA	A	A	А	А	А	A	A A	AA	A	А
Rese	t 0x000	00000	0	0	0	0	0 ()	0 0	0	0	0	0	0 0	0 0	0	0	0	0 0) (0	0	0	0	0	0	0 0) (0	0
ID																														
А	RW R	XDPTR								R۶	D d	ata	poi	ntei	r															

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.21 MAXRX (Deprecated)

Address offset: 0x538

Maximum number of bytes in receive buffer



Bit n	umber	31 30 29 28 27 26 25 2	4 23 22	2 21 20) 19 1	8 17	16 19	5 14	13 1	2 11	. 10	9	8 7	6	5	4	3 2	2 1	0
ID									A	A A	А	А	A A	A	А	А	A A	A A	А
Rese	t 0x0000000	0 0 0 0 0 0 0	0 0 0	0 0	0 0	0 0	0 0	0	0 (0 0	0	0	0 0	0	0	0	0 0) 0	0
ID																			
A	RW MAXRX	[00x3FFF]	Maxi	mum	numb	er of	byte	s in i	rece	ive l	ouffe	er							

6.17.5.22 AMOUNTRX (Deprecated)

Address offset: 0x53C

Number of bytes received in last granted transaction

Bit n	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	t 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
А	R AMOUNTRX	[00x3FFF]	Number of bytes received in the last granted transaction

6.17.5.23 RXD.PTR

Address offset: 0x534

RXD data pointer

ID		Value Description
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

A RW PTR

RXD data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.24 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer

^	RW MAXCNT	[00x3FFF]	Maximum number of bytes in receive buffer
ID			
Res	et 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit r	number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.25 RXD.AMOUNT

Address offset: 0x53C

Number of bytes received in last granted transaction

Bit n	umber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14	
ID				A A A A A A A A A A A A A A A
Rese	et 0x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID	Acce Field	Value ID	Value Description	



6.17.5.26 RXD.LIST

Address offset: 0x540

EasyDMA list type

Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.17.5.27 TXDPTR (Deprecated)

Address offset: 0x544

TXD data pointer

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field	Value Description
A RW TXDPTR	TXD data pointer
	See the memory chapter for details about which memories

are available for EasyDMA.

6.17.5.28 MAXTX (Deprecated)

Address offset: 0x548

Maximum number of bytes in transmit buffer

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW MAXTX	[00x3FFF] Maximum number of bytes in transmit buffer

6.17.5.29 AMOUNTTX (Deprecated)

Address offset: 0x54C

Number of bytes transmitted in last granted transaction

Reset 0x00000000 ID Acce Field Value ID	0 0	00000
Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	00000
ID	A A A A A A A A A A A A A A A A A A A	AAAAA
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5	4 3 2 1 0

6.17.5.30 TXD.PTR

Address offset: 0x544



TXD data pointer

ID A	
ID A A A A A A A A A A A A A A A A A A A	0 0 0 0 0
	AAAAA
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6	543210

See the memory chapter for details about which memories are available for EasyDMA.

6.17.5.31 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

A	RW MAXCNT	[00x3FFF]	Maximum number of bytes in transmit buffer
ID			
Res	et 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit r	umber	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.17.5.32 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transmitted in last granted transaction

ID Reset 0x00000000 Value ID Value Value <th></th>	
ID A A A A A A A A	00000
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7	43210

6.17.5.33 TXD.LIST

Address offset: 0x550

EasyDMA list type

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.17.5.34 CONFIG

Address offset: 0x554

Configuration register



Bit r	umber		31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Res	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
А	RW ORDER			Bit order
		MsbFirst	0	Most significant bit shifted out first
		LsbFirst	1	Least significant bit shifted out first
В	RW CPHA			Serial clock (SCK) phase
		Leading	0	Sample on leading edge of clock, shift serial data on trailing
				edge
		Trailing	1	Sample on trailing edge of clock, shift serial data on leading
				edge
с	RW CPOL			Serial clock (SCK) polarity
		ActiveHigh	0	Active high
		ActiveLow	1	Active low

6.17.5.35 DEF

Address offset: 0x55C

Default character. Character clocked out in case of an ignored transaction.

Bit r	umber	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A
Rese	et 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			Description
А	RW DEF		Default character. Character clocked out in case of an
			ignored transaction.

6.17.5.36 ORC

Address offset: 0x5C0

Over-read character

Bit r	number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A
Res	et 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			Description
А	RW ORC		Over-read character. Character clocked out after an over-
			read of the transmit buffer.

6.17.6 Electrical specification

6.17.6.1 SPIS slave interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{SPIS}	Bit rates for SPIS ²⁶			8 ²⁷	Mbps
t _{SPIS,START}	Time from RELEASE task to receive/transmit (CSN active)				μs


²⁶ High bit rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.

 ²⁷ The actual maximum data rate depends on the master's CLK to MISO and MOSI setup and hold timings.



Description	Min	. Тур	. Max.	Units
SCK input period				ns
SCK input rise/fall time			30	ns
SCK input high time	30			ns
SCK input low time	30			ns
CSN to CLK setup time				ns
CLK to CSN hold time	100	D		ns
CSN to MISO driven				ns
CSN to MISO valid ²⁸			1000	ns
CSN to MISO disabled ²⁸			68	ns
CSN inactive time	300			ns
CLK edge to MISO valid			19	ns
MISO hold time after CLK edge	18 ²¹)		ns
MOSI to CLK edge setup time	59			ns
CLK edge to MOSI hold time	20			ns
	SCK input rise/fall time SCK input high time SCK input low time CSN to CLK setup time CLK to CSN hold time CSN to MISO driven CSN to MISO valid ²⁸ CSN to MISO valid MISO hold time after CLK edge MOSI to CLK edge setup time	SCK input period SCK input rise/fall time SCK input high time SCK input low time SCK to put low time CSN to CLK setup time CLK to CSN hold time 1000 CSN to MISO driven CSN to MISO valid ²⁸ MISO hold time after CLK edge MOSI to CLK edge setup time	SCK input periodSCK input rise/fall time30SCK input high time30SCK input low time30SCK noput low timeCSN to CLK setup timeCLK to CSN hold time1000CSN to MISO drivenCSN to MISO valid ²⁸ CSN to MISO valid ²⁸ MISO hold time after CLK edge18 ²⁹ MOSI to CLK edge setup time59	SCK input period 30 SCK input rise/fall time 30 30 SCK input high time 30 SCK input low time 30 SCK to CLK setup time CSN to CLK setup time CLK to CSN hold time 1000 CSN to MISO driven CSN to MISO valid ²⁸ CSN to MISO valid MISO hold time after CLK edge MISO hold time after CLK edge setup time

6.17.6.2 Serial Peripheral Interface Slave (SPIS) timing specifications

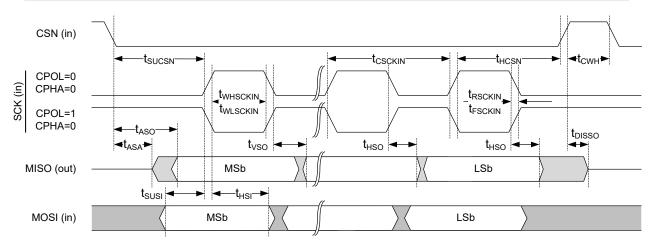

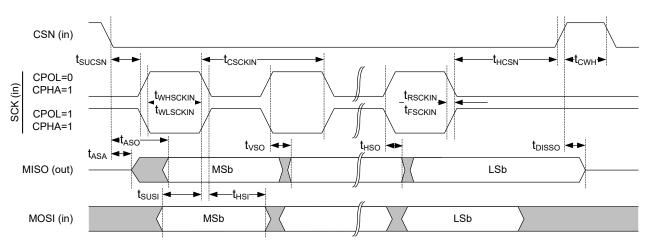


Figure 88: SPIS timing diagram

²⁸ At 25 pF load, including GPIO capacitance, see GPIO electrical specification.

²⁹ This is to ensure compatibility to SPI masters sampling MISO on the same edge as MOSI is output



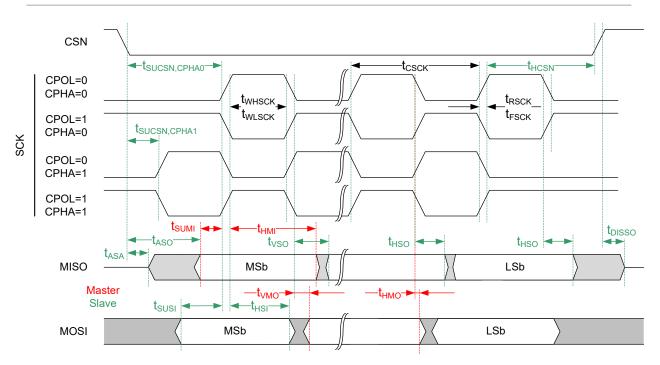


Figure 89: Common SPIM and SPIS timing diagram

6.18 SWI — Software interrupts

A set of interrupts have been reserved for use as software interrupts.

6.18.1 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40014000	SWI	SWI0	Software interrupt 0		
0x40015000	SWI	SWI1	Software interrupt 1		
0x40016000	SWI	SWI2	Software interrupt 2		
0x40017000	SWI	SWI3	Software interrupt 3		
0x40018000	SWI	SWI4	Software interrupt 4		
0x40019000	SWI	SWI5	Software interrupt 5		

Table 81: Instances

6.19 TEMP — Temperature sensor

The temperature sensor measures die temperature over the temperature range of the device. Linearity compensation can be implemented if required by the application.

Listed here are the main features for TEMP:

- Temperature range is greater than or equal to operating temperature of the device
- Resolution is 0.25 degrees

TEMP is started by triggering the START task.

When the temperature measurement is completed, a DATARDY event will be generated and the result of the measurement can be read from the TEMP register.



To achieve the measurement accuracy stated in the electrical specification, the crystal oscillator must be selected as the HFCLK source, see CLOCK - Clock control on page 63 for more information.

When the temperature measurement is completed, TEMP analog electronics power down to save power.

TEMP only supports one-shot operation, meaning that every TEMP measurement has to be explicitly started using the START task.

6.19.1 Registers

Base address	Peripheral	Instance	Description	Configuration
0x4000C000	TEMP	TEMP	Temperature sensor	

Table 82: Instances

Register	Offset	Description
TASKS_START	0x000	Start temperature measurement
TASKS_STOP	0x004	Stop temperature measurement
EVENTS_DATARDY	0x100	Temperature measurement complete, data ready
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
TEMP	0x508	Temperature in °C (0.25° steps)
A0	0x520	Slope of first piecewise linear function
A1	0x524	Slope of second piecewise linear function
A2	0x528	Slope of third piecewise linear function
A3	0x52C	Slope of fourth piecewise linear function
A4	0x530	Slope of fifth piecewise linear function
A5	0x534	Slope of sixth piecewise linear function
во	0x540	y-intercept of first piecewise linear function
B1	0x544	y-intercept of second piecewise linear function
B2	0x548	y-intercept of third piecewise linear function
B3	0x54C	y-intercept of fourth piecewise linear function
B4	0x550	y-intercept of fifth piecewise linear function
B5	0x554	y-intercept of sixth piecewise linear function
то	0x560	End point of first piecewise linear function
T1	0x564	End point of second piecewise linear function
Т2	0x568	End point of third piecewise linear function
Т3	0x56C	End point of fourth piecewise linear function
Τ4	0x570	End point of fifth piecewise linear function

Table 83: Register overview

6.19.1.1 TASKS_START

Address offset: 0x000

Start temperature measurement

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_START			Start temperature measurement
		Trigger	1	Trigger task



6.19.1.2 TASKS_STOP

Address offset: 0x004

Stop temperature measurement

Bit n	umber		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STOP			Stop temperature measurement
		Trigger	1	Trigger task

6.19.1.3 EVENTS_DATARDY

Address offset: 0x100

Temperature measurement complete, data ready

Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_DATARDY			Temperature measurement complete, data ready
	NotGenerated	0	Event not generated
	Generated	1	Event generated
	Generated	1	Event generated

6.19.1.4 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW DATARDY			Write '1' to enable interrupt for event DATARDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled		Read: Enabled

6.19.1.5 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW DATARDY			Write '1' to disable interrupt for event DATARDY
	Clear	1	Disable
	Disabled	0	Read: Disabled

6.19.1.6 TEMP

Address offset: 0x508

Temperature in °C (0.25° steps)

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A R TEMP	Temperature in °C (0.25° steps)
	Result of temperature measurement. Die temperature in °C, 2's complement format, 0.25 °C steps.

Decision point: DATARDY

6.19.1.7 A0

Address offset: 0x520

Slope of first piecewise linear function

Bit n	umber	31	30 2	9 28	3 27	26	25 2	24 2	3 22	2 2 1	1 20	19	18 1	171	61	5 14	4 1 3	12	11 1	.0 9	Э	B 7	6	5	4	3	2	1 0
ID																			A.	Α,	4 ،	A A	A	А	A	А	A	A A
Rese	t 0x00000326	0	0 0) 0	0	0	0	0	0 0	0	0	0	0	0 0) () 0	0	0	0	0 :	L	1 0	0	1	0	0	1	1 0
ID																												
А	RW A0							S	lop	e of	firs	t pi	ece	wise	e lin	ear	fun	ctio	n									

6.19.1.8 A1

Address offset: 0x524

Slope of second piecewise linear function

0110100100
0 1 1 0 1 0 0 1 0 0
A A A A A A A A A A
110 9 8 7 6 5 4 3 2 1
13 12 13

6.19.1.9 A2

Address offset: 0x528

Slope of third piecewise linear function



Bit n	umber	31 30 29 28 27 26 25 2	24 23 2	2 21 2	20 19 3	18 17	16 1	.5 14	13 1	2 11	10	9	87	6	5	4	3 2	1)
ID										А	А	A ,	A Α	А	А	А	ΑA	A	1
Rese	t 0x000003AA	0 0 0 0 0 0 0	000	0 0	0 0	0 0	0 (0 0	0 0	0 0	0	1	1 1	0	1	0	1 0	1)
ID																			
A	RW A2		Slop	e of t	hird pi	iecew	/ise li	inea	r func	tion									

6.19.1.10 A3

Address offset: 0x52C

Slope of fourth piecewise linear function

Bit number	31 30 29 28	27 26 25 24	4 23 22	21 20	19 18	3 17 1	6 15	14 13	12 11	10	9	87	6	5	4	32	1 0
ID									А	А	A	A A	А	А	A	A A	AA
Reset 0x0000040E	0 0 0 0	0000	0 0	0 0	0 0	0 0	0 0	0 0	0 0	1	0	0 0	0	0	0	11	1 0
ID Acce Field																	
A RW A3			Slope	of fou	rth pi	ecew	ise liı	near fi	unctio	n							

6.19.1.11 A4

Address offset: 0x530

Slope of fifth piecewise linear function

Bit n	umber	31 30	29 2	8 27	26 2	5 24	23 2	22 2	1 20	19	18 1	7 16	15	14 1	3 12	11	10	9	8 7	' E	5 5	4	3	2	1 0
ID																А	А	A	A	A	A	А	А	A	A A
Rese	t 0x000004BD	0 0	0	0 0	0 0	0 0	0	0 0	0 0	0	0 0	0 0	0	0	0 0	0	1	0	0 :	. 0) 1	1	1	1	01
ID																									
А	RW A4						Slop	pe o	of fift	:h pi	ecev	vise	line	ar fi	uncti	on									_

A RW A4

6.19.1.12 A5

Address offset: 0x534

Slope of sixth piecewise linear function

А	RW A5	Slope of sixth piecewise linear function
ID		Value Description
Rese	t 0x000005A3	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.19.1.13 BO

Address offset: 0x540

y-intercept of first piecewise linear function

ID Acce Field Value ID	Value Description
Reset 0x00003FLF	
Reset 0x00003FEF	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1
ID	A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0



6.19.1.14 B1

Address offset: 0x544

y-intercept of second piecewise linear function

A RW B1		y-in	tercept	of sec	ond p	iecev	vise l	inear	fund	tior	1					
ID Acce Field																
Reset 0x00003FBE	0 0 0 0 0	0 0 0 0	000	0 0	0 0	0	01	1 1	. 1	1	1 1	0	1 1	. 1	1	1 0
ID							А	A A	A	A	A A	А	A A	A	А	A A
Bit number	31 30 29 28 27 2	26 25 24 23 2	22 21 20) 19 18	3 17 1	6 15 :	14 13	12 1	1 10	9	87	6	5 4	3	2	1 0

6.19.1.15 B2

Address offset: 0x548

y-intercept of third piecewise linear function

Bit n	umber	31 30 2	9 28 27	7 26 25	24 2	3 22	21 20) 19 :	18 17	16 1						-			_	1 0 A A
Rese	t 0x00003FBE	000	000	0 0	0 (0 0	0 0	0	0 0	0 0										
ID																				
A	RW B2				у	-inte	rcept	of th	nird p	iecev	vise l	inea	ır fu	nctio	on					

6.19.1.16 B3

Address offset: 0x54C

y-intercept of fourth piecewise linear function

А	RW B3		y-intercept of four	rth piecewis	e linear	functi	on				
ID											
Res	et 0x00000012	0 0 0 0 0 0 0	0 0 0 0 0 0	0000	00	00	0 0	0 0	0 1	0	010
ID					AA	A A /	A A	A A	A A	A	ΑΑΑ
Bit r	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18	17 16 15 14	13 12 1	1 10 9	8	76	5 4	3	210

6.19.1.17 B4

Address offset: 0x550

y-intercept of fifth piecewise linear function

Bit n	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	t 0x00000124	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 0 0 1 0 0 1 0 0
ID			
	RW B4		y-intercept of fifth piecewise linear function

6.19.1.18 B5

Address offset: 0x554

y-intercept of sixth piecewise linear function



Bit n	umber	31 30 29 28	27 26 25 2	24 23 2	2 21 2	0 19 1	18 17 :	16 15	14 13	12 1	1 10	9	8 7	6	5	4 3	32	1 0
ID									А	A	A A	А	A A	A	А	A A	A A	A A
Rese	t 0x0000027C	0 0 0 0	000	000	0 0 0	0 0	0 0	0 0	0 0	0	0 0	1	0 0	1	1	1 1	L 1	0 0
ID																		
А	RW B5			y-int	tercep	t of si	xth pie	ecewis	se lin	ear fu	ncti	on						

6.19.1.19 TO

Address offset: 0x560

End point of first piecewise linear function

ID												A	A A	A A	A	A A	AA
Rese	t 0x000000E2		0 0 0 0 0 0 0 0	0 0 0	000	0 0	0 0	0 0	0 0 0	0 0	0	1	1 1	0	0	0 1	0
										•••	Ŭ						
ID	Acce Field	Value ID	Value	Descriptio		, , ,					Ū	_	_				

6.19.1.20 T1

Address offset: 0x564

End point of second piecewise linear function

Bit n	umber	31 30 29	9 28 27	26 25	24 23	3 2 2	21 20	19 1	L8 17	16 3	15 14	413	12 13	. 10	9 8	37	6	5	4	32	! 1	0
ID																A	А	А	А	A A	A	А
Rese	t 0x0000000	0 0 0	0 0	0 0	0 0	0	0 0	0	0 0	0	0 0	0	0 0	0	0 0	0 0	0	0	0	0 0	0	0
ID																						
А	RW T1				Er	nd po	oint o	f sec	ond	piec	ewis	e lin	ear fu	incti	on							_

6.19.1.21 T2

Address offset: 0x568

End point of third piecewise linear function

Bit n	umber	31 30 29 28 27 26 25 3	24 23 22 2	21 20 1	19 18 :	17 16	15 1	4 13 1	L2 11	10 9	8	7	6	54	4 3	2	1 0
ID												A	A	A A	A	А	A A
Rese	t 0x00000019	0 0 0 0 0 0 0	000	00	0 0	0 0	0 0	0 0	0 0	0 0	0	0	0	01	. 1	0	0 1
ID																	
А	RW T2		End po	oint of	third	piece	wise	linear	func	tion							

6.19.1.22 T3

Address offset: 0x56C

End point of fourth piecewise linear function

A	RW T3		End point of fourth	piecewise linear	function				
ID									
Rese	t 0x0000003C	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0		0000	0 0	1 :	11	100
ID						A A	. A /	A A	ΑΑΑ
Bit n	umber	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 1	7 16 15 14 13 12	11 10 9 8	76	5 4	43	210



6.19.1.23 T4

Address offset: 0x570

End point of fifth piecewise linear function

ID Acce Field		
Reset 0x00000050	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.19.2 Electrical specification

6.19.2.1 Temperature Sensor Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{TEMP}	Time required for temperature measurement		36		μs
T _{TEMP,RANGE}	Temperature sensor range	-40		85	°C
T _{TEMP,ACC}	Temperature sensor accuracy	-5		5	°C
T _{TEMP,RES}	Temperature sensor resolution		0.25		°C
T _{TEMP,STB}	Sample to sample stability at constant device temperature		+/-0.25		°C
T _{TEMP,OFFST}	Sample offset at 25°C	-2.5		2.5	°C

6.20 TWI — I^2C compatible two-wire interface

The TWI master is compatible with I²C operating at 100 kHz and 400 kHz.

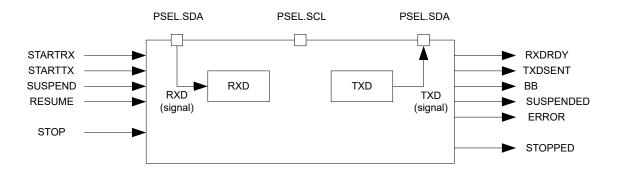


Figure 90: TWI master's main features

6.20.1 Functional description

This TWI master is not compatible with CBUS. The TWI transmitter and receiver are single buffered.

See TWI master's main features on page 259.

A TWI setup with one master and three slaves is shown in the following figure. This TWI master is only able to operate as the only master on the TWI bus.



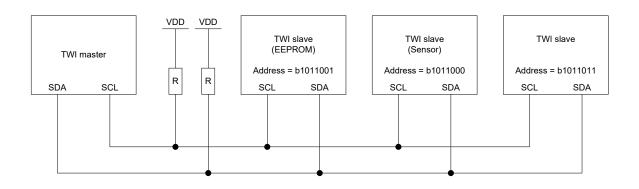


Figure 91: A typical TWI setup with one master and three slaves

This TWI master supports clock stretching performed by the slaves. The TWI master is started by triggering the STARTTX or STARTRX tasks, and stopped by triggering the STOP task.

If a NACK is clocked in from the slave, the TWI master will generate an ERROR event.

6.20.2 Master mode pin configuration

The different signals SCL and SDA associated with the TWI master are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated TWI signal is not connected to any physical pin. The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI master is enabled, and retained only as long as the device is in ON mode. PSEL.SCL and PSEL.SDA must only be configured when TWI is disabled.

To secure correct signal levels on the pins used by the TWI master when the system is in OFF mode, and when the TWI master is disabled, these pins must be configured in the GPIO peripheral as described in GPIO configuration on page 260.

Only one peripheral can be assigned to drive a particular GPIO pin at a time, failing to do so may result in unpredictable behavior.

TWI master signal	TWI master pin	Direction	Drive strength	Output value
SCL	As specified in PSEL.SCL	Input	S0D1	Not applicable
SDA	As specified in PSEL.SDA	Input	S0D1	Not applicable

Table 84: GPIO configuration

6.20.3 Shared resources

TWI shares registers and other resources with other peripherals that have the same ID as TWI.

Therefore, you must disable all peripherals that have the same ID as TWI before TWI can be configured and used. Disabling a peripheral that has the same ID as TWI will not reset any of the registers that are shared with TWI. It is therefore important to configure all relevant TWI registers explicitly to secure that it operates correctly.

The Instantiation table in Instantiation on page 17 shows which peripherals have the same ID as TWI.



6.20.4 Master write sequence

A TWI master write sequence is started by triggering the STARTTX task. After the STARTTX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1).

The address must match the address of the slave device that the master wants to write to. The READ/ WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) generated by the slave.

After receiving the ACK bit, the TWI master will clock out the data bytes that are written to the TXD register. Each byte clocked out from the master will be followed by an ACK/NACK bit clocked in from the slave. A TXDSENT event will be generated each time the TWI master has clocked out a TXD byte, and the associated ACK/NACK bit has been clocked in from the slave.

The TWI master transmitter is single buffered. A second byte can only be written to the TXD register after the previous byte has been clocked out and the ACK/NACK bit clocked in, that is, after the TXDSENT event has been generated.

If the CPU is prevented from writing to TXD when the TWI master is ready to clock out a byte, the TWI master will stretch the clock until the CPU has written a byte to the TXD register.

A typical TWI master write sequence is illustrated in The TWI master writing data to a slave on page 261. Occurrence 3 in the figure illustrates delayed processing of the TXDSENT event associated with TXD byte 1. In this scenario the TWI master will stretch the clock to prevent writing erroneous data to the slave.

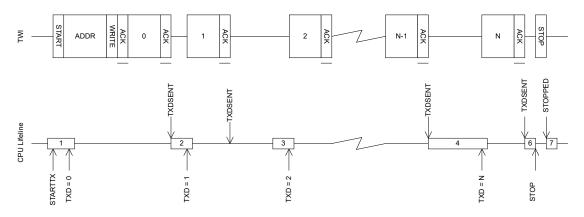


Figure 92: The TWI master writing data to a slave

The TWI master write sequence is stopped when the STOP task is triggered, causing the TWI master to generate a stop condition on the TWI bus.

6.20.5 Master read sequence

A TWI master read sequence is started by triggering the STARTRX task. After the STARTRX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE = 0, READ = 1).

The address must match the address of the slave device that the master wants to read from. The READ/ WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK = 1) generated by the slave.

After having sent the ACK bit, the TWI slave will send data to the master using the clock generated by the master.

The TWI master will generate a RXDRDY event every time a new byte is received in the RXD register.

After receiving a byte, the TWI master will delay sending the ACK/NACK bit by stretching the clock until the CPU has extracted the received byte, by reading the RXD register.



The TWI master read sequence is stopped by triggering the STOP task. This task must be triggered before the last byte is extracted from RXD to ensure that the TWI master sends a NACK back to the slave before generating the stop condition.

A typical TWI master read sequence is illustrated in The TWI master reading data from a slave on page 262. Occurrence 3 in this figure illustrates delayed processing of the RXDRDY event associated with RXD byte B. In this scenario the TWI master will stretch the clock to prevent the slave from overwriting the contents of the RXD register.

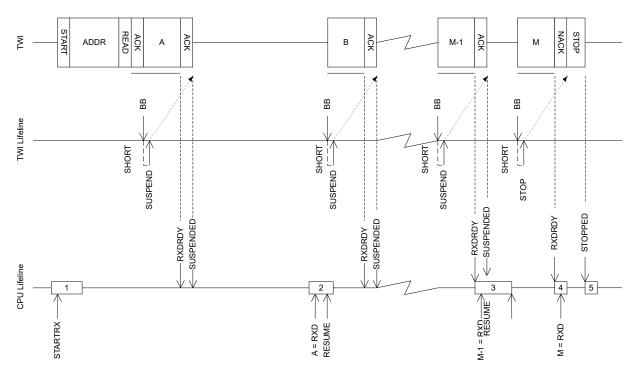


Figure 93: The TWI master reading data from a slave

6.20.6 Master repeated start sequence

A typical repeated start sequence is one in which the TWI master writes one byte to the slave followed by reading M bytes from the slave. Any combination and number of transmit and receive sequences can be combined in this fashion. Only one shortcut to STOP can be enabled at any given time.

The following figure shows a repeated start sequence where the TWI master writes one byte, followed by reading M bytes from the slave without performing a stop in-between.



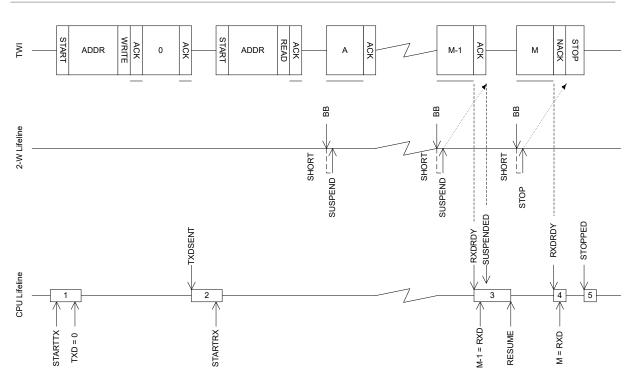


Figure 94: Repeated start sequence illustration

To generate a repeated start after a read sequence, a second start task, STARTRX or STARTTX, must be triggered instead of the STOP task. This start task must be triggered before the last byte is extracted from RXD to ensure that the TWI master sends a NACK back to the slave before generating the repeated start condition.

6.20.7 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task is not always needed, like when the peripheral is already stopped. If the STOP task is sent, the software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.20.8 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	TWI	TWI0	Two-wire interface master		Deprecated
			Table 85: Instan	ces	
Register	Offset	Descri	otion		
TASKS_STARTRX	0x000	Start T	WI receive sequence		
TASKS_STARTTX	0x008	Start T	WI transmit sequence		
TASKS_STOP	0x014	Stop T	WI transaction		
TASKS_SUSPEND	0x01C	Susper	d TWI transaction		
TASKS_RESUME	0x020	Resum	e TWI transaction		
EVENTS_STOPPED	0x104	TWI sto	opped		
EVENTS_RXDREAD	Y 0x108	TWI RX	D byte received		
EVENTS_TXDSENT	0x11C	TWITX	D byte sent		
EVENTS_ERROR	0x124	TWI er	ror		



Register	Offset	Description
EVENTS_BB	0x138	TWI byte boundary, generated before each byte that is sent or received
EVENTS_SUSPENDED	0x148	TWI entered the suspended state
SHORTS	0x200	Shortcuts between local events and tasks
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x4C4	Error source
ENABLE	0x500	Enable TWI
PSEL.SCL	0x508	Pin select for SCL
PSEL.SDA	0x50C	Pin select for SDA
RXD	0x518	RXD register
TXD	0x51C	TXD register
FREQUENCY	0x524	TWI frequency. Accuracy depends on the HFCLK source selected.
ADDRESS	0x588	Address used in the TWI transfer

Table 86: Register overview

6.20.8.1 TASKS_STARTRX

Address offset: 0x000

Start TWI receive sequence

Bit n	umber		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STARTRX			Start TWI receive sequence
		Trigger	1	Trigger task

6.20.8.2 TASKS_STARTTX

Address offset: 0x008

Start TWI transmit sequence

Bit n	um	ber		31 30 29 2	8 27 26	25 24	4 23 2	2 2 1	20 1	9 18	17	16 1	5 14 1	3 12	11 1	09	8	76	5	4	32	1 0
ID																						A
Rese	et 0	x0000000		0 0 0 0	000	0 0	0 0	0 0	0 0	0 0	0	0 0	0	0 0	0	0 0	0	0 0	0	0	0 0	0 0
ID																						
А	V	/ TASKS_STARTTX					Star	t TW	'l trar	nsmi	t seo	quen	ce									
			Trigger	1			Trigg	ger ta	ask													

6.20.8.3 TASKS_STOP

Address offset: 0x014

Stop TWI transaction

Bit number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOP			Stop TWI transaction
	Trigger	1	Trigger task



6.20.8.4 TASKS_SUSPEND

Address offset: 0x01C

Suspend TWI transaction

Bit n	ur	nbe	r		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID					,
Rese	et (0x0	000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					
А	,	w	TASKS_SUSPEND		Suspend TWI transaction
				Trigger	1 Trigger task

6.20.8.5 TASKS_RESUME

Address offset: 0x020

Resume TWI transaction

Bit n	umbe	r		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					A
Rese	t 0x0	000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	w	TASKS_RESUME			Resume TWI transaction
			Trigger	1	Trigger task

6.20.8.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped

Bit number		31 30 29 28 27 26	2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_STOPPED			TWI stopped
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.20.8.7 EVENTS_RXDREADY

Address offset: 0x108

TWI RXD byte received

Bit n	umber		31 30 2	9 28 2	27 26	5 25	24	23 2	2 2	1 20) 19	18	17	16 1	5 1	4 13	12	11 1	09	8	7	6	5	4	3	2 1	0
ID																											А
Rese	t 0x0000000		0 0	0 0	0 0	0	0	0 0	0 (0 0	0	0	0	0	0 0	0	0	0 (0 0	0	0	0	0	0	0 (0 0	0
ID								Desc																			
А	RW EVENTS_RXDREADY							TWI	RX	D by	/te i	rece	eive	d													
		NotGenerated	0				I	Ever	nt n	not g	ene	rate	ed														
		Generated	1				I	Ever	nt g	gene	rate	d															



6.20.8.8 EVENTS_TXDSENT

Address offset: 0x11C

TWI TXD byte sent

Bit n	umber		31 3	0 2	9 28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12 1	11	09	8	7	6	5	4	3	2	1 0
ID																															А
Rese	t 0x0000000		0 (0 (0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0 0
ID																															
А	RW EVENTS_TXDSENT									т٧	VI T	ΧD	by	te s	ent	t															
		NotGenerated	0							Ev	ent	no	t ge	ene	rate	ed															
		Generated	1							Ev	ent	ge	ner	ate	d																

6.20.8.9 EVENTS_ERROR

Address offset: 0x124

TWI error

Bit n	umber		31 30 29	28 27	26 25	5 24	23 22	2 21 2	20 19	9 18	17 1	6 15	14 1	.3 12	11 1	.0 9	8	7	6	5	43	2	1 0
ID																							А
Rese	t 0x0000000		0 0 0	0 0	0 0	0	0 0	0	0 0	0	0 (0 0	0	0 0	0	0 0	0	0	0	0	0 0	0	0 0
ID							Desc																
А	RW EVENTS_ERROR						TWI	error															
		NotGenerated	0				Even	t not	gen	erat	ed												
		Generated	1				Even	t gen	erat	ed													

6.20.8.10 EVENTS_BB

Address offset: 0x138

TWI byte boundary, generated before each byte that is sent or received

Bit number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_BB			TWI byte boundary, generated before each byte that is sent
			or received
	NotGenerated	0	Event not generated
	Generated		Event generated

6.20.8.11 EVENTS_SUSPENDED

Address offset: 0x148

TWI entered the suspended state

Generated just after ACK bit has been transferred in a read transaction, and only if SUSPEND has been requested earlier.



Bit n	ımber		31 30) 29	28	27	26	5 25	5 2	4 2	3 2 2	2 2 1	20	19	18	17	16	5 15	5 14	41	31	21	1 1	09	8	7	6	5	4	3	2	1	0
ID																																	A
Rese	t 0x0000000		0 0	0	0	0	0	0	C) (0	0	0	0	0	0	0	0	0	C) () (0	0	0	0	0	0	0	0	0	0	0
А	RW EVENTS_SUSPENDED									Т	W١	ente	erec	d th	ne s	sus	per	nde	ed s	tat	e												
										G	ene	erate	ed j	ust	af	ter	AC	КĿ	oit ł	nas	be	en	tra	nsfe	erre	d iı	۱a						
										re	ead	trar	nsad	ctic	on,	an	d oi	nly	if S	505	SPE	ND	ha	s be	een	rec	lne	steo	d				
										e	arlie	er.																					
		NotGenerated	0							E	vent	t no	t ge	ene	erat	ed																	
		Generated	1							E١	vent	t gei	ner	ate	d																		

6.20.8.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 3	0 29	28	27	26	25	24	23 2	222	212	20	19 1	8	17 :	16	15 3	14 2	.3 1	21	1 10	9	8	7	6	5	4	3	2 1	. 0
ID																														E	3 A
Rese	t 0x0000000		0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 () (0	0	0	0	0	0	0	0) () ()
ID																															
A	RW BB_SUSPEND									Sho	ortc	ut k	pet	we	en	eve	nt	BB	and	l ta	sk S	USF	EN	D							
		Disabled	0							Disa	able	e sh	or	tcu	:																
		Enabled	1							Ena	ble	e sh	ort	cut																	
В	RW BB_STOP									Sho	ortc	ut k	bet	we	en	eve	nt	BB	and	l ta	sk S	TOF	•								
		Disabled	0							Disa	able	e sh	or	tcu	:																
		Enabled	1							Ena	ble	e sh	ort	cut																	

6.20.8.13 INTENSET

Address offset: 0x304

Enable interrupt

Bit r	umber		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RXDREADY			Write '1' to enable interrupt for event RXDREADY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW TXDSENT			Write '1' to enable interrupt for event TXDSENT
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled



Bit r	umber		31 30 29 28 27 26 25 24	¹ 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
Е	RW BB			Write '1' to enable interrupt for event BB
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to enable interrupt for event SUSPENDED
				Generated just after ACK bit has been transferred in a
				read transaction, and only if SUSPEND has been requested
				earlier.
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.20.8.14 INTENCLR

Address offset: 0x308

Disable interrupt

Bit r	number		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Res	et 0x00000000		0 0 0 0 0 0 0	
ID				
А	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW RXDREADY			Write '1' to disable interrupt for event RXDREADY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW TXDSENT			Write '1' to disable interrupt for event TXDSENT
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Е	RW BB			Write '1' to disable interrupt for event BB
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to disable interrupt for event SUSPENDED
				Generated just after ACK bit has been transferred in a
				read transaction, and only if SUSPEND has been requested
				earlier.
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled



6.20.8.15 ERRORSRC

Address offset: 0x4C4

Error source

Bit r	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW OVERRUN			Overrun error
				A new byte was received before previous byte got read by
				software from the RXD register. (Previous data is lost)
		NotPresent	0	Read: no overrun occured
		Present	1	Read: overrun occured
В	RW ANACK			NACK received after sending the address (write '1' to clear)
		NotPresent	0	Read: error not present
		Present	1	Read: error present
С	RW DNACK			NACK received after sending a data byte (write '1' to clear)
		NotPresent	0	Read: error not present
		Present	1	Read: error present

6.20.8.16 ENABLE

Address offset: 0x500

Enable TWI

Bit number		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			АААА
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW ENABLE			Enable or disable TWI
	Disabled	0	Disable TWI
	Enabled	5	Enable TWI

6.20.8.17 PSEL.SCL

Address offset: 0x508

Pin select for SCL

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	et OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.20.8.18 PSEL.SDA

Address offset: 0x50C



Pin select for SDA

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.20.8.19 RXD

Address offset: 0x518

RXD register

Bit number	31 30 29 28 27 26 25 24	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А А А А А А А А А А А А А А А А А А А
Reset 0x0000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
A R RXD		RXD register

6.20.8.20 TXD

Address offset: 0x51C

TXD register

A RW TXD		TXD register	
ID Acce Field			
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0
ID		A A A A A A	A A
Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2	1 0

6.20.8.21 FREQUENCY

Address offset: 0x524

TWI frequency. Accuracy depends on the HFCLK source selected.

Bit n	umber		31	30	29	28	27	26	25	52	123	22	21	L 20	19	18	31	7 10	51	51	.4 1	.3 1	2 1	1 10) 9	8	7	6	5	4	3	2	1 0
ID			А	А	A	А	А	A	A	Д	A	A	A	A	A	A	А	A	. 4	4	Δ.	A,	A A	A	A	A	A	A	A	А	А	A	A A
Rese	t 0x04000000		0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0) (D	0	0 0	0	0	0	0	0	0	0	0	0	0 0
ID																																	
А	RW FREQUENCY										T٧	۷L	mas	ster	clo	ock	fre	equ	en	су													
A	RW FREQUENCY	K100	0x	019	80	000)						ma: tbp		clo	ock	fre	equ	en	су													
A	RW FREQUENCY	K100 K250		019 040							10	01		s	. clo	ock	fre	equ	en	су													

6.20.8.22 ADDRESS

Address offset: 0x588

Address used in the TWI transfer



	A RW ADDRESS	Address used in the TWI transfer
	ID Acce Field	
	Reset 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Bit number 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1	ID	A A A A A A A A A A A A A A A A A A A
	Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.20.9 Electrical specification

6.20.9.1 TWI interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{TWI,SCL}	Bit rates for TWI ³⁰	100		400	kbps
t _{twi,start}	Time from STARTRX/STARTTX task to transmission started		1.5		μs

6.20.9.2 Two Wire Interface (TWI) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{TWI,SU_DAT}	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWI,HD_DAT}	Data hold time after negative edge on SCL – all modes	500			ns
$t_{\text{TWI,HD}_\text{STA,100kbps}}$	TWI master hold time for START and repeated START	10000			ns
	condition, 100 kbps				
t _{TWI,HD_STA,250kbps}	TWI master hold time for START and repeated START	4000			ns
	condition, 250kbps				
t _{TWI,HD_STA,400kbps}	TWI master hold time for START and repeated START	2500			ns
	condition, 400 kbps				
t _{TWI,SU_STO,100kbps}	TWI master setup time from SCL high to STOP condition, 100	5000			ns
	kbps				
t _{TWI,SU_STO,250kbps}	TWI master setup time from SCL high to STOP condition, 250	2000			ns
	kbps				
t _{TWI,SU_STO,400kbps}	TWI master setup time from SCL high to STOP condition, 400	1250			ns
	kbps				
t _{TWI,BUF,100kbps}	TWI master bus free time between STOP and START	5800			ns
	conditions, 100 kbps				
t _{TWI,BUF,250kbps}	TWI master bus free time between STOP and START	2700			ns
	conditions, 250 kbps				
t _{TWI,BUF,400kbps}	TWI master bus free time between STOP and START	2100			ns
	conditions, 400 kbps				

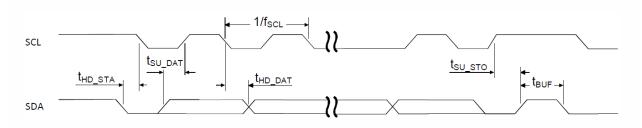



Figure 95: TWI timing diagram, 1 byte transaction

³⁰ High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO chapter for more details.



6.21 TIMER — Timer/counter

This peripheral is a general purpose timer designed to keep track of time in user-selective time intervals, it can operate in two modes: timer and counter.

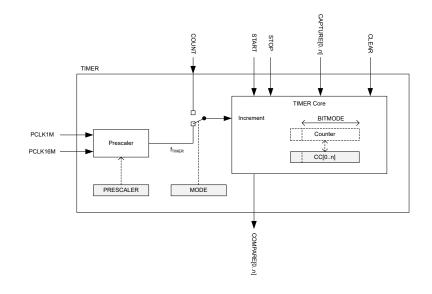



The timer/counter runs on the high-frequency clock source (HFCLK) and includes a four-bit (1/2X) prescaler that can divide the timer input clock from the HFCLK controller. Clock source selection between PCLK16M and PCLK1M is automatic according to TIMER base frequency set by the prescaler. The TIMER base frequency is always given as 16 MHz divided by the prescaler value.

The PPI system allows a TIMER event to trigger a task of any other system peripheral of the device. The PPI system also enables the TIMER task/event features to generate periodic output and PWM signals to any GPIO. The number of input/outputs used at the same time is limited by the number of GPIOTE channels.

TIMER can operate in two modes: Timer mode and Counter mode. In both modes, TIMER is started by triggering the START task, and stopped by triggering the STOP task. After the timer is stopped the timer can resume timing/counting by triggering the START task again. When timing/counting is resumed, the timer will continue from the value it had prior to being stopped.

In Timer mode, the TIMER's internal Counter register is incremented by one for every tick of the timer frequency f_{TIMER} as illustrated in Block schematic for timer/counter on page 272. The timer frequency is derived from PCLK16M as shown in the following example, using the values specified in the PRESCALER register.

```
f_{\text{TIMER}} = 16 \text{ MHz} / (2^{\text{PRESCALER}})
```

When $f_{TIMER} \le 1$ MHz, TIMER will use PCLK1M instead of PCLK16M for reduced power consumption.

In counter mode, the TIMER's internal Counter register is incremented by one each time the COUNT task is triggered, meaning the timer frequency and the prescaler are not utilized in counter mode. Similarly, the COUNT task has no effect in Timer mode.

The TIMER's maximum value is configured by changing the bit-width of the timer in register BITMODE on page 277.



PRESCALER on page 277 and BITMODE on page 277 must only be updated when the timer is stopped. If these registers are updated while the timer is started, unpredictable behavior may occur.

When the timer is incremented beyond its maximum value, the Counter register will overflow and the timer will automatically start over from zero.

The Counter register can be cleared by triggering the CLEAR task. This will explicitly set the internal value to zero.

TIMER implements multiple capture/compare registers.

Independent of prescaler setting, the accuracy of TIMER is equivalent to one tick of the timer frequency f_{TIMER} as illustrated in Block schematic for timer/counter on page 272.

6.21.1 Capture

TIMER implements one capture task for every available capture/compare register.

Every time the CAPTURE[n] task is triggered, the Counter value is copied to the CC[n] register.

6.21.2 Compare

TIMER implements one COMPARE event for every available capture/compare register.

A COMPARE event is generated when the Counter is incremented and then becomes equal to the value specified in one of the capture compare registers. When the Counter value becomes equal to the value specified in a capture compare register CC[n], the corresponding compare event COMPARE[n] is generated.

BITMODE on page 277 specifies how many bits of the Counter register and the capture/compare register that are used when the comparison is performed. Other bits will be ignored.

6.21.3 Task delays

After TIMER is started, the CLEAR, COUNT, and STOP tasks are guaranteed to take effect within one clock cycle of the PCLK16M.

6.21.4 Task priority

If the START task and the STOP task are triggered at the same time, meaning within the same period of PCLK16M, the STOP task will be prioritized.

6.21.5 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40008000	TIMER	TIMER0	Timer 0	This timer instance has 4 CC registers
				(CC[03])
0x40009000	TIMER	TIMER1	Timer 1	This timer instance has 4 CC registers
				(CC[03])
0x4000A000	TIMER	TIMER2	Timer 2	This timer instance has 4 CC registers
				(CC[03])

Table 87: Instances

Register	Offset	Description
TASKS_START	0x000	Start Timer
TASKS_STOP	0x004	Stop Timer
TASKS_COUNT	0x008	Increment Timer (Counter mode only)



Peripherals

Register	Offset	Description	
TASKS_CLEAR	0x00C	Clear time	
TASKS_SHUTDOWN	0x010	Shut down timer	Deprecated
TASKS_CAPTURE[0]	0x040	Capture Timer value to CC[0] register	
TASKS_CAPTURE[1]	0x044	Capture Timer value to CC[1] register	
TASKS_CAPTURE[2]	0x048	Capture Timer value to CC[2] register	
TASKS_CAPTURE[3]	0x04C	Capture Timer value to CC[3] register	
TASKS_CAPTURE[4]	0x050	Capture Timer value to CC[4] register	
TASKS_CAPTURE[5]	0x054	Capture Timer value to CC[5] register	
EVENTS_COMPARE[0]	0x140	Compare event on CC[0] match	
EVENTS_COMPARE[1]	0x144	Compare event on CC[1] match	
EVENTS_COMPARE[2]	0x148	Compare event on CC[2] match	
EVENTS_COMPARE[3]	0x14C	Compare event on CC[3] match	
EVENTS_COMPARE[4]	0x150	Compare event on CC[4] match	
EVENTS_COMPARE[5]	0x154	Compare event on CC[5] match	
SHORTS	0x200	Shortcuts between local events and tasks	
INTENSET	0x304	Enable interrupt	
INTENCLR	0x308	Disable interrupt	
MODE	0x504	Timer mode selection	
BITMODE	0x508	Configure the number of bits used by the TIMER	
PRESCALER	0x510	Timer prescaler register	
CC[0]	0x540	Capture/Compare register 0	
CC[1]	0x544	Capture/Compare register 1	
CC[2]	0x548	Capture/Compare register 2	
CC[3]	0x54C	Capture/Compare register 3	
CC[4]	0x550	Capture/Compare register 4	
CC[5]	0x554	Capture/Compare register 5	

Table 88: Register overview

6.21.5.1 TASKS_START

Address offset: 0x000

Start Timer

Bit n	um	nber			31 30 29 28 27 26 2	5 24	23	22	21	20	19	9 18	3 17	16	5 15	5 14	13	12	2 1 1	10	9	8	7	6	5	4	3	2	1 0
ID																													А
Rese	et O	x00	000000		0 0 0 0 0 0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID																													
А	٧	N	TASKS_START				Sta	rt 1	Tim	ner																			
				Trigger	1		Tri	gge	er ta	ask	:																		

6.21.5.2 TASKS_STOP

Address offset: 0x004

Stop Timer

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STOP			Stop Timer
		Trigger	1	Trigger task



6.21.5.3 TASKS_COUNT

Address offset: 0x008

Increment Timer (Counter mode only)

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_COUNT			Increment Timer (Counter mode only)
		Trigger	1	Trigger task

6.21.5.4 TASKS_CLEAR

Address offset: 0x00C

Clear time

Bit nu	umber		31 30 29 28 27 20	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_CLEAR			Clear time
		Trigger	1	Trigger task

6.21.5.5 TASKS_SHUTDOWN (Deprecated)

Address offset: 0x010

Shut down timer

Bit n	umber		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	W TASKS_SHUTDOWN			Shut down timer Deprecate
		Trigger	1	Trigger task

6.21.5.6 TASKS_CAPTURE[n] (n=0..5)

Address offset: $0x040 + (n \times 0x4)$

Capture Timer value to CC[n] register

Bit n	umber		31 30 29 28 27	26 25 24	23 22 2	21 20 19	18 17	7 16 1	.5 14 1	3 12 :	11 10	9	8 7	6	5	4	3 2	1 0
ID																		А
Rese	t 0x00000000		0 0 0 0 0	0 0 0	0 0	000	0 0	0	000	0 0	0 0	0	0 0	0	0	0	0 0	00
ID																		
A	W TASKS_C	APTURE			Captu	re Timer	value	to C	C[n] re	gister								
		Trigger	1		Trigge	r task												

6.21.5.7 EVENTS_COMPARE[n] (n=0..5)

Address offset: $0x140 + (n \times 0x4)$



Compare event on CC[n] match

Bit number			31 30	0 29	28	27 2	262	25 2	24 2	23 2	22 2	212	0 1	.9 1	81	71	6 1!	5 14	4 13	12	11	10 9	9 8	37	6	5	4	3	2	1 0
ID																														A
Reset 0x00	000000		0 0	0 0	0	0	0	0	0	0	0	0	0	0 () () () (0	0	0	0	0 () () (0	0	0	0	0	0 0
ID Acce																														
A RW	EVENTS_COMPARE								(Con	npa	are	eve	nt d	on (CC[n] n	nat	ch											
		NotGenerated	0						E	ve	nt	not	gei	nera	ateo	b														
		Generated	1						E	ve	nt	gen	era	ted																

6.21.5.8 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit number		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			LKJIHG FEDCBA
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A-F RW COMPARE[i]_CLEAR			Shortcut between event COMPARE[i] and task CLEAR
(i=05)			
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut
G-L RW COMPARE[i]_STOP			Shortcut between event COMPARE[i] and task STOP
(i=05)			
	Disabled	0	Disable shortcut
	Enabled	1	Enable shortcut

6.21.5.9 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		FEDCBA
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A-F RW COMPARE[i] (i=05)		Write '1' to enable interrupt for event COMPARE[i]
Set	1	Enable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.21.5.10 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		FEDCBA
Reset 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A-F RW COMPARE[i] (i=05)		Write '1' to disable interrupt for event COMPARE[i]
Clear	1	Disable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.21.5.11 MODE

Address offset: 0x504

Timer mode selection

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3 2 1 0
ID					A A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0000
ID					
А	RW MODE			Timer mode	
		Timer	0	Select Timer mode	
		Counter	1	Select Counter mode	Deprecated

6.21.5.12 BITMODE

Address offset: 0x508

Configure the number of bits used by the TIMER

Bit n	umber		31 30) 29	28 2	27 2	6 2	5 24	23	22	21	20	19	18	17	16	15	14 :	13 1	2 1	1 10	9	8	7	6	5	4	3	2 1	L O
ID																													A	A A
Rese	t 0x0000000		0 0	0	0	0 (0	0 0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0	0 0	0 0
ID																														
А	RW BITMODE								Tin	ner	r bit	t wi	idth	I																
		16Bit	0						16	bit	t tin	ner	bit	wi	dth															
		08Bit	1						8 b	oit t	tim	er k	oit v	vid	th															
		24Bit	2						24	bit	t tin	ner	bit	wi	dth															
		32Bit	3						32	bit	t tin	ner	bit	wi	dth															

6.21.5.13 PRESCALER

Address offset: 0x510

Timer prescaler register

Bit n	umber	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A
Rese	t 0x00000004	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			Description
А	RW PRESCALER	[09]	Prescaler value

6.21.5.14 CC[n] (n=0..5)

Address offset: 0x540 + (n × 0x4)



Capture/Compare register n

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW CC	Capture/Compare value

Only the number of bits indicated by BITMODE will be used by the TIMER.

6.21.6 Electrical specification

6.22 TWIM — I^2C compatible two-wire interface master with EasyDMA

TWI master with EasyDMA (TWIM) is a two-wire half-duplex master which can communicate with multiple slave devices connected to the same bus.

Listed here are the main features for TWIM:

- I²C compatible
- Supported baud rates: 100, 250, 400 kbps
- Support for clock stretching (non I²C compliant)
- EasyDMA

The two-wire interface can communicate with a bi-directional wired-AND bus with two lines (SCL, SDA). The protocol makes it possible to interconnect up to 127 individually addressable devices. TWIM is not compatible with CBUS.

The GPIOs used for each two-wire interface line can be chosen from any GPIO on the device and are independently configurable. This enables great flexibility in device pinout and efficient use of board space and signal routing.



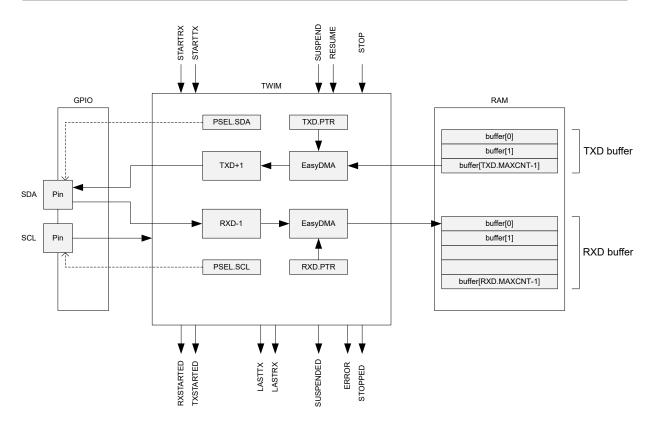


Figure 97: TWI master with EasyDMA

A typical TWI setup consists of one master and one or more slaves. For an example, see the following figure. This TWIM is only able to operate as a single master on the TWI bus. Multi-master bus configuration is not supported.



Figure 98: A typical TWI setup comprising one master and three slaves

This TWI master supports clock stretching performed by the slaves. The SCK pulse following a stretched clock cycle may be shorter than specified by the I2C specification.

The TWI master is started by triggering the STARTTX or STARTRX tasks, and stopped by triggering the STOP task. The TWI master will generate a STOPPED event when it has stopped following a STOP task.

After the TWI master is started, the STARTTX or STARTRX tasks should not be triggered again until the TWI master has issued a LASTRX, LASTTX, or STOPPED event.

The TWI master can be suspended using the SUSPEND task, this can be used when using the TWI master in a low priority interrupt context. When the TWIM enters suspend state, will automatically issue a SUSPENDED event while performing a continuous clock stretching until it is instructed to resume operation via a RESUME task. The TWI master cannot be stopped while it is suspended, thus the STOP task has to be issued after the TWI master has been resumed.

Note: Any ongoing byte transfer will be allowed to complete before the suspend is enforced. A SUSPEND task has no effect unless the TWI master is actively involved in a transfer.

If a NACK is clocked in from the slave, the TWI master will generate an ERROR event.



6.22.1 EasyDMA

The TWIM implements EasyDMA for accessing RAM without CPU involvement.

The TWIM peripheral implements the EasyDMA channels found in the following table.

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 89: TWIM EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 34.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next RX/ TX transmission immediately after having received the RXSTARTED/TXSTARTED event.

The STOPPED event indicates that EasyDMA has finished accessing the buffer in RAM.

6.22.2 Master write sequence

A TWI master write sequence is started by triggering the STARTTX task. After the STARTTX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1).

The address must match the address of the slave device that the master wants to write to. The READ/ WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) generated by the slave.

After receiving the ACK bit, the TWI master will clock out the data bytes found in the transmit buffer located in RAM at the address specified in the TXD.PTR register. Each byte clocked out from the master will be followed by an ACK/NACK bit clocked in from the slave.

A typical TWI master write sequence is shown in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI master following a SUSPEND task.

A SUSPENDED event indicates that the SUSPEND task has taken effect. This event can be used to synchronize the software.

The TWI master will generate a LASTTX event when it starts to transmit the last byte, this is shown in the following figure.

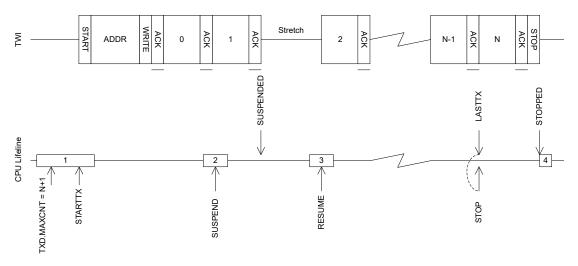


Figure 99: TWI master writing data to a slave



The TWI master is stopped by triggering the STOP task. This task should be triggered during the transmission of the last byte to secure that the TWI master will stop as fast as possible after sending the last byte. The shortcut between LASTTX and STOP can alternatively be used to accomplish this.

Note: The TWI master does not stop by itself when the entire RAM buffer has been sent, or when an error occurs. The STOP task must be issued, through the use of a local or PPI shortcut, or in software as part of the error handler.

6.22.3 Master read sequence

A TWI master read sequence is started by triggering the STARTRX task. After the STARTRX task has been triggered, the TWI master will generate a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE = 0, READ = 1). The address must match the address of the slave device that the master wants to read from. The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK = 1) generated by the slave.

After sending the ACK bit, the TWI slave will send data to the master using the clock generated by the master.

Data received will be stored in RAM at the address specified in the RXD.PTR register. The TWI master will generate an ACK after all but the last byte have been received from the slave. The TWI master will generate a NACK after the last byte received to indicate that the read sequence shall stop.

A typical TWI master read sequence is illustrated in The TWI master reading data from a slave on page 282. Occurrence 2 in the figure illustrates clock stretching performed by the TWI master following a SUSPEND task.

A SUSPENDED event indicates that the SUSPEND task has taken effect. This event can be used to synchronize the software.

The TWI master will generate a LASTRX event when it is ready to receive the last byte, as shown in The TWI master reading data from a slave on page 282. If RXD.MAXCNT > 1, the LASTRX event is generated after sending the ACK of the previously received byte. If RXD.MAXCNT = 1, the LASTRX event is generated after receiving the ACK following the address and READ bit.

The TWI master is stopped by triggering the STOP task. This task must be triggered before the NACK bit is supposed to be transmitted. The STOP task can be triggered at any time during the reception of the last byte. It is recommended to use the shortcut between LASTRX and STOP to accomplish this.

The TWI master does not stop by itself when the RAM buffer is full, or when an error occurs. The STOP task must be issued, through the use of a local or PPI shortcut, or in software as part of the error handler.

The TWI master cannot be stopped while suspended, so the STOP task must be issued after the TWI master has been resumed.



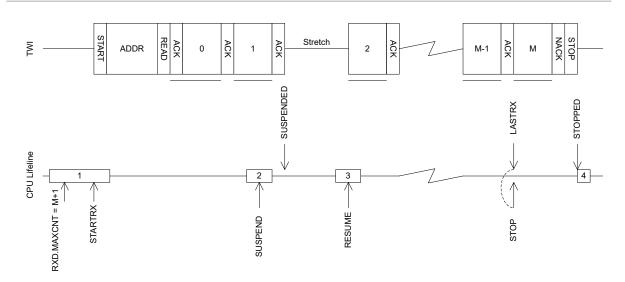


Figure 100: The TWI master reading data from a slave

6.22.4 Master repeated start sequence

A typical repeated start sequence is one in which the TWI master writes two bytes to the slave followed by reading four bytes from the slave. This example uses shortcuts to perform the simplest type of repeated start sequence, i.e. one write followed by one read. The same approach can be used to perform a repeated start sequence where the sequence is read followed by write.

The following figure shows an example of a repeated start sequence where the TWI master writes two bytes followed by reading four bytes from the slave.

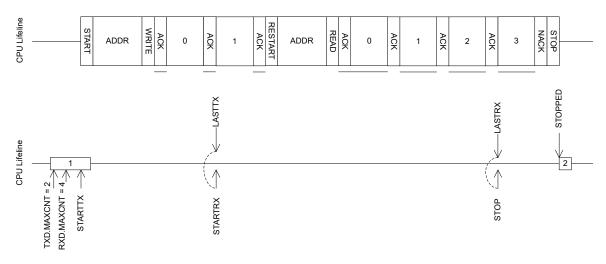


Figure 101: Master repeated start sequence

If a more complex repeated start sequence is needed, and the TWI firmware drive is serviced in a low priority interrupt, it may be necessary to use the SUSPEND task and SUSPENDED event to guarantee that the correct tasks are generated at the correct time. A double repeated start sequence using the SUSPEND task to secure safe operation in low priority interrupts is shown in the following figure.



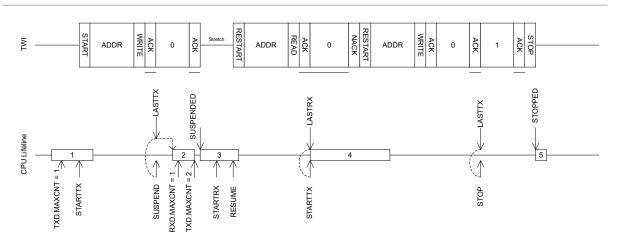


Figure 102: Double repeated start sequence

6.22.5 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

When the STOP task is sent, the software shall wait until the STOPPED event is received as a response before disabling the peripheral through the ENABLE register. If the peripheral is already stopped, the STOP task is not required.

6.22.6 Master mode pin configuration

The SCL and SDA signals associated with the TWI master are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI master is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.SCL, PSEL.SDA must only be configured when the TWI master is disabled.

To secure correct signal levels on the pins used by the TWI master when the system is in OFF mode, and when the TWI master is disabled, these pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

TWI master signal	TWI master pin	Direction	Output value	Drive strength
SCL	As specified in PSEL.SCL	Input	Not applicable	SOD1
SDA	As specified in PSEL.SDA	Input	Not applicable	SOD1

Table 90: GPIO configuration before enabling peripheral

6.22.7 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40003000	TWIM	TWIM0	Two-wire interface master		
			Table 91: Instance	25	
Register	Offset	Descript	ion		
TASKS_STARTRX	0x000	Start TW	I receive sequence		
					•

Desister	Offset	Decembra
Register		Description
TASKS_STARTTX	0x008	Start TWI transmit sequence
TASKS_STOP	0x014	Stop TWI transaction. Must be issued while the TWI master is not suspended.
TASKS_SUSPEND	0x01C	Suspend TWI transaction
TASKS_RESUME	0x020	Resume TWI transaction
EVENTS_STOPPED	0x104	TWI stopped
EVENTS_ERROR	0x124	TWI error
EVENTS_SUSPENDED	0x148	SUSPEND task has been issued, TWI traffic is now suspended.
EVENTS_RXSTARTED	0x14C	Receive sequence started
EVENTS_TXSTARTED	0x150	Transmit sequence started
EVENTS_LASTRX	0x15C	Byte boundary, starting to receive the last byte
EVENTS_LASTTX	0x160	Byte boundary, starting to transmit the last byte
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x4C4	Error source
ENABLE	0x500	Enable TWIM
PSEL.SCL	0x508	Pin select for SCL signal
PSEL.SDA	0x50C	Pin select for SDA signal
FREQUENCY	0x524	TWI frequency. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
TXD.LIST	0x550	EasyDMA list type
ADDRESS	0x588	Address used in the TWI transfer

Table 92: Register overview

6.22.7.1 TASKS_STARTRX

Address offset: 0x000

Start TWI receive sequence

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STARTRX			Start TWI receive sequence
		Trigger	1	Trigger task

6.22.7.2 TASKS_STARTTX

Address offset: 0x008

Start TWI transmit sequence



Bit n	um	ber		31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				
Rese	et O	x0000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	۷	V TASKS_STARTTX		Start TWI transmit sequence
			Trigger	1 Trigger task

6.22.7.3 TASKS_STOP

Address offset: 0x014

Stop TWI transaction. Must be issued while the TWI master is not suspended.

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOP			Stop TWI transaction. Must be issued while the TWI master
			is not suspended.
	Trigger	1	Trigger task

6.22.7.4 TASKS_SUSPEND

Address offset: 0x01C

Suspend TWI transaction

Bit n	umber		31 30 29 2	8 27 26	25 24	23 22	2 21 2	20 19	9 18	17 1	16 15	5 14 3	13 12	2 11	10 9	8	7	6	5 4	43	2	1 0
ID																						А
Rese	et 0x0000000		0 0 0 0	000	0 0	0 0	0	0 0	0	0	0 0	0	0 0	0	0 0) 0	0	0	0 (0 0	0	0 0
ID																						
А	W TASKS_SUSPEND					Susp	end 1	[WI	trans	sact	ion											
		Trigger	1			Trigg	er ta	sk														

6.22.7.5 TASKS_RESUME

Address offset: 0x020

Resume TWI transaction

Bit n	umbe	r		31 30 29 28 27 26 25 24 23 22 21 20 19 18 1	17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					A
Rese	t 0x0	000000		0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					
А	w	TASKS_RESUME		Resume TWI transa	action
			Trigger	1 Trigger task	

6.22.7.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped



Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_STOPPED			TWI stopped
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.22.7.7 EVENTS_ERROR

Address offset: 0x124

TWI error

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_ERROR			TWI error
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.22.7.8 EVENTS_SUSPENDED

Address offset: 0x148

SUSPEND task has been issued, TWI traffic is now suspended.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_SUSPENDED			SUSPEND task has been issued, TWI traffic is now
				suspended.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.22.7.9 EVENTS_RXSTARTED

Address offset: 0x14C

Receive sequence started

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_RXSTARTED			Receive sequence started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.22.7.10 EVENTS_TXSTARTED

Address offset: 0x150

Transmit sequence started

Bit number		31 30 29 28 2	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x00000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_	TXSTARTED		Transmit sequence started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.22.7.11 EVENTS_LASTRX

Address offset: 0x15C

Byte boundary, starting to receive the last byte

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_LASTRX			Byte boundary, starting to receive the last byte
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.22.7.12 EVENTS_LASTTX

Address offset: 0x160

Byte boundary, starting to transmit the last byte

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_LASTTX			Byte boundary, starting to transmit the last byte
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.22.7.13 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit r	umber		31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				FEDCBA
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW LASTTX_STARTRX			Shortcut between event LASTTX and task STARTRX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW LASTTX_SUSPEND			Shortcut between event LASTTX and task SUSPEND
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
С	RW LASTTX_STOP			Shortcut between event LASTTX and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut



Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
			010020202,20202	
ID				FEDCBA
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
D	RW LASTRX_STARTTX			Shortcut between event LASTRX and task STARTTX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
Е	RW LASTRX_SUSPEND			Shortcut between event LASTRX and task SUSPEND
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
F	RW LASTRX_STOP			Shortcut between event LASTRX and task STOP
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.22.7.14 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit nu	ımber		313	0 29	28 27	7 26	25 2	4 2	3 22	21	20	19 1	.8 1	7 1	5 15	14	13	12 1	11	09	8	7	6 5	54	3	2	1 (
ID							J				н	G	F							D							A
Reset	: 0x0000000		0 0	0 0	0 0	0	0 0) (0 0	0	0	0	0 (0 0	0	0	0	0 (D 0) 0	0	0	0 0	0 0	0	0	0 (
A	RW STOPPED							E	nabl	e or	r di	sabl	e in	iteri	rupt	for	eve	ent S	то	PPEI	D						
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
D	RW ERROR							E	nabl	e or	r di	sabl	e in	iteri	rupt	for	eve	ent E	RR	OR							
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
F	RW SUSPENDED							E	nabl	e oi	r di	sabl	e in	teri	rupt	for	eve	ent S	SUS	PEN	DED						
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
G	RW RXSTARTED							E	nabl	e oi	r di	sabl	e in	iteri	rupt	for	eve	ent F	RXS ⁻	TAR	ED						
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
н	RW TXSTARTED							E	nabl	e or	r di	sabl	e in	iteri	rupt	for	eve	ent T	XST	TART	ED						
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
I	RW LASTRX							E	nabl	e oi	r di	sabl	e in	iteri	rupt	for	eve	ent L	AS1	rrx							
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	
J	RW LASTTX							E	nabl	e oi	r di	sabl	e in	iteri	rupt	for	eve	ent L	AS1	гтх							
		Disabled	0					D	isab	le																	
		Enabled	1					E	nabl	e																	

6.22.7.15 INTENSET

Address offset: 0x304

Enable interrupt



Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				JIHGF DA
Rese	t 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STOPPED			Write '1' to enable interrupt for event STOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to enable interrupt for event SUSPENDED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
G	RW RXSTARTED			Write '1' to enable interrupt for event RXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW TXSTARTED			Write '1' to enable interrupt for event TXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW LASTRX			Write '1' to enable interrupt for event LASTRX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW LASTTX			Write '1' to enable interrupt for event LASTTX
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.22.7.16 INTENCLR

Address offset: 0x308

Disable interrupt

Bit r	umber		31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				JIHGF DA
Rese	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
А	RW STOPPED			Write '1' to disable interrupt for event STOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ERROR			Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW SUSPENDED			Write '1' to disable interrupt for event SUSPENDED
		Clear	1	Disable
		Disabled	0	Read: Disabled



Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			J	IIHGF D A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
		Enabled	1	Read: Enabled
G	RW RXSTARTED			Write '1' to disable interrupt for event RXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW TXSTARTED			Write '1' to disable interrupt for event TXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW LASTRX			Write '1' to disable interrupt for event LASTRX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW LASTTX			Write '1' to disable interrupt for event LASTTX
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.22.7.17 ERRORSRC

Address offset: 0x4C4

Error source

Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1													
ID				СВА											
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0											
ID				Description											
А	RW OVERRUN			Overrun error											
				A new byte was received before previous byte got											
				transferred into RXD buffer. (Previous data is lost)											
		NotReceived	0	Error did not occur											
		Received	1	Error occurred											
В	RW ANACK			NACK received after sending the address (write '1' to clear)											
		NotReceived	0	Error did not occur											
		Received	1	Error occurred											
С	RW DNACK			NACK received after sending a data byte (write '1' to clear)											
		NotReceived	0	Error did not occur											
		Received	1	Error occurred											

6.22.7.18 ENABLE

Address offset: 0x500

Enable TWIM



Bit number	31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААА
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW ENABLE		Enable or disable TWIM
Disabled	0	Disable TWIM

6.22.7.19 PSEL.SCL

Address offset: 0x508

Pin select for SCL signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.22.7.20 PSEL.SDA

Address offset: 0x50C

Pin select for SDA signal

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
A	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.22.7.21 FREQUENCY

Address offset: 0x524

TWI frequency. Accuracy depends on the HFCLK source selected.

Bit number		31	. 30	29	28	27	26	25	24	23	22	212	20 1	191	.8 1	.7 1	.6 1	15 1	14 1	L3 1	2 1	1 10	9	8	7	6	5	4	3	2 1	L 0
ID		А	А	A	A	A	A	A	A	А	A	A	Α.	A	Δ.	Α,	Δ.	A	A	A	Α Α	A	А	A	A	A	A	А	A	4 A	AA
Reset 0x04000000		0	0	0	0	0	1	0	0	0	0	0	0	0 (D	0	D	0	0	0	0 0	0	0	0	0	0	0	0	0	0 0) 0
ID Acce Field																															
A RW FREQUENCY										тν	/l m	nast	er o	loc	k fı	eq	uer	ncy													
	К100	0x	019	80	000)				10) kt	ops																			
	K100 K250		:019 :040									ops ops																			



6.22.7.22 RXD.PTR

Address offset: 0x534

Data pointer

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID	
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field	
A RW PTR	Data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.22.7.23 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer

Bit n	umber	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	et 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			Description
A	RW MAXCNT	[00x3FFF]	Maximum number of bytes in receive buffer

6.22.7.24 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction

Bit n	un	nbe	r	31 30	0 29	28	27 2	62	5 24	1 23	3 2 2	21	20	19	18 :	17 1	l6 1	5 14	13	12	111	.0 9	8	7	6	5	4	32	1	0
ID																			А	А	Α,	4 <i>4</i>	A	А	А	А	А	A A	A	A
Rese	t C)x0	0000000	0 0	0	0	0) (0 0	0	0	0	0	0	0	0	0 0) (0	0	0	0 (0	0	0	0	0	0 0	0	0
ID																														
А	F	R	AMOUNT	[00	x3FI	FF]				N	uml	ber	of t	byte	es ti	rans	fer	red	in tl	ne la	st t	ran	act	ion	In	case	е			
										0	f NA	СК	erre	or, i	nclı	ude	s th	e N	ACK	'ed l	oyte	e.								

6.22.7.25 RXD.LIST

Address offset: 0x540

EasyDMA list type

Bit number	31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		ААА
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID	Value	Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list



6.22.7.26 TXD.PTR

Address offset: 0x544

Data pointer

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
А	RW PTR	Data pointer
		See the memory chapter for details about which memories

are available for EasyDMA.

6.22.7.27 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		
A	RW MAXCNT	[00x3FFF] Maximum number of bytes in transmit buffer

6.22.7.28 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction

Bit n	un	nbe	r	31 30	0 29	28	27 2	62	5 24	1 23	3 2 2	21	20	19	18 :	17 1	l6 1	5 14	13	12	111	.0 9	8	7	6	5	4	32	1	0
ID																			А	А	A,	4 <i>4</i>	A	А	А	А	А	A A	A	A
Rese	t C)x0	0000000	0 0	0	0	0) (0 0	0	0	0	0	0	0	0	0 0) (0	0	0	0 (0	0	0	0	0	0 0	0	0
ID																														
А	F	R	AMOUNT	[00	x3FI	FF]				N	uml	ber	of t	byte	es ti	rans	fer	red	in tl	ne la	st t	ran	act	ion	In	case	е			
										0	f NA	СК	erre	or, i	nclı	ude	s th	e N	ACK	'ed l	oyte	e.								

6.22.7.29 TXD.LIST

Address offset: 0x550

EasyDMA list type

Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list



6.22.7.30 ADDRESS

Address offset: 0x588

Address used in the TWI transfer

А	RW ADDRESS	Address used in the TWI transfer
ID ,		Value Description
Reset	0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit nur	nber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.22.8 Electrical specification

6.22.8.1 TWIM interface electrical specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{TWIM,SCL}	Bit rates for TWIM ³¹	100		400	kbps
t _{twim,start}	Time from STARTRX/STARTTX task to transmission started				μs

6.22.8.2 Two Wire Interface Master (TWIM) timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
t _{TWIM,SU_DAT}	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWIM,HD_DAT}	Data hold time after negative edge on SCL – 100, 250 and	500			ns
	400 kbps				
$t_{\text{TWIM},\text{HD}_\text{STA},100\text{kbps}}$	TWIM master hold time for START and repeated START	9937.5			ns
	condition, 100 kbps				
t _{TWIM,HD_STA,250kbps}	TWIM master hold time for START and repeated START	3937.5			ns
	condition, 250 kbps				
$t_{TWIM,HD_STA,400kbps}$	TWIM master hold time for START and repeated START	2437.5			ns
	condition, 400 kbps				
$t_{\text{TWIM},\text{SU}_\text{STO},100\text{kbps}}$	TWIM master setup time from SCL high to STOP condition,	5000			ns
	100 kbps				
t _{TWIM,SU_STO,250kbps}	TWIM master setup time from SCL high to STOP condition,	2000			ns
	250 kbps				
t _{TWIM,SU_STO,400kbps}	TWIM master setup time from SCL high to STOP condition,	1250			ns
	400 kbps				
t _{TWIM,BUF,100kbps}	TWIM master bus free time between STOP and START	5800			ns
	conditions, 100 kbps				
t _{TWIM,BUF,250kbps}	TWIM master bus free time between STOP and START	2700			ns
	conditions, 250 kbps				
t _{TWIM,BUF,400kbps}	TWIM master bus free time between STOP and START	2100			ns
	conditions, 400 kbps				

³¹ High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO — General purpose input/output on page 105 for more details.



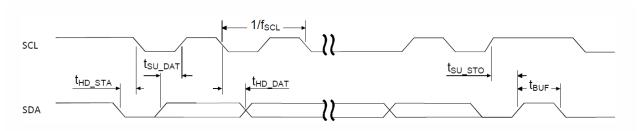


Figure 103: TWIM timing diagram, 1 byte transaction

6.22.9 Pullup resistor

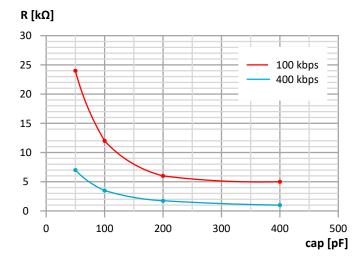


Figure 104: Recommended TWIM pullup value vs. line capacitance

- The I2C specification allows a line capacitance of 400 pF at most.
- The value of internal pullup resistor (R_{PU}) for nRF52805 can be found in GPIO General purpose input/output on page 105.

6.23 TWIS — I^2C compatible two-wire interface slave with EasyDMA

TWI slave with EasyDMA (TWIS) is compatible with I^2C operating at 100 kHz and 400 kHz. The TWI transmitter and receiver implement EasyDMA.

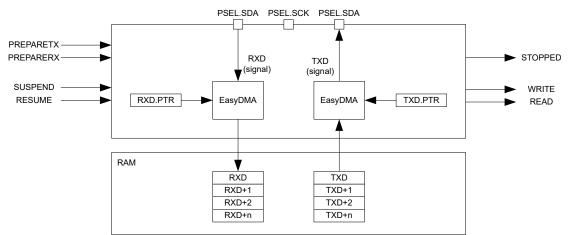


Figure 105: TWI slave with EasyDMA



A typical TWI setup consists of one master and one or more slaves. For an example, see the following figure. TWIS is only able to operate with a single master on the TWI bus.



Figure 106: A typical TWI setup comprising one master and three slaves

The following figure shows the TWI slave state machine.

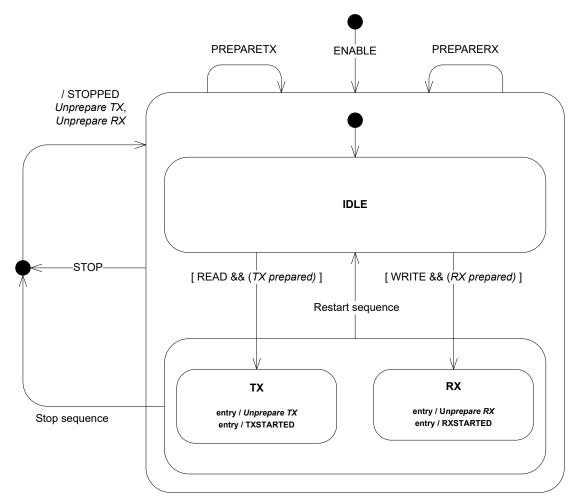


Figure 107: TWI slave state machine

The following table contains descriptions of the symbols used in the state machine.



Symbol	Туре	Description
ENABLE	Register	The TWI slave has been enabled via the ENABLE register.
PREPARETX	Task	The TASKS_PREPARETX task has been triggered.
STOP	Task	The TASKS_STOP task has been triggered.
PREPARERX	Task	The TASKS_PREPARERX task has been triggered.
STOPPED	Event	The EVENTS_STOPPED event was generated.
RXSTARTED	Event	The EVENTS_RXSTARTED event was generated.
TXSTARTED	Event	The EVENTS_TXSTARTED event was generated.
TX prepared	Internal	Internal flag indicating that a TASKS_PREPARETX task has been triggered. This flag is not visible to the
		user.
RX prepared	Internal	Internal flag indicating that a TASKS_PREPARERX task has been triggered. This flag is not visible to the
		user.
Unprepare TX	Internal	Clears the internal 'TX prepared' flag until next TASKS_PREPARETX task.
Unprepare RX	Internal	Clears the internal 'RX prepared' flag until next TASKS_PREPARERX task.
Stop condition	TWI protocol	A TWI stop condition was detected.
Restart condition	TWI protocol	A TWI restart condition was detected.

Table 93: TWI slave state machine symbols

The TWI slave can perform clock stretching, with the premise that the master is able to support it.

The TWI slave operates in a low power mode while waiting for a TWI master to initiate a transfer. As long as the TWI slave is not addressed, it will remain in this low power mode.

To secure correct behavior of the TWI slave, PSEL.SCL, PSEL.SDA, CONFIG, and the ADDRESS[n] registers must be configured prior to enabling the TWI slave through the ENABLE register. Similarly, changing these settings must be performed while the TWI slave is disabled. Failing to do so may result in unpredictable behavior.

6.23.1 EasyDMA

The TWIS implements EasyDMA for accessing RAM without CPU involvement.

The following table shows the Easy DMA channels that the TWIS peripheral implements.

Channel	Туре	Register Cluster
TXD	READER	TXD
RXD	WRITER	RXD

Table 94: TWIS EasyDMA Channels

For detailed information regarding the use of EasyDMA, see EasyDMA on page 34.

The STOPPED event indicates that EasyDMA has finished accessing the buffer in RAM.

6.23.2 TWI slave responding to a read command

Before the TWI slave can respond to a read command, the TWI slave must be configured correctly and enabled via the ENABLE register. When enabled, the TWI slave will be in its IDLE state.

A read command is started when the TWI master generates a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 1 (WRITE=0, READ=1). The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) response from the TWI slave.

The TWI slave is able to listen for up to two addresses at the same time. This is configured in the ADDRESS registers and the CONFIG register.



The TWI slave will only acknowledge (ACK) the read command if the address presented by the master matches one of the addresses the slave is configured to listen for. The TWI slave will generate a READ event when it acknowledges the read command.

The TWI slave is only able to detect a read command from the IDLE state.

The TWI slave will set an internal 'TX prepared' flag when the PREPARETX task is triggered.

When the read command is received, the TWI slave will enter the TX state if the internal 'TX prepared' flag is set.

If the internal 'TX prepared' flag is not set when the read command is received, the TWI slave will stretch the master's clock until the PREPARETX task is triggered and the internal 'TX prepared' flag is set.

The TWI slave will generate the TXSTARTED event and clear the 'TX prepared' flag ('unprepare TX') when it enters the TX state. In this state the TWI slave will send the data bytes found in the transmit buffer to the master using the master's clock.

The TWI slave will go back to the IDLE state if the TWI slave receives a restart command when it is in the TX state.

The TWI slave is stopped when it receives the stop condition from the TWI master. A STOPPED event will be generated when the transaction has stopped. The TWI slave will clear the 'TX prepared' flag ('unprepare TX') and go back to the IDLE state when it has stopped.

The transmit buffer is located in RAM at the address specified in the TXD.PTR register. The TWI slave will only be able to send TXD.MAXCNT bytes from the transmit buffer for each transaction. If the TWI master forces the slave to send more than TXD.MAXCNT bytes, the slave will send the byte specified in the ORC register to the master instead. If this happens, an ERROR event will be generated.

The EasyDMA configuration registers, see TXD.PTR etc., are latched when the TXSTARTED event is generated.

The TWI slave can be forced to stop by triggering the STOP task. A STOPPED event will be generated when the TWI slave has stopped. The TWI slave will clear the 'TX prepared' flag and go back to the IDLE state when it has stopped, see also Terminating an ongoing TWI transaction on page 300.

Each byte sent from the slave will be followed by an ACK/NACK bit sent from the master. The TWI master will generate a NACK following the last byte that it wants to receive to tell the slave to release the bus so that the TWI master can generate the stop condition. The TXD.AMOUNT register can be queried after a transaction to see how many bytes were sent.

A typical TWI slave read command response is shown in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI slave following a SUSPEND task.

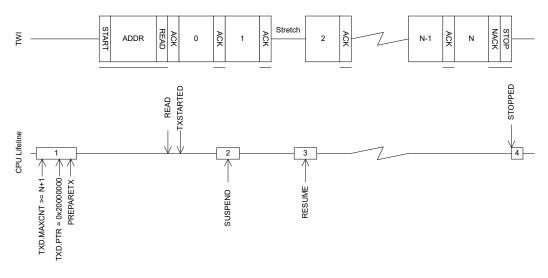


Figure 108: The TWI slave responding to a read command



6.23.3 TWI slave responding to a write command

Before the TWI slave can respond to a write command, the TWI slave must be configured correctly and enabled via the ENABLE register. When enabled, the TWI slave will be in its IDLE state.

A write command is started when the TWI master generates a start condition on the TWI bus, followed by clocking out the address and the READ/WRITE bit set to 0 (WRITE=0, READ=1). The READ/WRITE bit is followed by an ACK/NACK bit (ACK=0 or NACK=1) response from the slave.

The TWI slave is able to listen for up to two addresses at the same time. This is configured in the ADDRESS registers and the CONFIG register.

The TWI slave will only acknowledge (ACK) the write command if the address presented by the master matches one of the addresses the slave is configured to listen for. The TWI slave will generate a WRITE event if it acknowledges the write command.

The TWI slave is only able to detect a write command from the IDLE state.

The TWI slave will set an internal 'RX prepared' flag when the PREPARERX task is triggered.

When the write command is received, the TWI slave will enter the RX state if the internal 'RX prepared' flag is set.

If the internal 'RX prepared' flag is not set when the write command is received, the TWI slave will stretch the master's clock until the PREPARERX task is triggered and the internal 'RX prepared' flag is set.

The TWI slave will generate the RXSTARTED event and clear the internal 'RX prepared' flag ('unprepare RX') when it enters the RX state. In this state, the TWI slave will be able to receive the bytes sent by the TWI master.

The TWI slave will go back to the IDLE state if the TWI slave receives a restart command when it is in the RX state.

The TWI slave is stopped when it receives the stop condition from the TWI master. A STOPPED event will be generated when the transaction has stopped. The TWI slave will clear the internal 'RX prepared' flag ('unprepare RX') and go back to the IDLE state when it has stopped.

The receive buffer is located in RAM at the address specified in the RXD.PTR register. The TWI slave will only be able to receive as many bytes as specified in the RXD.MAXCNT register. If the TWI master tries to send more bytes to the slave than it can receive, the extra bytes are discarded and NACKed by the slave. If this happens, an ERROR event will be generated.

The EasyDMA configuration registers, see RXD.PTR etc., are latched when the RXSTARTED event is generated.

The TWI slave can be forced to stop by triggering the STOP task. A STOPPED event will be generated when the TWI slave has stopped. The TWI slave will clear the internal 'RX prepared' flag and go back to the IDLE state when it has stopped, see also Terminating an ongoing TWI transaction on page 300.

The TWI slave will generate an ACK after every byte received from the master. The RXD.AMOUNT register can be queried after a transaction to see how many bytes were received.

A typical TWI slave write command response is show in the following figure. Occurrence 2 in the figure illustrates clock stretching performed by the TWI slave following a SUSPEND task.



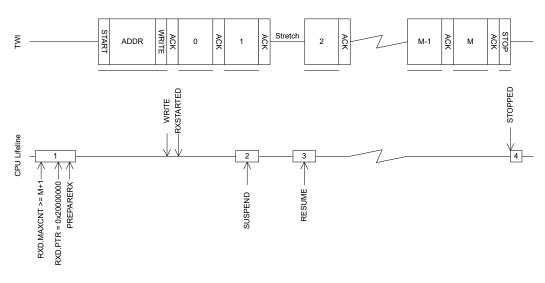


Figure 109: The TWI slave responding to a write command

6.23.4 Master repeated start sequence

An example of a repeated start sequence is one in which the TWI master writes two bytes to the slave followed by reading four bytes from the slave.

This is illustrated in the following figure.

In this example, the receiver does not know what the master wants to read in advance. This information is in the first two received bytes of the write in the repeated start sequence. To guarantee that the CPU is able to process the received data before the TWI slave starts to reply to the read command, the SUSPEND task is triggered via a shortcut from the READ event generated when the read command is received. When the CPU has processed the incoming data and prepared the correct data response, the CPU will resume the transaction by triggering the RESUME task.

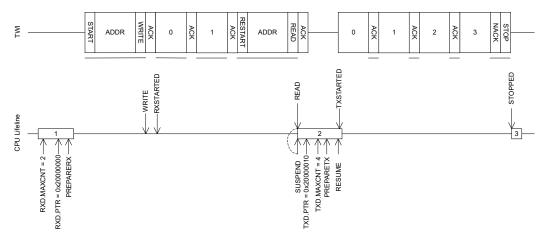


Figure 110: Repeated start sequence

6.23.5 Terminating an ongoing TWI transaction

In some situations, e.g. if the external TWI master is not responding correctly, it may be required to terminate an ongoing transaction.

This can be achieved by triggering the STOP task. In this situation, a STOPPED event will be generated when the TWI has stopped independent of whether or not a STOP condition has been generated on the TWI bus. The TWI slave will release the bus when it has stopped and go back to its IDLE state.



6.23.6 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOP task may not be always needed (the peripheral might already be stopped), but if it is sent, software shall wait until the STOPPED event was received as a response before disabling the peripheral through the ENABLE register.

6.23.7 Slave mode pin configuration

The SCL and SDA signals associated with the TWI slave are mapped to physical pins according to the configuration specified in the PSEL.SCL and PSEL.SDA registers respectively.

The PSEL.SCL and PSEL.SDA registers and their configurations are only used as long as the TWI slave is enabled, and retained only as long as the device is in ON mode. When the peripheral is disabled, the pins will behave as regular GPIOs, and use the configuration in their respective OUT bit field and PIN_CNF[n] register. PSEL.SCL and PSEL.SDA must only be configured when the TWI slave is disabled.

To secure correct signal levels on the pins used by the TWI slave when the system is in OFF mode, and when the TWI slave is disabled, these pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

TWI slave signal	TWI slave pin	Direction	Output value	Drive strength
SCL	As specified in PSEL.SCL	Input	Not applicable	SOD1
SDA	As specified in PSEL.SDA	Input	Not applicable	SOD1

Table 95: GPIO configuration before enabling peripheral

6.23.8 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40003000	TWIS	TWIS0	Two-wire interface slave	
			Table 96: Instances	
Register	Offse	Description		
TASKS_STOP	0x014	Stop TWI tra	nsaction	
TASKS_SUSPEND	0x010	Suspend TW	I transaction	
TASKS_RESUME	0x020	Resume TWI	transaction	
TASKS_PREPARERX	0x030	Prepare the	TWI slave to respond to a write comman	d
TASKS_PREPARETX	0x034	Prepare the	TWI slave to respond to a read command	1
EVENTS_STOPPED	0x104	TWI stopped	I	
EVENTS_ERROR	0x124	TWI error		

EVENTS_TXSTARTED 0x150 Transmit sequence started **EVENTS WRITE** 0x164 Write command received EVENTS_READ 0x168 Read command received SHORTS 0x200 Shortcuts between local events and tasks INTEN 0x300 Enable or disable interrupt INTENSET 0x304 Enable interrupt INTENCLR 0x308 Disable interrupt ERRORSRC 0x4D0 Error source

Receive sequence started

EVENTS_RXSTARTED

0x14C

Register	Offset	Description
MATCH	0x4D4	Status register indicating which address had a match
ENABLE	0x500	Enable TWIS
PSEL.SCL	0x508	Pin select for SCL signal
PSEL.SDA	0x50C	Pin select for SDA signal
RXD.PTR	0x534	RXD Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in RXD buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last RXD transaction
RXD.LIST	0x540	EasyDMA list type
TXD.PTR	0x544	TXD Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in TXD buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last TXD transaction
TXD.LIST	0x550	EasyDMA list type
ADDRESS[0]	0x588	TWI slave address 0
ADDRESS[1]	0x58C	TWI slave address 1
CONFIG	0x594	Configuration register for the address match mechanism
ORC	0x5C0	Over-read character. Character sent out in case of an over-read of the transmit buffer.

Table 97: Register overview

6.23.8.1 TASKS_STOP

Address offset: 0x014

Stop TWI transaction

Bit r	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STOP			Stop TWI transaction
		Trigger	1	Trigger task

6.23.8.2 TASKS_SUSPEND

Address offset: 0x01C

Suspend TWI transaction

Bit n	um	ber			313	0 29	28	27 2	5 25	5 24	23	22	21	20 1	19 1	181	71	6 15	5 14	13	12 1	.1 1	9 0	8	7	6	5 4	43	2	1	0
ID																															A
Rese	et O	x00	00000		0	0 0	0	0 0	0	0	0	0	0	0	0	0 0) (0 0	0	0	0	0 0	0	0	0	0	0	0 0	0	0	0
ID																															
А	۷	v	TASKS_SUSPEND								Su	spe	nd	тw	l tra	ansa	acti	on													
				Trigger	1						Tri	gge	er ta	sk																	

6.23.8.3 TASKS_RESUME

Address offset: 0x020

Resume TWI transaction



Bit n	umb	er		31 3	80 29	28	27	26	25	24	23	22	21	. 20	19	18	3 17	16	15	14	13	12	11 :	10 9	9	87	' 6	5	4	3	2	1)
ID																																	7
Rese	t OxO	0000000		0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0	0 0) (0	0	0	0	0)
A	W	TASKS_RESUME									Re	esur	ne	тν	/I tr	ran	sac	tio	n														
			Trigger	1							Tri	igge	er t	ask																			

6.23.8.4 TASKS_PREPARERX

Address offset: 0x030

Prepare the TWI slave to respond to a write command

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	W TASKS_PREPARERX			Prepare the TWI slave to respond to a write command
		Trigger	1	Trigger task

6.23.8.5 TASKS_PREPARETX

Address offset: 0x034

Prepare the TWI slave to respond to a read command

Bit n	umb	er		31 30	29	28 2	7 26	5 25	24	23 22	2 2 1	1 20	19 1	18 1	7 16	5 15	5 14	13	12	11	10 :	9 8	37	6	5	4	3	2	1	о
ID																														Д
Rese	et Ox	0000000		0 0	0	0 0	0 0	0	0	0 0	0	0	0	0 0) ()	0	0	0	0	0	0	0 (0 0	0	0	0	0	0	0	o
ID										Desc																				
А	w	TASKS_PREPARETX								Prep	are	the	тw	I sla	ve t	o re	esp	ond	to	a re	ad	con	nma	nd						
			Trigger	1						Trigg	er t	task																		

6.23.8.6 EVENTS_STOPPED

Address offset: 0x104

TWI stopped

Bit n	umber		31 30	29 28	27 2	6 25	24	23 :	22	21 2	0 19	9 18	17	16 1	.5 1	4 13	12 1	.1 10	9	8	7	6	5	4	32	1	0
ID																											А
Rese	t 0x0000000		0 0	0 0	0 0	0 0	0	0	0	0 0	0	0	0	0	0 0	0	0	0 0	0	0	0	0	0	0	0 0	0	0
ID																											
А	RW EVENTS_STOPPED							тw	/I st	opp	ed																
		NotGenerated	0					Eve	ent	not (gene	erat	ed														
		Generated	1					Eve	ent	gene	erate	ed															

6.23.8.7 EVENTS_ERROR

Address offset: 0x124

TWI error



Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_ERROR			TWI error
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.23.8.8 EVENTS_RXSTARTED

Address offset: 0x14C

Receive sequence started

Bit number	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5	4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0
ID Acce Field Value ID		
A RW EVENTS_RXSTARTED	Receive sequence started	
NotGenerated	0 Event not generated	
Generated	1 Event generated	

6.23.8.9 EVENTS_TXSTARTED

Address offset: 0x150

Transmit sequence started

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_TXSTARTED			Transmit sequence started
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.23.8.10 EVENTS_WRITE

Address offset: 0x164

Write command received

Bit number		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_WRITE			Write command received
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.23.8.11 EVENTS_READ

Address offset: 0x168

Read command received



Bit n	umber		31 30 29 28 27	2 6 2 5 2 4 2 3 2 2 2 1 2 0 1 9 1 8 1 7 1 6 1 5 1 4 1 3 1 2 1 1 1 0 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				
А	RW EVENTS_READ			Read command received
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.23.8.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
A	RW WRITE_SUSPEND			Shortcut between event WRITE and task SUSPEND
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW READ_SUSPEND			Shortcut between event READ and task SUSPEND
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut

6.23.8.13 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit r	number		31 30 29 28 27 2	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				HG FE B A
Res	et 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW STOPPED			Enable or disable interrupt for event STOPPED
		Disabled	0	Disable
		Enabled	1	Enable
В	RW ERROR			Enable or disable interrupt for event ERROR
		Disabled	0	Disable
		Enabled	1	Enable
Е	RW RXSTARTED			Enable or disable interrupt for event RXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
F	RW TXSTARTED			Enable or disable interrupt for event TXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
G	RW WRITE			Enable or disable interrupt for event WRITE
		Disabled	0	Disable
		Enabled	1	Enable
н	RW READ			Enable or disable interrupt for event READ
		Disabled	0	Disable
		Enabled	1	Enable



6.23.8.14 INTENSET

Address offset: 0x304

Enable interrupt

ID ID Value IO Value IO Value Description ID
IDAcce FieldValue IDValueDescriptionARW STOPPEDSet1EnableDisabledDisabled0Read: DisabledDisabledIRead: DisabledEnabled1Read: EnabledBRW ERRORVite '1' to enable interrupt for event ERRORBRW ERRORSet1Disabled0Read: DisabledDisabled0Read: DisabledBSet1EnableDisabled0Read: DisabledDisabled0Read: DisabledERW ERRORVite '1' to enable interrupt for event ERRORERW RXSTARTEDVite '1' to enable interrupt for event RXSTARTEDFRW TXSTARTEDVite '1' to enable interrupt for event TXSTARTEDFRW TXSTARTEDVite '1' to enable interrupt for event TXSTARTEDFRW TXSTARTEDSet1FRW TXSTARTEDSetIDisabledConcolIDisabledConcolIDisabledConcolIDisabledISet1IConcolIDisabledConcolIDisabledIDisabledIDisabledIConcolIDisabledIDisabledIDisabledIDisabledIDisabledIDisabledIDisabledIDisabled <tr< th=""></tr<>
A RW STOPPED Set 1 Enable Set 1 Enable Disabled 0 Read: Disabled Enable Enable Read: Enabled B RW ERROR Vrite '1' to enable interrupt for event ERROR B RW ERROR Set 1 B Set 1 Read: Disabled Disabled 0 Read: Enabled E RW RXSTARTED Vrite '1' to enable interrupt for event RXSTARTED E Set 1 Read: Disabled Disabled 0 Read: Enabled F RW TXSTARTED Vrite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vrite '1' to enable interrupt for event TXSTARTED B Set
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Disabled B RW_ERROR Vite '1' to enable interrupt for event ERROR B Set 1 Enabled Disabled 0 Read: Disabled Disabled 0 Read: Disabled E Set 1 Read: Disabled E RW_EXTARTED Vite '1' to enable interrupt for event RXSTARTED E Set 1 Read: Disabled I Disabled 0 Read: Disabled F RW_EXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW_EXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW_EXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW_EXSTARTED Vite '1' to enable interrupt for event TXSTARTED F Set 1 Enable Disabled 0 Read: Disabled
Disabled 0 Red: Disabled Enabled 1 Red: Enabled B RW ERROR VITe '1' to enable interrupt for event ERROR Disabled 1 Gabled Disabled 0 Red: Disabled Disabled 0 Red: Disabled E RW EXTARTED VITe '1' to enable interrupt for event RXSTARTED E RW EXTARTED VITE '1' to enable interrupt for event RXSTARTED E Disabled 0 Red: Disabled Disabled 1 Red: Disabled F RW EXSTARTED VITE '1' to enable interrupt for event TXSTARTED F RW EXSTARTED VITE '1' to enable interrupt for event TXSTARTED F RW EXSTARTED VITE '1' to enable interrupt for event TXSTARTED F RV EXSTARTED VITE '1' to enable interrupt for event TXSTARTED F St 1 Enabled Disabled 0 Enabled
Enabled 1 Read: Enabled B RW ERROR Write '1' to enable interrupt for event ERROR Set 1 Enabled Disabled 0 Read: Disabled E RW ERROR Read: Disabled E Babled 0 Read: Disabled E RW ERROR Vite '1' to enable interrupt for event RXSTARTED E RW ERROR Vite '1' to enable interrupt for event RXSTARTED E Set 1 Enabled Disabled 0 Read: Disabled F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED Set 1 Enabled Disabled 0 Enable
B RW ERROR Set 1 Enable Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled E RW EXSTARTED Write '1' to enable interrupt for event EXSTARTED E RW EXSTARTED Vite '1' to enable interrupt for event RXSTARTED E Read: Disabled Intervent for event EXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED Set 1 Beade: Disabled 0 Read: Disabled F RW TXSTARTED Vite '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled E RW_RXSTARTED Vite '1' to enable interrupt for event RXSTARTED E Set 1 Disabled 0 Read: Enabled Disabled 1 Enable Disabled 0 Read: Disabled F RW_TXSTARTED Vite '1' to enable interrupt for event TXSTARTED F RW_TXSTARTED Vite '1' to enable interrupt for event TXSTARTED Set 1 Bite Disabled 0 Read: Enabled F RW_TXSTARTED Vite '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled E RW_RXSTARTED Write '1' to enable interrupt for event RXSTARTED Set 1 Enabled Disabled 0 Read: Disabled F RW_TXSTARTED Virie '1' to enable interrupt for event TXSTARTED Set 1 Read: Disabled F RW_TXSTARTED Virie '1' to enable interrupt for event TXSTARTED Set 1 Read: Enabled Disabled 0 Read: Disabled
Enabled 1 Read: Enabled E RW RXSTARTED Write '1' to enable interrupt for event RXSTARTED Set 1 Enabled Disabled 0 Read: Disabled F RW TXSTARTED Virite '1' to enable interrupt for event TXSTARTED Set 1 Read: Disabled Disabled 0 Read: Disabled F RW TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enabled Disabled 0 Read: Disabled
E RW RXSTARTED Write '1' to enable interrupt for event RXSTARTED Set 1 Enable Disabled 0 Read: Disabled F RW TXSTARTED Vrite '1' to enable interrupt for event TXSTARTED Set 1 Mrite '1' to enable interrupt for event RXSTARTED F RW TXSTARTED Vrite '1' to enable interrupt for event TXSTARTED Set 1 Enabled Disabled 0 Read: Disabled
Set 1 Enable Disabled 0 Read: Disabled Enabled 1 Read: Enabled F RW_TXSTARTED Vrite '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled
Disabled 0 Read: Disabled Enabled 1 Read: Enabled F RW_TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enabled Disabled 0 Read: Disabled
F RW TXSTARTED Read: Enabled Set 1 Write '1' to enable interrupt for event TXSTARTED Disabled 0 Read: Disabled
F RW_TXSTARTED Write '1' to enable interrupt for event TXSTARTED Set 1 Enable Disabled 0 Read: Disabled
Set1EnableDisabled0Read: Disabled
Disabled 0 Read: Disabled
Enabled 1 Read: Enabled
G RW WRITE Write '1' to enable interrupt for event WRITE
Set 1 Enable
Disabled 0 Read: Disabled
Enabled 1 Read: Enabled
H RW READ Write '1' to enable interrupt for event READ
Set 1 Enable
Disabled 0 Read: Disabled
Enabled 1 Read: Enabled

6.23.8.15 INTENCLR

Address offset: 0x308

Disable interrupt

			_																				_	_	_	_	_		-	
Bit n	umber		31	L 30 :	29	28 :	27.	26.	25 2	24 2	23 22	2 21	20	19	18	17	16	15 1	.41	3 12	11	10	9	8	7	6	54	3	2	1 (
ID								н	G				F	E									В							А
Rese	et 0x0000000		0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0	0 0	0 0	0	0	0	0	0	0	0 0	0	0	0 (
ID																														
А	RW STOPPED									١	Nrite	e '1'	to	dis	abl	e in	terr	upt	for	eve	nt S	то	PPE	D						
		Clear	1							[Disal	ole																		
		Disabled	0							F	Read	: Dis	sab	led																
		Enabled	1							F	Read	: En	abl	ed																
В	RW ERROR									١	Nrite	e '1'	to	dis	abl	e in	terr	upt	for	eve	nt E	RR	OR							
		Clear	1							[Disal	ole																		
		Disabled	0							F	Read	: Dis	sab	led																
		Enabled	1							F	Read	: En	abl	ed																
Е	RW RXSTARTED									١	Nrite	e '1'	to	dis	abl	e in	terr	upt	for	eve	nt F	RXST	TAR	TEC)					
		Clear	1							[Disal	ole																		



0.11			24	201				c 21				1 20		0.40		10	4.5		4.2.4	2.4			~	-	~		2	2	4	~
Bit n	umber		31	. 30 2	29.	28 2	272	6 2	52	4 23 2	22.2	21.20) 1	9 18	31/	16	15	14	131	.2 1	1 10	9	8	/	6	54	- 3	2	1	0
ID							ł	H G	6			F	E									В							А	
Rese	t 0x0000000		0	0	0	0	0	0 0) (0 0	0	0 0	C	0	0	0	0	0	0	0 0	0	0	0	0	0	0 0	0	0	0	0
		Disabled	0							Rea	d: [Disal	ole	d																
		Enabled	1							Rea	d: E	Enab	leo	ł																
F	RW TXSTARTED									Wri	te '	1' to	di	sab	le ir	nter	rrup	t fo	or ev	ent	тхз	STAF	RTE	D						
		Clear	1							Disa	able	9																		
		Disabled	0							Rea	d: [Disal	ole	d																
		Enabled	1							Rea	d: E	Enab	leo	ł																
G	RW WRITE									Wri	te '	1' to	di	sab	le ir	nter	rrup	t fo	or ev	ent	WF	RITE								
		Clear	1							Disa	able	5																		
		Disabled	0							Rea	d: [Disal	ole	d																
		Enabled	1							Rea	d: E	Enab	leo	ł																
н	RW READ									Wri	te '	1' to	di	sab	le ir	nter	rrup	t fo	or ev	ent	RE/	٩D								
		Clear	1							Disa	able	5																		
		Disabled	0							Rea	d: [Disal	ole	d																
		Enabled	1							Rea	d: E	Enab	leo	ł																

6.23.8.16 ERRORSRC

Address offset: 0x4D0

Error source

Bit r	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				СВА
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW OVERFLOW			RX buffer overflow detected, and prevented
		NotDetected	0	Error did not occur
		Detected	1	Error occurred
В	RW DNACK			NACK sent after receiving a data byte
		NotReceived	0	Error did not occur
		Received	1	Error occurred
С	RW OVERREAD			TX buffer over-read detected, and prevented
		NotDetected	0	Error did not occur
		Detected	1	Error occurred

6.23.8.17 MATCH

Address offset: 0x4D4

Status register indicating which address had a match

Bit n	um	ber				31	30 29	9 28	8 27 2	262	25 24	123	3 2 2	21	20 1	.9 1	.8 1	7 16	5 15	14	13	12 1	1 1(9	8	7	6	5 4	4 3	2	1	0
ID																																А
Rese	t 0:	k0000	0000			0	0 0	0	0	0	0 0	0	0	0	0	0	0 0	0	0	0	0	0 (0 0	0	0	0	0	0	0 0	0	0	0
ID																																
А	R	М	АТСН			[0.	.1]					In	dica	tio	n of	wh	ich a	add	res	s in	{AD	DRE	SS}	tha	t m	atc	hed	the				_
												in	com	ning	, ado	Ires	s															

6.23.8.18 ENABLE

Address offset: 0x500

Enable TWIS

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААА
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW ENABLE		Enable or disable TWIS
Disabled	0	Disable TWIS
Enabled	9	Enable TWIS

6.23.8.19 PSEL.SCL

Address offset: 0x508

Pin select for SCL signal

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	et OxFFFFFFFF		1 1 1 1 1 1 1 1	
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.23.8.20 PSEL.SDA

Address offset: 0x50C

Pin select for SDA signal

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.23.8.21 RXD.PTR

Address offset: 0x534

RXD Data pointer

Bit r	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	et 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
А	RW PTR	RXD Data pointer
		Coo the memory chapter for details shout which memories

See the memory chapter for details about which memories are available for EasyDMA.



6.23.8.22 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in RXD buffer

A RW MA	XCNT	[00x3FFF]	Maximum number of bytes in RXD buffer
ID Acce Fiel			
Reset 0x00000	000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			A A A A A A A A A A A A A A A A A A A
Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.23.8.23 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last RXD transaction

Bit number	31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Description
A B AMOUNT	[00x3FFF]	Number of bytes transferred in the last RXD transaction

6.23.8.24 RXD.LIST

Address offset: 0x540

EasyDMA list type

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW LIST		List type
Disabled	0	Disable EasyDMA list
ArrayList	1	Use array list

6.23.8.25 TXD.PTR

Address offset: 0x544

TXD Data pointer

Bit n	umber	31	30 2	92	8 2	7 26	5 2 5	24	23	222	212	0 19	18	17	16 1	5 1	113	12	11 1	09	8	7	6	5	4	3 2	2 1	. 0
ID		А	A A	4 <i>4</i>	A A	A A	А	А	А	А	A	A A	A	А	A	4 A	A	А	A	A	A	А	А	А	A	A A	A A	A
Rese	t 0x0000000	0	0 0) () () 0	0	0	0	0	0 0	0 0	0	0	0	0 0	0	0	0 0	0 (0	0	0	0	0	0 0) (0
ID																												
А	RW PTR								тхі	D Da	ata p	poin	ter															_

See the memory chapter for details about which memories are available for EasyDMA.

6.23.8.26 TXD.MAXCNT

Address offset: 0x548



Maximum number of bytes in TXD buffer

A RW MAXCNT	[00x3FFF]	Maximum number of bytes in TXD buffer
ID Acce Field		
Reset 0x00000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		A A A A A A A A A A A A A A A A A A A
Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

6.23.8.27 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last TXD transaction

Bit number	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Description
A R AMOUNT	[00x3FFF]	Number of bytes transferred in the last TXD transaction

6.23.8.28 TXD.LIST

Address offset: 0x550

EasyDMA list type

Bit number		31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A
Reset 0x0000000		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW LIST			List type
	Disabled	0	Disable EasyDMA list
	ArrayList	1	Use array list

6.23.8.29 ADDRESS[n] (n=0..1)

Address offset: 0x588 + (n × 0x4)

TWI slave address n

Bit n	umber	313	0 2	9 28	27	26 2	5 24	23	22	212	0 19	18	17 1	.6 1	5 14	13	L2 11	10	9	8	7	6 5	54	3	2	1 0
ID																						A A	A A	A	А	A A
Rese	t 0x0000000	0	D O	0	0	0 0	0 0	0	0	0 0	0 0	0	0	0 0	0	0	0 0	0	0	0	0	0 0	0 0	0	0	0 0
ID																										
А	RW ADDRESS							тν	/I sl	ave	addı	ess														

6.23.8.30 CONFIG

Address offset: 0x594

Configuration register for the address match mechanism



Bit number		31 30 29 28 2	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			B A
Reset 0x0000001		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A-B RW ADDRESS[i] (i=01)			Enable or disable address matching on ADDRESS[i]
	Disabled	0	Disabled
	Enabled		Enabled

6.23.8.31 ORC

Address offset: 0x5C0

Over-read character. Character sent out in case of an over-read of the transmit buffer.

Bit number	31 30 29 28 27 26 25 24 2	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		Description
A RW ORC	(Over-read character. Character sent out in case of an over-
	r	read of the transmit buffer.

6.23.9 Electrical specification

6.23.9.1 TWIS slave timing specifications

Symbol	Description	Min.	Тур.	Max.	Units
f _{TWIS,SCL}	Bit rates for TWIS ³²	100		400	kbps
t _{TWIS,START}	Time from PREPARERX/PREPARETX task to ready to receive/ transmit		1.5		μs
t _{TWIS,SU_DAT}	Data setup time before positive edge on SCL – all modes	300			ns
t _{TWIS,HD_DAT}	Data hold time after negative edge on SCL – all modes	500			ns
t _{TWIS,HD_STA,100kbps}	TWI slave hold time from for START condition (SDA low to SCL low), 100 kbps	5200			ns
t _{TWIS,HD_STA,400kbps}	TWI slave hold time from for START condition (SDA low to SCL low), 400 kbps	1300			ns
t _{TWIS,SU_STO,100kbps}	TWI slave setup time from SCL high to STOP condition, 100 kbps	5200			ns
t _{TWIS,SU_STO,400kbps}	TWI slave setup time from SCL high to STOP condition, 400 kbps	1300			ns
t _{TWIS,BUF,100kbps}	TWI slave bus free time between STOP and START conditions, 100 kbps		4700		ns
t _{TWIS,BUF,400kbps}	TWI slave bus free time between STOP and START conditions, 400 kbps		1300		ns

³² High bit rates or stronger pull-ups may require GPIOs to be set as High Drive, see GPIO chapter for more details.



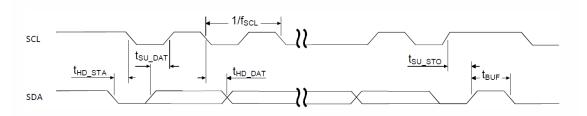


Figure 111: TWIS timing diagram, 1 byte transaction

6.24 UART — Universal asynchronous receiver/ transmitter

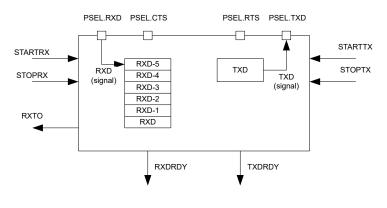


Figure 112: UART configuration

6.24.1 Functional description

Listed here are the main features of UART.

The UART implements support for the following features:

- Full-duplex operation
- Automatic flow control
- Parity checking and generation for the 9th data bit

As illustrated in UART configuration on page 312, the UART uses the TXD and RXD registers directly to transmit and receive data. The UART uses one stop bit.

Note: The external crystal oscillator must be enabled to obtain sufficient clock accuracy for stable communication. See CLOCK — Clock control on page 63 for more information.

6.24.2 Pin configuration

The different signals RXD, CTS (Clear To Send, active low), RTS (Request To Send, active low), and TXD associated with the UART are mapped to physical pins according to the configuration specified in the PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers respectively.

If the CONNECT field of a PSEL.xxx register is set to Disconnected, the associated UART signal will not be connected to any physical pin. The PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers and their configurations are only used as long as the UART is enabled, and retained only for the duration the device is in ON mode. PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD must only be configured when the UART is disabled.



To secure correct signal levels on the pins by the UART when the system is in OFF mode, the pins must be configured in the GPIO peripheral as described in Pin configuration on page 312.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

UART pin	Direction	Output value
RXD	Input	Not applicable
CTS	Input	Not applicable
RTS	Output	1
TXD	Output	1

Table 98: GPIO configuration

6.24.3 Shared resources

The UART shares registers and resources with other peripherals that have the same ID as the UART.

All peripherals with the same ID as the UART must be disabled before configuring and using the UART. Disabling a peripheral that has the same ID as the UART will not reset any of the registers that are shared with the UART. It is therefore important to configure all relevant UART registers explicitly to ensure that it operates correctly.

See Instantiation on page 17 for details on peripherals and their IDs.

6.24.4 Transmission

A UART transmission sequence is started by triggering the STARTTX task.

Bytes are transmitted by writing to the TXD register. When a byte has been successfully transmitted, the UART will generate a TXDRDY event after which a new byte can be written to the TXD register. A UART transmission sequence is stopped immediately by triggering the STOPTX task.

If flow control is enabled, a transmission will be automatically suspended when CTS is deactivated, and resumed when CTS is activated again, as shown in the following figure. A byte that is in transmission when CTS is deactivated will be fully transmitted before the transmission is suspended. For more information, see Suspending the UART on page 314.

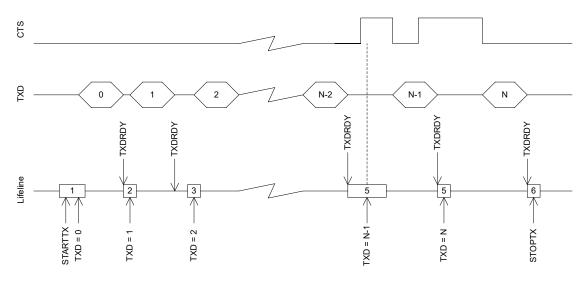


Figure 113: UART transmission



6.24.5 Reception

A UART reception sequence is started by triggering the STARTRX task.

The UART receiver chain implements a FIFO capable of storing six incoming RXD bytes before data is overwritten. Bytes are extracted from this FIFO by reading the RXD register. When a byte is extracted from the FIFO, a new byte pending in the FIFO will be moved to the RXD register. The UART will generate an RXDRDY event every time a new byte is moved to the RXD register.

When flow control is enabled, the UART will deactivate the RTS signal when there is only space for four more bytes in the receiver FIFO. The counterpart transmitter is therefore able to send up to four bytes after the RTS signal is deactivated before data is being overwritten. To prevent overwriting data in the FIFO, the counterpart UART transmitter must therefore make sure to stop transmitting data within four bytes after the RTS line is deactivated.

The RTS signal will first be activated again when the FIFO has been emptied, that is, when all bytes in the FIFO have been read by the CPU, see UART reception on page 314.

The RTS signal will also be deactivated when the receiver is stopped through the STOPRX task as illustrated in UART reception on page 314. The UART is able to receive four to five additional bytes if they are sent in succession immediately after the RTS signal has been deactivated. This is possible because the UART is, even after the STOPRX task is triggered, able to receive bytes for an extended period of time dependent on the configured baud rate. The UART will generate a receiver timeout event (RXTO) when this period has elapsed.

To prevent loss of incoming data, the RXD register must only be read one time following every RXDRDY event.

To secure that the CPU can detect all incoming RXDRDY events through the RXDRDY event register, the RXDRDY event register must be cleared before the RXD register is read. The reason for this is that the UART is allowed to write a new byte to the RXD register, and can generate a new event immediately after the RXD register is read (emptied) by the CPU.

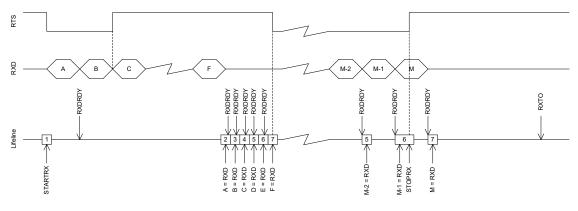


Figure 114: UART reception

As indicated in occurrence 2 in the figure, the RXDRDY event associated with byte B is generated first after byte A has been extracted from RXD.

6.24.6 Suspending the UART

The UART can be suspended by triggering the SUSPEND task.

SUSPEND will affect both the UART receiver and the UART transmitter, i.e. the transmitter will stop transmitting and the receiver will stop receiving. UART transmission and reception can be resumed, after being suspended, by triggering STARTTX and STARTRX respectively.

Following a SUSPEND task, an ongoing TXD byte transmission will be completed before the UART is suspended.



When the SUSPEND task is triggered, the UART receiver will behave in the same way as it does when the STOPRX task is triggered.

6.24.7 Error conditions

An ERROR event, in the form of a framing error, will be generated if a valid stop bit is not detected in a frame. Another ERROR event, in the form of a break condition, will be generated if the RXD line is held active low for longer than the length of a data frame. Effectively, a framing error is always generated before a break condition occurs.

6.24.8 Using the UART without flow control

If flow control is not enabled, the interface will behave as if the CTS and RTS lines are kept active all the time.

6.24.9 Parity and stop bit configuration

Automatic even parity generation for both transmission and reception can be configured using the register CONFIG on page 323. See the register description for details.

The amount of stop bits can also be configured through the register CONFIG on page 323.

6.24.10 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40002000	UART	UART0	Universal asynchronous receiver/		Deprecated
			transmitter		
			Table 99: Instances		
			Table 99: Instances		
Register	Offset	Descripti	on		
TASKS_STARTRX	0x000	Start UAF	RT receiver		
TASKS_STOPRX	0x004	Stop UAR	T receiver		
TASKS_STARTTX	0x008	Start UAF	RT transmitter		
TASKS_STOPTX	0x00C	Stop UAR	T transmitter		
TASKS_SUSPEND	0x01C	Suspend	UART		
EVENTS_CTS	0x100	CTS is act	ivated (set low). Clear To Send.		
EVENTS_NCTS	0x104	CTS is dea	activated (set high). Not Clear To Send.		
EVENTS_RXDRDY	0x108	Data rece	ived in RXD		
EVENTS_TXDRDY	0x11C	Data sent	from TXD		
EVENTS_ERROR	0x124	Error det	ected		
EVENTS_RXTO	0x144	Receiver	timeout		
SHORTS	0x200	Shortcuts	between local events and tasks		
INTENSET	0x304	Enable in	terrupt		
INTENCLR	0x308	Disable ir	iterrupt		
ERRORSRC	0x480	Error sou	rce		
ENABLE	0x500	Enable U	ART		
PSEL.RTS	0x508	Pin select	t for RTS		
PSEL.TXD	0x50C	Pin select	t for TXD		
PSEL.CTS	0x510	Pin select	t for CTS		
PSEL.RXD	0x514	Pin select	for RXD		
RXD	0x518	RXD regis	ter		
TXD	0x51C	TXD regis	ter		
BAUDRATE	0x524	Baud rate	e. Accuracy depends on the HFCLK source	e selected.	



Register	Offset	Description
CONFIG	0x56C	Configuration of parity and hardware flow control

Table 100: Register overview

6.24.10.1 TASKS_STARTRX

Address offset: 0x000

Start UART receiver

Bit n	um	nber			313	30 29	9 28	27	262	25 2	24 :	23 2	222	21	20 1	19 :	18 1	17 :	16 1	.5 1	14 1	31	2 1	1 10	9	8	7	6	5	4	3 2	2 1	. 0
ID																																	А
Rese	t O)x00	000000		0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 (0	0	0	0	0	0	0	0 0) (0
ID												Des																					
А	١	N	TASKS_STARTRX								:	Star	t U	JAR	t re	ece	ive	r															
				Trigger	1							Trig	ger	r ta	sk																		

6.24.10.2 TASKS_STOPRX

Address offset: 0x004

Stop UART receiver

Bit n	um	ber		313	80 29	28 2	27 26	5 25	24	23 2	222	21	20 1	.9 1	.8 1	7 10	5 15	14	13	L2 1	1 10	9	8	7	6	5 4	43	2	1 0
ID																													А
Rese	t 0	x0000000		0	0 0	0	0 0	0	0	0	0	0	0	0	0 0	0	0	0	0	0 0	0	0	0	0	0	0 (0 0	0	0 0
ID																													
А	۷	V TASKS_STOPRX								Sto	рU	IAR	T re	cei	ver														
			Trigger	1						Trig	ger	r ta	sk																

6.24.10.3 TASKS_STARTTX

Address offset: 0x008

Start UART transmitter

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_STARTTX			Start UART transmitter
		Trigger	1	Trigger task

6.24.10.4 TASKS_STOPTX

Address offset: 0x00C

Stop UART transmitter



Bit numb	er		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				Α
Reset 0x0	0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Ac				
A W	TASKS_STOPTX			Stop UART transmitter
		Trigger	1	Trigger task

6.24.10.5 TASKS_SUSPEND

Address offset: 0x01C

Suspend UART

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	W TASKS_SUSPEND			Suspend UART
		Trigger	1	Trigger task

6.24.10.6 EVENTS_CTS

Address offset: 0x100

CTS is activated (set low). Clear To Send.

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_CTS			CTS is activated (set low). Clear To Send.
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.24.10.7 EVENTS_NCTS

Address offset: 0x104

CTS is deactivated (set high). Not Clear To Send.

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_NCTS			CTS is deactivated (set high). Not Clear To Send.
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.24.10.8 EVENTS_RXDRDY

Address offset: 0x108

Data received in RXD



Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_RXDRDY			Data received in RXD
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.24.10.9 EVENTS_TXDRDY

Address offset: 0x11C

Data sent from TXD

Bit number	31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A
Reset 0x00000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_TXDRDY		Data sent from TXD
NotGenerated	0	Event not generated
Generated	1	Event generated

6.24.10.10 EVENTS_ERROR

Address offset: 0x124

Error detected

Bit number		31 3	0 29 28 2	7 26 25	24 23 2	2 21 20	0 19 1	8 17 1	.6 15	14 13	3 12 1	1 10	98	7	6	54	3	2 1 0
ID																		А
Reset 0x0000000	ט	0	0000	0 0 0	000	0 0 0	0 0	0	0 0	0 0	0 0	0	0 0	0	0	0 0	0	000
ID Acce Field																		
A RW EVENT	S_ERROR				Erro	r deteo	ted											
	NotGen	erated 0			Ever	nt not g	genera	ted										
	Genera	ed 1			Ever	nt gene	rated											

6.24.10.11 EVENTS_RXTO

Address offset: 0x144

Receiver timeout

Bit number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_RXTO			Receiver timeout
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.24.10.12 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks



Bit r	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				B A
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW CTS_STARTRX			Shortcut between event CTS and task STARTRX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW NCTS_STOPRX			Shortcut between event NCTS and task STOPRX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
В	RW NCTS_STOPRX		0 1	Disable shortcut

6.24.10.13 INTENSET

Address offset: 0x304

Enable interrupt

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				F E D C B A
Rese	et 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW CTS			Write '1' to enable interrupt for event CTS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW NCTS			Write '1' to enable interrupt for event NCTS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
С	RW RXDRDY			Write '1' to enable interrupt for event RXDRDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW TXDRDY			Write '1' to enable interrupt for event TXDRDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
Е	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW RXTO			Write '1' to enable interrupt for event RXTO
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.24.10.14 INTENCLR

Address offset: 0x308

Disable interrupt



Bit r	number		31 30 29 28 27	26 25 24 2	23 22 21 2	0 19 1	8 17 3	l6 15	14	13 12	2 11	10	98	87	6	5	4	3 2	1	0
ID							F						E	D)			(В	А
Res	et 0x0000000		0 0 0 0 0	0 0 0	0 0 0 0	000	0 (0 0	0	0 0) 0	0	0 (0 0	0	0	0	0 0	0	0
					Descriptio															
A	RW CTS			,	Write '1' to	o disab	ole int	erru	pt fo	r eve	ent (стѕ								
		Clear	1	I	Disable															
		Disabled	0	I	Read: Disa	abled														
		Enabled	1	I	Read: Enal	bled														
В	RW NCTS			,	Write '1' to	o disab	ole int	erru	pt fo	r eve	ent I	NCTS	5							
		Clear	1	I	Disable															
		Disabled	0	I	Read: Disa	abled														
		Enabled	1	I	Read: Enal	bled														
С	RW RXDRDY			,	Write '1' to	o disab	ole int	erru	pt fo	r eve	ent I	RXDF	RDY							
		Clear	1		Disable															
		Disabled	0		Read: Disa	abled														
		Enabled	1	I	Read: Enal	bled														
D	RW TXDRDY			,	Write '1' to	o disab	ole int	erru	pt fo	r eve	ent	TXDF	NDY							
		Clear	1		Disable															
		Disabled	0		Read: Disa	abled														
		Enabled	1	I	Read: Enal	bled														
E	RW ERROR				Write '1' to	o disab	ole int	erru	pt fo	r eve	ent I	ERRC	DR							
		Clear	1	I	Disable															
		Disabled	0	I	Read: Disa	abled														
		Enabled	1	I	Read: Enal	bled														
F	RW RXTO				Write '1' to	o disab	ole int	erru	pt fo	r eve	ent I	RXTC)							
		Clear	1	I	Disable															
		Disabled	0		Read: Disa	abled														
		Enabled	1		Read: Enal	bled														

6.24.10.15 ERRORSRC

Address offset: 0x480

Error source

Bit r	number		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B A
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW OVERRUN			Overrun error
				A start bit is received while the previous data still lies in
				RXD. (Previous data is lost.)
		NotPresent	0	Read: error not present
		Present	1	Read: error present
В	RW PARITY			Parity error
				A character with bad parity is received, if HW parity check is
				enabled.
		NotPresent	0	Read: error not present
		Present	1	Read: error present
С	RW FRAMING			Framing error occurred
				A valid stop bit is not detected on the serial data input after
				all bits in a character have been received.
		NotPresent	0	Read: error not present



Bit n	umber		313	30 2	9 28	3 27	26	25 2	24 2	23	22	21	20	19	18	17	16	15	14	13	12 :	11 1	10 9	8 (7	6	5	4	3	2	1 (
ID																													D	С	B
Rese	t 0x0000000		0	0 0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0 0	0	0	0	0	0	0	0 (
ID										De																					
		Present	1						I	Rea	ad:	err	or	pre	ser	nt															
D	RW BREAK								I	Bre	eak	cor	ndi	tior	n																
									-	The	e se	eria	l d	ata	inp	out	is '()' fc	or lo	ong	er t	har	n th	e le	ngtl	n of	а				
									(dat	ta f	ram	ne.	(Th	ie c	lata	h fra	ame	e le	ngt	h is	10	bits	s wi	tho	ut p	arit	y			
									I	bit,	, ar	nd 1	11	oits	wi	th p	bari	ty b	oit.)												
		NotPresent	0						I	Rea	ad:	err	or	not	pr	ese	nt														
		Present	1						I	Rea	ad:	err	or	pre	ser	nt															

6.24.10.16 ENABLE

Address offset: 0x500

Enable UART

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААА
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW ENABLE		Enable or disable UART
Disabled	0	Disable UART
Enabled	4	Enable UART

6.24.10.17 PSEL.RTS

Address offset: 0x508

Pin select for RTS

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	et OxFFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.18 PSEL.TXD

Address offset: 0x50C

Pin select for TXD



Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	$1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \ 1 \$
ID				Description
A	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.19 PSEL.CTS

Address offset: 0x510

Pin select for CTS

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.20 PSEL.RXD

Address offset: 0x514

Pin select for RXD

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	. 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.24.10.21 RXD

Address offset: 0x518

RXD register

Bit number	31 30 29 28 27 26 25 24 23 22 2	1 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		АААААААА
Reset 0x00000000	0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		tion
A R RXD	RX data	a received in previous transfers, double buffered

6.24.10.22 TXD

Address offset: 0x51C

TXD register

Bit number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A A A A A A A A A A A A A A A A
Reset 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field		
		TX data to be transferred

6.24.10.23 BAUDRATE

Address offset: 0x524

Baud rate. Accuracy depends on the HFCLK source selected.

Bit number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
D		ААААААА	A A A A A A A A A A A A A A A A A A A
Reset 0x04000000		0 0 0 0 0 1 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
D Acce Field			
A RW BAUDRATE			Baud rate
	Baud1200	0x0004F000	1200 baud (actual rate: 1205)
	Baud2400	0x0009D000	2400 baud (actual rate: 2396)
	Baud4800	0x0013B000	4800 baud (actual rate: 4808)
	Baud9600	0x00275000	9600 baud (actual rate: 9598)
	Baud14400	0x003B0000	14400 baud (actual rate: 14414)
	Baud19200	0x004EA000	19200 baud (actual rate: 19208)
	Baud28800	0x0075F000	28800 baud (actual rate: 28829)
	Baud31250	0x00800000	31250 baud
	Baud38400	0x009D5000	38400 baud (actual rate: 38462)
	Baud56000	0x00E50000	56000 baud (actual rate: 55944)
	Baud57600	0x00EBF000	57600 baud (actual rate: 57762)
	Baud76800	0x013A9000	76800 baud (actual rate: 76923)
	Baud115200	0x01D7E000	115200 baud (actual rate: 115942)
	Baud230400	0x03AFB000	230400 baud (actual rate: 231884)
	Baud250000	0x04000000	250000 baud
	Baud460800	0x075F7000	460800 baud (actual rate: 470588)
	Baud921600	0x0EBED000	921600 baud (actual rate: 941176)
	Baud1M	0x10000000	1Mega baud

6.24.10.24 CONFIG

Address offset: 0x56C

Configuration of parity and hardware flow control

Bit number			31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			СВВА	
Reset 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	
ID				
А	RW HWFC			Hardware flow control
		Disabled	0	Disabled
		Enabled	1	Enabled
В	RW PARITY			Parity
		Excluded	0x0	Exclude parity bit
		Included	0x7	Include parity bit
С	RW STOP			Stop bits
		One	0	One stop bit
		Two	1	Two stop bits



6.24.11 Electrical specification

6.24.11.1 UART electrical specification

Symbol	Description	Min.	Тур.	Max.	Units
f _{UART}	Baud rate for UART ³³ .			1000	kbps
t _{UART,CTSH}	CTS high time	1			μs
t _{UART,START}	Time from STARTRX/STARTTX task to transmission started		1		μs

6.25 UARTE — Universal asynchronous receiver/ transmitter with EasyDMA

The Universal asynchronous receiver/transmitter with EasyDMA (UARTE) offers fast, full-duplex, asynchronous serial communication with built-in flow control (CTS, RTS) support in hardware at a rate up to 1 Mbps, and EasyDMA data transfer from/to RAM.

Listed here are the main features for UARTE:

- Full-duplex operation
- Automatic hardware flow control
- Optional even parity bit checking and generation
- EasyDMA
- Up to 1 Mbps baudrate
- Return to IDLE between transactions supported (when using HW flow control)
- One or two stop bit
- Least significant bit (LSB) first

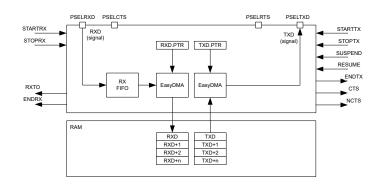


Figure 115: UARTE configuration

The GPIOs used for each UART interface can be chosen from any GPIO on the device and are independently configurable. This enables great flexibility in device pinout and efficient use of board space and signal routing.

Note: The external crystal oscillator must be enabled to obtain sufficient clock accuracy for stable communication. See CLOCK — Clock control on page 63 for more information.

³³ High baud rates may require GPIOs to be set as High Drive, see GPIO for more details.



6.25.1 EasyDMA

The UARTE implements EasyDMA for reading and writing to and from the RAM.

If the TXD.PTR and the RXD.PTR are not pointing to the Data RAM region, an EasyDMA transfer may result in a HardFault or RAM corruption. See Memory on page 15 for more information about the different memory regions.

The .PTR and .MAXCNT registers are double-buffered. They can be updated and prepared for the next RX/ TX transmission immediately after having received the RXSTARTED/TXSTARTED event.

The ENDRX and ENDTX events indicate that the EasyDMA is finished accessing the RX or TX buffer in RAM.

6.25.2 Transmission

The first step of a DMA transmission is storing bytes in the transmit buffer and configuring EasyDMA. This is achieved by writing the initial address pointer to TXD.PTR, and the number of bytes in the RAM buffer to TXD.MAXCNT. The UARTE transmission is started by triggering the STARTTX task.

After each byte has been sent over the TXD line, a TXDRDY event will be generated.

When all bytes in the TXD buffer, as specified in the TXD.MAXCNT register, have been transmitted, the UARTE transmission will end automatically and an ENDTX event will be generated.

A UARTE transmission sequence is stopped by triggering the STOPTX task. A TXSTOPPED event will be generated when the UARTE transmitter has stopped.

If the ENDTX event has not already been generated when the UARTE transmitter has come to a stop, the UARTE will generate the ENDTX event explicitly even though all bytes in the TXD buffer, as specified in the TXD.MAXCNT register, have not been transmitted.

If flow control is enabled through the HWFC field in the CONFIG register, a transmission will be automatically suspended when CTS is deactivated and resumed when CTS is activated again, as shown in the following figure. A byte that is in transmission when CTS is deactivated will be fully transmitted before the transmission is suspended.

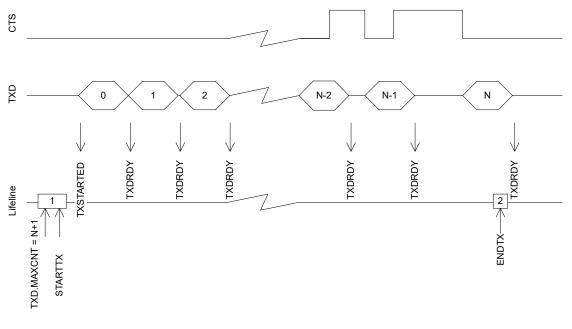


Figure 116: UARTE transmission

The UARTE transmitter will be in its lowest activity level, and consume the least amount of energy, when it is stopped, i.e. before it is started via STARTTX or after it has been stopped via STOPTX and the TXSTOPPED



event has been generated. See POWER — Power supply on page 49 for more information about power modes.

6.25.3 Reception

The UARTE receiver is started by triggering the STARTRX task. The UARTE receiver is using EasyDMA to store incoming data in an RX buffer in RAM.

The RX buffer is located at the address specified in the RXD.PTR register. The RXD.PTR register is doublebuffered and it can be updated and prepared for the next STARTRX task immediately after the RXSTARTED event is generated. The size of the RX buffer is specified in the RXD.MAXCNT register. The UARTE generates an ENDRX event when it has filled up the RX buffer, as seen in the following figure.

For each byte received over the RXD line, an RXDRDY event will be generated. This event is likely to occur before the corresponding data has been transferred to Data RAM.

The RXD.AMOUNT register can be queried following an ENDRX event to see how many new bytes have been transferred to the RX buffer in RAM since the previous ENDRX event.

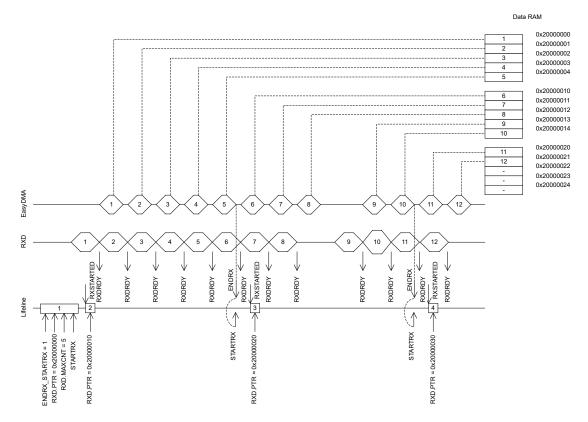


Figure 117: UARTE reception

The UARTE receiver is stopped by triggering the STOPRX task. An RXTO event is generated when the UARTE has stopped. The UARTE will make sure that an impending ENDRX event will be generated before the RXTO event is generated. This means that the UARTE will guarantee that no ENDRX event will be generated after RXTO, unless the UARTE is restarted or a FLUSHRX command is issued after the RXTO event is generated.

Note: If the ENDRX event has not been generated when the UARTE receiver stops, indicating that all pending content in the RX FIFO has been moved to the RX buffer, the UARTE will generate the ENDRX event explicitly even though the RX buffer is not full. In this scenario the ENDRX event will be generated before the RXTO event is generated.

To determine the amount of bytes the RX buffer has received, the CPU can read the RXD.AMOUNT register following the ENDRX event or the RXTO event.



The UARTE is able to receive up to four bytes after the STOPRX task has been triggered, as long as these are sent in succession immediately after the RTS signal is deactivated. After the RTS is deactivated, the UART is able to receive bytes for a period of time equal to the time needed to send four bytes on the configured baud rate.

After the RXTO event is generated the internal RX FIFO may still contain data, and to move this data to RAM the FLUSHRX task must be triggered. To make sure that this data does not overwrite data in the RX buffer, the RX buffer should be emptied or the RXD.PTR should be updated before the FLUSHRX task is triggered. To make sure that all data in the RX FIFO is moved to the RX buffer, the RXD.MAXCNT register must be set to RXD.MAXCNT > 4, as seen in the following figure. The UARTE will generate the ENDRX event after completing the FLUSHRX task even if the RX FIFO was empty or if the RX buffer does not get filled up. To be able to know how many bytes have actually been received into the RX buffer in this case, the CPU can read the RXD.AMOUNT register following the ENDRX event.

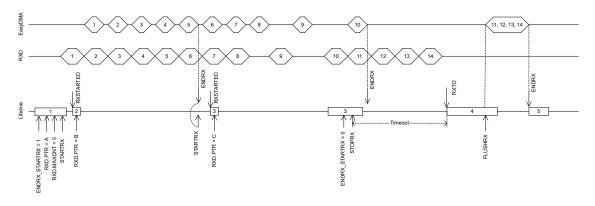


Figure 118: UARTE reception with forced stop via STOPRX

If HW flow control is enabled through the HWFC field in the CONFIG register, the RTS signal will be deactivated when the receiver is stopped via the STOPRX task or when the UARTE is only able to receive four more bytes in its internal RX FIFO.

With flow control disabled, the UARTE will function in the same way as when the flow control is enabled except that the RTS line will not be used. This means that no signal will be generated when the UARTE has reached the point where it is only able to receive four more bytes in its internal RX FIFO. Data received when the internal RX FIFO is filled up, will be lost.

The UARTE receiver will be in its lowest activity level, and consume the least amount of energy, when it is stopped, i.e. before it is started via STARTRX or after it has been stopped via STOPRX and the RXTO event has been generated. See POWER — Power supply on page 49 for more information about power modes.

6.25.4 Error conditions

An ERROR event, in the form of a framing error, will be generated if a valid stop bit is not detected in a frame. Another ERROR event, in the form of a break condition, will be generated if the RXD line is held active low for longer than the length of a data frame. Effectively, a framing error is always generated before a break condition occurs.

An ERROR event will not stop reception. If the error was a parity error, the received byte will still be transferred into Data RAM, and so will following incoming bytes. If there was a framing error (wrong stop bit), that specific byte will NOT be stored into Data RAM, but following incoming bytes will.

6.25.5 Using the UARTE without flow control

If flow control is not enabled, the interface will behave as if the CTS and RTS lines are kept active all the time.



6.25.6 Parity and stop bit configuration

Automatic even parity generation for both transmission and reception can be configured using the register CONFIG on page 341. See the register description for details.

The amount of stop bits can also be configured through the register CONFIG on page 341.

6.25.7 Low power

When putting the system in low power and the peripheral is not needed, lowest possible power consumption is achieved by stopping, and then disabling the peripheral.

The STOPTX and STOPRX tasks may not be always needed (the peripheral might already be stopped), but if STOPTX and/or STOPRX is sent, software shall wait until the TXSTOPPED and/or RXTO event is received in response, before disabling the peripheral through the ENABLE register.

6.25.8 Pin configuration

The different signals RXD, CTS (Clear To Send, active low), RTS (Request To Send, active low), and TXD associated with the UARTE are mapped to physical pins according to the configuration specified in the PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers respectively.

The PSEL.RXD, PSEL.CTS, PSEL.RTS, and PSEL.TXD registers and their configurations are only used as long as the UARTE is enabled, and retained only for the duration the device is in ON mode. PSEL.RXD, PSEL.RTS, PSEL.RTS, and PSEL.TXD must only be configured when the UARTE is disabled.

To secure correct signal levels on the pins by the UARTE when the system is in OFF mode, the pins must be configured in the GPIO peripheral as described in the following table.

Only one peripheral can be assigned to drive a particular GPIO pin at a time. Failing to do so may result in unpredictable behavior.

UARTE signal	UARTE pin	Direction	Output value
RXD	As specified in PSEL.RXD	Input	Not applicable
CTS	As specified in PSEL.CTS	Input	Not applicable
RTS	As specified in PSEL.RTS	Output	1
TXD	As specified in PSEL.TXD	Output	1

Table 101: GPIO configuration before enabling peripheral

6.25.9 Registers

Base address	Peripheral	Instance	Description	Configuration
0x40002000	UARTE	UARTE0	Universal asynchronous receiver/	
			transmitter with EasyDMA	

Table 102: Instances

Register	Offset	Description
TASKS_STARTRX	0x000	Start UART receiver
TASKS_STOPRX	0x004	Stop UART receiver
TASKS_STARTTX	0x008	Start UART transmitter
TASKS_STOPTX	0x00C	Stop UART transmitter
TASKS_FLUSHRX	0x02C	Flush RX FIFO into RX buffer
EVENTS_CTS	0x100	CTS is activated (set low). Clear To Send.
EVENTS_NCTS	0x104	CTS is deactivated (set high). Not Clear To Send.
EVENTS_RXDRDY	0x108	Data received in RXD (but potentially not yet transferred to Data RAM)



Peripherals

Register	Offset	Description
EVENTS_ENDRX	0x110	Receive buffer is filled up
EVENTS_TXDRDY	0x11C	Data sent from TXD
EVENTS_ENDTX	0x120	Last TX byte transmitted
EVENTS_ERROR	0x124	Error detected
EVENTS_RXTO	0x144	Receiver timeout
EVENTS_RXSTARTED	0x14C	UART receiver has started
EVENTS_TXSTARTED	0x150	UART transmitter has started
EVENTS_TXSTOPPED	0x158	Transmitter stopped
SHORTS	0x200	Shortcuts between local events and tasks
INTEN	0x300	Enable or disable interrupt
INTENSET	0x304	Enable interrupt
INTENCLR	0x308	Disable interrupt
ERRORSRC	0x480	Error source
		This register is read/write one to clear.
ENABLE	0x500	Enable UART
PSEL.RTS	0x508	Pin select for RTS signal
PSEL.TXD	0x50C	Pin select for TXD signal
PSEL.CTS	0x510	Pin select for CTS signal
PSEL.RXD	0x514	Pin select for RXD signal
BAUDRATE	0x524	Baud rate. Accuracy depends on the HFCLK source selected.
RXD.PTR	0x534	Data pointer
RXD.MAXCNT	0x538	Maximum number of bytes in receive buffer
RXD.AMOUNT	0x53C	Number of bytes transferred in the last transaction
TXD.PTR	0x544	Data pointer
TXD.MAXCNT	0x548	Maximum number of bytes in transmit buffer
TXD.AMOUNT	0x54C	Number of bytes transferred in the last transaction
CONFIG	0x56C	Configuration of parity and hardware flow control

Table 103: Register overview

6.25.9.1 TASKS_STARTRX

Address offset: 0x000

Start UART receiver

Bit n	umbe	er		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID					А
Rese	t OxO	0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID					Description
А	w	TASKS_STARTRX			Start UART receiver
			Trigger	1	Trigger task

6.25.9.2 TASKS_STOPRX

Address offset: 0x004 Stop UART receiver



Bit n	um	ber		31 30	29 28	8 27	26	25 2	42	3 22	2 2 1	1 20	19	18 1	.7 1	6 15	5 14	13	12 1	.1 1	09	8	7	6	5	4	32	1	0
ID																													А
Rese	et 0	x0000000		0 0	0 0	0	0	0 0) (0 0	0	0	0	0	0 0	0 0	0	0	0	0 0	0	0	0	0	0	0	0 0	0	0
ID																													
A	v	V TASKS_STOPRX							S	top	UA	RT r	ece	iver															
			Trigger	1					т	rigg	er t	task																	

6.25.9.3 TASKS_STARTTX

Address offset: 0x008

Start UART transmitter

Bit n	un	nber			31	30 29	9 28	27	26	25	24	23 :	22	21	20	19	18	17	16	15	14 1	.3 1	21	1 10	9	8	7	6	5	4	32	1	0
ID																																	А
Rese	et C)x00	000000		0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 0	0	0	0	0	0	0	0 (0 0	0	0
ID												Des																					
А	١	N	TASKS_STARTTX									Sta	rt l	JAF	RT t	rar	sm	itte	r														
				Trigger	1							Trig	ge	r ta	isk																		

6.25.9.4 TASKS_STOPTX

Address offset: 0x00C

Stop UART transmitter

Bit number		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			А
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A W TASKS_STOPTX			Stop UART transmitter
	Trigger	1	Trigger task

6.25.9.5 TASKS_FLUSHRX

Address offset: 0x02C

Flush RX FIFO into RX buffer

Bit n	umber		31 30 29 28 2	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
A	W TASKS_	FLUSHRX		Flush RX FIFO into RX buffer
		Trigger	1	Trigger task

6.25.9.6 EVENTS_CTS

Address offset: 0x100

CTS is activated (set low). Clear To Send.



Bit number		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x00000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_CTS			CTS is activated (set low). Clear To Send.
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.7 EVENTS_NCTS

Address offset: 0x104

CTS is deactivated (set high). Not Clear To Send.

Bit number		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			Description
A RW EVENTS_NCTS			CTS is deactivated (set high). Not Clear To Send.
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.8 EVENTS_RXDRDY

Address offset: 0x108

Data received in RXD (but potentially not yet transferred to Data RAM)

Bit n	umber		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				А
Rese	t 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_RXDRDY			Data received in RXD (but potentially not yet transferred to
				Data RAM)
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.9 EVENTS_ENDRX

Address offset: 0x110

Receive buffer is filled up

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_ENDRX			Receive buffer is filled up
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.10 EVENTS_TXDRDY

Address offset: 0x11C

Data sent from TXD

Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_TXDRDY			Data sent from TXD
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.11 EVENTS_ENDTX

Address offset: 0x120

Last TX byte transmitted

Bit number	31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW EVENTS_ENDTX		Last TX byte transmitted
NotGenerated	0	Event not generated
Generated	1	Event generated

6.25.9.12 EVENTS_ERROR

Address offset: 0x124

Error detected

Bit number		31 3	0 29 28 2	7 26 25	24 23 2	2 21 20	0 19 1	8 17 1	.6 15	14 13	3 12 1	1 10	98	7	6	54	3	2 1 0
ID																		А
Reset 0x0000000	ט	0	0000	0 0 0	000	0 0 0	0 0	0	0 0	0 0	0 0	0	0 0	0	0	0 0	0	000
ID Acce Field																		
A RW EVENT	S_ERROR				Erro	r deteo	ted											
	NotGen	erated 0			Ever	nt not g	genera	ted										
	Genera	ed 1			Ever	nt gene	rated											

6.25.9.13 EVENTS_RXTO

Address offset: 0x144

Receiver timeout

Bit number		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field			
A RW EVENTS_RXTO			Receiver timeout
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.14 EVENTS_RXSTARTED

Address offset: 0x14C

UART receiver has started



Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A RW EVENTS_RXSTARTED			UART receiver has started
	NotGenerated	0	Event not generated
	Generated	1	Event generated

6.25.9.15 EVENTS_TXSTARTED

Address offset: 0x150

UART transmitter has started

Bit number		31 30	29 28	3 27	26	25 :	24 2	23 2	2 2	21 2	0 19	Ə 18	3 17	16	5 15	5 14	13	12	11	10	9	8	7	6	5	4	3	2 1	0
ID																													А
Reset 0x0000000		0 0	0 0	0	0	0	0	0 0	0	0 0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0 (0 0	0
ID Acce Field Va																													
A RW EVENTS_TXSTARTED							ι	JAR	RT t	ran	smi	tter	ha	s si	tart	ed													
N	otGenerated	0					E	ever	nt r	not (gen	era	ted																
Ge	enerated	1					E	ver	nt g	gene	erat	ed																	

6.25.9.16 EVENTS_TXSTOPPED

Address offset: 0x158

Transmitter stopped

Bit n	umber		31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				A
Rese	t 0x0000000		0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
А	RW EVENTS_TXSTOPPED			Transmitter stopped
		NotGenerated	0	Event not generated
		Generated	1	Event generated

6.25.9.17 SHORTS

Address offset: 0x200

Shortcuts between local events and tasks

Bit n	umber		31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				Description
С	RW ENDRX_STARTRX			Shortcut between event ENDRX and task STARTRX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut
D	RW ENDRX_STOPRX			Shortcut between event ENDRX and task STOPRX
		Disabled	0	Disable shortcut
		Enabled	1	Enable shortcut



6.25.9.18 INTEN

Address offset: 0x300

Enable or disable interrupt

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				LJIH GFEDCBA
Rese	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
				Description
A	RW CTS			Enable or disable interrupt for event CTS
		Disabled	0	Disable
		Enabled	1	Enable
В	RW NCTS			Enable or disable interrupt for event NCTS
		Disabled	0	Disable
		Enabled	1	Enable
С	RW RXDRDY			Enable or disable interrupt for event RXDRDY
		Disabled	0	Disable
		Enabled	1	Enable
D	RW ENDRX			Enable or disable interrupt for event ENDRX
		Disabled	0	Disable
		Enabled	1	Enable
E	RW TXDRDY			Enable or disable interrupt for event TXDRDY
		Disabled	0	Disable
		Enabled	1	Enable
F	RW ENDTX			Enable or disable interrupt for event ENDTX
		Disabled	0	Disable
		Enabled	1	Enable
G	RW ERROR			Enable or disable interrupt for event ERROR
		Disabled	0	Disable
		Enabled	1	Enable
н	RW RXTO			Enable or disable interrupt for event RXTO
		Disabled	0	Disable
		Enabled	1	Enable
I	RW RXSTARTED			Enable or disable interrupt for event RXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
J	RW TXSTARTED			Enable or disable interrupt for event TXSTARTED
		Disabled	0	Disable
		Enabled	1	Enable
L	RW TXSTOPPED			Enable or disable interrupt for event TXSTOPPED
		Disabled	0	Disable
		Enabled	1	Enable

6.25.9.19 INTENSET

Address offset: 0x304

Enable interrupt

A	RW CTS		Write	'1' to	enal	ole in	terr	upt f	or e	vent (CTS								
ID																			
Rese	t 0x0000000	0 0 0 0 0 0 0	000	0 0	0	0 0	0	0 0	0	0 0	0 () (0	0	0	0	0 0	0	0
ID			L	J	Т	Н					(G F	E			D	C	ЗB	А
Bit r	umber	31 30 29 28 27 26 25	24 23 22	21 20) 19 1	18 17	16 1	15 14	4 13	12 11	10 9	9 8	37	6	5	4	32	! 1	0



	umber		31 30 29 28 27 26	5 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				LJIH GFEDCBA
Rese	t 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
В	RW NCTS			Write '1' to enable interrupt for event NCTS
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
с	RW RXDRDY			Write '1' to enable interrupt for event RXDRDY
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ENDRX	2.100100	-	Write '1' to enable interrupt for event ENDRX
5		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW TXDRDY	Lilabled	1	Write '1' to enable interrupt for event TXDRDY
E	KW INDEDI	Set	1	Enable
		Disabled	0	Read: Disabled
-		Enabled	1	Read: Enabled
F	RW ENDTX	C-+	1	Write '1' to enable interrupt for event ENDTX
		Set	1	Enable
		Disabled	0	Read: Disabled
~		Enabled	1	Read: Enabled
G	RW ERROR			Write '1' to enable interrupt for event ERROR
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
н	RW RXTO			Write '1' to enable interrupt for event RXTO
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW RXSTARTED			Write '1' to enable interrupt for event RXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW TXSTARTED			Write '1' to enable interrupt for event TXSTARTED
		Set	1	Enable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW TXSTOPPED			Write '1' to enable interrupt for event TXSTOPPED
		Set	1	Enable
		Disabled	0	Read: Disabled

6.25.9.20 INTENCLR

Address offset: 0x308

Disable interrupt



Bit r	umber		31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
ID				LJIH GFEDCBA
Res	et 0x0000000		0 0 0 0 0 0	
A	RW CTS			Write '1' to disable interrupt for event CTS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
в	RW NCTS			Write '1' to disable interrupt for event NCTS
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
с	RW RXDRDY			Write '1' to disable interrupt for event RXDRDY
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
D	RW ENDRX	Endored	-	Write '1' to disable interrupt for event ENDRX
-		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
E	RW TXDRDY	Lindbied	1	Write '1' to disable interrupt for event TXDRDY
-		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
F	RW ENDTX	Liidbied	1	Write '1' to disable interrupt for event ENDTX
г	RVV ENDIA	Clear	1	Disable
		Disabled	0	Read: Disabled
c		Enabled	1	Read: Enabled
G	RW ERROR	Class	1	Write '1' to disable interrupt for event ERROR
		Clear	1	Disable
		Disabled	0	Read: Disabled
	DW DYTO	Enabled	1	Read: Enabled
н	RW RXTO		_	Write '1' to disable interrupt for event RXTO
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
I	RW RXSTARTED			Write '1' to disable interrupt for event RXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
J	RW TXSTARTED			Write '1' to disable interrupt for event TXSTARTED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled
L	RW TXSTOPPED			Write '1' to disable interrupt for event TXSTOPPED
		Clear	1	Disable
		Disabled	0	Read: Disabled
		Enabled	1	Read: Enabled

6.25.9.21 ERRORSRC

Address offset: 0x480

Error source

This register is read/write one to clear.



_				
Bit r	number		31 30 29 28 27 26 25	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID				D C B A
Res	et 0x0000000		0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A	RW OVERRUN			Overrun error
				A start bit is received while the previous data still lies in
				RXD. (Previous data is lost.)
		NotPresent	0	Read: error not present
		Present	1	Read: error present
В	RW PARITY			Parity error
				A character with bad parity is received, if HW parity check is
				enabled.
		NotPresent	0	Read: error not present
		Present	1	Read: error present
С	RW FRAMING			Framing error occurred
				A valid stop bit is not detected on the serial data input after
				all bits in a character have been received.
		NotPresent	0	Read: error not present
		Present	1	Read: error present
D	RW BREAK			Break condition
				The serial data input is '0' for longer than the length of a
				data frame. (The data frame length is 10 bits without parity
				bit, and 11 bits with parity bit).
		NotPresent	0	Read: error not present
		Present	1	Read: error present

6.25.9.22 ENABLE

Address offset: 0x500

Enable UART

Bit number	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		A A A A
Reset 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		Description
A RW ENABLE		Enable or disable UARTE
Disabled	0	Disable UARTE
Enabled	8	Enable UARTE

6.25.9.23 PSEL.RTS

Address offset: 0x508

Pin select for RTS signal



Bit number 31			31 30 29 28 27 26 25 24	23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.24 PSEL.TXD

Address offset: 0x50C

Pin select for TXD signal

Bit n	umber		31 30 29 28 27	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	ААААА
Rese	t OxFFFFFFF		1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.25 PSEL.CTS

Address offset: 0x510

Pin select for CTS signal

Bit number 3			31 30 29 28 27 26 25 24	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFFF		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect

6.25.9.26 PSEL.RXD

Address offset: 0x514

Pin select for RXD signal

Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			С	A A A A A
Rese	t OxFFFFFFF		1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
ID				Description
А	RW PIN		[031]	Pin number
С	RW CONNECT			Connection
		Disconnected	1	Disconnect
		Connected	0	Connect



6.25.9.27 BAUDRATE

Address offset: 0x524

Baud rate. Accuracy depends on the HFCLK source selected.

A A A A A A A A A A A A A A A A A A A				
based 0 <th>Bit number</th> <th></th> <th>31 30 29 28 27 26 25</th> <th>5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1</th>	Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
Acce field Value ID Value Description RW BAUDRATE Baud1200 0x0004F000 1200 baud (actual rate: 1205) Baud2400 0x0009D000 2400 baud (actual rate: 2396) Baud4800 0x0013B000 4800 baud (actual rate: 4808) Baud9600 0x00275000 9600 baud (actual rate: 9598) Baud14400 0x003AF000 14400 baud (actual rate: 14401) Baud12200 0x004F000 19200 baud (actual rate: 19208) Baud12800 0x0075C000 28800 baud (actual rate: 28777) Baud31250 0x0800000 31250 baud Baud32600 0x00250000 38400 baud (actual rate: 38369) Baud38400 0x00550000 56000 baud (actual rate: 55944) Baud76800 0x013A9000 76800 baud (actual rate: 76923) Baud15200 0x01B00000 15200 baud Baud320400 0x03800000 230400 baud (actual rate: 76923) Baud15200 0x01B00000 230400 baud (actual rate: 75143) Baud230400 0x03800000 230400 baud (actual rate: 75143) Baud460800 0x07400000 460800 baud (actual	ID		АААААА	A A A A A A A A A A A A A A A A A A A
RW BAUDRATE Baud rate Baud1200 0x0004F000 1200 baud (actual rate: 1205) Baud2400 0x0009D000 2400 baud (actual rate: 2396) Baud4800 0x0013B000 4800 baud (actual rate: 4808) Baud9600 0x00275000 9600 baud (actual rate: 9598) Baud14400 0x003AF000 14400 baud (actual rate: 14401) Baud12200 0x004EA000 19200 baud (actual rate: 19208) Baud12500 0x009D000 28800 baud (actual rate: 28777) Baud31250 0x0080000 31250 baud Baud56000 0x00250000 56000 baud (actual rate: 5594) Baud76800 0x013A9000 76800 baud (actual rate: 76923) Baud115200 0x03B0000 230400 baud (actual rate: 115108) Baud230400 0x03B0000 20000 baud (actual rate: 231884) Baud230400 0x04000000 250000 baud Baud15200 0x04000000 250000 baud Baud152000 0x03B0000 20000 baud (actual rate: 231884) Baud230400 0x030B0000 250000 baud Baud460800 0x07400000 460800 baud (a	Reset 0x04000000		0 0 0 0 0 1 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
Baud12000x0004F0001200 baud (actual rate: 1205)Baud24000x0009D0002400 baud (actual rate: 2396)Baud48000x0013B0004800 baud (actual rate: 4808)Baud96000x002750009600 baud (actual rate: 9598)Baud14000x003AF00014400 baud (actual rate: 14401)Baud192000x004EA00019200 baud (actual rate: 19208)Baud182000x0075C00028800 baud (actual rate: 28777)Baud132500x008000031250 baudBaud326000x005000038400 baud (actual rate: 5944)Baud560000x00E5000056000 baud (actual rate: 5754)Baud768000x01B000015200 baud (actual rate: 115108)Baud152000x01B0000230400 baud (actual rate: 21884)Baud2304000x03B0000250000 baudBaud2304000x0400000250000 baudBaud2304000x0400000250000 baudBaud4608000x0740000460800 baud (actual rate: 457143)Baud4608000x0740000091000 baud (actual rate: 457143)				
Baud24000x0009D0002400 baud (actual rate: 2396)Baud48000x0013B0004800 baud (actual rate: 4808)Baud96000x002750009600 baud (actual rate: 9598)Baud144000x003AF00014400 baud (actual rate: 14401)Baud192000x004EA00019200 baud (actual rate: 19208)Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud768000x013A900076800 baud (actual rate: 76923)Baud152000x01b60000115200 baud (actual rate: 115108)Baud2304000x0380000230400 baud (actual rate: 211584)Baud2500000x0400000250000 baudBaud4500000x0400000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F00000921600 baud (actual rate: 941176)	A RW BAUDRATE			Baud rate
Baud48000x0013B0004800 baud (actual rate: 4808)Baud96000x002750009600 baud (actual rate: 9598)Baud144000x003AF00014400 baud (actual rate: 14401)Baud192000x004EA00019200 baud (actual rate: 19208)Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud560000x00E8000057600 baud (actual rate: 7554)Baud768000x01B0000115200 baud (actual rate: 76923)Baud2304000x03B0000230400 baud (actual rate: 231884)Baud2500000x0400000250000 baudBaud2500000x07400000460800 baud (actual rate: 457143)Baud4608000x0700000921600 baud (actual rate: 941176)		Baud1200	0x0004F000	1200 baud (actual rate: 1205)
Baud96000x002750009600 baud (actual rate: 9598)Baud144000x003AF00014400 baud (actual rate: 14401)Baud192000x004EA00019200 baud (actual rate: 19208)Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud560000x01E800057600 baud (actual rate: 7554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01060000115200 baud (actual rate: 115108)Baud2304000x0380000230400 baud (actual rate: 231884)Baud4608000x07400000460800 baud (actual rate: 457143)Baud4608000x0700000921600 baud (actual rate: 941176)		Baud2400	0x0009D000	2400 baud (actual rate: 2396)
Baud144000x003AF00014400 baud (actual rate: 14401)Baud192000x004EA00019200 baud (actual rate: 19208)Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud576000x00E8000057600 baud (actual rate: 57554)Baud1152000x01A600076800 baud (actual rate: 76923)Baud1152000x03B0000230400 baud (actual rate: 231884)Baud2304000x03B0000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F00000921600 baud (actual rate: 941176)		Baud4800	0x0013B000	4800 baud (actual rate: 4808)
Baud192000x004EA00019200 baud (actual rate: 19208)Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud576000x00E8000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03800000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud9600	0x00275000	9600 baud (actual rate: 9598)
Baud288000x0075C00028800 baud (actual rate: 28777)Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud576000x00E8000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B0000230400 baud (actual rate: 231884)Baud2500000x07400000460800 baud (actual rate: 457143)Baud9216000x0F00000921600 baud (actual rate: 4571476)		Baud14400	0x003AF000	14400 baud (actual rate: 14401)
Baud312500x008000031250 baudBaud384000x009D000038400 baud (actual rate: 38369)Baud560000x00E5000056000 baud (actual rate: 55944)Baud576000x00EB000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x07400000250000 baudBaud4608000x07400000921600 baud (actual rate: 941176)		Baud19200	0x004EA000	19200 baud (actual rate: 19208)
Baud384000x009D000038400 baud (actual rate: 38369)Baud360000x00E5000056000 baud (actual rate: 55944)Baud576000x00EB000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud28800	0x0075C000	28800 baud (actual rate: 28777)
Baud560000x00E5000056000 baud (actual rate: 55944)Baud576000x00EB000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud31250	0x00800000	31250 baud
Baud576000x00EB000057600 baud (actual rate: 57554)Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud38400	0x009D0000	38400 baud (actual rate: 38369)
Baud768000x013A900076800 baud (actual rate: 76923)Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud56000	0x00E50000	56000 baud (actual rate: 55944)
Baud1152000x01D60000115200 baud (actual rate: 115108)Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud57600	0x00EB0000	57600 baud (actual rate: 57554)
Baud2304000x03B00000230400 baud (actual rate: 231884)Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud76800	0x013A9000	76800 baud (actual rate: 76923)
Baud2500000x04000000250000 baudBaud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud115200	0x01D60000	115200 baud (actual rate: 115108)
Baud4608000x07400000460800 baud (actual rate: 457143)Baud9216000x0F000000921600 baud (actual rate: 941176)		Baud230400	0x03B00000	230400 baud (actual rate: 231884)
Baud921600 0x0F000000 921600 baud (actual rate: 941176)		Baud250000	0x04000000	250000 baud
		Baud460800	0x07400000	460800 baud (actual rate: 457143)
Baud1M 0x1000000 1 megabaud		Baud921600	0x0F000000	921600 baud (actual rate: 941176)
		Baud1M	0x10000000	1 megabaud

6.25.9.28 RXD.PTR

Address offset: 0x534

Data pointer

Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		
Rese	t 0x0000000	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID		Value Description
A	RW PTR	Data pointer

See the memory chapter for details about which memories are available for EasyDMA.

6.25.9.29 RXD.MAXCNT

Address offset: 0x538

Maximum number of bytes in receive buffer



Bit n	ımber	31 30 29 28 27 26 25 2	24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			A A A A A A A A A A A A A A A A A A A
Rese	t 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID			
A	RW MAXCNT	[00x3FF]	Maximum number of bytes in receive buffer

6.25.9.30 RXD.AMOUNT

Address offset: 0x53C

Number of bytes transferred in the last transaction

Bit n	umber	31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0										
ID			A A A A A A A A A A A A A A A A A A A										
Rese	t 0x0000000	0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0										
ID			Description										
А	R AMOUNT	[00x3FF]	Number of bytes transferred in the last transaction										

6.25.9.31 TXD.PTR

Address offset: 0x544

Data pointer

Bit n	umber	31	30	29	28	27	26	25	24	23	22 :	212	20 1	.9 1	8 17	7 16	5 15	14	13 1	L2 1	1 10	9	8	7	6	5	4	3	2	1 0
ID		А	А	A	А	A	А	А	А	А	A	A	A	4 <i>4</i>	A A	A	А	А	A	A	A A	A	А	A	А	А	А	A,	Δ,	A A
Rese	t 0x0000000	0	0	0	0	0	0	0	0	0	0	0	0	0 0) 0	0	0	0	0	0	0 0	0	0	0	0	0	0	0) (0 0
ID																														
А	RW PTR									Dat	ta p	oin	ter																	

See the memory chapter for details about which memories

are available for EasyDMA.

6.25.9.32 TXD.MAXCNT

Address offset: 0x548

Maximum number of bytes in transmit buffer

A	RW MAXCNT	[00x3FF]	Maximum number of bytes in transmit buffer											
ID														
Res	et 0x0000000	0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0											
ID			A A A A A A A A A A A A A A A A A A A											
Bit	number	31 30 29 28 27 26 2	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0											

6.25.9.33 TXD.AMOUNT

Address offset: 0x54C

Number of bytes transferred in the last transaction

A	R AMOUNT		[00x3FF]	Number of bytes transferred in the last transaction
ID	Acce Field			Description
Reset 0x0000000			0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID				A A A A A A A A A A A A A A A A A A A
Bit n	umber		31 30 29 28 27 26 25 2	4 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0



6.25.9.34 CONFIG

Address offset: 0x56C

Configuration of parity and hardware flow control

Bit number	31 30 29	9 28 27 26 25 24 2	23 22 21 20 19	Ə 18 17 1	6 15 1	4 13 1	2 11	10 9	8	76	5 5	4	32	1	0
ID												С	ΒB	В	A
Reset 0x00000000	0 0 0	0 0 0 0 0	0 0 0 0 0	000	0 0	0 0 0	0 0	0 0	0	0 0) 0	0	0 0	0	0
ID Acce Field Value			Description												
A RW HWFC		I	Hardware flow	v control											
Disa	bled 0	[Disabled												
Enab	oled 1	E	Enabled												
B RW PARITY		ſ	Parity												
Exclu	uded 0x0	£	Exclude parity	bit											
Inclu	uded 0x7	I	Include even parity bit												
C RW STOP		9	Stop bits												
One	0	(One stop bit												
Тwo	1	٦	Two stop bits												

6.25.10 Electrical specification

6.25.10.1 UARTE electrical specification

Symbol	Description	Min.	Тур.	Max.	Units
f _{UARTE}	Baud rate for UARTE ³⁴ .			1000	kbps
t _{UARTE,CTSH}	CTS high time	1			μs
t _{UARTE,START}	Time from STARTRX/STARTTX task to transmission started				μs

6.26 WDT — Watchdog timer

A countdown watchdog timer using the low-frequency clock source (LFCLK) offers configurable and robust protection against application lock-up.

The watchdog timer is started by triggering the START task.

The watchdog can be paused during long CPU sleep periods for low power applications and when the debugger has halted the CPU. The watchdog is implemented as a down-counter that generates a TIMEOUT event when it wraps over after counting down to 0. When the watchdog timer is started through the START task, the watchdog counter is loaded with the value specified in the CRV register. This counter is also reloaded with the value specified in the CRV register.

The watchdog's timeout period is given by the following equation:

```
timeout [s] = ( CRV + 1 ) / 32768
```

When started, the watchdog will automatically force the 32.768 kHz RC oscillator on as long as no other 32.768 kHz clock source is running and generating the 32.768 kHz system clock, see chapter CLOCK — Clock control on page 63.

³⁴ High baud rates may require GPIOs to be set as High Drive, see GPIO chapter for more details.



6.26.1 Reload criteria

The watchdog has eight separate reload request registers, which shall be used to request the watchdog to reload its counter with the value specified in the CRV register. To reload the watchdog counter, the special value 0x6E524635 needs to be written to all enabled reload registers.

One or more RR registers can be individually enabled through the RREN register.

6.26.2 Temporarily pausing the watchdog

By default, the watchdog will be active counting down the down-counter while the CPU is sleeping and when it is halted by the debugger. It is possible to configure the watchdog to automatically pause while the CPU is sleeping as well as when it is halted by the debugger.

6.26.3 Watchdog reset

A TIMEOUT event will automatically lead to a watchdog reset.

See Reset on page 54 for more information about reset sources. If the watchdog is configured to generate an interrupt on the TIMEOUT event, the watchdog reset will be postponed with two 32.768 kHz clock cycles after the TIMEOUT event has been generated. Once the TIMEOUT event has been generated, the impending watchdog reset will always be effectuated.

The watchdog must be configured before it is started. After it is started, the watchdog's configuration registers, which comprise registers CRV, RREN, and CONFIG, will be blocked for further configuration.

The watchdog can be reset from several reset sources, see Reset behavior on page 55.

When the device starts running again, after a reset, or waking up from OFF mode, the watchdog configuration registers will be available for configuration again.

6.26.4 Registers

Base address	Peripheral	Instance	Description	Configuration	
0x40010000	WDT	WDT	Watchdog timer		
			Table 104: Instan	ces	
Register	Offset	Descrip	ition		
TASKS_START	0x000	Start th	e watchdog		
EVENTS_TIMEOUT	0x100	Watcho	log timeout		
INTENSET	0x304	Enable	interrupt		
INTENCLR	0x308	Disable	interrupt		
RUNSTATUS	0x400	Run sta	tus		
REQSTATUS	0x404	Reques	t status		
CRV	0x504	Counte	r reload value		
RREN	0x508	Enable	register for reload request register	rs	
CONFIG	0x50C	Configu	iration register		
RR[0]	0x600	Reload	request 0		
RR[1]	0x604	Reload	request 1		
RR[2]	0x608	Reload	request 2		
RR[3]	0x60C	Reload	request 3		
RR[4]	0x610	Reload	request 4		
RR[5]	0x614	Reload	request 5		
RR[6]	0x618	Reload	request 6		



Table 105: Register overview

6.26.4.1 TASKS_START

Address offset: 0x000

Start the watchdog

Bit n	umber		31 30 29 28 27 26	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0											
ID				A											
Rese	et 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0											
ID				Description											
A	W TASKS_START			Start the watchdog											
		Trigger	1	Trigger task											

6.26.4.2 EVENTS_TIMEOUT

Address offset: 0x100

Watchdog timeout

Bit number		31 30 29 28 27 26 25	5 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0												
ID			A												
Reset 0x0000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0												
ID Acce Field															
A RW EVENTS_TIMEOUT			Watchdog timeout												
	NotGenerated	0	Event not generated												
	Generated	1	Event generated												

6.26.4.3 INTENSET

Address offset: 0x304

Enable interrupt

Bit number	31 30 29 28 27	7 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value		Description
A RW TIMEOUT		Write '1' to enable interrupt for event TIMEOUT
Set	1	Enable
Disa	bled 0	Read: Disabled
Enab	oled 1	Read: Enabled

6.26.4.4 INTENCLR

Address offset: 0x308

Disable interrupt



Bit number	31 30 29 28 27 26	6 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID		А
Reset 0x00000000	0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ID Acce Field Value ID		
A RW TIMEOUT		Write '1' to disable interrupt for event TIMEOUT
Clear	1	Disable
Disabled	0	Read: Disabled
Enabled	1	Read: Enabled

6.26.4.5 RUNSTATUS

Address offset: 0x400

Run status

Bit nu	mbe	r		31 30 29 28 27 26 2	25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0										
ID					A										
Reset	0x0(000000		0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0										
ID															
А	R	RUNSTATUS			Indicates whether or not the watchdog is running										
			NotRunning	0	Watchdog not running										
			Running	1	Watchdog is running										

6.26.4.6 REQSTATUS

Address offset: 0x404

Request status

Bit nu	Bit number				0 29	28	27 :	26 2	5 24	23	22	212	201	9 18	3 17	16	15	14 1	13 1	2 11	L 10	9	8	76	5 5	5 4	3	2	1 (
ID	ID																							нс	6 F	E	D	С	B A	
Reset 0x00000001					0 0	0	0	0 0	0 0	0	0	0 (0 0	0 0	0	0	0	0	0 0	0 0	0	0	0	0 0) 0	0	0	0	0 1	
ID																														
A-H	-H R RR[i] (i=07)									Re	que	st st	tatu	ıs fo	r RI	R[i]	reg	istei	r											
	DisabledOrRequested			0						RR[i] register is not enabled, or are already requesting																				
	EnabledAndUnrequested										reload																			
											RR[i] register is enabled, and are not yet requesting reload																			

6.26.4.7 CRV

Address offset: 0x504

Counter reload value

A RW CRV		[0xF0xFFFFFFFF] Counter reload value in number of cycles of the 32.768 kHz	
ID			
Rese	t OxFFFFFFFF	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1
ID			ААА
Bit n	umber	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3	2 1 0

6.26.4.8 RREN

Address offset: 0x508

Enable register for reload request registers

Bit number		31 30 29 28 27 2	e 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
ID			Н G F E D C B A
Reset 0x0000001		0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
A-H RW RR[i] (i=07)			Enable or disable RR[i] register
	Disabled	0	Disable RR[i] register

6.26.4.9 CONFIG

Configuration register

Bit n	umber		31 30 29 28 27 26	26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5						
ID					C A					
Rese	et 0x00000001		0 0 0 0 0 0	0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0					
ID					Description					
А	RW SLEEP		Configure the watchdog to either be paused, or kept							
					running, while the CPU is sleeping					
		Pause	0		Pause watchdog while the CPU is sleeping					
		Run	1		Keep the watchdog running while the CPU is sleeping					
С	RW HALT				Configure the watchdog to either be paused, or kept					
					running, while the CPU is halted by the debugger					
		Pause	0		Pause watchdog while the CPU is halted by the debugger					
		Run	1		Keep the watchdog running while the CPU is halted by the					
					debugger					

6.26.4.10 RR[n] (n=0..7)

Address offset: $0x600 + (n \times 0x4)$

Reload request n

Bit n	umb	er				31	30 2	9 28	3 27	26	25 2	24	23 2	22	1 20) 19	18	17 :	16 1	51	4 13	12	11	10	9	8	7	6	5	4	3	2	1 0
ID						А	AA	A	А	А	А	A	A	A	A A	А	А	A	A A	A	A	А	А	А	А	А	А	А	А	A	A	A.	A A
Rese	t Ox(000	00000			0	0 0	0	0	0	0	0	0 0) (0 0	0	0	0	0 0) (0	0	0	0	0	0	0	0	0	0	0	0	0 0
ID													Deso																				
А	W	R	R			Reload request register																											
Reload			0x	0x6E524635 Value to request a reload of the watchdog timer																													

6.26.5 Electrical specification

6.26.5.1 Watchdog Timer Electrical Specification

Symbol	Description	Min.	Тур.	Max.	Units
t _{WDT}	Time out interval	458 µs		36 h	



7 Hardware and layout

7.1 Pin assignments

The pin assignment figures and tables describe the pinouts for the product variants of the chip.

The nRF52805 device provides flexibility when it comes to routing and configuration of the GPIO pins. However, some pins have limitations or recommendations for how the pin should be configured or what it should be used for.

7.1.1 WLCSP ball assignments

The nRF52805 ball assignment table and figure describe the assignments for this variant of the chip.

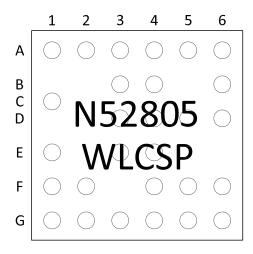


Figure 119: WLCSP ball assignments, top view

Balls not mentioned in the ball assignments table below are not connected (NC) and must be soldered to the PCB.



Pin	Name	Туре	Description
A1	XC1		· ·
A1 A2	XC1 XC2	Analog input	Connection for 32 MHz crystal
		Analog input Power	Connection for 32 MHz crystal 1.3 V regulator supply decoupling
A3	DEC2	Power	• • • • •
A4	DEC4	Power	(radio supply) 1.3 V analog supply.
A4	DEC4	Fower	
			Input from DC/DC converter. Output
			from 1.3 V LDO.
A5	DCC	Power	DC/DC converter output (3.3 V PWM)
A6	VDD	Power	Power (battery) supply
B3	VSS	Power	Ground
B4	VSS	Power	Ground
B6	DEC1	Power	0.9 V regulator digital supply
			decoupling
C1	VSS_PA	Power	Ground
D3	VSS	Power	Ground
D4	VSS	Power	Ground
D5	P0.01	Digital I/O	General purpose I/O
	XL2	Analog input	Connection for 32.768 kHz crystal
			(LFXO)
D6	P0.00	Digital I/O	General purpose I/O
	XL1	Analog input	Connection for 32.768 kHz crystal
		Analog input	(LFXO)
E1	ANT	RF	Single-ended radio antenna
			connection
E3	VSS	Power	Ground
E4	VSS	Power	Ground
F1	SWDIO	Digital I/O	Serial wire debug I/O for debug and
			programming
F2	P0.20	Digital I/O	General purpose I/O
F4	P0.14	Digital I/O	General purpose I/O
F5	P0.04	Digital I/O	General purpose I/O
	AIN2	Analog input	SAADC input
F6	P0.05	Digital I/O	General purpose I/O
	AIN3	Analog input	SAADC input
G1	SWDCLK	Digital input	Serial wire debug clock input for debug
			and programming
G2	P0.21	Digital I/O	General purpose I/O
	nRESET		Configurable as pin reset
G3	P0.18	Digital I/O	General purpose I/O
G4	P0.16	Digital I/O	General purpose I/O
G5	P0.12	Digital I/O	General purpose I/O
G6	VDD	Power	Power (battery) supply

Table 106: WLCSP ball assignments


7.2 Mechanical specifications

The mechanical specifications for the packages show the dimensions in millimeters.




7.2.1 WLCSP 2.482 x 2.464 mm package

Dimensions in millimeters for the nRF52805 WLCSP 2.482 x 2.464 mm package.

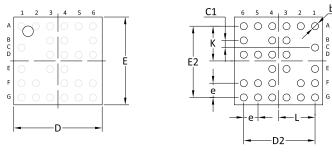

TOP VIEW



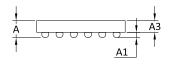

SIDE VIEW

Figure 120: WLCSP 2.482 x 2.464 mm package

	Α	A1	A3	b	C1	D	E	D2	E2	е	к	L
Min.	0.419	0.12	0.299	0.197		2.452	2.434					
Nom.	0.477		0.327		0.2	2.482	2.464	2.0	2.0	0.4	0.975	1.025
Max.	0.535	0.18	0.355	0.257		2.512	2.494					

Table 107: WLCSP dimensions in millimeters

7.3 Reference circuitry

To ensure good RF performance when designing PCBs, it is highly recommended to use the PCB layouts and component values provided by Nordic Semiconductor.

Documentation for the different package reference circuits, including Altium Designer files, PCB layout files, and PCB production files can be downloaded from the product page for the nRF52805 on www.nordicsemi.com.

7.3.1 Schematic CAAA WLCSP with internal LDO regulator setup

In addition to the schematic, the bill of material (BOM) is also provided.



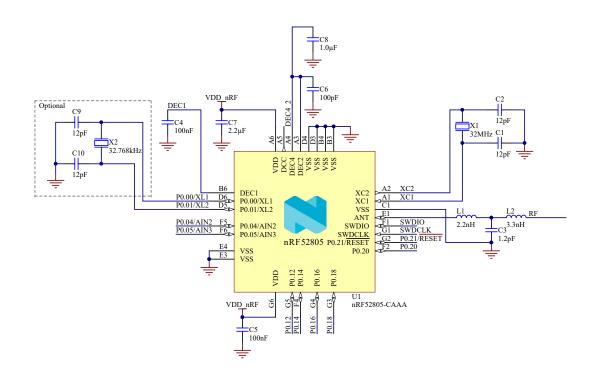


Figure 121: CAAA WLCSP with internal LDO regulator setup

Note: For PCB reference layouts, see the product page for the nRF52805 on www.nordicsemi.com.
--

Designator	Value	Description	Footprint
C1, C2, C9, C10	12 pF	Capacitor, NP0, ±2 %	0201
С3	1.2 pF	Capacitor, NP0, ±5 %	0201
C4, C5	100 nF	Capacitor, X5R, ±10 %	0201
C6	100 pF	Capacitor, NP0, ±2 %	0201
C7	2.2 μF	Capacitor, X5R, ±20 %	0402
C8	1.0 μF	Capacitor, X5R, ±5 %	0402
L1	2.2 nH	High frequency chip inductor ±5 %	0201
L2	3.3 nH	High frequency chip inductor ±5 %	0201
U1	nRF52805- CAAA	Multiprotocol Bluetooth [®] low energy, and 2.4 GHz proprietary system-on-chip	WLCSP-28
X1	32 MHz	XTAL SMD 2016, 32 MHz, Cl = 8 pF, Total Tol: ±40 ppm	XTAL_2016
X2 32.768 kHz		XTAL SMD 2012, 32.768 kHz, Cl = 9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 108: Bill of material for CAAA WLCSP with internal LDO regulator setup

7.3.2 Schematic CAAA WLCSP with DC/DC regulator setup

In addition to the schematic, the bill of material (BOM) is also provided.



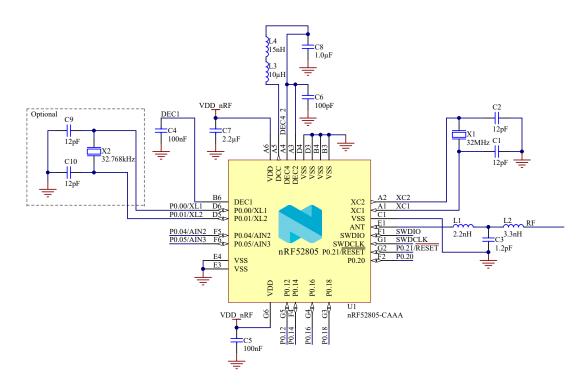


Figure 122: CAAA WLCSP with DC/DC regulator setup

Note: For PCB reference layouts, see the product page for the nRF52805 on www.nordicsemi.com.

Designator	Value	Description	Footprint
C1, C2, C9, C10	12 pF	Capacitor, NP0, ±2 %	0201
C3	1.2 pF	Capacitor, NP0, ±5 %	0201
C4, C5	100 nF	Capacitor, X5R, ±10 %	0201
C6	100 pF	Capacitor, NP0, ±2 %	0201
C7	2.2 μF	Capacitor, X5R, ±10 %	0402
C8	1.0 μF	Capacitor, X5R, ±5 %	0402
L1	2.2 nH	High frequency chip inductor ±5 %	0201
L2	3.3 nH	High frequency chip inductor ±5 %	0201
L3	10 µH	Chip inductor, IDC,min = 50 mA, ±20 %	0603
L4	15 nH	High frequency chip inductor ±10 %	0402
U1	nRF52805- CAAA	Multiprotocol Bluetooth [®] low energy, and 2.4 GHz proprietary system-on-chip	WLCSP-28
X1	32 MHz	XTAL SMD 2016, 32 MHz, Cl = 8 pF, Total Tol: ±40 ppm	XTAL_2016
X2 32.768 kHz		XTAL SMD 2012, 32.768 kHz, Cl = 9 pF, Total Tol: ±50 ppm	XTAL_2012

Table 109: Bill of material for CAAA WLCSP with DC/DC regulator setup



7.3.3 PCB guidelines

A well designed PCB is necessary to achieve good RF performance. Poor layout can lead to loss in performance or functionality.

A qualified RF layout for the IC and its surrounding components, including matching networks, can be downloaded from www.nordicsemi.com.

To ensure optimal performance it is essential that you follow the schematics and layout references closely. Especially in the case of the antenna matching circuitry (components between device pin ANT and the antenna), any changes to the layout can change the behavior, resulting in degradation of RF performance or a need to change component values. All reference circuits are designed for use with a 50 Ω single-ended antenna.

A PCB with a minimum of two layers, including a ground plane, is recommended for optimal performance. The distance between the ground plane and the top layer should be less than or equal to 0.8 mm. On PCBs with more than two layers, put a keep-out area on the inner layers directly below the antenna matching circuitry (components between device pin ANT and the antenna) to reduce the stray capacitances that influence RF performance.

A matching network is needed between the RF pin ANT and the antenna, to match the antenna impedance (normally 50 Ω) to the optimum RF load impedance for the chip. For optimum performance, the impedance for the matching network should be set as described in the recommended package reference circuitry in Reference circuitry on page 348.

The DC supply voltage should be decoupled as close as possible to the VDD pins with high performance RF capacitors. See the schematics for recommended decoupling capacitor values. The supply voltage for the chip should be filtered and routed separately from the supply voltages of any digital circuitry.

Long power supply lines on the PCB should be avoided. All device grounds, VDD connections, and VDD bypass capacitors must be connected as close as possible to the IC. For a PCB with a topside RF ground plane, the VSS pins should be connected directly to the ground plane. For a PCB with a bottom ground plane, the best technique is to have via holes as close as possible to the VSS pads. A minimum of one via hole should be used for each VSS pin.

Fast switching digital signals should not be routed close to the crystal or the power supply lines. Capacitive loading of fast switching digital output lines should be minimized in order to avoid radio interference.

Note: The distance between the ground plane and the top layer should be less than or equal to 0.8 mm. If this design rule is not followed, Radio parameters may not meet specification.

7.3.4 PCB layout example

The two-layer PCB layout shown in the following figures is a reference layout for the WLCSP package with internal LDO setup.

For all available reference layouts, see the product page for the nRF52805 on www.nordicsemi.com.



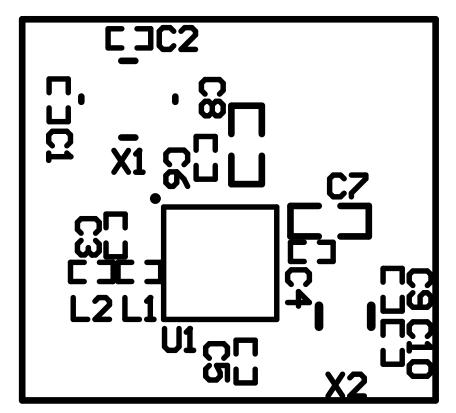


Figure 123: Top silk layer

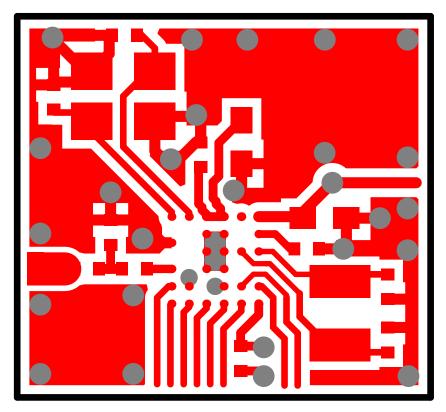


Figure 124: Top layer



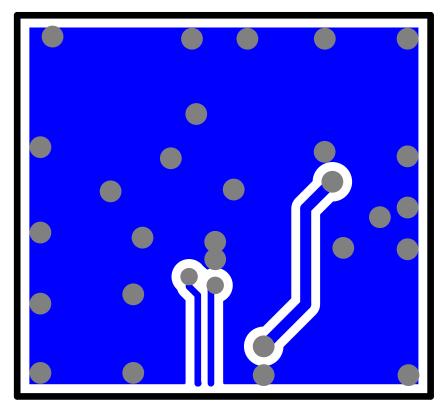


Figure 125: Bottom layer

Important: No components in bottom layer.

7.3.5 PMIC support

The nRF52 Series is comprehensively supported by Nordic Semiconductor's own range of PMICs (Power Management Integrated Circuits). These PMICs are meticulously designed to enhance the performance and efficiency of the nRF52 Series devices. This integration ensures the longest battery life and the highest reliability for the end application. The synergy between the nRF52 Series and the Nordic PMICs highlights Nordic Semiconductor's commitment to providing a complete and cohesive solution for their customers' needs in wireless technology applications.



8 Recommended operating conditions

The operating conditions are the physical parameters that the chip can operate within.

Symbol	Parameter	Notes	Min.	Nom.	Max.	Units
VDD	Supply voltage, independent of DCDC enable		1.7	3.0	3.6	V
t _{R_VDD}	Supply rise time (0 V to 1.7 V)				60	ms
TA	Operating temperature		-40	25	85	°C

Table 110: Recommended operating conditions

Important: The on-chip power-on reset circuitry may not function properly for rise times longer than the specified maximum.

8.1 WLCSP light sensitivity

WLCSP package variants are sensitive to visible and near infrared light, which means that a final product design must shield the chip properly.

For the WLCSP package variant, the marking side is covered with a light absorbing film, while the side edges of the chip and the ball side must be protected by coating or other means.



9 Absolute maximum ratings

Maximum ratings are the extreme limits to which the chip can be exposed for a limited amount of time without permanently damaging it. Exposure to absolute maximum ratings for prolonged periods of time may affect the reliability of the device.³⁵

	Note	Min.	Max.	Unit
Supply voltages				
VDD		-0.3	+3.9	V
VSS			0	V
I/O pin voltage				
V _{I/O} , VDD ≤3.6 V		-0.3	VDD + 0.3	V
V _{I/O} , VDD >3.6 V		-0.3	3.9	V
Environmental WLCSP package				
Storage temperature		-40	+125	°C
MSL	Moisture Sensitivity Level		1	
ESD HBM	Human Body Model		3	kV
ESD HBM Class	Human Body Model Class		2	
ESD CDM	Charged Device Model		1	kV
Flash memory				
Endurance		10 000		write/erase cycles
Retention at 85 °C		10		years

Table 111: Absolute maximum ratings



³⁵ For accellerated life time testing (HTOL, etc) supply voltage should not exceed the recommended operating conditions max value, see Recommended operating conditions on page 354.



10 Ordering information

This chapter contains information on IC marking, ordering codes, and container sizes.

10.1 IC marking

The nRF52805 package is marked as shown in the following figure.

Ν	5	2	8	0	5
<p< th=""><th>P></th><th><v< th=""><th>V></th><th><h></h></th><th><p></p></th></v<></th></p<>	P>	<v< th=""><th>V></th><th><h></h></th><th><p></p></th></v<>	V>	<h></h>	<p></p>
<y< th=""><th>Y></th><th><w< th=""><th>W></th><th><l< th=""><th>L></th></l<></th></w<></th></y<>	Y>	<w< th=""><th>W></th><th><l< th=""><th>L></th></l<></th></w<>	W>	<l< th=""><th>L></th></l<>	L>

Figure 126: Package marking

10.2 Box labels

The following figures show the box labels used for nRF52805.

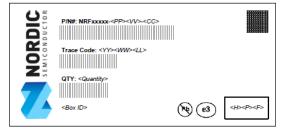


Figure 127: Inner box label



FROM:	TO:				
DEVICE: NRFxxxxx- <pp>-</pp>	<cc></cc>				
S/O No.: <nordic order="" sales=""></nordic>					
CUSTOMER PO No.: <customer< td=""><td>Purchase Order></td></customer<>	Purchase Order>				
WF LOT No.:					
Trace Code: <yy><ww><ll></ll></ww></yy>					
QTY: <quantity></quantity>					
PACKAGE COUNT: of	PACKAGE WEIGHT: KGS				
COUNTRY OF O	RIGIN: <country></country>				

Figure 128: Outer box label

10.3 Order code

The following are the order codes and definitions for nRF52805.

r																
	n	R	F	5	2	8	0	5	-	<p< th=""><th>P></th><th><v< th=""><th>V></th><th>-</th><th><c< th=""><th>C></th></c<></th></v<></th></p<>	P>	<v< th=""><th>V></th><th>-</th><th><c< th=""><th>C></th></c<></th></v<>	V>	-	<c< th=""><th>C></th></c<>	C>

Figure 129: Order code



Abbreviation	Definition and implemented codes
N52/nRF52	nRF52 Series product
805	Part code
<pp></pp>	Package variant code
<vv></vv>	Function variant code
<h><p><f></f></p></h>	Build code H - Hardware version code P - Production configuration code (production site, etc.) F - Firmware version code (only visible on shipping container label)
<yy><ww><ll></ll></ww></yy>	Tracking code YY - Year code WW - Assembly week number LL - Wafer lot code
<cc></cc>	Container code

Table 112: Abbreviations

10.4 Code ranges and values

Defined here are the nRF52805 code ranges and values.

<pp></pp>	Package	Size (mm)	Pin/Ball count	Pitch (mm)
СА	WLCSP	2.482 x 2.464	28	0.4

Table 113: Package variant codes

<vv></vv>	Flash (kB)	RAM (kB)	Access port protection
AA	192	24	Controlled by hardware
АА-В	192	24	Controlled by hardware and software

Table 114: Function variant codes

<h></h>	Description
[A Z]	Hardware version/revision identifier (incremental)

Table 115: Hardware version codes

<p></p>	Description
[09]	Production device identifier (incremental)
[A Z]	Engineering device identifier (incremental)

Table 116: Production configuration codes

<f></f>	Description
[A N, P Z]	Version of preprogrammed firmware
[0]	Delivered without preprogrammed firmware

Table 117: Production version codes

<yy></yy>	Description
[00 99]	Production year: 2000 to 2099

Table 118: Year codes

<ww></ww>	Description
[152]	Week of production

Table 119: Week codes

<ll></ll>	Description	
[AA ZZ]	Wafer production lot identifier	

Table 120: Lot codes

<cc></cc>	Description
R7	7" Reel
R	13" Reel
Т	Тгау

Table 121: Container codes

10.5 Product options

Defined here are the nRF52805 product options.



Order code	MOQ ³⁶	Comment
nRF52805-CAAA-R7	1500	Not recommended for new designs
nRF52805-CAAA-R	7000	Not recommended for new designs
nRF52805-CAAA-B-R7	1500	
nRF52805-CAAA-B-R	7000	

Table 122: nRF52805 order codes

³⁶ Minimum Ordering Quantity

11 Legal notices

By using this documentation you agree to our terms and conditions of use. Nordic Semiconductor may change these terms and conditions at any time without notice.

Liability disclaimer

Nordic Semiconductor ASA reserves the right to make changes without further notice to the product to improve reliability, function, or design. Nordic Semiconductor ASA does not assume any liability arising out of the application or use of any product or circuits described herein.

Nordic Semiconductor ASA does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. If there are any discrepancies, ambiguities or conflicts in Nordic Semiconductor's documentation, the Product Specification prevails.

Nordic Semiconductor ASA reserves the right to make corrections, enhancements, and other changes to this document without notice.

Customer represents that, with respect to its applications, it has all the necessary expertise to create and implement safeguards that anticipate dangerous consequences of failures, monitor failures and their consequences, and lessen the likelihood of failures that might cause harm, and to take appropriate remedial actions.

Nordic Semiconductor ASA assumes no liability for applications assistance or the design of customers' products. Customers are solely responsible for the design, validation, and testing of its applications as well as for compliance with all legal, regulatory, and safety-related requirements concerning its applications.

Nordic Semiconductor ASA's products are not designed for use in life-critical medical equipment, support appliances, devices, or systems where malfunction of Nordic Semiconductor ASA's products can reasonably be expected to result in personal injury. Customer may not use any Nordic Semiconductor ASA's products in life-critical medical equipment unless adequate design and operating safeguards by customer's authorized officers have been made. Customer agrees that prior to using or distributing any life-critical medical equipment that include Nordic Semiconductor ASA's products, customer will thoroughly test such systems and the functionality of such products as used in such systems.

Customer will fully indemnify Nordic Semiconductor ASA and its representatives against any damages, costs, losses, and/or liabilities arising out of customer's non-compliance with this section.

RoHS and REACH statement

Refer to www.nordicsemi.com for complete hazardous substance reports, material composition reports, and latest version of Nordic's RoHS and REACH statements.

Trademarks

All trademarks, service marks, trade names, product names, and logos appearing in this documentation are the property of their respective owners.

Copyright notice

[©] 2023 Nordic Semiconductor ASA. All rights are reserved. Reproduction in whole or in part is prohibited without the prior written permission of the copyright holder.





