


Mercury[™] T2 **USB 2.0 Protocol Analyzer**

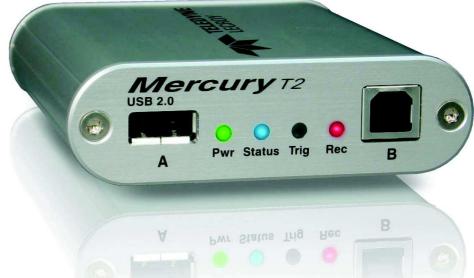

Key Features

Portable and Affordable

Compact, bus-powered system measures 3.0" x 3.5", weighs 5 oz.

Supports USB 2.0

Capable of capturing all USB speeds up to 2.0 including OTG (On-the-Go)

256 MB Recording Memory

Extend capture time with spool-to-disk recording

High Impedance probe

Non-intrusive probe preserves realworld signal and timing conditions

Advanced Triggering

Isolates important traffic, specific errors or patterns

Extensive Decodes

Mass storage, Bluetooth HCI, Hub, PTP/Still Image, Printer, Human Interface Device (HID), Audio, Video and Communication

Hardware Filtering

Automatically exclude non-essential traffic

Event Reporting

Quickly identify and track error rates, abnormal bus activity or timing conditions

The Teledyne LeCroy Mercury T2 is the industry's smallest, most affordable hardware-based USB 2.0 protocol analyzer that combines the de-facto standard CATC Trace display with the very latest USB class decoding. The Mercury T2 fits in a shirt pocket yet provides much of the same lab quality protocol analysis capabilities offered in Teledyne LeCroy's top-of-the-line USB analyzers.


View and Understand USB Protocol

Featuring the industry-leading CATC Trace™ expert analysis software, the Mercury T2 system provides an easy-to-use display that graphically decodes logical protocol events. With the Standard or Advanced edition, all protocol layers can be expanded to show the underlying transactions and packets. Tooltips help explain protocol events making it easier for non-experts to identify errors.

Real Time Triggering


Isolating specific protocol events with real time triggering

is essential to capture intermittent problems. The Mercury T2 provides sophisticated triggering with drag-and-drop selections for PID type, data patterns, standard requests, errors, and bus events. The Mercury T2 features 256 MB of on-board memory and also supports spool-todisk capture for extended recording.

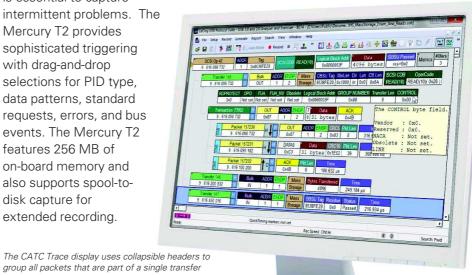

USB Device Decoding

Comprehensive USB device class decoding is included in every model of the Mercury T2. This allows users to see upper-level mapped protocol events within the trace, eliminating the tedious process of manually decoding device specific commands.

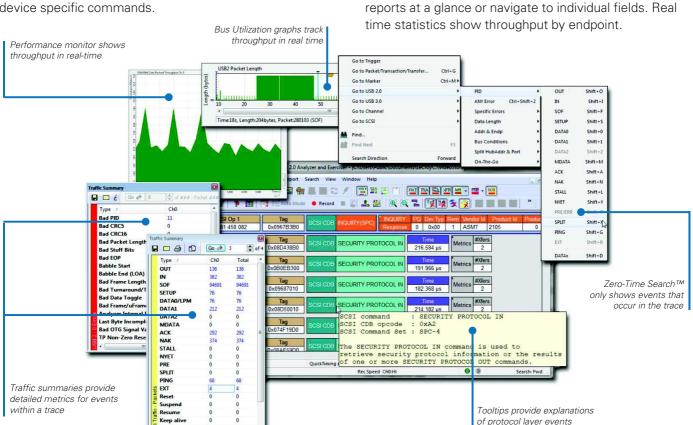

| Feature Comparison | | Mercury T2 Standard USB 2.0 | Mercury T2 Advanced USB 2.0 |
|----------------------------------|--------------------------|-----------------------------------|-----------------------------------|
| USB2.0 / USB1.1 Recording | | ✓ | ✓ |
| Spool-to-Disk Recording | | ✓ | ✓ |
| Recording Memory | | 256 MB | 256 MB |
| USB 2.0 Event Triggering | | ✓ | ✓ |
| | PID Type and Dev Address | ✓ | ✓ |
| | Data Pattern | ✓ | ✓ |
| | Max States per Sequence | 4 | 7 |
| | No. of Sequences | 2 | 2 |
| USB Real-time Statistics (RTS) | | | ✓ |
| Export to .CSV | | | ✓ |
| Automation API | | | ✓ |
| Verification Script Engine (VSE) | | | ✓ |

Specifications

Find the Issues Fast

The Mercury T2 provides many mechanisms to measure

shows data, packet length, and bus usage by device. Using

the Traffic Summary window, users can evaluate statistical

and report on USB traffic. The Bus Utilization display

| Host Requirements | Windows 7 or Windows 8 | |
|-------------------------|--|--|
| Standard Trigger Events | Packet Identifier, Token Pattern, Frame Pattern, Device Request, Data Pattern, Bus Conditions, Errors, Transactions, Data Length, Splits | |
| Reporting & Statistics | Packet Level, Transaction Level, Transfer Level, Error Reports | |
| Recording Memory Size | 256 MB | |
| Power Consumption | Idle: 500 mA (typical); Active: 560 mA (typical) | |
| Connectors | USB Standard "A" and "B" receptacles | |
| Temperature | Operating: 0°C to 55°C (32°F to 131°F) Non-Operating: -20°C to 80°C (-4°F to 176°F) | |
| Humidity | Operating: 10% to 90% non-condensing | |
| Dimensions | 80 x 90 x 24 mm (3.0" x 3.6" x 1") | |
| Net Weight | 158g (5.8 oz) | |
| | | |



1-800-909-7211 teledynelecroy.com



Local sales offices are located throughout the world. Visit our website to find the most convenient location.