


# DIGITAL INDICATING CONTROLLER

# BCx2

## INSTRUCTION MANUAL

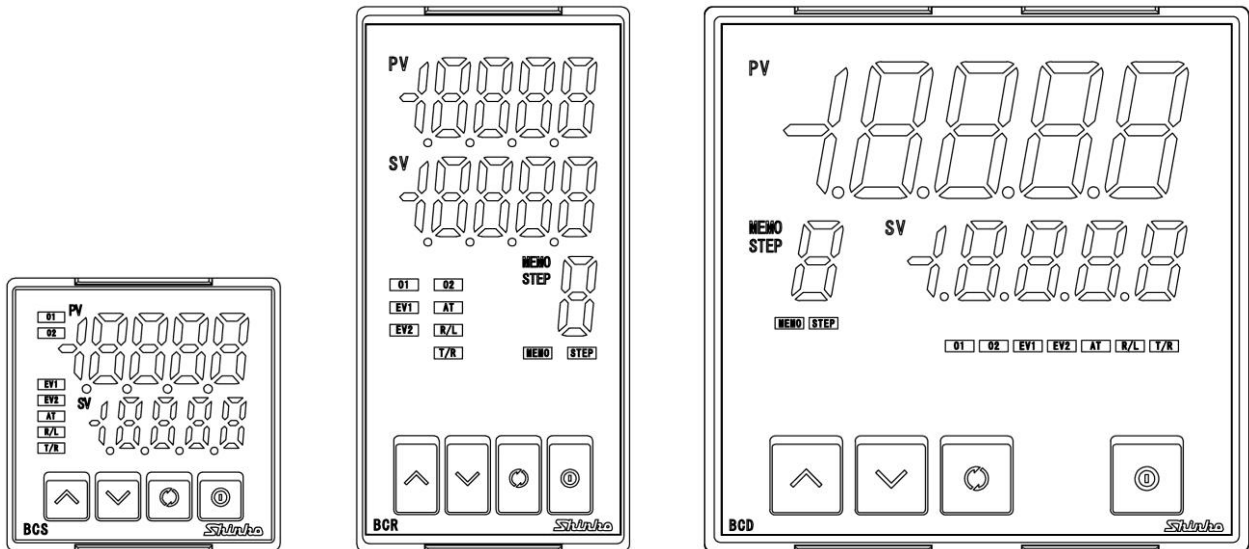

**Shinko**

# Preface

Thank you for purchasing our digital indicating controller BCx2. This manual contains instructions for the mounting, functions, operations and notes when operating the BCx2. To prevent accidents arising from the misuse of this controller, please ensure the operator receives this manual.

## Abbreviations used in this manual

Abbreviation	Term
PV	Process variable
SV	Desired value
MV	Manipulated variable
DV	Deviation
OUT1	Control output OUT1
OUT2	Control output OUT2
AT	Auto-tuning


## Characters used in this manual


Indication	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Number, °C/°F	-1	0	1	2	3	4	5	6	7	8	9	°C	°F
Indication	A	b	c	d	E	F	G	H	I	J	k	L	M
Alphabet	A	B	C	D	E	F	G	H	I	J	K	L	M
Indication	n	o	P	q	r	s	T	U	v	w	x	Y	Z
Alphabet	N	O	P	Q	R	S	T	U	V	W	X	Y	Z


# Notes

- This instrument should be used in accordance with the specifications described in the manual. If it is not used according to the specifications, it may malfunction or cause a fire.
- Be sure to follow the warnings, cautions and notices. If they are not observed, serious injury or malfunction may occur.
- The contents of this instruction manual are subject to change without notice.
- Care has been taken to ensure that the contents of this instruction manual are correct, but if there are any doubts, mistakes or questions, please inform our sales department.
- Measures must be taken to ensure that the operator cannot touch power terminals or other high voltage sections.
- Any unauthorized transfer or copying of this document, in part or in whole, is prohibited.
- Shinko Technos Co., Ltd. is not liable for any damage or secondary damage(s) incurred as a result of using this product, including any indirect damage.

# Safety Precautions (Be sure to read these precautions before using our products.)

The safety precautions are classified into categories: "Warning" and "Caution". Depending on circumstances, procedures indicated by  Caution may cause serious results, so be sure to follow the directions for usage.

 **Warning** Procedures which may lead to dangerous conditions and cause death or serious injury, if not carried out properly.

 **Caution** Procedures which may lead to dangerous conditions and cause superficial to medium injury or physical damage or may degrade or damage the product, if not carried out properly.

## Warning

- To prevent an electric shock or fire, only Shinko or other qualified service personnel may handle the inner assembly.
- To prevent an electric shock, fire or damage to the instrument, parts replacement may only be undertaken by Shinko or other qualified service personnel.

## Safety Precautions

- To ensure safe and correct use, thoroughly read and understand this manual before using this instrument.
- This instrument is intended to be used for industrial machinery, machine tools and measuring equipment. Verify correct usage after purpose-of-use consultation with our agency or main office. (Never use this instrument for medical purposes with which human lives are involved.)
- External protection devices such as protective equipment against excessive temperature rise, etc. must be installed, as malfunction of this product could result in serious damage to the system or injury to personnel. Proper periodic maintenance is also required.
- This instrument must be used under the conditions and environment described in this manual. Shinko Technos Co., Ltd. does not accept liability for any injury, loss of life or damage occurring due to the instrument being used under conditions not otherwise stated in this manual.

### Caution with respect to Export Trade Control Ordinance

To avoid this instrument from being used as a component in, or as being utilized in the manufacture of weapons of mass destruction (i.e. military applications, military equipment, etc.), please investigate the end users and the final use of this instrument. In the case of resale, ensure that this instrument is not illegally exported.

## 1. Installation Precautions

### Caution

**This instrument is intended to be used under the following environmental conditions (IEC61010-1): Overvoltage category II, Pollution degree 2**

**Ensure the mounting location corresponds to the following conditions:**

- A minimum of dust, and an absence of corrosive gases
- No flammable, explosive gases
- No mechanical vibrations or shocks
- No exposure to direct sunlight, an ambient temperature of -10 to 55°C (14 to 131°F) that does not change rapidly, and no icing
- An ambient non-condensing humidity of 35 to 85%RH
- No large capacity electromagnetic switches or cables through which large current is flowing
- No water, oil or chemicals or where the vapors of these substances can come into direct contact with the unit
- Take note that the ambient temperature of this unit – not the ambient temperature of the control panel – must not exceed 55°C (131°F) if mounted through the face of a control panel, otherwise the life of electronic components (especially electrolytic capacitors) may be shortened.

**Note • Avoid setting this instrument directly on or near flammable material even though the case of this instrument is made of flame-resistant resin.**

## 2. Wiring Precautions



### Caution

- Do not leave wire remnants in the instrument, as they could cause a fire or malfunction.
- Use the solderless terminal with an insulation sleeve in which the M3 screw fits when wiring the instrument.
- The terminal block of this instrument is designed to be wired from the left side. The lead wire must be inserted from the left side of the terminal, and fastened with the terminal screw.
- Tighten the terminal screw using the specified torque. If excessive force is applied to the screw when tightening, the terminal screw or case may be damaged.
- When using a terminal cover for the BCS2, pass terminal wires numbered 7 to 12 into the holes of the terminal cover.
- This instrument does not have a built-in power switch, circuit breaker or fuse.  
It is necessary to install a built-in power switch, circuit breaker or fuse near the controller.  
(Recommended fuse: Time-lag fuse, rated voltage 250 V AC, rated current 2 A)
- For a 24 V AC/DC power source, do not confuse polarity when using direct current (DC).
- Do not apply a commercial power source to the sensor which is connected to the input terminal nor allow the power source to come into contact with the sensor.
- Use a thermocouple and compensating lead wire according to the sensor input specifications of this controller.
- Use the 3-wire RTD according to the sensor input specifications of this controller.
- For DC voltage input, (+) side input terminal number of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC differs from that of 0 to 1 V DC.

Model	Terminal Number
BCS2	⑨: (+) side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑩: (+) side of 0 to 1 V DC
BCR2, BCD2	⑲: (+) side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑳: (+) side of 0 to 1 V DC

- When using a relay contact output type, externally use a relay according to the capacity of the load to protect the built-in relay contact.
- When wiring, keep input wires (thermocouple, RTD, etc.) away from AC sources or load wires.

## 3. Operation and Maintenance Precautions



### Caution

- It is recommended that AT be performed on the trial run.
- Do not touch live terminals. This may cause electric shock or problems in operation.
- Turn the power supply to the instrument OFF when retightening the terminal or cleaning.  
Working on or touching the terminal with the power switched ON may result in severe injury or death due to electric shock.
- Use a soft, dry cloth when cleaning the instrument.  
(Alcohol based substances may tarnish or deface the unit.)
- As the display section is vulnerable, do not strike or scratch it with a hard object or put pressure on it.

# Contents

	Page
<b>1. Model</b>	
1.1 Model -----	7
1.2 How to Read the Model Label -----	8
<b>2. Names and Functions of Sections</b> -----	<b>9</b>
<b>3. Mounting to the Control Panel</b>	
3.1 External Dimensions (Scale: mm) -----	12
3.2 Panel Cutout (Scale: mm) -----	14
3.3 CT (Current Transformer) External Dimensions (Scale: mm) -----	15
3.4 Mounting to, and Removal from, the Control Panel	
3.4.1 How to Mount the Unit -----	16
3.4.2 How to Remove the Mounting Frame and Unit -----	18
<b>4. Wiring</b>	
4.1 Terminal Arrangement -----	19
4.2 Lead Wire Solderless Terminal -----	20
4.3 Terminal Cover -----	21
4.4 Wiring	
4.4.1 Power Supply -----	23
4.4.2 Control Output OUT1, OUT2 -----	23
4.4.3 Input -----	24
4.4.4 Event Output 1, 2 -----	25
4.4.5 Insulated Power Output -----	25
4.4.6 CT Input -----	26
4.4.7 Serial Communication -----	28
4.4.8 Event Input -----	30
4.4.9 External Setting Input -----	30
4.4.10 Transmission Output -----	30
<b>5. Outline of Key Operation and Each Mode</b>	
5.1 Key Operation -----	31
5.2 Modes -----	33
5.3 Basic Operation after Power-ON -----	34
<b>6. Initial Setting</b> -----	<b>37</b>
6.1 Example of Initial Setting -----	38
6.2 Initial Setting Mode -----	40
<b>7. Settings</b>	
7.1 Main Setting Mode -----	53
7.2 Sub Setting Mode -----	58
7.3 Engineering Mode -----	64
<b>8. Operation and Settings of Standard Functions</b>	
8.1 Selecting an input type -----	78
8.2 Selecting PID Control or ON/OFF Control -----	79
8.3 Selecting Direct/Reverse Action -----	80
8.4 Performing Fixed Value Control -----	81
8.5 Setting PID Constants (by Performing AT) -----	82
8.6 Performing Auto-reset -----	85
8.7 Performing Program Control -----	86
8.8 Event Output EV1 Allocation -----	93
8.9 Indicating MV, Remaining Time (Program Control) -----	95
8.10 Items to be Initialized by Changing Settings -----	96

<b>9. Attached Function</b>	
9.1 Input Value Correction -----	97
9.2 Set Value Lock -----	99
9.3 Control Output OFF Function -----	100
9.4 Switching Auto/Manual Control (Auto/Manual Control Function) -----	101
9.5 Using as a Converter -----	102
9.6 Clearing Data -----	104
<b>10. Action Explanation</b>	
10.1 OUT1 Action -----	105
10.2 OUT1 ON/OFF Control Action -----	105
10.3 Heater Burnout Alarm Action -----	106
10.4 Alarm Action -----	107
10.5 OUT2 (Heating/Cooling Control) Action -----	109
10.6 OUT2 (Heating/Cooling Control) Action (When Setting Dead Band) -	110
10.7 OUT2 (Heating/Cooling Control) Action (When Setting Overlap Band)-	111
<b>11. Specifications</b>	
11.1 Standard Specifications -----	112
11.2 Optional Specifications -----	122
<b>12. Troubleshooting</b>	
12.1 Indication -----	124
12.2 Key Operation -----	127
12.3 Control -----	128
<b>13. Character Table</b>	
13.1 Error Code -----	129
13.2 Run Mode -----	130
13.3 Monitor Mode -----	131
13.4 Initial Setting Mode -----	132
13.5 Main Setting Mode -----	138
13.6 Sub Setting Mode -----	140
13.7 Engineering Mode -----	142
<b>14 Key Operation Flowchart</b> -----	149

# 1. Model

## 1.1 Model

B C <input type="checkbox"/> 2 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> - <input type="checkbox"/> <input type="checkbox"/>						
Size	BCS2					48 x 48 x 68 mm (W x H x D) (Depth of control panel interior: 60)
	BCR2					48 x 96 x 68 mm (W x H x D) (Depth of control panel interior: 60)
	BCD2					96 x 96 x 68 mm (W x H x D) (Depth of control panel interior: 60)
Control output OUT1	R					Relay contact: 1a
	S					Non-contact voltage (for SSR drive) 12 V DC±15%
	A					Direct current: 4 to 20 mA DC
Power supply voltage	0					100 to 240 V AC (Standard)
	1					24 V AC/DC
Input		0				Multi-range (*1)
Option 1 (*2) (Choose only one option.)		0				No option 1 needed.
		1	EV2			Event output EV2 (*3)
		2	DS			Heating/Cooling control output OUT2, Non-contact voltage
		3	DA			Heating/Cooling control output OUT2, Direct current
		4	P24			Insulated power output
Option 2 (*2) (Choose only one option.)		0				No option 2 needed.
		1	C5W (20A)			Event input (2 points) (*4) + Serial communication + Heater burnout alarm (20A) (*5)
		2	C5W (100A)			Event input (2 points) (*4) + Serial communication + Heater burnout alarm (100A) (*5)
		3	EIW (20A)			Event input (2 points) + Heater burnout alarm (20A) (*5)
		4	EIW (100A)			Event input (2 points) + Heater burnout alarm (100A) (*5)
		5	EIT			Event input (2 points) (*6)+ External setting input + Transmission output
		6	C5			Serial communication
		7	W (20A)			Heater burnout alarm (20 A) (*5)
		8	W (100A)			Heater burnout alarm (100 A) (*5)
		9	EI			Event input (2 points)

(\*1) Thermocouple, RTD, Direct current and DC voltage can be selected by keypad.

(\*2) Only one option can be selected from Option 1 and Option 2 respectively.

(\*3) Event output EV1 is standard.

The following outputs can be selected in [Event output EV1/EV2 allocation] by keypad:

Alarm output (12 alarm types and No alarm action), Heater burnout alarm output, Loop break alarm output, Time signal output, Output during AT, Pattern end output, Output by communication command, Heating/Cooling control output OUT2 (for EV2 option only).

For Event output EV1/EV2, Heater burnout alarm output and Output by communication command are available when C5W, EIW, C5 or W option is ordered.

(\*4) For the BCS2, Event input (2 points) is not available.

(\*5) For Direct current output type, Heater burnout alarm does not work.


(\*6) For the BCS2, 1 point of Event input is available.

## 1.2 How to Read the Model Label

The model label is attached to the left side of the case.

### BCS2


(e.g.) BCS2R00-12

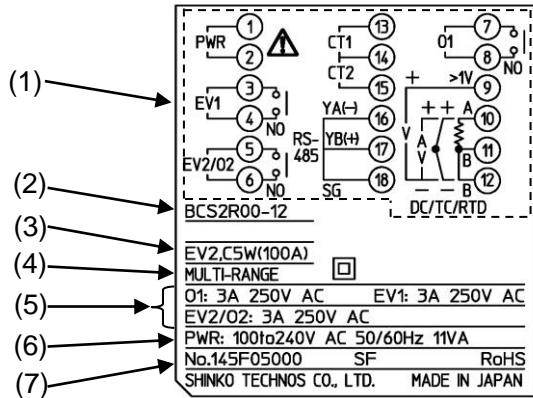

(Fig. 1.2-1)

### BCR2, BCD2

(e.g.) BCD2R00-12

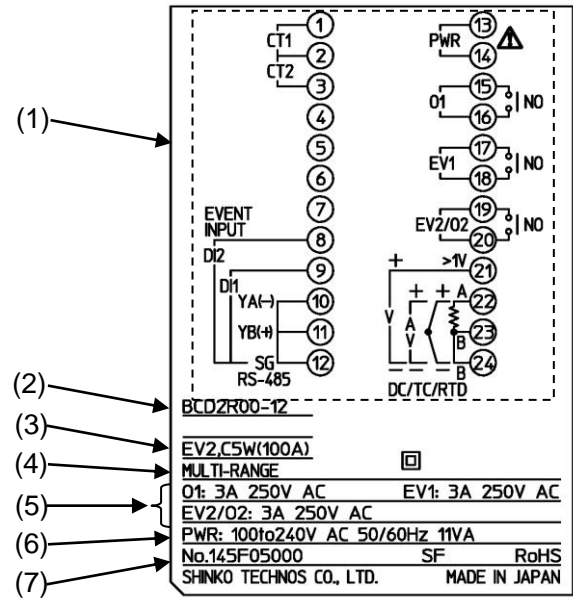

(Fig. 1.2-2)

No.	Description	Example
(1)	Terminal arrangement	BCS2R00-12, BCD2R00-12 (*1)
(2)	Model	BCS2R00-12, BCD2R00-12
(3)	Option	EV2 (Event output EV2) C5W(100A) [Serial communication + Heater burnout alarm (100 A)] (*2)
(4)	Input	MULTI-RANGE (Multi-range input)
(5)	Control output, Event output	O1: 3 A 250 V AC (Control output OUT1) EV1: 3 A 250 V AC (Event output EV1) EV2: 3 A 250 V AC (Event output EV2)
(6)	Power supply voltage, Power consumption	100 to 240 V AC 50/60 Hz, 11 VA
(7)	Serial number	No. 145F05000


(\*1) Terminal arrangement diagram differs depending on the model.

(\*2) For Heater burnout alarm output (C5W, EIW, W options), CT rated current is entered in bracket ( ).




# 2. Names and Functions of Sections

BCS2

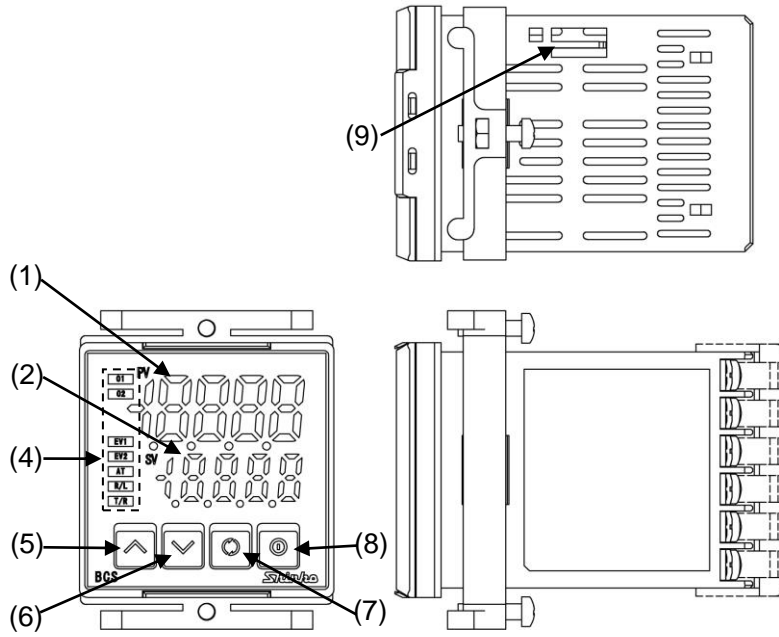


(Fig. 2-1)

BCR2

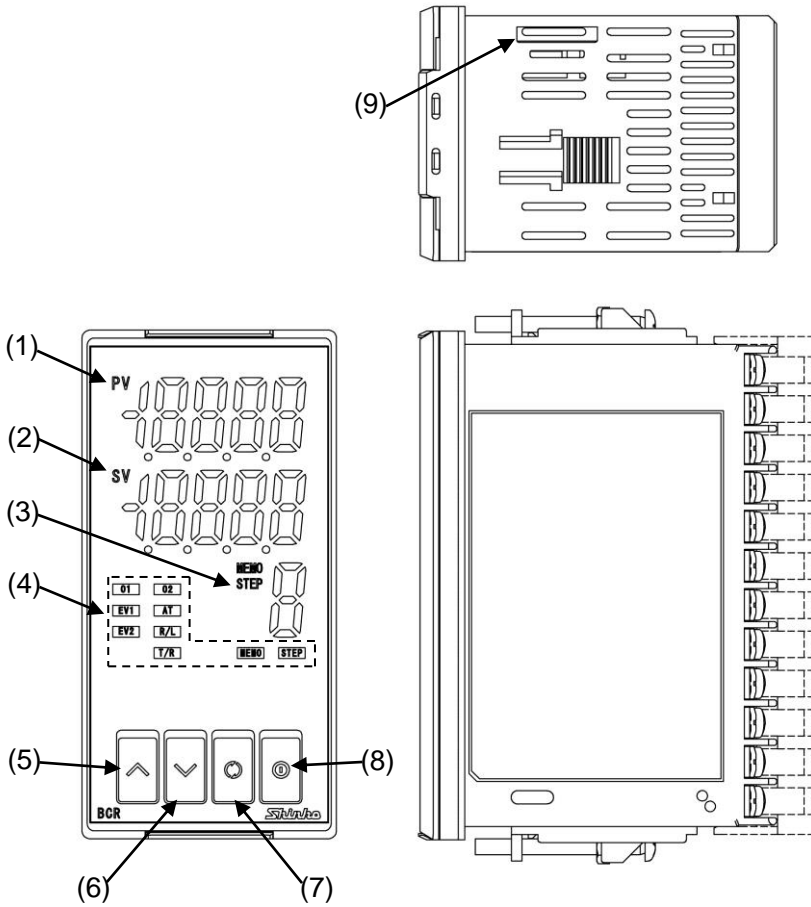

(Fig. 2-2)

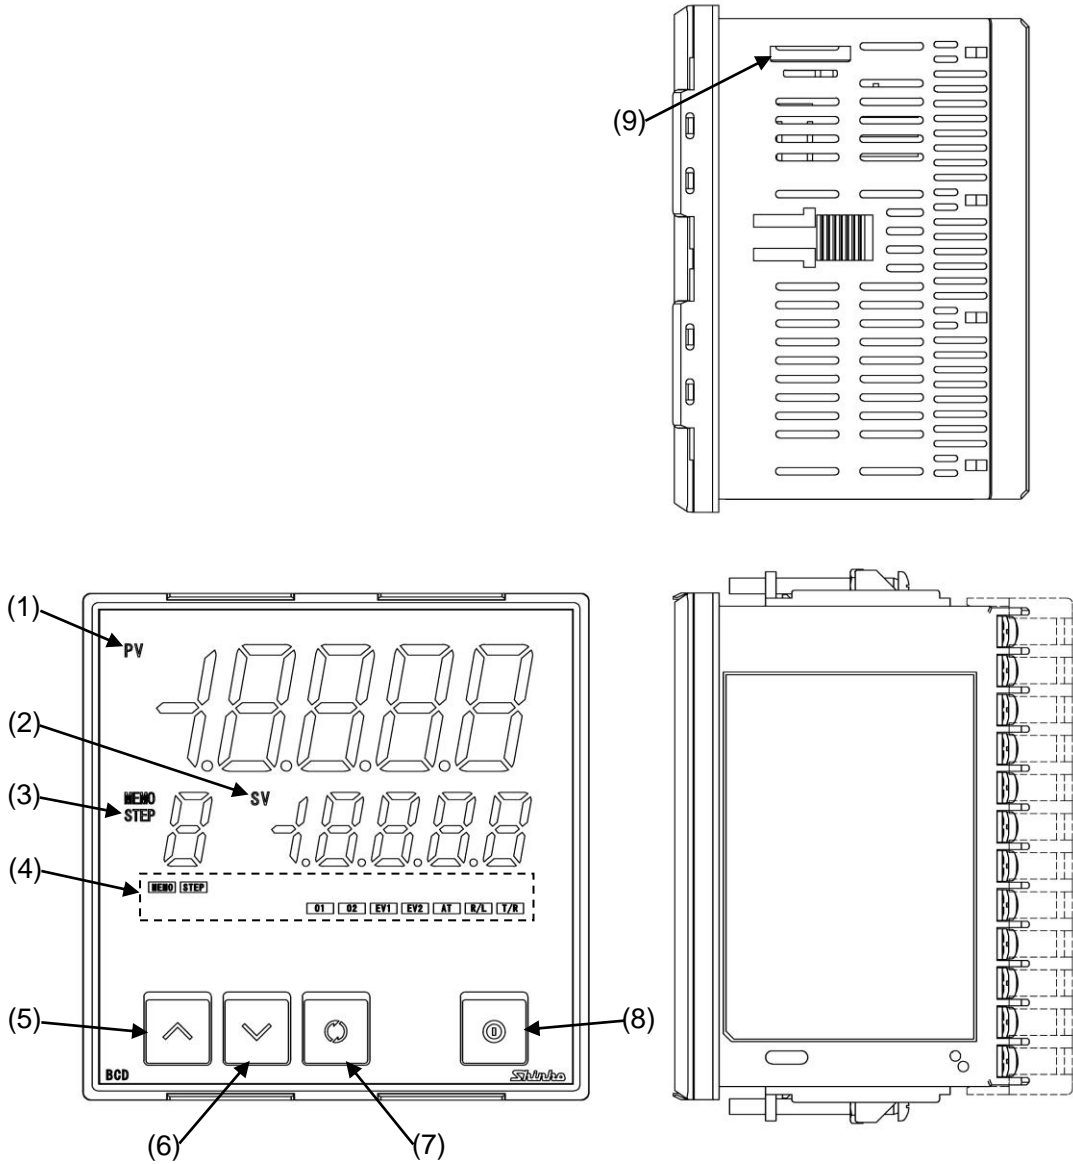

(Fig. 2-3)


Display

No.	Name	Description						
(1)	PV Display	Indicates PV. Indicates setting characters in each setting mode.						
(2)	SV Display	Indicates SV. Indicates set data in each setting mode. In Monitor mode, indicated contents differ depending on the model as follows. <table border="1" data-bbox="523 1765 1465 1973"> <thead> <tr> <th>Model</th> <th>Indicated Contents</th> </tr> </thead> <tbody> <tr> <td>BCS2</td> <td>Indicates MV, Remaining time (Program control), Step number (Program control) or Set value memory number (Fixed value control).</td> </tr> <tr> <td>BCR2, BCD2</td> <td>Indicates MV or Remaining time (Program control).</td> </tr> </tbody> </table>	Model	Indicated Contents	BCS2	Indicates MV, Remaining time (Program control), Step number (Program control) or Set value memory number (Fixed value control).	BCR2, BCD2	Indicates MV or Remaining time (Program control).
Model	Indicated Contents							
BCS2	Indicates MV, Remaining time (Program control), Step number (Program control) or Set value memory number (Fixed value control).							
BCR2, BCD2	Indicates MV or Remaining time (Program control).							
(3)	MEMO/STEP Display	Indicates Set value memory number (Fixed value control) or Step number (Program control). (For BCR2, BCD2)						

## Action Indicators

No.	Name	Description
(4)	O1 (Green)	Lit when control output OUT1 is ON. For direct current output type, flashes corresponding to the MV in 125 ms cycles.
	O2 (Yellow)	Lit when control output OUT2 (EV2, DS options) is ON. For direct current output type (DA option), flashes corresponding to the MV in 125 ms cycles.
	EV1 (Red)	Lit when Event output 1 is ON.
	EV2 (Red)	Lit when Event output 2 (EV2 option) is ON. Unlit if <input type="checkbox"/> 19 (Heating/Cooling control relay contact output) is selected in [Event output EV2 allocation].
	AT (Yellow)	Flashes while AT, 'AT on startup' or Auto-reset is performing.
	R/L (Yellow)	Lit during Remote action, selected in [Remote/Local] (EIT option).
	T/R (Yellow)	Lit during Serial communication (C5W, C5 options) TX (transmitting) output.
	MEMO (Yellow)	Lit when Set value memory number (Fixed value control) is indicated. (For BCR2, BCD2)
	STEP (Green)	Lit when a step number (Program control) is indicated. (For BCR2, BCD2)

## Key

No.	Name	Description								
(5)	UP key	Increases the numeric value. By pressing this key for 1 second during Program control, the performing step is interrupted, proceeding to the beginning of the next step. (Advance function)								
(6)	DOWN key	Decreases the numeric value.								
(7)	MODE key	Switches a setting mode, and registers the set data. By pressing this key for 3 seconds during RUN mode, the unit enters Monitor mode.								
(8)	OUT/OFF key	By pressing the  key for approx. 1 second, one of the following items selected in [OUT/OFF key function] is activated.								
		<table border="1"> <thead> <tr> <th>OUT/OFF Key Function</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Control output OFF function</td> <td>Turns control output ON or OFF.</td> </tr> <tr> <td>Auto/Manual control</td> <td>Switches the Auto/Manual control.</td> </tr> <tr> <td>Program control</td> <td>Starts/Stops the Program control.</td> </tr> </tbody> </table>	OUT/OFF Key Function	Description	Control output OFF function	Turns control output ON or OFF.	Auto/Manual control	Switches the Auto/Manual control.	Program control	Starts/Stops the Program control.
		OUT/OFF Key Function	Description							
		Control output OFF function	Turns control output ON or OFF.							
Auto/Manual control	Switches the Auto/Manual control.									
Program control	Starts/Stops the Program control.									


## Console Connector

No.	Name	Description
(9)	Console connector	By connecting the tool cable (CMD-001, sold separately), the following operations can be conducted from an external computer using the Console software SWC-BCx01M. <ul style="list-style-type: none"> <li>• Reading and setting of SV, PID and various set values</li> <li>• Reading of PV and action status</li> <li>• Function change</li> </ul>

# 3. Mounting to the Control Panel

## 3.1 External Dimensions (Scale: mm)


### BCS2

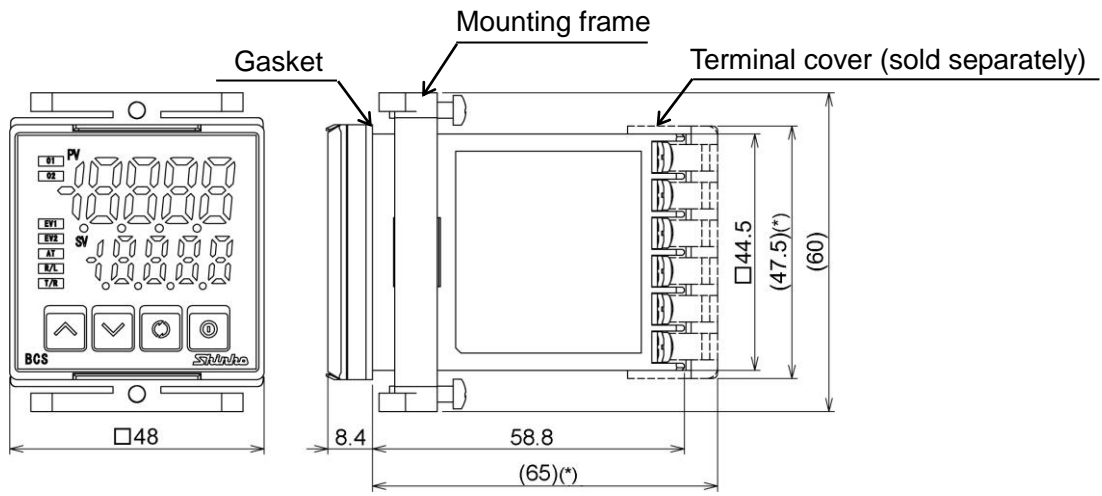

(\* ) When the terminal cover is used.

(Fig. 3.1-1)


### BCR2

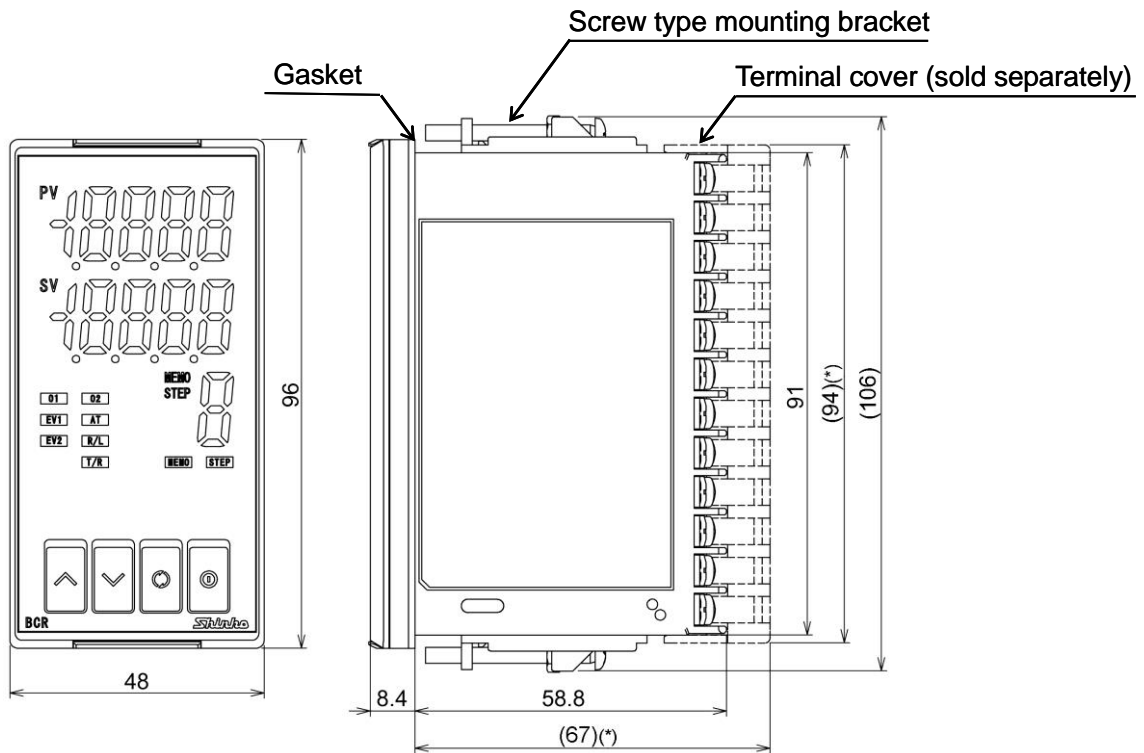

(\* ) When the terminal cover is used.

(Fig. 3.1-2)

BCD2

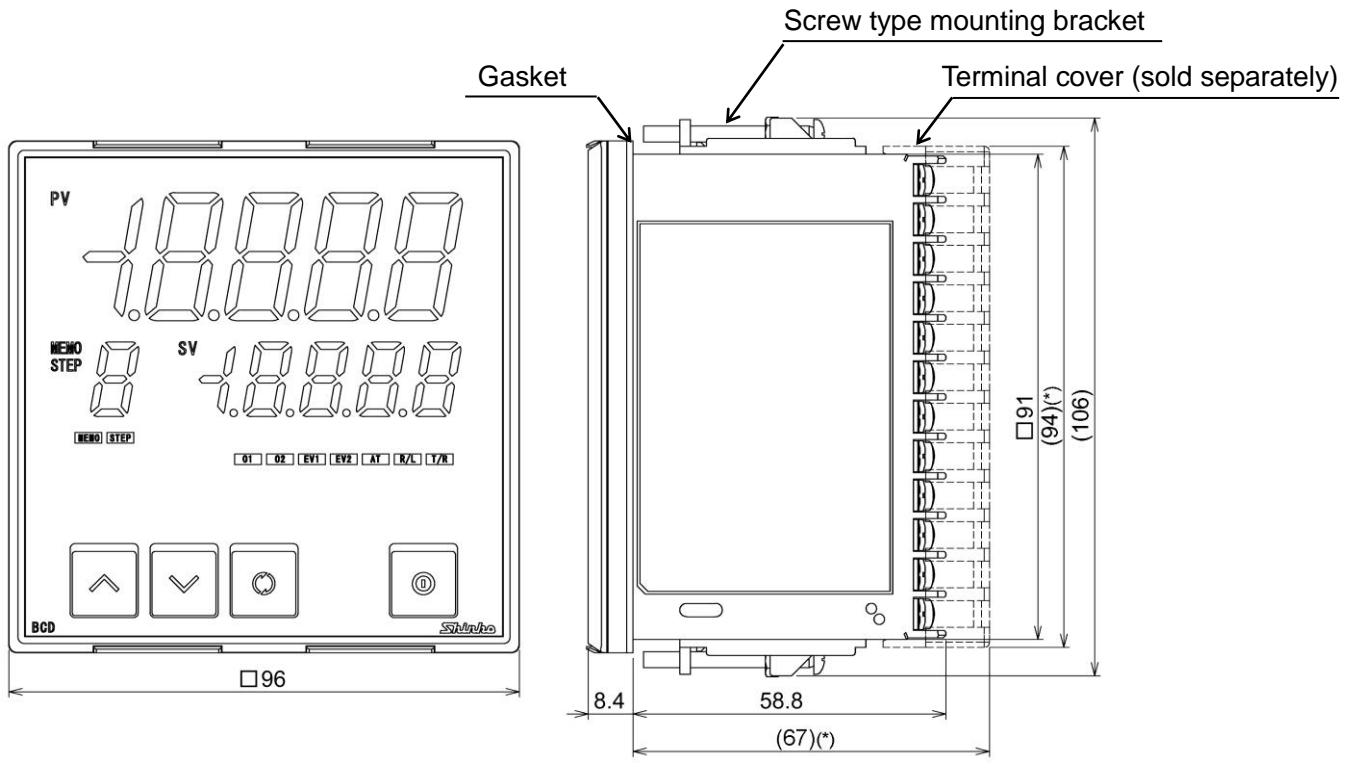

(\*) When terminal covers are used.

(Fig. 3.1-3)


### 3.2 Panel Cutout (Scale: mm)



## Caution


If lateral close mounting is used for the controller, IP66 specification (Drip-proof/Dust-proof) may be compromised, and all warranties will be invalidated.

#### BCS2

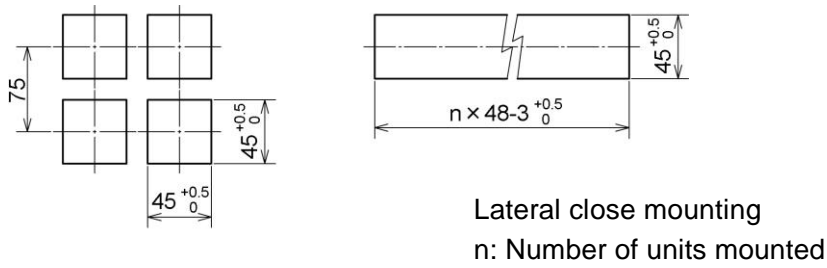


(Fig. 3.2-1)

#### BCR2

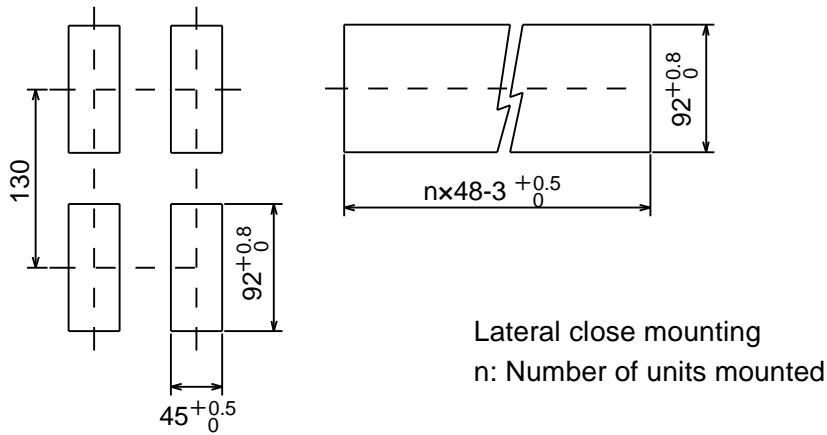

(Fig. 3.2-2)

#### BCD2

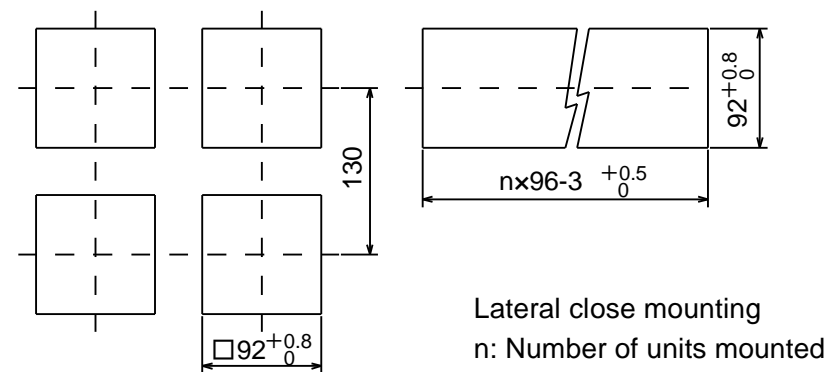


(Fig. 3.2-3)

### 3.3 CT (Current Transformer) External Dimensions (Scale: mm)

CTL-6-S-H (for 20A)

CTL-12-S36-10L1U (for 100A)

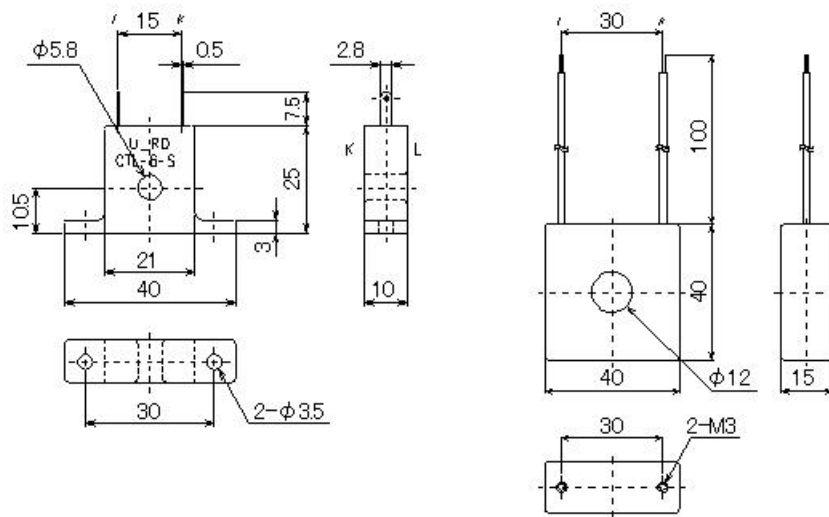

(Fig. 3.3-1)

### 3.4 Mounting to, and Removal from, the Control Panel



## Caution

As the mounting frame of the BCS2 is made of resin, do not use excessive force while tightening screws, or the mounting frame could be damaged.

Tighten screws with one rotation upon the screw tips touching the panel.

The torque is 0.15 N•m.

For the BCR2, BCD2, the torque should be 0.1 N•m.

#### 3.4.1 How to Mount the Unit

##### BCS2

Mount the controller vertically to the flat, rigid panel to ensure it adheres to the Drip-proof/Dust-proof specification (IP66).

Mountable panel thickness: 1 to 5 mm

(1) If Drip-proof/Dust-proof specification (IP66) is necessary, mount the included gasket.

If lateral close mounting is used for the controller, IP66 specification (Drip-proof/Dust-proof) may be compromised, and all warranties will be invalidated.


If Drip-proof/Dust-proof specification (IP66) is not necessary, it is not necessary to mount the gasket.

(2) Insert the controller from the front side of the control panel. (Fig. 3.4.1-1)


(3) Insert the mounting frame until it comes into contact with the panel, and fasten with screws.

Tighten screws with one rotation upon the screw tips touching the panel. (Fig. 3.4.1-2)

The torque is approximately 0.15 N•m.

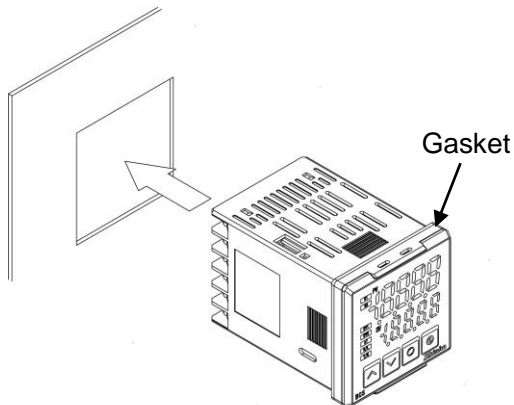

(Fig. 3.4.1-1)

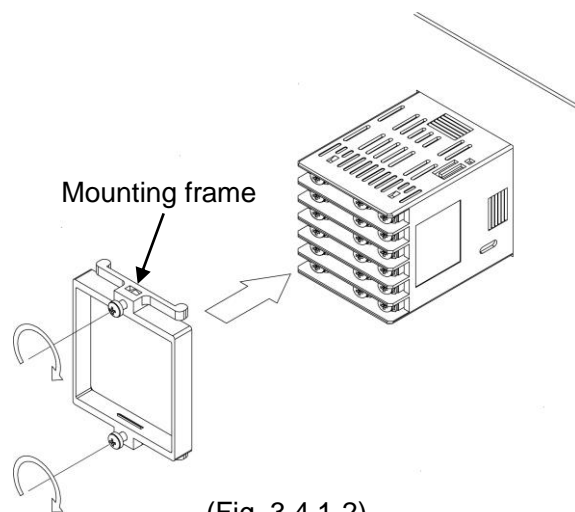

(Fig. 3.4.1-2)



## BCR2, BCD2

Mount the controller vertically to the flat, rigid panel to ensure it adheres to the Drip-proof/Dust-proof specification (IP66).


Mountable panel thickness: 1 to 7 mm

(1) For the BCR2, if Drip-proof/Dust-proof specification (IP66) is necessary, mount the included gasket.

If lateral close mounting is used for the controller, IP66 specification (Drip-proof/Dust-proof) may be compromised, and all warranties will be invalidated.

If Drip-proof/Dust-proof specification (IP66) is not necessary, it is not necessary to mount the gasket.


(2) Insert the controller from the front side of the control panel. (Fig. 3.4.1-3)

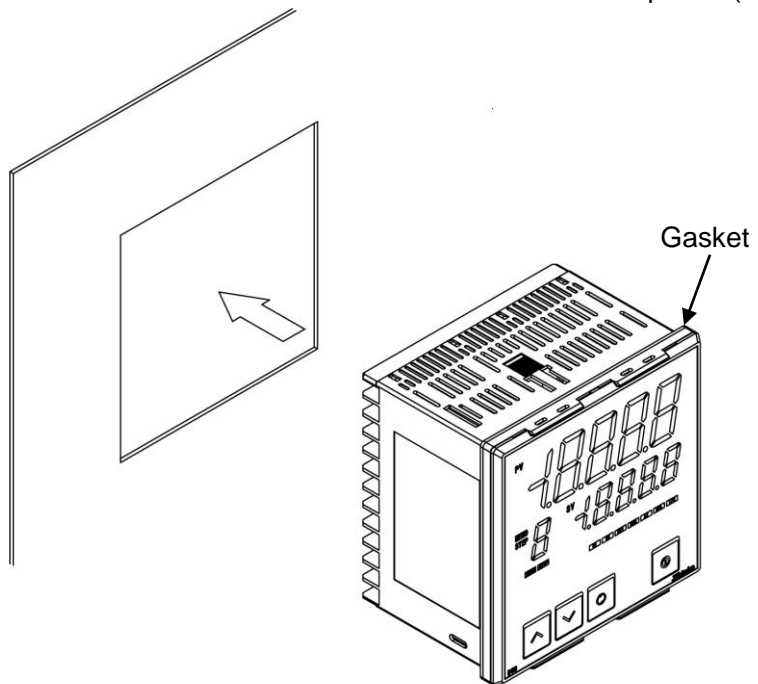

(Fig. 3.4.1-3)

(3) Attach the mounting brackets by the holes at the top and bottom of the case, and secure the controller in place with the screws.

The torque is approximately 0.1 N•m.

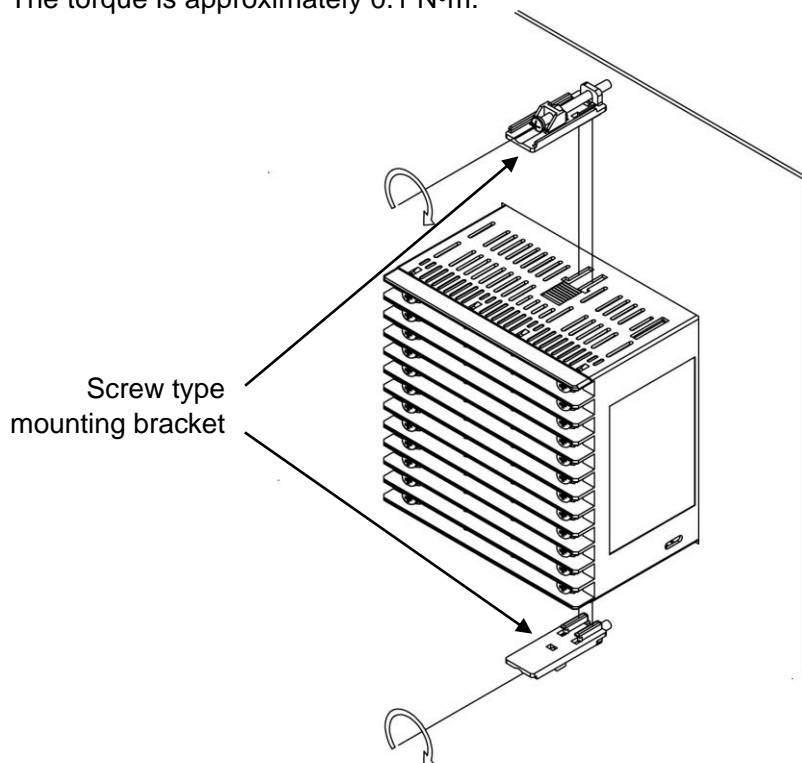


(Fig. 3.4.1-4)

### 3.4.2 How to Remove the Mounting Frame and Unit

#### BCS2 (Fig. 3.4.2-1)

- (1) Turn the power to the unit OFF, and disconnect all wires before removing the mounting frame.
  - (2) Insert a flat blade screwdriver between the mounting frame and unit (①).
  - (3) Slowly push the frame upward using the screwdriver (②), while pushing the unit toward the panel (③).
  - (4) Repeat step (2) and slowly push the frame downward using the screwdriver for the other side.
- The frame can be removed little by little by repeating these steps.

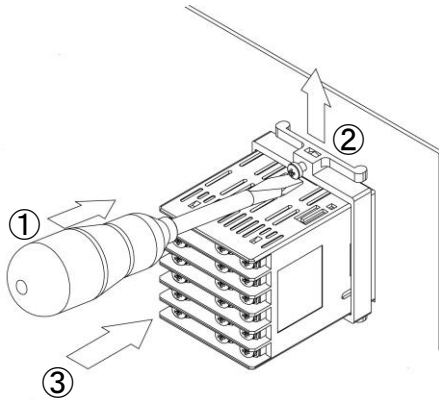

(Fig. 3.4.2-1)

#### BCR2, BCD2

- (1) Turn the power to the unit OFF, and disconnect all wires before removing the unit.
- (2) Loosen the screws of the mounting brackets, and remove the mounting brackets.
- (3) Pull the unit out from the front of the control panel.


# 4. Wiring

## ⚠ Warning

Turn the power supply to the instrument off before wiring or checking.  
Working on or touching the terminal with the power switched on may result in severe injury or death due to electric shock.


### 4.1 Terminal Arrangement

#### BCS2

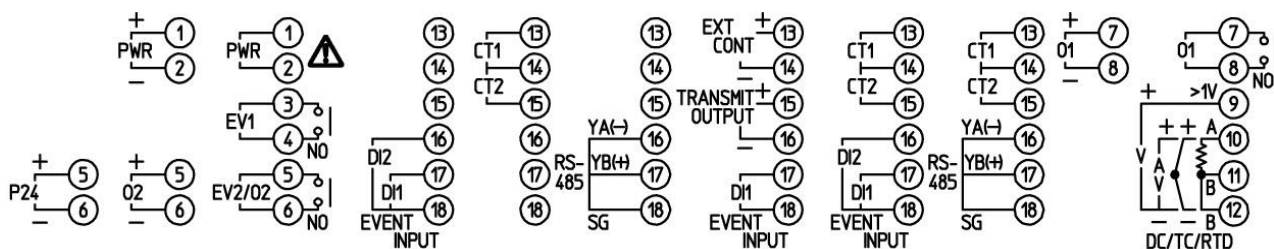

(Fig. 4.1-1)

#### BCR2, BCD2

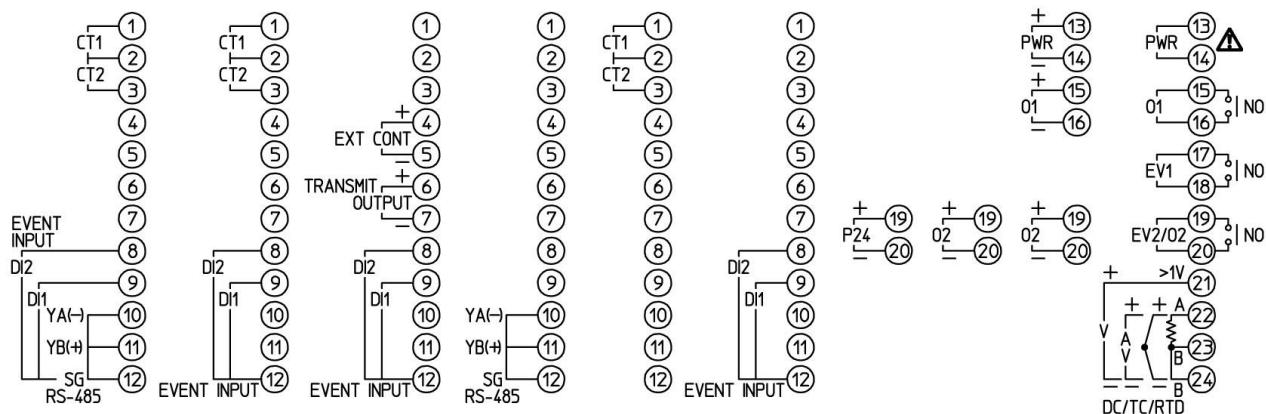


(Fig. 4.1-2)

Terminal	Description						
PWR (Power supply)	100 to 240 V AC or 24 V AC/DC For a 24 V AC/DC power source, do not confuse polarity when using direct current (DC).						
EV1	Event output EV1						
EV2	Event output EV2 (EV2 option)						
O2	Control output OUT2 (EV2, DS, DA options)						
P24	24 V DC insulated power output (P24 option)						
O1	Control output OUT1						
RTD	RTD input						
TC	Thermocouple input						
DC	Direct current, DC voltage inputs <b>For DC voltage input, (+) side input terminal number of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC differs from that of 0 to 1 V DC.</b>						
	<table border="1"> <thead> <tr> <th>Model</th> <th>Terminal Number</th> </tr> </thead> <tbody> <tr> <td>BCS2</td> <td>⑨: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑩: + side of 0 to 1 V DC</td> </tr> <tr> <td>BCR2, BCD2</td> <td>⑲: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑳: + side of 0 to 1 V DC</td> </tr> </tbody> </table>	Model	Terminal Number	BCS2	⑨: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑩: + side of 0 to 1 V DC	BCR2, BCD2	⑲: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑳: + side of 0 to 1 V DC
Model	Terminal Number						
BCS2	⑨: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑩: + side of 0 to 1 V DC						
BCR2, BCD2	⑲: + side of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC ⑳: + side of 0 to 1 V DC						
CT1	CT input 1 (C5W, EIW, W options)						
CT2	CT input 2 (C5W, EIW, W options)						
RS-485	Serial communication RS-485 (C5W, C5 options)						
EVENT INPUT	Event input DI1 (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options) Event input DI2 (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)						
EXT CONT	External setting input (EIT option)						
TRANSMIT OUTPUT	Transmission output (EIT option)						

#### 4.2 Lead Wire Solderless Terminal

Use a solderless terminal with an insulation sleeve in which an M3 screw fits as shown below. The torque should be 0.6 N•m to 1.0 N•m.

Solderless Terminal	Manufacturer	Model	Tightening Torque
Y-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25Y-3	0.6 N•m
	Japan Solderless Terminal MFG Co., Ltd.	VD1.25-B3A	
Ring-type	Nichifu Terminal Industries Co., Ltd.	TMEV1.25-3	Max 1.0 N•m
	Japan Solderless Terminal MFG Co., Ltd.	V1.25-3	

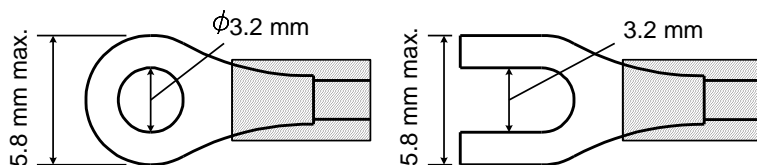


(Fig. 4.2-1)

### 4.3 Terminal Cover

#### BCS2

When using a terminal cover (sold separately), make sure the longer side is on the back right side of the case.

Pass the wires from terminals 7 to 12 into the holes of the terminal cover.

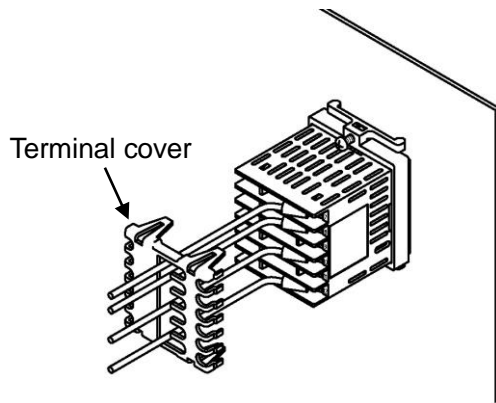


(Fig. 4.3-1)

#### BCR2


When using a terminal cover (sold separately), make sure the longer side is on the back right side of the case.

Pass the wires from terminals 13 to 24 through the left side of the terminal cover.

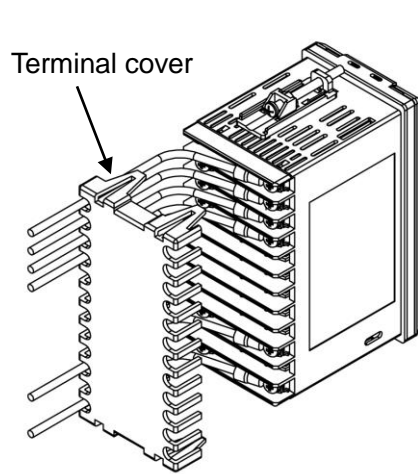

(Fig. 4.3-2)

Top of BCR2

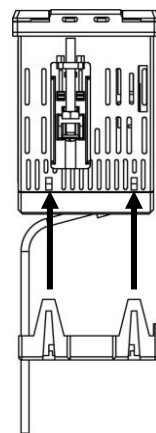


(Fig. 4.3-3)


## BCD2

When using terminal covers (sold separately), make sure the longer side is on the back right and left sides of the case.

Pass the wires from terminals 13 to 24 through between covers.

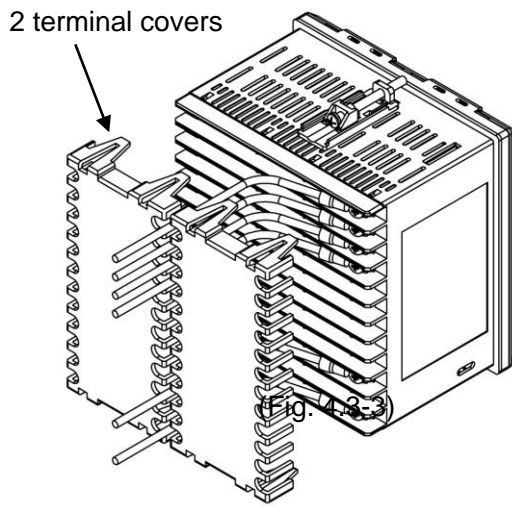

(Fig. 4.3-4)

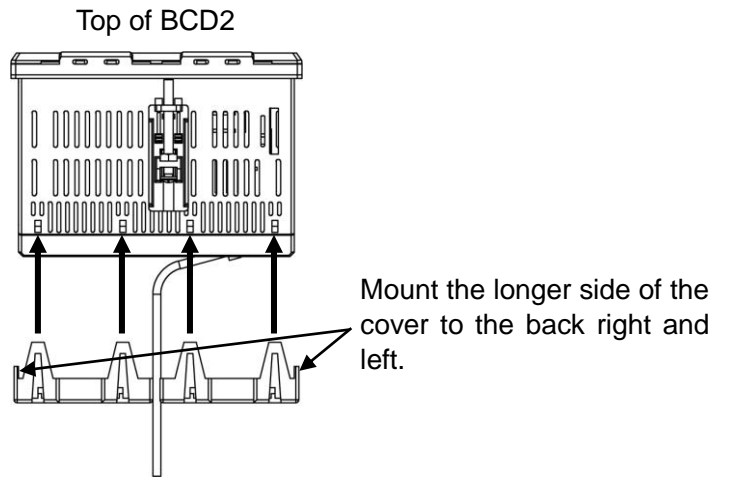

(Fig. 4.3-5)


#### 4.4 Wiring

For the terminal arrangement, refer to Section '4.1 Terminal Arrangement' (p.19).

##### 4.4.1 Power Supply

Power supply voltage is 100 to 240 V AC or 24 V AC/DC.

For a 24 V AC/DC power source, ensure polarity is correct when using direct current (DC).

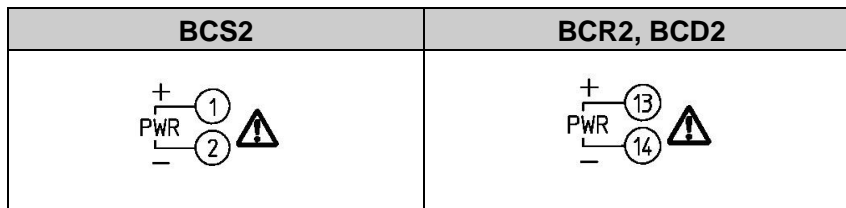

##### 4.4.2 Control Output OUT1, OUT2

When EV2, DS or DA option is ordered, control output OUT2 is available.

Specifications of Control output OUT1, OUT2 are shown below.

Relay contact	1a Control capacity: 3 A 250 V AC (resistive load), 1 A 250 V AC (inductive load $\cos\phi=0.4$ ) Electrical life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC
Non-contact voltage (for SSR drive)	12 V DC $\pm 15\%$ Max. 40 mA (short circuit protected)
Direct current	4 to 20 mA DC Load resistance: Max. 550 $\Omega$

BCS2		BCR2, BCD2	
Relay contact	Non-contact voltage, Direct current	Relay contact	Non-contact voltage, Direct current





Number of Shinko SSR units when connected in parallel (for Non-contact voltage output):





- SA-400 series: 5 units
- SA-500 series: 2 units

### 4.4.3 Input

Each input wiring is shown below.

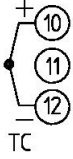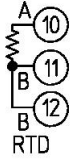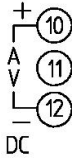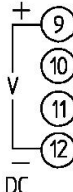For DC voltage input, (+) side input terminal number of 0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC differs from that of 0 to 1 V DC.

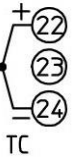BCS2			
Thermocouple	RTD	Direct current, DC voltage (0 to 1 V)	DC voltage (0 to 5 V, 1 to 5 V, 0 to 10 V)
			

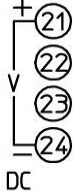BCR2, BCD2			
Thermocouple	RTD	Direct current, DC voltage (0 to 1 V)	DC voltage (0 to 5 V, 1 to 5 V, 0 to 10 V)
			







#### 4.4.4 Event Output 1, 2

Event output EV1 is a standard feature.

If EV2 option is ordered, Event output EV2 is available.

Specifications of Event output 1, 2 are shown below.

Relay contact	1a Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load $\cos\phi=0.4$ ) Electrical life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC
---------------	--

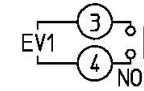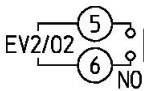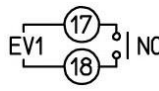
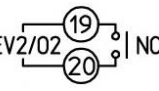
BCS2	BCR2, BCD2
 	 

#### 4.4.5 Insulated Power Output

If P24 option is ordered, the Insulated power output is available.

Specifications of Insulated power output are shown below.


Output voltage	$24 \pm 3$ V DC (at load current 30 mA DC)
Ripple voltage	Within 200 mV DC (at load current 30 mA DC)
Max load current	30 mA DC

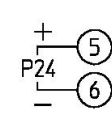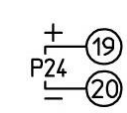BCS2	BCR2, BCD2
	

#### 4.4.6 CT Input

CT input is available when Heater burnout alarm (C5W, EIW, W options) is ordered.


**Cannot be used for detecting heater current under phase control.**

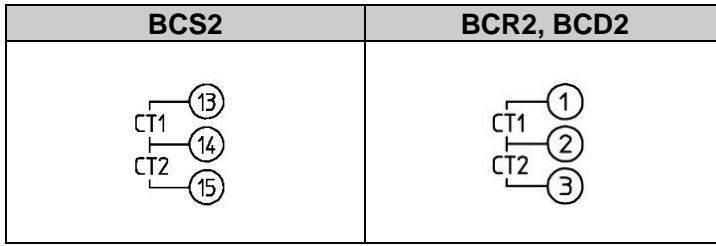

Use the CT (current transformer) provided, and pass one lead wire of the heater circuit into the hole of the CT. (Fig. 4.4.6-1)


When wiring, keep the CT wire away from AC sources or load wires to avoid the external interference.

#### BCS2

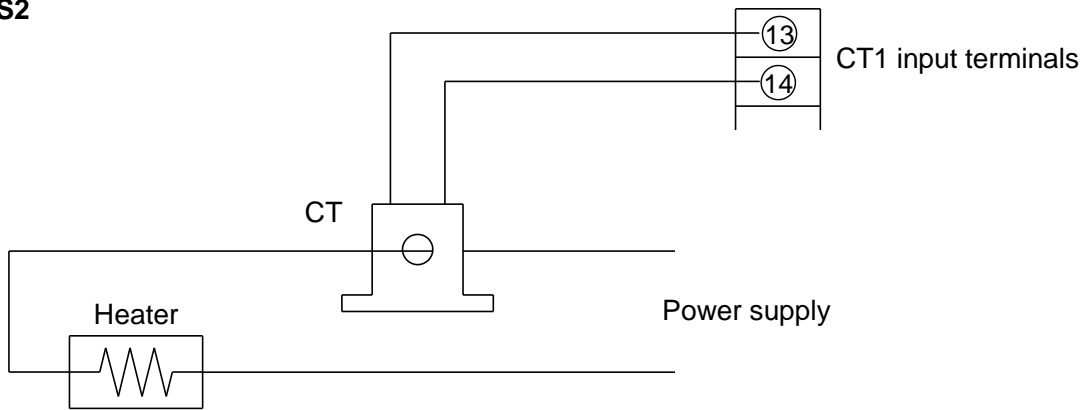


(Fig. 4.4.6-1)

If using 3-phase, pass any 2 lead wires of R, S, T into the CT, and connect them to CT1 (13-14) and CT2 (14-15) terminals. (Fig. 4.4.6-2)

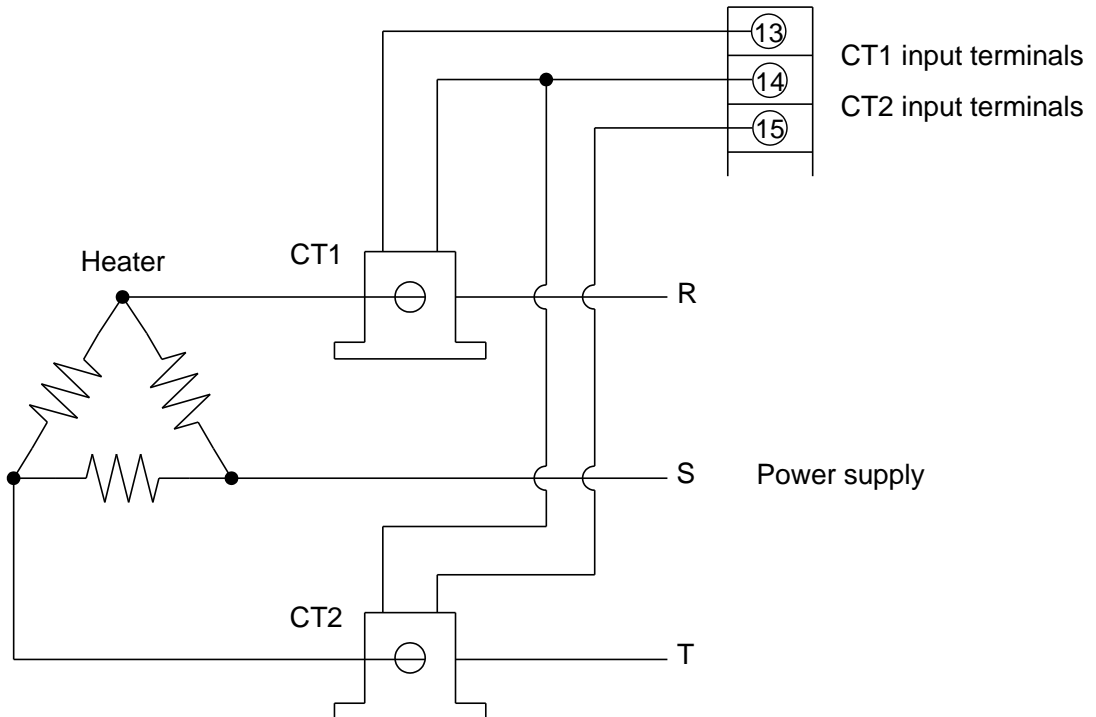


(Fig. 4.4.6-2)

## BCR2, BCD2

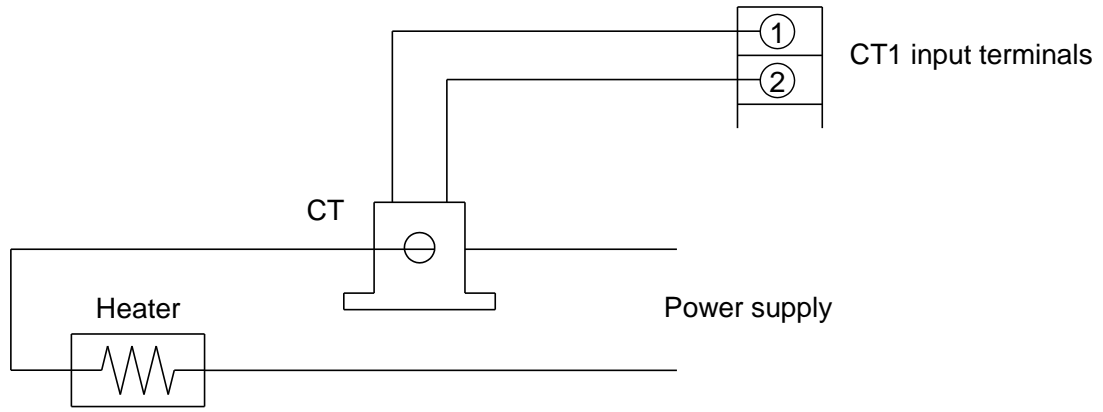

(Fig. 4.4.6-3)


If using 3-phase, pass any 2 lead wires of R, S, T into the CT, and connect them to CT1 (①-②) and CT2 (②-③) terminals. (Fig. 4.4.6-4)

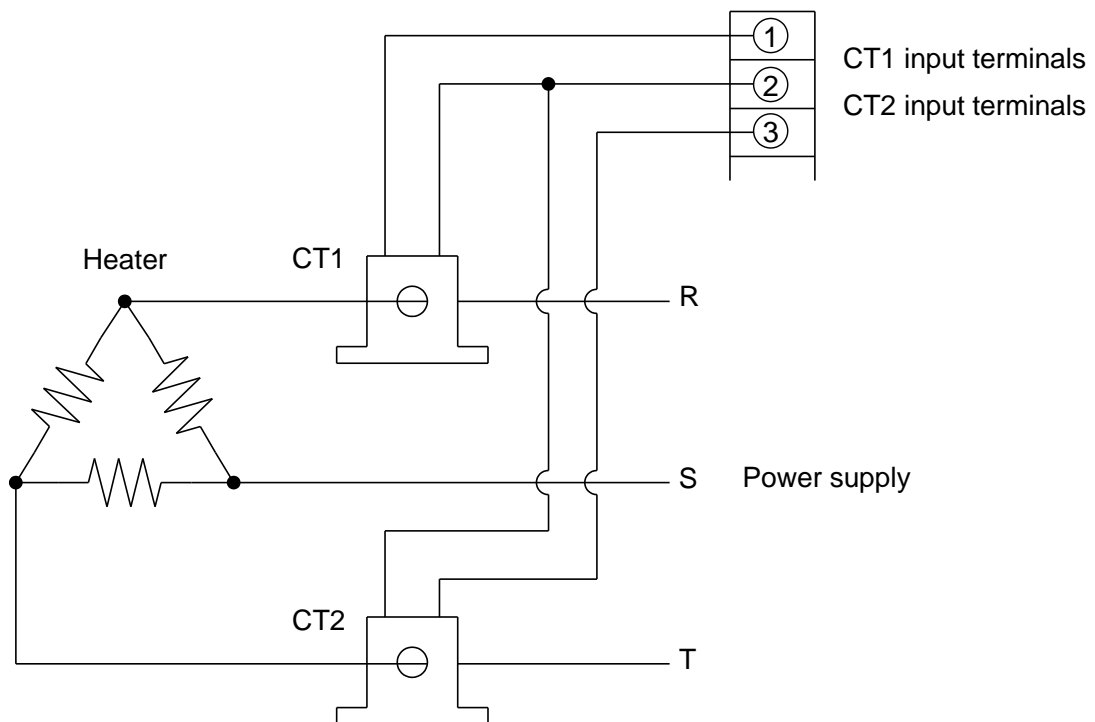

(Fig. 4.4.6-4)


#### 4.4.7 Serial Communication

If the C5W or C5 option is ordered, Serial communication is available.

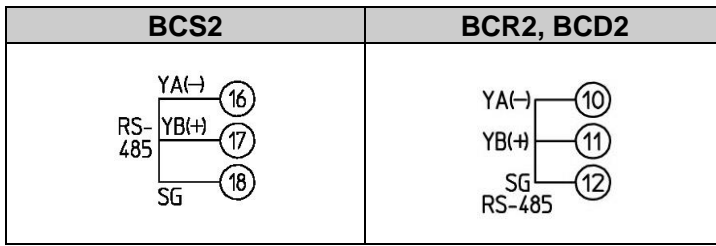


##### (1) Serial Communication

- When using USB communication cable CMC-001-1 (sold separately)

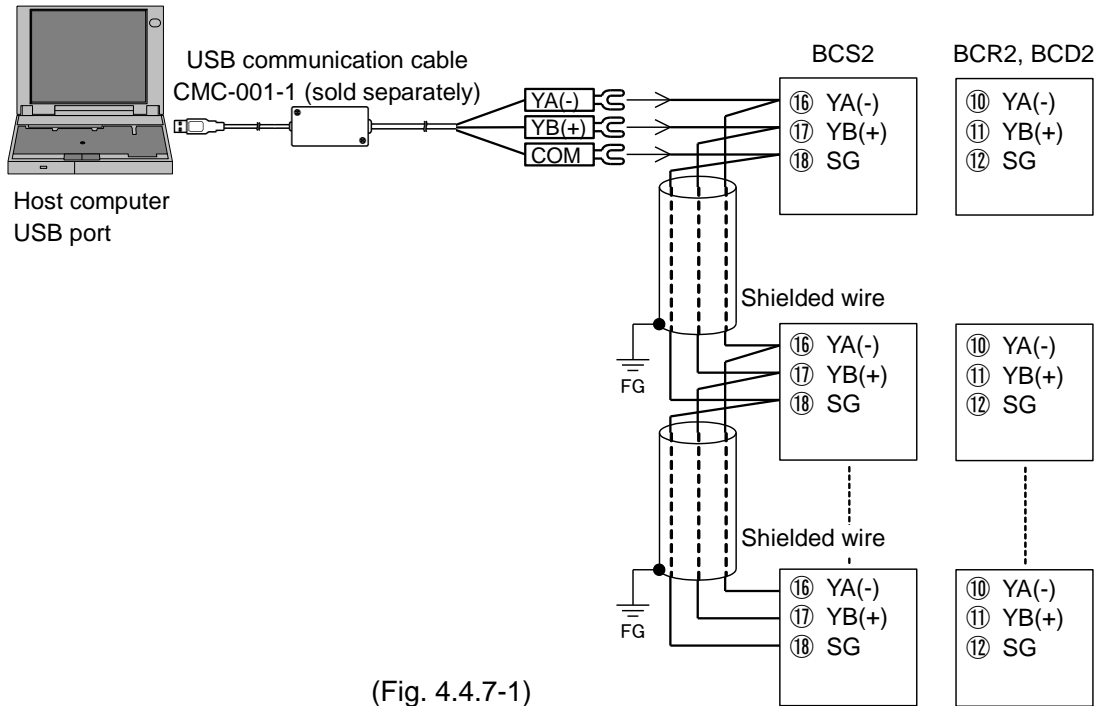

(Fig. 4.4.7-1)

- When using communication converter IF-400 (sold separately)

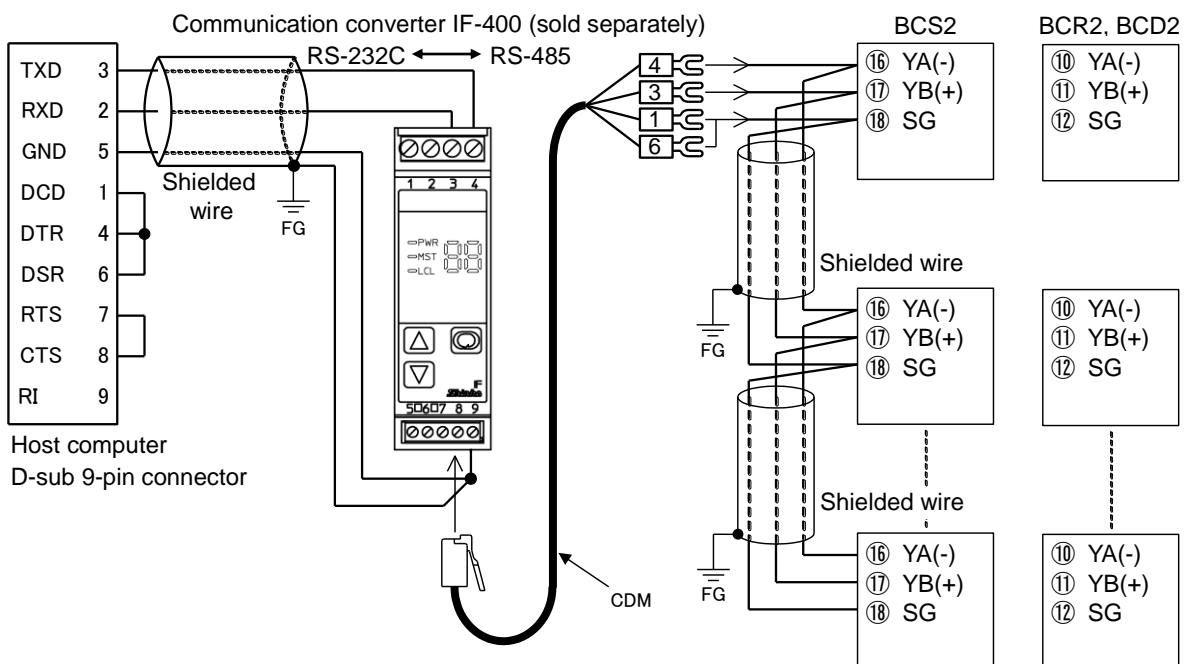

(Fig. 4.4.7-2)

### Shielded wire

Connect only one end of the shielded wire to the FG terminal so that current cannot flow to the shielded wire. If both ends of the shielded wire are connected to the FG terminal, the circuit will be closed between the shielded wire and the ground. As a result, current will run through the shielded wire and this may cause noise.

Be sure to ground FG terminal.

Recommended cable: OTSC-VB 2PX0.5SQ (made by Onamba Co., Ltd.) or equivalent (Use a twisted pair cable.)

### (2) Set value digital transmission

By connecting to Shinko programmable controllers [PC-900 or PCD-33A with the SVTC (Set value digital transmission) option], digital SV via the SVTC command can be received from programmable controllers.


### Wiring

For the PC-900, connect YA (-) to YA (-), YB (+) to YB (+), COM to SG terminal respectively.

For the PCD-33A, connect YA (-) to YA (-), YB (+) to YB (+), SG to SG terminal respectively.

Up to 31 units of the BCS2 or BCR2 or BCD2 can be connected.

The following shows a connection example of PCD-33A and BCS2, BCR2, BCD2. (Fig. 4.4.7-3)

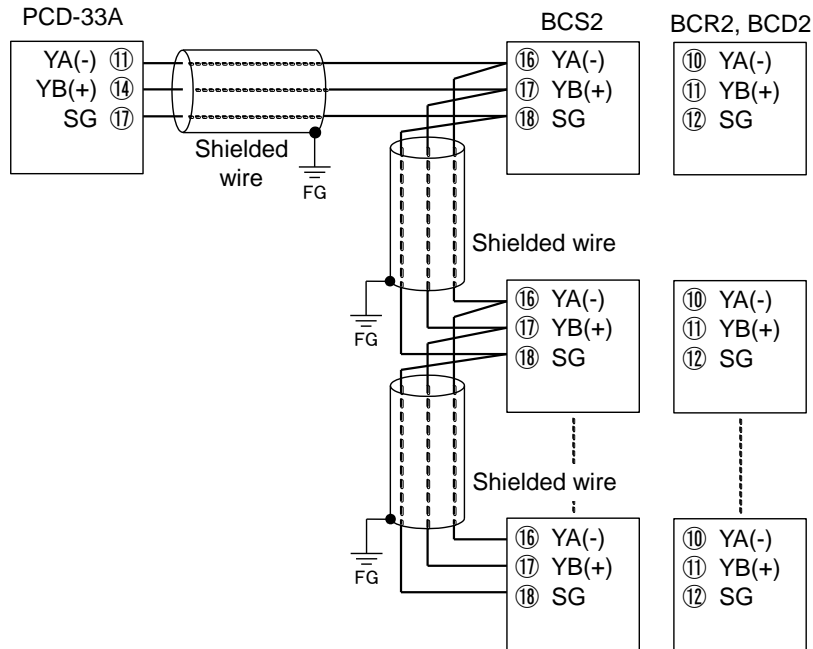

(Fig. 4.4.7-3)

#### 4.4.8 Event Input

Event Input DI1 is available for the BCS2 with Event input (EIW, EIT, EI options).

Event Input DI1 is available for the BCR2, BCD2 with Serial communication (C5W option) or Event input (EIW, EIT, EI options).

Event Input DI2 is available for the BCS2 with Event input (EIW, EI options).

Event Input DI2 is available for the BCR2, BCD2 with Serial communication (C5W option) or Event input (EIW, EIT, EI options).

Specifications of Event input are shown below.

Circuit current when closed	Approx. 16 mA
-----------------------------	---------------

BCS2		BCR2, BCD2
<b>EIW (20A), EIW (100A), EI</b>	<b>EIT</b>	<b>EIW (20A), EIW (100A), EIT, EI</b>

#### 4.4.9 External Setting Input

If the EIT option is ordered, External setting input is available.

Specifications of External setting input are shown below.

Setting signal	Direct current 4 to 20 mA DC
Allowable input	50 mA DC max.
Input impedance	50 Ω max.
Input sampling period	125 ms

BCS2	BCR2, BCD2

#### 4.4.10 Transmission Output

If the EIT option is ordered, Transmission output is available.

Specifications of Transmission output are shown below.

Resolution	12000
Output	4 to 20 mA DC Load resistance: Max 550 Ω
Output accuracy	Within ±0.3% of Transmission output span











BCS2	BCR2, BCD2







## 5.2 Modes

Mode	Description	
RUN mode	When power is turned ON, the unit enters RUN mode. The PV Display indicates PV, and the SV Display indicates SV. Control starts from previous status (last shutdown). By pressing the  key for approx. 1 sec, one of the following functions selected in [OUT/OFF key function] is activated.	
	<b>OUT/OFF Key Function</b>	
	<b>Description</b>	
	Control output OFF function	Turns the control output ON or OFF.
	Auto/Manual control	Switches the Auto/Manual control.
	Program control	Starts/Stops the Program control.
Monitor mode	By pressing the  key for approx. 3 sec in RUN mode, the unit enters Monitor mode. The PV Display indicates PV, and the SV Display indicates MV. Every time the  key is pressed, the following is indicated. Indicated contents differ depending on the model.	
	<b>Model</b>	<b>Indicated Contents</b>
	BCS2	Indicates MV, Remaining time (Program control), Step number (Program control) or Set value memory number (Fixed value control).
	BCR2, BCD2	Indicates MV or Remaining time (Program control).
Initial setting mode	By pressing the  and  keys (in that order) together for approx. 3 sec in RUN mode, the unit enters Initial setting mode. The following items can be set. Input type, Scaling high limit/low limit, Event output EV1/EV2 (EV2 option) allocation, Event input DI1/DI2 allocation (*), SV1, etc.	
Main setting mode	By pressing the  key in RUN mode, the unit enters Main setting mode. SV can be set. If 'Program control' is selected in [OUT/OFF key function], SV, Time and Wait value for Steps 1 to 9 can be set. If 'Set value memory number' is selected in [Event input DI1/DI2 allocation] (*), SV1 to SV4 can be set.	
Sub setting mode	By pressing the  and  keys (in that order) together in RUN mode, the unit enters Sub setting mode. The following items can be set. AT Perform, P, I, D, Direct/Reverse action, Event output EV1/EV2 (EV2 option), etc.	
Engineering mode	By pressing the  and  keys (in that order) together for approx. 3 sec in RUN mode, the unit enters Engineering mode. The following items can be set. Set value lock, Event input DI1/DI2 allocation (*), Event output EV1/EV2 (EV2 option) allocation, Sensor correction, PV filter time constant, Program control, OUT/OFF key function, Controller/Converter, etc.	

(\*) Event input DI1 allocation: BCS2 with EIW, EIT, EI options, BCR2/BCD2 with C5W, EIW, EIT, EI options)

Event input DI2 allocation: BCS2 with EIW, EI options, BCR2/BCD2 with C5W, EIW, EIT, EI options)

### 5.3 Basic Operation after Power-ON

After the unit is mounted to the control panel and wiring is completed, operate the unit following the procedures below.

#### (1) Turn the power supply to the unit ON

After the power is turned ON, the PV Display indicates the input type, and the SV Display indicates the Input range high limit value (for thermocouple, RTD inputs) or Scaling high limit value (for DC voltage, current inputs) for approximately 3 seconds. (Table 5.3-1)

During this time, all outputs and the indicators are in OFF status.

Control will then start, indicating the PV in the PV Display and SV in the SV Display.


While the control output OFF function is working, the PV Display indicates [OFF].

Indication differs depending on the selection in [Indication when control output OFF].

(Table 5.3-1)

Sensor Input	°C		°F	
	PV Display	SV Display	PV Display	SV Display
K	600C	1370	600F	2498
	60.C	4000	60.F	7520
J	J00C	1000	J00F	1832
R	r00C	1760	r00F	3200
S	400C	1760	400F	3200
B	600C	1820	600F	3308
E	E00C	0800	E00F	1472
T	r0.C	4000	r0.F	7520
N	r00C	1300	r00F	2372
PL-II	PL2C	1390	PL2F	2534
C(W/Re5-26)	c00C	2315	c00F	4199
Pt100	Pf.C	8500	Pf.F	15620
JPt100	JPf.C	5000	JPf.F	9320
Pt100	Pf0C	0850	Pf0F	1562
JPt100	JPf0C	0500	JPf0F	0932
4 to 20 mA DC	420A	Scaling high limit value		
0 to 20 mA DC	020A			
0 to 1 V DC	001V			
0 to 5 V DC	005V			
1 to 5 V DC	105V			
0 to 10 V DC	010V			

When power is turned ON, and any errors are found, the following error codes are indicated in the PV Display.

To release the error code, press the  key.

Error Code	Error Contents
Er01	Non-volatile IC memory is defective.
Er02	Data writing (in non-volatile IC memory) error when power failure occurs.

#### (2) Enter each value.

Refer to Sections '6. Initial Setting' (p.37) to '8. Operation and Settings of Standard Functions' (p.96):

Enter each value: Input type, Control action (PID control, ON/OFF control, etc), Direct/Reverse action, SV, PID constants, Event output EV1 allocation, etc.

### (3) Turn the load circuit power ON

Control starts, so as to reach, and then maintain the control target at the SV.

#### Error codes during operation

If errors occur during operation, error codes below are indicated in the PV Display.

Error Code	Error Contents
Er05	PV has exceeded Input range high limit value (scaling high limit value for DC voltage, current inputs).
Er06	PV has dropped below Input range low limit value (scaling low limit value for DC voltage, current inputs).
Er07	Input burnout, or PV has exceeded the Indication range and Control range.
Er10	Hardware malfunction

#### Indication Range and Control Range

Input Type	Indication Range and Control Range
Thermocouple	[Input range low limit – 50°C (100°F)] to [Input range high limit + 50°C (100°F)]
RTD	[Input range low limit – Input span x 1%] to [Input range high limit + 50°C (100°F)]
DC voltage, Direct current	[Scaling low limit value – Scaling span x 1%] to [Scaling high limit value + Scaling span x 10%]

#### Input error (Overscale, Underscale)

Overscale occurs if PV has exceeded Input range high limit value (Scaling high limit value for DC voltage, current inputs). PV and error code [Er05] are indicated in the PV Display alternately.

Underscale occurs if PV has dropped below Input range low limit value (Scaling low limit value for DC voltage, current inputs). PV and error code [Er06] are indicated in the PV Display alternately.

For manual control, the preset MV is outputted.

#### Burnout

If PV has exceeded Indication range and Control range, [----] and [Er07] are alternately indicated in the PV Display.

If PV has dropped below Indication range and Control range, [----] and [Er07] are alternately indicated in the PV Display.

OUT1 and OUT2 are turned OFF (OUT1/OUT2 low limit value for Direct current output).

For manual control, the preset MV is outputted.

If thermocouple or RTD input is burnt out, or if DC voltage (0 to 1 V DC) input is disconnected, [----] and [Er07] are alternately indicated in the PV Display.

If DC voltage or Direct current input is disconnected, [----] and [Er07] are alternately indicated in the PV Display for 4 to 20 mA DC and 1 to 5 V DC inputs.

For 0 to 20 mA DC, 0 to 5 V DC and 0 to 10 V DC inputs, the PV display indicates the value corresponding with 0 mA or 0 V DC input.

[Output status when input errors occur] can be used only for controllers using Direct current and voltage inputs, and Direct current output.

Output status differs depending on selection in [Output status when input errors occur].

Output status when input errors occur	Contents, Indication	Output Status			
		OUT1		OUT2	
		Direct (Cooling) action	Reverse (Heating) action	Direct (Cooling) action	Reverse (Heating) action
on□□	Indicates [----] and [Er-07] alternately.	ON (20mA) or OUT1 high limit value (*)	OFF (4mA) or OUT1 low limit value	OFF or OUT2 low limit value	ON or OUT2 high limit value (*)
off□□		OFF (4mA) or OUT1 low limit value			OFF or OUT2 low limit value
on□□	Indicates [----] and [Er-07] alternately.	OFF (4mA) or OUT1 low limit value	ON (20mA) or OUT1 high limit value (*)	OFF or OUT2 low limit value	OFF or OUT2 low limit value
off□□			OFF (4mA) or OUT1 low limit value		

(\*) Outputs a value between OFF (4mA) and ON (20mA) or between OUT1 (or OUT2) low limit value and OUT1 (or OUT2) high limit value, depending on deviation.

## 6. Initial Setting

Setup (setting the Input type, Event output allocation, SV, etc.) should be done before using this controller, according to the user's conditions.

Perform setup in Initial setting mode.

Setting items in Initial setting mode are shown in (Table 6.1).

If the user's specification is the same as the factory default value of this instrument, or if user's instrument has already been installed in a system, initial settings are not necessary.

Proceed to Section '7. Settings' (p.53).

**(Table 6.1)**

Setting Items in Initial Setting Mode	Factory Default
Input type	K -200 to 1370°C
Scaling high limit	1370°C
Scaling low limit	-200°C
Decimal point place	No decimal point
Event output EV1 allocation	No event
EV1 alarm value 0 Enabled/Disabled	Disabled
EV1 alarm value	0°C
EV1 high limit alarm value	0°C
EV1 alarm hysteresis	1.0°C
EV1 alarm delay time	0 sec
EV1 alarm Energized/De-energized	Energized
Event output EV2 allocation (EV2 option)	No event
EV2 alarm value 0 Enabled/Disabled (EV2 option)	Disabled
EV2 alarm value (EV2 option)	0°C
EV2 high limit alarm value (EV2 option)	0°C
EV2 alarm hysteresis (EV2 option)	1.0°C
EV2 alarm delay time (EV2 option)	0 sec
EV2 alarm Energized/De-energized (EV2 option)	Energized
Heater burnout alarm 1 value (C5W, EIW, W options)	0.0 A
Heater burnout alarm 2 value (C5W, EIW, W options)	0.0 A
Loop break alarm time	0 minutes
Loop break alarm span	0°C
Event input DI1 allocation (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	No event
Event input DI2 allocation (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	No event
External setting input high limit (EIT option)	1370°C
External setting input low limit (EIT option)	-200°C
Transmission output type (EIT option)	PV transmission
Transmission output high limit (EIT option)	1370°C
Transmission output low limit (EIT option)	-200°C
SV1	0°C
SV2 (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	0°C
SV3 (BCS2: EIW, EI option, BCR2/BCD2: C5W, EIW, EIT, EI options)	0°C
SV4 (BCS2: EIW, EI option, BCR2/BCD2: C5W, EIW, EIT, EI options)	0°C


## 6.1 Example of Initial Setting

(e.g.) BCS2R00-00



Initial Setting Items	Example
Input type	K -200.0 to 400.0°C
Event output EV1 allocation	High limit alarm
EV1 alarm value	20.0°C (Deviation setting from SV)
SV	200.0°C (Fixed value control)

PID control is performed. PID constants are calculated by performing AT.

### Alarm action

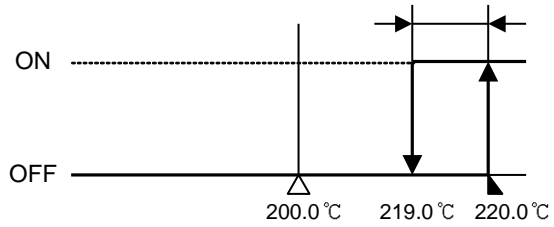

(Fig. 6.1-1)

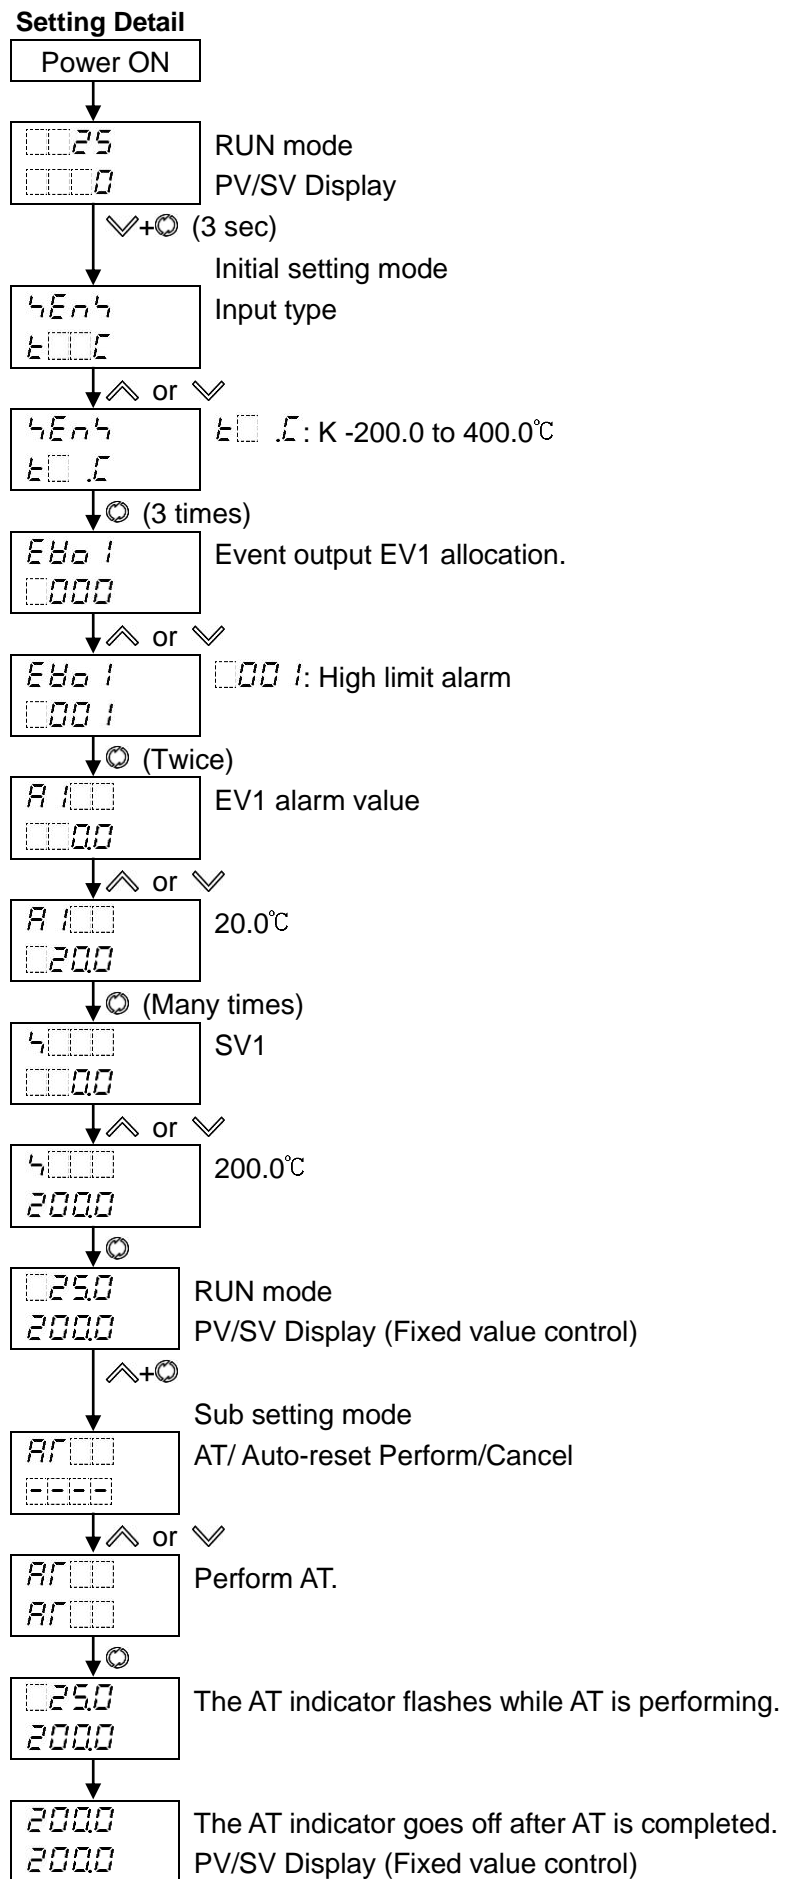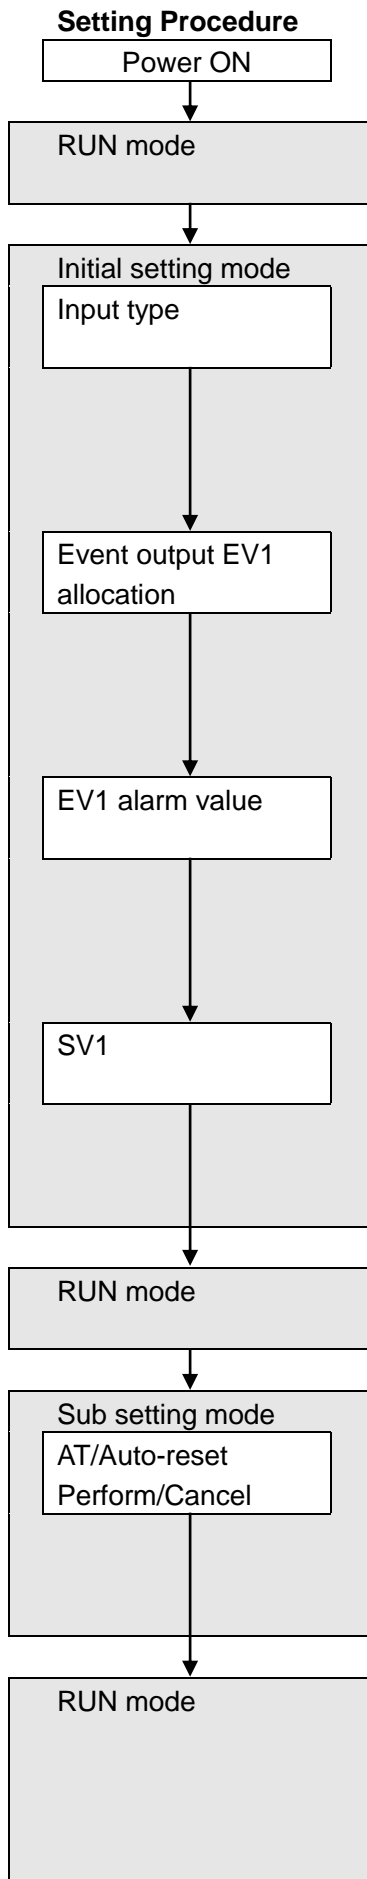

## 6.2 Initial Setting Mode


To enter Initial setting mode, press and hold the  $\nabla$  and  $\odot$  keys (in that order) for 3 seconds in RUN mode.

To set (or select) each setting item, use the  $\wedge$  or  $\nabla$  key.

To register each setting item, press the  $\odot$  key.

Explanation of setting item:




- Upper left: PV Display: Indicates setting characters.
- Lower left: SV Display: Indicates factory default.
- Right side: Indicates the setting item, explanation of its function, and setting range (or selection item).

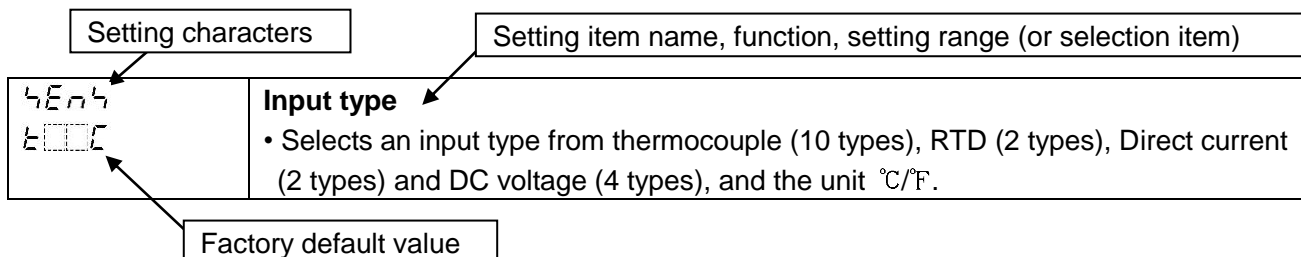

Characters, Factory Default	Setting Item, Function, Setting Range	
4En4 E000	<b>Input type</b> • Selects an input type from thermocouple (10 types), RTD (2 types), Direct current (2 types) and DC voltage (4 type), and the unit °C/°F. • When changing the input from DC voltage to other inputs, remove the sensor connected to this controller first, then change the input. If the input is changed with the sensor connected, the input circuit may break. • When changing an input type, refer to Section “8.10 Items to be Initialized by Changing Settings” (p.96). • Selection item:	
E000	K	-200 to 1370°C
E000	K	-328 to 2498°F
E0.0	K	-200.0 to 400.0°C
E0.0	K	-328.0 to 752.0°F
J000	J	-200 to 1000°C
J000	J	-328 to 1832°F
R000	R	0 to 1760°C
R000	R	32 to 3200°F
S000	S	0 to 1760°C
S000	S	32 to 3200°F
B000	B	0 to 1820°C
B000	B	32 to 3308°F
E000	E	-200 to 800°C
E000	E	-328 to 1472°F
T0.0	T	-200.0 to 400.0°C
T0.0	T	-328.0 to 752.0°F
N000	N	-200 to 1300°C
N000	N	-328 to 2372°F
PL2C	PL-II	0 to 1390°C
PL2F	PL-II	32 to 2534°F
C000	C(W/Re5-26)	0 to 2315°C
C000	C(W/Re5-26)	32 to 4199°F
Pt1C	Pt100	-200.0 to 850.0°C
Pt1F	Pt100	-328.0 to 1562.0°F
JPt1C	JPt100	-200.0 to 500.0°C
JPt1F	JPt100	-328.0 to 932.0°F
Pt0C	Pt100	-200 to 850°C
Pt0F	Pt100	-328 to 1562°F
JPt0C	JPt100	-200 to 500°C
JPt0F	JPt100	-328 to 932°F
420A	4 to 20 mA DC	-2000 to 10000
020A	0 to 20 mA DC	-2000 to 10000
001B	0 to 1 V DC	-2000 to 10000
005B	0 to 5 V DC	-2000 to 10000
105B	1 to 5 V DC	-2000 to 10000
010B	0 to 10 V DC	-2000 to 10000
4FLH 1370	<b>Scaling high limit</b> • Sets scaling high limit value. • Setting range: Scaling low limit value to Input range high limit value DC voltage, current inputs: -2000 to 10000 (*1)	

(\*1) The placement of the decimal point follows the selection.



Characters, Factory Default	Setting Item, Function, Setting Range																																																										
4LLL -200	<b>Scaling low limit</b> • Sets scaling low limit value. • Setting range: Input range low limit value to Scaling high limit value DC voltage, current inputs: -2000 to 10000 (*1)																																																										
dP□□ □□□□	<b>Decimal point place</b> • Selects decimal point place. • Selection item: <table border="1" data-bbox="424 389 1481 555"> <tr> <td data-bbox="424 389 552 434">□□□□</td> <td data-bbox="552 389 1481 434">No decimal point</td> </tr> <tr> <td data-bbox="424 434 552 479">□□□□</td> <td data-bbox="552 434 1481 479">1 digit after decimal point</td> </tr> <tr> <td data-bbox="424 479 552 524">□□□□</td> <td data-bbox="552 479 1481 524">2 digits after decimal point</td> </tr> <tr> <td data-bbox="424 524 552 555">□□□□</td> <td data-bbox="552 524 1481 555">3 digits after decimal point</td> </tr> </table> Available only for DC voltage and current inputs		□□□□	No decimal point	□□□□	1 digit after decimal point	□□□□	2 digits after decimal point	□□□□	3 digits after decimal point																																																	
□□□□	No decimal point																																																										
□□□□	1 digit after decimal point																																																										
□□□□	2 digits after decimal point																																																										
□□□□	3 digits after decimal point																																																										
EBo 1 □□□□	<b>Event output EV1 allocation</b> • Selects Event output EV1 allocation from the Event Output Allocation Table below. • When changing Event output EV1 allocation, refer to Section “8.10 Items to be Initialized by Setting Changes” (p.96). • Selection item: <b>Event Output Allocation Table</b> <table border="1" data-bbox="424 819 1481 2096"> <tr> <td data-bbox="424 819 552 864">□□□□</td> <td data-bbox="552 819 1027 864">No event</td> <td data-bbox="1027 819 1481 864"></td> </tr> <tr> <td data-bbox="424 864 552 909">□□□□</td> <td data-bbox="552 864 1027 909">Alarm output, High limit alarm</td> <td data-bbox="1027 864 1481 909"></td> </tr> <tr> <td data-bbox="424 909 552 954">□□□□</td> <td data-bbox="552 909 1027 954">Alarm output, Low limit alarm</td> <td data-bbox="1027 909 1481 954"></td> </tr> <tr> <td data-bbox="424 954 552 999">□□□□</td> <td data-bbox="552 954 1027 999">Alarm output, High/Low limits alarm</td> <td data-bbox="1027 954 1481 999"></td> </tr> <tr> <td data-bbox="424 999 552 1043">□□□□</td> <td data-bbox="552 999 1027 1043">Alarm output, High/Low limits independent alarm</td> <td data-bbox="1027 999 1481 1043"></td> </tr> <tr> <td data-bbox="424 1043 552 1088">□□□□</td> <td data-bbox="552 1043 1027 1088">Alarm output, High/Low limit range alarm</td> <td data-bbox="1027 1043 1481 1088"></td> </tr> <tr> <td data-bbox="424 1088 552 1133">□□□□</td> <td data-bbox="552 1088 1027 1133">Alarm output, High/Low limit range independent alarm</td> <td data-bbox="1027 1088 1481 1133"></td> </tr> <tr> <td data-bbox="424 1133 552 1178">□□□□</td> <td data-bbox="552 1133 1027 1178">Alarm output, Process high alarm</td> <td data-bbox="1027 1133 1481 1178"></td> </tr> <tr> <td data-bbox="424 1178 552 1223">□□□□</td> <td data-bbox="552 1178 1027 1223">Alarm output, Process low alarm</td> <td data-bbox="1027 1178 1481 1223"></td> </tr> <tr> <td data-bbox="424 1223 552 1267">□□□□</td> <td data-bbox="552 1223 1027 1267">Alarm output, High limit with standby alarm</td> <td data-bbox="1027 1223 1481 1267"></td> </tr> <tr> <td data-bbox="424 1267 552 1312">□□□□</td> <td data-bbox="552 1267 1027 1312">Alarm output, Low limit with standby alarm</td> <td data-bbox="1027 1267 1481 1312"></td> </tr> <tr> <td data-bbox="424 1312 552 1357">□□□□</td> <td data-bbox="552 1312 1027 1357">Alarm output, High/Low limits with standby alarm</td> <td data-bbox="1027 1312 1481 1357"></td> </tr> <tr> <td data-bbox="424 1357 552 1402">□□□□</td> <td data-bbox="552 1357 1027 1402">Alarm output, High/Low limits with standby independent alarm</td> <td data-bbox="1027 1357 1481 1402"></td> </tr> <tr> <td data-bbox="424 1402 552 1447">□□□□</td> <td data-bbox="552 1402 1027 1447">Heater burnout alarm output</td> <td data-bbox="1027 1402 1481 1447"></td> </tr> <tr> <td data-bbox="424 1447 552 1491">□□□□</td> <td data-bbox="552 1447 1027 1491">Loop break alarm output</td> <td data-bbox="1027 1447 1481 1491"></td> </tr> <tr> <td data-bbox="424 1491 552 1536">□□□□</td> <td data-bbox="552 1491 1027 1536">Time signal output</td> <td data-bbox="1027 1491 1481 1536">Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].</td> </tr> <tr> <td data-bbox="424 1536 552 1581">□□□□</td> <td data-bbox="552 1536 1027 1581">Output during AT</td> <td data-bbox="1027 1536 1481 1581">Turns ON during AT.</td> </tr> <tr> <td data-bbox="424 1581 552 1626">□□□□</td> <td data-bbox="552 1581 1027 1626">Pattern end output</td> <td data-bbox="1027 1581 1481 1626">Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.</td> </tr> <tr> <td data-bbox="424 1626 552 2096">□□□□</td> <td data-bbox="552 1626 1027 2096">Output by communication command</td> <td data-bbox="1027 1626 1481 2096">Turns OFF or ON by communication command 00E4H during Serial communication.            B0 EV1 output    0: OFF                                  1: ON            B1 EV2 output    0: OFF                                  1: ON         </td> </tr> </table>		□□□□	No event		□□□□	Alarm output, High limit alarm		□□□□	Alarm output, Low limit alarm		□□□□	Alarm output, High/Low limits alarm		□□□□	Alarm output, High/Low limits independent alarm		□□□□	Alarm output, High/Low limit range alarm		□□□□	Alarm output, High/Low limit range independent alarm		□□□□	Alarm output, Process high alarm		□□□□	Alarm output, Process low alarm		□□□□	Alarm output, High limit with standby alarm		□□□□	Alarm output, Low limit with standby alarm		□□□□	Alarm output, High/Low limits with standby alarm		□□□□	Alarm output, High/Low limits with standby independent alarm		□□□□	Heater burnout alarm output		□□□□	Loop break alarm output		□□□□	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].	□□□□	Output during AT	Turns ON during AT.	□□□□	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.	□□□□	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output    0: OFF 1: ON B1 EV2 output    0: OFF 1: ON
□□□□	No event																																																										
□□□□	Alarm output, High limit alarm																																																										
□□□□	Alarm output, Low limit alarm																																																										
□□□□	Alarm output, High/Low limits alarm																																																										
□□□□	Alarm output, High/Low limits independent alarm																																																										
□□□□	Alarm output, High/Low limit range alarm																																																										
□□□□	Alarm output, High/Low limit range independent alarm																																																										
□□□□	Alarm output, Process high alarm																																																										
□□□□	Alarm output, Process low alarm																																																										
□□□□	Alarm output, High limit with standby alarm																																																										
□□□□	Alarm output, Low limit with standby alarm																																																										
□□□□	Alarm output, High/Low limits with standby alarm																																																										
□□□□	Alarm output, High/Low limits with standby independent alarm																																																										
□□□□	Heater burnout alarm output																																																										
□□□□	Loop break alarm output																																																										
□□□□	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].																																																									
□□□□	Output during AT	Turns ON during AT.																																																									
□□□□	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.																																																									
□□□□	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output    0: OFF 1: ON B1 EV2 output    0: OFF 1: ON																																																									

(\*1)The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range																								
R 12R no□□	<p><b>EV1 alarm value 0 Enabled/Disabled</b></p> <ul style="list-style-type: none"> <li>When EV1 alarm value is 0 (zero), alarm action can be Enabled or Disabled.</li> <li>Selection item:</li> </ul> <table border="1" style="width: 100%;"> <tr> <td style="width: 30%;">no□□</td> <td>Disabled</td> </tr> <tr> <td>YE4□</td> <td>Enabled</td> </tr> </table> <p>Available when □□□ 1 (Alarm output, High limit alarm) to □□□5 (Alarm output, High/Low limit range independent alarm), □□□9 (Alarm output, High limit with standby alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) are selected in [Event output EV1 allocation].</p>	no□□	Disabled	YE4□	Enabled																				
no□□	Disabled																								
YE4□	Enabled																								
R 1□□ □□□□	<p><b>EV1 alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV1 alarm value.</li> <li>EV1 alarm value matches EV1 low limit alarm value in the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</li> <li>Setting range:</li> </ul> <table border="1" style="width: 100%;"> <tr> <td style="width: 50%;">High limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Process high alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>Process low alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>High limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> </table> <p>Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p>	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)	Process high alarm	Input range low limit to Input range high limit (*1) (*3)	Process low alarm	Input range low limit to Input range high limit (*1) (*3)	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)																								
Process high alarm	Input range low limit to Input range high limit (*1) (*3)																								
Process low alarm	Input range low limit to Input range high limit (*1) (*3)																								
High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)																								
R 1H□ □□□□	<p><b>EV1 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV1 high limit alarm value.</li> <li>This value is available only for the following cases.            □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</li> <li>Setting range: Same as those of EV1 alarm value</li> </ul>																								

(\*1) The placement of the decimal point follows the selection.




(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Function, Setting Range				
R 1H3 □□ 10	<b>EV1 alarm hysteresis</b> <ul style="list-style-type: none"> <li>Sets EV1 alarm hysteresis.</li> <li>Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].				
R 123 □□□□ 0	<b>EV1 alarm delay time</b> <ul style="list-style-type: none"> <li>Sets EV1 alarm action delay time.</li> <li>When setting time has elapsed after the input enters the alarm output range, the alarm is activated.</li> <li>Setting range: 0 to 10000 seconds</li> </ul> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].				
R 1L $\bar{n}$ no $\bar{n}$ L	<b>EV1 alarm Energized/De-energized</b> <ul style="list-style-type: none"> <li>Selects Energized/De-energized status for EV1 alarm.</li> <li>(Refer to 'EV1/EV2 Energized/De-energized' on p.50.)</li> <li>Selection item:</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">no<math>\bar{n}</math>L</td> <td style="text-align: center;">Energized</td> </tr> <tr> <td style="text-align: center;">rE<math>\bar{n}</math>L</td> <td style="text-align: center;">De-energized</td> </tr> </table> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].	no $\bar{n}$ L	Energized	rE $\bar{n}$ L	De-energized
no $\bar{n}$ L	Energized				
rE $\bar{n}$ L	De-energized				
F4 14 □□□ 1	<b>TS1 output step number</b> <ul style="list-style-type: none"> <li>Sets the step number at which Time signal output TS1 will be turned OFF or ON during Program control.</li> <li>(Refer to 'Time Signal Output' on p.52.)</li> <li>Setting range: 1 to 9</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV1 allocation].				
F4 1F 00:00	<b>TS1 OFF time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS1 OFF time.</li> <li>(Refer to 'Time Signal Output' on p.52.)</li> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV1 allocation].				
F4 1o 00:00	<b>TS1 ON time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS1 ON time.</li> <li>(Refer to 'Time Signal Output' on p.52.)</li> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV1 allocation].				

(\*1)The placement of the decimal point follows the selection.

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Function, Setting Range																																																													
E802 000	<p><b>Event output EV2 allocation</b></p> <ul style="list-style-type: none"> <li>• Selects Event output EV2 allocation from the Event Output Allocation Table below.</li> <li>• When changing Event output EV2 allocation, refer to Section “8.10 Items to be Initialized by Changing Settings” (p.96).</li> <li>• Selection item:</li> </ul> <p><b>Event Output Allocation Table</b></p> <table border="1" data-bbox="422 376 1471 1803"> <tr> <td>000</td> <td>No event</td> <td></td> </tr> <tr> <td>001</td> <td>Alarm output, High limit alarm</td> <td></td> </tr> <tr> <td>002</td> <td>Alarm output, Low limit alarm</td> <td></td> </tr> <tr> <td>003</td> <td>Alarm output, High/Low limits alarm</td> <td></td> </tr> <tr> <td>004</td> <td>Alarm output, High/Low limits independent alarm</td> <td></td> </tr> <tr> <td>005</td> <td>Alarm output, High/Low limit range alarm</td> <td></td> </tr> <tr> <td>006</td> <td>Alarm output, High/Low limit range independent alarm</td> <td></td> </tr> <tr> <td>007</td> <td>Alarm output, Process high alarm</td> <td></td> </tr> <tr> <td>008</td> <td>Alarm output, Process low alarm</td> <td></td> </tr> <tr> <td>009</td> <td>Alarm output, High limit with standby alarm</td> <td></td> </tr> <tr> <td>010</td> <td>Alarm output, Low limit with standby alarm</td> <td></td> </tr> <tr> <td>011</td> <td>Alarm output, High/Low limits with standby alarm</td> <td></td> </tr> <tr> <td>012</td> <td>Alarm output, High/Low limits with standby independent alarm</td> <td></td> </tr> <tr> <td>013</td> <td>Heater burnout alarm output</td> <td></td> </tr> <tr> <td>014</td> <td>Loop break alarm output</td> <td></td> </tr> <tr> <td>015</td> <td>Time signal output</td> <td>Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].</td> </tr> <tr> <td>016</td> <td>Output during AT</td> <td>Turns ON during AT.</td> </tr> <tr> <td>017</td> <td>Pattern end output</td> <td>Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.</td> </tr> <tr> <td>018</td> <td>Output by communication command</td> <td>Turns OFF or ON by communication command 00E4H during Serial communication.            B0 EV1 output 0: OFF                              1: ON            B1 EV2 output 0: OFF                              1: ON</td> </tr> <tr> <td>019</td> <td>Heating/Cooling control relay contact output</td> <td>Works as Control output OUT2 (Heating/Cooling control).</td> </tr> </table> <p>Available only when Event output EV2 (EV2 option) is ordered.</p>		000	No event		001	Alarm output, High limit alarm		002	Alarm output, Low limit alarm		003	Alarm output, High/Low limits alarm		004	Alarm output, High/Low limits independent alarm		005	Alarm output, High/Low limit range alarm		006	Alarm output, High/Low limit range independent alarm		007	Alarm output, Process high alarm		008	Alarm output, Process low alarm		009	Alarm output, High limit with standby alarm		010	Alarm output, Low limit with standby alarm		011	Alarm output, High/Low limits with standby alarm		012	Alarm output, High/Low limits with standby independent alarm		013	Heater burnout alarm output		014	Loop break alarm output		015	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].	016	Output during AT	Turns ON during AT.	017	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.	018	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output 0: OFF 1: ON B1 EV2 output 0: OFF 1: ON	019	Heating/Cooling control relay contact output	Works as Control output OUT2 (Heating/Cooling control).
000	No event																																																													
001	Alarm output, High limit alarm																																																													
002	Alarm output, Low limit alarm																																																													
003	Alarm output, High/Low limits alarm																																																													
004	Alarm output, High/Low limits independent alarm																																																													
005	Alarm output, High/Low limit range alarm																																																													
006	Alarm output, High/Low limit range independent alarm																																																													
007	Alarm output, Process high alarm																																																													
008	Alarm output, Process low alarm																																																													
009	Alarm output, High limit with standby alarm																																																													
010	Alarm output, Low limit with standby alarm																																																													
011	Alarm output, High/Low limits with standby alarm																																																													
012	Alarm output, High/Low limits with standby independent alarm																																																													
013	Heater burnout alarm output																																																													
014	Loop break alarm output																																																													
015	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].																																																												
016	Output during AT	Turns ON during AT.																																																												
017	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.																																																												
018	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output 0: OFF 1: ON B1 EV2 output 0: OFF 1: ON																																																												
019	Heating/Cooling control relay contact output	Works as Control output OUT2 (Heating/Cooling control).																																																												
A23A no	<p><b>EV2 alarm value 0 Enabled/Disabled</b></p> <ul style="list-style-type: none"> <li>• When EV2 alarm value is 0 (zero), alarm action can be Enabled or Disabled.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="422 1960 1471 2038"> <tr> <td>no</td> <td>Disabled</td> </tr> <tr> <td>YE4</td> <td>Enabled</td> </tr> </table> <p>Available when 001 (Alarm output, High limit alarm) to 005 (Alarm output, High/Low limit range independent alarm), 009 (Alarm output, High limit with standby alarm) to 012 (Alarm output, High/Low limits with standby independent alarm) are selected in [Event output EV2 allocation].</p>		no	Disabled	YE4	Enabled																																																								
no	Disabled																																																													
YE4	Enabled																																																													

Characters, Factory Default	Setting Item, Function, Setting Range																								
R2□□ □□□0	<p><b>EV2 alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 alarm value.</li> </ul> <p>EV2 alarm value matches EV2 low limit alarm value in the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□6 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p> <ul style="list-style-type: none"> <li>Setting range:</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">High limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Process high alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>Process low alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>High limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> </table> <p>Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)	Process high alarm	Input range low limit to Input range high limit (*1) (*3)	Process low alarm	Input range low limit to Input range high limit (*1) (*3)	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits with standby	0 to Input span °C (°F) (*1) (*2)	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)																								
Process high alarm	Input range low limit to Input range high limit (*1) (*3)																								
Process low alarm	Input range low limit to Input range high limit (*1) (*3)																								
High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)																								
R2H□ □□□0	<p><b>EV2 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 high limit alarm value.</li> </ul> <p>This value is available only for the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□6 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p> <ul style="list-style-type: none"> <li>Setting range: Same as those of EV2 alarm value</li> </ul>																								
R2HY □□10	<p><b>EV2 alarm hysteresis</b></p> <ul style="list-style-type: none"> <li>Sets EV2 alarm hysteresis.</li> <li>Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> <p>Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>																								
R2dY □□□0	<p><b>EV2 alarm delay time</b></p> <ul style="list-style-type: none"> <li>Sets EV2 alarm action delay time.</li> </ul> <p>When setting time has elapsed after the input enters the alarm output range, the alarm is activated.</p> <ul style="list-style-type: none"> <li>Setting range: 0 to 10000 seconds</li> </ul> <p>Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>																								

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Function, Setting Range				
R2L <sup>~</sup> no <sup>~</sup> L	<p><b>EV2 alarm Energized/De-energized</b></p> <ul style="list-style-type: none"> <li>• Selects Energized/De-energized status for EV2 alarm. (Refer to 'EV1/EV2 Energized/De-energized' on p.50.)</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="437 338 756 416"> <tr> <td>no<sup>~</sup>L</td> <td>Energized</td> </tr> <tr> <td>rE<sup>~</sup>L<sup>~</sup></td> <td>De-energized</td> </tr> </table> <p>Available when any alarm from <input type="checkbox"/>00 1 (Alarm output, High limit alarm) to <input type="checkbox"/>0 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>	no <sup>~</sup> L	Energized	rE <sup>~</sup> L <sup>~</sup>	De-energized
no <sup>~</sup> L	Energized				
rE <sup>~</sup> L <sup>~</sup>	De-energized				
F424 <input type="checkbox"/> <input type="checkbox"/> 1	<p><b>TS2 output step number</b></p> <ul style="list-style-type: none"> <li>• Sets the step number at which Time signal output TS2 will be turned OFF or ON during Program control. (Refer to 'Time Signal Output' on p.52.)</li> <li>• Setting range: 1 to 9</li> </ul> <p>Available only when <input type="checkbox"/>0 15 (Time signal output) is selected in [Event output EV2 allocation].</p>				
F42F 0000	<p><b>TS2 OFF time</b></p> <ul style="list-style-type: none"> <li>• Sets Time signal output TS2 OFF time. (Refer to 'Time Signal Output' on p.52.)</li> <li>• Setting range: 00:00 to 99:59 (*4)</li> </ul> <p>Available only when <input type="checkbox"/>0 15 (Time signal output) is selected in [Event output EV2 allocation].</p>				
F42a 0000	<p><b>TS2 ON time</b></p> <ul style="list-style-type: none"> <li>• Sets Time signal output TS2 ON time. (Refer to 'Time Signal Output' on p.52.)</li> <li>• Setting range: 00:00 to 99:59 (*4)</li> </ul> <p>Available only when <input type="checkbox"/>0 15 (Time signal output) is selected in [Event output EV2 allocation].</p>				
H <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> H 1 and CT1 current value are alternately indicated in the PV Display.	<p><b>Heater burnout alarm 1 value</b></p> <ul style="list-style-type: none"> <li>• Sets the heater current value for Heater burnout alarm 1. Characters H 1 and CT1 current value are alternately indicated in the PV Display. When OUT1 is ON, the CT1 current value is updated. When OUT1 is OFF, the unit memorizes the previous value when OUT1 was ON. Upon returning to set limits, the alarm will stop.</li> <li>• Setting range:            20 A: 0.0 to 20.0 A            100 A: 0.0 to 100.0 A            Setting to 0.0 disables the alarm.</li> </ul> <p>Not available for the Direct current output type.            Available when Heater burnout alarm (C5W, EIW, W options) is ordered.</p>				

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Function, Setting Range																																													
H2□□ □□00 H2 and CT2 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 2 value</b> <ul style="list-style-type: none"> <li>Sets the heater current value for Heater burnout alarm 2. Available only when using 3-phase. Characters H2 and CT2 current value are alternately indicated in the PV Display. When OUT1 is ON, the CT2 current value is updated. When OUT1 is OFF, the unit memorizes the previous value when OUT1 was ON. Upon returning to set limits, the alarm will stop.</li> <li>Setting range: 20 A: 0.0 to 20.0 A 100 A: 0.0 to 100.0 A Setting to 0.0 disables the alarm.</li> <li>Not available for the Direct current output type. Available only when Heater burnout alarm (C5W, EIW, W options) is ordered.</li> </ul>																																													
LP_F □□□0	<b>Loop break alarm time</b> <ul style="list-style-type: none"> <li>Sets the time to assess the Loop break alarm. Refer to 'Loop Break Alarm' on p.50.</li> <li>Setting range: 0 to 200 minutes Setting to 0 (zero) disables the alarm.</li> </ul>																																													
LP_H □□□0	<b>Loop break alarm span</b> <ul style="list-style-type: none"> <li>Sets the temperature to assess the Loop break alarm. Refer to 'Loop Break Alarm' on p.50.</li> <li>Setting range: 0 to 150°C (°F), or 0.0 to 150.0°C (°F) DC voltage, current inputs: 0 to 1500 (*1) Setting to 0 (zero) disables the alarm.</li> </ul>																																													
EB1 1 □□□0	<b>Event input DI1 allocation</b> <ul style="list-style-type: none"> <li>Selects Event input DI1 from Event Input Allocation Table. (Refer to 'Event Input' on p.51.)</li> <li>Selection item:</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="5" style="text-align: left;">Event Input Allocation Table</th> </tr> <tr style="background-color: #cccccc;"> <th style="width: 10%;"></th> <th style="width: 30%;">Event input function</th> <th style="width: 15%;">Input ON (Closed)</th> <th style="width: 15%;">Input OFF (Open)</th> <th style="width: 30%;">Remarks</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">□□□0</td> <td>No event</td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">□□□1</td> <td>Set value memory</td> <td></td> <td></td> <td></td> </tr> <tr> <td style="text-align: center;">□□□2</td> <td>Control ON/OFF</td> <td>Control OFF</td> <td>Control ON</td> <td>Control output OFF function</td> </tr> <tr> <td style="text-align: center;">□□□3</td> <td>Direct/Reverse action</td> <td>Direct action</td> <td>Reverse action</td> <td>Always effective</td> </tr> <tr> <td style="text-align: center;">□□□4</td> <td>Preset output 1 ON/OFF</td> <td>Preset output</td> <td>Usual control</td> <td>If sensor is burnt out, the unit maintains control with the preset MV.</td> </tr> <tr> <td style="text-align: center;">□□□5</td> <td>Preset output 2 ON/OFF</td> <td>Preset output</td> <td>Usual control</td> <td>The unit maintains control with the preset MV.</td> </tr> <tr> <td style="text-align: center;">□□□6</td> <td>Auto/Manual control</td> <td>Manual control</td> <td>Automatic control</td> <td></td> </tr> </tbody> </table>	Event Input Allocation Table						Event input function	Input ON (Closed)	Input OFF (Open)	Remarks	□□□0	No event				□□□1	Set value memory				□□□2	Control ON/OFF	Control OFF	Control ON	Control output OFF function	□□□3	Direct/Reverse action	Direct action	Reverse action	Always effective	□□□4	Preset output 1 ON/OFF	Preset output	Usual control	If sensor is burnt out, the unit maintains control with the preset MV.	□□□5	Preset output 2 ON/OFF	Preset output	Usual control	The unit maintains control with the preset MV.	□□□6	Auto/Manual control	Manual control	Automatic control	
Event Input Allocation Table																																														
	Event input function	Input ON (Closed)	Input OFF (Open)	Remarks																																										
□□□0	No event																																													
□□□1	Set value memory																																													
□□□2	Control ON/OFF	Control OFF	Control ON	Control output OFF function																																										
□□□3	Direct/Reverse action	Direct action	Reverse action	Always effective																																										
□□□4	Preset output 1 ON/OFF	Preset output	Usual control	If sensor is burnt out, the unit maintains control with the preset MV.																																										
□□□5	Preset output 2 ON/OFF	Preset output	Usual control	The unit maintains control with the preset MV.																																										
□□□6	Auto/Manual control	Manual control	Automatic control																																											

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range				
EBI 1 000		<b>Event input function</b>	<b>Input ON (Closed)</b>	<b>Input OFF (Open)</b>	<b>Remarks</b>
	007	Remote/Local	Remote	Local	Effective only when EIT (External setting input) option is ordered
	008	Program control RUN/STOP	RUN	STOP	Level action when power-on
	009	Program control Holding/Not holding	Holding	Not holding	Level action when power-on
	010	Program control Advance function	Advance function	Usual control	Level action when power-on
	011	Integral action Holding	Integral action Holding	Usual integral action	Control continues with the integral value being held.
	For BCS2, available only when Event input (EIW, EIT, EI options) is ordered. For BCR2/BCD2, available when Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.				
EBI 2 000	<b>Event input DI2 allocation</b> <ul style="list-style-type: none"> <li>• Selects Event input DI2 from Event Input Allocation Table. (Refer to 'Event Input' on p.51)</li> <li>• Selection item: Same as those of Event input DI1 allocation</li> </ul> For BCS2, available only when Event input (EIW, EI option) is ordered. For BCR2/BCD2, available when Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.				
rFLH 1370	<b>External setting input high limit</b> <ul style="list-style-type: none"> <li>• Sets External setting input high limit value. This value corresponds to 20 mA in Direct current input.</li> <li>• Setting range: External setting input low limit to Input range high limit (*1)</li> </ul> Available only when External setting input (EIT option) is ordered.				
rFLL -200	<b>External setting input low limit</b> <ul style="list-style-type: none"> <li>• Sets External setting input low limit value. This value corresponds to 4 mA in Direct current input.</li> <li>• Setting range: Input range low limit to External setting input high limit (*1)</li> </ul> Available only when External setting input (EIT option) is ordered.				
rro4 P#00	<b>Transmission output type</b> <ul style="list-style-type: none"> <li>• Selects transmission output type.</li> <li>• When changing transmission output type, refer to Section "8.10 Items to be Initialized by Changing Settings" (p.96).</li> <li>• Selection item:</li> </ul>				
	P#00	PV transmission			
	4#00	SV transmission			
	7#00	MV transmission			
	d#00	DV transmission			
Available only when Transmission output (EIT option) is ordered.					

(\*1) The placement of the decimal point follows the selection.



Characters, Factory Default	Setting Item, Function, Setting Range							
7 FLH 1370	<b>Transmission output high limit</b> <ul style="list-style-type: none"> <li>• Sets the Transmission output high limit value. This value corresponds to 20 mA in DC current output.</li> <li>• Setting range:</li> </ul> <table border="1" data-bbox="416 342 1479 504"> <tr> <td data-bbox="416 342 703 421">PV, SV transmission</td> <td data-bbox="703 342 1479 421">Transmission output low limit to Input range high limit value DC voltage, current inputs: -2000 to 10000</td> </tr> <tr> <td data-bbox="416 421 703 461">MV transmission</td> <td data-bbox="703 421 1479 461">Transmission output low limit value to 105.0%</td> </tr> <tr> <td data-bbox="416 461 703 504">DV transmission</td> <td data-bbox="703 461 1479 504">Transmission output low limit to Scaling span (*1)</td> </tr> </table> <p data-bbox="416 504 1479 546">Available only when Transmission output (EIT option) is ordered.</p>		PV, SV transmission	Transmission output low limit to Input range high limit value DC voltage, current inputs: -2000 to 10000	MV transmission	Transmission output low limit value to 105.0%	DV transmission	Transmission output low limit to Scaling span (*1)
PV, SV transmission	Transmission output low limit to Input range high limit value DC voltage, current inputs: -2000 to 10000							
MV transmission	Transmission output low limit value to 105.0%							
DV transmission	Transmission output low limit to Scaling span (*1)							
7 LLL -200	<b>Transmission output low limit</b> <ul style="list-style-type: none"> <li>• Sets the Transmission output low limit value. This value corresponds to 4 mA in DC current output.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="416 707 1479 869"> <tr> <td data-bbox="416 707 703 786">PV, SV transmission</td> <td data-bbox="703 707 1479 786">Input range low limit to Transmission output high limit value DC voltage, current inputs: -2000 to 10000</td> </tr> <tr> <td data-bbox="416 786 703 826">MV transmission</td> <td data-bbox="703 786 1479 826">-5.0% to Transmission output high limit value</td> </tr> <tr> <td data-bbox="416 826 703 869">DV transmission</td> <td data-bbox="703 826 1479 869">-Scaling span to Transmission output high limit value (*1)</td> </tr> </table> <p data-bbox="416 869 1479 911">Available only when Transmission output (EIT option) is ordered.</p>		PV, SV transmission	Input range low limit to Transmission output high limit value DC voltage, current inputs: -2000 to 10000	MV transmission	-5.0% to Transmission output high limit value	DV transmission	-Scaling span to Transmission output high limit value (*1)
PV, SV transmission	Input range low limit to Transmission output high limit value DC voltage, current inputs: -2000 to 10000							
MV transmission	-5.0% to Transmission output high limit value							
DV transmission	-Scaling span to Transmission output high limit value (*1)							
4 0 0 0 0 0 0 0	<b>SV1</b> <ul style="list-style-type: none"> <li>• Sets SV1.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p data-bbox="416 1037 1479 1070">Available when Control output OFF function or Auto/Manual control is selected in [OUT/OFF key function].</p>							
4 2 0 0 0 0 0 0	<b>SV2</b> <ul style="list-style-type: none"> <li>• Sets SV2.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p data-bbox="416 1211 1479 1238">Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Control output OFF function or Auto/Manual control is selected in [OUT/OFF key function].</li> <li>• For BCS2, Event input (EIW, EIT, EI options) is ordered.</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When 0001 (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>							
4 3 0 0 0 0 0 0	<b>SV3</b> <ul style="list-style-type: none"> <li>• Sets SV3.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p data-bbox="416 1503 1479 1529">Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Control output OFF function or Auto/Manual control is selected in [OUT/OFF key function].</li> <li>• For BCS2, Event input (EIW, EI options) is ordered.</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When 0001 (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>							
4 4 0 0 0 0 0 0	<b>SV4</b> <ul style="list-style-type: none"> <li>• Sets SV4.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p data-bbox="416 1794 1479 1821">Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Control output OFF function or Auto/Manual control is selected in [OUT/OFF key function].</li> <li>• For BCS2, Event input (EIW, EI options) is ordered</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When 0001 (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>							

(\*1) The placement of the decimal point follows the selection.

### [EV1/EV2 Energized/De-energized]



When  $no\bar{n}L$  (Energized) is selected, Event output 1 or 2 is conductive (ON) while the EV1/EV2 indicator is lit.

Event output 1 or 2 is not conductive (OFF) while the EV1/EV2 indicator is not lit.

When  $r\bar{E}H$  (De-energized) is selected, Event output 1 or 2 is not conductive (OFF) while the EV1/EV2 indicator is lit.

Event output 1 or 2 is conductive (ON) while the EV1/EV2 indicator is not lit.

### High limit alarm (when Energized is set)    High limit alarm (when De-energized is set)

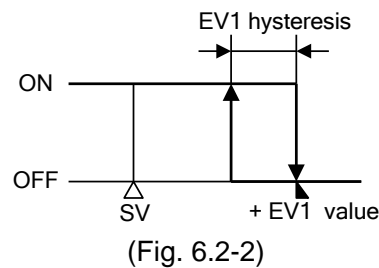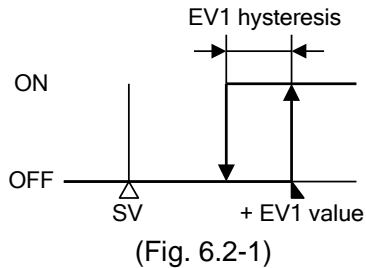

EV1 value and EV1 hysteresis represent EV1 alarm value and EV1 alarm hysteresis respectively. For EV2, read “EV2” for “EV1”.

### [Loop Break Alarm]

#### When the control action is Reverse (Heating) control:

- If the PV does not **reach** the Loop break alarm span setting within the time allotted to assess the Loop break alarm (after the MV has reached 100% or the OUT high limit value), the alarm will be activated.
- Likewise, if the PV does not **drop to** the Loop break alarm span setting within the time allotted to assess the Loop break alarm (after the MV has reached 0% or the OUT low limit value), the alarm will be activated.

#### When the control action is Direct (Cooling) control:

- If the PV does not **drop to** the Loop break alarm span setting within the time allotted to assess the Loop break alarm (after the MV has reached 100% or the OUT high limit value), the alarm will be activated.
- Likewise, if the PV does not **reach** the Loop break alarm span setting within the time allotted to assess the Loop break alarm (after the MV has reached 0% or the OUT low limit value), the alarm will be activated.

## [Event Input]

- If 001 (Set value memory) is selected, the set value memory number will be as follows.

When only Event input DI1 is selected.

Set value memory number	SV1	SV2
DI1	Open	Closed


When only Event input DI2 is selected.

Set value memory number	SV1	SV2
DI2	Open	Closed

When both Event inputs DI1, DI2 are selected.

Set value memory number	SV1	SV2	SV3	SV4
DI1	Open	Closed	Open	Closed
DI2	Open	Open	Closed	Closed

- Preset value of 004 (Preset output 1 ON/OFF) and 005 (Preset output 2 ON/OFF) can be set in [OUT1, OUT2 MV preset value] in Engineering mode (p.77).
- If 005 (Preset output 2 ON/OFF) is selected in [Event input DI1 allocation], and 006 (Auto/Manual control) is selected in Event input DI2 allocation, and if DI1-COM and DI2-COM terminals are turned ON (Closed) simultaneously, then Preset output 2 will be given priority, and control starts with the MV set in [OUT1/OUT2 MV preset value (p.77)] in Engineering mode.  
In this case, control will be switched to manual control, and MV cannot be changed via keypad
- Signal edge action from OFF to ON / ON to OFF is engaged.  
If 008 (Program control RUN/STOP) is selected in [Event input DI1 allocation], the following action will be performed.  
However, only when power is turned ON, Level action [ON (Closed) or OFF (Open)] is engaged.

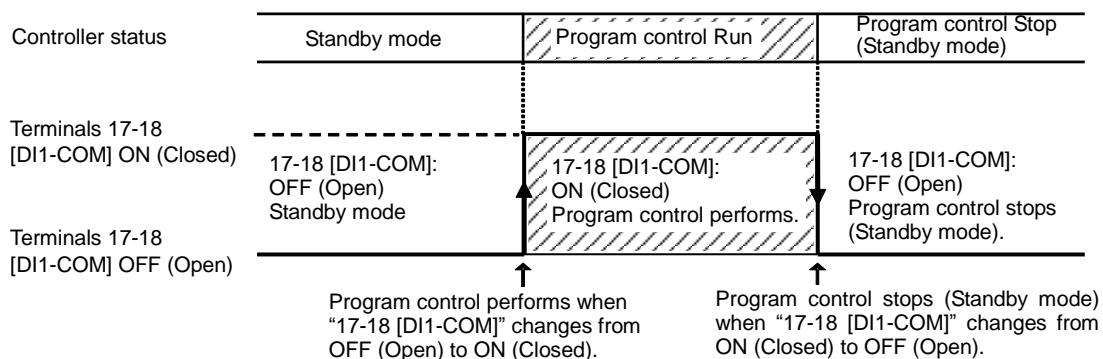

(Fig. 6.2-3)

- OR calculation [if any one is ON (closed), the function activates] begins if the same functions except 001 (Set value memory) have been selected in [Event input DI1/DI2 allocation].  
If any terminals DI1-COM or DI2-COM is ON (closed), the function activates.

### [Time Signal Output]

Time signal output activates during Time signal output ON time within the step for which step number is set.


Time signal output ON time follows Time signal output OFF time after the program control starts.

The following program pattern shows that the temperature rises to 200°C for 1 hour, and stays at 200°C for 2 hours after Program control starts.

Step	1	2
Step SV	200°C	200°C
Step time	1:00	2:00

Time signal output (Fig. 6.2-4) is shown when set as follows.

- TS1/TS2 output step number: 2
- TS1/TS2 OFF time: 0:30
- TS1/TS2 ON time: 1:00

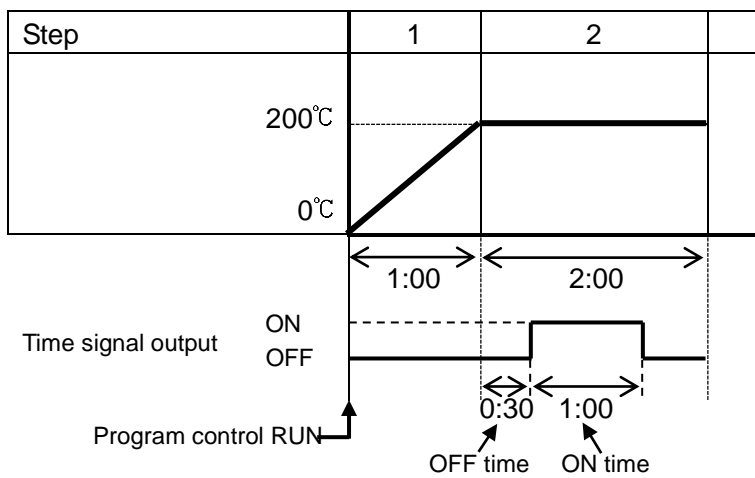


(Fig. 6.2-4)



Time signal output is effective within the step set in [TS1/TS2 output step number]. For example, if TS1/TS2 ON time is set to "2:00" at the above, Time signal output is turned OFF at the moment when Step 2 is completed.

# 7. Settings

In this section, Main setting, Sub setting and Engineering modes will be explained.

## 7.1 Main Setting Mode


To enter Main setting mode, press the  key in RUN mode.









Use the  or  key for settings (or selections).

To register the set data, use the  key.

Explanation of setting items:

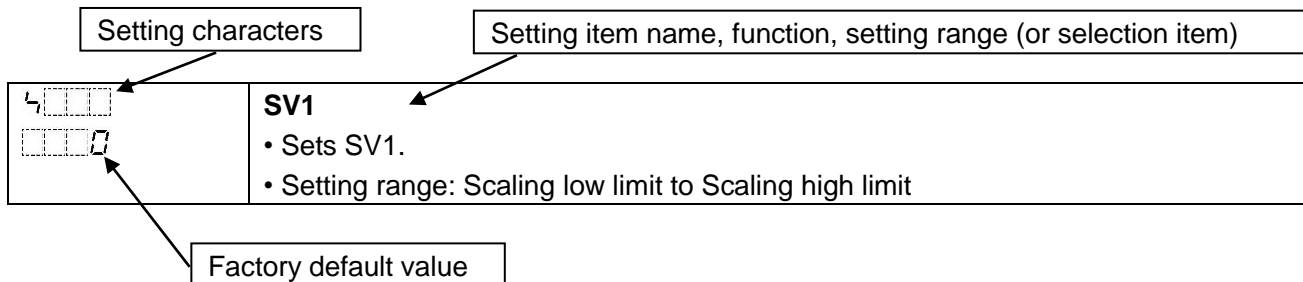- Upper left: PV Display: Indicates setting characters.
- Lower left: SV Display: Indicates factory default value.
- Right side: Indicates the setting item, explanation of its function and setting range (or selection item).



Characters, Factory Default	Setting Item, Function, Setting Range
 	<b>SV1</b> <ul style="list-style-type: none"> <li>• Sets SV1.</li> <li>• Corresponds to [SV1] in Initial setting mode. If Program control is selected in [OUT/OFF key function], this will become Step 1 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul>
 	<b>Step 1 time</b> <ul style="list-style-type: none"> <li>• Sets Step 1 time.</li> <li>• Setting range: , or 00:00 to 99:59 If  is set, Step 1 time will be held, and Fixed value control will be performed using Step 1 SV.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
 	<b>Step 1 wait value</b> <ul style="list-style-type: none"> <li>• Sets Step 1 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1) Setting the value to 0 disables this Wait function.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range
42.00 00.00	<p><b>SV2</b></p> <ul style="list-style-type: none"> <li>• Sets SV2.</li> <li>• Corresponds to [SV2] in Initial setting mode. If Program control is selected in [OUT/OFF key function], this will become Step 2 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Program control is selected in [OUT/OFF key function]</li> <li>• For BCS2, Event input (EIW, EIT, EI options) is ordered</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When 00.0 (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>
r0.2 00.00	<p><b>Step 2 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 2 time.</li> <li>• Setting range: 00.00, or 00:00 to 99:59 If 00.00 is set, Step 2 time will be held, and Fixed value control will be performed using Step 2 SV.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
00.2 00.00	<p><b>Step 2 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 2 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1) Setting the value to 0 disables Wait function.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
43.00 00.00	<p><b>SV3</b></p> <ul style="list-style-type: none"> <li>• Sets SV3.</li> <li>• Corresponds to [SV3] in Initial setting mode. If Program control is selected in [OUT/OFF key function], this will become Step 3 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Program control is selected in [OUT/OFF key function]</li> <li>• For BCS2, Event input (EIW, EI options) is ordered</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When 00.0 (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>
r0.3 00.00	<p><b>Step 3 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 3 time.</li> <li>• Setting range: 00.00, or 00:00 to 99:59 If 00.00 is set, Step 3 time will be held, and Fixed value control will be performed using Step 3 SV.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
00.3 00.00	<p><b>Step 3 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 3 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1) Setting the value to 0 disables Wait function.</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range
44□□ □□□0	<p><b>SV4</b></p> <ul style="list-style-type: none"> <li>• Sets SV4.</li> <li>• Corresponds to [SV4] in Initial setting mode.</li> </ul> <p>If Program control is selected in [OUT/OFF key function], this will become Step 4 SV.</p> <ul style="list-style-type: none"> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available for the following cases:</p> <ul style="list-style-type: none"> <li>• When Program control is selected in [OUT/OFF key function]</li> <li>• For BCS2, Event input (EIW, EI options) is ordered</li> <li>• For BCR2/BCD2, Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When □□□□ (Set value memory) is selected in [Event input DI1/DI2 allocation].</li> </ul>
r□_4 0000	<p><b>Step 4 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 4 time.</li> <li>• Setting range: □□□□, or 00:00 to 99:59</li> </ul> <p>If □□□□ is set, Step 4 time will be held, and Fixed value control will be performed using Step 4 SV.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
□□_4 □□□0	<p><b>Step 4 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 4 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)</li> </ul> <p>Setting the value to 0 disables Wait function.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
45□□ □□□0	<p><b>Step 5 SV</b></p> <ul style="list-style-type: none"> <li>• Sets Step 5 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
r□_5 0000	<p><b>Step 5 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 5 time.</li> <li>• Setting range: □□□□, or 00:00 to 99:59</li> </ul> <p>If □□□□ is set, Step 5 time will be held, and Fixed value control will be performed using Step 5 SV.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
□□_5 □□□0	<p><b>Step 5 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 5 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)</li> </ul> <p>Setting the value to 0 disables Wait function.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range
46□□ □□□0	<b>Step 6 SV</b> <ul style="list-style-type: none"> <li>• Sets Step 6 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> Available only when Program control is selected in [OUT/OFF key function].
r□_6 0000	<b>Step 6 time</b> <ul style="list-style-type: none"> <li>• Sets Step 6 time.</li> <li>• Setting range: □-□-□-□, or 00:00 to 99:59</li> </ul> If □-□-□-□ is set, Step 6 time will be held, and Fixed value control will be performed using Step 6 SV. Available only when Program control is selected in [OUT/OFF key function].
□□_6 □□□0	<b>Step 6 wait value</b> <ul style="list-style-type: none"> <li>• Sets Step 6 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span</li> </ul> DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1) Setting the value to 0 disables Wait function. Available only when Program control is selected in [OUT/OFF key function].
47□□ □□□0	<b>Step 7 SV</b> <ul style="list-style-type: none"> <li>• Sets Step 7 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> Available only when Program control is selected in [OUT/OFF key function].
r□_7 0000	<b>Step 7 time</b> <ul style="list-style-type: none"> <li>• Sets Step 7 time.</li> <li>• Setting range: □-□-□-□, or 00:00 to 99:59</li> </ul> If □-□-□-□ is set, Step 7 time will be held, and Fixed value control will be performed using Step 7 SV. Available only when Program control is selected in [OUT/OFF key function].
□□_7 □□□0	<b>Step 7 wait value</b> <ul style="list-style-type: none"> <li>• Sets Step 7 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span</li> </ul> DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1) Setting the value to 0 disables Wait function. Available only when Program control is selected in [OUT/OFF key function].

(\*1) The placement of the decimal point follows the selection.



Characters, Factory Default	Setting Item, Function, Setting Range
48.0 0.0	<p><b>Step 8 SV</b></p> <ul style="list-style-type: none"> <li>• Sets Step 8 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
r 8 0000	<p><b>Step 8 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 8 time.</li> <li>• Setting range: --:--:-- or 00:00 to 99:59</li> </ul> <p>If --:--:-- is set, Step 8 time will be held, and Fixed value control will be performed using Step 8 SV.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
0.8 0.0	<p><b>Step 8 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 8 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)</li> </ul> <p>Setting the value to 0 disables Wait function.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
49.0 0.0	<p><b>Step 9 SV</b></p> <ul style="list-style-type: none"> <li>• Sets Step 9 SV.</li> <li>• Setting range: Scaling low limit to Scaling high limit (*1)</li> </ul> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
r 9 0000	<p><b>Step 9 time</b></p> <ul style="list-style-type: none"> <li>• Sets Step 9 time.</li> <li>• Setting range: --:--:-- or 00:00 to 99:59</li> </ul> <p>If --:--:-- is set, Step 9 time will be held, and Fixed value control will be performed using Step 9 SV.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>
0.9 0.0	<p><b>Step 9 wait value</b></p> <ul style="list-style-type: none"> <li>• Sets Step 9 wait value.</li> <li>• Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)</li> </ul> <p>Setting the value to 0 disables Wait function.</p> <p>Available only when Program control is selected in [OUT/OFF key function].</p>

(\*1) The placement of the decimal point follows the selection.

## 7.2 Sub Setting Mode


To enter Sub setting mode, press the  $\wedge$  and  $\odot$  keys (in that order) together in RUN mode.

Use the  $\wedge$  or  $\vee$  key for settings (or selections).

To register the set data, use the  $\odot$  key.

Explanation of setting items:


- Upper left: PV Display: Indicates setting characters.
- Lower left: SV Display: Indicates factory default value.
- Right side: Indicates the setting item, explanation of its function and setting range (or selection item).

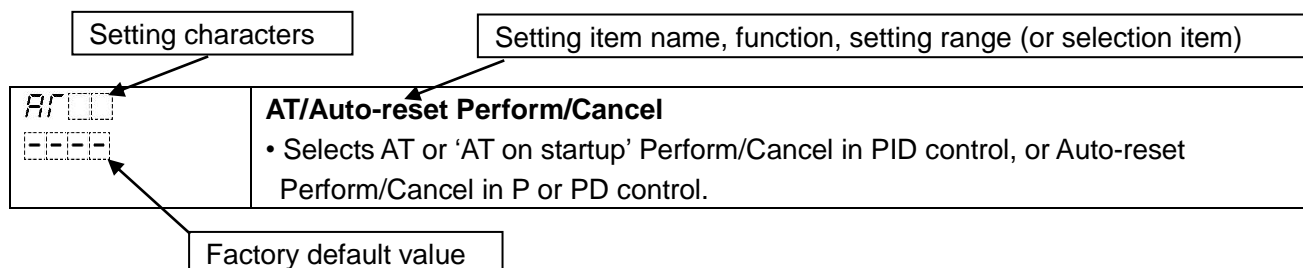

Characters, Factory Default	Setting Item, Function, Setting Range								
AT -- -- --	<b>AT/Auto-reset Perform/Cancel</b> <ul style="list-style-type: none"> <li>• Selects AT or 'AT on startup' Perform/Cancel in PID control action, or Auto-reset Perform/Cancel in P or PD control action.</li> <li>Refer to Sections '8.5 Setting PID Constants (by Performing AT)' (p. 82), and '8.6 Performing Auto-reset' (p. 85).</li> <li>• Selection item:</li> </ul> <table border="1"> <tr> <td>-- --</td> <td>AT/AT on startup/Auto-reset Cancel</td> </tr> <tr> <td>AT --</td> <td>AT Perform</td> </tr> <tr> <td>AT _ 4</td> <td>'AT on startup' Perform</td> </tr> <tr> <td>- 4EF</td> <td>Auto-reset Perform</td> </tr> </table> <p>Not available for ON/OFF control or PI control.</p>	-- --	AT/AT on startup/Auto-reset Cancel	AT --	AT Perform	AT _ 4	'AT on startup' Perform	- 4EF	Auto-reset Perform
-- --	AT/AT on startup/Auto-reset Cancel								
AT --	AT Perform								
AT _ 4	'AT on startup' Perform								
- 4EF	Auto-reset Perform								
P -- -- 10	<b>OUT1 proportional band</b> <ul style="list-style-type: none"> <li>• Sets OUT1 proportional band.</li> <li>• Setting range: 0 to Input span <math>^{\circ}\text{C}</math> (<math>^{\circ}\text{F}</math>) DC voltage, current inputs: 0.0 to 1000.0% OUT1 becomes ON/OFF control when set to 0 or 0.0.</li> </ul>								
I -- -- 200	<b>Integral time</b> <ul style="list-style-type: none"> <li>• Sets the integral time.</li> <li>Auto-reset can be performed when PD is control action (<math>I = 0</math>).</li> <li>• Setting range: 0 to 3600 seconds Setting the value to 0 disables integral action.</li> <li>Not available if OUT1 is in ON/OFF control.</li> </ul>								
d -- -- 50	<b>Derivative time</b> <ul style="list-style-type: none"> <li>• Sets the derivative time.</li> <li>• Setting range: 0 to 1800 seconds Setting the value to 0 disables derivative action.</li> <li>Not available if OUT1 is in ON/OFF control.</li> </ul>								

Characters, Factory Default	Setting Item, Function, Setting Range
ARW 50	<p><b>ARW</b></p> <ul style="list-style-type: none"> <li>• Sets ARW (anti-reset windup).</li> <li>• Setting range: 0 to 100%</li> </ul> <p>Available only for PID control.</p>
r4Er 00	<p><b>Manual reset</b></p> <ul style="list-style-type: none"> <li>• Sets the reset value manually.</li> <li>• Setting range: <math>\pm</math>Proportional band value</li> </ul> <p>If a value larger than 100.0% is set in [OUT1 proportional band], the setting range will be <math>\pm</math>100.0.</p> <p>Available only for P and PD controls.</p>
c 30	<p><b>OUT1 proportional cycle</b></p> <ul style="list-style-type: none"> <li>• Sets proportional cycle for OUT1.</li> </ul> <p>For relay contact output, if the proportional cycle time is decreased, the frequency of the relay action increases, and the life of the relay contact is shortened.</p> <ul style="list-style-type: none"> <li>• Setting range: 0.5, or 1 to 120 seconds</li> </ul> <p>Not available for Direct current output type, or if OUT1 is in ON/OFF control.</p>
HY4 10	<p><b>OUT1 ON/OFF hysteresis</b></p> <ul style="list-style-type: none"> <li>• Sets ON/OFF hysteresis for OUT1.</li> <li>• Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> <p>Available only when OUT1 is in ON/OFF control.</p>
oLH 100	<p><b>OUT1 high limit</b></p> <ul style="list-style-type: none"> <li>• Sets OUT1 high limit value.</li> <li>• Setting range: OUT1 low limit value to 100%</li> </ul> <p>(Direct current output type: OUT1 low limit value to 105%)</p> <p>Not available if OUT1 is in ON/OFF control.</p>
oLL 0	<p><b>OUT1 low limit</b></p> <ul style="list-style-type: none"> <li>• Sets OUT1 low limit value.</li> <li>• Setting range: 0% to OUT1 high limit value</li> </ul> <p>(Direct current output type: -5% to OUT1 high limit value)</p> <p>Not available if OUT1 is in ON/OFF control.</p>
orAR 0	<p><b>OUT1 rate-of-change</b></p> <ul style="list-style-type: none"> <li>• Sets changing value of OUT1 MV for 1 second.</li> </ul> <p>See 'OUT1 rate-of-change' on p. 63.</p> <ul style="list-style-type: none"> <li>• Setting range: 0 to 100%/second</li> </ul> <p>Setting the value to 0 disables this function.</p> <p>Not available if OUT1 is in ON/OFF control.</p>

(\*1) The placement of the decimal point follows the selection.

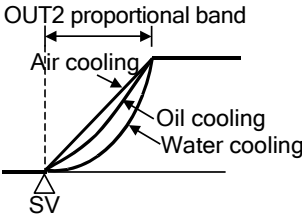Characters, Factory Default	Setting Item, Function, Setting Range						
cRcT R1 r□	<p><b>OUT2 cooling method</b></p> <ul style="list-style-type: none"> <li>• Selects OUT2 cooling method from air, oil or water cooling.</li> </ul>  <p>(Fig. 7.2-1)</p> <ul style="list-style-type: none"> <li>• Selection item:</li> </ul> <table border="1" data-bbox="422 616 1481 739"> <tr> <td>R1 r□</td> <td>Air cooling (linear characteristics)</td> </tr> <tr> <td>oil□</td> <td>Oil cooling (1.5th power of the linear characteristics)</td> </tr> <tr> <td>WR□</td> <td>Water cooling (2nd power of the linear characteristics)</td> </tr> </table> <p>Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered. Not available if OUT2 is in ON/OFF control.</p>	R1 r□	Air cooling (linear characteristics)	oil□	Oil cooling (1.5th power of the linear characteristics)	WR□	Water cooling (2nd power of the linear characteristics)
R1 r□	Air cooling (linear characteristics)						
oil□	Oil cooling (1.5th power of the linear characteristics)						
WR□	Water cooling (2nd power of the linear characteristics)						
P_b□ □□ 10	<p><b>OUT2 proportional band</b></p> <ul style="list-style-type: none"> <li>• Sets the proportional band for OUT2.</li> <li>• Setting range: 0 to Input span °C (°F) DC voltage, current inputs: 0.0 to 1000.0% OUT2 becomes ON/OFF control when set to 0 or 0.0.</li> </ul> <p>Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered. Not available if OUT1 is in ON/OFF control.</p>						
c_b□ □□ 30	<p><b>OUT2 proportional cycle</b></p> <ul style="list-style-type: none"> <li>• Sets proportional cycle for OUT2.</li> <li>For relay contact output, if the proportional cycle time is decreased, the frequency of the relay action increases, and the life of the relay contact is shortened.</li> <li>• Setting range: 0.5, or 1 to 120 seconds</li> </ul> <p>Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered. Not available for Direct current output type, or if OUT2 is in ON/OFF control.</p>						
H34b □□ 10	<p><b>OUT2 ON/OFF hysteresis</b></p> <ul style="list-style-type: none"> <li>• Sets ON/OFF hysteresis for OUT2.</li> <li>• Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> <p>Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered.</p>						
oLHb □ 100	<p><b>OUT2 high limit</b></p> <ul style="list-style-type: none"> <li>• Sets OUT2 high limit value.</li> <li>• Setting range: OUT2 low limit value to 100% (Direct current output type: OUT2 low limit value to 105%)</li> </ul> <p>Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered.</p>						

(\*1) The placement of the decimal point follows the selection.







Characters, Factory Default	Setting Item, Function, Setting Range	
oLLb □□□□	<b>OUT2 low limit</b> <ul style="list-style-type: none"> <li>Sets OUT2 low limit value.</li> <li>Setting range: 0% to OUT2 high limit value (Direct current output type: -5% to OUT2 high limit value)</li> </ul> Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered.	
db□□ □□□□	<b>Overlap/Dead band</b> <ul style="list-style-type: none"> <li>Sets the overlap band or dead band for OUT1 and OUT2.               <ul style="list-style-type: none"> <li>+ Set value: Dead band</li> <li>- Set value: Overlap band</li> </ul> </li> <li>Setting range: -200.0 to 200.0°C (°F), DC voltage, current inputs: -2000 to 2000 (*1)</li> </ul> Available when Event output EV2 (EV2 option) or Heating/Cooling control (DS, DA options) is ordered.	
conf HEAT	<b>Direct/Reverse action</b>	
	HEAT	Reverse (Heating) action
	cool	Direct (Cooling) action
RA□□ □□□□	<b>EV1 alarm value</b> <ul style="list-style-type: none"> <li>Sets EV1 alarm value. Corresponds to [EV1 alarm value] in Initial setting mode.</li> <li>EV1 alarm value matches EV1 low limit alarm value in the following cases: □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</li> <li>Setting range:</li> </ul>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
	Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].	

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Function, Setting Range
R1H□ □□□0	<p><b>EV1 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV1 high limit alarm value.</li> </ul> <p>This value is available only for the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p> <p>Corresponds to [EV1 high limit alarm value] in Initial setting mode.</p> <ul style="list-style-type: none"> <li>Setting range: Same as those of EV1 alarm value</li> </ul>
R2□□ □□□0	<p><b>EV2 alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 alarm value.</li> </ul> <p>Corresponds to [EV2 alarm value] in Initial setting mode.</p> <p>EV2 alarm value matches EV2 low limit alarm value in the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p> <ul style="list-style-type: none"> <li>Setting range: Same as those of EV1 alarm value</li> </ul> <p>Available only when □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>
R2H□ □□□0	<p><b>EV2 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 high limit alarm value.</li> </ul> <p>This value is available only for the following cases:            □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p> <p>Corresponds to [EVT2 high limit alarm value] in Initial setting mode.</p> <ul style="list-style-type: none"> <li>Setting range: Same as those of EV1 alarm value</li> </ul>
H1□□ □□□0  H1 and CT1 current value are alternately indicated in the PV Display.	<p><b>Heater burnout alarm 1 value</b></p> <ul style="list-style-type: none"> <li>Sets the heater current value for Heater burnout alarm 1.</li> </ul> <p>Corresponds to [Heater burnout alarm 1 value] in Initial setting mode.</p> <p>Characters H1 and CT1 current value are indicated alternately in the PV Display. When OUT1 is ON, the CT1 current value is updated. When OUT1 is OFF, the unit memorizes the previous value when OUT1 was ON. Upon returning to set limits, the alarm will stop.</p> <ul style="list-style-type: none"> <li>Setting range:            20.0 A: 0.0 to 20.0 A            100.0 A: 0.0 to 100.0 A            Setting to 0.0 disables the alarm.</li> </ul> <p>Available only when Heater burnout alarm (C5W, EIW, W options) is ordered.</p>

Characters, Factory Default	Setting Item, Function, Setting Range
HZ   HZ and CT2 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 2 value</b> <ul style="list-style-type: none"> <li>Sets the heater current value for Heater burnout alarm 2. Available only when using 3-phase. Corresponds to [Heater burnout alarm 2 value] in Initial setting mode. Characters HZ and CT2 current value are indicated alternately in the PV Display. When OUT1 is ON, the CT2 current value is updated. When OUT1 is OFF, the unit memorizes the previous value when OUT1 was ON. Upon returning to set limits, the alarm will stop.</li> <li>Setting range: 20.0 A: 0.0 to 20.0 A 100.0 A: 0.0 to 100.0 A Setting to 0.0 disables the alarm.</li> </ul> Available only when Heater burnout alarm (C5W, EIW, W options) is ordered.
LP_L  	<b>Loop break alarm time</b> <ul style="list-style-type: none"> <li>Sets the time to assess the Loop break alarm. Corresponds to [Loop break alarm time] in Initial setting mode. Refer to 'Loop Break Alarm' on p.50.</li> <li>Setting range: 0 to 200 minutes Setting to 0 (zero) disables the alarm.</li> </ul>
LP_H  	<b>Loop break alarm span</b> <ul style="list-style-type: none"> <li>Sets the temperature to assess the Loop break alarm. Corresponds to [Loop Break alarm span] in Initial setting mode. Refer to 'Loop Break Alarm' on p.50.</li> <li>Setting range: 0 to 150°C (°F), 0.0 to 150.0°C (°F) DC voltage, current inputs: 0 to 1500 (*1) Setting to 0 (zero) disables the alarm.</li> </ul>

(\*1) The placement of the decimal point follows the selection.


### [OUT1 rate-of-change]

For Heating control, if PV is lower than SV, the output is generally turned from OFF to ON as shown in (Fig. 7.2-2).


If OUT1 rate-of-change is set, the output can be changed by the rate-of-change (Fig. 7.2-3).

This control is suitable for high temperature heaters (which are made from molybdenum, tungsten or platinum, etc., and used at approx. 1500 to 1800°C) which are easily burnt out from turning on electricity rapidly.

- Usual output
- Output when Output rate-of-change is set

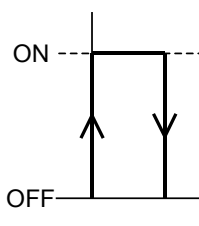

(Fig. 7.2-2)

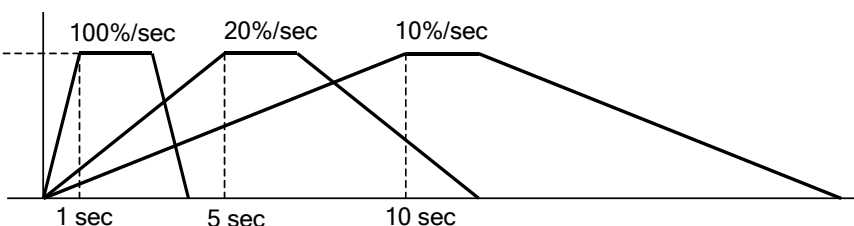

(Fig. 7.2-3)

### 7.3 Engineering Mode


To enter Engineering mode, press and hold the  $\wedge$  and  $\vee$  keys (in that order) together for 3 seconds in RUN mode.

Use the  $\wedge$  or  $\vee$  key for settings (or selections).

To register the set data, use the  $\odot$  key.

Explanation of setting items:


- Upper left: PV Display: Indicates setting characters.
- Lower left: SV Display: Indicates factory default value.
- Right side: Indicates the setting item, explanation of its function and setting range (or selection item).

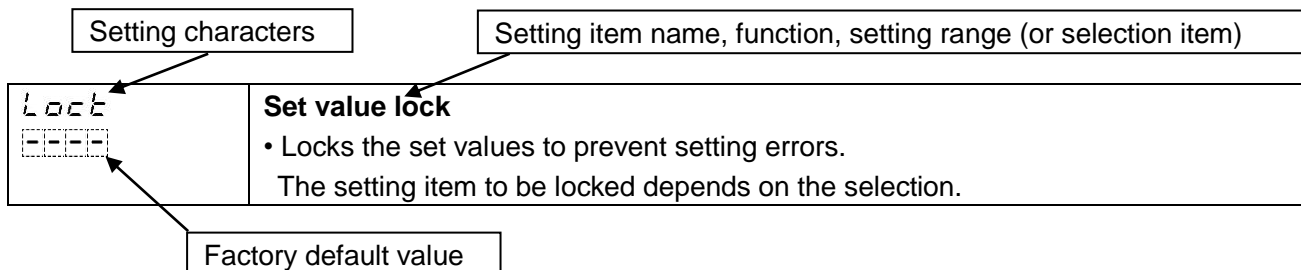

Characters, Factory Default	Setting Item, Function, Setting Range		
Lock ----	<b>Set value lock</b> • Locks the set values to prevent setting errors. The setting item to be locked depends on the selection. • Selection item:		
		Change via Keypad	Change via Software Communication
	----	Unlock	All set values can be changed.
	Loc 1	Lock 1	
	Loc 2	Lock 2	In Fixed value control, only SV and Alarm value can be changed. In Program control, Step SV, Step time and Alarm value can be changed.
	Loc 3	Lock 3	
	Loc 4	Lock 4	Setting items – except Input type, Controller/Converter – can be changed temporarily via software communication. However, if power is turned ON again, setting values revert to the values before Lock 3, 4 or 5 was selected.
	Loc 5	Lock 5	



Characters, Factory Default	Setting Item, Function, Setting Range																																																																				
EBI 1 □000	<b>Event input DI1 allocation</b> <ul style="list-style-type: none"> <li>• Selects Event input DI1 from the Event Input Allocation Table. Corresponds to [Event input DI1 allocation] in Initial setting mode.</li> <li>• Selection item:</li> </ul> <b>Event Input Allocation Table</b> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;"></th> <th style="width: 30%;">Event input function</th> <th style="width: 15%;">Input ON (Closed)</th> <th style="width: 15%;">Input OFF (Open)</th> <th style="width: 30%;">Remarks</th> </tr> </thead> <tbody> <tr> <td>□000</td> <td>No event</td> <td></td> <td></td> <td></td> </tr> <tr> <td>□001</td> <td>Set value memory</td> <td></td> <td></td> <td></td> </tr> <tr> <td>□002</td> <td>Control ON/OFF</td> <td>Control OFF</td> <td>Control ON</td> <td>Control output OFF function</td> </tr> <tr> <td>□003</td> <td>Direct/Reverse action</td> <td>Direct action</td> <td>Reverse action</td> <td>Always effective</td> </tr> <tr> <td>□004</td> <td>Preset output 1 ON/OFF</td> <td>Preset output</td> <td>Usual control</td> <td>If sensor is burnt out, the unit maintains control with the preset MV.</td> </tr> <tr> <td>□005</td> <td>Preset output 2 ON/OFF</td> <td>Preset output</td> <td>Usual control</td> <td>The unit maintains control with the preset MV.</td> </tr> <tr> <td>□006</td> <td>Auto/Manual control</td> <td>Manual control</td> <td>Automatic control</td> <td></td> </tr> <tr> <td>□007</td> <td>Remote/Local</td> <td>Remote</td> <td>Local</td> <td>Effective only when EIT (External setting input) option is ordered.</td> </tr> <tr> <td>□008</td> <td>Program control RUN/STOP</td> <td>RUN</td> <td>STOP</td> <td>Level action when power-on</td> </tr> <tr> <td>□009</td> <td>Program control Holding/Not holding</td> <td>Holding</td> <td>Not holding</td> <td>Level action when power-on</td> </tr> <tr> <td>□010</td> <td>Program control Advance function</td> <td>Advance function</td> <td>Usual control</td> <td>Level action when power-on</td> </tr> <tr> <td>□011</td> <td>Integral action holding</td> <td>Integral action holding</td> <td>Usual integral action</td> <td>Control continues with the integral value being held.</td> </tr> </tbody> </table> <p style="font-size: small; margin-top: 5px;">For BCS2, available only when Event input (EIW, EIT, EI options) is ordered. For BCR2/BCD2, available when Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</p>					Event input function	Input ON (Closed)	Input OFF (Open)	Remarks	□000	No event				□001	Set value memory				□002	Control ON/OFF	Control OFF	Control ON	Control output OFF function	□003	Direct/Reverse action	Direct action	Reverse action	Always effective	□004	Preset output 1 ON/OFF	Preset output	Usual control	If sensor is burnt out, the unit maintains control with the preset MV.	□005	Preset output 2 ON/OFF	Preset output	Usual control	The unit maintains control with the preset MV.	□006	Auto/Manual control	Manual control	Automatic control		□007	Remote/Local	Remote	Local	Effective only when EIT (External setting input) option is ordered.	□008	Program control RUN/STOP	RUN	STOP	Level action when power-on	□009	Program control Holding/Not holding	Holding	Not holding	Level action when power-on	□010	Program control Advance function	Advance function	Usual control	Level action when power-on	□011	Integral action holding	Integral action holding	Usual integral action	Control continues with the integral value being held.
	Event input function	Input ON (Closed)	Input OFF (Open)	Remarks																																																																	
□000	No event																																																																				
□001	Set value memory																																																																				
□002	Control ON/OFF	Control OFF	Control ON	Control output OFF function																																																																	
□003	Direct/Reverse action	Direct action	Reverse action	Always effective																																																																	
□004	Preset output 1 ON/OFF	Preset output	Usual control	If sensor is burnt out, the unit maintains control with the preset MV.																																																																	
□005	Preset output 2 ON/OFF	Preset output	Usual control	The unit maintains control with the preset MV.																																																																	
□006	Auto/Manual control	Manual control	Automatic control																																																																		
□007	Remote/Local	Remote	Local	Effective only when EIT (External setting input) option is ordered.																																																																	
□008	Program control RUN/STOP	RUN	STOP	Level action when power-on																																																																	
□009	Program control Holding/Not holding	Holding	Not holding	Level action when power-on																																																																	
□010	Program control Advance function	Advance function	Usual control	Level action when power-on																																																																	
□011	Integral action holding	Integral action holding	Usual integral action	Control continues with the integral value being held.																																																																	
EBI 2 □000	<b>Event input DI2 allocation</b> <ul style="list-style-type: none"> <li>• Selects Event input DI2 from the Event Input Allocation Table. Corresponds to [Event input DI2 allocation] in Initial setting mode.</li> <li>• Selection item: Same as Event input DI1 allocation</li> </ul> <p style="font-size: small; margin-top: 5px;">For BCS2, available only when Event input (EIW, EI options) is ordered. For BCR2/BCD2, available when Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</p>																																																																				

Characters, Factory Default	Setting Item, Function, Setting Range		
EV1 000	<b>Event output EV1 allocation</b> <ul style="list-style-type: none"> <li>• Selects Event output EV1 allocation from the Event Output Allocation Table below. Corresponds to [Event output EV1 allocation] in Initial setting mode.</li> <li>• When changing Event output EV1 allocation, refer to Section “8.10 Items to be Initialized by Changing Settings” (p.96).</li> <li>• Selection item:</li> </ul>		
	<b>Event Output Allocation Table</b>		
	000	No event	
	001	Alarm output, High limit alarm	
	002	Alarm output, Low limit alarm	
	003	Alarm output, High/Low limits alarm	
	004	Alarm output, High/Low limits independent alarm	
	005	Alarm output, High/Low limit range alarm	
	006	Alarm output, High/Low limit range independent alarm	
	007	Alarm output, Process high alarm	
	008	Alarm output, Process low alarm	
	009	Alarm output, High limit with standby	
	010	Alarm output, Low limit with standby	
	011	Alarm output, High/Low limits with standby alarm	
	012	Alarm output, High/Low limits with standby independent alarm	
	013	Heater burnout alarm output	
	014	Loop break alarm output	
	015	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].
	016	Output during AT	Turns ON during AT.
017	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.	
018	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output 0: OFF 1: ON B1 EV2 output 0: OFF 1: ON	
A12A no	<b>EV1 alarm value 0 Enabled/Disabled</b> <ul style="list-style-type: none"> <li>• When EV1 alarm value is 0 (zero), alarm action can be Enabled or Disabled. Corresponds to [EV1 alarm value 0 Enabled/Disabled] in Initial setting mode.</li> <li>• Selection item:</li> </ul>		
	no	Disabled	
	4E4	Enabled	
Available when 001 (Alarm output, High limit alarm) to 005 (Alarm output, High/Low limit range independent alarm), 009 (Alarm output, High limit with standby alarm) to 012 (Alarm output, High/Low limits with standby independent alarm) are selected in [Event output EV1 allocation].			

Characters, Factory Default	Setting Item, Function, Setting Range																								
R 100 0000	<p><b>EV1 alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV1 alarm value.</li> </ul> <p>Corresponds to [EV1 alarm value] in Initial setting mode.</p> <p>EV1 alarm value matches EV1 low limit alarm value in the following cases:            0004 (Alarm output, High/Low limits independent alarm), 0005 (Alarm output, High/Low limit range independent alarm), or 0012 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p> <ul style="list-style-type: none"> <li>Setting range:</li> </ul> <table border="1" data-bbox="421 539 1481 1196"> <tr> <td>High limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Process high alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>Process low alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>High limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> </table> <p>Available when any alarm from 0001 (Alarm output, High limit alarm) to 0012 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p>	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)	Process high alarm	Input range low limit to Input range high limit (*1) (*3)	Process low alarm	Input range low limit to Input range high limit (*1) (*3)	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)																								
Process high alarm	Input range low limit to Input range high limit (*1) (*3)																								
Process low alarm	Input range low limit to Input range high limit (*1) (*3)																								
High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)																								
R 1H0 0000	<p><b>EV1 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV1 high limit alarm value.</li> </ul> <p>This value is available only for the following cases:            0004 (Alarm output, High/Low limits independent alarm), 0005 (Alarm output, High/Low limit range independent alarm), 0012 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p> <p>Corresponds to [EV1 high limit alarm value] in Initial setting mode.</p> <ul style="list-style-type: none"> <li>Setting range: Same as those of EV1 alarm value</li> </ul>																								
R 1H4 0010	<p><b>EV1 alarm hysteresis</b></p> <ul style="list-style-type: none"> <li>Sets EV1 alarm hysteresis.</li> </ul> <p>Corresponds to [EV1 alarm hysteresis] in Initial setting mode.</p> <ul style="list-style-type: none"> <li>Setting range: 0.1 to 1000.0°C (°F),            DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> <p>Available when any alarm from 0001 (Alarm output, High limit alarm) to 0012 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].</p>																								


(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Function, Setting Range				
A 124 □□□0	<b>EV1 alarm delay time</b> <ul style="list-style-type: none"> <li>Sets EV1 alarm action delay time. Corresponds to [EV1 alarm delay time] in Initial setting mode. When setting time has elapsed after the input enters the alarm output range, the alarm is activated.</li> <li>Setting range: 0 to 10000 seconds</li> </ul> Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].				
A 125 noñL	<b>EV1 alarm Energized/De-energized</b> <ul style="list-style-type: none"> <li>Selects Energized/De-energized status for EV1 alarm. Corresponds to [EV1 alarm Energized/De-energized] in Initial setting mode. (Refer to 'EV1/EV2 Energized/De-energized' on p.50.)</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="427 689 1465 779"> <tr> <td data-bbox="427 689 587 734">noñL</td> <td data-bbox="587 689 1465 734">Energized</td> </tr> <tr> <td data-bbox="427 734 587 779">rEB4</td> <td data-bbox="587 734 1465 779">De-energized</td> </tr> </table> Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV1 allocation].	noñL	Energized	rEB4	De-energized
noñL	Energized				
rEB4	De-energized				
F4 14 □□□1	<b>TS1 output step number</b> <ul style="list-style-type: none"> <li>Sets the step number for which Time signal output TS1 is turned OFF or ON during Program control. Corresponds to [TS1 output step number] in Initial setting mode.</li> <li>Setting range: 1 to 9</li> </ul> Available only when □□15 (Time signal output) is selected in [Event output EV1 allocation].				
F4 1F 0000	<b>TS1 OFF time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS1 OFF time. Corresponds to [TS1 OFF time] in Initial setting mode.</li> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□15 (Time signal output) is selected in [Event output EV1 allocation].				
F4 1G 0000	<b>TS1 ON time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS1 ON time. Corresponds to [TS1 ON time] in Initial setting mode.</li> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□15 (Time signal output) is selected in [Event output EV1 allocation].				

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Function, Setting Range	
EV02 000	<b>Event output EV2 allocation</b> <ul style="list-style-type: none"> <li>• Selects Event output EV2 allocation from the Event Output Allocation Table below. Corresponds to [Event output EV2 allocation] in Initial setting mode.</li> <li>• When changing Event output EV2 allocation, refer to Section “8.10 Items to be Initialized by Changing Settings” (p.96).</li> <li>• Selection item:</li> </ul> <b>Event Output Allocation Table</b>	
000	No event	
001	Alarm output, High limit alarm	
002	Alarm output, Low limit alarm	
003	Alarm output, High/Low limits alarm	
004	Alarm output, High/Low limits independent alarm	
005	Alarm output, High/Low limit range alarm	
006	Alarm output, High/Low limit range independent alarm	
007	Alarm output, Process high alarm	
008	Alarm output, Process low alarm	
009	Alarm output, High limit with standby alarm	
010	Alarm output, Low limit with standby alarm	
011	Alarm output, High/Low limits with standby alarm	
012	Alarm output, High/Low limits with standby independent alarm	
013	Heater burnout alarm output	
014	Loop break alarm output	
015	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].
016	Output during AT	Turns ON during AT.
017	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.
018	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output 0: OFF 1: ON B1 EV2 output 0: OFF 1: ON
019	Heating/Cooling control relay contact output	Works as Control output OUT2 (Heating/Cooling control).
Available only when Event output EV2 (EV2 option) is ordered.		

Characters, Factory Default	Setting Item, Function, Setting Range																								
R2E8 no□□	<p><b>EV2 alarm value 0 Enabled/Disabled</b></p> <ul style="list-style-type: none"> <li>When EV2 alarm value is 0 (zero), alarm action can be Enabled or Disabled. Corresponds to [EV2 alarm value 0 Enabled/Disabled] in Initial setting mode.</li> <li>Selection item:</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; text-align: center;">no□□</td> <td style="text-align: center;">Disabled</td> </tr> <tr> <td style="text-align: center;">yE4□</td> <td style="text-align: center;">Enabled</td> </tr> </table> <p>Available when □□□1 (Alarm output, High limit alarm) to □□□5 (Alarm output, High/Low limit range independent alarm), □□□9 (Alarm output, High limit with standby alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) are selected in [Event output EV2 allocation].</p>	no□□	Disabled	yE4□	Enabled																				
no□□	Disabled																								
yE4□	Enabled																								
R2□□ □□□□	<p><b>EV2 alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 alarm value. Corresponds to [EV2 alarm value] in Initial setting mode. EV2 alarm value matches EV2 low limit alarm value in the following cases: □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</li> <li>Setting range:</li> </ul> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">High limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limit range independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Process high alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>Process low alarm</td> <td>Input range low limit to Input range high limit (*1) (*3)</td> </tr> <tr> <td>High limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>Low limit with standby alarm</td> <td>-(Input span) to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> <tr> <td>High/Low limits with standby independent alarm</td> <td>0 to Input span °C (°F) (*1) (*2)</td> </tr> </table> <p>Available when any alarm from □□□1 (Alarm output, High limit alarm) to □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</p>	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)	Process high alarm	Input range low limit to Input range high limit (*1) (*3)	Process low alarm	Input range low limit to Input range high limit (*1) (*3)	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)																								
Process high alarm	Input range low limit to Input range high limit (*1) (*3)																								
Process low alarm	Input range low limit to Input range high limit (*1) (*3)																								
High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)																								
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)																								
R24□ □□□□	<p><b>EV2 high limit alarm value</b></p> <ul style="list-style-type: none"> <li>Sets EV2 high limit alarm value. This value is available only for the following cases: □□□4 (Alarm output, High/Low limits independent alarm), □□□5 (Alarm output, High/Low limit range independent alarm), or □□12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].</li> <li>Corresponds to [EV2 high limit alarm value] in Initial setting mode.</li> <li>Setting range: Same as those of EV2 alarm value</li> </ul>																								

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Function, Setting Range				
R2H4 □□ 10	<b>EV2 alarm hysteresis</b> <ul style="list-style-type: none"> <li>Sets EV2 alarm hysteresis.</li> </ul> Corresponds to [EV2 alarm hysteresis] in Initial setting mode. <ul style="list-style-type: none"> <li>Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)</li> </ul> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].				
R2D4 □□□□	<b>EV2 alarm delay time</b> <ul style="list-style-type: none"> <li>Sets EV2 alarm action delay time.</li> </ul> Corresponds to [EV2 alarm delay time] in Initial setting mode.           When setting time has elapsed after the input enters the alarm output range, the alarm is activated. <ul style="list-style-type: none"> <li>Setting range: 0 to 10000 seconds</li> </ul> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].				
R2L $\bar{n}$ n $\bar{o}$ $\bar{n}$ L	<b>EV2 alarm Energized/De-energized</b> <ul style="list-style-type: none"> <li>Selects Energized/De-energized status for EV2 alarm.</li> </ul> Corresponds to [EV2 alarm Energized/De-energized] in Initial setting mode.           Refer to 'EV1/EV2 Energized/De-energized' (p.50). <ul style="list-style-type: none"> <li>Selection item:</li> </ul> <table border="1" data-bbox="427 965 1481 1048"> <tr> <td data-bbox="427 965 580 1003">n<math>\bar{o}</math><math>\bar{n}</math>L</td> <td data-bbox="580 965 1481 1003">Energized</td> </tr> <tr> <td data-bbox="427 1003 580 1048">rE<math>\bar{E}</math>4</td> <td data-bbox="580 1003 1481 1048">De-energized</td> </tr> </table> Available when any alarm from □□□ 1 (Alarm output, High limit alarm) to □□ 12 (Alarm output, High/Low limits with standby independent alarm) is selected in [Event output EV2 allocation].	n $\bar{o}$ $\bar{n}$ L	Energized	rE $\bar{E}$ 4	De-energized
n $\bar{o}$ $\bar{n}$ L	Energized				
rE $\bar{E}$ 4	De-energized				
F424 □□□ 1	<b>TS2 output step number</b> <ul style="list-style-type: none"> <li>Sets the step number for which Time signal output TS2 is turned OFF or ON during Program control.</li> </ul> Corresponds to [TS2 output step number] in Initial setting mode. <ul style="list-style-type: none"> <li>Setting range: 1 to 9</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV2 allocation].				
F42F 0000	<b>TS2 OFF time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS2 OFF time.</li> </ul> Corresponds to [TS2 OFF time] in Initial setting mode. <ul style="list-style-type: none"> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV2 allocation].				
F42o 0000	<b>TS2 ON time</b> <ul style="list-style-type: none"> <li>Sets Time signal output TS2 ON time.</li> </ul> Corresponds to [TS2 ON time] in Initial setting mode. <ul style="list-style-type: none"> <li>Setting range: 00:00 to 99:59 (*4)</li> </ul> Available only when □□ 15 (Time signal output) is selected in [Event output EV2 allocation].				

(\*1) The placement of the decimal point follows the selection.

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Function, Setting Range						
4000 1000	<p><b>Sensor correction coefficient</b></p> <ul style="list-style-type: none"> <li>Sets sensor correction coefficient.</li> </ul> <p>Sets slope of input value from a sensor.</p> $\text{PV after sensor correction} = \text{Current PV} \times (\text{Sensor correction coefficient}) + (\text{Sensor correction value})$ <p>Refer to Section '9.1 Input Value Correction' (p. 97).</p> <ul style="list-style-type: none"> <li>Setting range: -10.000 to 10.000</li> </ul>						
4000 0000	<p><b>Sensor correction</b></p> <ul style="list-style-type: none"> <li>This corrects the input value from the sensor.</li> </ul> <p>When a sensor cannot be set at the exact location where control is desired, the sensor-measured temperature may deviate from the temperature in the controlled location. When using plural controllers, sometimes the measured temperatures do not concur due to differences in sensor accuracy or dispersion of load capacities. In such a case, the control can be set at the desired temperature by adjusting the input value of sensors.</p> $\text{PV after sensor correction} = \text{Current PV} \times (\text{Sensor correction coefficient}) + (\text{Sensor correction value})$ <p>Refer to Section '9.1 Input Value Correction' (p.97).</p> <ul style="list-style-type: none"> <li>Setting range: -1000.0 to 1000.0°C (°F)</li> <li>DC voltage, current inputs: -10000 to 10000 (*1)</li> </ul>						
FILL 0000	<p><b>PV filter time constant</b></p> <ul style="list-style-type: none"> <li>Sets PV filter time constant.</li> </ul> <p>If the value is set too high, it affects control results due to the delay of response.</p> <ul style="list-style-type: none"> <li>Setting range: 0.0 to 10.0 seconds</li> </ul>						
cñ4L noñL	<p><b>Communication protocol</b></p> <ul style="list-style-type: none"> <li>Selects communication protocol.</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="421 1249 1481 1373"> <tbody> <tr> <td data-bbox="421 1249 568 1285">noñL</td> <td data-bbox="568 1249 1481 1285">Shinko protocol</td> </tr> <tr> <td data-bbox="421 1285 568 1321">ñodr</td> <td data-bbox="568 1285 1481 1321">Modbus ASCII</td> </tr> <tr> <td data-bbox="421 1321 568 1373">ñodr</td> <td data-bbox="568 1321 1481 1373">Modbus RTU</td> </tr> </tbody> </table> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>	noñL	Shinko protocol	ñodr	Modbus ASCII	ñodr	Modbus RTU
noñL	Shinko protocol						
ñodr	Modbus ASCII						
ñodr	Modbus RTU						
cñno 0000	<p><b>Instrument number</b></p> <ul style="list-style-type: none"> <li>Sets the instrument number.</li> </ul> <p>The instrument numbers should be set one by one when multiple instruments are connected in Serial communication, otherwise communication is impossible.</p> <ul style="list-style-type: none"> <li>Setting range: 0 to 95</li> </ul> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>						

(\*1) The placement of the decimal point follows the selection.



Characters, Factory Default	Setting Item, Function, Setting Range												
cñ4P □□96	<b>Communication speed</b> <ul style="list-style-type: none"> <li>• Selects a communication speed equal to that of the host computer.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="416 300 568 427"> <tr> <td>□□96</td> <td>9600 bps</td> </tr> <tr> <td>□192</td> <td>19200 bps</td> </tr> <tr> <td>□384</td> <td>38400 bps</td> </tr> </table> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>	□□96	9600 bps	□192	19200 bps	□384	38400 bps						
□□96	9600 bps												
□192	19200 bps												
□384	38400 bps												
cñFF 7EEn	<b>Data bit/Parity</b> <ul style="list-style-type: none"> <li>• Selects data bit and parity.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="416 591 568 831"> <tr> <td>8non</td> <td>8 bits/No parity</td> </tr> <tr> <td>7non</td> <td>7 bits/No parity</td> </tr> <tr> <td>8EEn</td> <td>8 bits/Even</td> </tr> <tr> <td>7EEn</td> <td>7 bits/Even</td> </tr> <tr> <td>8odd</td> <td>8 bits/Odd</td> </tr> <tr> <td>7odd</td> <td>7 bits/Odd</td> </tr> </table> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>	8non	8 bits/No parity	7non	7 bits/No parity	8EEn	8 bits/Even	7EEn	7 bits/Even	8odd	8 bits/Odd	7odd	7 bits/Odd
8non	8 bits/No parity												
7non	7 bits/No parity												
8EEn	8 bits/Even												
7EEn	7 bits/Even												
8odd	8 bits/Odd												
7odd	7 bits/Odd												
cñ4I □□□1	<b>Stop bit</b> <ul style="list-style-type: none"> <li>• Selects the stop bit.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="416 999 568 1077"> <tr> <td>□□□1</td> <td>1 bit</td> </tr> <tr> <td>□□□2</td> <td>2 bits</td> </tr> </table> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>	□□□1	1 bit	□□□2	2 bits								
□□□1	1 bit												
□□□2	2 bits												
cñd4 □□10	<b>Response delay time</b> <ul style="list-style-type: none"> <li>• Response from the controller can be delayed after receiving command from the host computer.</li> <li>• Setting range: 0 to 1000 ms</li> </ul> <p>Available only when Serial communication (C5W, C5 options) is ordered.</p>												
4b_b □□□0	<b>SVTC bias</b> <ul style="list-style-type: none"> <li>• Control desired value (SV) adds SVTC bias value to the value received by the SVTC command.</li> <li>• Setting range: Converted value of <math>\pm 20\%</math> of the input span DC voltage, current inputs: <math>\pm 20\%</math> of the scaling span (*1)</li> </ul> <p>Available when Shinko protocol is selected in [Communication protocol]. Available when Serial communication (C5W, C5 options) is ordered.</p>												
rEñI LocL	<b>Remote/Local</b> <ul style="list-style-type: none"> <li>• Selects Remote (Remote operation) or Local (keypad operation) setting of the SV.</li> <li>• Selection item:</li> </ul> <table border="1" data-bbox="416 1722 568 1800"> <tr> <td>LocL</td> <td>Local</td> </tr> <tr> <td>rEñI</td> <td>Remote</td> </tr> </table> <p>Available only when External setting input (EIT option) is ordered.</p>	LocL	Local	rEñI	Remote								
LocL	Local												
rEñI	Remote												

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range	
rFLH 1370	<b>External setting input high limit</b> <ul style="list-style-type: none"> <li>Sets External setting input high limit value. (This value corresponds to 20 mA in Direct current input.)</li> <li>Setting range: External setting input low limit to Input range high limit Available only when External setting input (EIT option) is ordered.</li> </ul>	
rFLl -200	<b>External setting input low limit</b> <ul style="list-style-type: none"> <li>Sets External setting input low limit value. (This value corresponds to 4 mA in Direct current input.)</li> <li>Setting range: Input range low limit to External setting input high limit Available only when External setting input (EIT option) is ordered.</li> </ul>	
rF_b □□□□	<b>Remote bias</b> <ul style="list-style-type: none"> <li>During remote action, SV includes the remote bias value.</li> <li>Setting range: Converted value of <math>\pm 20\%</math> of the input span DC voltage, current inputs: <math>\pm 20\%</math> of the scaling span (*1) Available only when External setting input (EIT option) is ordered.</li> </ul>	
Trout Pb□□	<b>Transmission output type</b> <ul style="list-style-type: none"> <li>Selects the transmission output type.</li> <li>When changing transmission output type, refer to Section “8.10 Items to be Initialized by Changing Settings” (p.96).</li> <li>Selection item:</li> </ul>	
	Pb□□	PV transmission
	4b□□	SV transmission
	n̄b□□	MV transmission
	db□□	DV transmission
Available only when Transmission output (EIT option) is ordered.		
rFLH 1370	<b>Transmission output high limit</b> <ul style="list-style-type: none"> <li>Sets the Transmission output high limit value. (This value corresponds to 20 mA in Direct current output.)</li> <li>Setting range:</li> </ul>	
	PV, SV transmission	Transmission output low limit to Input range high limit value
	MV transmission	Transmission output low limit to 105.0%
	DV transmission	Transmission output low limit to Scaling span (*1)
	Available only when Transmission output (EIT option) is ordered.	
rFLl -200	<b>Transmission output low limit</b> <ul style="list-style-type: none"> <li>Sets the Transmission output low limit value. (This value corresponds to 4 mA in Direct current output.)</li> <li>Setting range:</li> </ul>	
	PV, SV transmission	Input range low limit to Transmission output high limit value
	MV transmission	-5.0% to Transmission output high limit value
	DV transmission	-Scaling span to Transmission output high limit value (*1)
	Available only when Transmission output (EIT option) is ordered.	
n̄.4□ n̄l n̄□	<b>Step time unit</b> <ul style="list-style-type: none"> <li>Selects the Step time unit for the Program control.</li> <li>Selection item:</li> </ul>	
	n̄l n̄□	Hours:Minutes
	4E□□	Minutes:Seconds
Available only when Program control is selected in [OUT/OFF key function].		

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range
PrEF 4rOP	<b>Power restore action</b> <ul style="list-style-type: none"> <li>• Selects the program status if a power failure occurs mid-program and it is restored.</li> <li>• Selection item:</li> </ul>
	4rOP   Stops after power is restored.
	conF   Continues (resumes) after power is restored.
	HoLd   Suspends (on hold) after power is restored.
	Available only when Program control is selected in [OUT/OFF key function].
4.4B □□□□	<b>Program start temperature</b> <ul style="list-style-type: none"> <li>• Sets the step temperature when Program control starts.</li> <li>• Setting range: Scaling low limit value to Scaling high limit value (*1)</li> </ul> Available only when Program control is selected in [OUT/OFF key function].
4.4L PB□□	<b>Program control start type</b> <ul style="list-style-type: none"> <li>• Selects the Program control start type.</li> <li>• Selection item:</li> </ul>
	PB□□   PV start
	PBr□   PVR start
	4B□□   SV start
	Available only when Program control is selected in [OUT/OFF key function].
rEPF □□□□	<b>Number of repetitions</b> <ul style="list-style-type: none"> <li>• Sets the number of repetitions for Program control.</li> <li>• Setting range: 0 to 10000 times</li> </ul> Available only when Program control is selected in [OUT/OFF key function].
rR44 4B4F	<b>SV Rise/Fall rate start type</b> <ul style="list-style-type: none"> <li>• When control output is turned from OFF to ON, or switched from Manual to Automatic control, SV start or PV start can be selected for SV rise rate or fall rate action.</li> <li>• When power is turned ON, PV start is adopted for SV Rise/Fall rate action, regardless of selected contents.</li> <li>• Selection item:</li> </ul>
	4B4F   SV start
	PB4F   PV start
rRFU □□□□	<b>SV rise rate</b> <ul style="list-style-type: none"> <li>• Sets SV rise rate (rising value for 1 minute).</li> </ul> When the SV is adjusted, it approaches the new SV by the preset rate-of-change (°C/min, °F/min). When the power is turned on, the control starts from the PV, and approaches the SV by the rate-of-change (°C/min, °F/min). <ul style="list-style-type: none"> <li>• Setting range: 0 to 10000°C/min (°F/min)</li> </ul> Thermocouple, RTD inputs with a decimal point: 0.0 to 1000.0°C/min (°F/min) DC voltage, current inputs: 0 to 10000/min Setting to 0 or 0.0 disables this function.

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Function, Setting Range									
rRfd □□□0	<b>SV fall rate</b> <ul style="list-style-type: none"> <li>Sets SV fall rate (falling value for 1 minute). When the SV is adjusted, it approaches the new SV by the preset rate-of-change (°C/min, °F/min). When the power is turned on, the control starts from the PV and approaches the SV by the rate-of-change (°C/min, °F/min).</li> <li>Setting range: 0 to 10000°C/min (°F/min) Thermocouple, RTD inputs with a decimal point: 0.0 to 1000.0°C/min (°F/min) DC voltage, current inputs: 0 to 10000/min Setting to 0 or 0.0 disables this function.</li> </ul>									
P4B□ oFF□	<b>Indication when control output OFF</b> <ul style="list-style-type: none"> <li>Selects the indication when control output is OFF.</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="419 663 1471 824"> <tr> <td data-bbox="419 663 587 701">oFF□</td> <td data-bbox="587 663 1471 701">OFF indication</td> </tr> <tr> <td data-bbox="419 701 587 739">R_oFF</td> <td data-bbox="587 701 1471 739">No indication</td> </tr> <tr> <td data-bbox="419 739 587 777">PB□</td> <td data-bbox="587 739 1471 777">PV indication</td> </tr> <tr> <td data-bbox="419 777 587 824">PBAL</td> <td data-bbox="587 777 1471 824">PV indication + Any Alarm active</td> </tr> </table>		oFF□	OFF indication	R_oFF	No indication	PB□	PV indication	PBAL	PV indication + Any Alarm active
oFF□	OFF indication									
R_oFF	No indication									
PB□	PV indication									
PBAL	PV indication + Any Alarm active									
AT_b □□20	<b>AT bias</b> <ul style="list-style-type: none"> <li>Sets bias value for the AT. AT point is automatically determined by the deviation between PV and SV. Refer to Section '8.5 Setting PID Constants (by performing AT)' (p.82).</li> <li>Setting range: 0 to 50°C (0 to 100°F) or 0.0 to 50.0°C (0.0 to 100.0°F) Available only for PID control. Not available for DC voltage, current inputs</li> </ul>									
AT_b □□10	<b>AT gain</b> <ul style="list-style-type: none"> <li>Sets proportional band ratio calculated by performing AT or 'AT on startup'.</li> <li>Setting range: 0.1 to 10.0 times</li> </ul>									
E_oUF oFF□	<b>Output status when input errors occur</b> <ul style="list-style-type: none"> <li>Selects the output status when input errors occur.</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="419 1373 1471 1451"> <tr> <td data-bbox="419 1373 587 1411">oFF□</td> <td data-bbox="587 1373 1471 1411">Output OFF</td> </tr> <tr> <td data-bbox="419 1411 587 1451">oN□</td> <td data-bbox="587 1411 1471 1451">Output ON</td> </tr> </table> <p data-bbox="419 1462 1471 1496">Available for Direct current and voltage inputs, and Direct current output.</p>		oFF□	Output OFF	oN□	Output ON				
oFF□	Output OFF									
oN□	Output ON									
nRnU oFF□	<b>OUT/OFF key function</b> <ul style="list-style-type: none"> <li>Selects OUT/OFF key function.</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="419 1619 1471 1742"> <tr> <td data-bbox="419 1619 587 1657">oFF□</td> <td data-bbox="587 1619 1471 1657">Control output OFF function</td> </tr> <tr> <td data-bbox="419 1657 587 1695">nRnU</td> <td data-bbox="587 1657 1471 1695">Auto/Manual control</td> </tr> <tr> <td data-bbox="419 1695 587 1742">Pr_oG</td> <td data-bbox="587 1695 1471 1742">Program control</td> </tr> </table>		oFF□	Control output OFF function	nRnU	Auto/Manual control	Pr_oG	Program control		
oFF□	Control output OFF function									
nRnU	Auto/Manual control									
Pr_oG	Program control									
nRr4 RUF_o	<b>Auto/Manual after power interruption</b> <ul style="list-style-type: none"> <li>When the power to the controller is turned ON, selects whether the unit starts using Automatic control or Manual control.</li> <li>Selection item:</li> </ul> <table border="1" data-bbox="419 1899 1471 1977"> <tr> <td data-bbox="419 1899 587 1937">RUF_o</td> <td data-bbox="587 1899 1471 1937">Automatic control</td> </tr> <tr> <td data-bbox="419 1937 587 1977">nRnU</td> <td data-bbox="587 1937 1471 1977">Manual control</td> </tr> </table> <p data-bbox="419 1989 1471 2018">Available only when Auto/Manual control is selected in [OUT/OFF key function].</p>		RUF_o	Automatic control	nRnU	Manual control				
RUF_o	Automatic control									
nRnU	Manual control									

Characters, Factory Default	Setting Item, Function, Setting Range				
P1 AE 0000	<b>Indication time</b> <ul style="list-style-type: none"> <li>• Sets time to backlight from no operation status until backlight is switched off. Backlight relights by pressing any key while backlight is OFF.</li> <li>• Setting range: 00:00 to 60:00 (Minutes:Seconds) When set to 00:00, remains ON.</li> </ul>				
P4 F1 □□.00	<b>OUT1 MV preset value</b> <ul style="list-style-type: none"> <li>• If 'Preset output 1 ON/OFF' or 'Preset output 2 ON/OFF' is selected in [Event input allocation], OUT1 MV can be set.</li> <li><b>Preset output 1 ON/OFF:</b> If sensor is burnt out during Event Input ON, control is performed with the preset MV.</li> <li><b>Preset output 2 ON/OFF:</b> When Event input is ON, control is performed with the preset MV.</li> <li>• Setting range: 0.0 to 100.0% (Direct current output: -5.0 to 105.0%) For BCS2, available only when Event input (EIW, EIT, EI options) is ordered. For BCR2/BCD2, available when Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> </ul>				
P4 F2 □□.00	<b>OUT2 MV preset value</b> <ul style="list-style-type: none"> <li>• If 'Preset output 1 ON/OFF' or 'Preset output 2 ON/OFF' is selected in [Event input allocation], OUT2 MV can be set.</li> <li><b>Preset output 1 ON/OFF:</b> If sensor is burnt out during Event Input ON, control is performed with the preset MV.</li> <li><b>Preset output 2 ON/OFF:</b> When Event input is ON, control is performed with the preset MV.</li> <li>• Setting range: 0.0 to 100.0% (Direct current output: -5.0 to 105.0%) Available for the following cases:               <ul style="list-style-type: none"> <li>• For BCS2, Event output EV2 (EV2 option), Heating/Cooling control (DS, DA) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• For BCR2/BCD2, Event output EV2 (EV2 option), Heating/Cooling control (DS, DA), Serial communication (C5W option) or Event input (EIW, EIT, EI options) is ordered.</li> <li>• When □□.19 (Heating/Cooling control relay contact output) is selected in [Event output EV2 allocation].</li> </ul> </li> </ul>				
FUnc cnfr	<b>Controller/Converter function</b> <ul style="list-style-type: none"> <li>• Selects either controller or converter function.</li> <li>• Selection item:               <table border="1" data-bbox="411 1518 1481 1603"> <tr> <td data-bbox="411 1518 587 1563">cnfr</td> <td data-bbox="587 1518 1481 1563">Controller</td> </tr> <tr> <td data-bbox="411 1563 587 1603">cnbr</td> <td data-bbox="587 1563 1481 1603">Converter</td> </tr> </table> </li> </ul> <p>Available only when OUT1 is Direct current output.</p>	cnfr	Controller	cnbr	Converter
cnfr	Controller				
cnbr	Converter				

# 8. Operation and Settings of Standard Functions

## 8.1 Selecting an input type


Select an input type in [Input type] in Initial setting mode.

Selection item:

┌──┐┌──┐┌──┐┌──┐	K	-200	to	1370	°C	┌──┐┌──┐┌──┐┌──┐	K	-328	to	2498	°F
┌──┐┌──┐┌──┐┌──┐	K	-200.0	to	400.0	°C	┌──┐┌──┐┌──┐┌──┐	K	-328.0	to	752.0	°F
┌──┐┌──┐┌──┐┌──┐	J	-200	to	1000	°C	┌──┐┌──┐┌──┐┌──┐	J	-328	to	1832	°F
┌──┐┌──┐┌──┐┌──┐	R	0	to	1760	°C	┌──┐┌──┐┌──┐┌──┐	R	32	to	3200	°F
┌──┐┌──┐┌──┐┌──┐	S	0	to	1760	°C	┌──┐┌──┐┌──┐┌──┐	S	32	to	3200	°F
┌──┐┌──┐┌──┐┌──┐	B	0	to	1820	°C	┌──┐┌──┐┌──┐┌──┐	B	32	to	3308	°F
┌──┐┌──┐┌──┐┌──┐	E	-200	to	800	°C	┌──┐┌──┐┌──┐┌──┐	E	-328	to	1472	°F
┌──┐┌──┐┌──┐┌──┐	T	-200.0	to	400.0	°C	┌──┐┌──┐┌──┐┌──┐	T	-328.0	to	752.0	°F
┌──┐┌──┐┌──┐┌──┐	N	-200	to	1300	°C	┌──┐┌──┐┌──┐┌──┐	N	-328	to	2372	°F
┌──┐┌──┐┌──┐┌──┐	PL-II	0	to	1390	°C	┌──┐┌──┐┌──┐┌──┐	PL-II	32	to	2534	°F
┌──┐┌──┐┌──┐┌──┐	C(W/Re5-26)	0	to	2315	°C	┌──┐┌──┐┌──┐┌──┐	C(W/Re5-26)	32	to	4199	°F
┌──┐┌──┐┌──┐┌──┐	Pt100	-200.0	to	850.0	°C	┌──┐┌──┐┌──┐┌──┐	Pt100	-328.0	to	1562.0	°F
┌──┐┌──┐┌──┐┌──┐	JPt100	-200.0	to	500.0	°C	┌──┐┌──┐┌──┐┌──┐	JPt100	-328.0	to	932.0	°F
┌──┐┌──┐┌──┐┌──┐	Pt100	-200	to	850	°C	┌──┐┌──┐┌──┐┌──┐	Pt100	-328	to	1562	°F
┌──┐┌──┐┌──┐┌──┐	JPt100	-200	to	500	°C	┌──┐┌──┐┌──┐┌──┐	JPt100	-328	to	932	°F
420A	4 to 20 mA DC					-2000 to 10000					
020A	0 to 20 mA DC					-2000 to 10000					
01V	0 to 1 V DC					-2000 to 10000					
05V	0 to 5 V DC					-2000 to 10000					
15V	1 to 5 V DC					-2000 to 10000					
010V	0 to 10 V DC					-2000 to 10000					

Factory default value is K -200 to 1370°C.

**(Example) Selecting K -200.0 to 400.0°C**

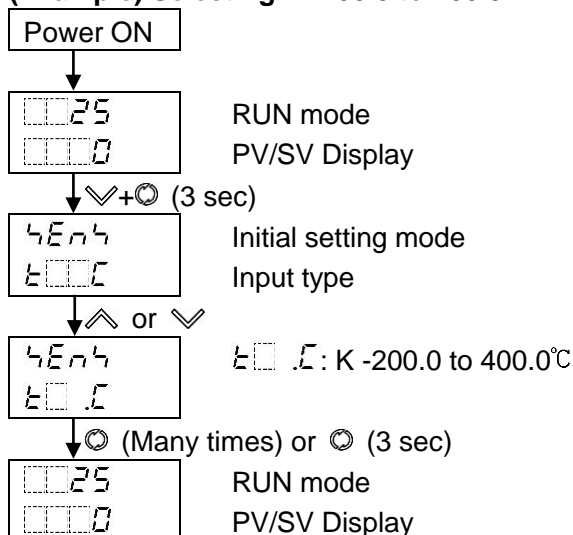

Now, selection is complete.

## 8.2 Selecting PID Control or ON/OFF Control

Selects PID or ON/OFF control action.

Select PID or ON/OFF control action in [OUT1 proportional band] in Sub setting mode.  
If 'OUT1 proportional band' is set to 0 (zero), the unit performs ON/OFF control action.  
Factory default value is PID control.

### PID control


Proportional (P) action suppresses overshoot and hunting, Integral (I) action corrects offset, and Derivative (D) action converges rapid temperature change due to disturbance in shorter time. Optimum values of P, I, D, ARW for PID control can be automatically set by performing AT.

### ON/OFF control

When PV is lower than the SV, the control output is turned ON, and if PV exceeds the SV, the control output is turned OFF.

Overshoot, undershoot and hunting are generated in ON/OFF control action.

### (Example) Selecting PID control

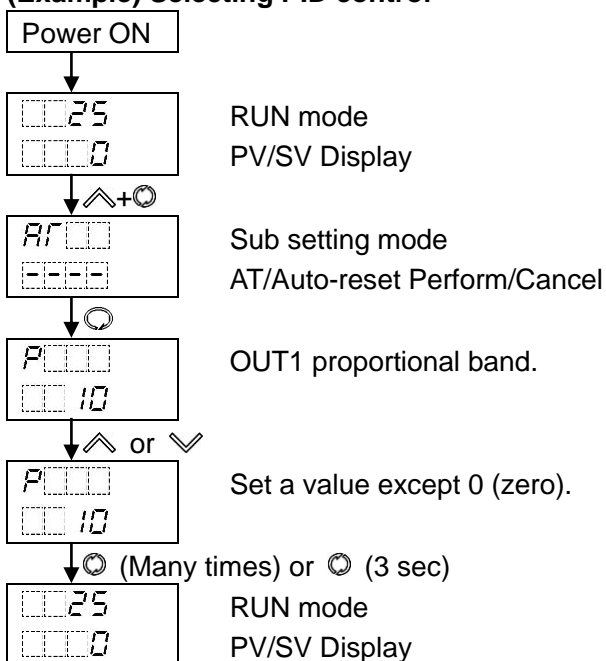

Now, selection is complete.

- P control action: When [Integral time] and [Derivative time] are set to 0 (zero).
- PD control action: When [Integral time] is set to 0 (zero).
- PI control action: When [Derivative time] is set to 0 (zero).

### 8.3 Selecting Direct/Reverse Action

Selects Direct or Reverse control action.


Select Direct or Reverse control action in [Direct/Reverse action] in Sub setting mode.

Factory default value is Reverse action.

#### Direct action

In Direct action, MV is increased when PV is higher than SV (positive deviation).

Refrigerators, etc. perform Direct action.

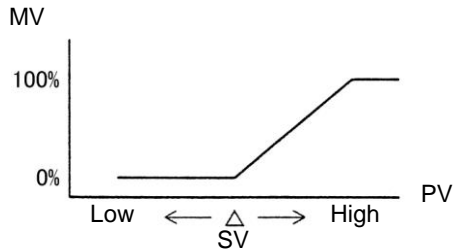


(Fig. 8.3-1)

#### Reverse action


In Reverse action, MV is increased when SV is higher than PV (negative deviation).

Electric furnaces, etc. perform Reverse action.

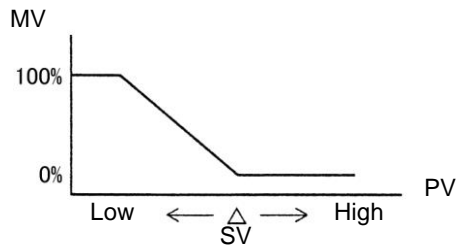

(Fig. 8.3-2)

#### (Example) Selecting Reverse action

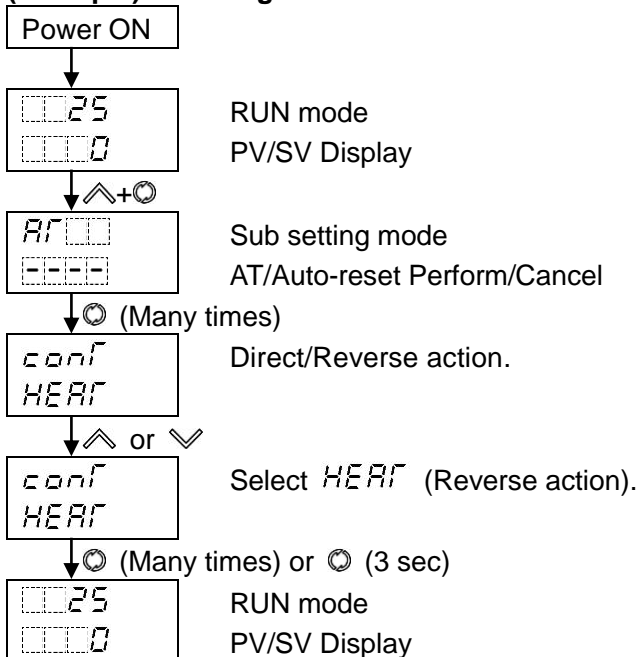

Now, selection is complete.



## 8.4 Performing Fixed Value Control

Fixed value control is a typical temperature control action, which reduces deviation from a single SV by comparing with PV.

To perform Fixed value control, set the SV.

There are 2 ways to set the SV.


- Set the SV in [SV1] in Initial setting mode.
- Set the SV in [SV1] in Main setting mode.

Setting item [SV1] in Initial setting mode corresponds to [SV1] in Main setting mode.

Therefore, if one SV1 is changed, the other SV1 will also be changed.

Factory default value is 0 (zero).

### (Example) Setting SV to 100°C

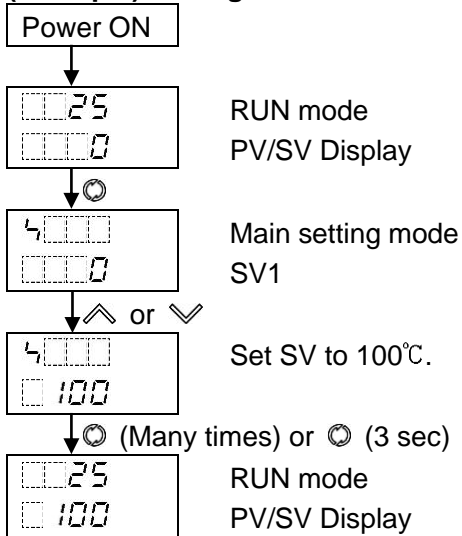

Now, settings are complete.

## 8.5 Setting PID Constants (by Performing AT)

### Notice

- Perform the AT during the trial run.
- During the AT, none of the setting items can be set.
- If power failure occurs during the AT, the AT stops.
- If AT is cancelled during the process, P, I and D values revert to the values before AT was performed.
- AT will be forced to stop if it has not been completed within 4 hours.
- Sometimes the AT process will not fluctuate if AT is performed at or near room temperature. Therefore AT might not finish normally.

To set PID constants, perform AT.

There are 2 types of AT.

#### (1) Usual AT


In order to set each value of P, I, D and ARW automatically, the AT process should be made to fluctuate to obtain an optimal value.

For DC voltage, current inputs, the AT process will fluctuate around the SV for conditions of [A], [B] and [C] below.

One of 3 types of fluctuation below is automatically selected depending on the deviation between SV and PV.

#### [A] If there is a large difference between the SV and PV as the temperature is rising

When AT bias is set to 20°C, the AT process will fluctuate at the temperature 20°C lower than the SV.

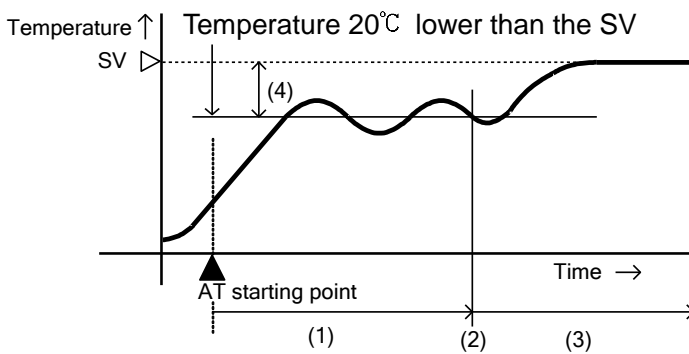


(Fig. 8.5-1)

- (1) Calculating PID constants
- (2) PID constants calculated
- (3) Controlled by the PID constants set by AT.
- (4) AT bias value (Factory default: 20°C)

#### [B] When the control is stable

The AT process will fluctuate around the SV.

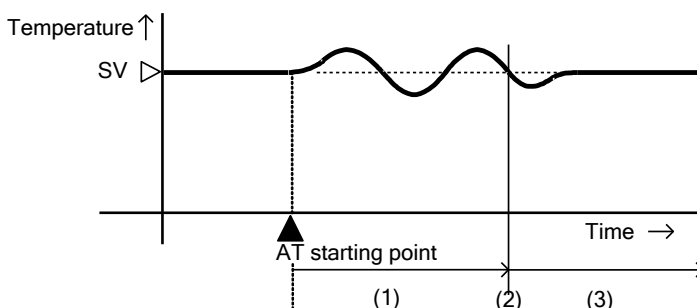


(Fig. 8.5-2)

- (1) Calculating PID constants
- (2) PID constants calculated
- (3) Controlled by the PID constants set by AT.

**[C] If there is a large difference between the SV and PV as the temperature is falling**

When AT bias is set to 20°C, the AT process will fluctuate at the temperature 20°C higher than the SV.

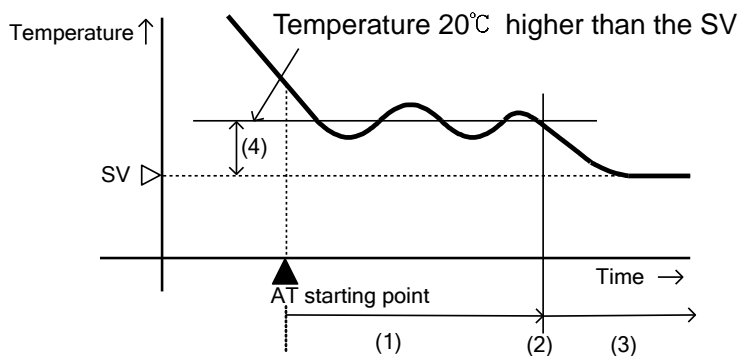

- (1) Calculating PID constants
- (2) PID constants calculated
- (3) Controlled by the PID constants set by AT.
- (4) AT bias value (Factory default: 20°C)


(Fig. 8.5-3)

**(2) AT on Startup**

When usual AT cannot be performed normally due to temperature interference, PID parameters can be calculated only when temperature is rising.

As the selected [AT on startup Perform] is internally memorized, 'AT on startup' is performed whenever the power is turned ON.

To stop 'AT on startup', select [AT/AT on startup/Auto-reset Cancel].

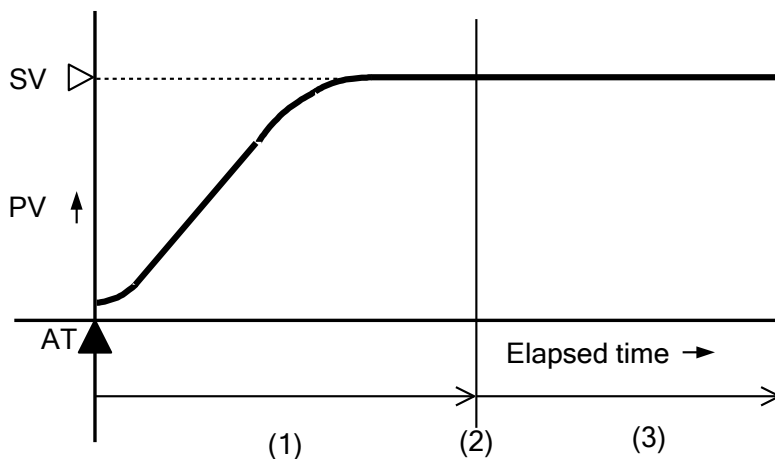

- (1) Calculating AT (from startup, until PV is stabilized at SV)
- (2) PID constants calculated
- (3) Controls with PID constants set by 'AT on startup'

(Fig. 8.5-4)

**[Conditions of Performing 'AT on startup']**

- When starting 'AT on startup', if deviation between PV and SV exceeds the proportional band by 2 times or more, 'AT on startup' will perform.

Even when power is turned ON (\*), or when the unit reverts to the RUN mode after canceling control output OFF, 'AT on startup' performs.

However, if PV slope and delay time cannot be measured normally for P, I, D calculation, the error code below will be indicated in the PV display, and automatically 'AT on startup' will stop.

To release the error code, press the key.


Error Code	Error Contents
Er20	PV slope and delay time cannot be measured normally for P, I, D calculation.

(\*) When power is turned ON, 'AT on startup' can be performed for Fixed value control. It cannot be performed for Program control.

**[Conditions of Cancelling 'AT on startup']**

- When Control output is turned OFF
- When input is burnt out

**(Example) Performing Usual AT**

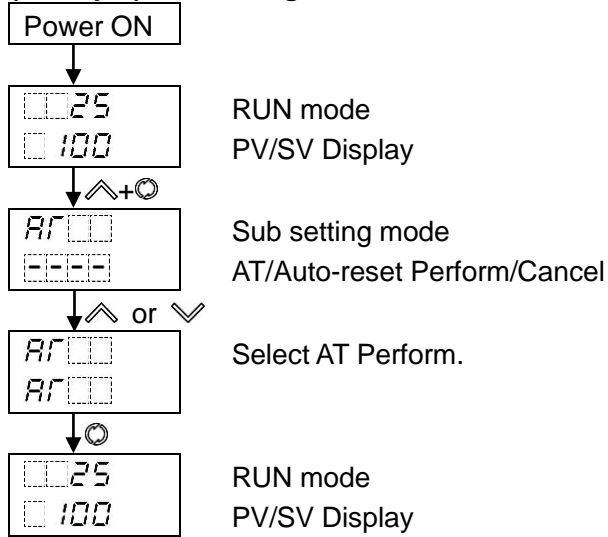

Now, selection is complete.

The AT indicator flashes while AT is performing.

After AT is complete, the AT indicator goes off, and control is performed using PID constants calculated by the AT.

If AT does not finish after 4 hours, the error code below will be indicated in the PV Display, and AT will automatically stop.

To cancel the error code, press the key.


Error Code	Error Contents
<i>Er20</i>	If AT or 'AT on startup' does not finish after 4 hours.

## 8.6 Performing Auto-reset

### Notice


- Auto-reset is cancelled in approximately 4 minutes. It cannot be released while performing this function.
- If input is burnt out, Auto-reset will be forced to stop.

Auto-reset is performed to correct the offset at the point at which PV indication is stabilized within the proportional band during the PD control. Since the corrected value is internally memorized, it is not necessary to perform the auto-reset again as long as the process is the same. However, when OUT1 proportional band (P) is set to 0 or 0.0, the corrected value is cleared to 0 (zero).

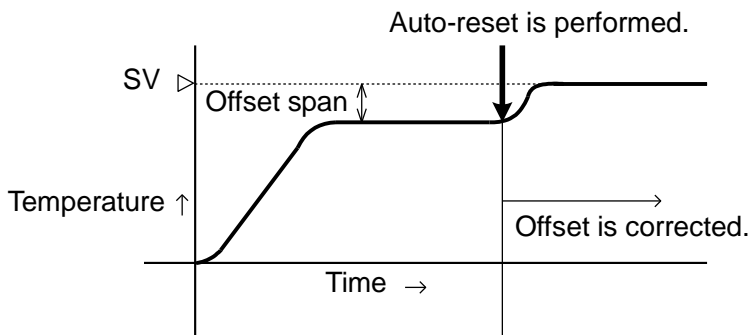

(Fig. 8.6-1)

### (Example) Performing Auto-reset

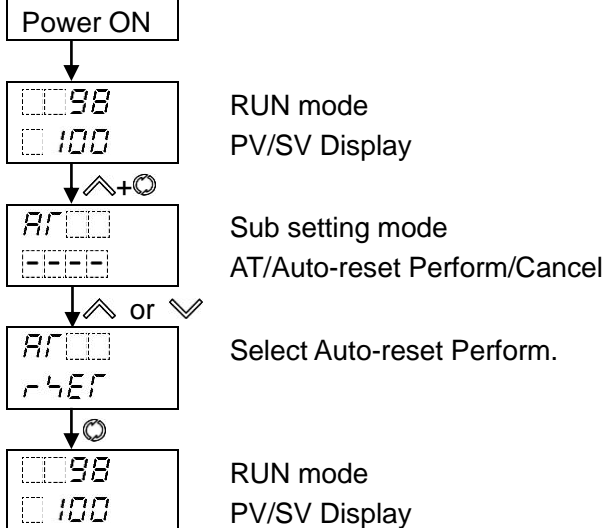

Now, selection is complete.

The AT indicator flashes while Auto-reset is performing.


Auto-reset is completed in approximately 4 minutes.

After Auto-reset is complete, the AT indicator goes off, and control is performed using the offset corrected value.

### 8.7 Performing Program Control

In Program control, SV changes as time elapses, and PV is controlled to order to reach each SV. SV and time can be set for every step, and a maximum of 9 steps can be repeatedly controlled. SV can be set as (Fig. 8.7-1).

(e.g.) Program control of electric furnaces in ceramic manufacture, food machinery, etc.

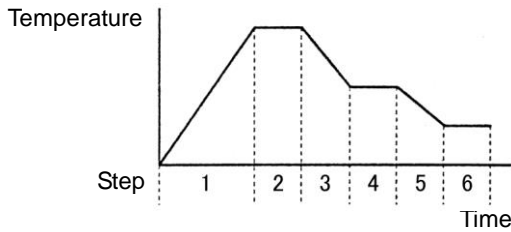

(Fig. 8.7-1)

Major functions of Program control are shown below.


**Number of patterns and steps:** 1 pattern; 9 steps

#### [Wait function]

While Program control is running, the program does not proceed to the next step until the deviation between PV and SV enters  $SV \pm \text{Wait value}$  at the end of step. The PV Display flashes while the Wait function is working.

The Wait function is released on the condition that:

- When program pattern is rising: PV is higher than  $SV - \text{Wait value}$
- When program pattern is falling: PV is lower than  $SV + \text{Wait value}$

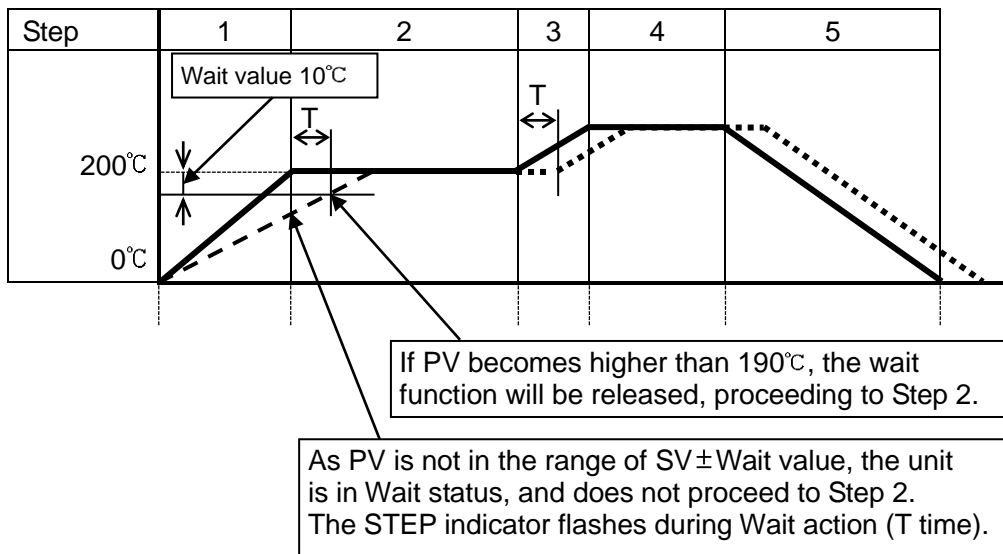

- - - - : PV
- : Program pattern
- ..... : Program pattern delayed by T due to the Wait function


(Fig. 8.7-2)

### Program control Holding/Not holding

During Program control, progress of current step is suspended (on hold).  
 Fixed value control is performed using the SV from the point of suspension.  
 Program control Holding/Not holding can be selected in [Event input DI1/DI2 allocation].


### Advance function

Interrupts current step while Program control is running, and proceeds to the beginning of the next step.

By pressing the  key for approx. 1 second during Program control, Advance function initiates.  
 Select this function in [Event input DI1/DI2 allocation].

### Pattern end output

If Pattern end output is selected in [Event input DI1/DI2 allocation], pattern end output is turned ON after Program control is finished, and the SV Display flashes *P.E.n.d.*


By pressing the  key for approx. 1 second, pattern end output is turned OFF, and the unit enters Standby mode.

### Step time unit

Step time unit can be selected: Hours:Minutes, Minutes:Seconds  
 Factory default value is Hours:Minutes.

### Power Restore Action (Program control after power is restored)

If power fails during Program control, selects a status after the power is restored.  
 Factory default value is 'Stops after power is restored'.


Power Restore Action	Description
Stops after power is restored.	Stops Program control, and returns to Standby (Program control waiting) mode.
Continues after power is restored. (*)	Continues (resumes) Program control.
Suspends after power is restored. (*)	Suspends (on hold) current program, and performs Fixed value control using the SV from the point of suspension. Pressing the  key cancels suspension, and Program control resumes.

(\*) Progressing time error when power is restored: 10 minutes

This controller saves internal status every 10 minutes after Program control starts.

Internal status is also saved when step is changed.

When power is restored, the unit starts from the last auto-save point.

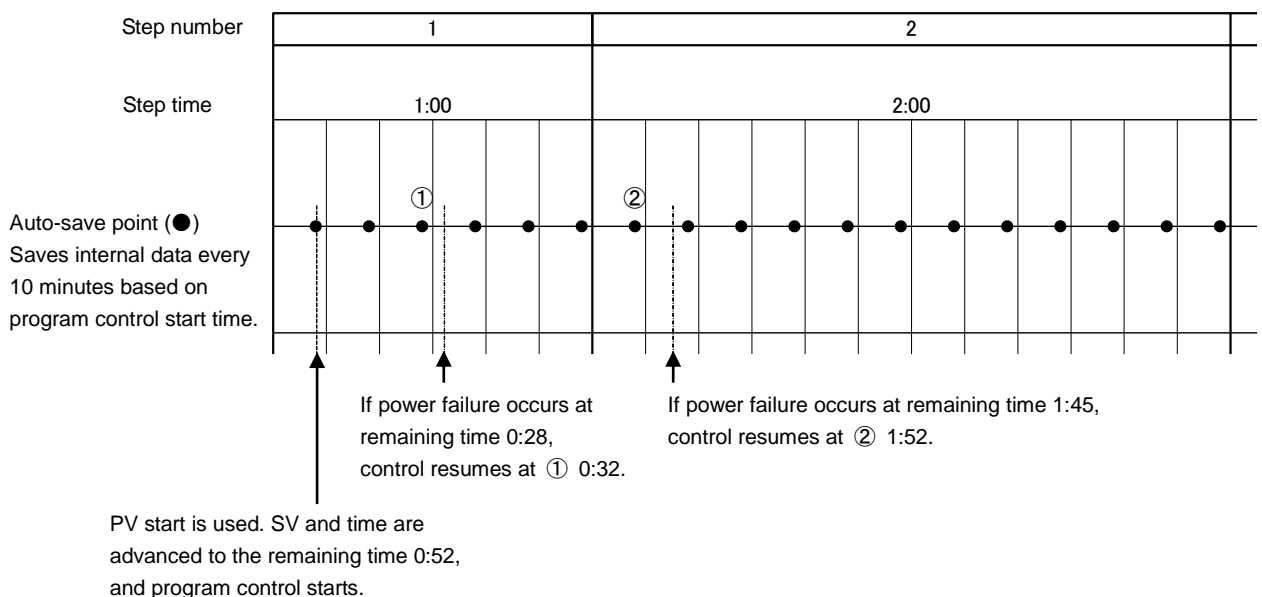

(Fig. 8.7-3)

### Program start temperature


When Program control starts, it starts from the value set in [Program start temperature].  
 Factory default value is 0°C.

### Program control start type

One type can be selected: PV start, PVR start, SV start.  
 Factory default value is PV start.


Program control start type	Description
PV start	When Program control starts, the SV and step time are advanced to the PV, then Program control starts. However, if [Program start temperature] at the time of Program control start is higher than the PV of PV start is initiated, then Program control will start from the SV set in [Program start temperature].
PVR start	In pattern repeating, the SV and step time are advanced to the PV, then the Program control starts.
SV start	Program control starts from the SV which has been set in [Program start temperature].

[SV start]

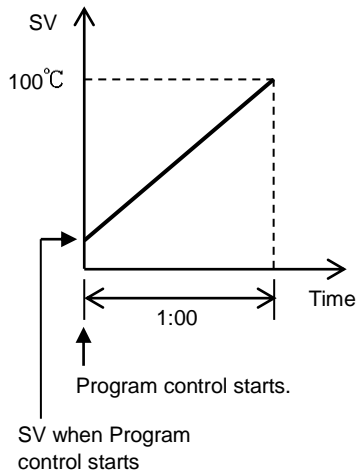

(Fig. 8.7-4)

[PV/PVR start]

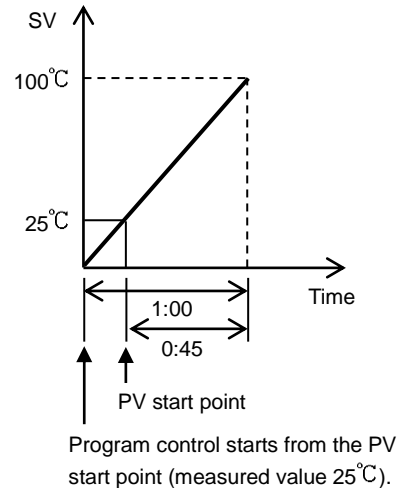

(Fig. 8.7-5)

### Repeat function

When Program control is finished, control can be repeated from Step 1.  
 The user determines the number of repetitions.  
 Factory default value is 0 (zero).




Select 'Program control' in [OUT/OFF key function] in Engineering mode.  
 Factory default value is Control output OFF function.

Set the following items in Engineering mode:

- Step time unit, Power restore action, Program start temperature,
- Program control start type, Number of repetitions

Program pattern can be set in Main setting mode.

### Example of program pattern setting

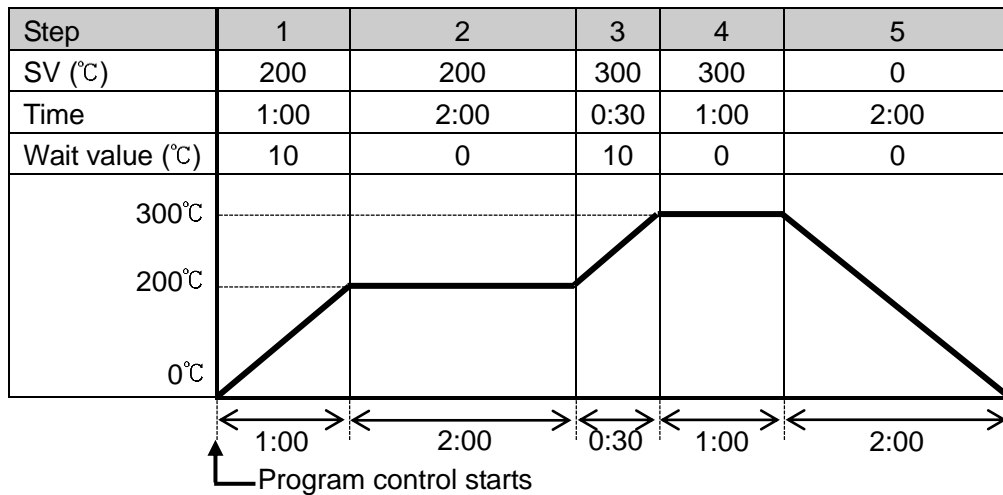

(Fig. 8.7-6)

In the above program pattern, control is performed at each step as follows.

Step 1: The SV gradually rises to 200°C for 1 hour.

When step ends, Wait function works so that control cannot proceed to the next step until PV reaches 190°C when step ends.

Step 2: Fixed value control is performed to keep SV at 200°C for 2 hours.


Step 3: Control is performed so that the SV gradually rises to 300°C for 30 minutes.


When step is finished, Wait function works so that control cannot proceed to the next step until PV reaches 290.


Step 4: Fixed value control is performed to keep SV at 300°C for 1 hour.

Step 5: Control is performed so that the SV gradually falls to 0°C for 2 hours.

**(Example) Selecting Program control and Setting program pattern of (Fig. 8.7-6)**

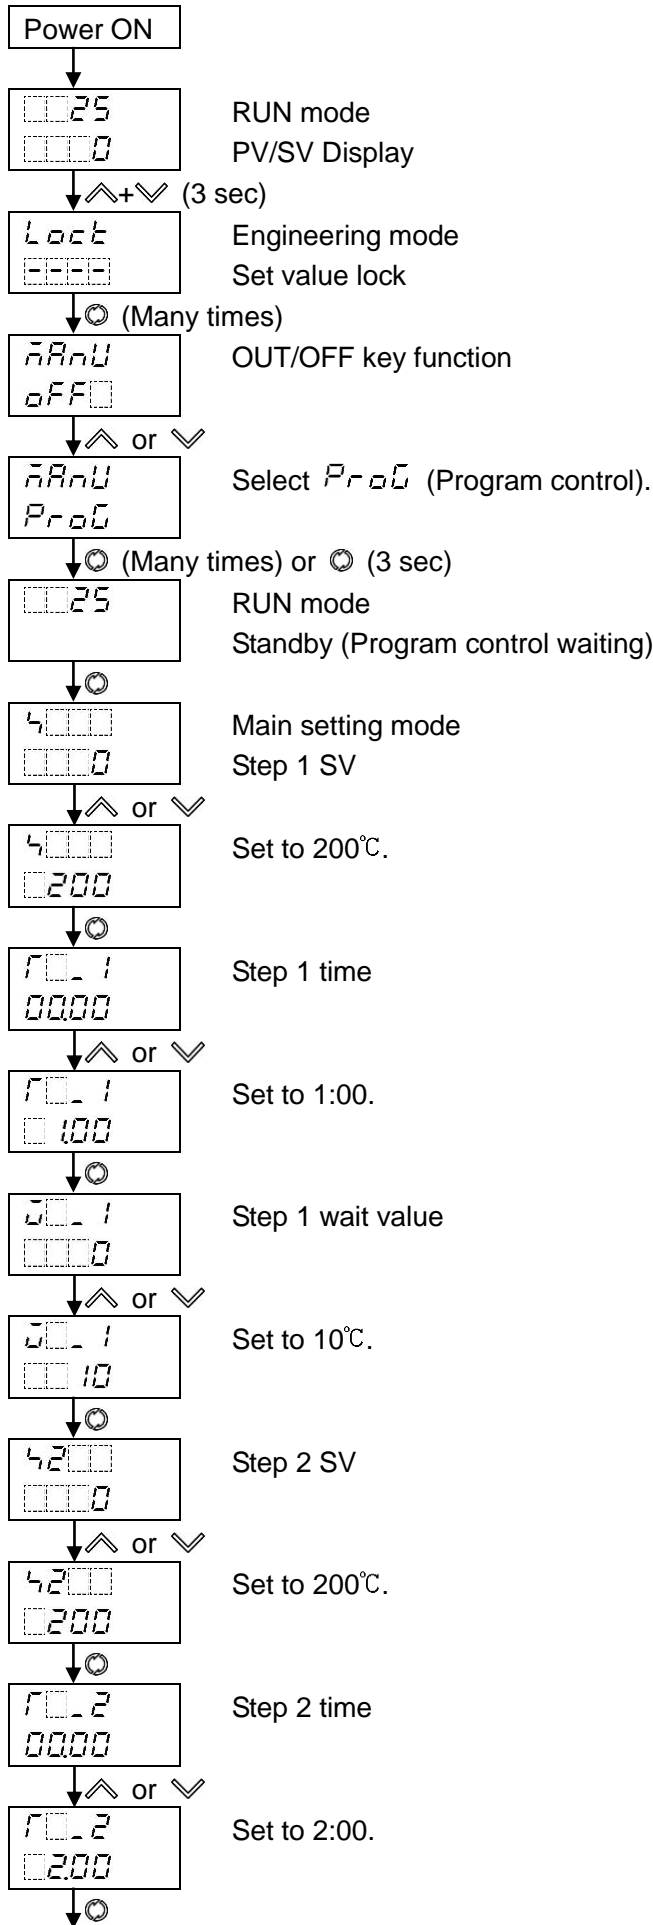

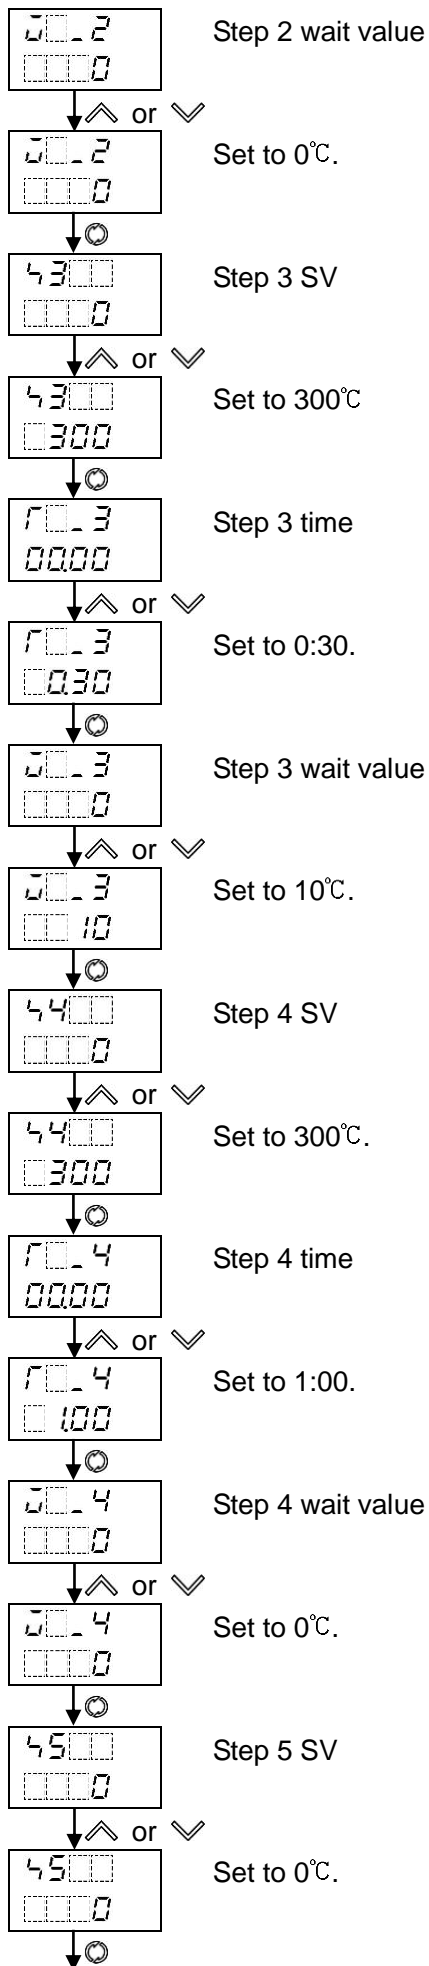

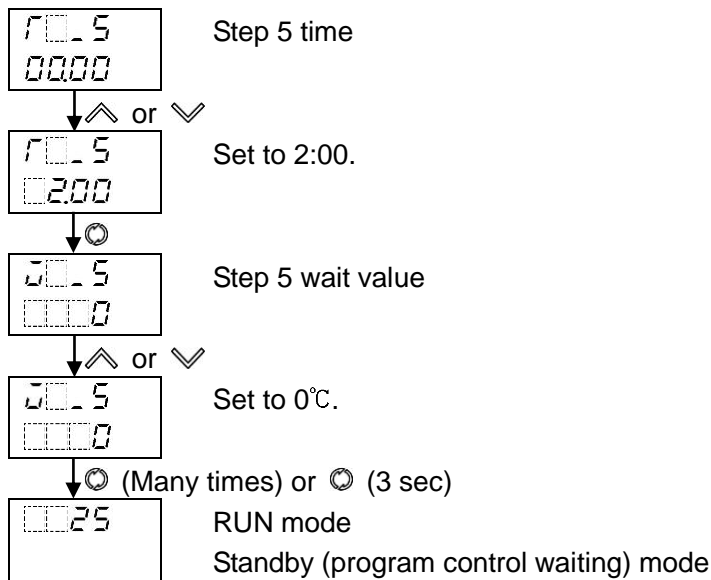

Now, selection is complete.

### Program control RUN

To perform Program control, press and hold the  $\text{Ⓞ}$  key for approx. 1 second in Standby (program control waiting) mode.

Program control starts using the start type selected in [Program control start type].

While Wait function is working, the PV Display flashes.

### Program control STOP

To stop Program control, press and hold the  $\text{Ⓞ}$  key for approx. 1 second during Program control. Program control will stop, and the unit will revert to Standby (Program control waiting) mode.

### Proceeding to the next step during Program control (Advance function)


By pressing the  $\text{⏏}$  key for approx. 1 second during Program control, the performing step is interrupted, proceeding to the next step. (Advance function)

While Wait function is working, the Wait function is cancelled, and proceeds to the next step.

If  $\text{000}$  (Program control RUN/STOP) is selected in [Event input DI1 allocation], Program control RUN/STOP can be switched by terminals 17-18 [DI1-COM]:

Signal edge action from OFF to ON / ON to OFF is engaged.

However, for the action when power is turned ON, Level action [ON (Closed) or OFF (Open)] is engaged.

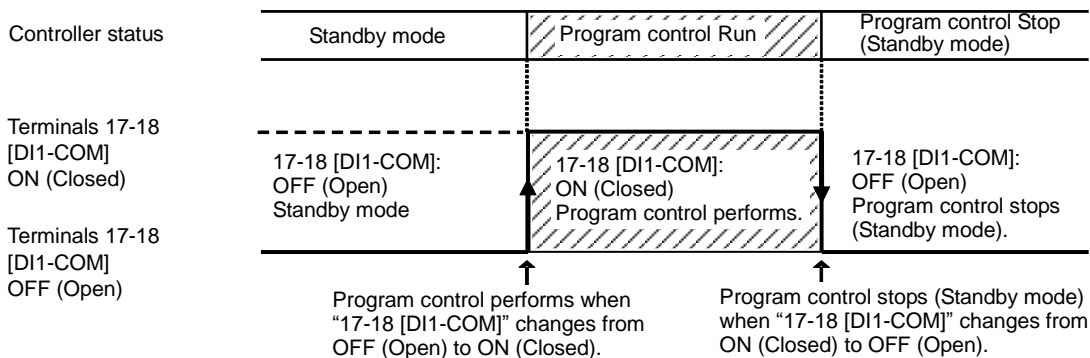

(Fig. 8.7-7)

## 8.8 Event Output EV1 Allocation

Selects Event output EV1 allocation.


There are 2 methods in selection of Event output EV1 allocation.

- Select in [Event output EV1 allocation] in Initial setting mode.
- Select in [Event output EV1 allocation] in Engineering mode.

Setting item [Event output EV1 allocation] in Initial setting mode corresponds to [Event output EV1 allocation] in Engineering mode.


Therefore, if one [Event output EV1 allocation] is changed, the other [Event output EV1 allocation] will also be changed.

### Selection item:

<input type="checkbox"/> 000	No event	
<input type="checkbox"/> 001	Alarm output, High limit alarm	
<input type="checkbox"/> 002	Alarm output, Low limit alarm	
<input type="checkbox"/> 003	Alarm output, High/Low limits alarm	
<input type="checkbox"/> 004	Alarm output, High/Low limits independent alarm	
<input type="checkbox"/> 005	Alarm output, High/Low limit range alarm	
<input type="checkbox"/> 006	Alarm output, High/Low limit range independent alarm	
<input type="checkbox"/> 007	Alarm output, Process high alarm	
<input type="checkbox"/> 008	Alarm output, Process low alarm	
<input type="checkbox"/> 009	Alarm output, High limit with standby alarm	
<input type="checkbox"/> 010	Alarm output, Low limit with standby alarm	
<input type="checkbox"/> 011	Alarm output, High/Low limits with standby alarm	
<input type="checkbox"/> 012	Alarm output, High/Low limits with standby independent alarm	
<input type="checkbox"/> 013	Heater burnout alarm output	
<input type="checkbox"/> 014	Loop break alarm output	
<input type="checkbox"/> 015	Time signal output	Turns OFF or ON during Program control, by setting OFF and ON times within the step set in [Step number].
<input type="checkbox"/> 016	Output during AT	Turns ON during AT.
<input type="checkbox"/> 017	Pattern end output	Turns ON when Program control ends, and remains ON until turned OFF by pressing the  key.
<input type="checkbox"/> 018	Output by communication command	Turns OFF or ON by communication command 00E4H during Serial communication. B0 EV1 output 0: OFF 1: ON B1 EV2 output 0: OFF 1: ON

Factory default value is No event.

**(Example) Selecting High limit alarm, and setting EV1 alarm value to 20°C**

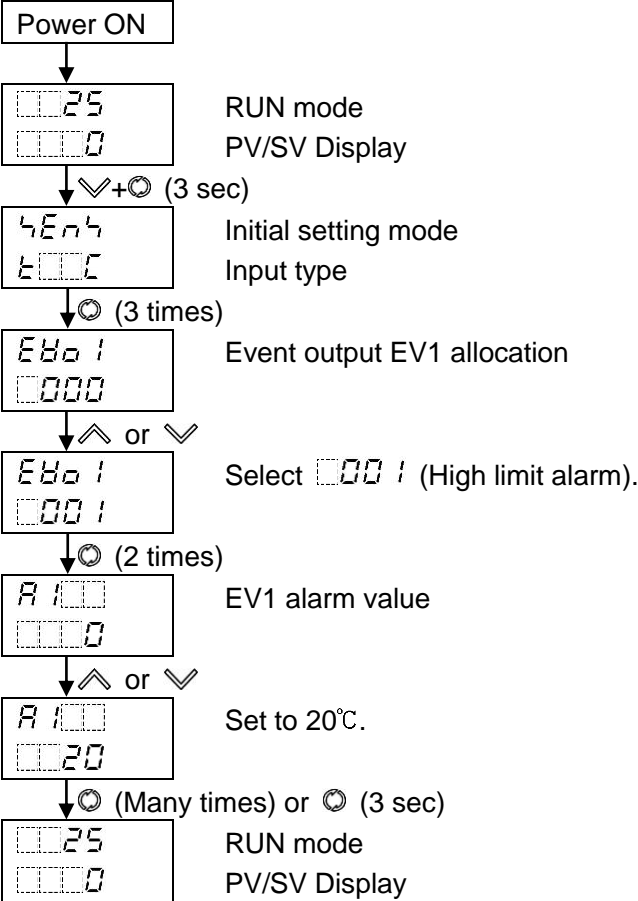

Now, settings are complete.

## 8.9 Indicating MV, Remaining Time (Program Control)


In Fixed value control and Program control, MV and remaining time are indicated.

To indicate MV, press and hold the  key for approx. 3 seconds in PV/SV Display.

The unit enters Monitor mode, and indicates MV.

While MV is indicating, the decimal point flashes.


While in Standby (Program control waiting) mode of Program control, the unit cannot move to Monitor mode.

In Monitor mode, the following contents are switched every time the  key is pressed.

Model	Indicated Contents	
BCS2	Fixed value control	Indicates MV, Set value memory number (in that order).
	Program control	Indicates MV, Remaining time, Step number (in that order).
BCR2, BCD2	Fixed value control	Indicates only MV. (*)
	Program control	Indicates MV, Remaining time (in that order). (*)

(\*) For the BCR2, BCD2, Set value memory number (Fixed value control) and step number (Program control) are indicated in the MEMO/STEP Display.

### Indicating MV, Remaining time

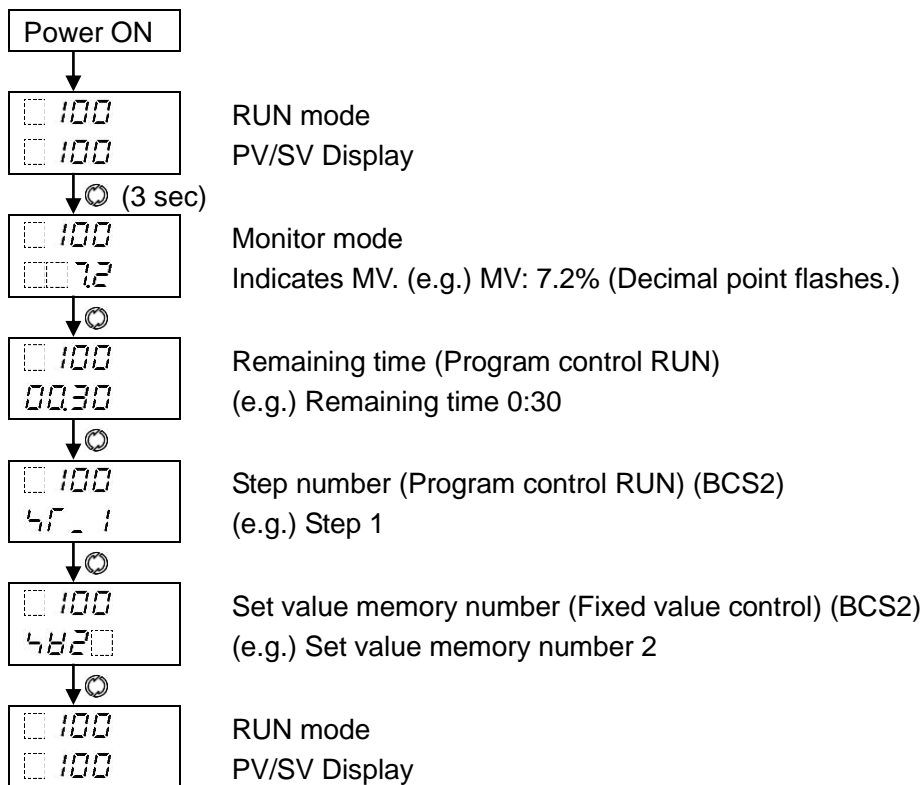

## 8.10 Items to be Initialized by Changing Settings

The following shows items to be initialized by setting changes.

Yes: Initialized

No: Not initialized

Item to be Initialized \ Setting changed item	Input Type	Event output EV1 allocation	Event output EV2 allocation	Transmission output
SV1 to SV9	Yes	No	No	No
Steps 1 to 9 wait value	Yes	No	No	No
AT bias	Yes	No	No	No
OUT1 proportional band	Yes	No	No	No
Manual reset	Yes	No	No	No
SV rise rate	Yes	No	No	No
SV fall rate	Yes	No	No	No
Scaling high limit	Yes	No	No	No
Scaling low limit	Yes	No	No	No
Program start temperature	Yes	No	No	No
EV1 alarm value	Yes	Yes	No	No
EV1 high limit alarm value	Yes	Yes	No	No
Loop bread alarm time	Yes	No	No	No
Loop bread alarm span	Yes	No	No	No
SVTC bias	Yes	No	No	No
Remote bias	Yes	No	No	No
EV2 alarm value	Yes	No	Yes	No
EV2 high limit alarm value	Yes	No	Yes	No
Transmission output high limit (Except MV transmission)	Yes	No	No	Yes
Transmission output low limit (Except MV transmission)	Yes	No	No	Yes
OUT2 proportional band	Yes	No	No	No
EV1 alarm value 0 Enabled/Disabled	No	Yes	No	No
EV1 alarm hysteresis	No	Yes	No	No
EV1 alarm delay time	No	Yes	No	No
EV1 alarm Energized/De-energized	No	Yes	No	No
EV2 alarm value 0 Enabled/Disabled	No	No	Yes	No
EV2 alarm hysteresis	No	No	Yes	No
EV2 alarm delay time	No	No	Yes	No
EV2 alarm Energized/De-energized	No	No	Yes	No
Sensor correction coefficient	Yes	No	No	No
Sensor correction value	Yes	No	No	No
External setting input high limit	Yes	No	No	No
External setting input low limit	Yes	No	No	No



# 9. Attached Function

## 9.1 Input Value Correction

Input value can be corrected in [Sensor correction coefficient] and [Sensor correction] in Engineering mode.


In [Sensor correction coefficient], set the slope of temperature change.

In [Sensor correction], set the difference between temperatures before correction and after correction.

PV after input correction is expressed with the following formula.

PV after input correction = Current PV x Sensor correction coefficient + (Sensor correction value)


The following shows an example of input value correction using 'Sensor correction coefficient' and 'Sensor correction value'.

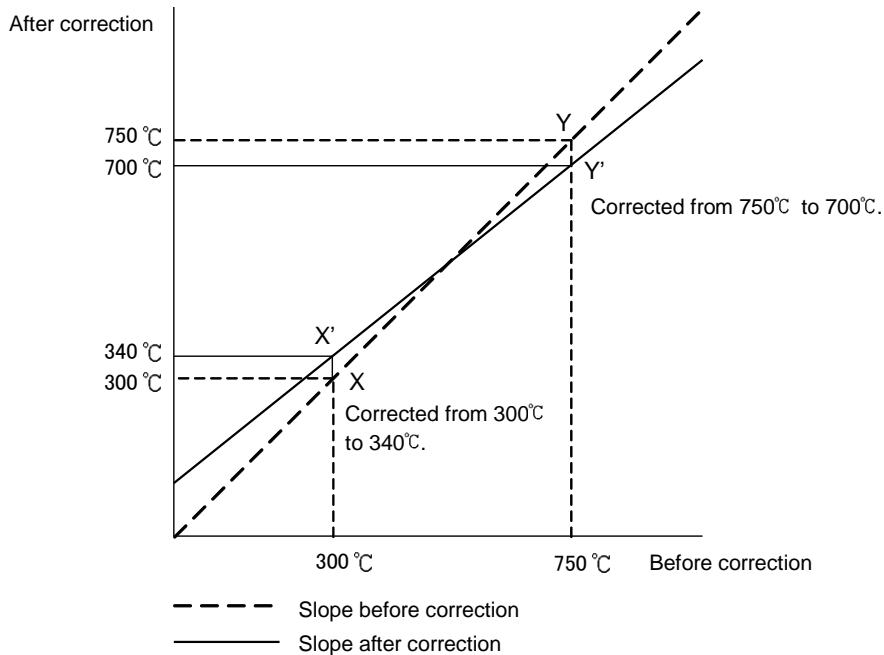

(Fig.9.1-1)

- (1) Select any 2 points of PV to be corrected, and determine the PV after correction.  
 PV before correction: 300°C → PV after correction: 340°C  
 PV before correction: 750°C → PV after correction: 700°C
- (2) Calculate Sensor correction coefficient from Step (1).  
 $(Y' - X') / (Y - X) = (700 - 340) / (750 - 300) = 0.8$
- (3) Enter a PV value of 300°C using an mV generator or dial resistor.
- (4) Set Step (2) value as a Sensor correction coefficient.
- (5) Read the PV.  
 240°C will be indicated.
- (6) Calculate the sensor correction value.  
 Calculate the difference between 'PV after correction' and Step (5) PV.  
 $340°C - 240°C = 100°C$
- (7) Set Step (6) value as a Sensor correction value.
- (8) Enter an electromotive force or resistance value equivalent to 750°C using an mV generator or dial resistor.
- (9) Read the PV, and confirm that 700°C is indicated.

**(Example) Setting Sensor correction coefficient to 0.800, and Sensor correction to 100.0°C**

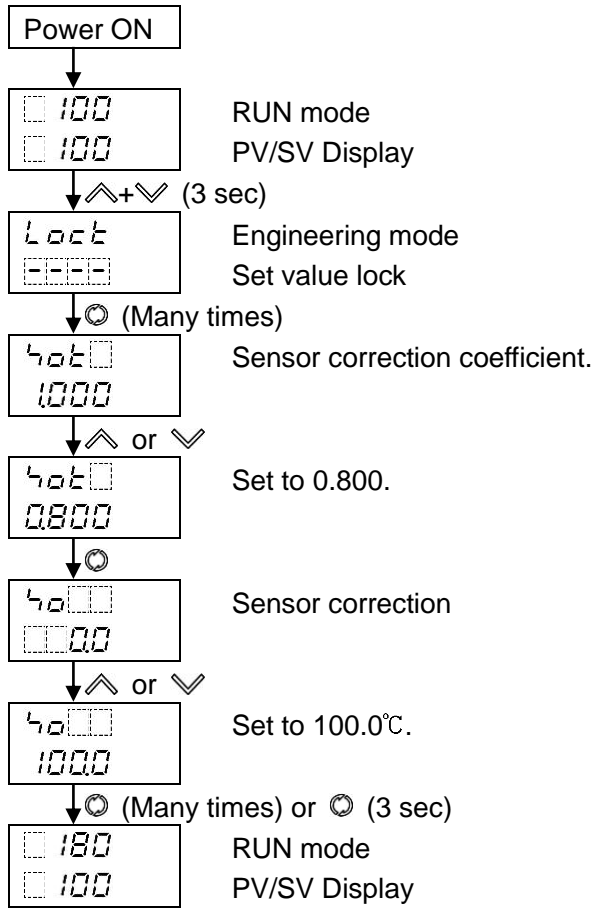

Now, settings are complete.

## 9.2 Set Value Lock


Locks the set values to prevent setting errors.

Make a selection in [Set value lock] in Engineering mode.

The setting item to be locked depends on the selection.

Selection Item	Change via Keypad	Change via Software Communication
Unlock	All set values can be changed.	All set values can be changed.
Lock 1	None of the set values can be changed.	
Lock 2	In Fixed value control, only SV and Alarm value can be changed. In Program control, Step SV, Step time and Alarm value can be changed.	Setting items – except Input type, Controller/Converter – can be changed temporarily via software communication. However, if power is turned ON again, setting values revert to the values before Lock 3, 4 or 5 was selected.
Lock 3	All set values can be changed.	
Lock 4	None of the set values can be changed.	
Lock 5	In Fixed value control, only SV and Alarm value can be changed. In Program control, Step SV, Step time and Alarm value can be changed.	

### (Example) Selecting Lock 2

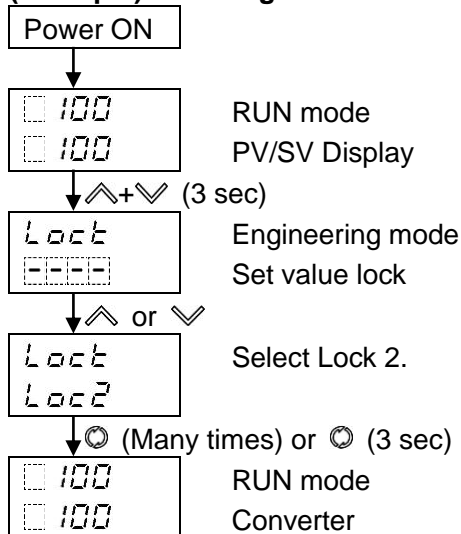


Now, selection is complete.

### 9.3 Control Output OFF Function

The control action and output of an instrument (or instruments) can be turned OFF without turning OFF their power supplies using this function.

Select 'Control output OFF function' in [OUT/OFF key function] in Engineering mode.  
Factory default value is Control output OFF function.

**(Example) Selecting 'Control output OFF function', and 'PV indication' in [Indication when control output OFF]**

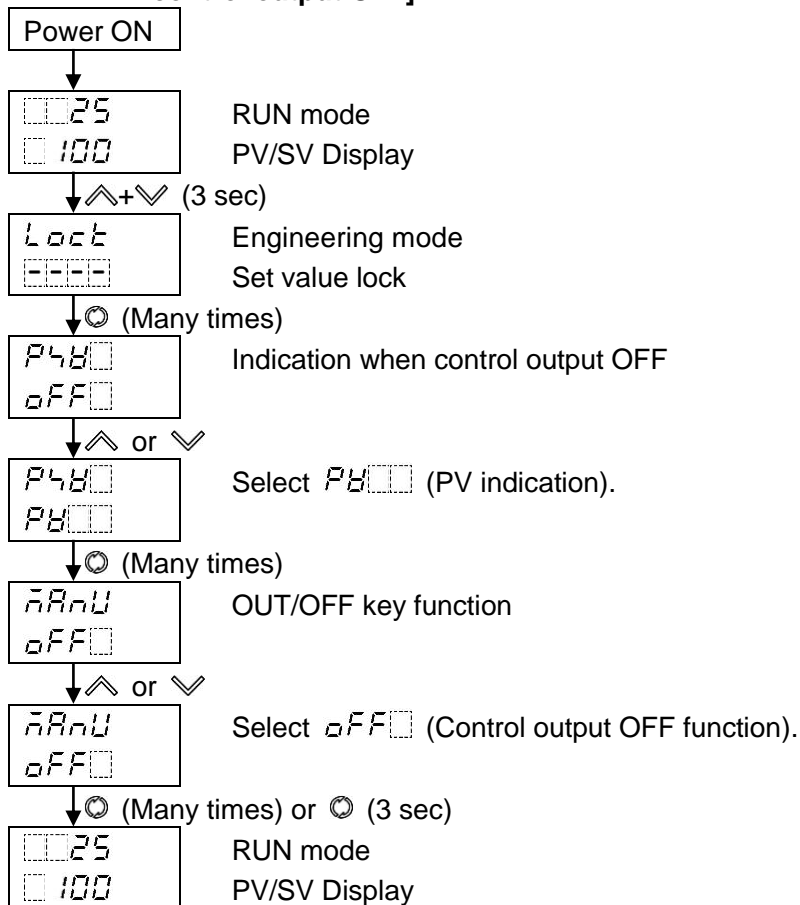


Now, selection is complete.

To turn the control output OFF, press the  $\odot$  key for approximately 1 second in PV/SV Display. PV is indicated in the PV Display. Indication differs depending on the selection in [Indication when control output OFF].

Once the control output OFF function is enabled, the function cannot be released even if the power to the instrument is turned OFF and ON again.

To cancel the function, press the  $\odot$  key again for approx. 1 second.

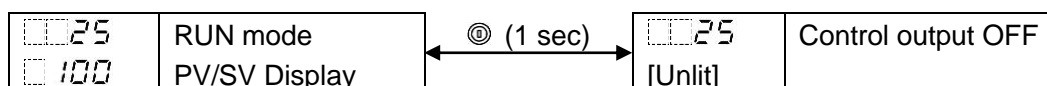

#### 9.4 Switching Auto/Manual Control (Auto/Manual Control Function)

Control action can be switched from automatic to manual and vice versa.

When power to the controller is turned ON, Automatic or Manual control is selectable.


Select 'Auto/Manual control' in [OUT/OFF key function] in Engineering mode.

Factory default value is Control output OFF function.

Select 'Automatic control' or 'Manual control' in [Auto/Manual after power interruption] in Engineering mode.

Factory default value is Automatic control.

##### (Example) Selecting 'Auto/Manual control' and 'Manual control' after power interruption

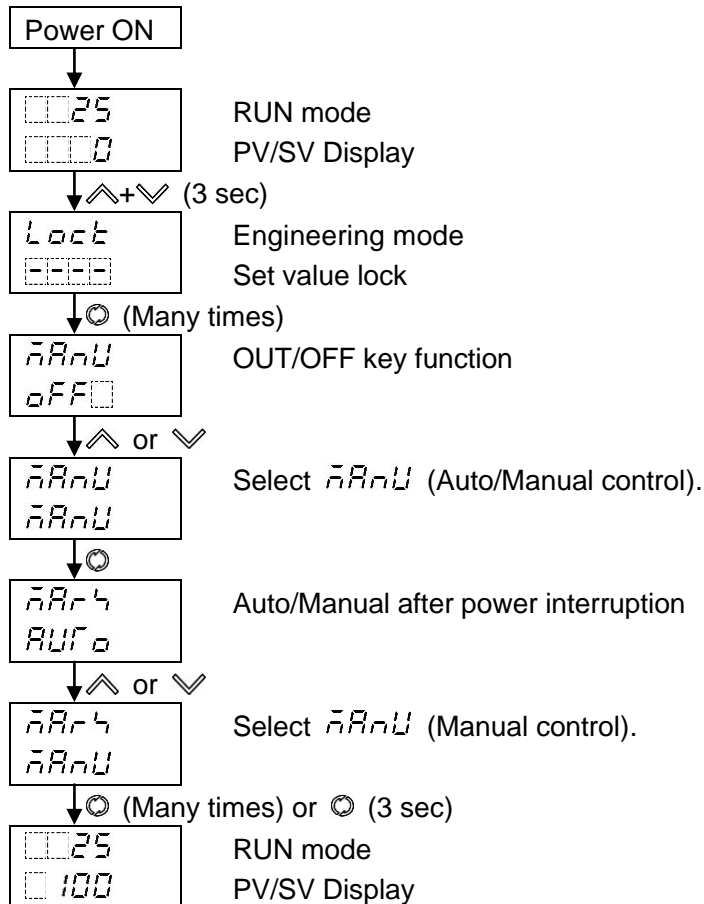

Now, selection is complete.

By pressing the Ⓞ key in PV/SV Display for approx. 1 second, Auto/Manual control function can be switched.

If control action is switched from automatic to manual and vice versa, balanceless-bumpless function works to prevent a sudden change in the MV.

When automatic control is switched to manual control, MV flashes in the SV display.


The MV in the SV Display can be increased or decreased by pressing the ⧗ or ⧘ key.

Data is saved 1 second after MV is changed, and manual control is performed.

When power is turned ON after interruption, control resumes using the previously saved MV (if manual control is selected in [Auto/Manual after power interruption]).

However, if 006 (Auto/Manual control) is selected in [Event input DI1/DI2 allocation], then Event input status has priority.

By pressing the Ⓞ key again for approx. 1 second, the unit reverts to automatic control.

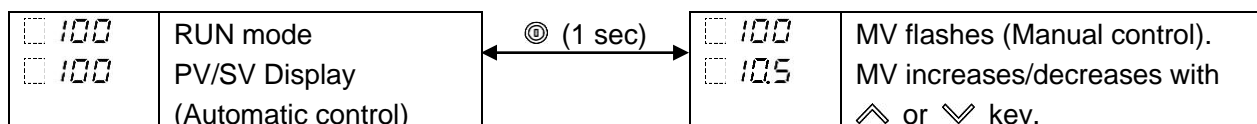

## 9.5 Using as a Converter

This instrument can be used as a simplified converter.

Converts each input value (thermocouple, RTD, DC voltage and current inputs) to '4 to 20 mA DC', and outputs it.

When OUT1 is Direct current output, the controller can be used as a converter.

Select 'Converter' in [Controller/Converter] in Engineering mode.

Factory default value is Controller.

When this instrument is switched from controller to converter, values in the table below (Table 9.5-1) are automatically set. The SV Display indicates nothing.

When this instrument is switched from converter to controller, the PV Display indicates *1 n l f* for 1 second, and factory default values are set.


**(Table 9.5-1)**

Setting Item	Set Value (or Selection)
SV1 (*)	Scaling low limit value
SV2 (*) (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
SV3 (*) (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
SV4 (*) (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
OUT1 proportional band (*)	Input span
Integral time	0
Derivative time	0
Reset	0 (Reset value, calculated by Auto-reset function)
OUT2 proportional band (*)	Input span
EV1/EV2 alarm value 0 Enabled/Disabled	Disabled
EV1/EV2 alarm value	0 or Input range low limit value (Scaling low limit value)
EV1/EV2 high limit alarm value	0 or Input range low limit value (Scaling low limit value)
EV1/EV2 alarm hysteresis	1.0
EV1/EV2 alarm delay time	0
EV1/EV2 alarm Energized/De-energized	Energized
Loop break alarm time	0
Loop break alarm span	0
Direct/Reverse action	Direct action
OUT/OFF key function	Control output OFF function
Event input DI1 allocation (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	No event
Event input DI2 allocation (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	No event
Event output EV1 allocation	No event
Event output EV2 allocation (EV2 option)	No event

Setting Item	Set Value (or Selection)
Remote/Local (EIT option)	Local
Transmission output type (EIT option)	PV transmission
Transmission output high limit (EIT option)	1370
Transmission output low limit (EIT option)	-200
SV rise rate	0
SV fall rate	0
OUT1 high limit	100
OUT1 low limit	0
OUT1 rate-of-change	0

(\*) When input range is changed while this instrument is used as a converter, SV1 to SV4, OUT1 and OUT2 proportional bands will be automatically set to values corresponding to the input range.

### (Example) Selecting Converter

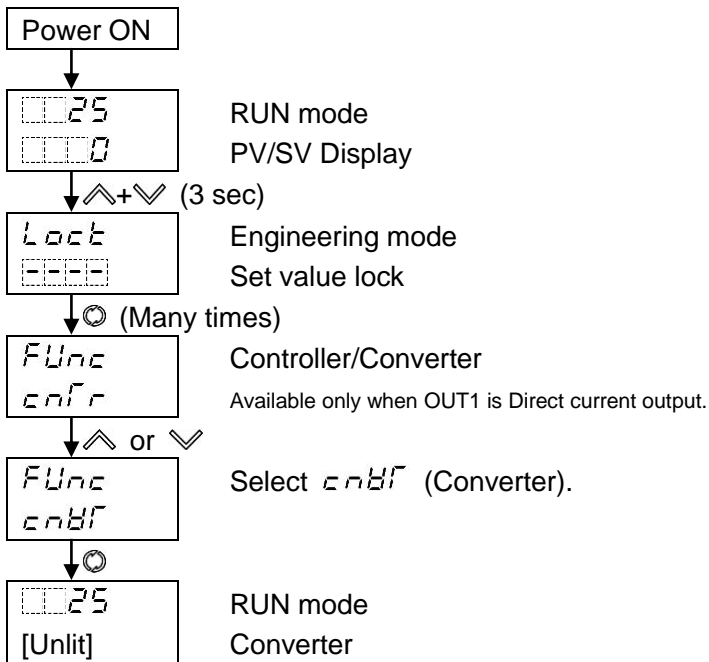

Now, selection is complete.

## 9.6 Clearing Data

If data is cleared, data will revert to factory default values.


To clear data, press and hold  $\wedge$ ,  $\vee$ ,  $\odot$ ,  $\odot$  (in that order) together for approx. 3 seconds in the PV/SV Display.

The unit enters [Data clear Yes/No] mode.

Select 'Yes', and press the  $\odot$  key. Data will be cleared.

While data is clearing, *i n i t* is indicated in the PV Display.

### Executing data clear

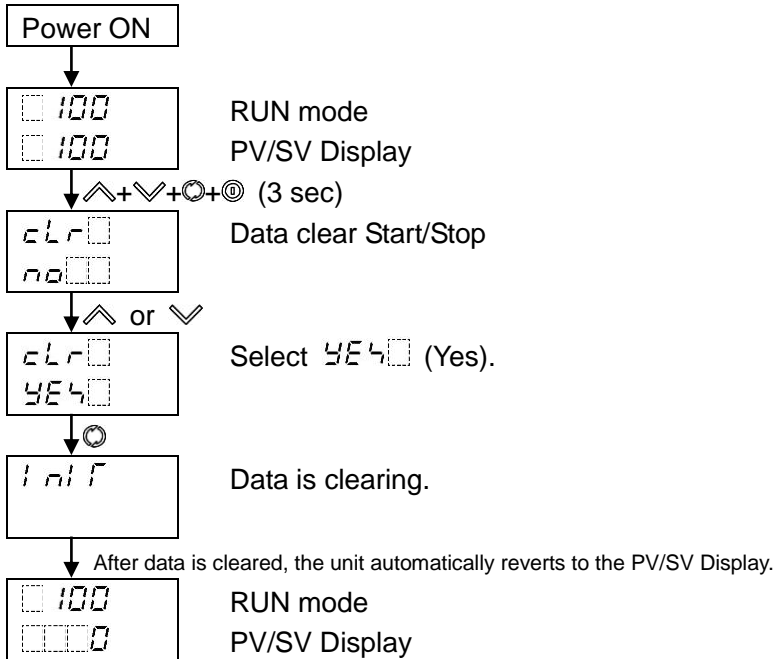



# 10. Action Explanation

## 10.1 OUT1 Action

	Reverse (Heating) action	Direct (Cooling) action
Control action		
Relay contact output	<p>Cycle action is performed according to deviation.</p>	<p>Cycle action is performed according to deviation.</p>
Non-contact voltage output	<p>Cycle action is performed according to deviation.</p>	<p>Cycle action is performed according to deviation.</p>
Direct current output	<p>Changes continuously according to deviation.</p>	<p>Changes continuously according to deviation.</p>
Indicator (O1) Green	<p>Lit Unlit</p>	<p>Unlit Lit</p>

Alternates between ON and OFF.

OUT1 terminal numbers of the BCR2, BCD2: 15, 16


## 10.2 OUT1 ON/OFF Control Action

	Reverse (Heating) action	Direct (Cooling) action
Control action		
Relay contact output		
Non-contact voltage output		
Direct current output		
Indicator (O1) Green	<p>Lit Unlit</p>	<p>Unlit Lit</p>

Turns either ON or OFF.

OUT1 terminal numbers of the BCR2, BCD2: 15, 16

### 10.3 Heater Burnout Alarm Action

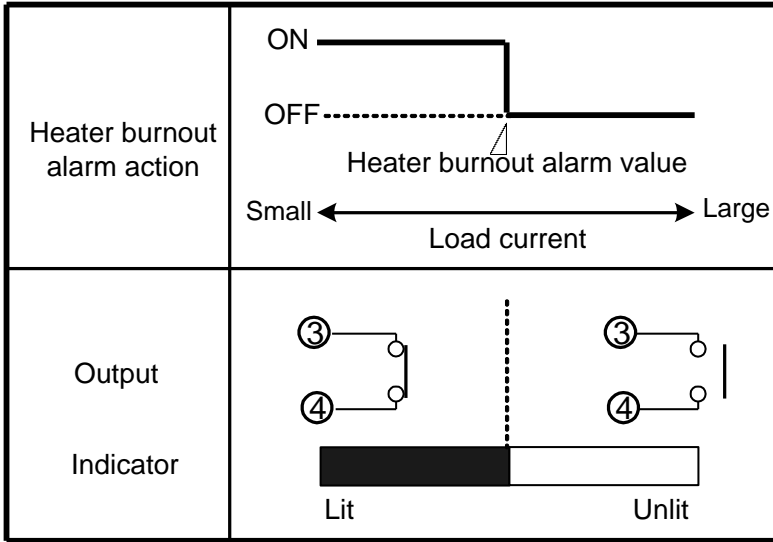

BCS2: Event output 1 terminal numbers: 3, 4    Event output 2 terminal numbers: 5, 6  
 BCR2, BCD2: Event output 1 terminal numbers: 17, 18    Event output 2 terminal numbers: 19, 20

## 10.4 Alarm Action

	High limit alarm	Low limit alarm
Alarm action	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal rises above the SV, triggering an alarm. The alarm remains ON until the signal falls below the SV plus an EV1 hysteresis range. The signal then rises again, triggering the alarm ON. The signal falls below the SV minus an EV1 hysteresis range, triggering the alarm OFF. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm ON.</p>	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal falls below the SV, triggering an alarm. The alarm remains ON until the signal rises above the SV minus an EV1 hysteresis range. The signal then falls again, triggering the alarm ON. The signal rises above the SV plus an EV1 hysteresis range, triggering the alarm OFF. The signal then falls below the SV minus an EV1 hysteresis range, triggering the alarm ON.</p>
Alarm output	<p>The +side output is shown as a bar that is white until the signal reaches the SV, then becomes hatched until the signal falls below the SV + EV1 hysteresis, then becomes solid black. The -side output is shown as a bar that is hatched until the signal falls below the SV - EV1 hysteresis, then becomes solid black.</p>	<p>The +side output is shown as a bar that is solid black until the signal reaches the SV, then becomes hatched until the signal rises above the SV - EV1 hysteresis, then becomes white. The -side output is shown as a bar that is solid black until the signal rises above the SV + EV1 hysteresis, then becomes hatched, then becomes white.</p>
	High/Low limits alarm	High/Low limits independent alarm
Alarm action	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal rises above the SV, triggering an alarm. The alarm remains ON until the signal falls below the SV plus an EV1 hysteresis range. The signal then falls below the SV, triggering the alarm OFF. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm ON.</p>	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal falls below the SV, triggering an alarm. The alarm remains ON until the signal rises above the SV minus an EV1 hysteresis range. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm OFF. The signal then falls below the SV minus an EV1 hysteresis range, triggering the alarm ON.</p>
Alarm output	<p>The output is shown as a bar that is solid black until the signal reaches the SV, then becomes hatched until the signal falls below the SV + EV1 hysteresis, then becomes white until the signal falls below the SV - EV1 hysteresis, then becomes hatched, then becomes solid black.</p>	<p>The output is shown as a bar that is solid black until the signal reaches the SV, then becomes hatched until the signal rises above the SV - EV1 hysteresis, then becomes white until the signal rises above the SV + EV1 hysteresis, then becomes hatched, then becomes solid black.</p>
	High/ Low limit range alarm	High/Low limit range independent alarm
Alarm action	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal rises above the SV, triggering an alarm. The alarm remains ON until the signal falls below the SV plus an EV1 hysteresis range. The signal then falls below the SV, triggering the alarm OFF. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm ON.</p>	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal falls below the SV, triggering an alarm. The alarm remains ON until the signal rises above the SV minus an EV1 hysteresis range. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm OFF. The signal then falls below the SV minus an EV1 hysteresis range, triggering the alarm ON.</p>
Alarm output	<p>The output is shown as a bar that is white until the signal reaches the SV, then becomes hatched until the signal falls below the SV + EV1 hysteresis, then becomes solid black until the signal falls below the SV - EV1 hysteresis, then becomes hatched, then becomes white.</p>	<p>The output is shown as a bar that is white until the signal reaches the SV, then becomes hatched until the signal rises above the SV - EV1 hysteresis, then becomes solid black until the signal rises above the SV + EV1 hysteresis, then becomes hatched, then becomes white.</p>
	Process high alarm	Process low alarm
Alarm action	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal rises above the SV, triggering an alarm. The alarm remains ON until the signal falls below the SV plus an EV1 hysteresis range. The signal then rises above the SV plus an EV1 hysteresis range, triggering the alarm ON.</p>	<p>The diagram shows a signal line with a setpoint (SV) marked by a triangle. The signal falls below the SV, triggering an alarm. The alarm remains ON until the signal rises above the SV minus an EV1 hysteresis range. The signal then falls below the SV minus an EV1 hysteresis range, triggering the alarm ON.</p>
Alarm output	<p>The output is shown as a bar that is white until the signal reaches the SV, then becomes hatched until the signal falls below the SV + EV1 hysteresis, then becomes solid black.</p>	<p>The output is shown as a bar that is solid black until the signal reaches the SV, then becomes hatched until the signal rises above the SV - EV1 hysteresis, then becomes white.</p>

	High limit with standby alarm	Low limit with standby alarm
Alarm action		
Alarm output	+ side - side	+ side - side
	High/Low limits with standby alarm	H/L limits with standby independent alarm
Alarm action		
Alarm output		

- : Event output 1 terminals 3 and 4: ON (closed).
- : Event output 1 terminals 3 and 4: ON (closed) or OFF (open).
- : Event output 1 terminals 3 and 4: OFF (open).
- : Alarm output is in Standby.

- EV1 value, EV1 high limit value, and EV1 hysteresis represent EV1 alarm value, EV1 high limit alarm value and EV1 alarm hysteresis respectively.  
For EV2, read “EV2” for “EV1”.
- EV1 indicator lights when Event output 1 terminals 3 and 4 are ON, and goes off when their output terminals 3 and 4 are OFF.  
EVT2 indicator lights when Event output 2 terminals 5 and 6 are ON, and goes off when their output terminals 5 and 6 are OFF.
- BCR2, BCD2: Event output 1 terminal numbers: 17, 18  
Event output 2 terminal numbers: 19, 20

### 10.5 OUT2 (Heating/Cooling Control) Action

Control action			
Relay contact output (OUT1)	<p>Cycle action is performed according to deviation</p>		
Non- contact voltage output (OUT1)	<p>Cycle action is performed according to deviation</p>		
Direct current output (OUT1)	<p>Changes continuously according to deviation.</p>		
Relay contact output (OUT2)	<p>Cycle action is performed according to deviation</p>		
Non- contact voltage output (OUT2)	<p>Cycle action is performed according to deviation</p>		
Direct current output (OUT2)	<p>Changes continuously according to deviation.</p>		
Indicator (O1)	<p>Lit Unlit</p>		
Indicator (O2)	<p>Unlit Lit</p>		

: Alternates between ON (lit) and OFF (unlit).

— : Represents Heating control action.

- - - - : Represents Cooling control action.

### 10.6 OUT2 (Heating/Cooling Control) Action (When Setting Dead Band)

Control action			
Relay contact output (OUT1)	<p>Cycle action is performed According to deviation</p>		
Non- contact voltage output (OUT1)	<p>Cycle action is performed According to deviation</p>		
Direct current output (OUT1)	<p>Changes continuously according to deviation.</p>		
Relay contact output (OUT2)	<p>Cycle action is performed according to deviation</p>		
Non- contact voltage output (OUT2)	<p>Cycle action is performed according to deviation</p>		
Direct current output (OUT2)	<p>Changes continuously According to deviation.</p>		
Indicator (O1)			
Indicator (O2)			

: Alternates between ON (lit) and OFF (unlit).

— : Represents Heating control action.

- - - - : Represents Cooling control action.

### 10.7 OUT2 (Heating/Cooling Control) Action (When Setting Overlap Band)

<p>Control action</p>	
<p>Relay contact output (OUT1)</p>	<p>Cycle action is performed according to deviation</p>
<p>Non-contact voltage output (OUT1)</p>	<p>Cycle action is performed according to deviation</p>
<p>Direct current output (OUT1)</p>	<p>Changes continuously according to deviation</p>
<p>Relay contact output (OUT2)</p>	<p>Cycle action is performed according to deviation</p>
<p>Non-contact voltage output (OUT2)</p>	<p>Cycle action is performed according to deviation</p>
<p>Direct current output (OUT2)</p>	<p>Cycle action is performed according to deviation</p>
<p>Indicator (O1)</p>	<p>Lit Unlit</p>
<p>Indicator (O2)</p>	<p>Unlit Lit</p>

: Alternates between ON (lit) and OFF (unlit).

— : Represents Heating control action.

- - - : Represents Cooling control action.

# 11. Specifications

## 11.1 Standard Specifications

### Rating

Rated scale		Input	Scale Range	Resolution	
		K	-200 to 1370 °C	-328 to 2498 °F	1 °C(°F)
			-200.0 to 400.0 °C	-328.0 to 752.0 °F	0.1 °C(°F)
		J	-200 to 1000 °C	-328 to 1832 °F	1 °C(°F)
		R	0 to 1760 °C	32 to 3200 °F	1 °C(°F)
		S	0 to 1760 °C	32 to 3200 °F	1 °C(°F)
		B	0 to 1820 °C	32 to 3308 °F	1 °C(°F)
		E	-200 to 800 °C	-328 to 1472 °F	1 °C(°F)
		T	-200.0 to 400.0 °C	-328.0 to 752.0 °F	0.1 °C(°F)
		N	-200 to 1300 °C	-328 to 2372 °F	1 °C(°F)
		PL-II	0 to 1390 °C	32 to 2534 °F	1 °C(°F)
		C(W/Re5-26)	0 to 2315 °C	32 to 4199 °F	1 °C(°F)
		Pt100	-200.0 to 850.0 °C	-328.0 to 1562.0 °F	0.1 °C(°F)
			-200 to 850 °C	-328 to 1562 °F	1 °C(°F)
		JPt100	-200.0 to 500.0 °C	-328.0 to 932.0 °F	0.1 °C(°F)
			-200 to 500 °C	-328 to 932 °F	1 °C(°F)
		4 to 20 mA	-2000 to 10000 (*)		1
		0 to 20 mA	-2000 to 10000 (*)		1
		0 to 1 V	-2000 to 10000 (*)		1
		0 to 5 V	-2000 to 10000 (*)		1
		1 to 5 V	-2000 to 10000 (*)		1
0 to 10 V	-2000 to 10000 (*)		1		
(*) Scaling and decimal point place are selectable.					
Input	Thermocouple	K, J, R, S, B, E, T, N, PL-II, C(W/Re5-26) External resistance: 100 Ω max. However, for B input, External resistance: 40 Ω max.			
	RTD	Pt100, JPt100 3-wire type Allowable input lead wire resistance: 10 Ω max. per wire			
	Direct current	0 to 20 mA DC, 4 to 20 mA DC Input impedance: 50 Ω max. Allowable input current: 50 mA max.			
	DC voltage	0 to 1 V DC Input impedance: 1 MΩ min. Allowable input voltage: 5 V DC max. Allowable signal source resistance: 2 kΩ max.			
0 to 5 V DC, 1 to 5 V DC, 0 to 10 V DC Input impedance: 100 kΩ min. Allowable input voltage: 15 V DC max. Allowable signal source resistance: 100 Ω max.					
Power supply voltage	BC□2□00-□□	100 to 240 V AC 50/60 Hz			
	BC□2□10-□□	24 V AC/DC 50/60 Hz			
Allowable voltage fluctuation	BC□2□00-□□	85 to 264 V AC			
	BC□2□10-□□	20 to 28 V AC/DC			



## General Structure

External dimensions	BCS2	48 x 48 x 68 mm (W x H x D) (Depth of control panel interior: 60)		
	BCR2	48 x 96 x 68 mm (W x H x D) (Depth of control panel interior: 60)		
	BCD2	96 x 96 x 68 mm (W x H x D) (Depth of control panel interior: 60)		
Mounting		Flush		
Case		Flame-resistant resin, Black		
Front panel		Membrane sheet		
Drip-proof/Dust-proof		Front panel: IP66, Rear case: IP20, Terminal section: IP00		
Standards	EN	EN61010-1 (Pollution degree 2, Overvoltage category II)		
Indication structure	PV Display	Indicates PV. 7-segment Red LED display		
		BCS2	Character size: 12.4 x 5.8 mm (H x W)	
		BCR2	Character size: 14 x 5.8 mm (H x W)	
		BCD2	Character size: 24 x 11 mm (H x W)	
	SV Display	Indicates SV. 7-segment Green LED display		
		BCS2	Character size: 8.8 x 3.9 mm (H x W)	
		BCR2	Character size: 14 x 5.8 mm (H x W)	
		BCD2	Character size: 14 x 7 mm (H x W)	
	MEMO/STEP Display (BCR2, BCD2)	Indicates Set value memory number (Fixed value control) or Step number (Program control). 7-segment Green LED display		
		BCR2	Character size: 14 x 5.8 mm (H x W)	
		BCD2	Character size: 14 x 7 mm (H x W)	
	Action indicators	O1 (Green)	Lit when control output OUT1 is ON. For direct current output type, flashes corresponding to the MV in 125 ms cycles.	
		O2 (Yellow)	Lit when control output OUT2 (EV2, DS, DA options) is ON. For direct current output type (DA option), flashes corresponding to the MV in 125 ms cycles.	
		EV1 (Red)	Lit when Event output 1 is ON.	
		EV2 (Red)	Lit when Event output 2 (EV2 option) is ON. Unlit if <input type="checkbox"/> 15 (Heating/Cooling control relay contact output) is selected in [Event output EV2 allocation].	
		AT (Yellow)	Flashes while AT, 'AT on startup' or Auto-reset is performing.	
R/L (Yellow)		Lit during Remote action from Remote/Local switching (EIT option).		
T/R (Yellow)		Lit during Serial communication (C5W, C5 options) TX (transmitting) output.		
MEMO (Yellow)		Lit when Set value memory number (Fixed value control) is indicated. (BCR2, BCD2)		
STEP (Green)		Lit when a step number (Program control) is indicated. (BCR2, BCD2)		

Terminal arrangement	Refer to 'Terminal arrangement'. (p.19)
Console connector	By connecting to the tool cable (CMD-001, sold separately), the following operations can be conducted from an external computer using the Console software SWC-BCx01M. <ul style="list-style-type: none"> <li>• Reading and setting of SV, PID and various set values</li> <li>• Reading of PV and action status</li> <li>• Function change</li> </ul>

### Setting Structure

Function key	UP key	Increases the numeric value. By pressing this key for 1 second during Program control, the performing step is interrupted, proceeding to the beginning of the next step. (Advance function)	
	DOWN key	Decreases the numeric value.	
	MODE key	Selects a setting mode, or registers the set data. By pressing this key for 3 seconds during RUN mode, the unit enters Monitor mode.	
	OUT/OFF key	The following function can be selected in [OUT/OFF key function].	
		Selection Item	Action
		Control output OFF function	Turns the control output ON or OFF.
		Auto/Manual control	Switches the Auto/Manual control.
Program control	Starts/Stops the Program control.		

### Indication Performance

Basic accuracy	At ambient temperature 23°C (for a single unit mounting)	
Thermocouple	Within $\pm 0.2\%$ of each input span $\pm 1$ digit However R, S inputs, 0 to 200°C (32 to 392°F): Within $\pm 6^\circ\text{C}$ (12°F) B input, 0 to 300°C (0 to 572°F): Accuracy is not guaranteed. K, J, E, T, N inputs, Less than 0°C (32°F): Within $\pm 0.4\%$ of input span $\pm 1$ digit	
RTD	Within $\pm 0.1\%$ of each input span $\pm 1$ digit	
Direct current, DC voltage	Within $\pm 0.2\%$ of each input span $\pm 1$ digit	
Effect of ambient temperature	Within 50 ppm/°C of each input span	
Input sampling period	125 ms	
Time accuracy	Within $\pm 1.0\%$ of setting time	

### Control Performance

Control action	<ul style="list-style-type: none"> <li>• PID control (with AT function)</li> <li>• PI control: When derivative time is set to 0</li> <li>• PD control (with auto-reset, Manual reset function): When integral time is set to 0</li> <li>• P control (with auto-reset, Manual reset function): When derivative and integral times are set to 0.</li> <li>• ON/OFF control: When proportional band is set to 0 (or 0.0)</li> </ul>	
OUT1 proportional band	Thermocouple, RTD inputs without decimal point: 0 to Input span Thermocouple, RTD inputs with decimal point: 0.0 to Input span Direct current, voltage inputs: 0.0 to 1000.0%	
Integral time	0 to 3600 sec	
Derivative time	0 to 1800 sec	
OUT1 proportional cycle	0.5, or 1 to 120 sec	
ARW	0 to 100%	

	Manual reset	± Proportional band value
	OUT1 ON/OFF hysteresis	Thermocouple, RTD inputs: 0.1 to 1000.0°C (°F) Direct current, voltage inputs: 1 to 10000 (The placement of the decimal point follows the selection.)
	OUT1 high limit, OUT1 low limit	0 to 100% (Direct current: -5 to 105%)
Control output	Relay contact 1a	Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load $\cos\phi=0.4$ ) Electrical life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC
	Non-contact voltage (For SSR drive)	12 V DC ± 15% Max 40 mA (short circuit protected)
	Direct current	4 to 20 mA DC Resolution: 12000 Load resistance: Max 550 Ω


### Standard Function

EV1 output	The output is turned ON or OFF depending on the conditions selected in [Event output EV1 allocation]. Relay contact 1a    Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load $\cos\phi=0.4$ ) Electrical life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC
Alarm action	When an alarm type and Energized action are selected in [Event output EV1 allocation] or [Event output EV2 allocation]: The alarm action point is set by ± deviation from the SV (excluding Process alarm) and if PV goes outside the range, alarm output is turned ON or OFF (High/Low limit range alarm). When De-energized action is selected, alarm is activated conversely.
Type	High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits independent alarm, High/Low limit range alarm, High/Low limit range independent alarm, Process high alarm, Process low alarm, High limit with standby alarm, Low limit with standby alarm, High/Low limits with standby alarm, High/Low limits with standby independent alarm. Energized/De-energized action are applied to the above alarms, totaling 24 alarm types. No alarm action can also be selected.
Action	ON/OFF action
Hysteresis	Thermocouple, RTD inputs: 0.1 to 1000.0°C (°F) Direct current, voltage inputs: 1 to 10000 (The placement of the decimal point follows the selection.)
Output	EV1, EV2 outputs for which Alarm output (001 to 012) is selected in [Event output EV1/EV2 allocation].
Alarm value 0 Enabled/ Disabled	If 'Enabled' is selected in [Alarm value 0 Enabled/Disabled], the following alarm type activates even if alarm value is set to 0 (zero). High limit alarm, Low limit alarm, High/Low limits alarm, High/Low limits independent alarm, High/Low limit range alarm, High/Low limit range independent alarm, High limit with standby alarm, Low limit with standby alarm, High/Low limits with standby alarm, High/Low limits with standby independent alarm.
Loop break alarm	Detects heater burnout, sensor burnout and actuator trouble. EV1 or EV2 output for which Loop break alarm (014) is selected in [Event output EV1/EV2 allocation].

Simplified converter function	If 'Converter' is selected in [Controller/Converter function], this instrument can be used as a converter, by setting the following items.	
	Setting Item	Values or Selection
	SV1	Scaling low limit value
	SV2 (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
	SV3 (EIW option) (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
	SV4 (EIW option) (BCS2: EIW, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	Scaling low limit value
	OUT1 proportional band	Input span
	Integral time	0
	Derivative time	0
	Reset	0 (Reset value, calculated by Auto-reset function)
	OUT2 proportional band	Input span
	EV1/EV2 alarm value 0 Enabled/Disabled	Disabled
	EV1/EV2 alarm value	0 or Input range low limit value (Scaling low limit value)
	EV1/EV2 high limit alarm value	0 or Input range low limit value (Scaling low limit value)
	EV1/EV2 alarm hysteresis	1.0
	EV1/EV2 alarm delay time	0
	EV1/EV2 alarm Energized/ De-energized	Energized
	Loop break alarm time	0
	Loop break alarm span	0
	Direct/Reverse control	Direct control
	OUT/OFF key function	Control output OFF function
	Event input DI1 allocation (BCS2: EIW, EIT, EI options, BCR2/BCD2: C5W, EIW, EIT, EI options)	000: No event
	Event input DI2 allocation (BCS2: EIW, EI option, BCR2/BCD2: C5W, EIW, EIT, EI options)	000: No event
	Event output EV1 allocation	000: No event
	Event output EV2 allocation (EV2 option)	000: No event
	Remote/Local (EIT option)	Local
	Transmission output type (EIT option)	PV transmission
	Transmission output high limit (EIT option)	1370
	Transmission output low limit (EIT option)	-200


SV rise rate	0
SV fall rate	0
OUT1 high limit	100
OUT1 low limit	0
OUT1 rate-of-change	0
4 to 20 mA DC	
Load resistance: Max 550 Ω	

### Insulation, Dielectric Strength

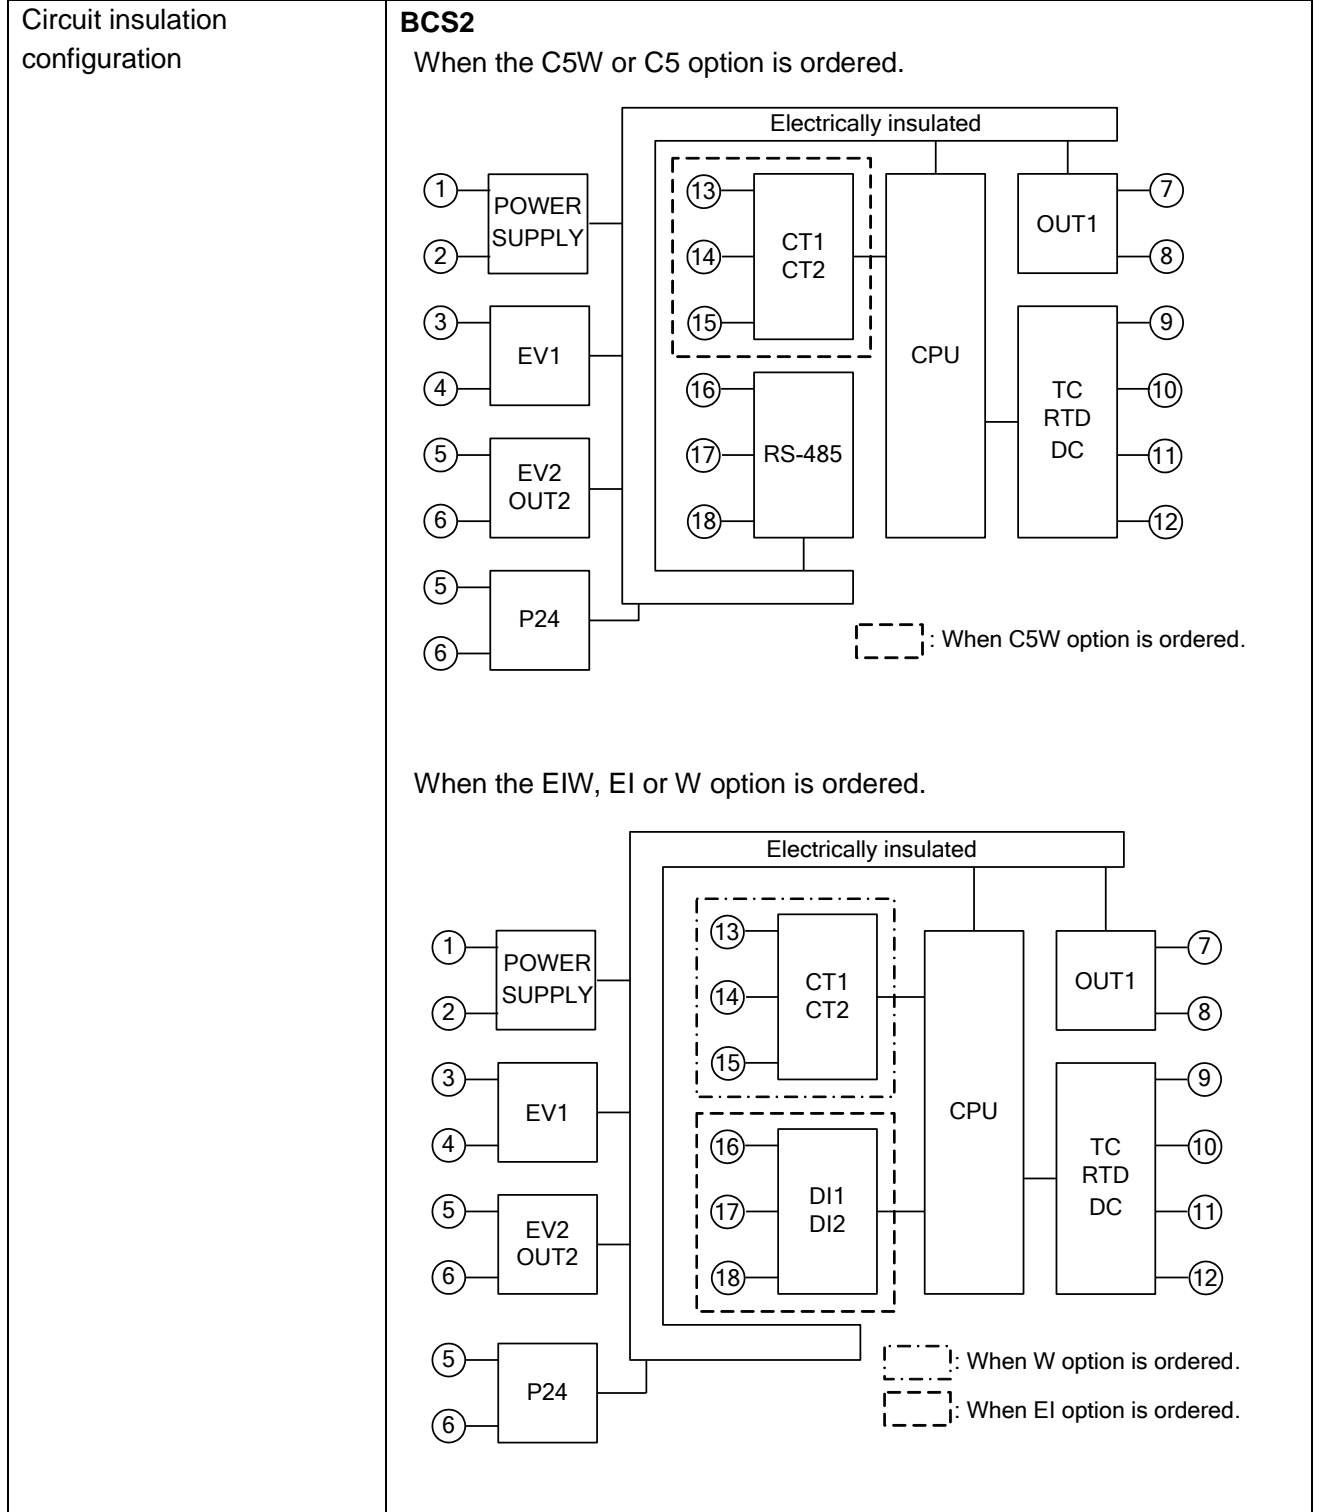

Circuit insulation configuration

When the EIT option is ordered.

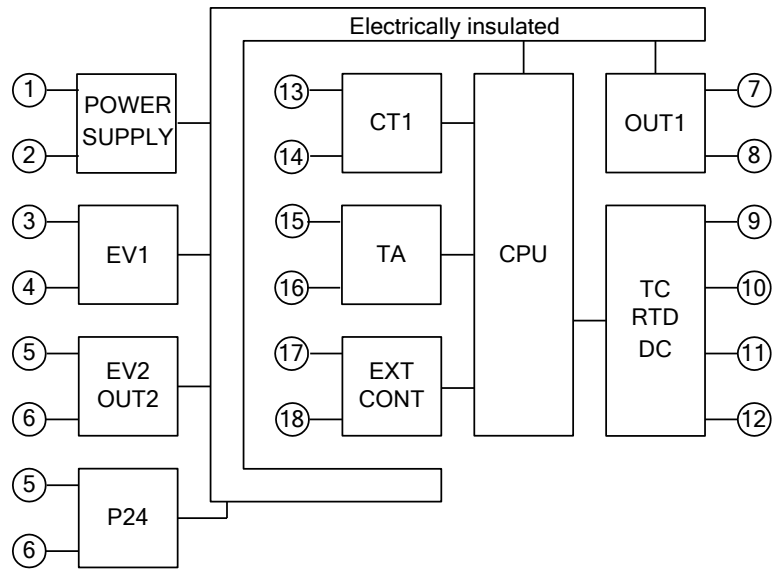


When OUT1 is a non-contact voltage output or direct current output, and when OUT2 is a non-contact voltage output or direct current output, OUT1 is not electrically insulated from OUT2.

Insulation resistance: 10 MΩ min., at 500 V DC

**BCR2, BCD2**

When the C5W or C5 option is ordered.

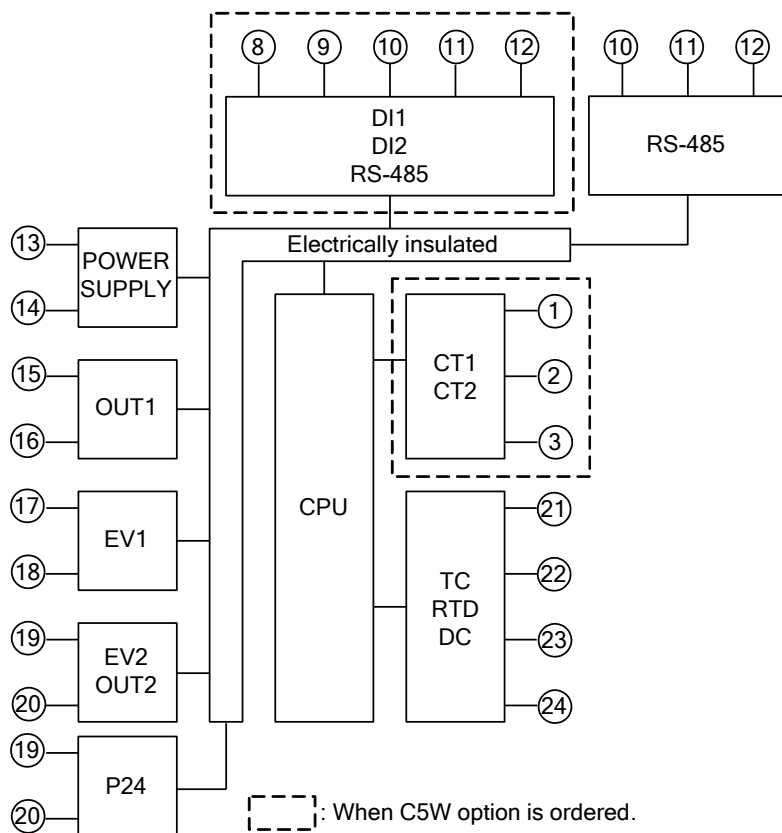



Power consumption	100 to 240 V AC	Approx. 8 VA max. (When the maximum number of options are added: Approx. 11 VA max.)
	24 V AC	Approx. 5 VA max. (When the maximum number of options are added: Approx. 8 VA max.)
	24 V DC	Approx. 5 W max. (When the maximum number of options are added: Approx. 8 W max.)
Rush current	100 to 240 V AC	Max. 14 to 34 A
	24 V AC	Max. 34 A
	24 V DC	Max. 34 A
Ambient temperature	-10 to 55°C (Non-condensing, No icing)	
Ambient humidity	35 to 85%RH (Non-condensing)	
Weight	BCS2	Approx. 110 g
	BCR2	Approx. 160 g
	BCD2	Approx. 220 g
Accessories included	Mounting frame 1 piece (BCS2) Screw type mounting bracket 1 set (BCR2, BCD2) Instruction manual (excerpt) 1 copy	
Accessories sold separately	Terminal cover CT (Current transformer): CTL-6-S-H (For Heater burnout alarm 20 A) CTL-12-S36-10L1U (For Heater burnout alarm 100 A) Tool cable CMD-001	
Environmental specification	RoHS directive compliant	

### Attached Functions

Sensor correction coefficient	Sets slope of input value from a sensor.	
Sensor correction	Corrects the input value from the sensor.	
Set value lock	Locks the set values to prevent setting errors.	
Auto/Manual control switching	Switches Auto/Manual control. In Manual control, sets MV with the $\wedge$ or $\vee$ key.	
SV ramp function	When the SV is adjusted, it approaches the new SV by the preset rate-of-change. Set SV rise rate and SV fall rate respectively.	
SV Rise/Fall rate start type	When control output is turned from OFF to ON, or switched from Manual to Automatic control, SV start or PV start can be selected for SV rise rate or fall rate action.	
Program control	1 pattern; 9 steps	
Power failure countermeasure	The setting data is backed up in the non-volatile IC memory.	
Self-diagnosis	The CPU is monitored by a watchdog timer, and if an abnormal status occurs, the controller is switched to warm-up status, turning all outputs OFF.	
Automatic cold junction temperature compensation	This detects the temperature at the connecting terminal between the thermocouple and the instrument, and always maintains it at the same status as if the reference junction location temperature was at 0°C (32°F).	
Indication range, Control range	Thermocouple	[Input range low limit value - 50°C (100°F)] to [Input range high limit value + 50°C (100°F)]
	RTD	[Input range low limit value - (Input span x 1%)] to [Input range high limit value + 50°C (100°F)]
	DC voltage, Direct current	[Scaling low limit value - (Scaling span x 1%)] to [Scaling high limit value + Scaling span x 10%]



Input error	Overscale	PV has exceeded Input range high limit value (DC voltage, current inputs: Scaling high limit value). PV and [Err05] are alternately indicated in the PV Display. For Manual control, the preset MV is outputted.
	Underscale	PV has dropped below Input range low limit value (DC voltage, current inputs: Scaling low limit value). PV and [Err05] are alternately indicated in the PV Display. For Manual control, the preset MV is outputted.
Burnout		<p>If PV has exceeded Indication range, Control range, the PV Display indicates [----] and [Err07] alternately.</p> <p>If PV has dropped below Indication range, Control range, the PV Display indicates [----] and [Err07] alternately.</p> <p>OUT1 and OUT2 are turned OFF (for Direct current output type, OUT1/OUT2 low limit value). For Manual control, the preset MV is outputted.</p> <p>If thermocouple, RTD or DC voltage (0 to 1 V DC) input is burnt out or disconnected, the PV Display indicates [----] and [Err07] alternately.</p> <p>If DC voltage (1 to 5 V DC) or current (4 to 20 mA DC) input is disconnected, the PV Display indicates [----] and [Err07] alternately.</p> <p>For 0 to 20 mA DC, 0 to 5 V DC and 0 to 10 V DC inputs, the PV Display indicates the value corresponding with 0 mA DC or 0 V DC input.</p>

[Output status when input errors occur] can be used only for controllers using Direct current and voltage inputs, and Direct current output.

For manual control, the preset MV is outputted.

Output status when input errors occur	Contents and Indication	Output status			
		OUT1		OUT2	
		Direct(Cooling) action	Reverse(Heating) action	Direct(Cooling) action	Reverse(Heating) action
ON□□	Indicates [----] and [Err07] alternately.	ON (20mA) or OUT1 high limit value (*)	OFF (4mA) or OUT1 low limit value	OFF or OUT2 low limit value	ON or OUT2 high limit value (*)
OFF□□		OFF (4mA) or OUT1 low limit value		OFF or OUT2 low limit value	
ON□□	Indicates [----] and [Err07] alternately.	OFF (4mA) or OUT1 low limit value	ON (20mA) or OUT1 high limit value (*)	OFF or OUT2 low limit value	OFF or OUT2 low limit value
OFF□□			OFF (4mA) or OUT1 low limit value	OFF or OUT2 low limit value	

(\*) Outputs a value between OFF (4mA) and ON (20mA) or between OUT1 (or OUT2) low limit value and OUT1 (or OUT2) high limit value, depending on deviation.

Warm-up indication	After the power supply to the instrument is turned on, the PV Display indicates the input type, and SV Display indicates input range high limit value (for thermocouple, RTD inputs) or scaling high limit value (for Direct current and voltage inputs) for approximately 3 seconds.
Console communication	<p>By connecting to the tool cable (CMD-001, sold separately) to the console connector, the following operations can be conducted from an external computer, using the Console software SWC-BCx01M.</p> <p>Console communication and Serial communication (C5W option) cannot be used together.</p> <ul style="list-style-type: none"> <li>• Reading and setting of SV, PID and various set values</li> <li>• Reading of PV and action status</li> <li>• Function change</li> </ul> <p>Communication interface: C-MOS level</p>

## 11.2 Optional Specifications



<p>Event input BCS2: EIW, EIT, EI options BCR2/BCD2: C5W, EIW, EIT, EI options</p>	<p>2 points of Event input (1 point for EIT option) can be applied. Any Event selected in [Event input DI1/DI2 allocation] will be performed depending on the DI1/DI2 input ON (Closed) or OFF (Open) status. Circuit current when Closed: Approx. 16 mA</p>
<p>Event output (EV2 option)</p>	<p>Output will be turned ON or OFF depending on the event conditions selected in [Event output EV2 allocation]. Relay contact, 1a Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load, <math>\cos\phi=0.4</math>) Electric life: 100,000 cycles Minimum applicable load: 10 mA 5 V DC</p>
<p>Heater burnout alarm (C5W, EIW, W options)</p>	<p>Monitors heater current with CT (current transformer), and detects burnout. EV1/EV2 output, for which Heater burnout alarm is selected in [Event output EV1/EV2 allocation], will be turned ON or OFF. This alarm is also activated when the input is burnt out. Rated current: 20 A, 100 A (Must be specified when ordering.) Single-phase: Detects burnout with CT1 input. 3-phase: Detects burnout with CT1 and CT2 inputs. Setting accuracy: Within <math>\pm 5\%</math> of the rated value</p>
<p>Heating/Cooling control (DS, DA, EV2 options)</p>	<p>Performs Heating/Cooling control. (Specifications of Heating side are the same as those of OUT1.) OUT2 proportional band: Thermocouple, RTD inputs without decimal point: 0 to Input span Thermocouple, RTD inputs with decimal point: 0.0 to Input span DC voltage, current inputs: 0.0 to 1000.0% OUT2 integral time: Same as that of OUT1. OUT2 derivative time: Same as that of OUT1. OUT2 proportional cycle: 0.5, or 1 or 120 seconds Overlap/Dead band setting range: Thermocouple, RTD inputs: -200.0 to 200.0°C (°F) DC voltage, current inputs: -2000 to 2000 (The placement of the decimal point follows the selection.) OUT2 ON/OFF hysteresis: Thermocouple, RTD inputs: 0.1 to 1000.0°C (°F) DC voltage, current inputs: 1 to 10000 (The placement of the decimal point follows the selection.) OUT2 high limit: 0 to 100% (Direct current: -5 to 105%) OUT2 low limit: 0 to 100% (Direct current: -5 to 105%) OUT2 cooling method: One cooling method can be selected from Air cooling (linear characteristics), Oil cooling (1.5th power of the linear characteristics) and Water cooling (2nd power of the linear characteristics) by keypad operation. Cooling output (OUT2): Relay contact 1a (EV2) Control capacity: 3 A 250 V AC (resistive load) 1 A 250 V AC (inductive load, <math>\cos\phi=0.4</math>) Electric life: 100,000 cycles Non-contact voltage (for SSR drive) (DS): 12 V DC <math>\pm 15\%</math>, Max. 40 mA (short circuit protected) Direct current (DA): 4 to 20 mA DC Resolution: 12000 Load resistance: Max. 550 <math>\Omega</math></p>


Serial communication (C5W, C5 options)	<p>The following operations can be carried out from an external computer. Serial communication and Console communication cannot be used together.</p> <p>(1) Reading and setting of the SV, PID values and various set values  (2) Reading of the PV and action status  (3) Function change</p> <p>Cable length: Max 1.2km, Cable resistance: Within 50 Ω (Terminators are not necessary, but if used, use 120 Ω or more on both sides.)</p> <p>Communication line: EIA RS-485  Communication method: Half-duplex communication  Synchronization method: Start-stop synchronization  Communication speed: 9600/19200/38400 bps (Selectable by keypad)  Data bit/Parity: 7 bits, 8 bits/Even, Odd, No parity (Selectable by keypad)  Stop bit: 1 bit, 2 bits (Selectable by keypad)  Communication protocol: Shinko protocol/Modbus ASCII/Modbus RTU (Selectable by keypad)</p> <p>Data format:</p> <table border="1" data-bbox="512 757 1477 1003"> <thead> <tr> <th>Communication protocol</th> <th>Shinko protocol</th> <th>Modbus ASCII</th> <th>Modbus RTU</th> </tr> </thead> <tbody> <tr> <td>Start bit</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>Data bit</td> <td>7</td> <td>7 or 8</td> <td>8</td> </tr> <tr> <td>Parity</td> <td>Yes (Even)</td> <td>Yes (Even, Odd), No parity</td> <td>Yes (Even, Odd), No parity</td> </tr> <tr> <td>Stop bit</td> <td>1</td> <td>1 or 2</td> <td>1 or 2</td> </tr> </tbody> </table> <p>Number of connectable units: Maximum 31 units to 1 host computer  Communication error detection: Parity, checksum (Shinko protocol), LRC (Modbus ASCII), CRC-16 (Modbus RTU)</p> <p>Digital external setting:  Receives digital SV from Shinko programmable controllers (PC-900, PCD-33A with SVTC option).</p>	Communication protocol	Shinko protocol	Modbus ASCII	Modbus RTU	Start bit	1	1	1	Data bit	7	7 or 8	8	Parity	Yes (Even)	Yes (Even, Odd), No parity	Yes (Even, Odd), No parity	Stop bit	1	1 or 2	1 or 2
Communication protocol	Shinko protocol	Modbus ASCII	Modbus RTU																		
Start bit	1	1	1																		
Data bit	7	7 or 8	8																		
Parity	Yes (Even)	Yes (Even, Odd), No parity	Yes (Even, Odd), No parity																		
Stop bit	1	1 or 2	1 or 2																		
External setting input (EIT option)	<p>SV adds external analog signal to remote bias value.  Not available for Program control.  Setting signal: 4 to 20 mA DC  Allowable input: 50 mA DC max.  Input impedance: 50 Ω max.  Input sampling period: 125 ms</p>																				
Transmission output (EIT option)	<p>Converting the value (PV, SV, MV or DV transmission) to analog signal every 125 ms, outputs the value in current or voltage.  Outputs Transmission output low limit value if Transmission output high limit and low limit value are the same.  Resolution: 12000  Output: 4 to 20 mA DC (Load resistance: Maximum 550 Ω)  Output accuracy: Within ±0.3% of Transmission output span</p>																				
Insulated power output (P24 option)	<p>Output voltage: 24±3 V DC (when load current is 30 mA DC)  Ripple voltage: Within 200 mV DC (when load current is 30 mA DC)  Max. load current: 30 mA DC</p>																				

# 12. Troubleshooting

If any malfunctions occur, refer to the following items after checking that power is being supplied to the controller.

## 12.1 Indication

Problem	Possible Cause	Solution
[Err1] is indicated in the PV Display.	Internal non-volatile IC memory is defective.	Release the error code by pressing the  key, and perform data clearing. (p.104) If the problem is not still solved, contact our agency or us.
[Err2] is indicated in the PV Display.	Data writing (in non-volatile IC memory) error when power failure occurs.	Release the error code by pressing the  key, and perform data clearing. (p.104)
PV and [Err5] are alternately indicated in the PV Display.	Overscale. PV has exceeded Input range high limit value (scaling high limit value for DC voltage, current inputs).	Check the input signal source.
PV and [Err6] are alternately indicated in the PV Display.	Underscale. PV has dropped below Input range low limit value (scaling low limit value for DC voltage, current inputs).	Check the input signal source and wiring of input terminals.
[ ] and [Err7] are alternately indicated in the PV Display.	PV has exceeded the Indication range and Control range. Burnout of thermocouple, RTD or disconnection of DC voltage (0 to 1 V DC)	Check the input signal source. Replace each sensor. <b>How to check whether the sensor is burnt out [Thermocouple]</b> If the input terminals of the instrument are shorted, and if a value around room temperature is indicated, the instrument is likely to be operating normally, however, the sensor may be burnt out. <b>[RTD]</b> If approx. 100 Ω of resistance is connected to the input terminals between A-B of the instrument and between B-B is shorted, and if a value around 0°C (32°F) is indicated, the instrument is likely to be operating normally, however, the sensor may be burnt out. <b>[DC voltage (0 to 1 V DC)]</b> If the input terminals of the instrument are shorted, and if a scaling low limit value is indicated, the instrument is likely to be operating normally, however, the signal wire may be disconnected.
	Check whether the input terminals of thermocouple, RTD or DC voltage (0 to 1 V DC) are securely mounted to the instrument input terminals.	Connect the sensor terminals to the instrument input terminals securely.

Problem	Possible Cause	Solution
[ - - - - ] and [Err 07] are alternately indicated in the PV Display.	PV has dropped below the Indication range and Control range.	Check the input signal source and wiring of input terminals.
	Check whether input signal wire for DC voltage (1 to 5 V DC) or Direct current (4 to 20 mA DC) is disconnected.	<b>How to check whether the input signal wire is disconnected</b> <b>[DC voltage (1 to 5 V DC)]</b> If the input to the input terminals of the instrument is 1 V DC and if a scaling low limit value is indicated, the instrument is likely to be operating normally, however, the signal wire may be disconnected. <b>[Direct current (4 to 20 mA DC)]</b> If the input to the input terminals of the instrument is 4 mA DC and if a scaling low limit value is indicated, the instrument is likely to be operating normally, however, the signal wire may be disconnected.
	Check whether input signal wire for DC voltage (1 to 5 V DC) or current (4 to 20 mA DC) is securely connected to the instrument input terminals.	Connect the input signal wire to the terminals of this instrument securely.
	Check if polarity of thermocouple or compensating lead wire is correct. Check whether codes (A, B, B) of RTD agree with the instrument terminals.	Wire them correctly.
[Err 10] is indicated in the PV Display.	Hardware malfunction	Contact our agency or us.
[OFF], nothing or PV is indicated in the PV Display.	Control output OFF function is enabled.	Press the  key for approx. 1 second to release the function.
The indication of PV Display is irregular or unstable.	Check whether sensor input or temperature unit (°C or °F) is correct.	Select the sensor input and temperature unit (°C or °F) properly.
	Sensor correction coefficient or Sensor correction value is unsuitable.	Set them to suitable values.
	Check whether the specification of the sensor is correct.	Use a sensor with appropriate specifications.
	AC leaks into the sensor circuit.	Use an ungrounded type sensor.
	There may be equipment that interferes with or makes noise near the instrument.	Keep the instrument clear of any potentially disruptive equipment.

Problem	Possible Cause	Solution
<p>The PV Display keeps indicating the value set in [Scaling low limit].</p>	<p>Check whether the input signal wire for DC voltage (0 to 5 V DC, 0 to 10 V DC) and Direct current (0 to 20 mA DC) is disconnected.</p>	<p>Check the input signal wires of DC voltage (0 to 5 V DC, 0 to 10 V DC) and Direct current (0 to 20 mA DC).</p> <p><b>How to check whether the input signal wire is disconnected</b></p> <p><b>[DC voltage (0 to 5 V DC, 0 to 10 V DC)]</b>            If the input to the input terminal of this controller is 1 V DC, and if a value (converted value from scaling high, low limit setting) corresponding to 1 V DC is indicated, the controller is likely to be operating normally, however, the input signal wire may be disconnected.</p> <p><b>[Direct current (0 to 20 mA DC)]</b>            If the input to the input terminal of this controller is 4 mA DC, and if a value (converted value from scaling high, low limit setting) corresponding to 4 mA DC is indicated, the controller is likely to be operating normally, however, the input signal wire may be disconnected.</p>
	<p>Check whether the input terminals for DC voltage (0 to 5 V DC, 0 to 10 V DC) or Direct current (0 to 20 mA DC) are securely connected to the instrument input terminals.</p>	<p>Connect the input terminals of DC voltage and current to the input terminals of this instrument securely.</p>

## 12.2 Key Operation

Problem	Possible Cause	Solution
None of the set values can be set.	Set value lock (Lock 1 or Lock 4) is selected.	Release the lock in [Set value lock].
	AT, 'AT on startup' or Auto-reset is performing.	In the case of AT or 'AT on startup', cancel AT or 'AT on startup'. Please wait until auto-reset is finished. (It takes approximately 4 minutes until auto-reset is finished.)
Only SV and Alarm value can be set. Other settings are impossible.	Set value lock (Lock 2 or Lock 5) is selected.	Release the lock in [Set value lock].
The setting indication does not change in the input range, and new values are unable to be set.	Scaling high or low limit value may be set at the point where the value does not change.	Set it to a suitable value.

### 12.3 Control

Problem	Possible Cause	Solution
Temperature does not rise.	Sensor is out of order.	Replace the sensor.
	Check whether the Sensor or control output terminals are securely mounted to the instrument input terminals.	Ensure that the sensor or control output terminals are mounted to the instrument input terminals securely.
	Check whether the wiring of sensor or control output terminals is correct.	Wire them correctly.
The control output remains in an ON status.	OUT1 or OUT2 low limit value is set to 100% or higher.	Set it to a suitable value.
The control output remains in an OFF status.	OUT1 or OUT2 high limit value is set to 0% or less.	Set it to a suitable value.
[Err20] is indicated in the PV display.	AT or 'AT on startup' has not been completed even if approx. 4 hours have elapsed since AT or 'AT on startup' started.	Set P, I, D and ARW values manually
	For 'AT on startup', PV slope and delay time cannot be measured normally for P, I, D calculation.	

For all other malfunctions, please contact our main office or dealers.



# 13. Character Table

## 13.1 Error Code

Error codes are indicated in the PV Display.

Error Code	Error Contents
<i>Er01</i>	Internal non-volatile IC memory is defective.
<i>Er02</i>	Data writing (in non-volatile IC memory) error when power failure occurs.
<i>Er05</i>	PV has exceeded Input range high limit value (Scaling high limit value for DC voltage, current inputs).
<i>Er06</i>	PV has dropped below Input range low limit value (Scaling low limit value for DC voltage, current inputs).
<i>Er07</i>	Input burnout or disconnection. Input value is outside of the Indication range and control range.
<i>Er10</i>	Hardware malfunction
<i>Er20</i>	AT or 'AT on startup' has not been completed even if approx. 4 hours have elapsed since AT or 'AT on startup' started. For 'AT on startup', PV slope and delay time cannot be measured normally for P, I, D calculation.

### 13.2 Run Mode

Character	Indicated Item Name
OFF □□□	Control output OFF
□□25 □□105	Manual control (MV flashes.)

### 13.3 Monitor Mode

Character	Indicated Item Name
□□25 [MV]	MV (Decimal point flashes.)
□□25 [Remaining time]	Remaining time is indicated (When Program control is running)
□□25 [Step number]	Current step number indicated (When Program control is running) (BCS2) 47_1 to 47_9
□□25 [Memory number]	SV number indicated (BCS2) 48 1□ to 484□

### 13.4 Initial Setting Mode

The PV Display indicates setting characters, and the SV Display indicates factory default value.

Characters, Factory Default	Setting Item, Setting Range	
4En4 E□□□	<b>Input type</b>	
	E□□□	K -200 to 1370 °C
	E□.□	K -200.0 to 400.0 °C
	J□□□	J -200 to 1000 °C
	r□□□	R 0 to 1760 °C
	4□□□	S 0 to 1760 °C
	b□□□	B 0 to 1820 °C
	E□□□	E -200 to 800 °C
	r□.□	T -200.0 to 400.0 °C
	n□□□	N -200 to 1300 °C
	PL2□	PL-II 0 to 1390 °C
	c□□□	C(W/Re5-26) 0 to 2315 °C
	Pt□.□	Pt100 -200.0 to 850.0 °C
	JPt□.□	JPt100 -200.0 to 500.0 °C
	Pt□□	Pt100 -200 to 850 °C
	JPt□□	JPt100 -200 to 500 °C
	420A	4 to 20 mA DC -2000 to 10000
	020A	0 to 20 mA DC -2000 to 10000
	0□.1A	0 to 1 V DC -2000 to 10000
	0□.5A	0 to 5 V DC -2000 to 10000
1□.5A	1 to 5 V DC -2000 to 10000	
0□.10A	0 to 10 V DC -2000 to 10000	
4FLH 1370	<b>Scaling high limit</b> Setting range: Scaling low limit value to input range high limit value DC voltage, current inputs: -2000 to 10000 (*1)	
4FLL -200	<b>Scaling low limit</b> Setting range: Input range low limit value to scaling high limit value DC voltage, current inputs: -2000 to 10000 (*1)	
dP□□ □□□□	<b>Decimal point place</b>	
	□□□□	No decimal point
	□□.□□	1 digit after decimal point
	□□□.□	2 digits after decimal point
□□□□	3 digits after decimal point	

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Setting Range	
EV01 000	<b>Event output EV1 allocation</b>	
	<b>[Event Output Allocation Table]</b>	
	000	No event
	001	Alarm output, High limit alarm
	002	Alarm output, Low limit alarm
	003	Alarm output, High/Low limits alarm
	004	Alarm output, High/Low limits independent alarm
	005	Alarm output, High/Low limit range alarm
	006	Alarm output, High/Low limit range independent alarm
	007	Alarm output, Process high alarm
	008	Alarm output, Process low alarm
	009	Alarm output, High limit with standby alarm
	010	Alarm output, Low limit with standby alarm
	011	Alarm output, High/Low limits with standby alarm
	012	Alarm output, High/Low limits with standby independent alarm
	013	Heater burnout alarm output
	014	Loop break alarm output
	015	Time signal output
016	Output during AT	
017	Pattern end output	
018	Output by communication command	
ALAR no	<b>EV1 alarm value 0 Enabled/Disabled</b>	
	no	Disabled
	YE	Enabled
AL 000	<b>EV1 alarm value</b>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)	
ALH 000	<b>EV1 high limit alarm value</b>	
	Setting range: Same as those of EV1 alarm value	

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Setting Range	
<i>R 1H4</i> □□ 10	<b>EV1 alarm hysteresis</b> Setting range: 0.1 to 1000.0°C(°F), DC voltage, current inputs: 1 to 10000 (*1)	
<i>R 1d4</i> □□□ 0	<b>EV1 alarm delay time</b> Setting range: 0 to 10000 seconds	
<i>R 1L<math>\bar{A}</math></i> <i>no<math>\bar{A}</math>L</i>	<b>EV1 alarm Energized/De-energized</b>	
	<i>no<math>\bar{A}</math>L</i>	Energized
	<i>rEB4</i>	De-energized
<i>F4 14</i> □□□ 1	<b>TS1 output step number</b> Setting range: 1 to 9	
<i>F4 1F</i> 0000	<b>TS1 OFF time</b> Setting range: 00:00 to 99:59 (*4)	
<i>F4 1o</i> 0000	<b>TS1 ON time</b> Setting range: 00:00 to 99:59 (*4)	
<i>EB02</i> □000	<b>Event output EV2 allocation</b> <b>[Event Output Allocation Table]</b>	
	□000	No event
	□001	Alarm output, High limit alarm
	□002	Alarm output, Low limit alarm
	□003	Alarm output, High/Low limits alarm
	□004	Alarm output, High/Low limits independent alarm
	□005	Alarm output, High/Low limit range alarm
	□006	Alarm output, High/Low limit range independent alarm
	□007	Alarm output, Process high alarm
	□008	Alarm output, Process low alarm
	□009	Alarm output, High limit with standby alarm
	□010	Alarm output, Low limit with standby alarm
	□011	Alarm output, High/Low limits with standby alarm
	□012	Alarm output, High/Low limits with standby independent alarm
	□013	Heater burnout alarm output
	□014	Loop break alarm output
	□015	Time signal output
	□016	Output during AT
	□017	Pattern end output
	□018	Output by communication command
□019	Heating/Cooling control relay contact output	
<i>R23A</i> <i>no□□</i>	<b>EV2 alarm value 0 Enabled/Disabled</b>	
	<i>no□□</i>	Disabled
	<i>4E4□</i>	Enabled

(\*1) The placement of the decimal point follows the selection.

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Setting Range	
R2□□ □□□□	<b>EV2 alarm value</b>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)	
R2H□ □□□□	<b>EV2 high limit alarm value</b> Setting range: Same as those of EV2 alarm value	
R2HY □□□□	<b>EV2 alarm hysteresis</b> Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)	
R2dY □□□□	<b>EV2 alarm delay time</b> Setting range: 0 to 10000 seconds	
R2L $\bar{L}$ no $\bar{n}$ L	<b>EV2 alarm Energized/De-energized</b>	
	no $\bar{n}$ L	Energized
	rEBY	De-energized
rY2Y □□□□	<b>TS2 output step number</b> Setting range: 1 to 9	
rY2F 0000	<b>TS2 OFF time</b> Setting range: 00:00 to 99:59 (*4)	
rY2o 0000	<b>TS2 ON time</b> Setting range: 00:00 to 99:59 (*4)	
H□□□ □□□□  H□ and CT1 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 1 value</b> Setting range: 20 A: 0.0 to 20.0 A 100 A: 0.0 to 100.0 A	

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Setting Range			
H2□□ □□00 H2 and CT2 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 2 value</b> Setting range: 20 A: 0.0 to 20.0 A, 100 A: 0.0 to 100.0 A			
LP_F □□□0	<b>Loop break alarm time</b> Setting range: 0 to 200 minutes			
LP_H □□□0	<b>Loop break alarm span</b> Setting range: 0 to 150°C (°F), or 0.0 to 150.0°C (°F) DC voltage, current inputs: 0 to 1500 (*1)			
EBI 1 □□□□	<b>Event input DI1 allocation</b> [Event Input Allocation Table]			
		<b>Event input function</b>	<b>Input ON (Closed)</b>	<b>Input OFF (Open)</b>
	□□□□	No event		
	□□□1	Set value memory		
	□□□2	Control ON/OFF	Control OFF	Control ON
	□□□3	Direct/Reverse action	Direct action	Reverse action
	□□□4	Preset output 1 ON/OFF	Preset output	Usual control
	□□□5	Preset output 2 ON/OFF	Preset output	Usual control
	□□□6	Auto/Manual control	Manual control	Automatic control
	□□□7	Remote/Local	Remote	Local
	□□□8	Program control RUN/STOP	RUN	STOP
	□□□9	Program control Holding/Not holding	Holding	Not holding
	□□10	Program control Advance function	Advance function	Usual control
□□11	Integral action Holding	Integral action Holding	Usual integral action	
EBI 2 □□□□	<b>Event input DI2 allocation</b> Selection item: Same as those of Event input DI1 allocation			
rFLH 1370	<b>External setting input high limit</b> Setting range: External setting input low limit to Input range high limit (*1)			
rFLl -200	<b>External setting input low limit</b> Setting range: Input range low limit to External setting input high limit (*1)			
rro4 PB□□	<b>Transmission output type</b>			
	PB□□	PV transmission		
	4B□□	SV transmission		
	7B□□	MV transmission		
	dB□□	DV transmission		

(\*1) The placement of the decimal point follows the selection.



Characters, Factory Default	Setting Item, Setting Range	
r r L H 1370	<b>Transmission output high limit</b>	
	PV, SV transmission	Transmission output low limit to Input range high limit DC voltage, currents: -2000 to 10000
	MV transmission	Transmission output low limit to 105.0%
	DV transmission	Transmission output low limit to Scaling span (*1)
r r L L -200	<b>Transmission output low limit</b>	
	PV, SV transmission	Input range low limit to Transmission output high limit DC voltage, currents: -2000 to 10000
	MV transmission	-5.0% to Transmission output high limit value
	DV transmission	-Scaling span to Transmission output high limit value (*1)
4 0 0 0 0 0 0 0	<b>SV1</b> Setting range: Scaling low limit to Scaling high limit (*1)	
4 2 0 0 0 0 0 0	<b>SV2</b> Setting range: Scaling low limit to Scaling high limit (*1)	
4 3 0 0 0 0 0 0	<b>SV3</b> Setting range: Scaling low limit to Scaling high limit (*1)	
4 4 0 0 0 0 0 0	<b>SV4</b> Setting range: Scaling low limit to Scaling high limit (*1)	

(\*1) The placement of the decimal point follows the selection.

### 13.5 Main Setting Mode

The PV Display indicates setting characters, and the SV Display indicates factory default value.

Characters, Factory Default	Setting Item, Setting Range
4000 0000	<b>SV1</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.1 0000	<b>Step 1 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.1 0000	<b>Step 1 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
4200 0000	<b>SV2</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.2 0000	<b>Step 2 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.2 0000	<b>Step 2 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
4300 0000	<b>SV3</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.3 0000	<b>Step 3 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.3 0000	<b>Step 3 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
4400 0000	<b>SV4</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.4 0000	<b>Step 4 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.4 0000	<b>Step 4 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
4500 0000	<b>Step 5 SV</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.5 0000	<b>Step 5 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.5 0000	<b>Step 5 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
4600 0000	<b>Step 6 SV</b> Setting range: Scaling low limit to Scaling high limit (*1)
r0.6 0000	<b>Step 6 time</b> Setting range: -:-:-, or 00:00 to 99:59
20.6 0000	<b>Step 6 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Setting Range
47.00 0000	<b>Step 7 SV</b> Setting range: Scaling low limit to Scaling high limit (*1)
70.7 0000	<b>Step 7 time</b> Setting range: 00:00, or 00:00 to 99:59
20.7 0000	<b>Step 7 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
48.00 0000	<b>Step 8 SV</b> Setting range: Scaling low limit to Scaling high limit (*1)
70.8 0000	<b>Step 8 time</b> Setting range: 00:00, or 00:00 to 99:59
20.8 0000	<b>Step 8 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)
49.00 0000	<b>Step 9 SV</b> Setting range: Scaling low limit to Scaling high limit (*1)
70.9 0000	<b>Step 9 time</b> Setting range: 00:00, or 00:00 to 99:59
20.9 0000	<b>Step 9 wait value</b> Setting range: 0 to Converted value of 20% of the input span DC voltage, current inputs: 0 to Converted value of 20% of scaling span (*1)

(\*1) The placement of the decimal point follows the selection.

### 13.6 Sub Setting Mode

The PV Display indicates setting characters, and the SV Display indicates factory default value.

Characters, Factory Default	Setting Item, Setting Range	
AT <input type="text"/> ---	<b>AT/Auto-reset Perform/Cancel</b>	
	<input type="text"/>	AT/AT on startup/Auto-reset Cancel
	AT <input type="text"/>	AT Perform
	AT _ <input type="text"/>	AT on startup Perform
<input type="text"/>	<input type="text"/>	Auto-reset Perform
P <input type="text"/> <input type="text"/> 10	<b>OUT1 proportional band</b> Setting range: 0 to Input span °C (°F) DC voltage, current inputs: 0.0 to 1000.0%	
I <input type="text"/> <input type="text"/> 200	<b>Integral time</b> Setting range: 0 to 3600 seconds	
d <input type="text"/> <input type="text"/> 50	<b>Derivative time</b> Setting range: 0 to 1800 seconds	
Ar <input type="text"/> <input type="text"/> 50	<b>ARW</b> Setting range: 0 to 100%	
r <input type="text"/> <input type="text"/> <input type="text"/> 00	<b>Manual reset</b> Setting range: ±Proportional band value	
c <input type="text"/> <input type="text"/> 30	<b>OUT1 proportional cycle</b> Setting range: 0.5, or 1 to 120 seconds	
HY <input type="text"/> <input type="text"/> 10	<b>OUT1 ON/OFF hysteresis</b> Setting range: 0.1 to 1000.0 °C (°F) DC voltage, current inputs: 1 to 10000 (*1)	
oLH <input type="text"/> <input type="text"/> 100	<b>OUT1 high limit</b> Setting range: OUT1 low limit value to 100% (Direct current output type: OUT1 low limit value to 105%)	
oLL <input type="text"/> <input type="text"/> 0	<b>OUT1 low limit</b> Setting range: 0% to OUT1 high limit value (Direct current output type: -5% to OUT1 high limit value)	
or <input type="text"/> <input type="text"/> <input type="text"/> 0	<b>OUT1 rate-of-change</b> Setting range: 0 to 100%/second	
c <input type="text"/> <input type="text"/> Ar <input type="text"/> <input type="text"/>	<b>OUT2 cooling method</b>	
	<input type="text"/> <input type="text"/>	Air cooling (linear characteristics)
	o <input type="text"/> <input type="text"/>	Oil cooling (1.5th power of the linear characteristics)
<input type="text"/> <input type="text"/>	Water cooling (2nd power of the linear characteristics)	
P_b <input type="text"/> <input type="text"/> 10	<b>OUT2 proportional band</b> Setting range: 0 to Input span °C (°F) DC voltage, current inputs: 0.0 to 1000.0%	
c_b <input type="text"/> <input type="text"/> 30	<b>OUT2 proportional cycle</b> Setting range: 0.5, or 1 to 120 seconds	
HY <input type="text"/> <input type="text"/> 10	<b>OUT2 ON/OFF hysteresis</b> Setting range: 0.1 to 1000.0 °C (°F), DC voltage, current inputs: 1 to 10000 (*1)	
oLH <input type="text"/> <input type="text"/> 100	<b>OUT2 high limit</b> Setting range: OUT2 low limit value to 100% (Direct current output type: OUT2 low limit value to 105%)	
oLL <input type="text"/> <input type="text"/> 0	<b>OUT2 low limit</b> Setting range: 0% to OUT2 high limit value (Direct current output type: -5% to OUT2 high limit value)	

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Setting Range	
<i>db</i> <input type="text"/> <input type="text"/>	<b>Overlap/Dead band</b> Setting range: -200.0 to 200.0°C (°F), DC voltage, current inputs: -2000 to 2000 (*1)	
<i>conf</i> <i>HEAT</i>	<b>Direct/Reverse action</b>	
	<i>HEAT</i>	Reverse (Heating) action
<i>A1</i> <input type="text"/> <input type="text"/>	<b>EV1 alarm value</b>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
<i>A1H</i> <input type="text"/> <input type="text"/>	<b>EV1 high limit alarm value</b> Setting range: Same as those of EV1 alarm value	
<i>A2</i> <input type="text"/> <input type="text"/>	<b>EV2 alarm value</b> Setting range: Same as those of EV1 alarm value	
<i>A2H</i> <input type="text"/> <input type="text"/>	<b>EV2 high limit alarm value</b> Setting range: Same as those of EV1 alarm value	
<i>H1</i> <input type="text"/> <input type="text"/> <i>H1</i> and CT1 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 1 value</b> Setting range: 20.0 A: 0.0 to 20.0 A 100.0 A: 0.0 to 100.0 A	
<i>H2</i> <input type="text"/> <input type="text"/> <i>H2</i> and CT2 current value are alternately indicated in the PV Display.	<b>Heater burnout alarm 2 value</b> Setting range: 20.0 A: 0.0 to 20.0 A 100.0 A: 0.0 to 100.0 A	
<i>LP_T</i> <input type="text"/> <input type="text"/>	<b>Loop break alarm time</b> Setting range: 0 to 200 minutes	
<i>LP_H</i> <input type="text"/> <input type="text"/>	<b>Loop break alarm span</b> Setting range: 0 to 150°C (°F), 0.0 to 150.0°C (°F) DC voltage, current inputs: 0 to 1500 (*1)	

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

### 13.7 Engineering Mode

The PV Display indicates setting characters, and the SV Display indicates factory default value.

Characters, Factory Default	Setting Item, Setting Range			
<i>Lock</i> ----- -----	<b>Set value lock</b>			
			<b>Change via Keypad</b>	<b>Change via Software Communication</b>
	-----	Unlock	All set values can be changed.	All set values can be changed.
	<i>Loc 1</i>	Lock 1	None of the set values can be changed.	
	<i>Loc 2</i>	Lock 2	In Fixed value control, only SV and Alarm value can be changed. In Program control, Step SV, Step time and Alarm value can be changed.	
	<i>Loc 3</i>	Lock 3	All set values can be changed.	Setting items – except Input type, Controller/Converter – can be changed temporarily via software communication. However, if power is turned ON again, setting values revert to the values before Lock 3, 4 or 5 was selected.
	<i>Loc 4</i>	Lock 4	None of the set values can be changed.	
	<i>Loc 5</i>	Lock 5	In Fixed value control, only SV and Alarm value can be changed. In Program control, Step SV, Step time and Alarm value can be changed.	
<i>Ebi 1</i> ----- -----	<b>Event input DI1 allocation</b> <b>[Event Input Allocation Table]</b>			
		<b>Event input function</b>	<b>Input ON (Closed)</b>	<b>Input OFF (Open)</b>
	-----	No event		
	-----	Set value memory		
	-----	Control ON/OFF	Control OFF	Control ON
	-----	Direct/Reverse action	Direct action	Reverse action
	-----	Preset output 1 ON/OFF	Preset output	Usual control
	-----	Preset output 2 ON/OFF	Preset output	Usual control
	-----	Auto/Manual control	Manual control	Automatic control
	-----	Remote/Local	Remote	Local
	-----	Program control RUN/STOP	RUN	STOP
	-----	Program control Holding/Not holding	Holding	Not holding
	-----	Program mode; Advance function	Advance function	Usual control
-----	Integral action holding	Integral action holding	Usual integral action	

Characters, Factory Default	Setting Item, Setting Range	
<i>EHI 2</i> □□□□	<b>Event input DI2 allocation</b> Selection item: Same as Event input DI1 allocation	
<i>EVb 1</i> □□□□	<b>Event output EV1 allocation</b> <b>[Event Output Allocation Table]</b>	
	□□□□	No event
	□□□1	Alarm output, High limit alarm
	□□□2	Alarm output, Low limit alarm
	□□□3	Alarm output, High/Low limits alarm
	□□□4	Alarm output, High/Low limits independent alarm
	□□□5	Alarm output, High/Low limit range alarm
	□□□6	Alarm output, High/Low limit range independent alarm
	□□□7	Alarm output, Process high alarm
	□□□8	Alarm output, Process low alarm
	□□□9	Alarm output, High limit with standby alarm
	□□10	Alarm output, Low limit with standby alarm
	□□11	Alarm output, High/Low limits with standby alarm
	□□12	Alarm output, High/Low limits with standby independent alarm
	□□13	Heater burnout alarm output
	□□14	Loop break alarm output
	□□15	Time signal output
	□□16	Output during AT
	□□17	Pattern end output
	□□18	Output by communication command
<i>R1ER</i> no□□	<b>EV1 alarm value 0 Enabled/Disabled</b>	
	no□□	Disabled
	YE4□	Enabled
<i>R1□□</i> □□□□	<b>EV1 alarm value</b>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

Characters, Factory Default	Setting Item, Setting Range	
R 1H <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<b>EV1 high limit alarm value</b> Setting range: Same as those of EV1 alarm value	
R 1HY <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 10	<b>EV1 alarm hysteresis</b> Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)	
R 1dY <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<b>EV1 alarm delay time</b> Setting range: 0 to 10000 seconds	
R 1L <input type="checkbox"/> no <input type="checkbox"/> no <input type="checkbox"/>	<b>EV1 alarm Energized/De-energized</b>	
	no <input type="checkbox"/>	Energized
	re <input type="checkbox"/>	De-energized
F 4 14 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1	<b>TS1 output step number</b> Setting range: 1 to 9	
F 4 1F <input type="checkbox"/> 0000	<b>TS1 OFF time</b> Setting range: 00:00 to 99:59 (*4)	
F 4 1o <input type="checkbox"/> 0000	<b>TS1 ON time</b> Setting range: 00:00 to 99:59 (*4)	
E 8 o2 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<b>Event output EV2 allocation</b> <b>[Event Output Allocation Table]</b>	
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	No event
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 1	Alarm output, High limit alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 2	Alarm output, Low limit alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 3	Alarm output, High/Low limits alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 4	Alarm output, High/Low limits independent alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 5	Alarm output, High/Low limit range alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 6	Alarm output, High/Low limit range independent alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 7	Alarm output, Process high alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 8	Alarm output, Process low alarm
	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> 9	Alarm output, High limit with standby alarm
	<input type="checkbox"/> 0 10	Alarm output, Low limit with standby alarm
	<input type="checkbox"/> 0 11	Alarm output, High/Low limits with standby alarm
	<input type="checkbox"/> 0 12	Alarm output, High/Low limits with standby independent alarm
	<input type="checkbox"/> 0 13	Heater burnout alarm output
	<input type="checkbox"/> 0 14	Loop break alarm output
	<input type="checkbox"/> 0 15	Time signal output
	<input type="checkbox"/> 0 16	Output during AT
	<input type="checkbox"/> 0 17	Pattern end output
	<input type="checkbox"/> 0 18	Output by communication command
	<input type="checkbox"/> 0 19	Heating/Cooling control relay contact output
R 2 E R <input type="checkbox"/> no <input type="checkbox"/> <input type="checkbox"/>	<b>EV2 alarm value 0 Enabled/Disabled</b>	
	no <input type="checkbox"/>	Disabled
	YE <input type="checkbox"/>	Enabled

(\*1) The placement of the decimal point follows the selection.

(\*4) Time unit follows the selection from [Step time unit].



Characters, Factory Default	Setting Item, Setting Range	
R2□□ □□□0	<b>EV2 alarm value</b>	
	High limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits independent alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limit range independent alarm	0 to Input span °C (°F) (*1) (*2)
	Process high alarm	Input range low limit to Input range high limit (*1) (*3)
	Process low alarm	Input range low limit to Input range high limit (*1) (*3)
	High limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	Low limit with standby alarm	-(Input span) to Input span °C (°F) (*1) (*2)
	High/Low limits with standby alarm	0 to Input span °C (°F) (*1) (*2)
	High/Low limits with standby independent alarm	0 to Input span °C (°F) (*1) (*2)
R2H□ □□□0	<b>EV2 high limit alarm value</b> Setting range: Same as those of EV2 alarm value	
R2H4 □□ 10	<b>EV2 alarm hysteresis</b> Setting range: 0.1 to 1000.0°C (°F), DC voltage, current inputs: 1 to 10000 (*1)	
R2d4 □□□0	<b>EV2 alarm delay time</b> Setting range: 0 to 10000 seconds	
R2Lā noāL	<b>EV2 alarm Energized/De-energized</b>	
	noāL	Energized
	rEB4	De-energized
r424 □□□ 1	<b>TS2 output step number</b> Setting range: 1 to 9	
r42F 0000	<b>TS2 OFF time</b> Setting range: 00:00 to 99:59 (*4)	
r42o 0000	<b>TS2 ON time</b> Setting range: 00:00 to 99:59 (*4)	
4oE□ 1000	<b>Sensor correction coefficient</b> Setting range: -10.000 to 10.000	
4o□□ □□.00	<b>Sensor correction</b> Setting range: -1000.0 to 1000.0°C (°F) DC voltage, current inputs: -10000 to 10000 (*1)	
F1Lr □□.00	<b>PV filter time constant</b> Setting range: 0.0 to 10.0 seconds	

(\*1) The placement of the decimal point follows the selection.

(\*2) For DC voltage, current inputs, the input span is the same as the scaling span.

(\*3) For DC voltage, current inputs, input range low (or high) limit value is the same as scaling low (or high) limit value.

(\*4) Time unit follows the selection from [Step time unit].

Characters, Factory Default	Setting Item, Setting Range	
cñ4L noñL	<b>Communication protocol</b>	
	noñL	Shinko protocol
	ñodR	Modbus ASCII
	ñodr	Modbus RTU
cñno □□□0	<b>Instrument number</b> Setting range: 0 to 95	
cñ4P □□96	<b>Communication speed</b>	
	□□96	9600 bps
	□192	19200 bps
	□384	38400 bps
cñFF 7EBn	<b>Data bit/Parity</b>	
	8non	8 bits/No parity
	7non	7 bits/No parity
	8EBn	8 bits/Even
	7EBn	7 bits/Even
	8odd	8 bits/Odd
	7odd	7 bits/Odd
cñ4F □□□1	<b>Stop bit</b>	
	□□□1	1 bit
	□□□2	2 bits
cñd4 □□10	<b>Response delay time</b> Setting range: 0 to 1000 ms	
48_b □□□0	<b>SVTC bias</b> Setting range: Converted value of $\pm 20\%$ of the input span DC voltage, current inputs: $\pm 20\%$ of the scaling span (*1)	
rEñF LoCL	<b>Remote/Local</b>	
	LoCL	Local
	rEñF	Remote
rFLH 1370	<b>External setting input high limit</b> Setting range: External setting input low limit to Input range high limit (*1)	
rFLl -200	<b>External setting input low limit</b> Setting range: Input range low limit to External setting input high limit (*1)	
rF_b □□□0	<b>Remote bias</b> Setting range: Converted value of $\pm 20\%$ of the input span DC voltage, current inputs: $\pm 20\%$ of the scaling span (*1)	

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Setting Range	
TrOH PH□□	<b>Transmission output type</b>	
	PH□□	PV transmission
	SV□□	SV transmission
	MV□□	MV transmission
TrLH 1370	<b>Transmission output high limit</b>	
	PV, SV transmission	Transmission output low limit to Input range high limit value
	MV transmission	Transmission output low limit to 105.0%
	DV transmission	Transmission output low limit to Scaling span (*1)
TrLL -200	<b>Transmission output low limit</b>	
	PV, SV transmission	Input range low limit to Transmission output high limit value
	MV transmission	-5.0% to Transmission output high limit value
	DV transmission	-Scaling span to Transmission output high limit value (*1)
TiH□ TiL□□	<b>Step time unit</b>	
	TiL□□	Hours:Minutes
	SE□□	Minutes:Seconds
PrEF YOP	<b>Power restore action</b>	
	YOP	Stops after power is restored
	cont	Continues (resumes) after power is restored.
Hold	Suspends (on hold) after power is restored.	
	<b>4.4B</b>	
	□□□□ Setting range: Scaling low limit value to Scaling high limit value (*1)	
4.4L PH□□	<b>Program control start type</b>	
	PH□□	PV start
	PHr□	PVR start
SV□□	SV start	
rEPF □□□□	<b>Number of repetitions</b>	
	Setting range: 0 to 10000 times	
rR44 484F	<b>SV Rise/Fall rate start type</b>	
	484F	SV start
	PH4F	PV start
rRFU □□□□	<b>SV rise rate</b>	
	Setting range: 0 to 10000°C/min (°F/min) Thermocouple, RTD inputs with a decimal point: 0.0 to 1000.0°C/min (°F/min) DC voltage, current inputs: 0 to 10000/min	
rRFd □□□□	<b>SV fall rate</b>	
	Setting range: 0 to 10000°C/min (°F/min) Thermocouple, RTD inputs with a decimal point: 0.0 to 1000.0°C/min (°F/min) DC voltage, current inputs: 0 to 10000/min	

(\*1) The placement of the decimal point follows the selection.

Characters, Factory Default	Setting Item, Setting Range	
P4b oFF	<b>Indication when control output OFF</b>	
	oFF	OFF indication
	RoFF	No indication
	Pb	PV indication
	PbAL	PV indication + Any Alarm active
AT_b 20	<b>AT bias</b> Setting range: 0 to 50°C (0 to 100°F), or 0.0 to 50.0°C (0.0 to 100.0°F)	
AT_b 10	<b>AT gain</b> Setting range: 0.1 to 10.0 times	
EoU oFF	<b>Output status when input errors occur</b>	
	oFF	Output OFF
	on	Output ON
ARnU oFF	<b>OUT/OFF key function</b>	
	oFF	Control output OFF function
	ARnU	Auto/Manual control
	Prog	Program control
ARh AUo	<b>Auto/Manual after power interruption</b>	
	AUo	Automatic control
	ARnU	Manual control
TI AE 0000	<b>Indication time</b> Setting range: 00:00 to 60:00 (Minutes:Seconds) When set to 00:00, remains ON.	
P4F1 00	<b>OUT1 MV preset value</b> Setting range: 0.0 to 100.0% (Direct current output: -5.0 to 105.0%)	
P4F2 00	<b>OUT2 MV preset value</b> Setting range: 0.0 to 100.0% (Direct current output: -5.0 to 105.0%)	
FUn cnr	<b>Controller/Converter function</b>	
	cnr	Controller
	cnb	Converter

\*\*\*\*\* Inquiries \*\*\*\*\*

For any inquiries about this unit, please contact our agency or the vendor where you purchased the unit after checking the following.

[Example]

- Model ----- BCS2R00-12
- Option ----- EV2, C5W(100A)
- Serial number ----- No. 145F05000

In addition to the above, please let us know the details of the malfunction, or discrepancy, and the operating conditions.

**SHINKO TECHNOS CO., LTD.**  
**OVERSEAS DIVISION**

Head Office : 2-5-1, Senbahigashi, Minoo, Osaka, Japan

URL: <http://www.shinko-technos.co.jp>

E-mail: [overseas@shinko-technos.co.jp](mailto:overseas@shinko-technos.co.jp)

Tel : +81-72-727-6100

Fax: +81-72-727-7006