

PNOZ XV1P




Safety relays

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

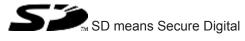

Introduction	5
Validity of documentation	5
Using the documentation	5
Definition of symbols	5
Safety	6
Intended use	6
Safety regulations	6
Safety assessment	6
Use of qualified personnel	7
Warranty and liability	7
Disposal	7
For your safety	7
Unit features	8
Safety features	8
Block diagram/terminal configuration	8
Function Description	9
Operating modes	9
Timing diagram	10
Installation	10
Wiring	11
Preparing for operation	12
Operation	14
Status indicators	14
Faults – Interference	15
Dimensions in mm	15
Technical details	16
Safety characteristic data	25
Supplementary data	25
Service life graph	26

28
28

Introduction

Validity of documentation

This documentation is valid for the product PNOZ XV1P. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

Safety

Intended use

The safety relay PNOZ XV1P provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1 and may be used in applications with

- E-STOP pushbuttons
- Safety gates
- Light grids and safety switches with detection of shorts across contacts

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see Technical details [44] 16]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a unit it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- Are familiar with the basic regulations concerning health and safety / accident prevention
- Have read and understood the information provided in this description under "Safety"
- And have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended
- > Damage can be attributed to not having followed the guidelines in the manual
- Operating personnel are not suitably qualified
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features


- Positive-guided relay outputs:
 - 2 safety contacts (N/O), instantaneous
 - 1 safety contact (N/O), delay-on de-energisation
- Connection options for:
 - E-STOP pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light grids and safety switches with detection of shorts across contacts
- Selectable delay time
- LED display for:
 - Supply voltage
 - Switch status of the safety contacts
- Plug-in connection terminals (either spring-loaded terminal or screw terminal)
- See order reference for unit types

Safety features

The safety relay meets the following safety requirements:

- > The circuit is redundant with built-in self-monitoring.
- > The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

Block diagram/terminal configuration

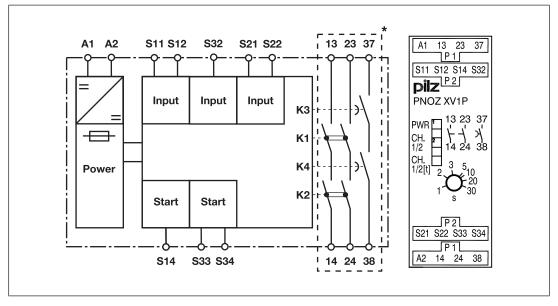

*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

Function Description

The safety relay PNOZ XV1P provides a safety-oriented interruption of a safety circuit. When the supply voltage is applied via the E-STOP pushbutton, the "PWR" LED is lit. The unit is ready for operation when the start circuit S11-S14 is closed.

- Input circuit is closed (e.g. E-STOP pushbutton not operated):
 - The LEDs "CH.1/2" and "CH.1/2[t]" are lit.
 - Safety contacts 13-14, 23-24 and 37-38 are closed, the unit is active.
- Input circuit is opened (e.g. E-STOP pushbutton operated):
 - Safety contacts 13-14 and 23-24 are redundantly opened.
 - The LED "CH.1/2" goes out.
 - Once the set delay time has elapsed, safety contact 37-38 is opened redundantly.
 - The LED "CH.1/2[t]" goes out.

Before the unit can be restarted, the delay time must have elapsed and the unit must again be ready for operation.


Set delay time:

The delay time for safety contact 37-38 can be set on the front of the unit using a screwdriver.

Operating modes

- Single-channel operation: No redundancy in the input circuit, earth faults in the start and input circuit are detected.
- Dual-channel operation without detection of shorts across contacts: Redundant input circuit, detects PNOZ XV1P
 - earth faults in the start and input circuit,
 - short circuits in the input circuit.
- Dual-channel operation with detection of shorts across contacts: Redundant input circuit, detects PNOZ XV1P
 - earth faults in the start and input circuit,
 - short circuits in the input circuit,
 - Shorts across contacts in the input circuit.
- Automatic start: Unit is active once the input circuit has been closed.
- Monitored start: Unit is active once the input circuit is closed and once the start circuit is closed after the waiting period has elapsed (see Technical details [4] 16]).
- Increase in the number of available contacts by connecting contact expander modules or external contactors/relays.

Timing diagram

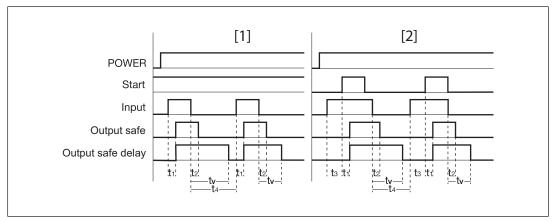

Legend

- Power: Supply voltage
- Start: Start circuit
- Input: Input circuit
- > Output safe: Safety contacts, instantaneous
- Output safe delay: Delayed safety contact
- [1]: Automatic start
- [2]: Monitored start
- t₁: Switch-on delay
- t₂: Delay-on de-energisation
- t₃: Waiting period with a monitored start
- t₄: Recovery time
- t_v: Delay time



NOTICE

At the latest, the delay-on de-energisation safety contacts open after the set delay time + 50 ms + 20% of the set value, even in the case of a component failure.

Installation

- The unit should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail.
- Ensure the unit is mounted securely on a vertical DIN rail (35 mm) by using a fixing element (e.g. retaining bracket or an end angle).

Wiring

Please note:

- ▶ Information given in the "Technical details [□ 16]" must be followed.
- Outputs 13-14, 23-24 are instantaneous safety contacts, output 37-38 is a delay-on deenergisation safety contact.
- To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [22 16]).
- Calculation of the max. cable runs I_{max} in the input circuit:

 $I_{max} = \frac{R_{lmax}}{R_l / km}$

 R_{Imax} = max. overall cable resistance (see Technical details [\square 16]) R_I / km = cable resistance/km

- Use copper wire that can withstand 60/75 °C.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- Do not switch low currents using contacts that have been used previously with high currents.
- The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.
- Ensure the wiring and EMC requirements of IEC 60204-1 are met.

Important for detection of shorts across contacts:

As this function for detecting shorts across contacts is not failsafe, it is tested by Pilz during the final control check. If there is a danger of exceeding the cable length, we recommend the following test once the unit is installed:

- 1. Unit ready for operation (output contacts closed)
- 2. Short circuit the test terminals S22, S32 for detecting shorts across the inputs.
- 3. The unit's fuse must be triggered and the output contacts must open. Cable lengths in the scale of the maximum length can delay the fuse triggering for up to 2 minutes.
- Reset the fuse: Remove the short circuit and switch off the supply voltage for approx. 1 minute.

Preparing for operation

Supply voltage	AC	DC
		A1¢
Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts	$\begin{array}{c c} & & & \\ & & & & \\ & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & &$	$\begin{array}{c c} & & S1 & & \\ & & S11 \\ & & S11 \\ & & \\ $
E-STOP		الم
with detection of shorts across contacts		$\begin{array}{c c} & S12 \\ & S12 \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ $
Safety gate	बि बि	₽ ₽
without detection of shorts across contacts	$\begin{array}{c c} & & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & &$	$\begin{array}{c} & & & & & & \\ & & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & &$
Safety gate		वि वि
with detection of shorts across contacts		$\begin{array}{c c} & & & & & & \\ & & & & & \\ & & & & \\ & & & & \\ & & & \\ & & & \\ &$
Light guard or safety switch, de- tection of shorts across contacts via ESPE		\$\$21 24 V DC \$\$522 \$\$320 \$\$A2 \$\$120 \$\$320 \$\$320 GND



NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data [2] 25]).



NOTICE

Operation with a light guard or safety switch

It must not be possible to switch off the supply voltage for the PNOZ XV1P separately from the supply voltage for the light guard or safety switch.

Start circuit	E-STOP wiring, safety gate without start-up test	Safety gate with start-up test
Automatic start	S11 0 S11 0 S14 0	Simultaneity S1 and S2: max. 1 s
Monitored start	S33 0 S33 0 S34 0	



NOTICE

In the event of an automatic start:

The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

Feedback loop	Automatic start	Monitored start
Contacts from external contactors	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c} $

Legend

- S1/S2: E-STOP/safety gate switch
- S3: Reset button
- ①: Switch operated
- Gate open
- **1**: Gate closed



INFORMATION


With automatic start, S33 and S34 must not be linked; with monitored start, S11 and S14 must not be linked.

Operation

NOTICE Check each safety function
 after initial commissioning and after each change of the machine/ plant
 for SIL CL 3/PL e at least 1x per month, for SIL CL 2/PL d at least 1x per year
Follow the instructions below:
 Activate the safety function and check whether all the used safety contacts open.
 Prepare for operation again and start the unit. All the used safety contacts must be closed again.
The safety functions may only be checked by qualified personnel.

Status indicators

LEDs indicate the status and errors during operation:

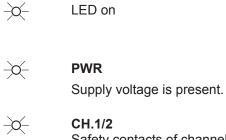

Safety contacts of channel 1 and 2 are closed.

-x-


CH.1/2[t] Safety contacts of channel 3 and 4 are closed.

Faults – Interference

- Earth fault: The supply voltage fails and the safety contacts open. Once the cause of the respective fault has been rectified and the supply voltage is switched off for approx.
 1 minute, the unit is ready for operation again.
- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- LED "PWR" does not light: Short circuit or no supply voltage.
- In the case of an error, the delay-on de-energisation contacts may open before the delay time has elapsed.

Dimensions in mm

* with spring-loaded terminals

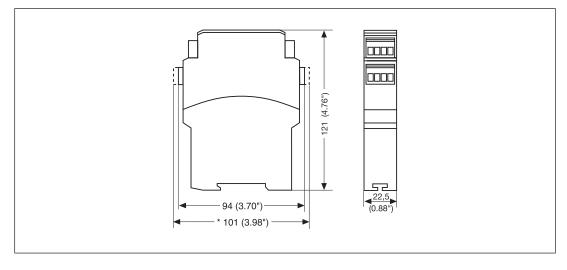

Technical details

Order no. 777601 - 777602

Soo holow for mo	ro ordor numbors	
See below for mo	777601	777602
Solisia	CCC, CE, EAC (Eurasian), TÜV,	CCC, CE, EAC (Eurasian), TÜV,
Approvals	cULus Listed	cULus Listed
Electrical data	777601	777602
Supply voltage		
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply		
(DC)	3,5 W	3,5 W
Residual ripple DC	20 %	20 %
Duty cycle	100 %	100 %
Max. inrush current impulse		
Current pulse, A1	5 A	5 A
Pulse duration, A1	1 ms	1 ms
Inputs	777601	777602
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	35 mA	35 mA
Start circuit DC	35 mA	35 mA
Feedback loop DC	3,5 mA	3,5 mA
Max. overall cable resistance RI- max		
Single-channel at UB DC	100 Ohm	100 Ohm
Dual-channel without detection		
of shorts across contacts at UB		
DC	150 Ohm	150 Ohm
Dual-channel with detection of shorts across contacts at UB DC	C 15 Ohm	15 Ohm
Relay outputs	777601	777602
Number of output contacts		
Safety contacts (N/O), instant-		
aneous	2	2
Safety contacts (N/O), delayed	1	1
Max. short circuit current IK	1 kA	1 kA
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1

Delaw sector to	777004	777000
Relay outputs	777601	777602
Utilisation category of safety con- tacts		
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	5 A	5 A
Max. power	1250 VA	1250 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	5 A	5 A
Max. power	125 W	125 W
Utilisation category of safety con- tacts delayed		
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	5 A	5 A
Max. power	1250 VA	1250 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	5 A	5 A
Max. power	125 W	125 W
Utilisation category		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety con- tacts		
AC15 at	230 V	230 V
Max. current	1,5 A	1,5 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	2 A	2 A
Utilisation category of safety con- tacts delayed		
AC15 at	230 V	230 V
Max. current	2 A	2 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	4 A	4 A
Utilisation category in accordance with UL		
Voltage	240 V AC G. P.	240 V AC G. P.
With current	5 A	5 A
Pilot Duty	C300, R300	C300, R300
	*	

Relay outputs	777601	777602
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Max. melting integral	66 A²s	66 A²s
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	4 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	4 A	4 A
External contact fuse protection, delayed safety contacts		
Max. melting integral	66 A²s	66 A²s
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	4 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24 V AC/DC,		
characteristic B/C	4 A	4 A
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 μm Au
Conventional thermal current while loading several contacts	777601	777602
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 con- tact	5 A	5 A
Conv. therm. current with 2 con- tacts	3,7 A	3,7 A
Conv. therm. current with 3 con- tacts	3 A	3 A
Times	777601	777602
Switch-on delay		
With automatic start typ.	300 ms	300 ms
With automatic start max.	550 ms	550 ms
With automatic start after power on typ.	350 ms	350 ms
With automatic start after power		
on max.	750 ms	750 ms
With monitored start typ.	30 ms	30 ms
With monitored start max.	60 ms	60 ms
Delay-on de-energisation		
With E-STOP typ.	15 ms	15 ms
With E-STOP max.	30 ms	30 ms
With power failure typ.	100 ms	100 ms
With power failure max.	150 ms	150 ms
Recovery time at max. switching frequency 1/s		
After E-STOP	50 ms +tv	50 ms +tv
After power failure	300 ms	300 ms
· · · · · · · · · · · · · · · · · · ·		1 - 30 s

Times	777601	777602
Time accuracy	-20 %/+20 %	-20 %/+20 %
Repetition accuracy	2 %	2 %
Waiting period with a monitored		
start	300 ms	300 ms
Min. start pulse duration with a monitored start	30 ms	30 ms
Supply interruption before de-ener- gisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	∞	∞
Environmental data	777601	777602
Climatic suitability	EN 60068-2-78	EN 60068-2-78
Ambient temperature		
Temperature range	-10 - 55 °C	-10 - 55 °C
Storage temperature		
Temperature range	-40 - 85 °C	-40 - 85 °C
Climatic suitability		
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-3, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-3, EN 61326-3-1
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm
Airgap creepage		
In accordance with the standard	EN 60947-1	EN 60947-1
Overvoltage category	111 / 11	111 / 11
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	4 kV	4 kV
Protection type		
Mounting area (e.g. control cab- inet)	IP54	IP54
Housing	IP40	IP40
Terminals	IP20	IP20
Mechanical data	777601	777602
Mounting position	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Тор	PPO UL 94 V0	PPO UL 94 V0
Connection type	Screw terminal	Screw terminal
Mounting type	plug-in	plug-in

Mechanical data	777601	777602
Conductor cross section with screw terminals		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross sec- tion, flexible with crimp connect- ors, no plastic sleeve	0,25 - 1 mm², 24 - 16 AWG	0,25 - 1 mm², 24 - 16 AWG
2 core with the same cross sec- tion, flexible without crimp con- nectors or with TWIN crimp con- nectors	0,2 - 1,5 mm², 24 - 16 AWG	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals		0,5 Nm
Dimensions		*
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	230 g	230 g

Where standards are undated, the 2014-07 latest editions shall apply.

General	787601	787602
Approvals	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	787601	787602
Supply voltage		
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply (DC)	3,5 W	3,5 W
Residual ripple DC	20 %	20 %
Duty cycle	100 %	100 %
Max. inrush current impulse		
Current pulse, A1	5 A	5 A
Pulse duration, A1	1 ms	1 ms
Inputs	787601	787602
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V

Order no. 787601 – 787602

Inputs	787601	787602	
Current at			
Input circuit DC	35 mA	35 mA	
Start circuit DC	35 mA	35 mA	
Feedback loop DC	3,5 mA	3,5 mA	
Max. overall cable resistance RI- max			
Single-channel at UB DC	100 Ohm	100 Ohm	
Dual-channel without detection of shorts across contacts at UB DC	150 Ohm	150 Ohm	
Dual-channel with detection of shorts across contacts at UB DC	C 15 Ohm	15 Ohm	
Relay outputs	787601	787602	
Number of output contacts			
Safety contacts (N/O), instant-			
aneous	2	2	
Safety contacts (N/O), delayed	1	1	
Max. short circuit current IK	1 kA	1 kA	
Utilisation category			
In accordance with the standard	EN 60947-4-1	EN 60947-4-1	
Utilisation category of safety con- tacts			
AC1 at	240 V	240 V	
Min. current	0,01 A	0,01 A	
Max. current	5 A	5 A	
Max. power	1250 VA	1250 VA	
DC1 at	24 V	24 V	
Min. current	0,01 A	0,01 A	
Max. current	5 A	5 A	
Max. power	125 W	125 W	
Utilisation category of safety con- tacts delayed			
AC1 at	240 V	240 V	
Min. current	0,01 A	0,01 A	
Max. current	5 A	5 A	
Max. power	1250 VA	1250 VA	
DC1 at	24 V	24 V	
Min. current	0,01 A	0,01 A	
Max. current	5 A	5 A	
Max. power	125 W	125 W	
Utilisation category			
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	

Relay outputs	787601	787602
Utilisation category of safety con-		
tacts		
AC15 at	230 V	230 V
Max. current	1,5 A	1,5 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	2 A	2 A
Utilisation category of safety con- tacts delayed		
AC15 at	230 V	230 V
Max. current	2 A	2 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	4 A	4 A
Utilisation category in accordance with UL		
Voltage	240 V AC G. P.	240 V AC G. P.
With current	5 A	5 A
Pilot Duty	C300, R300	C300, R300
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Max. melting integral	66 A²s	66 A²s
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	4 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	4 A	4 A
External contact fuse protection, delayed safety contacts		
Max. melting integral	66 A²s	66 A²s
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	4 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24 V AC/DC, characteristic B/C	4 A	4 A
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 μm Au
Conventional thermal current while loading several contacts	787601	787602
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 con- tact	5 A	5 A
Conv. therm. current with 2 con- tacts	3,7 A	3,7 A
Conv. therm. current with 3 con- tacts	3 A	3 A

Times	787601	787602	
Switch-on delay			
With automatic start typ.	300 ms	300 ms	
With automatic start max.	550 ms 550 ms		
With automatic start after power			
on typ.	350 ms	350 ms	
With automatic start after power			
on max.	750 ms	750 ms	
With monitored start typ.	30 ms	30 ms	
With monitored start max.	60 ms	60 ms	
Delay-on de-energisation			
With E-STOP typ.	15 ms	15 ms	
With E-STOP max.	30 ms	30 ms	
With power failure typ.	100 ms	100 ms	
With power failure max.	150 ms	150 ms	
Recovery time at max. switching frequency 1/s			
After E-STOP	50 ms +tv	50 ms +tv	
After power failure	300 ms	300 ms	
-	0,1 - 3 s	1 - 30 s	
Time accuracy	-20 %/+20 %	-20 %/+20 %	
Repetition accuracy	2 %	2 %	
Waiting period with a monitored start	300 ms	300 ms	
Min. start pulse duration with a monitored start	30 ms	30 ms	
Supply interruption before de-ener- gisation	20 ms	20 ms	
Simultaneity, channel 1 and 2 max.	∞	×	
Environmental data	787601	787602	
Climatic suitability	EN 60068-2-78	EN 60068-2-78	
Ambient temperature			
Temperature range	-10 - 55 °C	-10 - 55 °C	
Storage temperature			
Temperature range	-40 - 85 °C	-40 - 85 °C	
Climatic suitability			
Humidity	93 % r. h. at 40 °C 93 % r. h. at 40 °C		
Condensation during operation	Not permitted	Not permitted	
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-3, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-3, EN 61326-3-1	
Vibration			
In accordance with the standard	EN 60068-2-6	EN 60068-2-6	
Frequency	10 - 55 Hz	10 - 55 Hz	
Amplitude	0,35 mm	0,35 mm	

Environmental data	787601	787602		
Airgap creepage				
In accordance with the standard	EN 60947-1	EN 60947-1		
Overvoltage category	111 / 11	111 / 11		
Pollution degree	2	2		
Rated insulation voltage	250 V	250 V		
Rated impulse withstand voltage	4 kV	4 kV		
Protection type				
Mounting area (e.g. control cab- inet)	IP54	IP54		
Housing	IP40	IP40		
Terminals	IP20	IP20		
Mechanical data	787601	787602		
Mounting position	Any	Any		
Mechanical life	10,000,000 cycles	10,000,000 cycles		
Material				
Bottom	PPO UL 94 V0	PPO UL 94 V0		
Front	ABS UL 94 V0	ABS UL 94 V0		
Тор	PPO UL 94 V0	PPO UL 94 V0		
Connection type	Cage clamp terminal	Cage clamp terminal		
Mounting type	plug-in	plug-in		
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	0,2 - 1,5 mm², 24 - 16 AWG	0,2 - 1,5 mm², 24 - 16 AWG		
Spring-loaded terminals: Terminal points per connection	2	2		
Stripping length with spring-loaded terminals	8 mm	8 mm		
Dimensions				
Height	101 mm	101 mm		
Width	22,5 mm	22,5 mm		
Depth	121 mm	121 mm		
Weight	230 g	230 g		

Where standards are undated, the 2014-07 latest editions shall apply.

Safety characteristic data



NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008
	PL	Category					T _м [year]
Safety con- tacts, in-							
stantaneous	PL e	Cat. 4	SIL CL 3	2,31E-09	SIL 3	2,03E-06	20
Safety con- tacts, delayed <30							
s	PL d	Cat. 3	SIL CL 3	2,64E-09	SIL 3	1,26E-05	20
Safety con- tacts, delayed ≥30							
S	PL c	Cat. 1	SIL CL 1	2,87E-09	SIL 2	4,64E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Supplementary data




CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

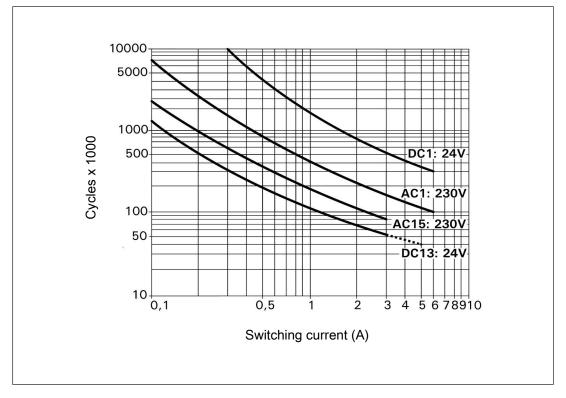




Example

- Inductive load: 0.2 A
- Utilisation category: AC15
- Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see Technical details [22] 16]) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

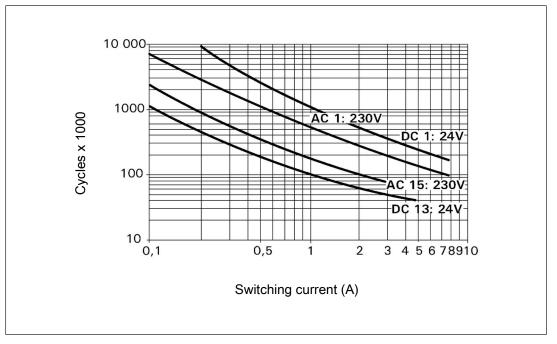

Service life graph: Safety contact (N/O), delay-on de-energisation

Example

- Inductive load: 0.2 A,
- Utilisation category: AC15
- Contact service life: 900 000 cycles


Provided the application to be implemented requires fewer than 900 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Remove plug-in terminals

Procedure: Insert the screwdriver into the housing recess behind the terminal and lever the terminal out.

Do not remove the terminals by pulling the cables!

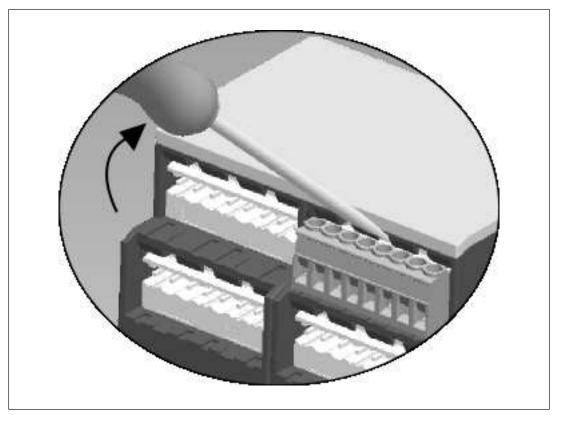

Order reference

Product type	Features	Connection type	Order no.
PNOZ XV1P	24 VDC;	Screw terminals	777 601
	Delay: up to 3 s selectable		
PNOZ XV1P C	24 VDC; Delay: up to 3 s selectable	Spring-loaded terminals	787 601
PNOZ XV1P	24 VDC; Delay: up to 30 s selectable	Screw terminals	777 602
PNOZ XV1P C	24 VDC; Delay: up to 30 s selectable	Spring-loaded terminals	787 602

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/support/downloads. Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

Support

Technical support is available from Pilz round the clock.

Americas

Brazil +55 11 97569-2804 Canada +1 888-315-PILZ (315-7459) Mexico +52 55 5572 1300 USA (toll-free) +1 877-PILZUSA (745-9872)

Asia

China +86 21 60880878-216 Japan +81 45 471-2281 South Korea +82 31 450 0680

Australia

+61 3 95446300

Europe

Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217575 France +33 3 88104000 Germany +49 711 3409-444 Ireland +353 21 4804983 Italy +39 0362 1826711

Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-30 The Netherlands +31 347 320477 Turkey +90 216 5775552 **United Kingdom** +44 1536 462203

You can reach our international hotline on: +49 711 3409-444 support@pilz.com



BLUECOMPETENCE Alliance Member Partner of the Engineering Industry Sustainability Initiative



Pilz GmbH & Co. KG Felix-Wankel-Straße 2 73760 Ostfildern, Germany Tel.: +49 711 3409-0 Fax: +49 711 3409-133 info@pilz.com www.pilz.com

20596-EN-07, 2016-05 Printed in Germany © Pilz GmbH & Co. KG, 2015



CMSE[®],

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

