




3 Channel Datalogging Thermometer

Model SD200

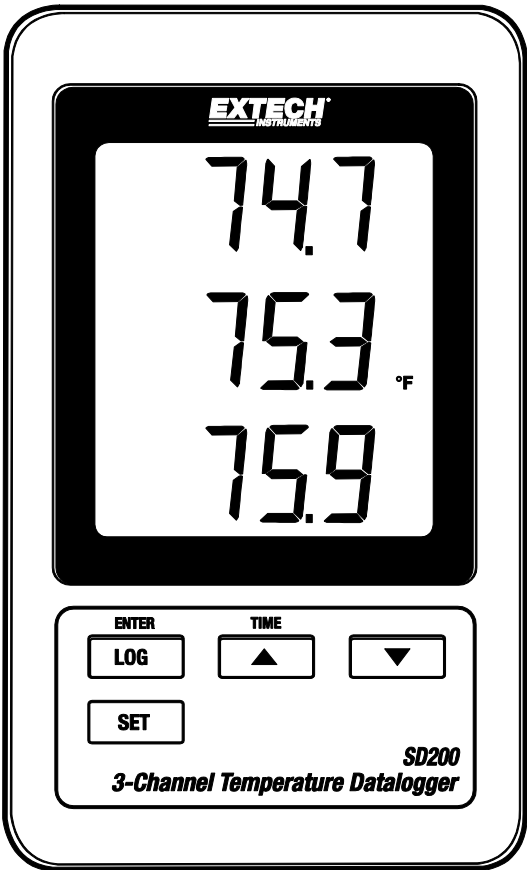

Introduction


Congratulations on your purchase of the Extech SD200 3-Channel Temperature Datalogger. This meter displays and stores temperature readings from one to three type k thermocouple temperature probes. Data is stored on a SD card for transfer to a PC. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service. Please visit the Extech Instruments website (www.extech.com) to check for the latest version of this User Guide. Extech Instruments is an ISO-9001 certified company.

Features


- Triple LCD simultaneously displays 3 Type-K Temperature channels
- Datalogger date/time stamps and stores readings on an SD card in Excel® format for easy transfer to a PC
- Selectable data sampling rate: 5, 10, 30, 60, 120, 300, 600 seconds
- Long battery life or AC adaptor
- -Temperature range of -58 to 2372°F / -50 to 1300°C with 0.1°F/°C resolution

Product Description


- 1. T1 Display
- 2. T2 Display
- 3. T3 Display
- 4. LOG (ENTER) button
- 5. SET button
- 6. Temperature Units icon
- 7. ▲(TIME) button
- 8. ▼ button

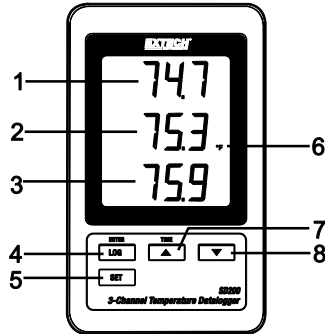

- 9. AC adaptor socket
- 10. Reset button
- 11. RS-232 output
- 12. SD memory card socket

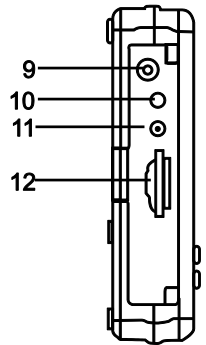


- 13. T1 thermocouple input
- 14. T2 Thermocouple input
- 15. T3 thermocouple input

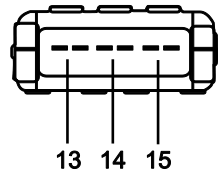

Note: Battery Compartment and Tilt Stand are located on the back of the meter.

Operation

Battery Low Warning, Installation and Replacement

1. When the  icon appears in the display the batteries are weak and should be replaced. However, in-spec. measurements may still be made for several hours, after low battery indicator appears, before the instrument becomes inaccurate.
2. To replace or install batteries, remove the Philips head screw that secures the rear battery cover and lift off the cover.
3. Replace the six AAA batteries (use alkaline heavy duty type), observing polarity
4. Replace and secure the cover.

Connecting thermocouples

1. Insert the Type K thermocouple mini-connector plug into the mini-connector socket on the bottom of the datalogger observing polarity (wide blade/narrow blade)
2. Up to three probes may be installed.
3. The temperature for inserted probes will be displayed T1, T2, T3 from top to bottom.
4. “-----“ will be displayed for open or unused inputs.

Datalogging

1. Open the left side door and insert a formatted SD card

Note: The SD card should be at least 1GB in capacity

Note: Do not use memory cards formatted by other meters or cameras. Use the SD card formatting procedure under the advanced features section of this manual to correctly format the card.

Note: The internal clock must be set to the correct time. See the advanced features section of this manual to set the clock.

Note: The default data structure uses a decimal point “.” as the numeric decimal indicator. See the advanced features section of this manual to change this to a comma “,”.

Note: If the SD memory card is not installed, “EMPTY” will appear in the display.

Note: If the temperature probe is not installed, random numbers may appear in the data file.

Note: If the temperature probe is not installed, after data download the temperature units symbol may not appear in the display.

Note: Displayed error messages:

CH-
CArd

The memory card is full or there is a problem with the card

LobAt

The battery is low and datalogging is disabled

no
CArd

The SD card is not inserted

2. Press the LOGGER button for >2 seconds to begin logging. “DATALOGGER” will appear in the display (between T2 and T3 displays) and the meter will beep each time the data is recorded (if the beeper is enabled).

- To stop datalogging, press the **LOGGER** button for >2 seconds. "DATALOGGER" will change to "DATA" and the meter will count down through the recorded data.

NOTE: To avoid corrupting any data, do not remove the memory card without properly ending the record function.

Time/Date/Sample Rate Check

Press and Hold the **TIME** button for >2 seconds and the display will cycle through the date, time and sample rate information.

SD Card Data Structure

- When the SD card is first inserted into the datalogger the folder **TMC01** is created.
- The first datalogging session will then create a file **TMC01001.XLS**. All data will be saved to this file until the number of columns reaches 30,000.
- After 30,000 columns a new file, **TMC01002.XLS** is created. This is repeated every 30,000 columns until **TMC01099.XLS**. At this point a new folder, **TMC02** is created and the process is repeated. **TMC10** is the final folder.

Transferring Data to a PC

- Remove the memory card from the datalogger and plug it into the SD card slot on the PC.
- Launch Excel and open the data file on the memory card. The file will appear similar to the figure below.

	A	B	C	D	E	F	G	H	I	J
1	Position	Date	Time	Ch1 Value	Ch1 Unit	Ch2 Value	Ch2 Unit	Ch3 Value	Ch3 Unit	
2	1	5/26/2011	13:48:50	75.3	DEGREE F	76.8	DEGREE F	75.7	DEGREE F	
3	2	5/26/2011	13:48:54	75.5	DEGREE F	76.8	DEGREE F	76.4	DEGREE F	
4	3	5/26/2011	13:49:59	75.7	DEGREE F	76.8	DEGREE F	76.2	DEGREE F	
5	4	5/26/2011	13:49:04	75.9	DEGREE F	76.8	DEGREE F	75.5	DEGREE F	
6	5	5/26/2011	13:49:09	75.7	DEGREE F	76.8	DEGREE F	75.7	DEGREE F	
7	6	5/26/2011	13:49:14	75.9	DEGREE F	77	DEGREE F	75.9	DEGREE F	
8	7	5/26/2011	13:49:19	75.9	DEGREE F	77	DEGREE F	75	DEGREE F	
9	8	5/26/2011	13:49:24	75.9	DEGREE F	76.8	DEGREE F	74.6	DEGREE F	
10	9	5/26/2011	13:49:29	75.9	DEGREE F	76.8	DEGREE F	74.3	DEGREE F	
11	10	5/26/2011	13:49:34	75.9	DEGREE F	76.8	DEGREE F	74.6	DEGREE F	
12	11	5/26/2011	13:49:39	75.9	DEGREE F	76.8	DEGREE F	74.4	DEGREE F	
13	12	5/26/2011	13:49:44	75.9	DEGREE F	76.6	DEGREE F	74.3	DEGREE F	
14	13	5/26/2011	13:49:49	75.9	DEGREE F	76.8	DEGREE F	74.3	DEGREE F	
15	14	5/26/2011	13:49:54	75.9	DEGREE F	76.8	DEGREE F	74.4	DEGREE F	
16	15	5/26/2011	13:50:59	75.9	DEGREE F	76.8	DEGREE F	74.1	DEGREE F	
17	16	5/26/2011	13:50:04	75.9	DEGREE F	76.8	DEGREE F	74.6	DEGREE F	
18	17	5/26/2011	13:50:09	75.9	DEGREE F	76.8	DEGREE F	74.6	DEGREE F	
19	18	5/26/2011	13:50:14	75.9	DEGREE F	76.8	DEGREE F	75.2	DEGREE F	
20	19	5/26/2011	13:50:19	75.9	DEGREE F	76.8	DEGREE F	75.5	DEGREE F	
21	20	5/26/2011	13:50:24	75.9	DEGREE F	77	DEGREE F	75.3	DEGREE F	
22	21	5/26/2011	13:50:29	75.7	DEGREE F	76.6	DEGREE F	75.3	DEGREE F	
23	22	5/26/2011	13:50:34	75.7	DEGREE F	76.8	DEGREE F	75.5	DEGREE F	

Advanced Settings

The SET function is used to:

- Format the SD memory card
 - Set the date and time
 - Set the sampling time
 - Set the beeper sound ON/OFF
 - Set the SD card Decimal character
 - Select the Temperature units
 - Set the RS232 data output ON/OFF
1. Press and Hold the SET button for >2 seconds to enter the setting mode. The first function (Sd F) will appear in the display. Press the SET button to step through the seven functions. Use the ▲ and ▼ buttons to adjust the selected function. Use the “LOGGER” button to step through fields within a function. In the SET mode, if no button is pressed within 5 seconds the logger will revert back to the standard mode.
 2. Sd F – Format the SD card. Press the ▲ button to select yES or no. For yES, press the Enter button. When yES and Ent appear, press the Enter key again to format the card and erase all existing data. The screen will display a flashing yEs and ESC while the memory is being erased and formatted.
 3. dAtE – Set the date and time. Press the ▲ or ▼ buttons to adjust the selected (blinking) field. Press the Enter button to store the value and to step through the various fields.
 4. SP-t – Set the sample rate. Press the ▲ button to select the desired sample rate and press Enter to store the selection. The selections are: 5, 10, 30, 60, 120, 300, 600 seconds and AUTO. In AUTO, the data will be stored every time there is a temperature change of >1 degree.
 5. bEEP - Set the beeper ON or OFF. Press the ▲ button to select ON or OFF and press Enter to store the selection.
 6. dEC - Set the SD card Decimal character. Press the ▲ button to select USA (decimal) or Euro (comma) and press Enter to store the selection.
 7. t-CF - Set the Temp. unit to °F or °C and press Enter to store the selection.
 8. rS232 - Set the RS232 data output ON/OFF. Press the ▲ button to select ON or off and press Enter to store the selection.
 9. ESC – Exit the setting mode. Press the SET button to return to normal operation.

System RESET

If a condition appears where the CPU does not respond to keystrokes or the meter seems frozen, press the RESET button on the side of the datalogger (use a paper clip or similar pointed object) to return the meter to a working state.

RS232 Interface

For streaming of data to a PC via the RS232 Output jack, the optional 407001-USB kit (RS232 to USB cable and driver CD) along with the 407001 software (available free at www.extech.com) are required.

Specifications

Display	2.4 x 2.0" (60 mm x 50 mm) LCD
Temperature probes	Type K thermocouple
Memory Card	SD memory card, 1 GB to 16 GB.
Datalogger Sampling Time	5/10/30/60/120/300/600 seconds or Auto.
Temperature Compensation	Automatic
Display update rate	Approx. 1 second
Data Output	RS 232
Operating Temperature	32 to 122°F (0 to 50 °C)
Operating Humidity	Less than 85% R.H.
Power Supply	6 AAA (UM4) Alkaline or heavy duty 1.5 V batteries or 9V AC adaptor.
Battery life	Dependent on sample rate, for new alkaline batteries and 60 second sampling time, > one month is typical. Fast sample rates will significantly reduce battery life.
Weight	0.44 LB /199 g
Dimension	5.2 x 3.1 x 1.3"(132 x 80 x 32 mm)

Type K Thermometer		
Range	Resolution	Accuracy (of reading)
-50.0 to 1300.0 °C	0.1°C	±(0.5 % + 0.5°C)
-50.1 to -100.0°C		±(0.5 % + 1°C)
-58.0 to 2372.0°F	0.1°F	±(0.5 % + 1°F)
-58.1 to -148.0°F		±(0.5 % + 1.8°F)

Note: Above specification tests under the environment RF Field Strength less than 3 V/M & frequency less than 30 MHz only.

Battery Safety Reminders

- Please dispose of batteries responsibly; always observe local, state, and federal regulations with regard to battery disposal.
- Never dispose of batteries in a fire. Batteries may explode or leak.
- Never mix battery types. Always install new batteries of the same type.

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 439-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance : États-Unis (877) 439-8324 ; international : +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio al Cliente para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 439-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2013 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com