

Model Number

UB200-12GM-I-V1

Single head system

Features

- Analog output 4 mA ... 20 mA
- Very small unusable area
- Measuring window adjustable .
- **Program input** •
- **Temperature compensation**

Diagrams


Characteristic response curve

Distance Y [mm]

182235_eng.xml

Date of issue: 2017-07-12

Release date: 2017-07-12 08:57

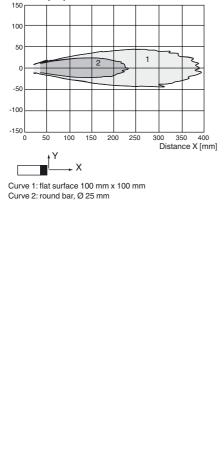

Technical data General specifications Sensing range Adjustment range Dead band Standard target plate Transducer frequency Response delay Indicators/operating means LED yellow LED red

Electrical specifications Operating voltage UB No-load supply current I₀ Input Input type

Output

Output type Resolution

- Deviation of the characteristic curve Repeat accuracy Load impedance Temperature influence Ambient conditions
- Ambient temperature Storage temperature
- Mechanical specifications Connection type Degree of protection Material
 - Housing Transducer
 - Mass
- Compliance with standards and directives Standard conformity

Approvals and certificates

UL approval CCC approval

Standards

15 ... 200 mm 20 ... 200 mm 0 ... 15 mm 100 mm x 100 mm approx. 400 kHz approx. 30 ms

solid yellow: object in the evaluation range yellow, flashing: program function, object detected solid red: Error red, flashing: program function, object not detected

10 ... 30 V DC , ripple 10 $\%_{\rm SS}$ \leq 30 mA

1 program input lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit A2: +4 V ... +U_B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

1 analog output 4 ... 20 mA 0.17 mm

± 1 % of full-scale value ± 0.5 % of full-scale value 0...200 Ω ± 1.5 % of full-scale value

-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin IP67

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g

EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003 IEC 60947-5-7:2003

cULus Listed, Class 2 Power Source CCC approval / marking not required for products rated ≤36 V

UB200-12GM-I-V1

Pepperl+Fuchs Group www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UB200-12GM-I-V1

Dimensions

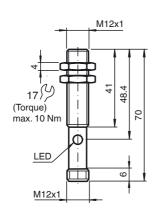

Electrical Connection

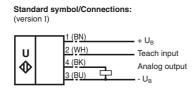

Core colors in accordance with EN 60947-5-2.

Pinout




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Additional Information

Programming the analog output mode

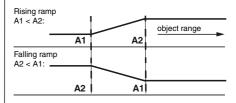

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Accessories

UB-PROG2 Programming unit

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

BF 12 Mounting flange, 12 mm

BF 12-F Mounting flange with dead stop, 12 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

UVW90-M12 Ultrasonic -deflector

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + U_B

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with U_B

Default setting

A1:	unusable area
A2:	nominal sensing range
Mode of operation:	rising ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

Pepperl+Fuchs Group USA: +1 33 www.pepperl-fuchs.com fa-info@us.pep

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

