

Model Number

UB200-12GM-U-V1

Single head system

Features

- Analog output 0 ... 10 V
- Very small unusable area
- Measuring window adjustable .
- **Program input** •
- **Temperature compensation**

Diagrams


Characteristic response curve

Distance Y [mm]

182236_eng.xml

Date of issue: 2017-07-12

Release date: 2017-07-12 08:57

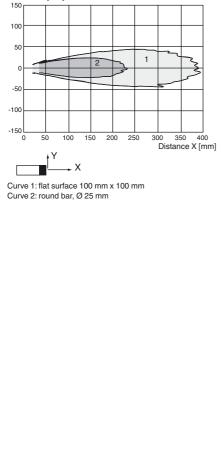

Technical data General specifications Sensing range Adjustment range Dead band Standard target plate Transducer frequency Response delay Indicators/operating means LED yellow LED red **Electrical specifications** Operating voltage UB No-load supply current I₀ Input Input type Output Output type Resolution Deviation of the characteristic curve Repeat accuracy Load impedance Temperature influence Ambient conditions Ambient temperature Storage temperature Mechanical specifications Connection type

Degree of protection Material Housing Transducer

Mass Compliance with standards and directives Standard conformity

Standards

Approvals and certificates

UL approval CCC approval

15 ... 200 mm 20 ... 200 mm 0 ... 15 mm 100 mm x 100 mm approx. 400 kHz approx. 30 ms

solid yellow: object in the evaluation range yellow, flashing: program function, object detected solid red: Error red, flashing: program function, object not detected

15 ... 30 V DC , ripple 10 $\%_{\rm SS}$ \leq 30 mA

1 program input lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit A2: +4 V ... +U_B input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

1 analog output 0 ... 10 V 0.17 mm

± 1 % of full-scale value ± 0.5 % of full-scale value > 2 kOhm ± 1.5 % of full-scale value

-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin IP67

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g

EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012 EN 60947-5-7:2003 IEC 60947-5-7:2003

cULus Listed, Class 2 Power Source CCC approval / marking not required for products rated ≤36 V

UB200-12GM-U-V1

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




UB200-12GM-U-V1

Dimensions

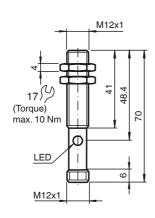

Electrical Connection



Core colors in accordance with EN 60947-5-2.


Pinout




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Additional Information







Accessories

UB-PROG2 Programming unit

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

BF 12 Mounting flange, 12 mm

BF 12-F Mounting flange with dead stop, 12 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

UVW90-M12 Ultrasonic -deflector

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with UB
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + U_B

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with UR

Default setting

A1:	unusable area
A2:	nominal sensing range
Mode of operation:	rising ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

